

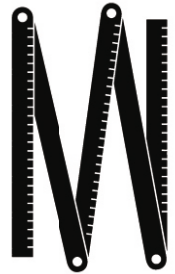



before you start

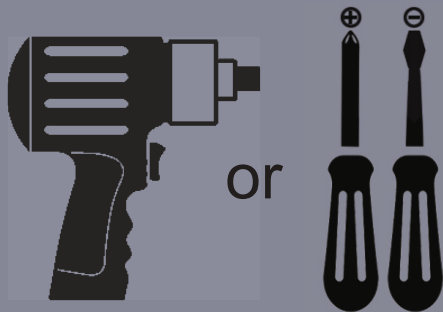


Get required installation tools prepared.

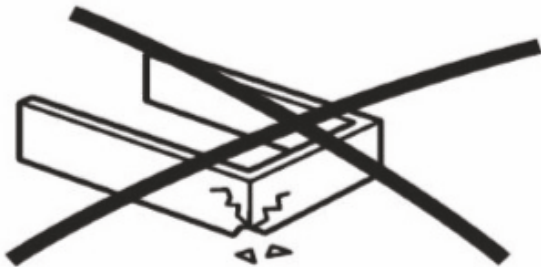


Do not install the product on rough surfaces.


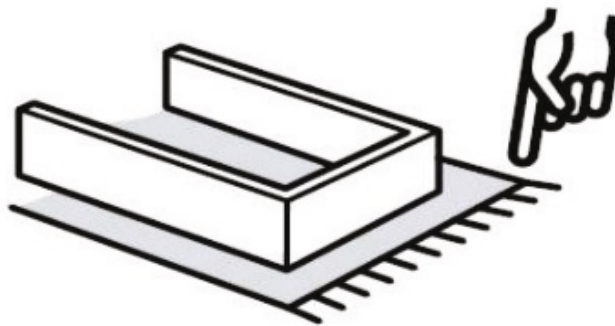


Get help from someone else!

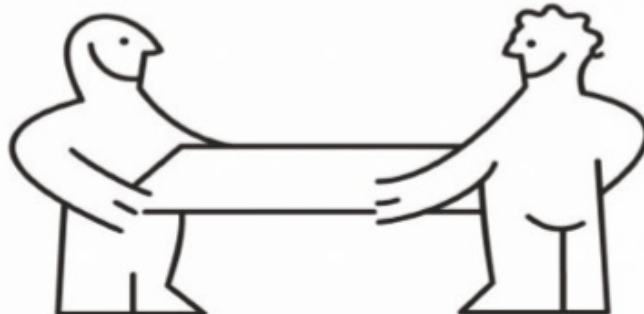


Part1	3x
Part2	2x
Part3	1x
Part4	3x
Part5	2x
Part6	1x
TOTAL	12x

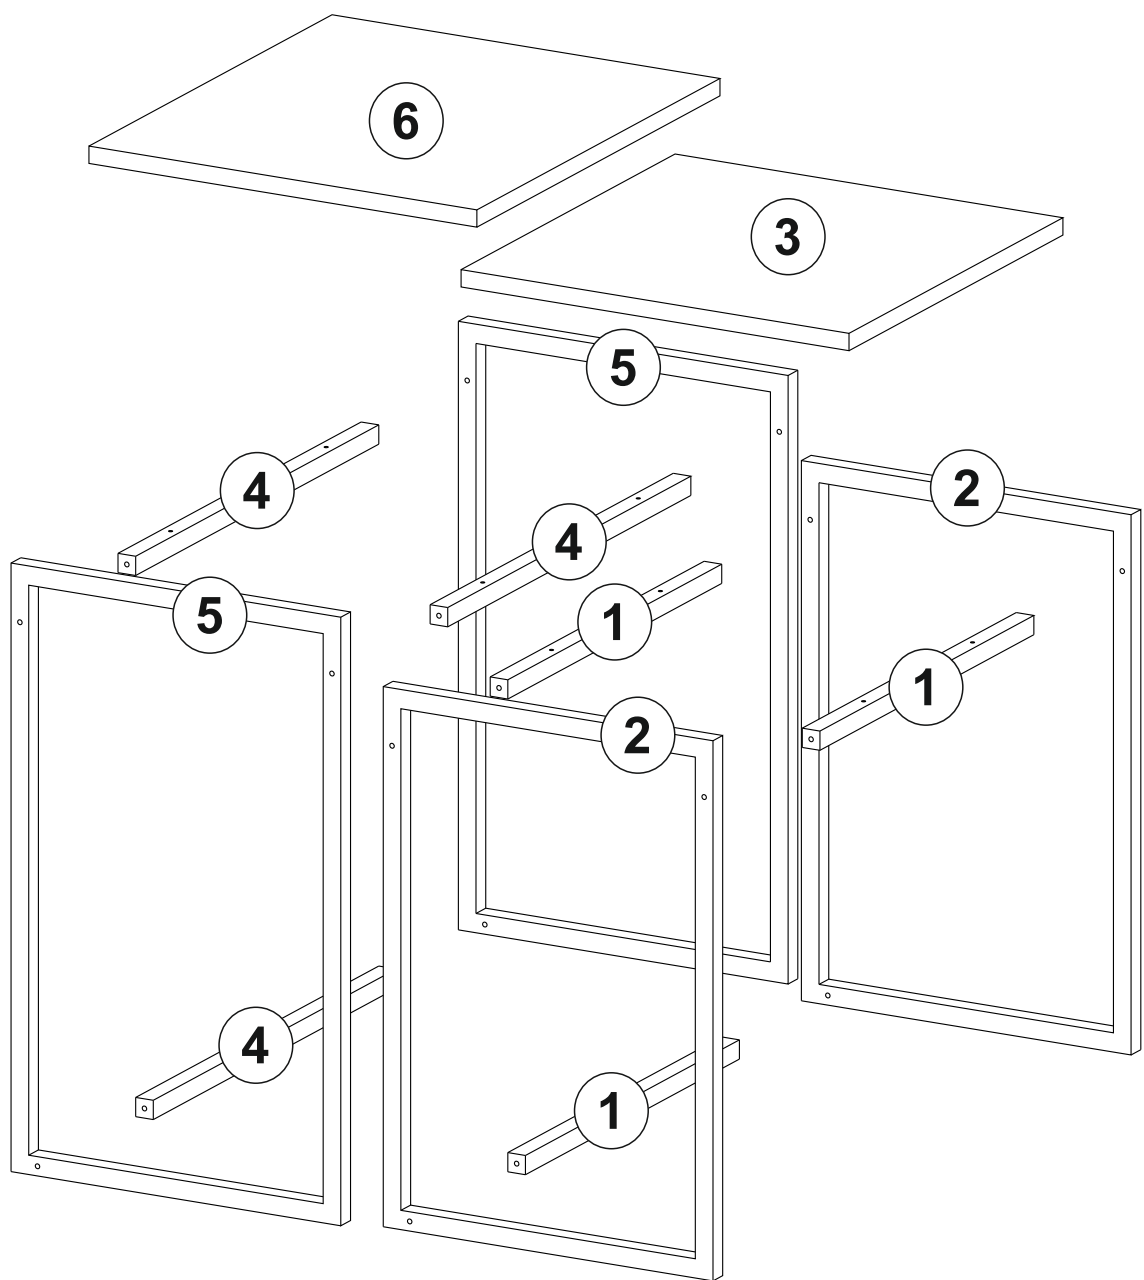

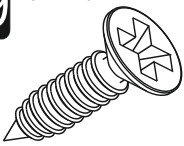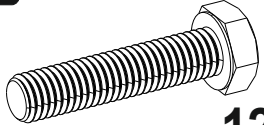A09 3.5x30 mm screw	A10 M6x40 mm screw
	
16x	12x

1 step a

- *Please attach all the metallic pieces #1 onto the holes on the metallic piece #2
- *Then please screw A10 (M6x40 mm screw) with the help of a spanner
- *Please attach the metallic piece #2 onto the holes on the other sides of metallic piece #1
- *Then please screw A10 (M6x40 mm screw) with the help of a spanner

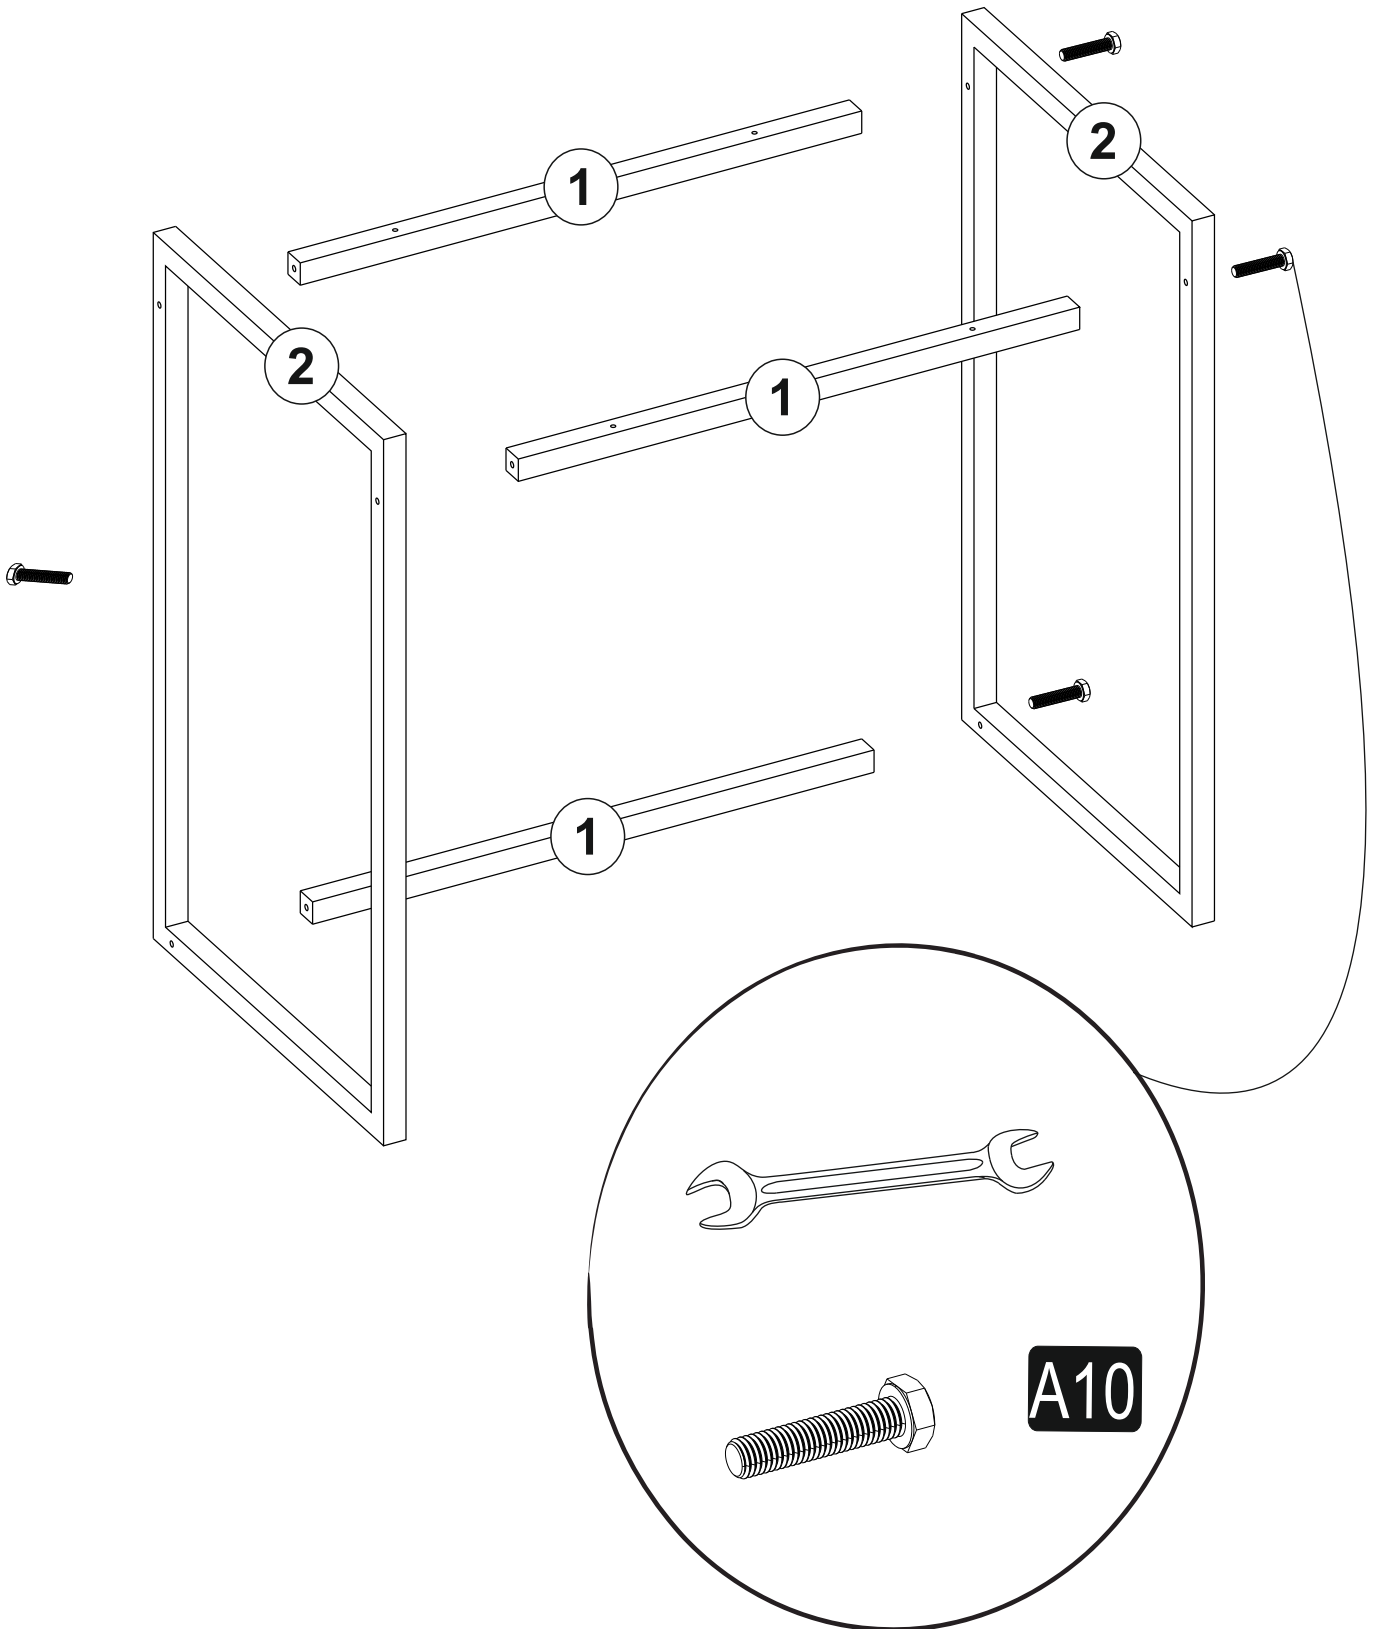


2

step b


*Please attach the wooden piece #3 onto the holes on the metallic pieces #1

*Then please screw A09 (3,5x30 mm screw) with the help of a screwdriver.

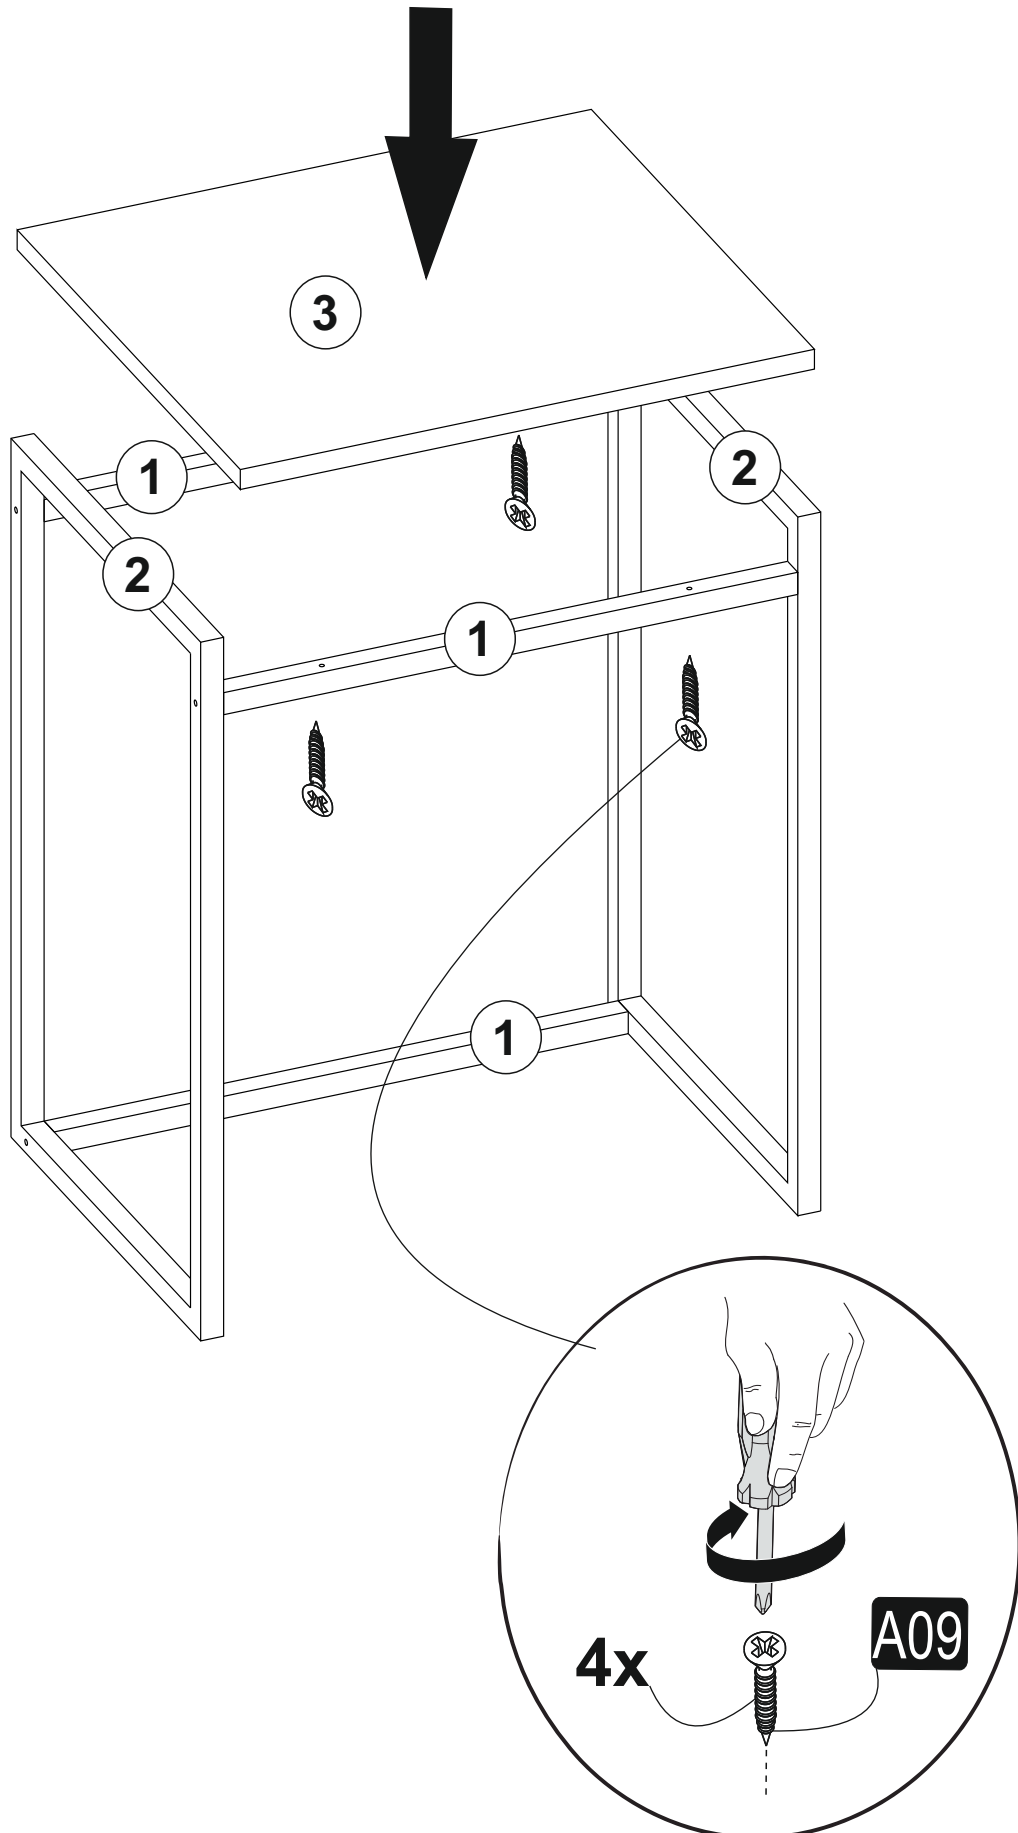

3 step c

- *Please attach all the metallic pieces #4 onto the holes on the metallic piece #5
- *Then please screw A10 (M6x40 mm screw) with the help of a spanner
- *Please attach the metallic piece #5 onto the holes on the other sides of metallic piece #5
- *Then please screw A10 (M6x40 mm screw) with the help of a spanner

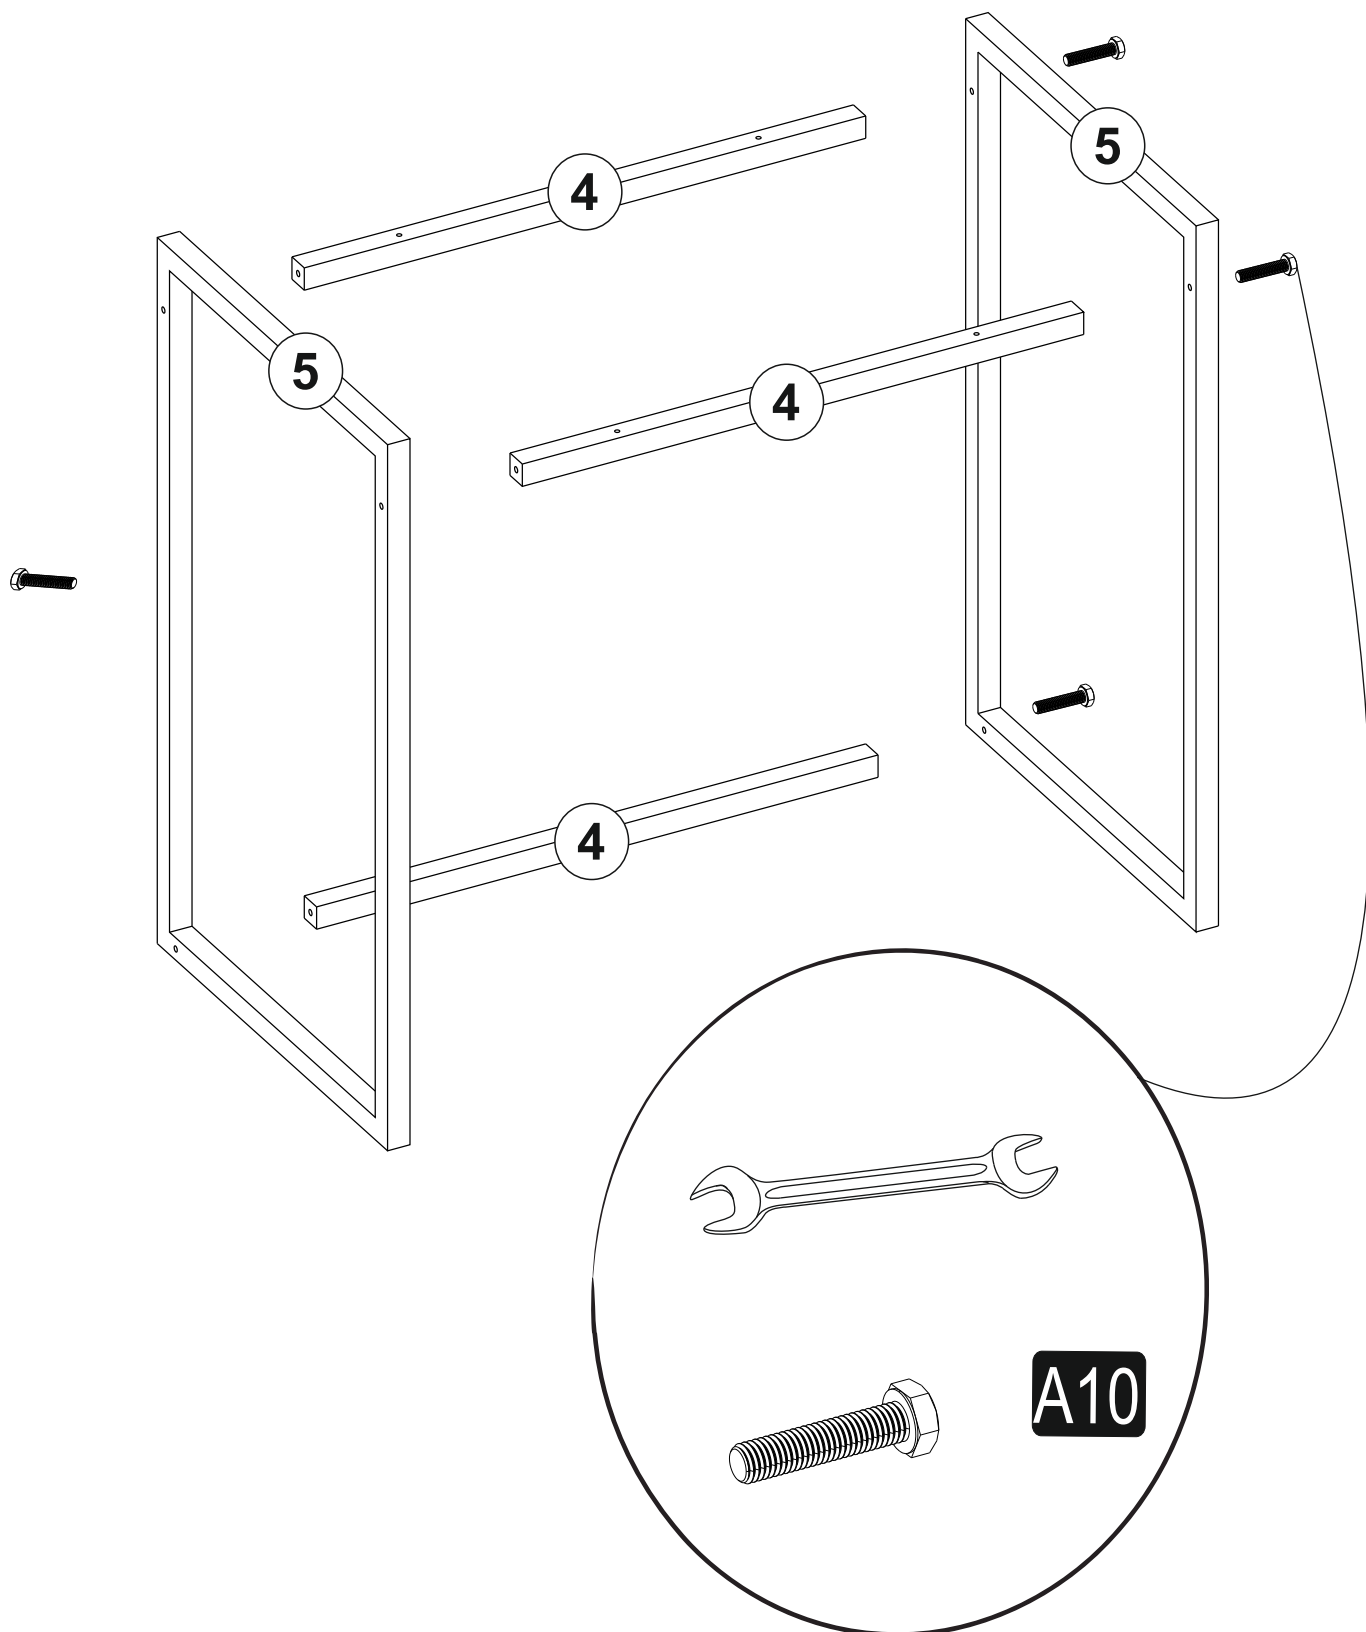

4

step d

*Please attach the wooden piece #6 onto the holes on the metallic pieces #4

*Then please screw A09 (3,5x30 mm screw) with the help of a screwdriver.

