


Assembly Instructions

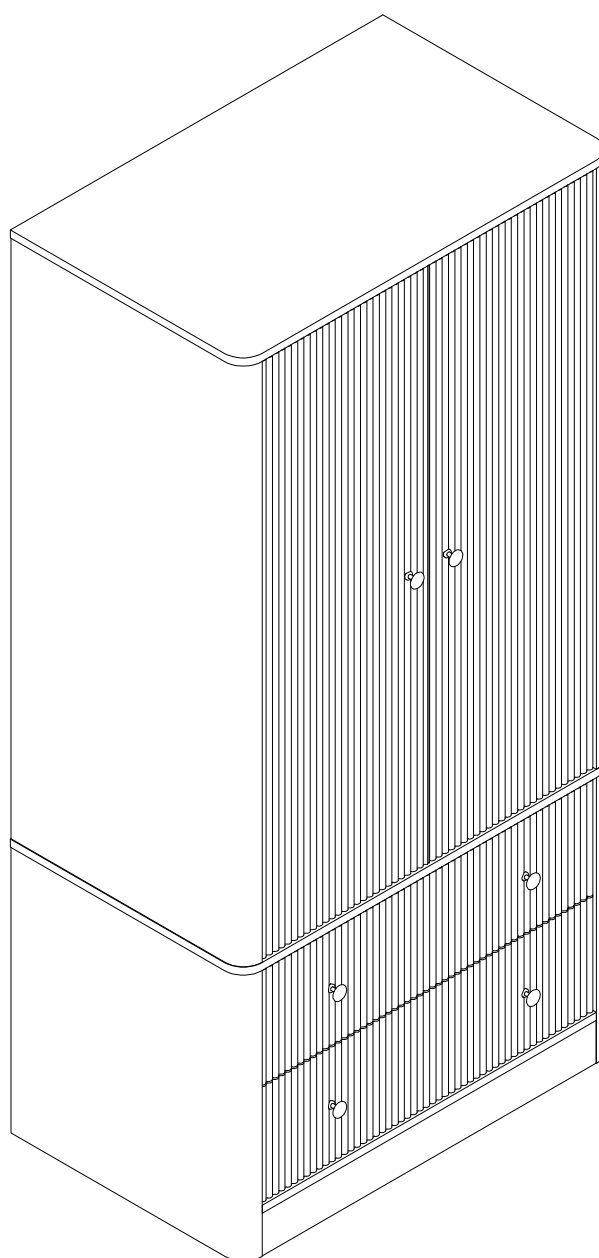


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

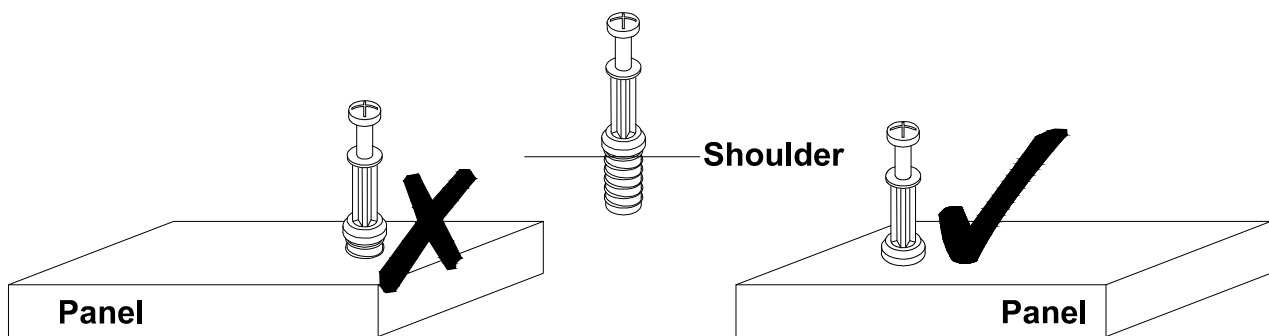

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

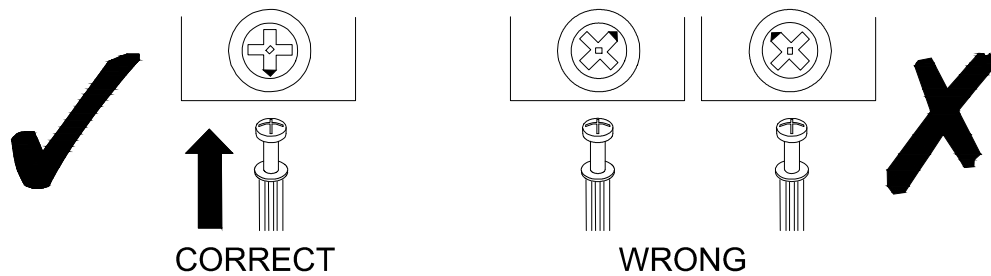

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

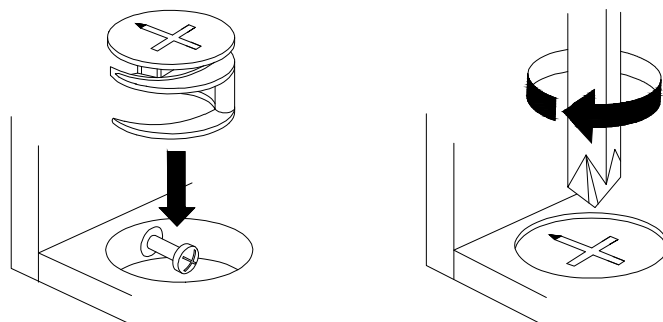


Turn cam lock clockwise to tighten.


Before Assembly

Tips Before Your Start


How to separate the drawer slider:

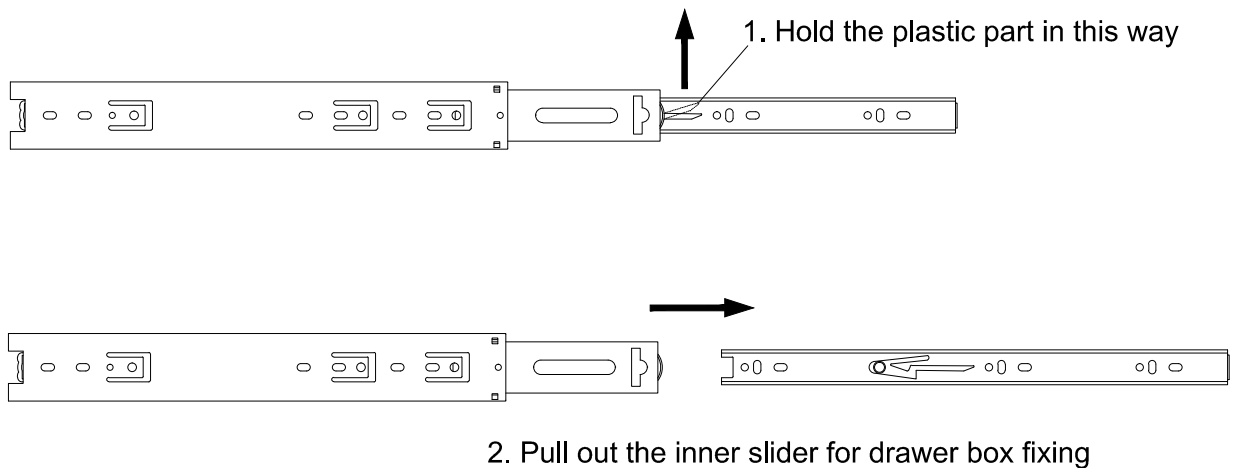

Drawer Front Alignment






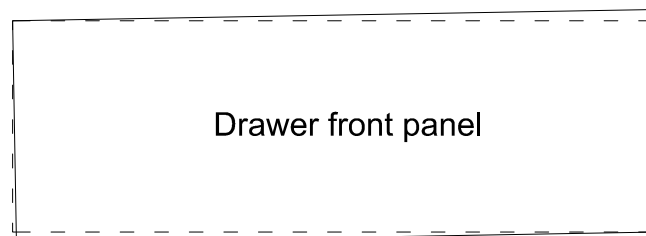


If the drawer front panel is NOT level after being assembled, then...

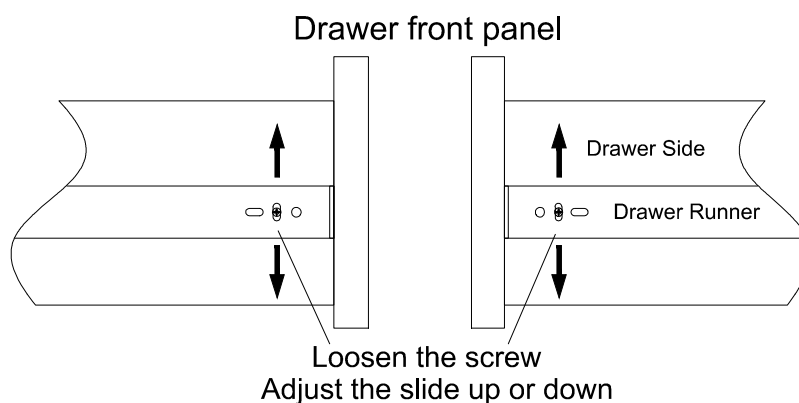


Loosen the screws on the left and right hand side, then adjust the drawer slide up or down, until the drawer fronts are even/level, then tighten the screws.


Part List

No. A Quantity:58 Sets Cam Lock Dowel 	No. B Quantity:15 Pcs Dowel 8*30mm 	No. C Quantity:60 Pcs Screw M3.5*14mm 	No. D Quantity:8 Pcs Screw M4*30mm 
No. E Quantity:2 Sets Drawer Slider 10" 	No. F Quantity:6 Pcs Handle Ø33*30mm 	No. G Quantity:6 Pcs Screw M4*16mm 	No. H Quantity:4 Pcs Hinge 
No. I Quantity:4 Pcs Magnetic Door Catcher 	No. J Quantity:2 Pcs Pothook 	No. K Quantity:1 Pcs Supporting Rod 708*28*15mm 	No. L Quantity:6 Pcs Foot Pad Ø15 
No. M Quantity:8 Pcs Plastic Wedge 	No. N Quantity:2 Sets Anti-falling Parts 		

Product structure

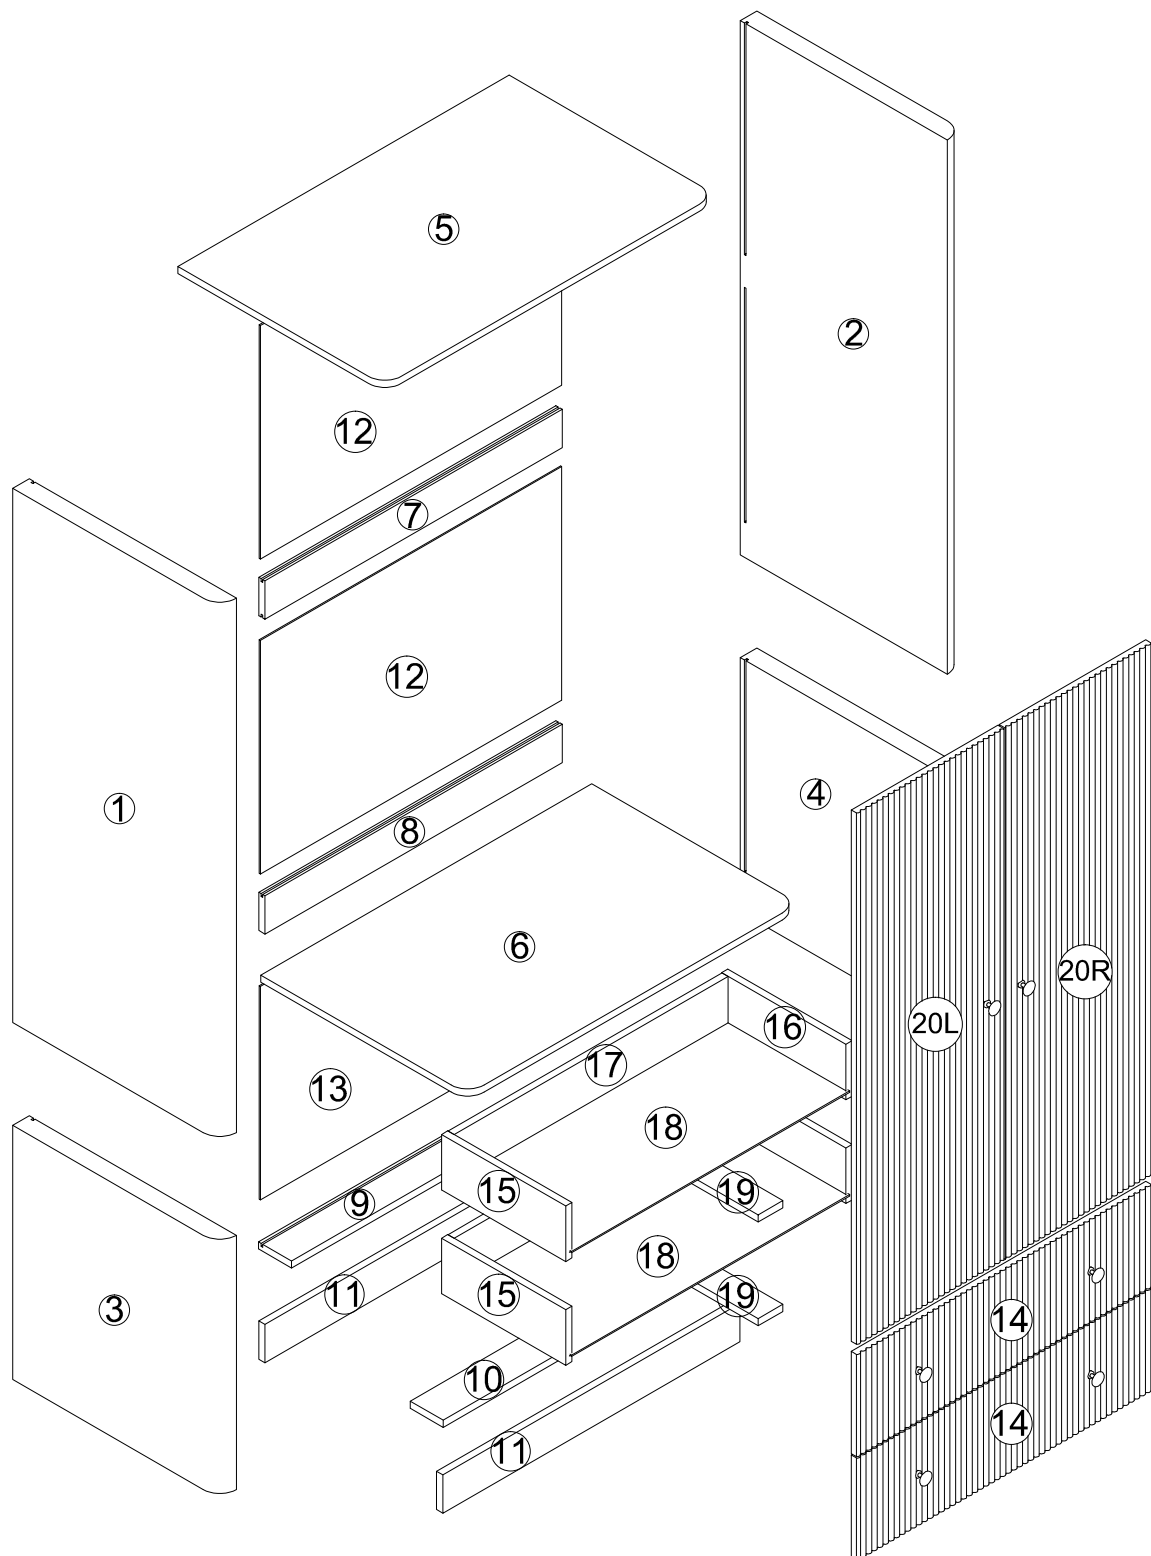

STEP 1

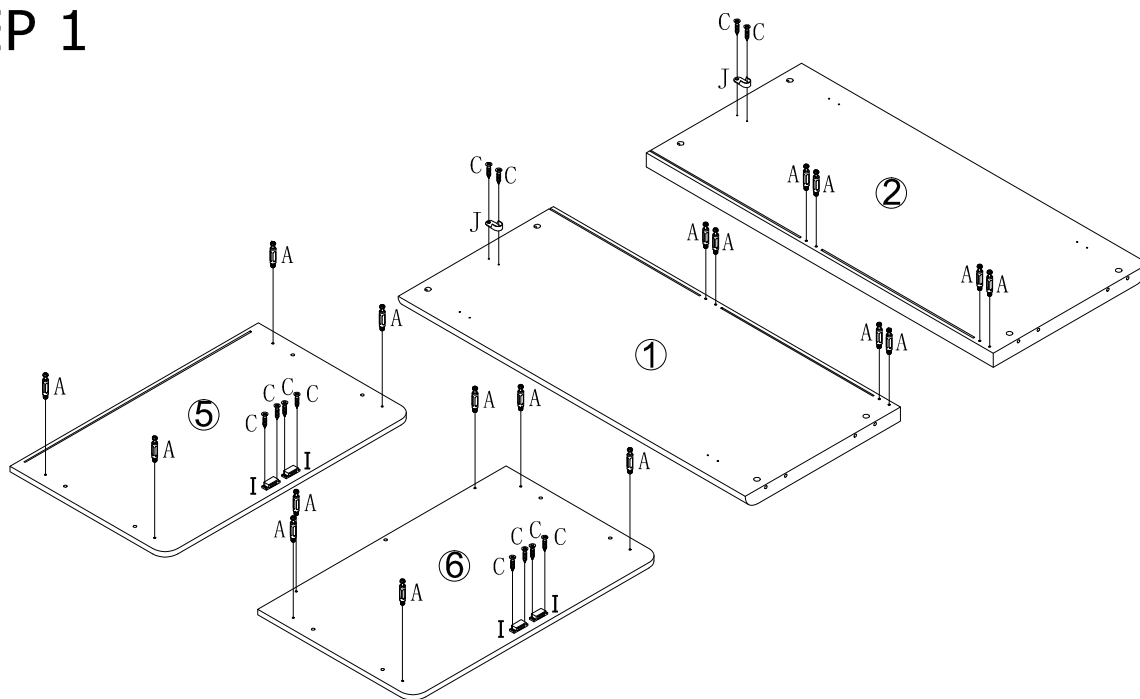


No. A
Quantity: 18 Pcs
8*28 mm



No. C
Quantity: 12 Pcs
M3.5*14mm




No. I
Quantity: 4 Pcs



No. J
Quantity: 2 Pcs




STEP 2

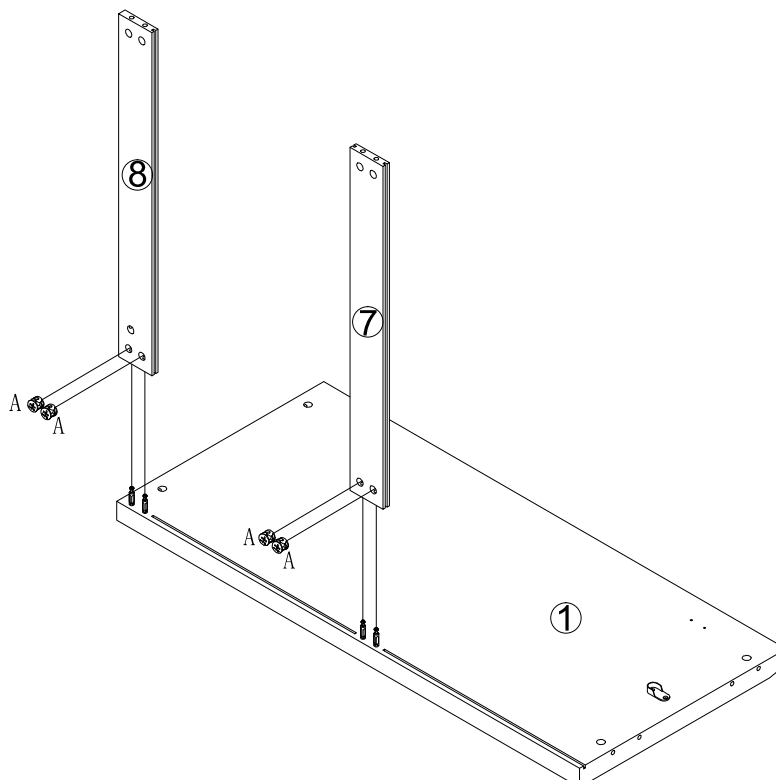


No. A
Quantity: 4 Pcs
Ø15



STEP 3

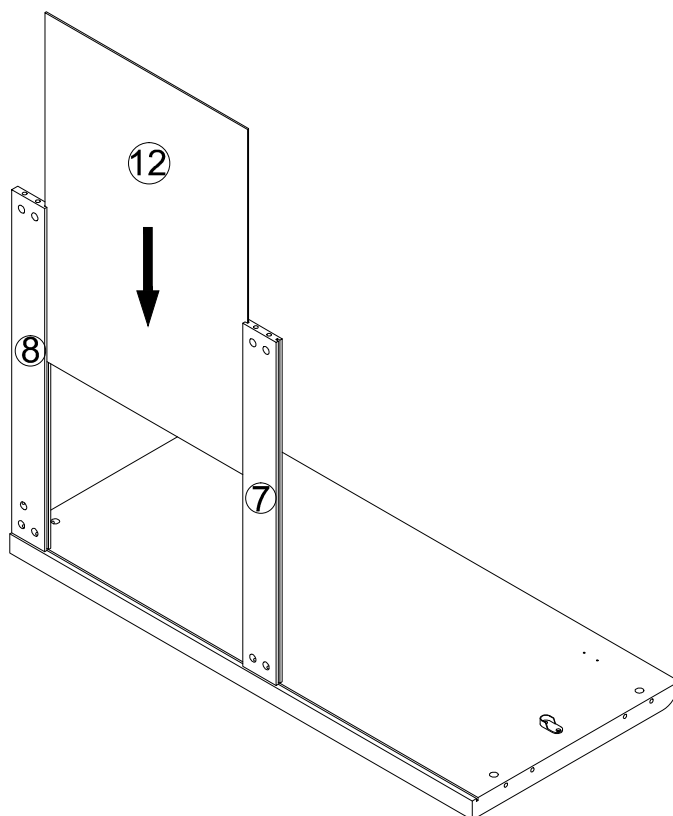


STEP 4

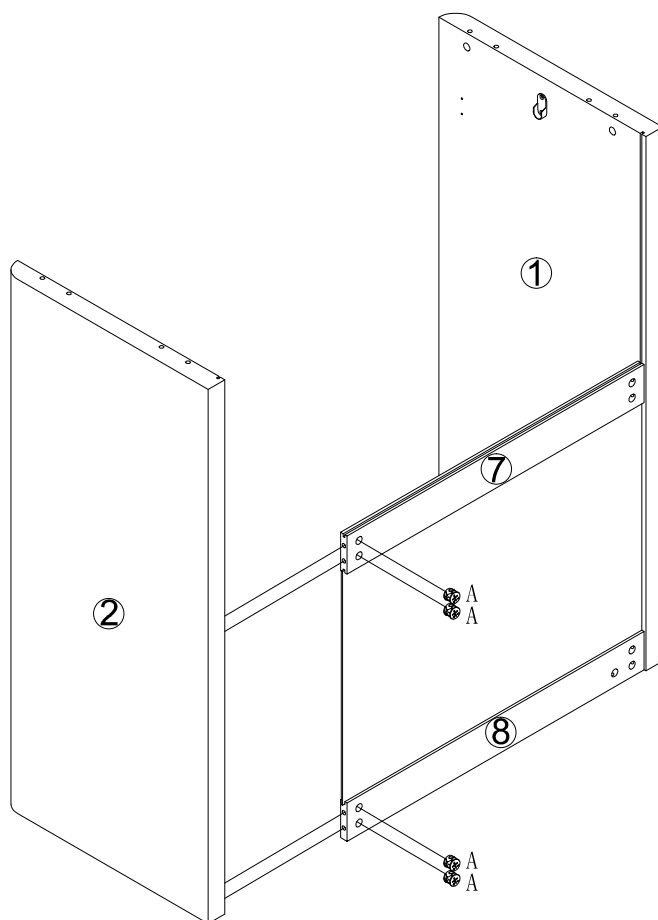


No. A
Quantity: 4 Pcs
Ø15



STEP 5

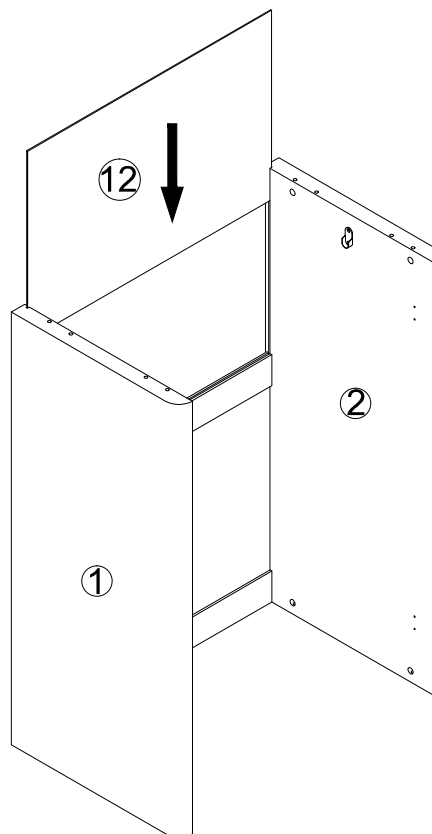


STEP 6

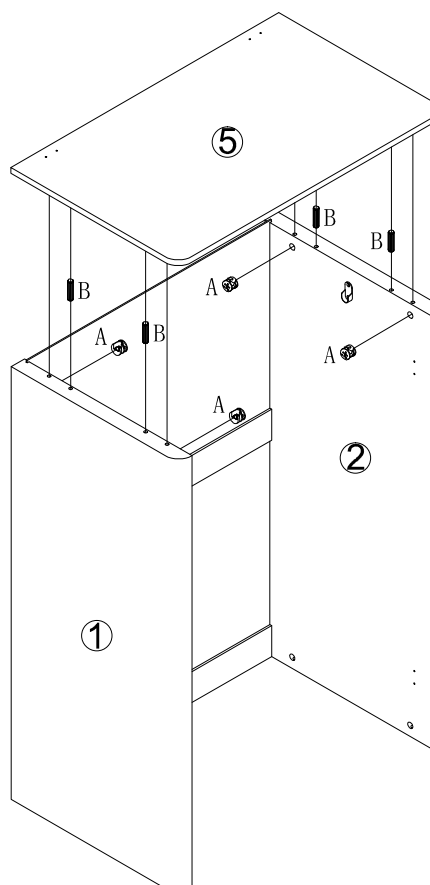


No. A
Quantity: 4 Pcs
Ø15



No. B
Quantity: 4 Pcs
8*30mm




STEP 7

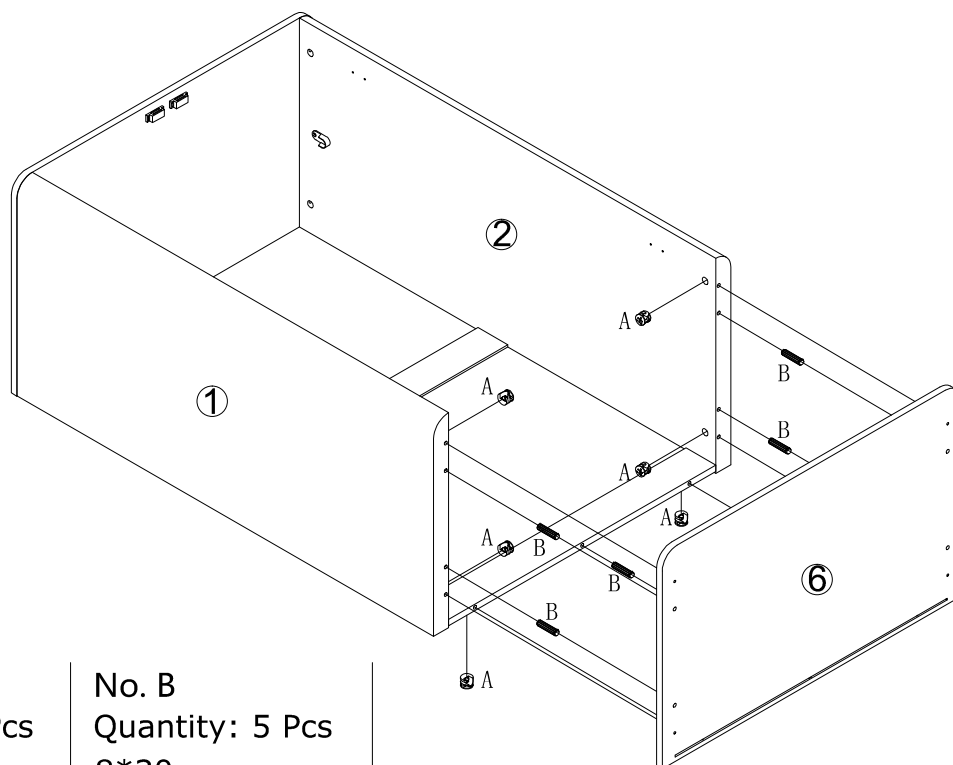


No. A
Quantity: 6 Pcs
Ø15



No. B
Quantity: 5 Pcs
8*30mm




STEP 8

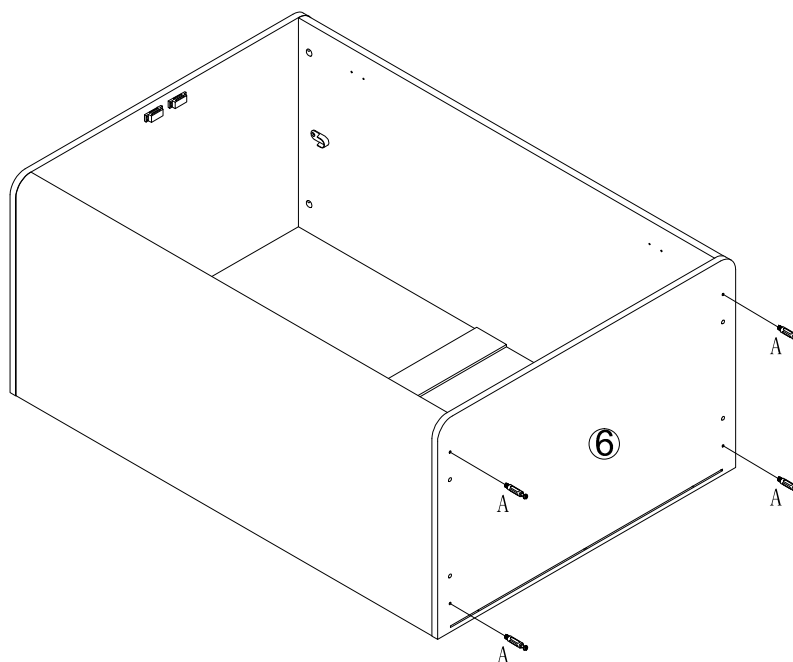

No. A
Quantity: 4 Pcs
8*28 mm




STEP 9

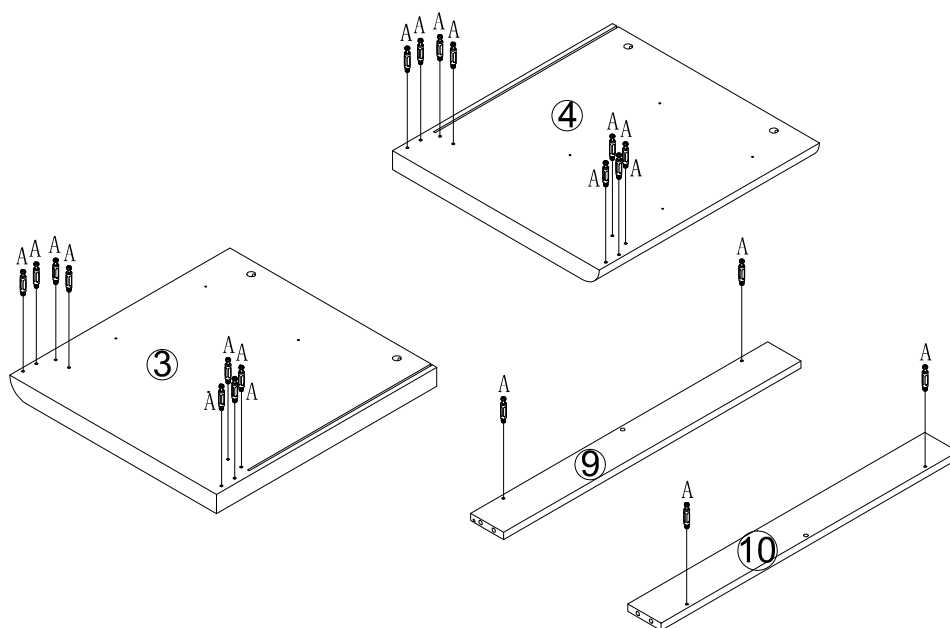



No. A
Quantity: 20 Pcs
8*28 mm



STEP 10




The first screw hole should corresponded with the board location hole

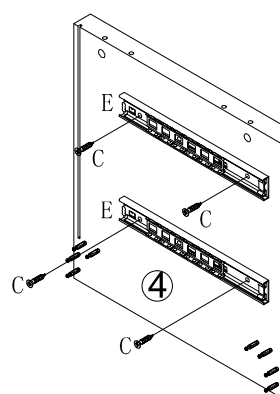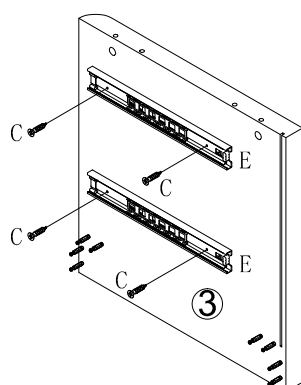


No. C
Quantity: 8 Pcs
M3.5*14mm



No. E
Quantity: 2 Sets
10"




STEP 11

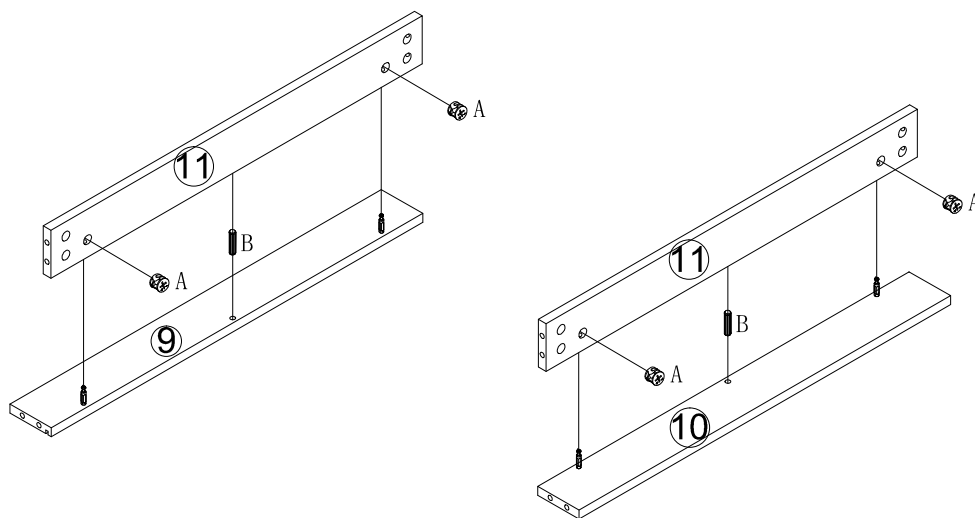


No. A
Quantity: 4 Pcs
Ø15



No. B
Quantity: 2 Pcs
8*30mm




STEP 12

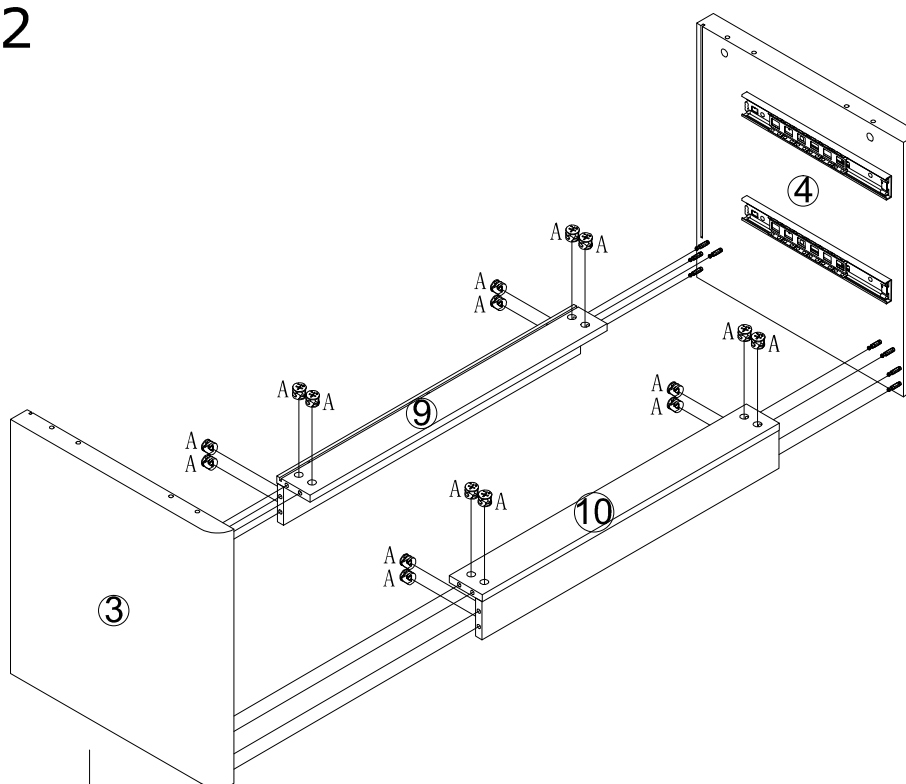


No. A
Quantity: 16 Pcs
Ø15



STEP 13

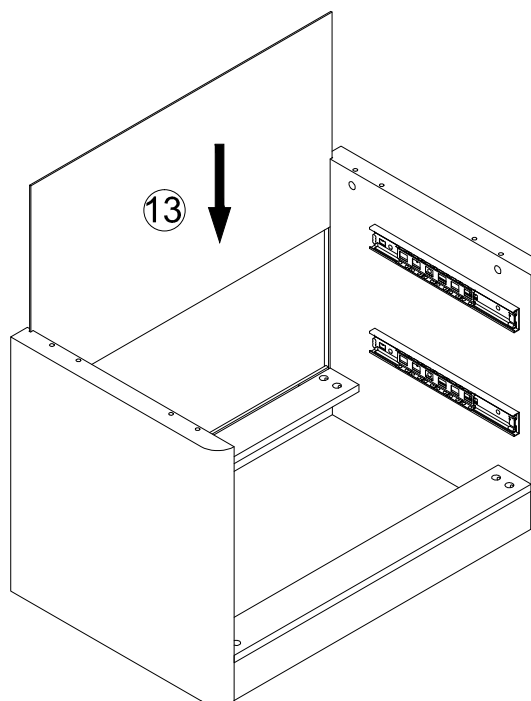


STEP 14

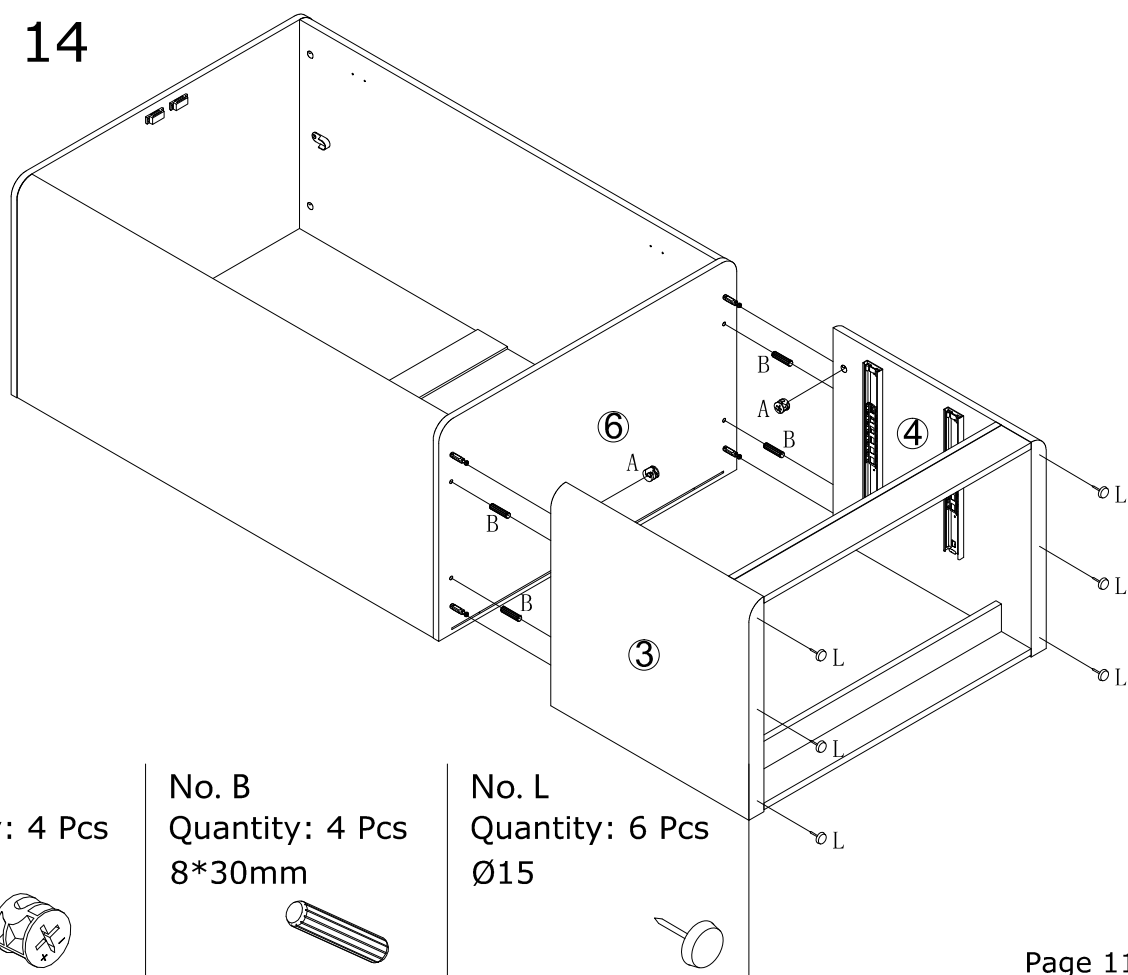

No. A
Quantity: 4 Pcs
Ø15




No. B
Quantity: 4 Pcs
8*30mm



No. L
Quantity: 6 Pcs
Ø15




STEP 15

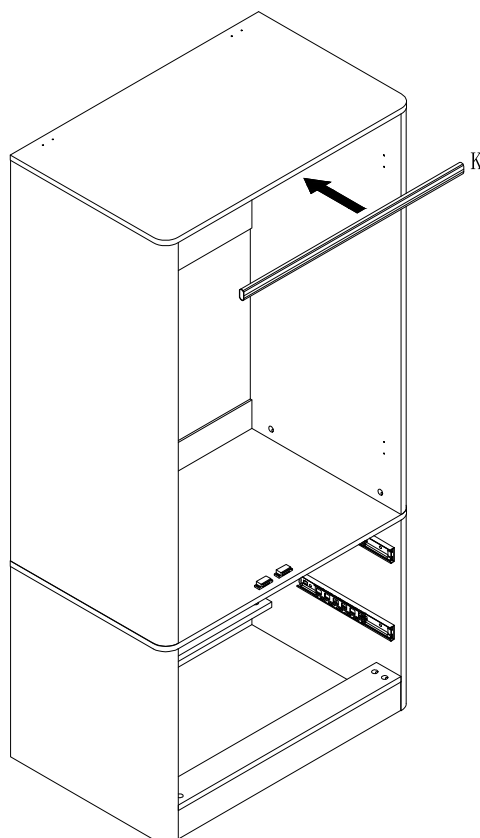

No. K
Quantity: 1 Pcs
708*28*15mm



STEP 16

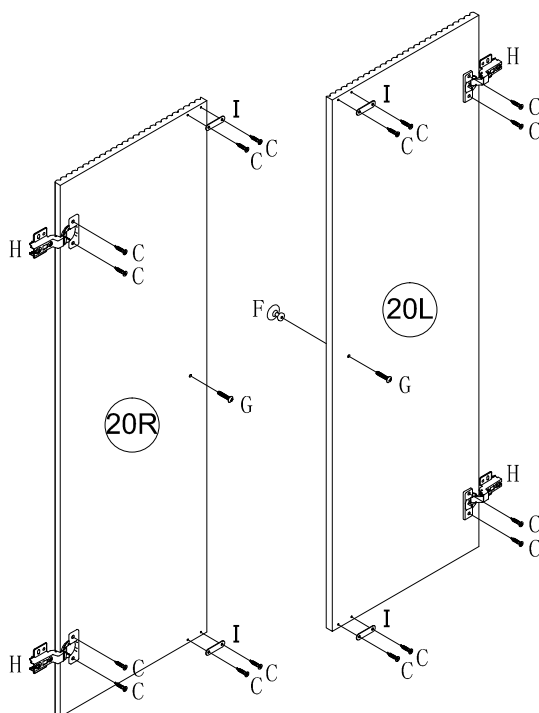

No. C
Quantity: 16 Pcs
M3.5*14mm




No. F
Quantity: 2 Pcs
Ø33*30mm



No. G
Quantity: 2 Pcs
M4*16mm





No. H
Quantity: 4 Pcs



No. I
Quantity: 4 Pcs




STEP 17

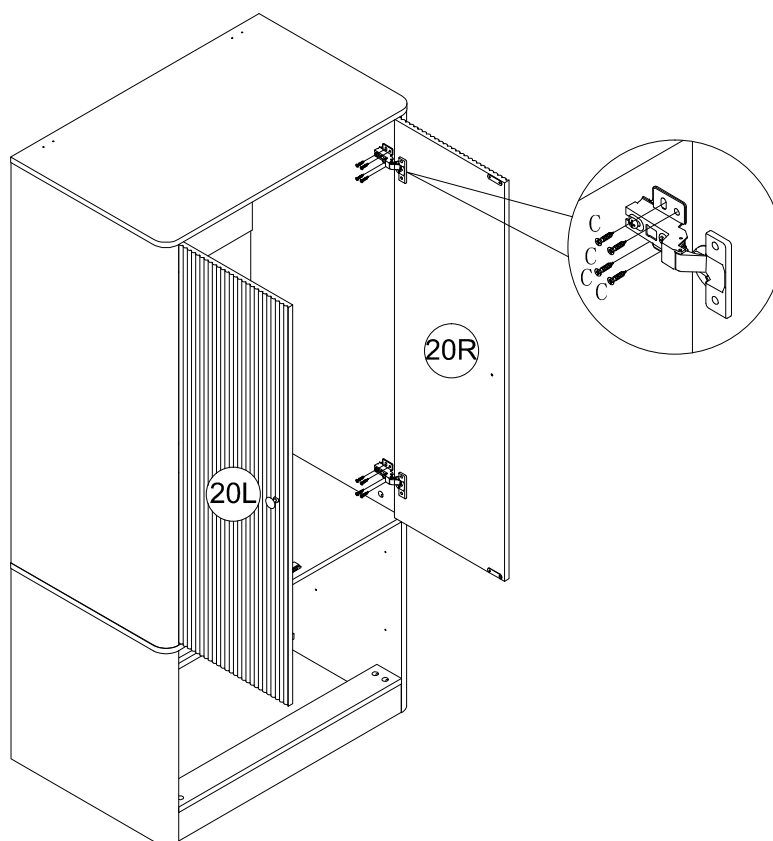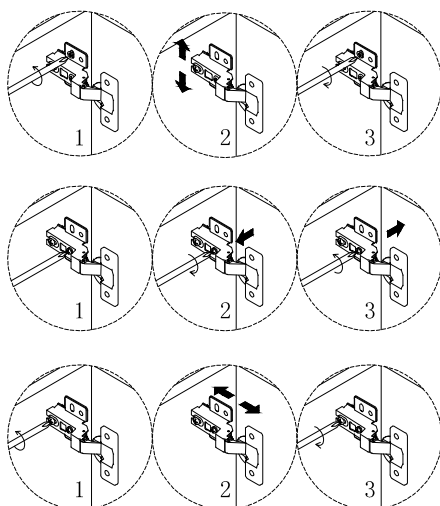

No. C
Quantity: 16 Pcs
M3.5*14mm



STEP 18

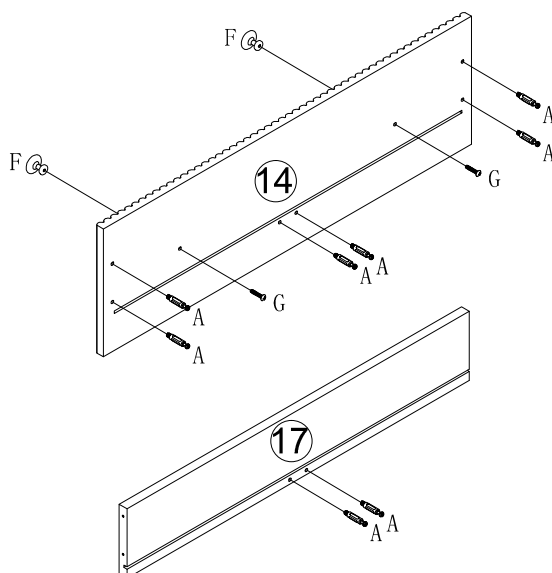

x2

No. A
Quantity: 16 Pcs
8*28 mm




No. F
Quantity: 4 Pcs
Ø33*30mm



No. G
Quantity: 4 Pcs
M4*16mm



STEP 19

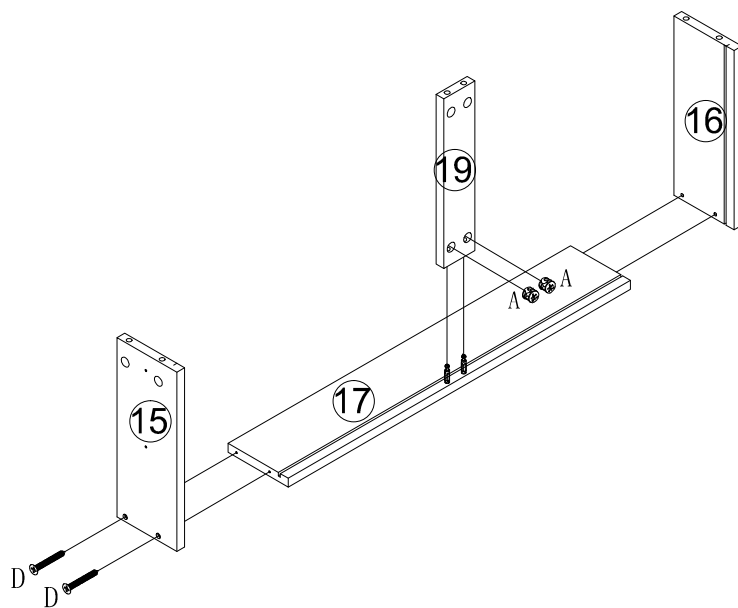


x2


No. A
Quantity: 4 Pcs
Ø15



No. D
Quantity: 8 Pcs
M4*30mm




STEP 20

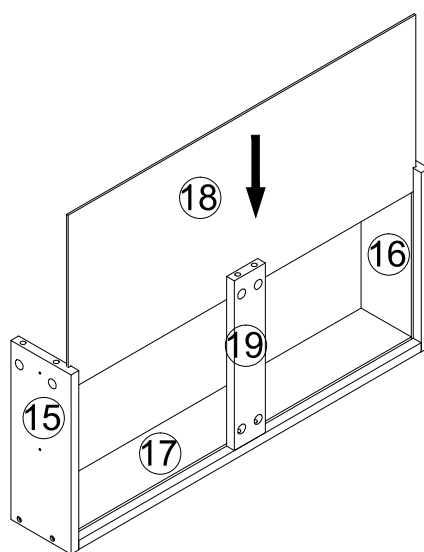

x2

STEP 21

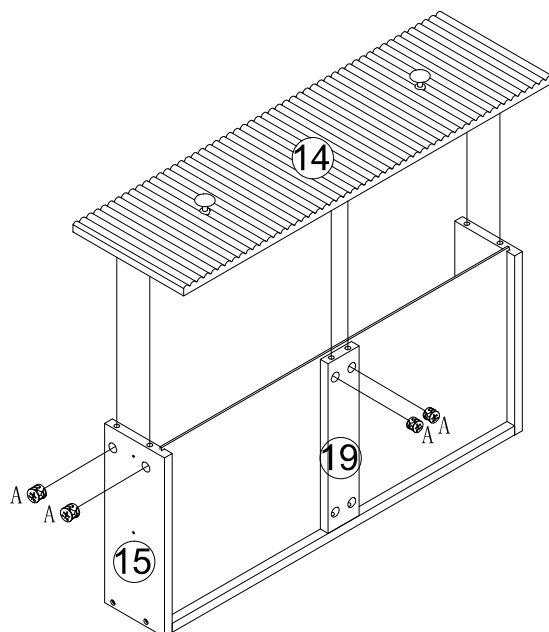

x2


No. A
Quantity: 12 Pcs
Ø15




STEP 22



The first screw hole should corresponded with the board location hole

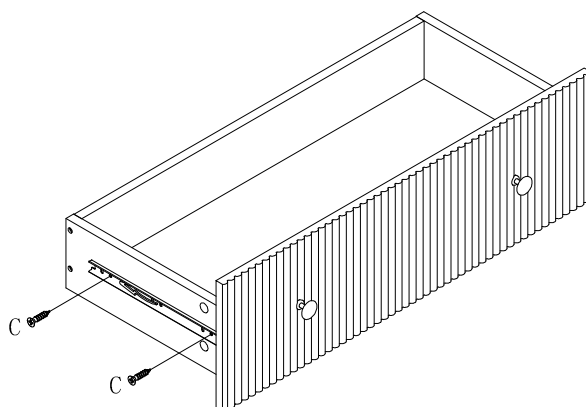


No. E
Quantity: 2 Sets
10"




No. C
Quantity: 8 Pcs
M3.5*14mm



STEP 23

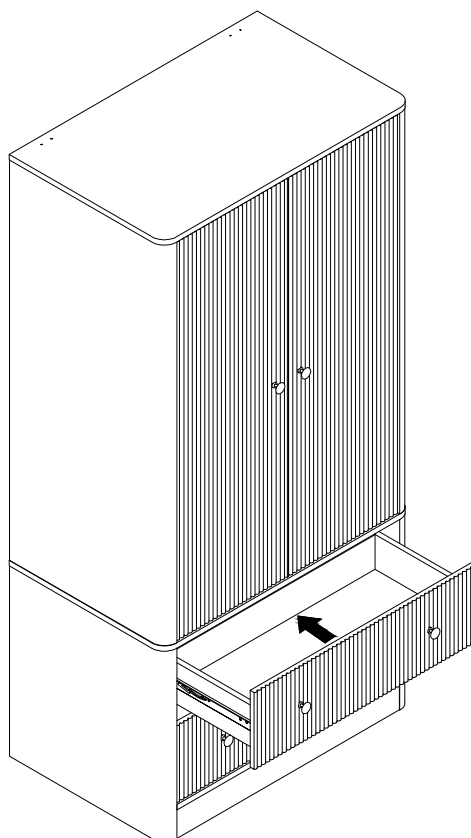


STEP 24

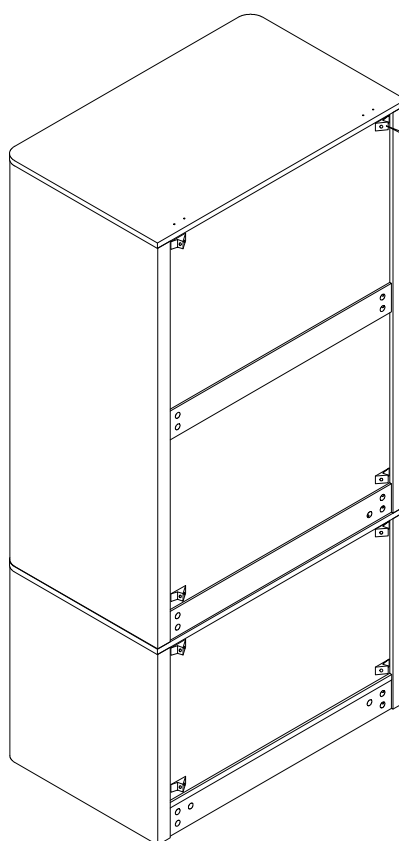


Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.


No. M
Quantity: 8 Pcs



STEP 25

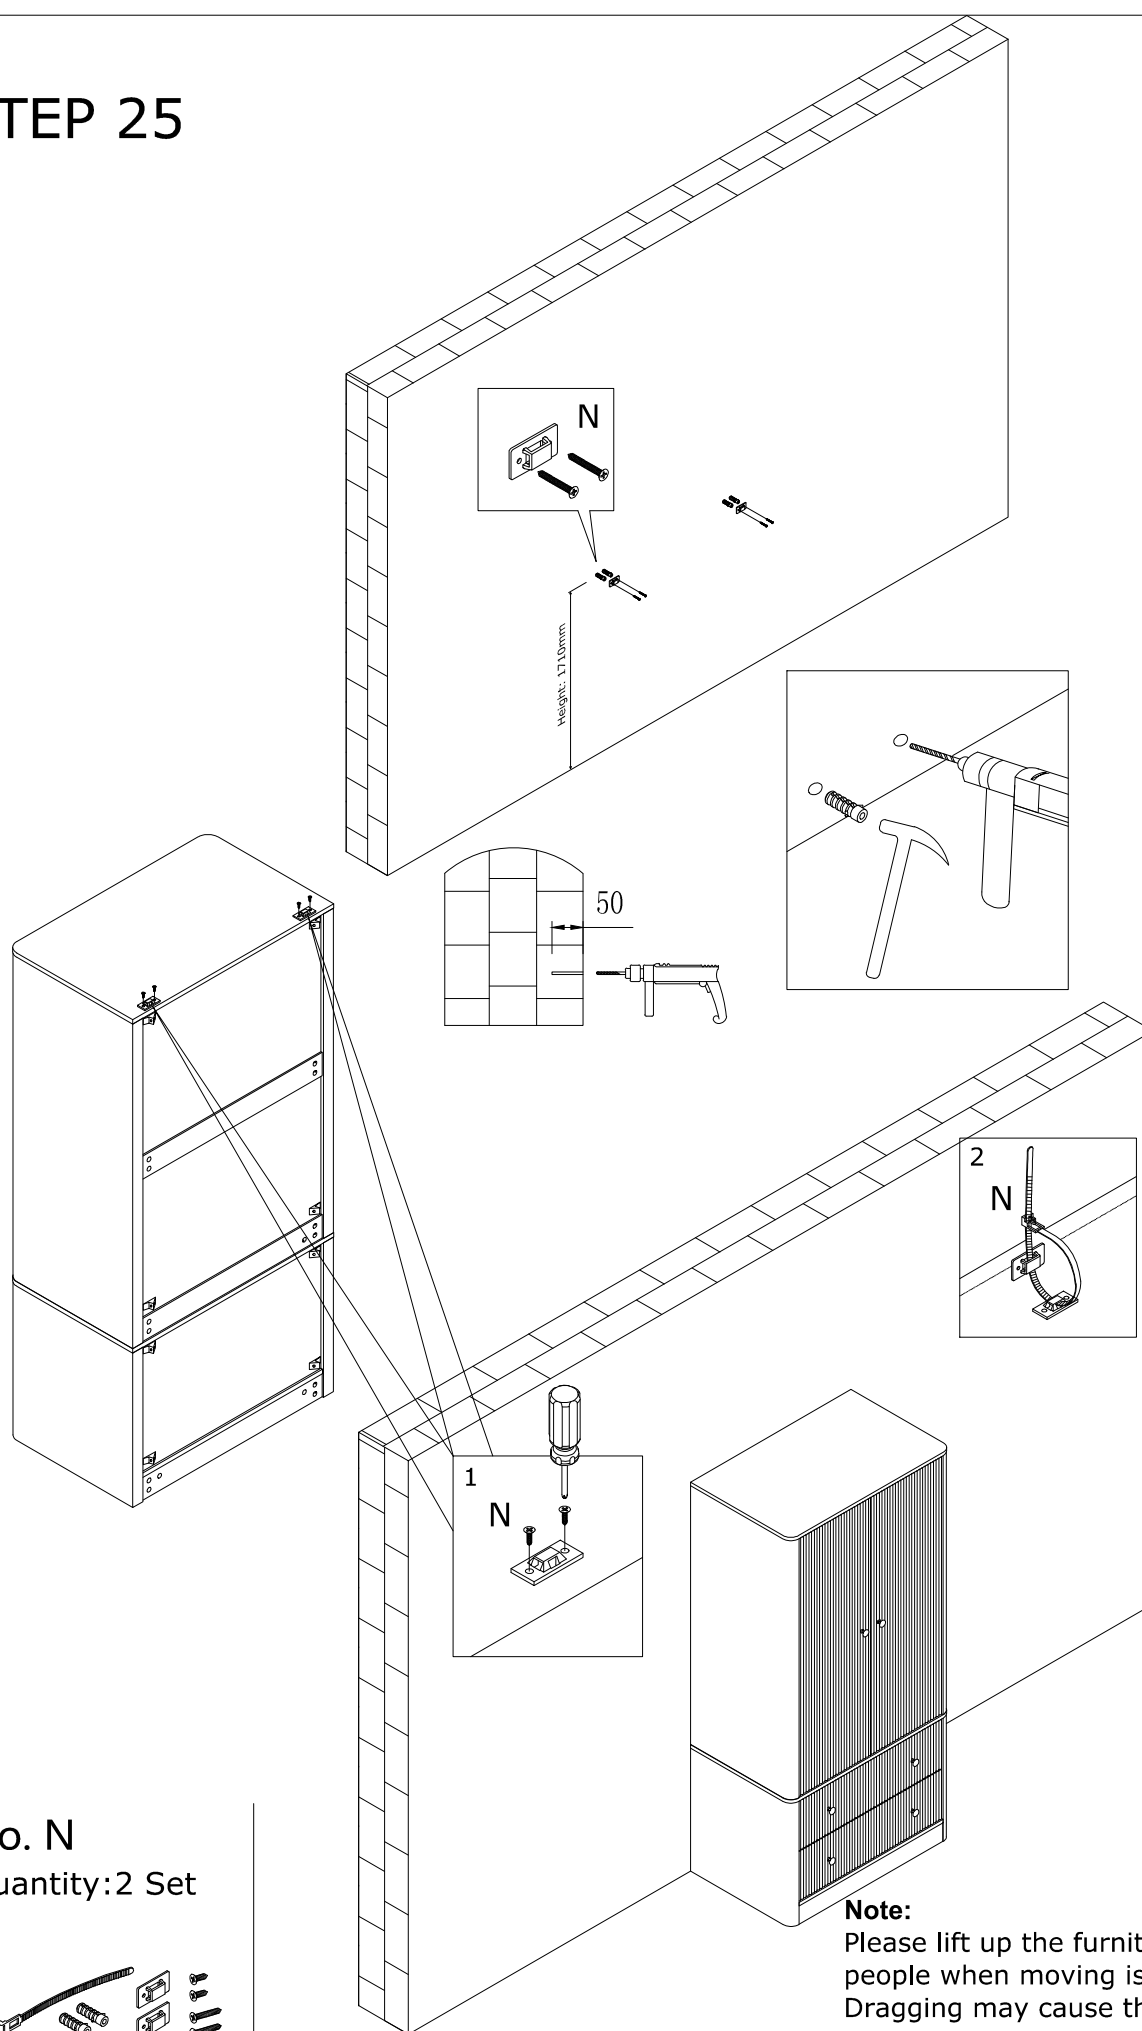

No. N
Quantity: 2 Set



Note:
Please lift up the furniture by two people when moving is needed.
Dragging may cause the legs failure.