

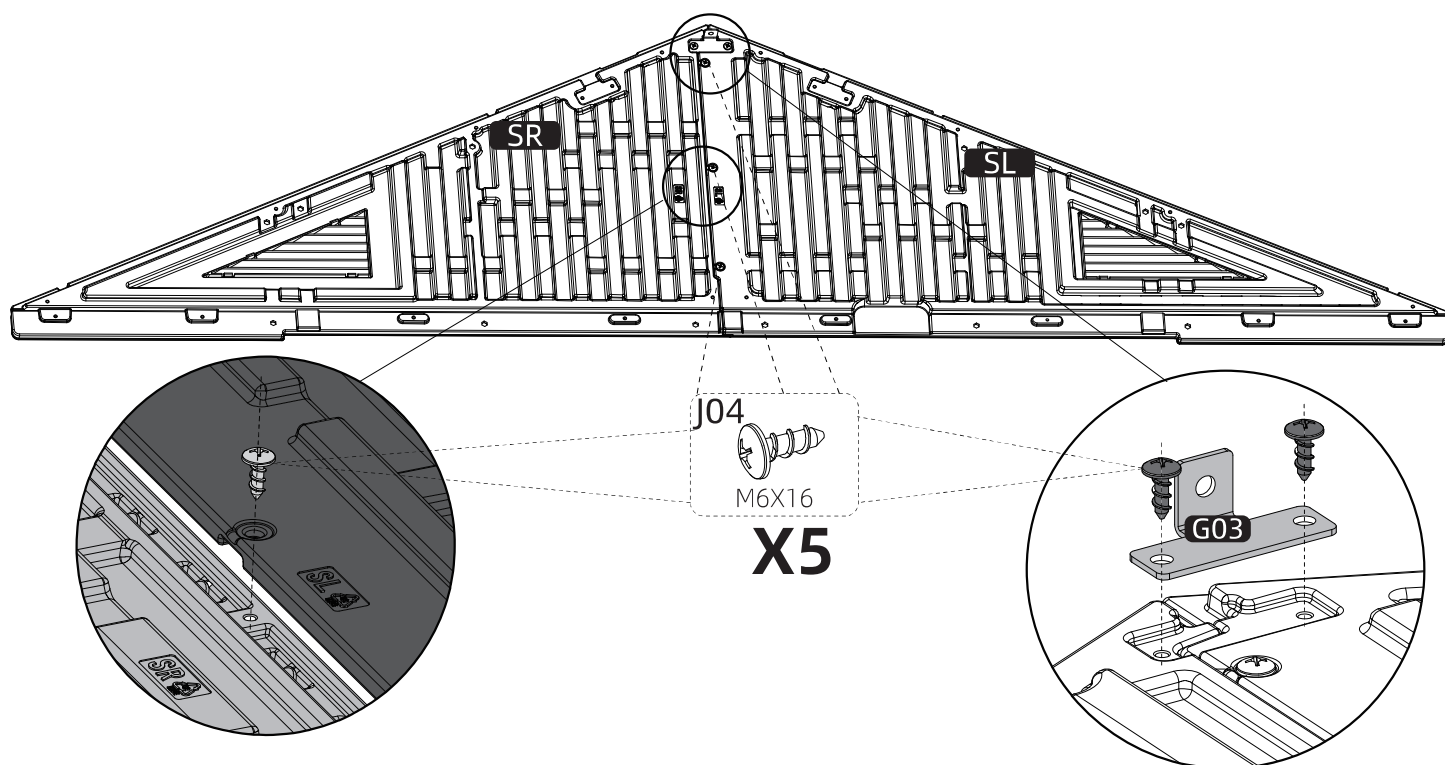


12 Pre-assemble Panels SL-SR x2

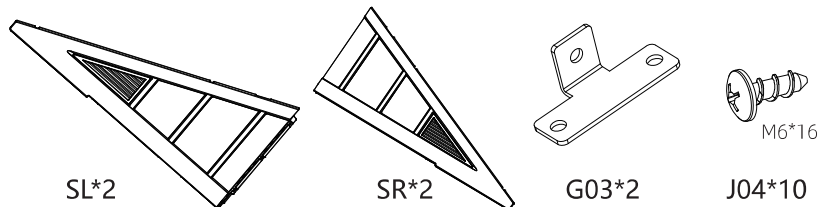


25

13 Pre-assemble Panels B01-B02

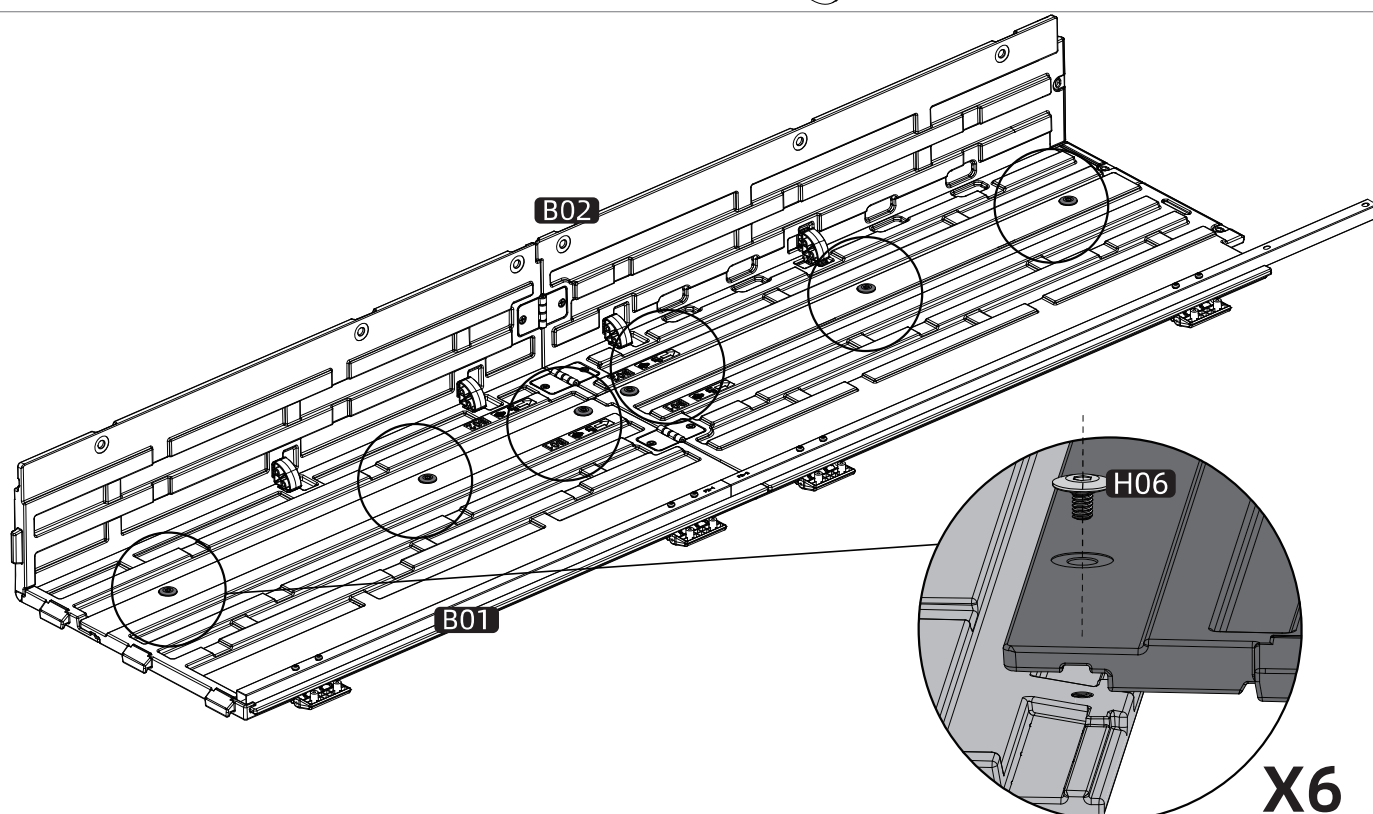



26

14 Wall Panel Installation - 1

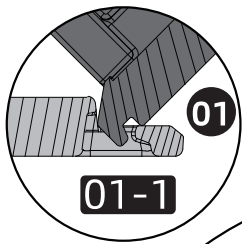


Tilt it 45° ,insert it into the slot,then rotate 90° to lock it in place.

Press down firmly on this area until the clip beneath snaps into place.

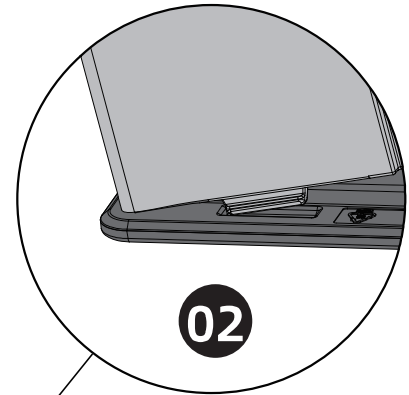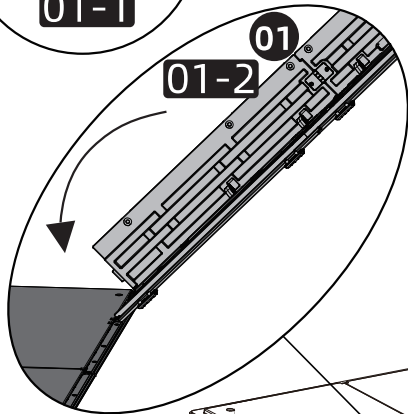


Note: The side where H03 and H02 are installed is the door side.

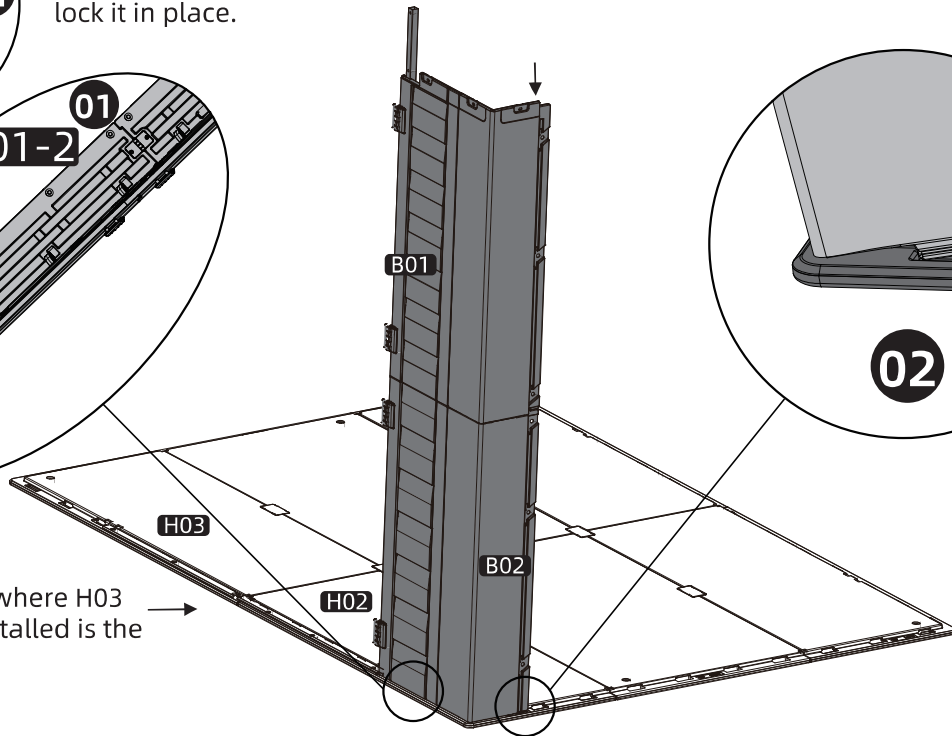


27

15 Wall Panel Installation - 2 (Install B03x2/3/4/5)






H06*12/18/24/30

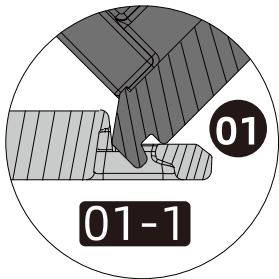

Tilt it 45° ,insert it into the slot,then rotate 90° to lock it in place.

Please determine the installation position of the B04 window component yourself, or refer to the overall product diagram for the B04 window location.

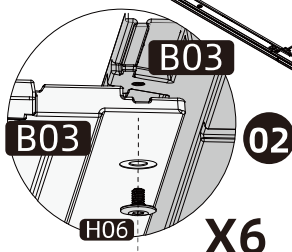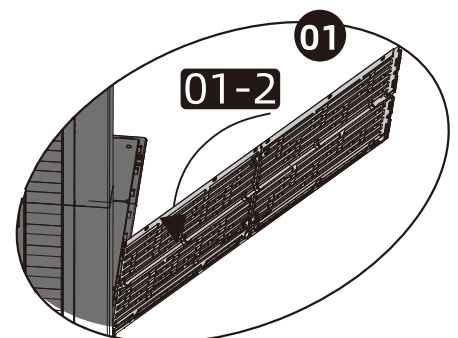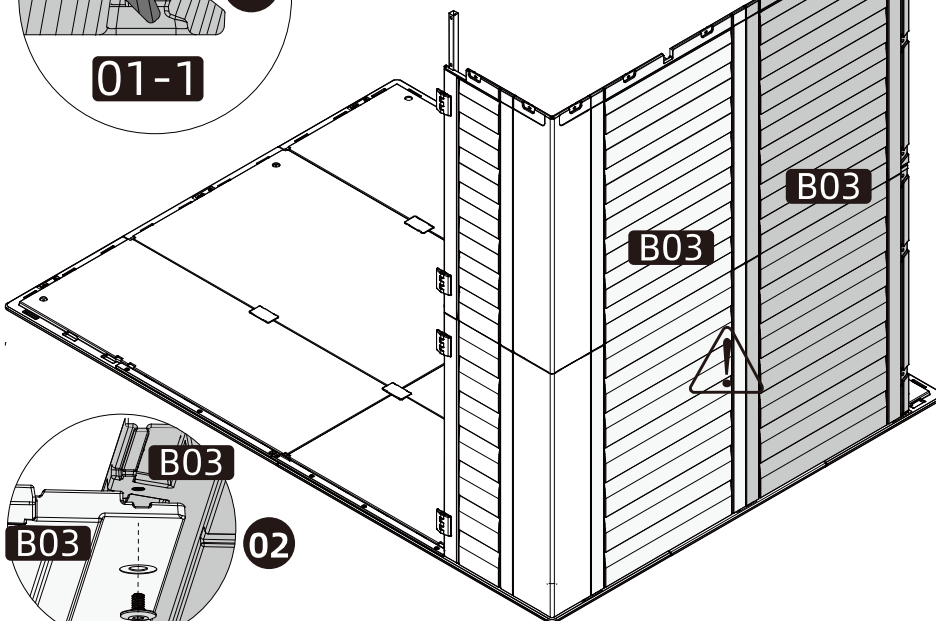

X6


Warning: Please install the corresponding quantity of B03/B04 parts based on the size you purchased.

8x6FT-B03*2
8x8FT-B03*3
8x10FT-B03*4
8x12FT-B03*5


28

16




Wall Panel Installation - 3 (Install B02)



H06*6

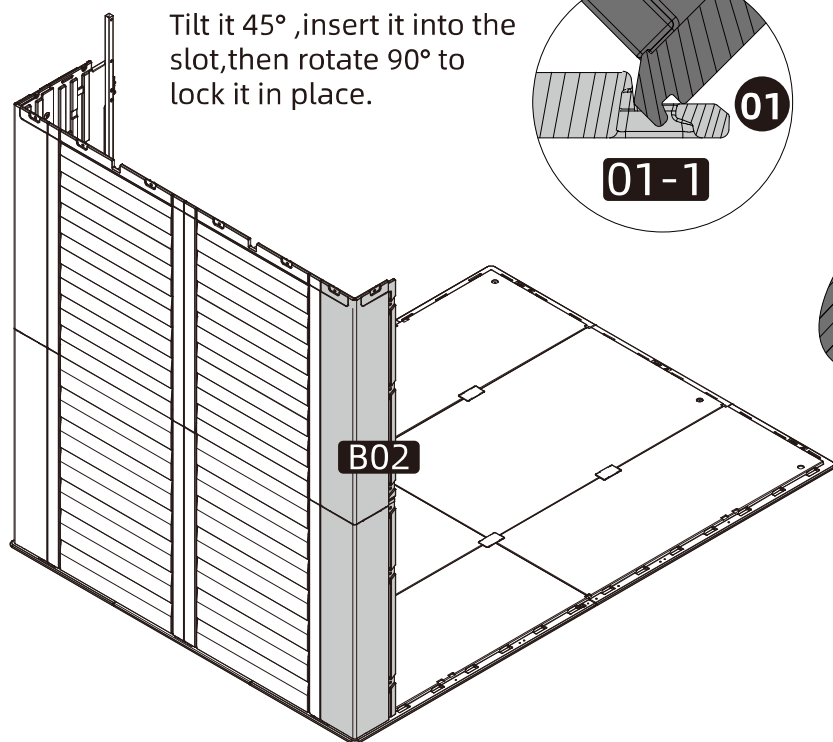

Tilt it 45° ,insert it into the slot,then rotate 90° to lock it in place.

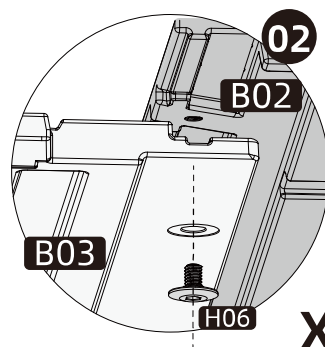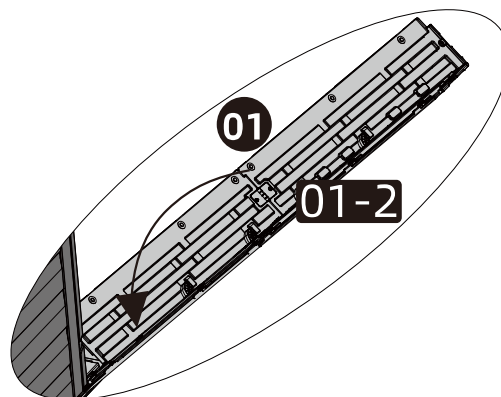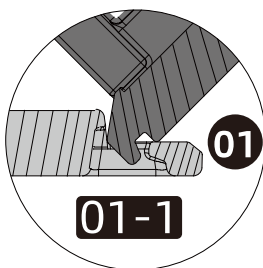


X6


29

17




Wall Panel Installation - 4 (B03 Side Back Panel Installation)



H06*6

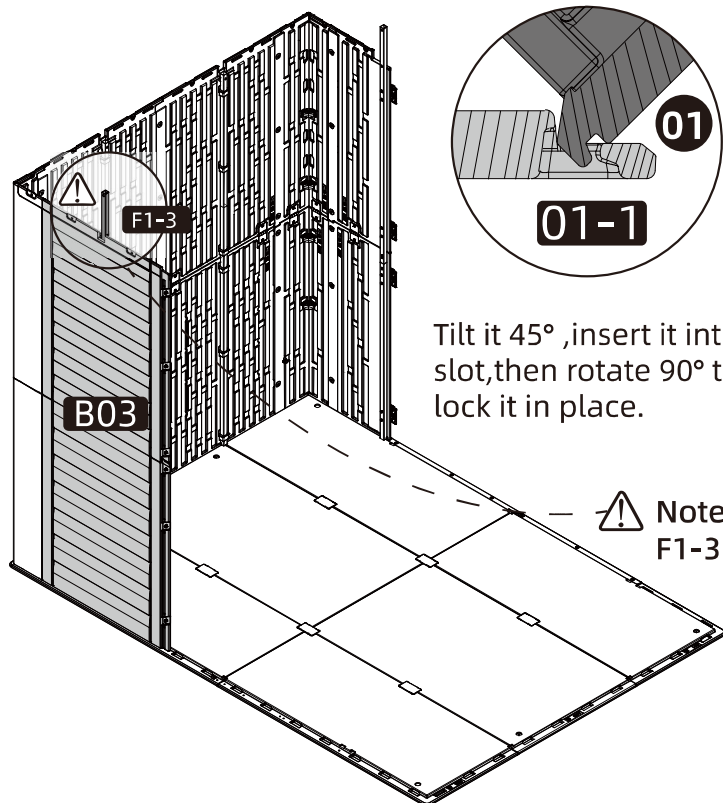

Tilt it 45° ,insert it into the slot,then rotate 90° to lock it in place.

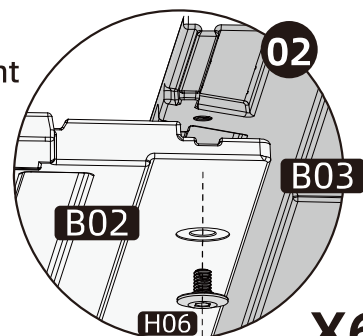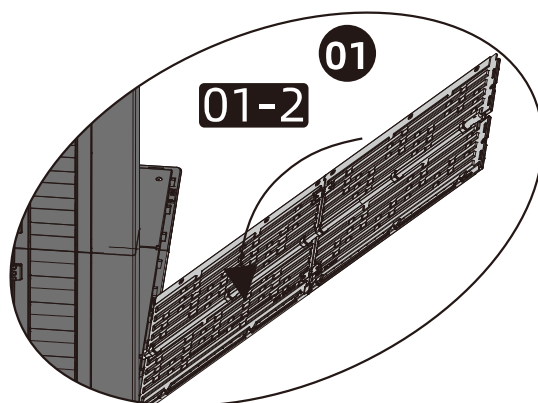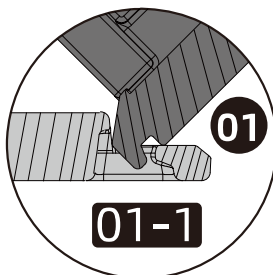


X6

⚠ Note:Here is component F1-3 on B03



30

18



Wall Panel Installation - 5 (B03 Middle Back Panel Installation)



H06*6

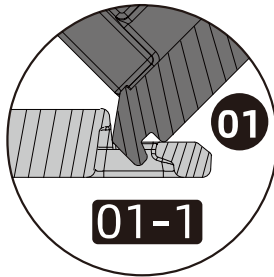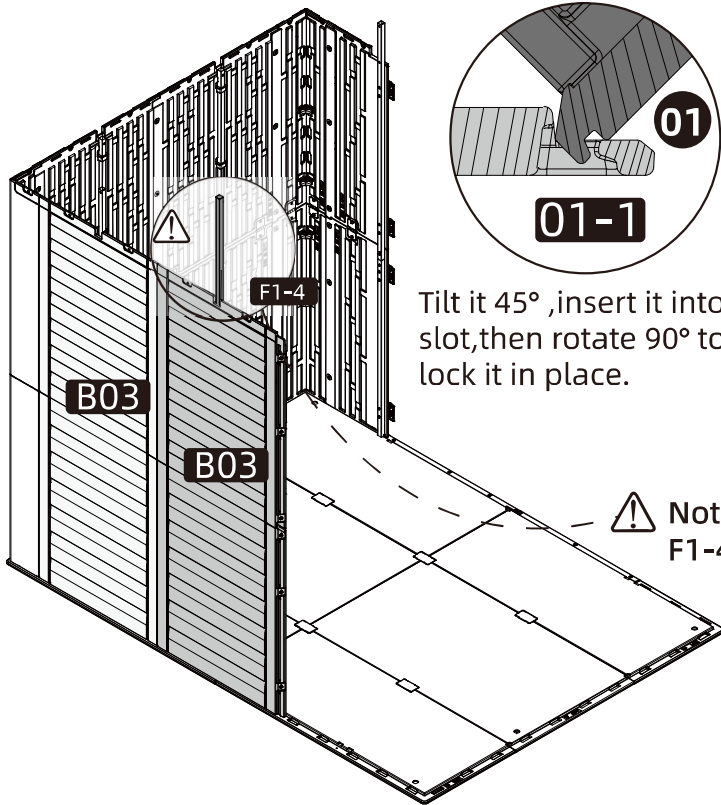

Tilt it 45° ,insert it into the slot,then rotate 90° to lock it in place.

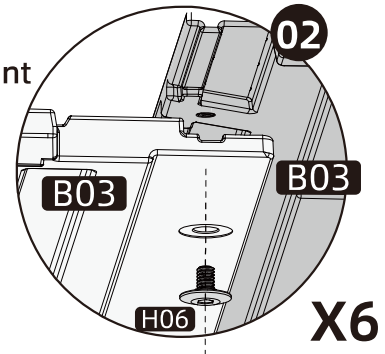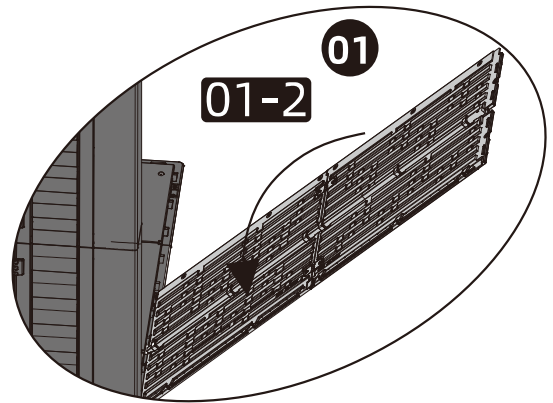


⚠ Note:Here is component F1-4 on B03



31

19



Wall Panel Installation - 6 (B03 Side Back Panel Installation)



H06*6

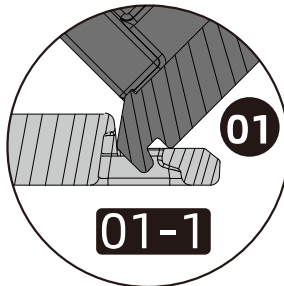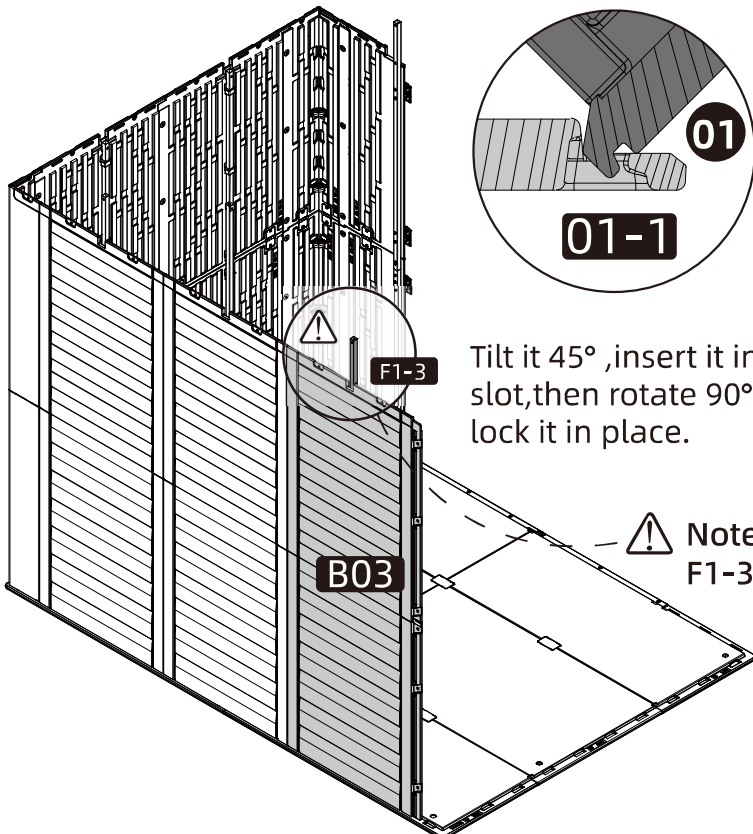

Tilt it 45° ,insert it into the slot,then rotate 90° to lock it in place.

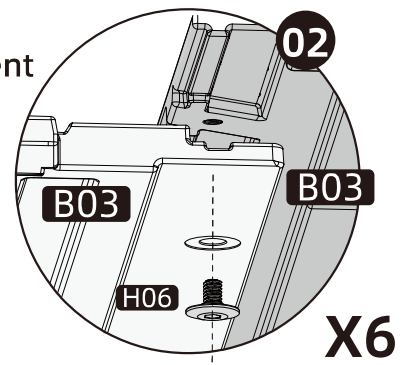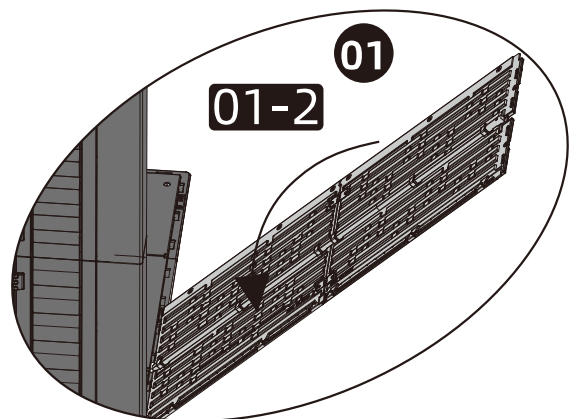


⚠ Note:Here is component F1-3 on B03



32

20



Wall Panel Installation - 7 (B02 Panel Installation)



H06*6

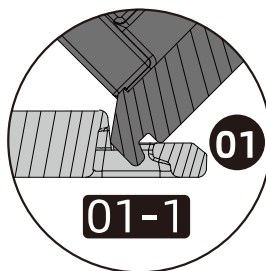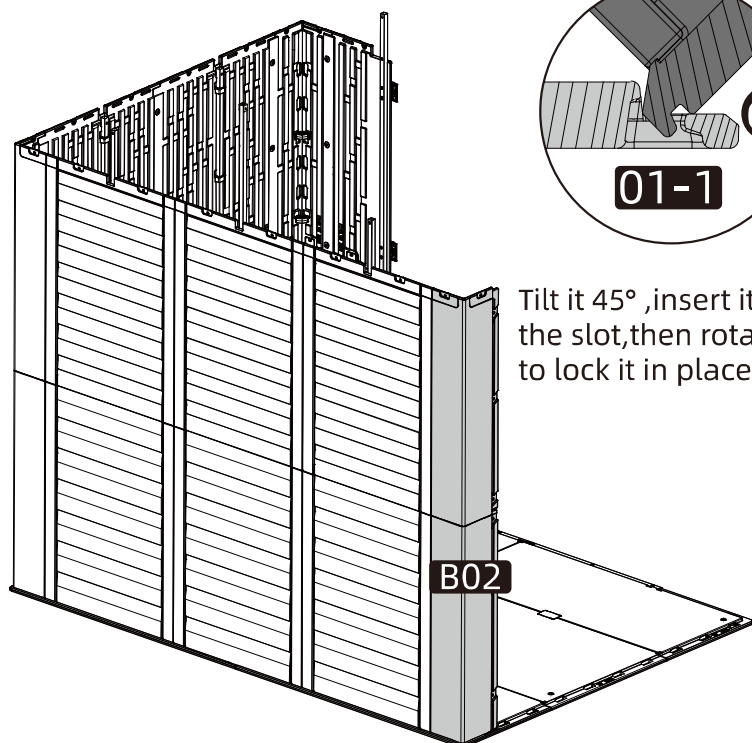


Tilt it 45°, insert it into the slot, then rotate 90° to lock it in place.

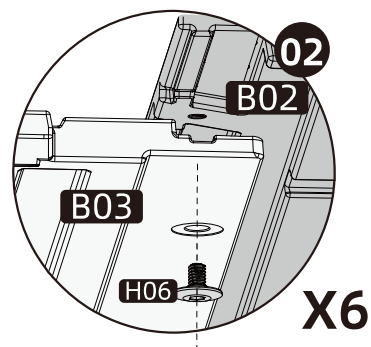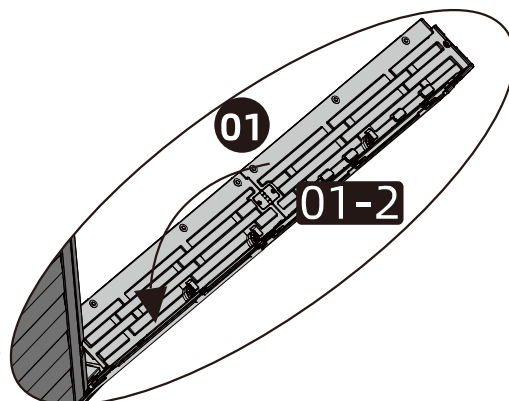



33

21



Wall Panel Installation - 8 (B03 Panel Installation)

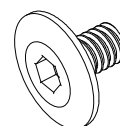

H06*6

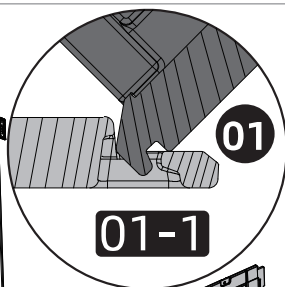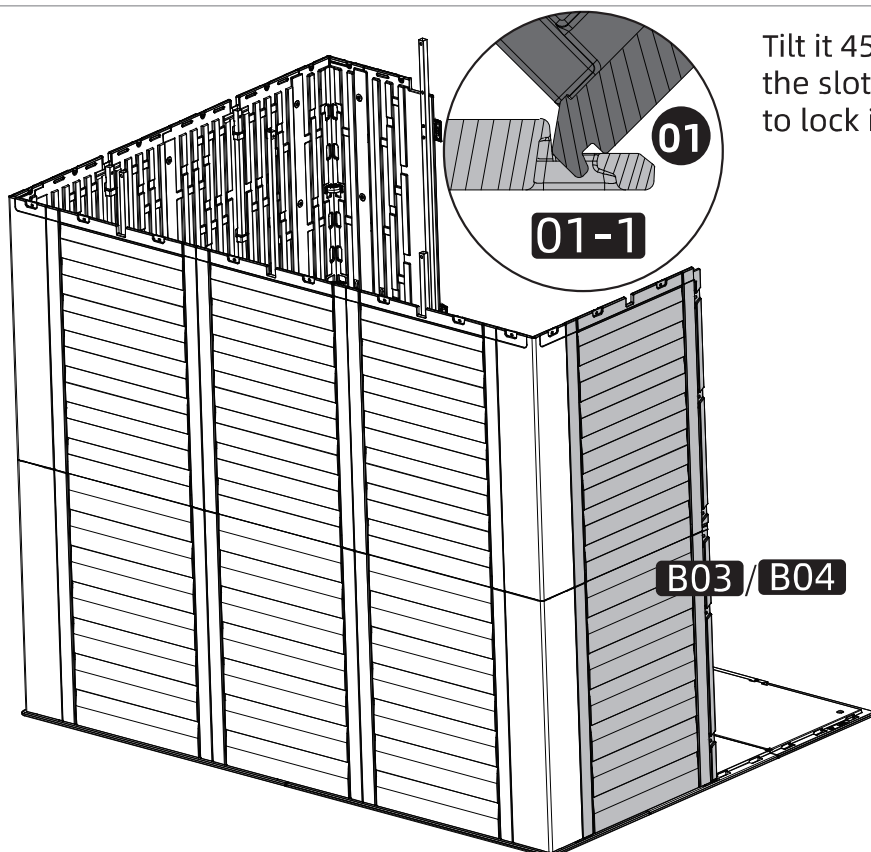

Tilt it 45°, insert it into the slot, then rotate 90° to lock it in place.

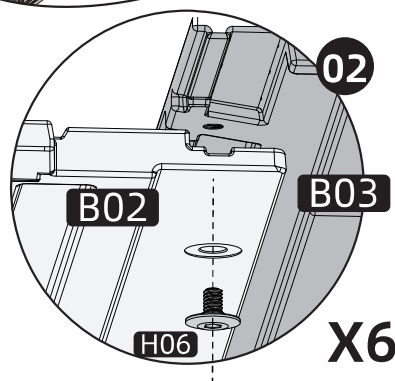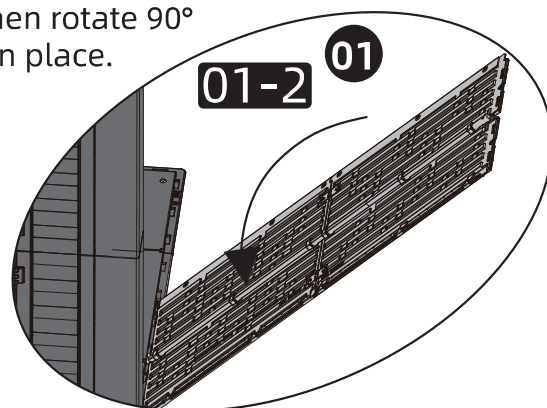

34


22

Wall Panel Installation - 9 (B03/B04 Panel Installation)




H06*6/12/18/24

8x6FT-B03*2
8x8FT-B03*3
8x10FT-B03*4
8x12FT-B03*5

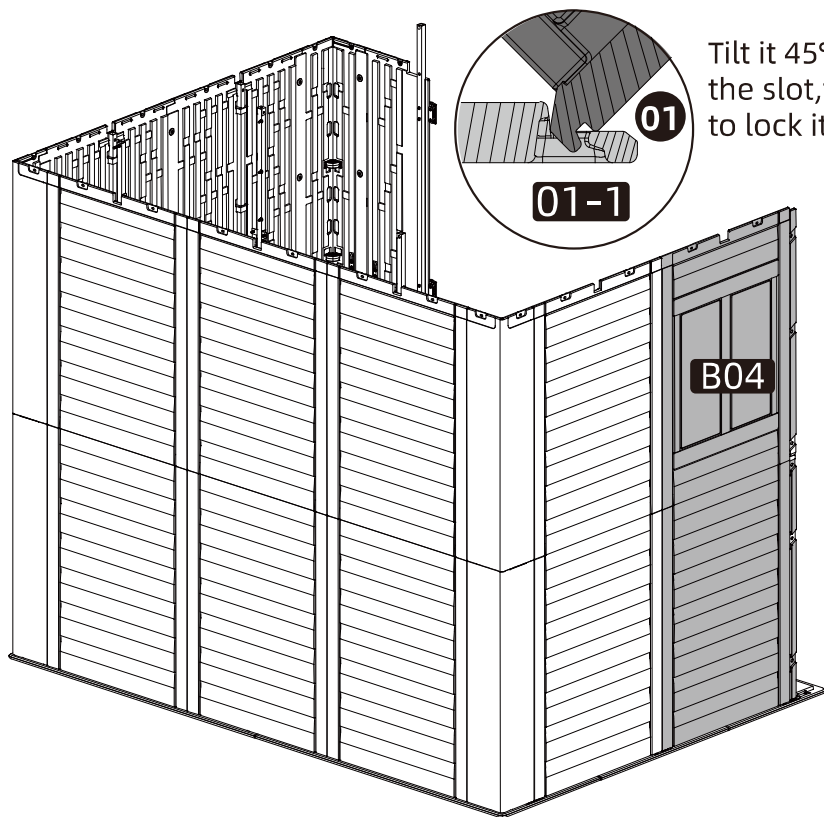


Tilt it 45° ,insert it into the slot,then rotate 90° to lock it in place

Please determine the installation position of the B04 window component yourself, or refer to the overall product diagram for the B04 window location.

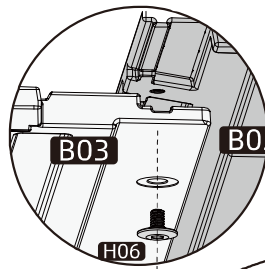


X6

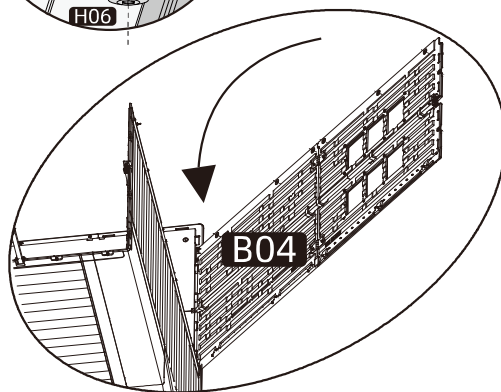


35

23


Wall Panel Installation - 10 (B02 Panel Installation)




H06*6

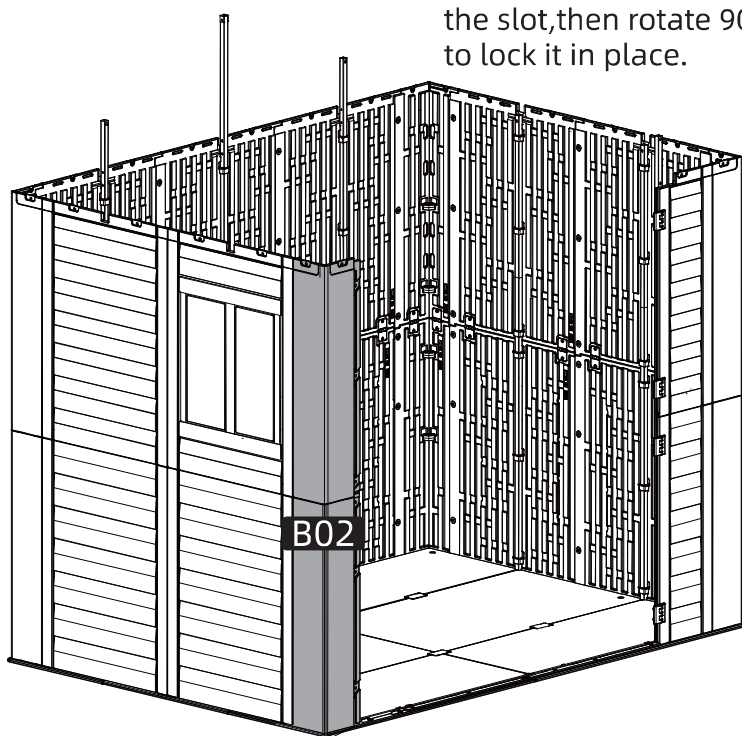

Tilt it 45° ,insert it into the slot,then rotate 90° to lock it in place.

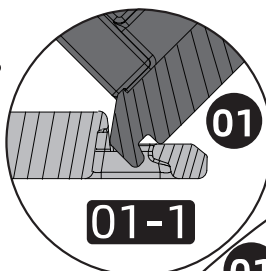


01-1

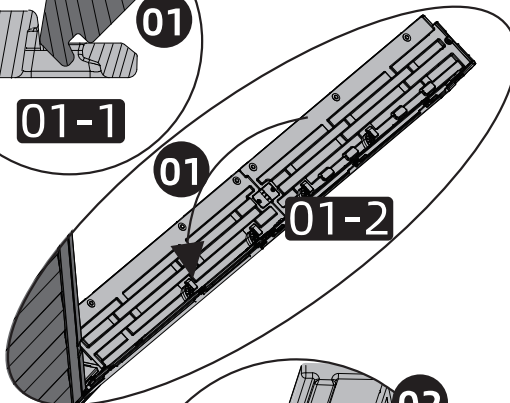

01


01-2

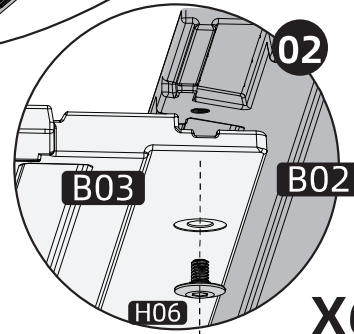

02



X6

36





H06*6

Tilt it 45°, insert it into the slot, then rotate 90° to lock it in place.

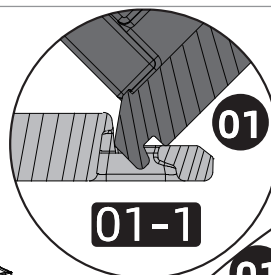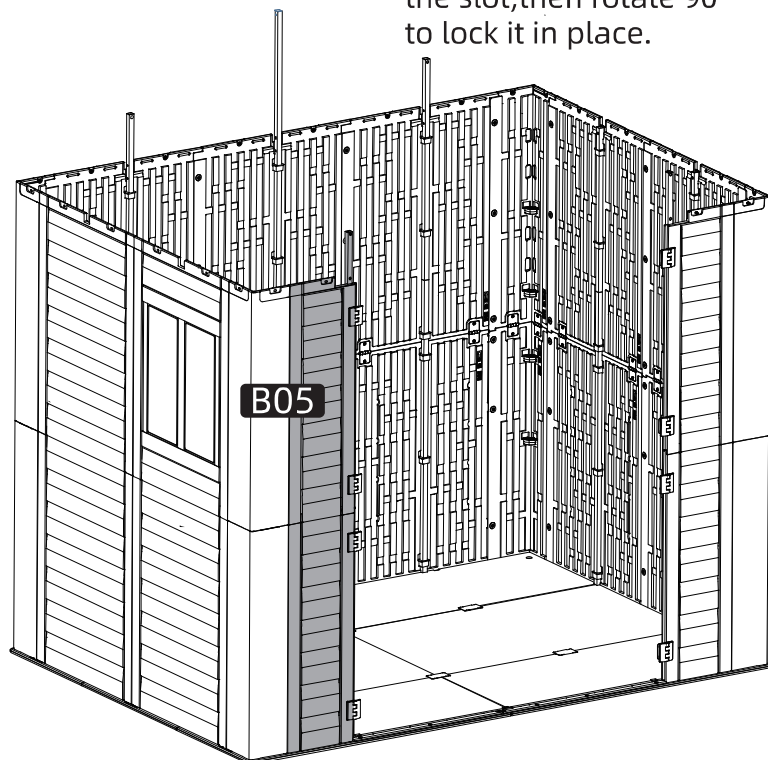

01-1

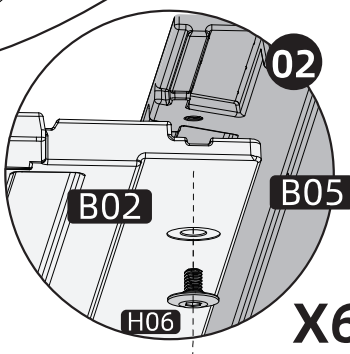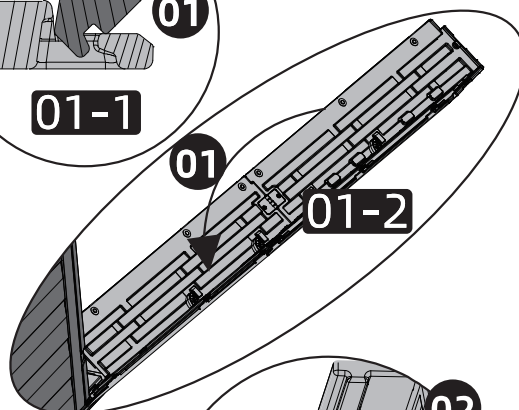


X6

37

Please arrange the required accessories correctly according to the purchased size.


Roof assembly

8X6 FT

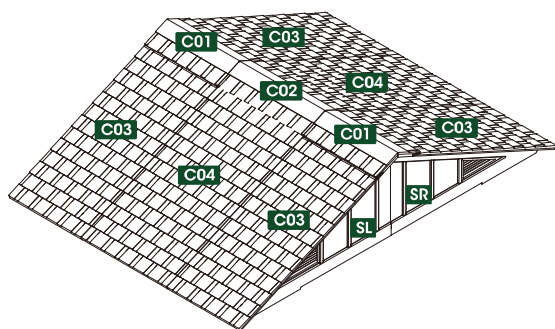

C01 x 2
C02 x 1
C03 x 4
C04 x 2
SL x 2
SR x 2

8X8 FT

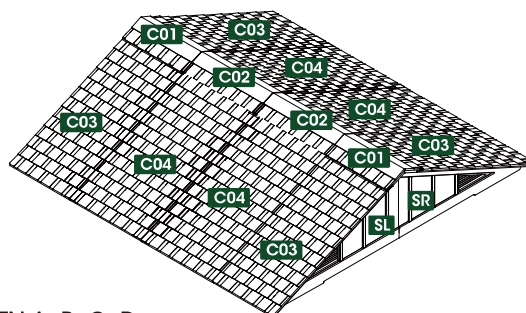


C01 x 2
C02 x 2
C03 x 4
C04 x 4
SL x 2
SR x 2

CTN A+B+C


CTN A+B+C+D

8X10 FT

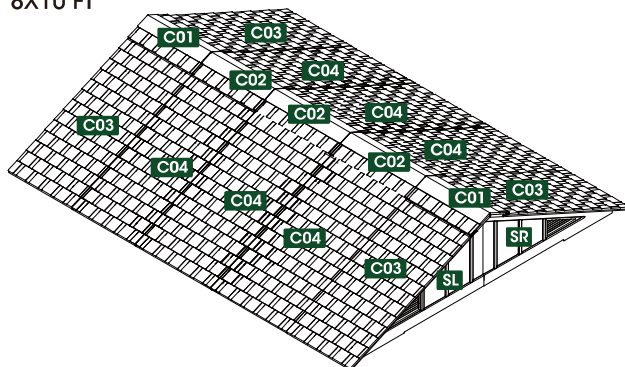

C01 x 2
C02 x 3
C03 x 4
C04 x 6
SL x 2
SR x 2

8X12 FT

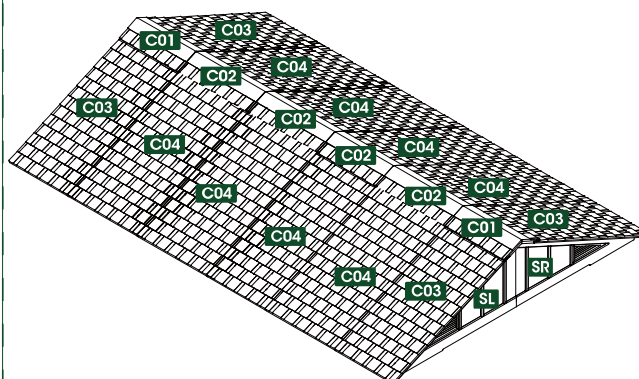

C01 x 2
C02 x 4
C03 x 4
C04 x 8
SL x 2
SR x 2

CTN A+B+C+D(x2)

CTN A+B+C+D(x3)

38