


INSTRUCTION MANUAL

30 Inch Computer Desk


NOTICE

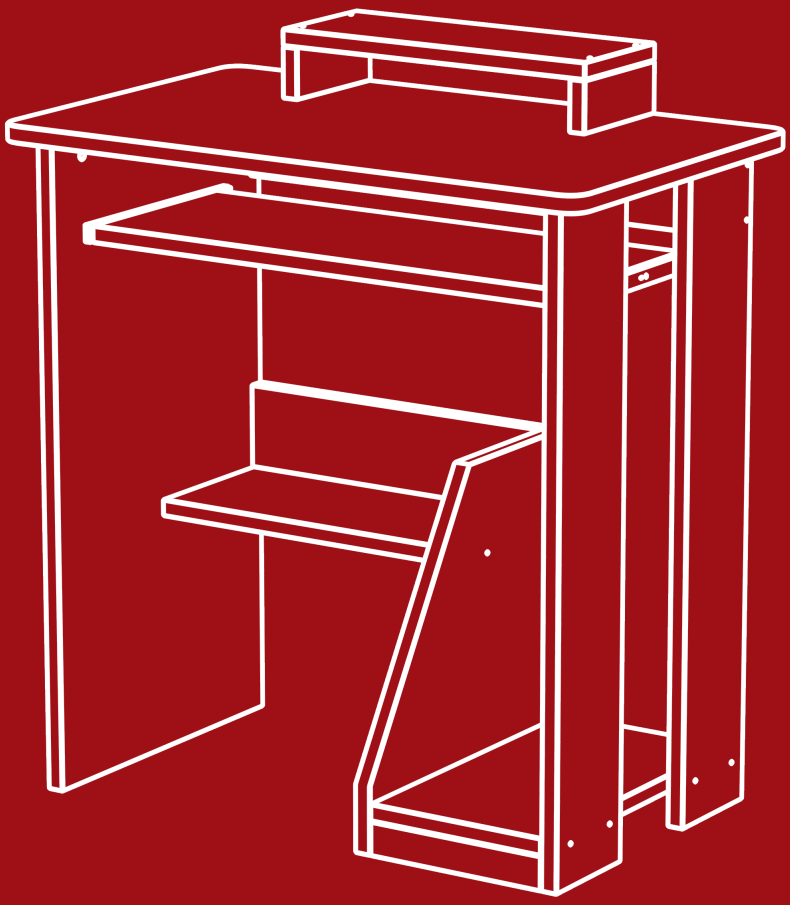

- Please check that you have all the parts and hardware listed before assembling.
- Please do not tighten all bolts until the product is assembled completely.
- If you find that something is missing, please contact the store you purchase immediately.
- At least every 4 months, check all bolts, screws and knobs to be sure vthey are tight.
- All product dimensions are manually measured, and slight deviations may occur due to manual measurement differences and shooting angles. Please kindly refer to the actual product size for reference.

TOOLS REQUIRED


PHILLIPS SCREWDRIVER


POWER DRILL (OPTIONAL)



154 LBS TOTAL WEIGHT CAPACITY




33 LBS MIDDLE SHELF CAPACITY



110 LBS TOP SHELF CAPACITY

HARDWARE

1 ECCENTRIC BOLT


6 PCS

2 ECCENTRIC CAM


6 PCS

3 FLAT HEAD SELF-TAPPING SCREW


26 PCS

4 SCREW



8 PCS

5 KEYBOARD SLIDE RAIL


2 PCS

PARTS

A DESKTOP PANEL



1 PC

B LEFT SIDE PANEL



1 PC

C RIGHT VERTICAL SUPPORT PANEL 1




1 PC

D RIGHT VERTICAL SUPPORT PANEL 2




1 PC

E ANGLE SUPPORT PANEL



1 PC

F LOWER STORAGE BOARD




1 PC

G LOWER BAFFLE PLATE



1 PC

H MIDDLE SHELF PANEL



1 PC

I MIDDLE BAFFLE PLATE




1 PC

J UPPER BAFFLE PLATE



1 PC

K KEYBOARD TRAY



1 PC

L MONITOR STAND PANEL




1 PC


M MONITOR SIDE PANEL




2 PCS

HOW TO INSTALL CAM LOCK

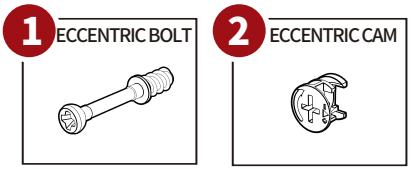


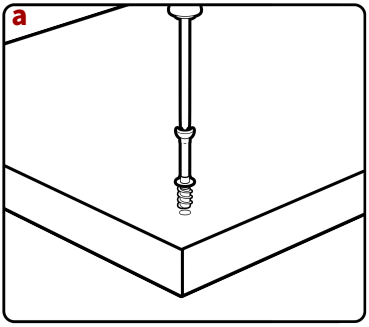


Screw the eccentric bolt into the pre-drilled hole of the panel.

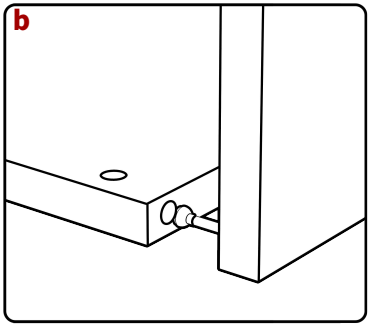

Align the panels and fit the eccentric bolt into the matching panel.

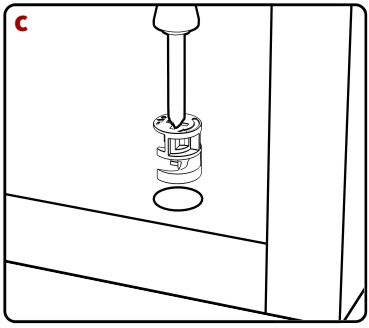


Place the eccentric cam into the round hole.

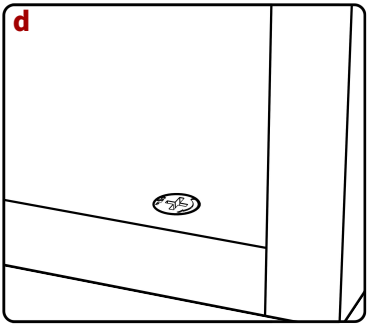


Rotate the eccentric cam clockwise approx. 180° to lock the panels.

PRODUCT ASSEMBLY

1 Attach panels G, F to angle support panel E using flat head self-tapping screw. (Item 3, 4 pieces total).

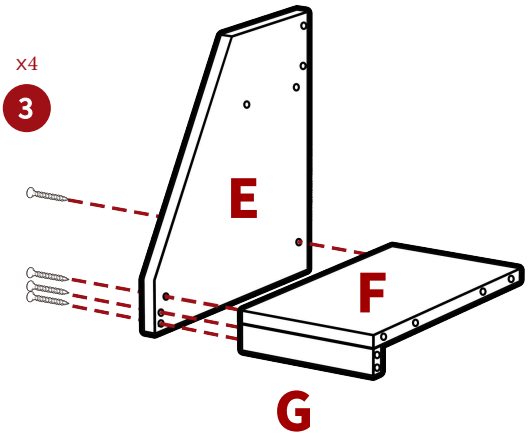


2 Attach panels C and D to the assembled unit using flat head self-tapping screw. (Item 3, 6 pieces total).

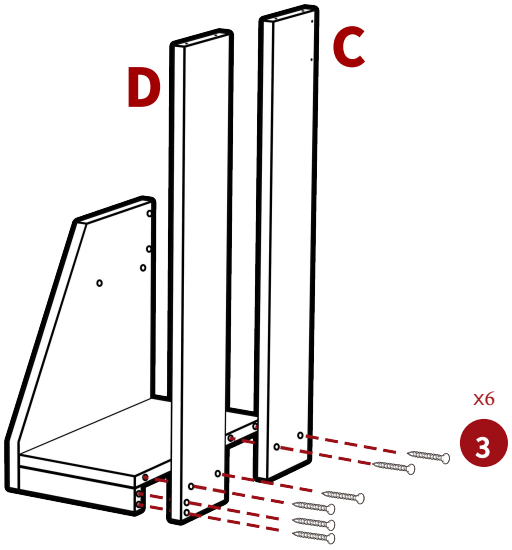


PRODUCT ASSEMBLY

3 Attach panel J to the assembled unit using flat head self-tapping screw. Then, Attach panels I and H to the angle support panel E using flat head self-tapping screw. (Item 3, 6 pieces total).

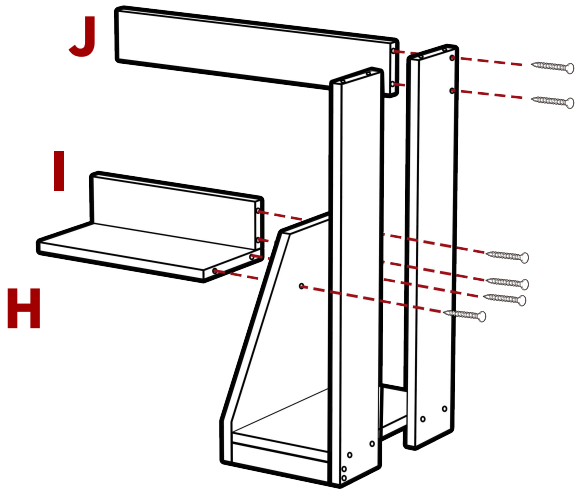

x6
3


4 Attach left side panel B to the assembled unit using flat head self-tapping screw. (Item 3, 6 pieces total).

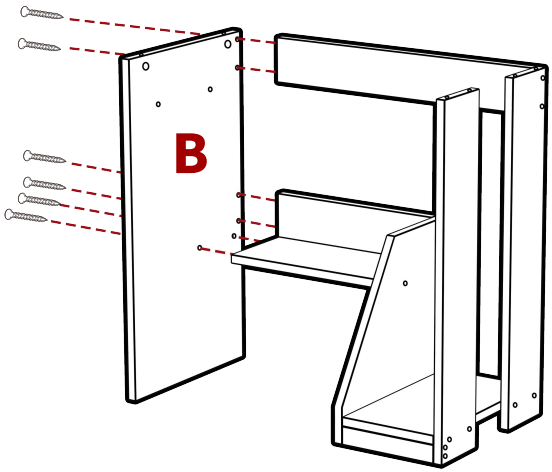

x6
3

5

Attach keyboard slide rail to the assembled unit using small flat head self-tapping screw. (item 4, 4 pieces total,item 5, 2 pieces total).

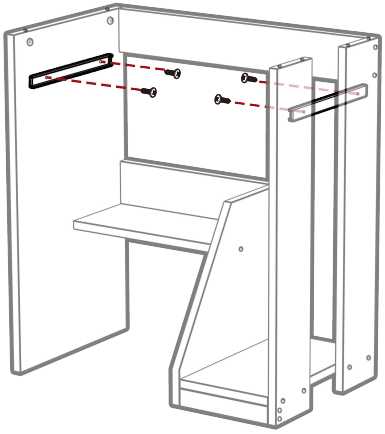


x4 x2

4 5

6


Attach desktop panel A to the assembled unit using eccentric bolt and eccentric cam. (item 1, 6 pieces total; item 2, 6 pieces total).

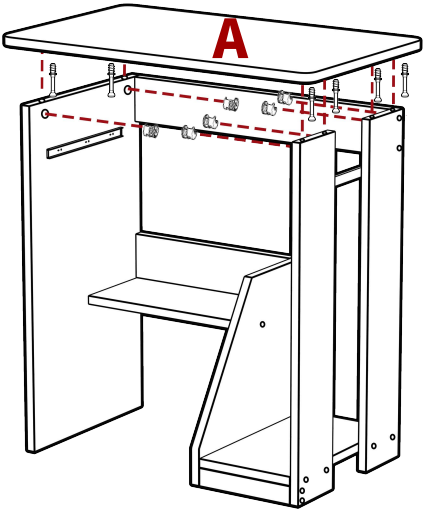

x6 x6

1 2


7 Slide the moving rails on Panel K slowly into the installed fixed rails.

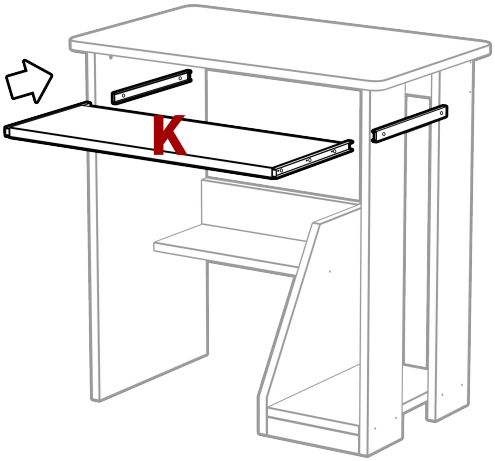


8 Attach panel L to panels M using flat head self-tapping screw. (Item 3, 4 pieces total).

×4

3

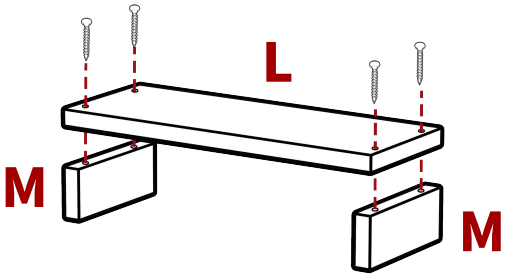

9 Finally, place the monitor stand on the A board.

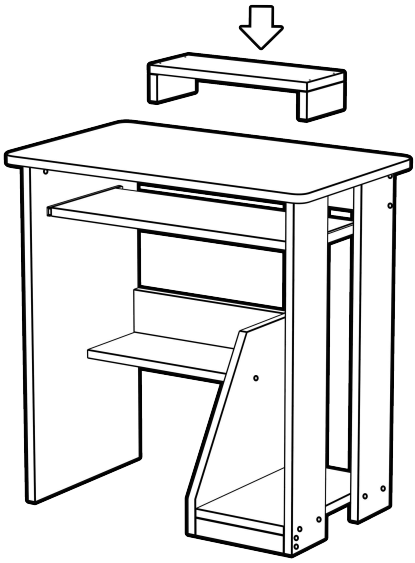

HELP CENTER

Question about your product? We're here to help.



Chat Support


Product Inquiry


Orders FAQ


Product Assembly



Returns & Refunds

⚠WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.