

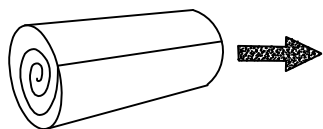
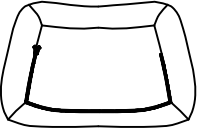



Note: Due to vacuum packaging and transportation of the soft bag, the sponge filled inside will take 72 hours to return to its softest state.

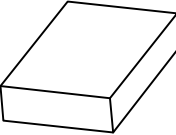


			
Upholstery cover 1PC	Armrest inner upholstery 2PCS	Backrest inner upholstery 1PC	Seat cushion foam core 1PC

1. Flip the sofa upside down and unzip the underside panel.

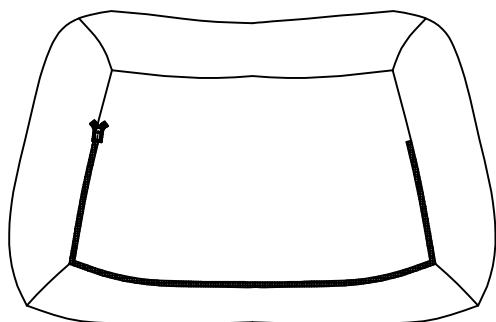


1

2. Install the armrest inner upholstery into both sides.

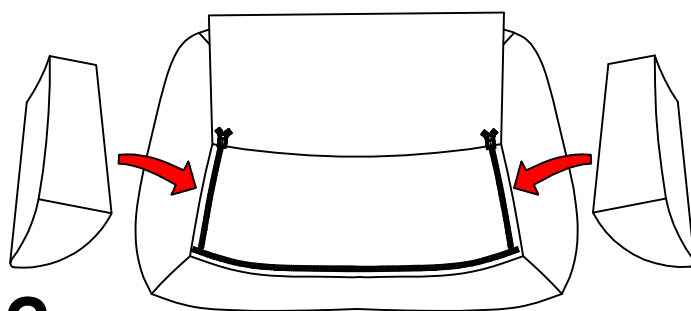


2

3. Fit the backrest inner upholstery to the rear section.

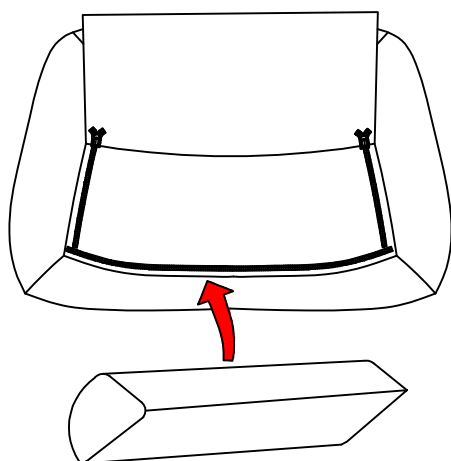


3

4. Position the primary seat foam core on the frame.

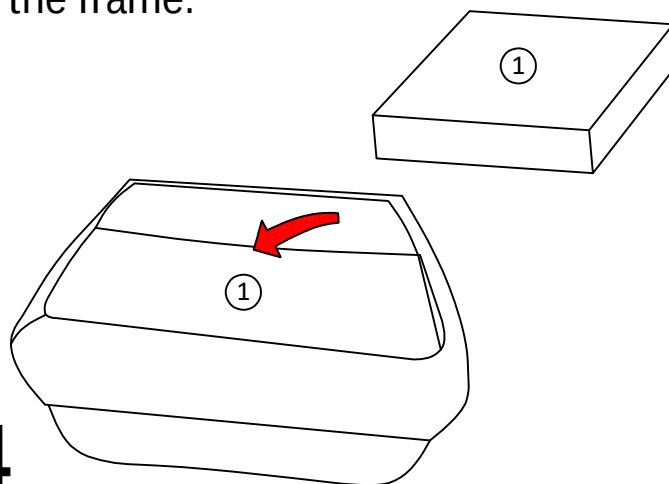

4

5. Zip up the underside panel and carefully return the sofa to its upright position.

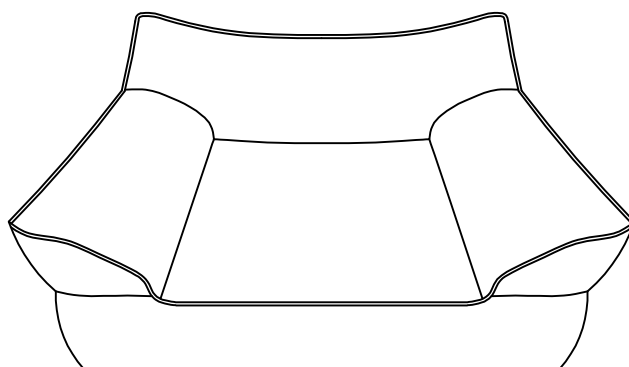

5