


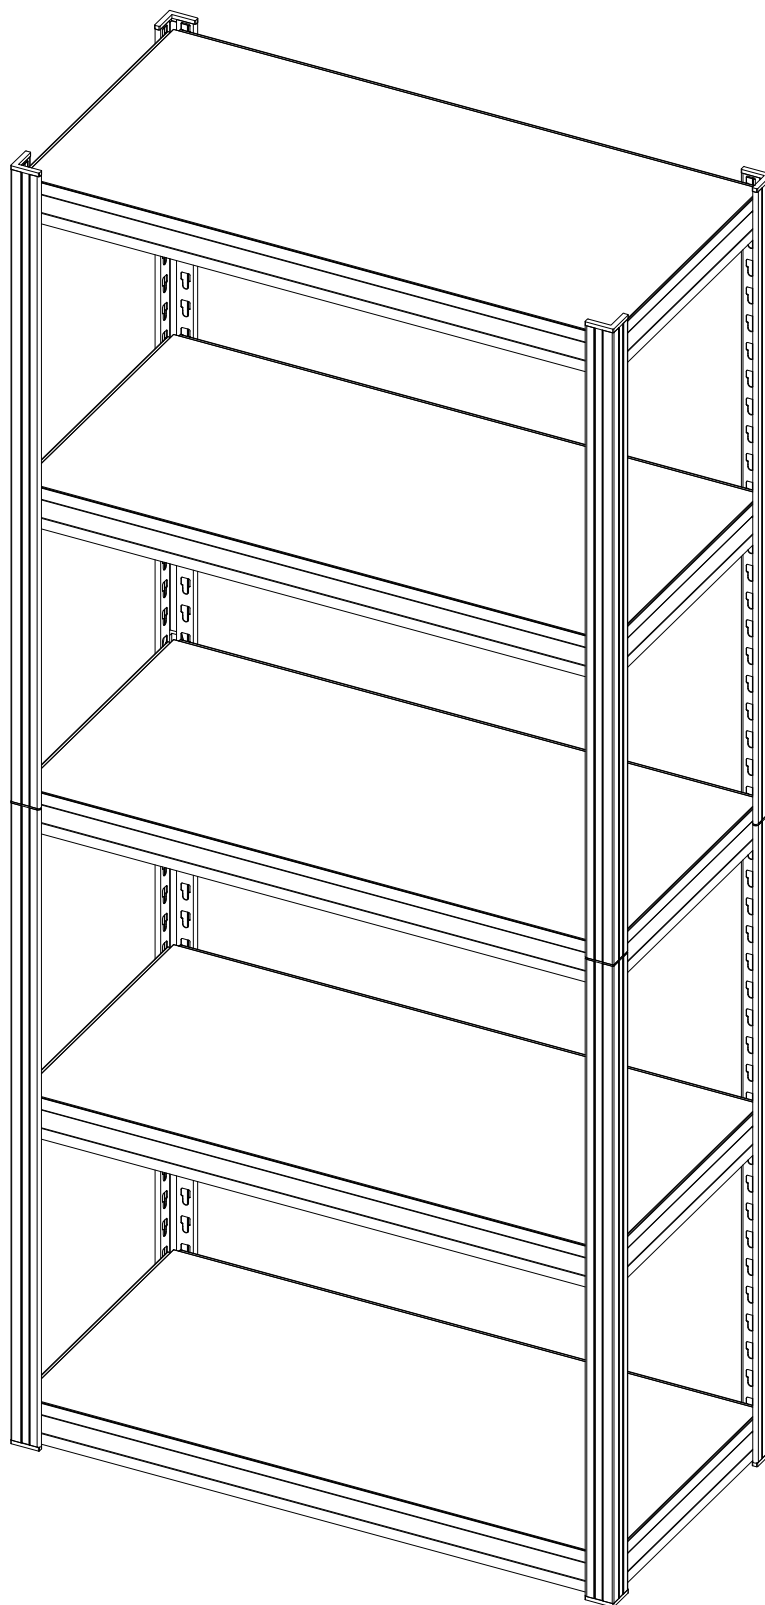
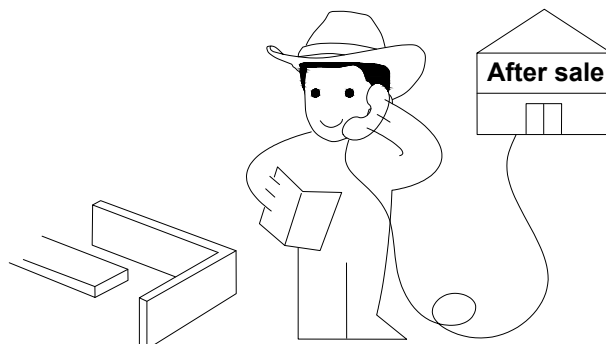
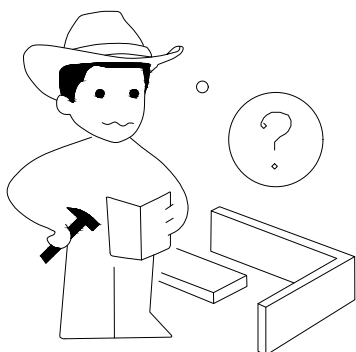
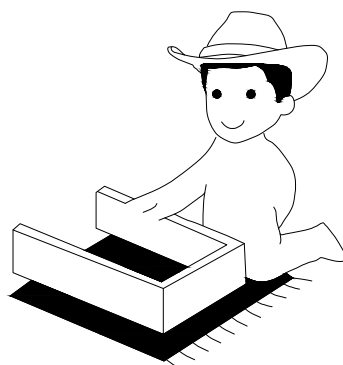
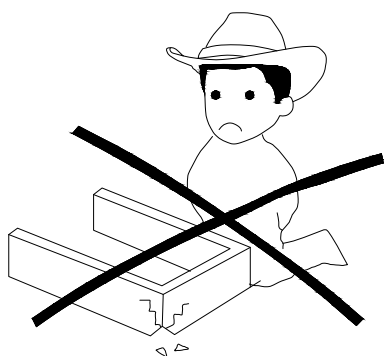
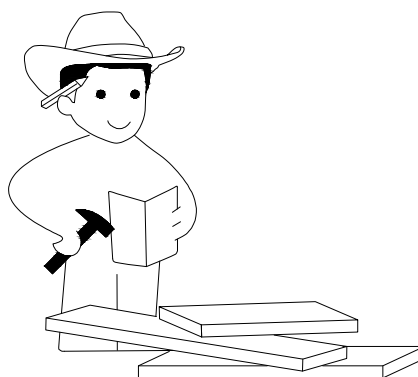
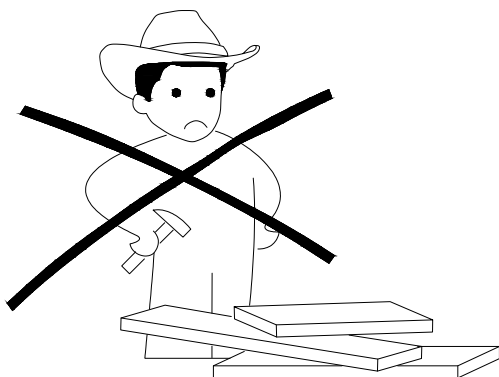


Installation & Assembly




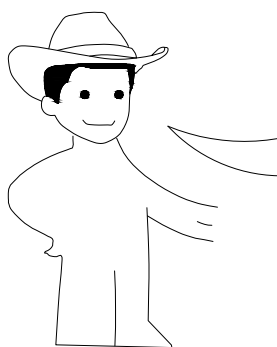


1×10pcs

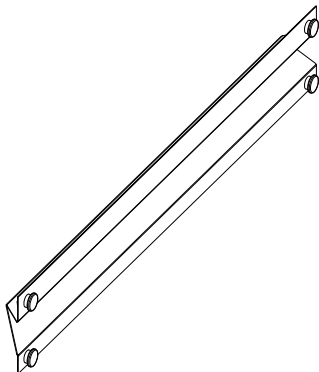


2×10pcs

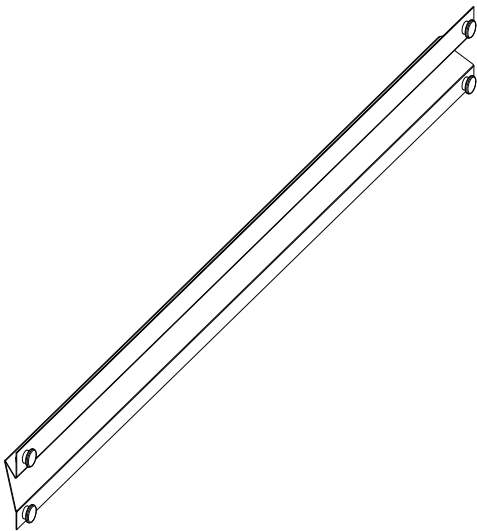


3×5pcs

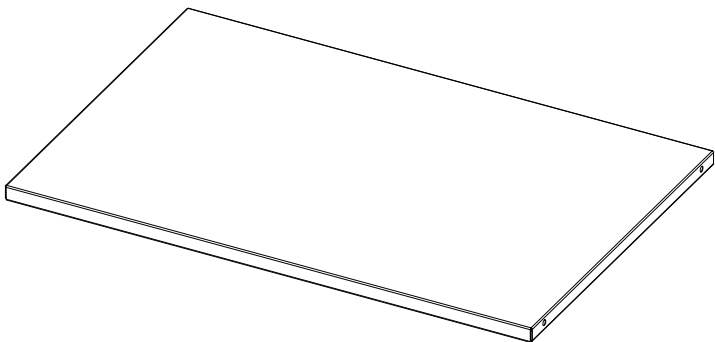


4×8pcs

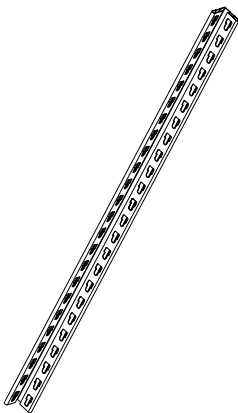


A×8pcs




B×4pcs



C×2pcs




D×2pcs




1

Using a small hammer, tap the flat surface of part #1 (with the flat surface facing up) so that the circular slot in part #1 is completely inside the hoist hole in part #4 (as shown), and note that the hoist hole in part #4 has the large opening facing up and the small opening facing down.





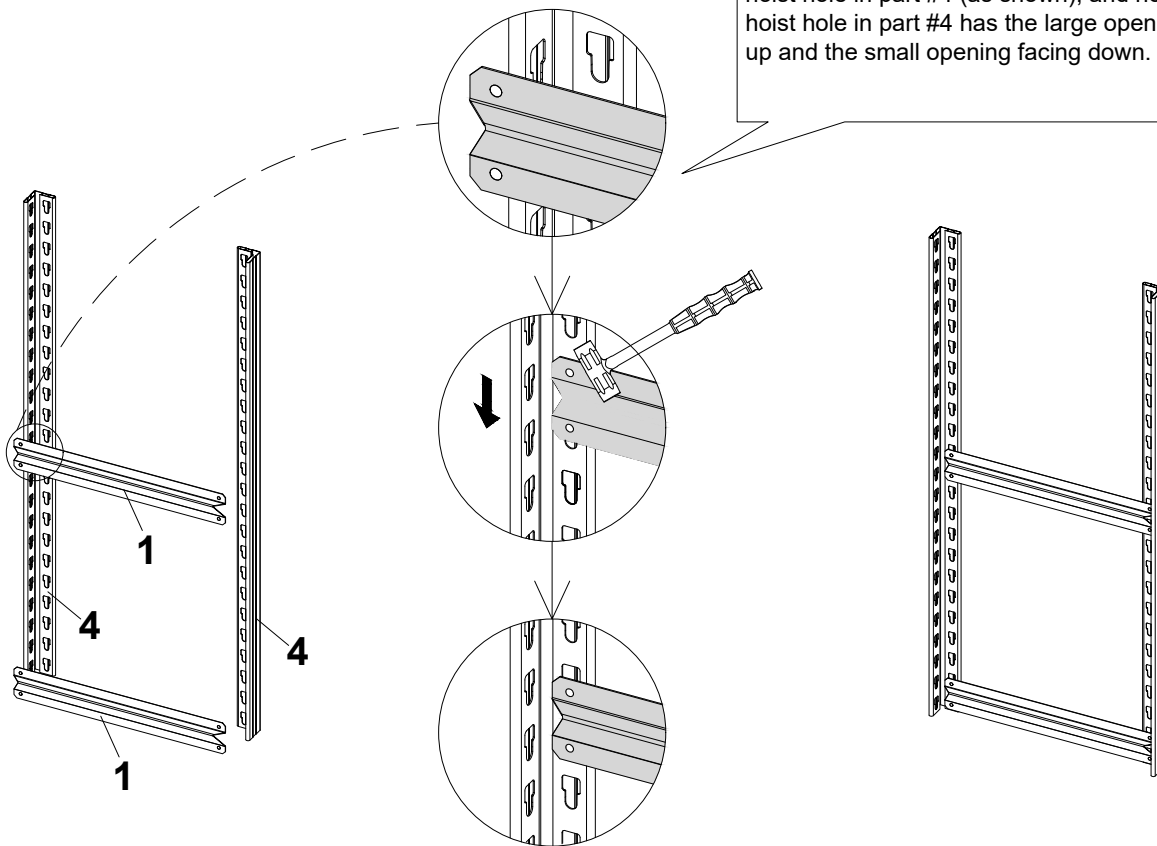


2

Using a small hammer, tap the flat surface of part #1 (with the flat surface facing up) so that the circular slot in part #1 is completely inside the hoist hole in part #4 (as shown), and note that the hoist hole in part #4 has the large opening facing up and the small opening facing down.

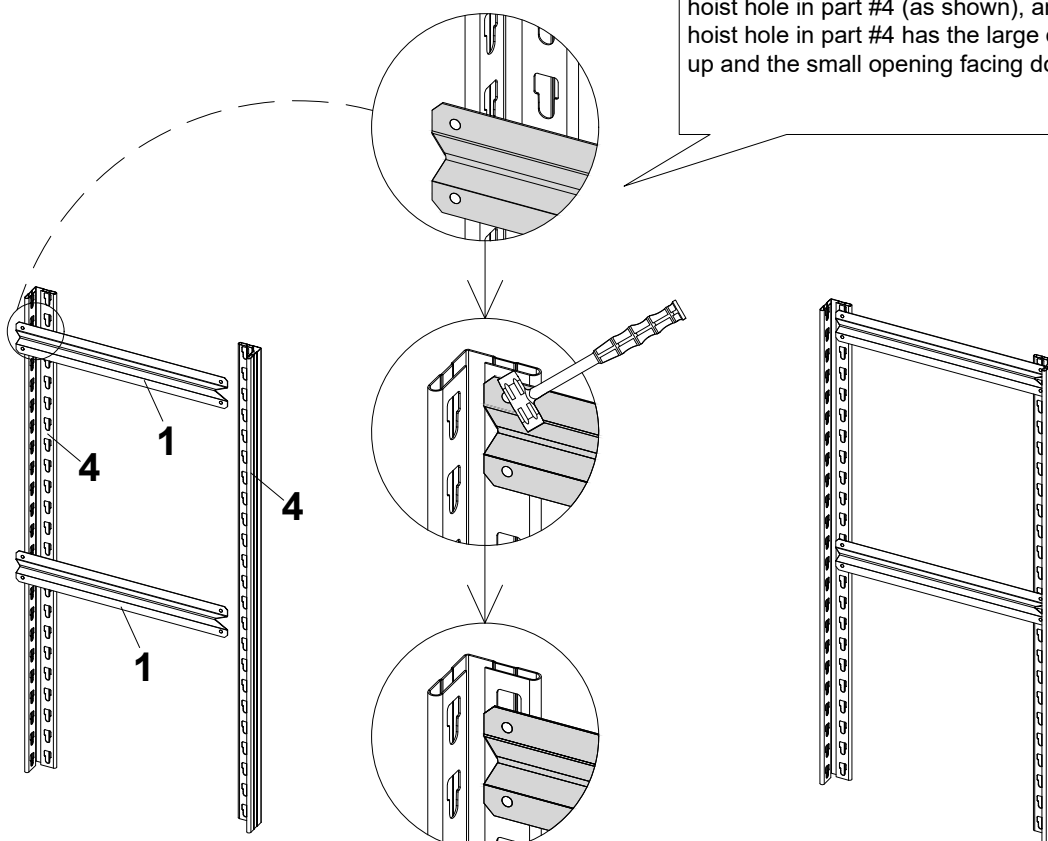


3

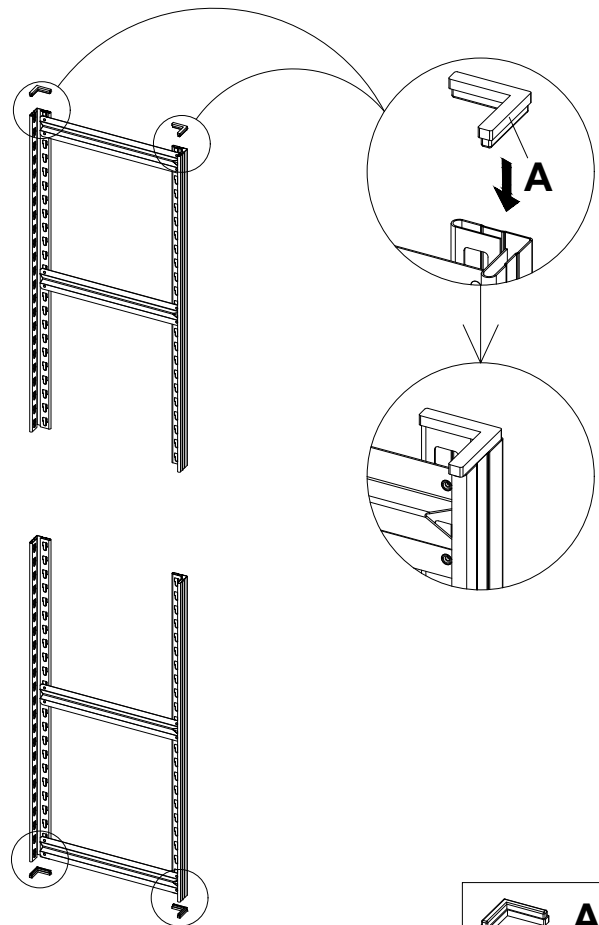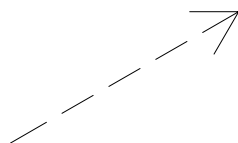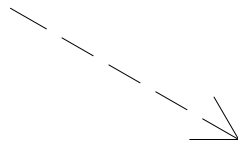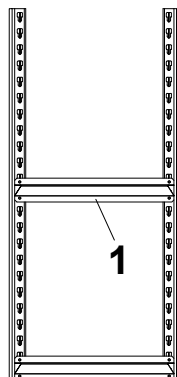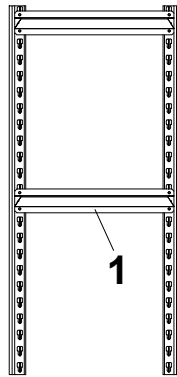


 **A×8**

4

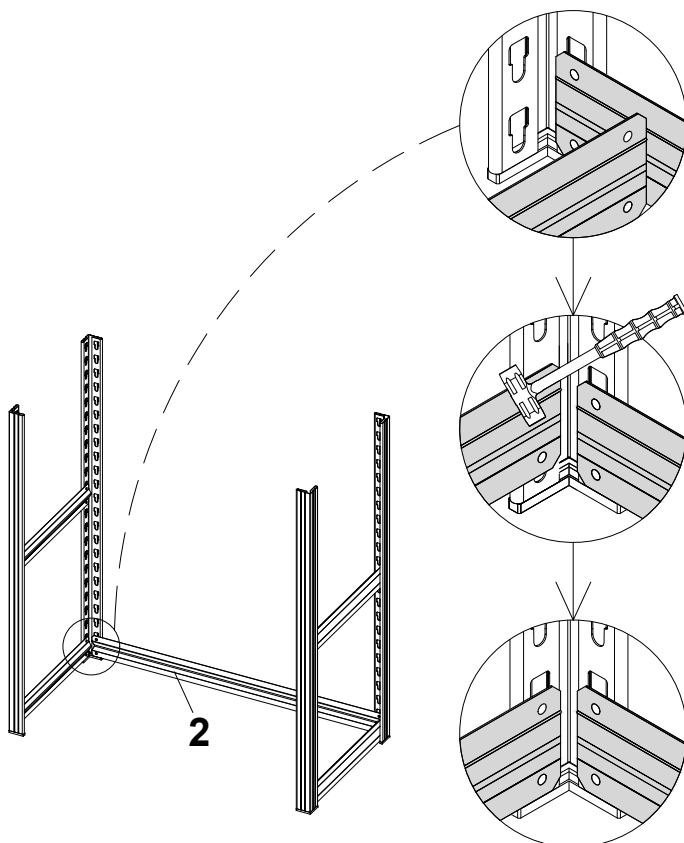


Using a small hammer, tap the flat side of part #2 (flat side up) so that the circular slot in part #2 is completely inside the hoist hole in part #4 (as shown), and note that the hoist hole in part #4 has the large opening facing up and the small opening facing down.

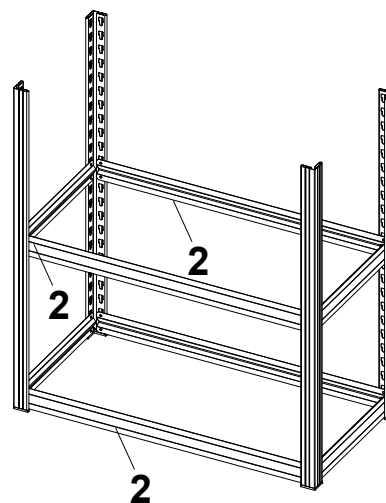


5

When installing, please use a hammer to hit the flat surface of the connector.


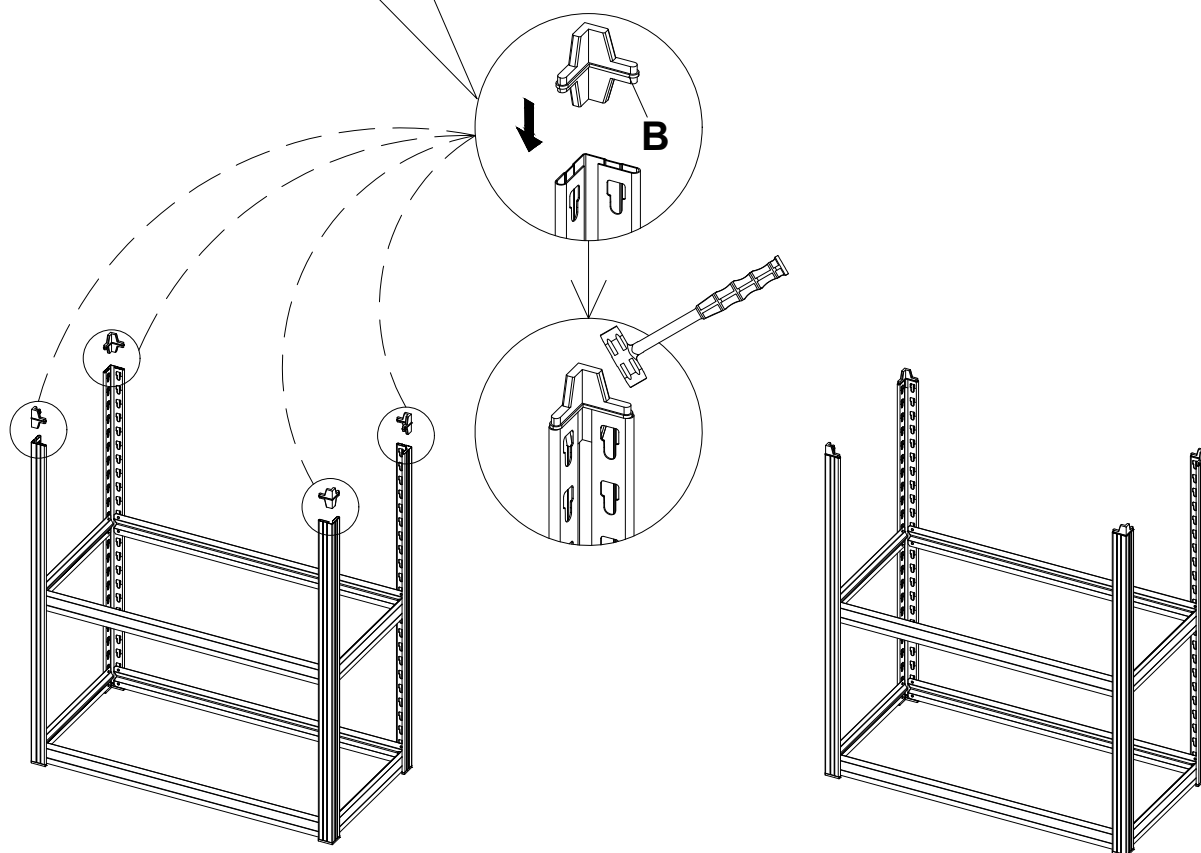
**B×4**

6


Snap the upper frame into the connector.

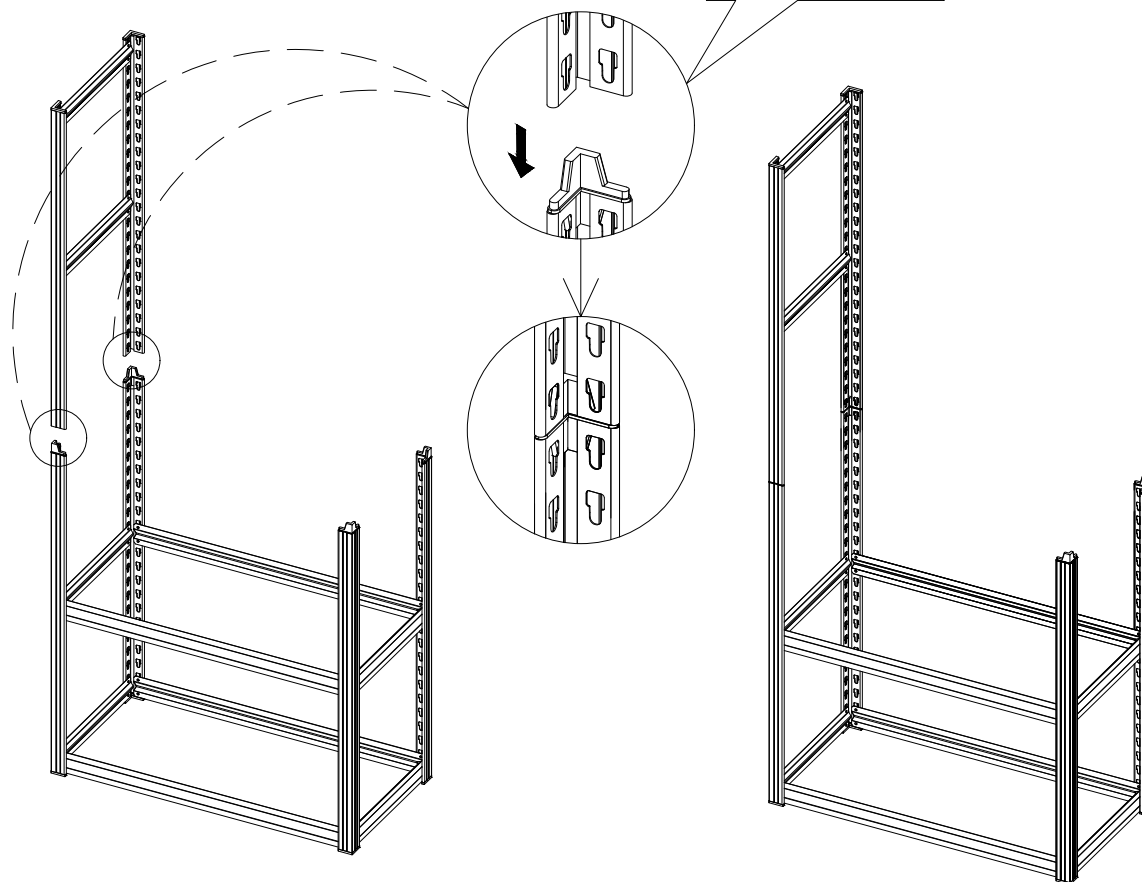



7

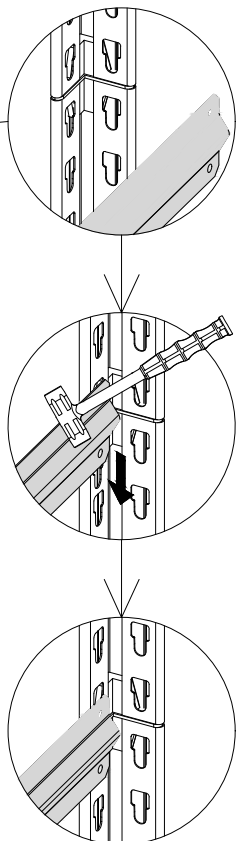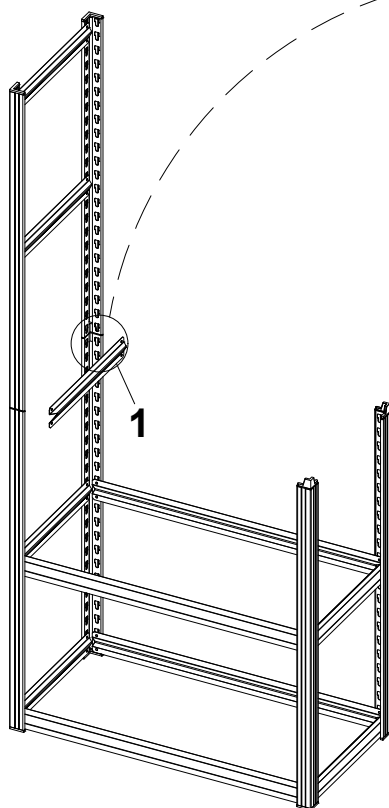


Snap part #1 into the hoist holes on the lower part of part #4 and the upper part of part #4 respectively. And tap them flat with a small hammer

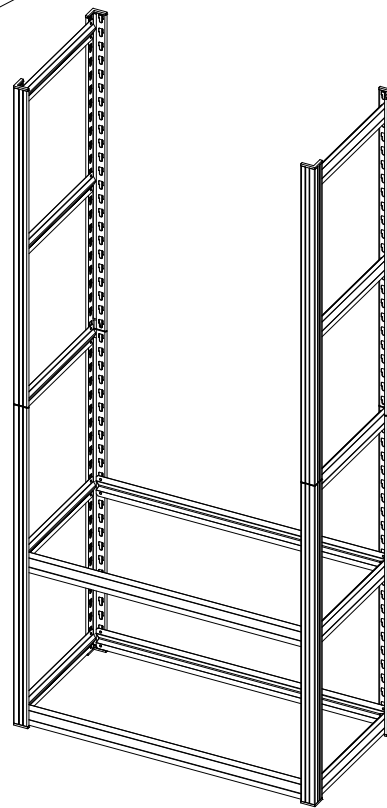



8

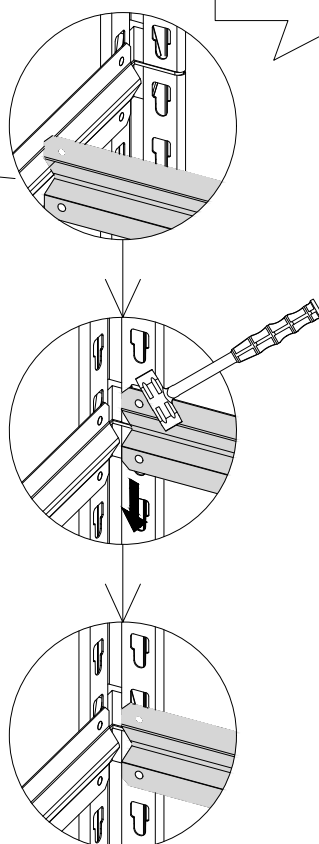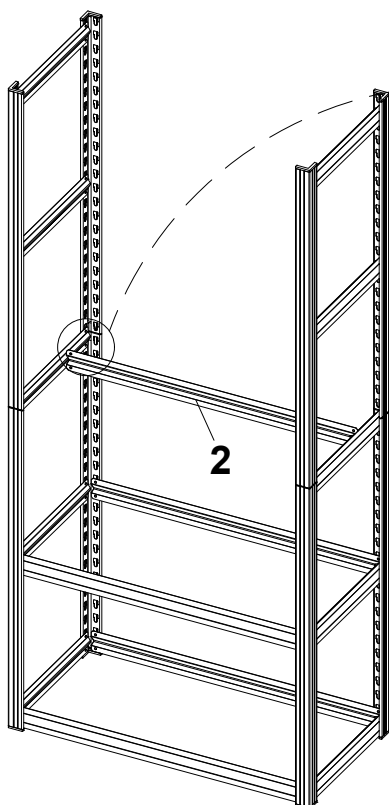


Snap part #2 into the hoist holes on the lower part of part #4 and the upper part of part #4 respectively. And tap them flat with a small hammer

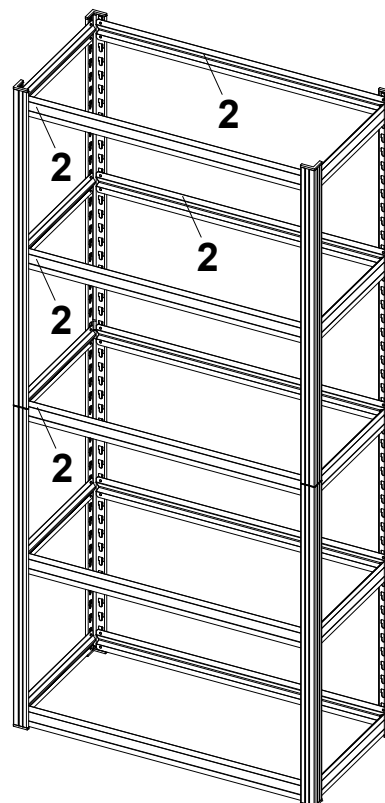

9

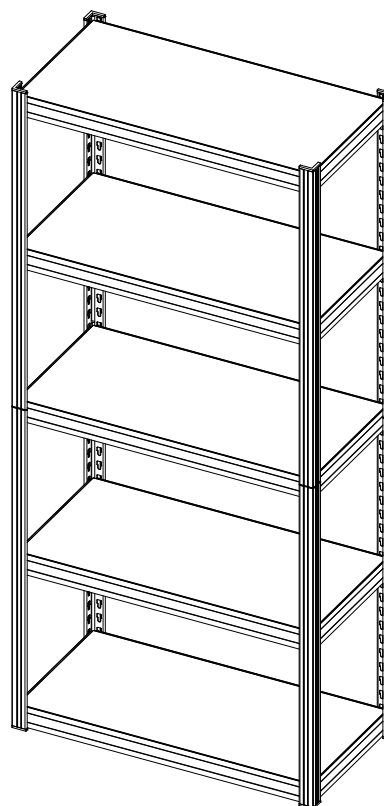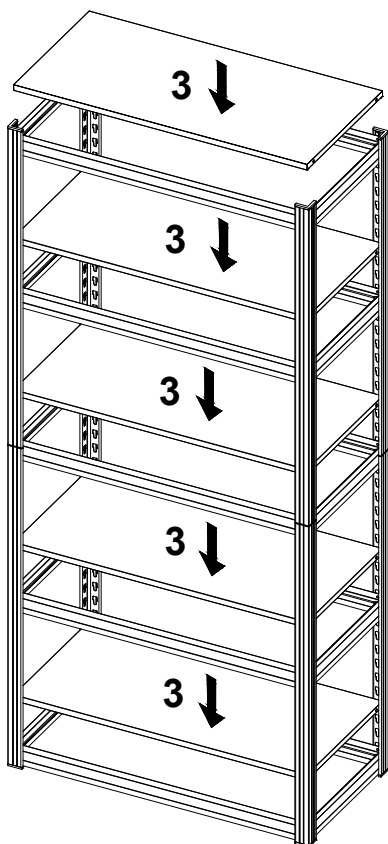

10

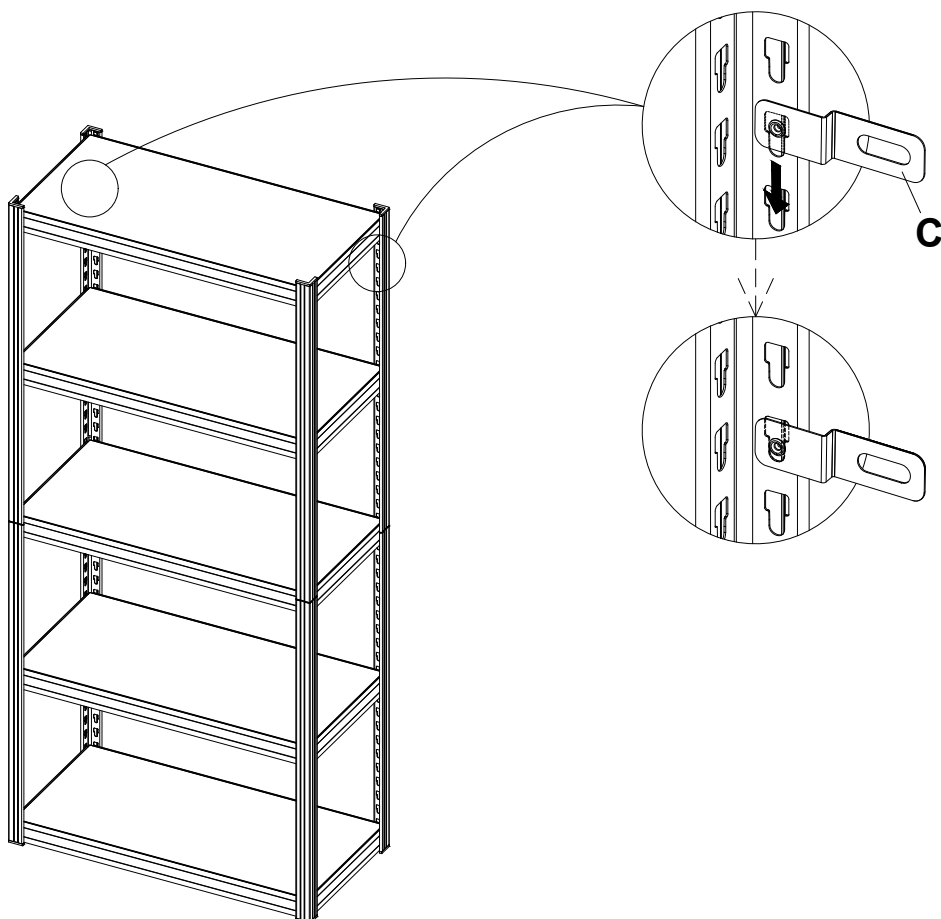

Cx2

11

This step is to connect the cabinet to the wall,
if you do not need to ignore it

