

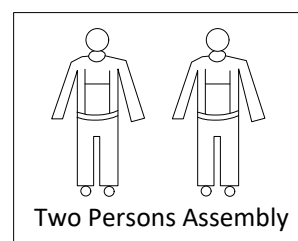
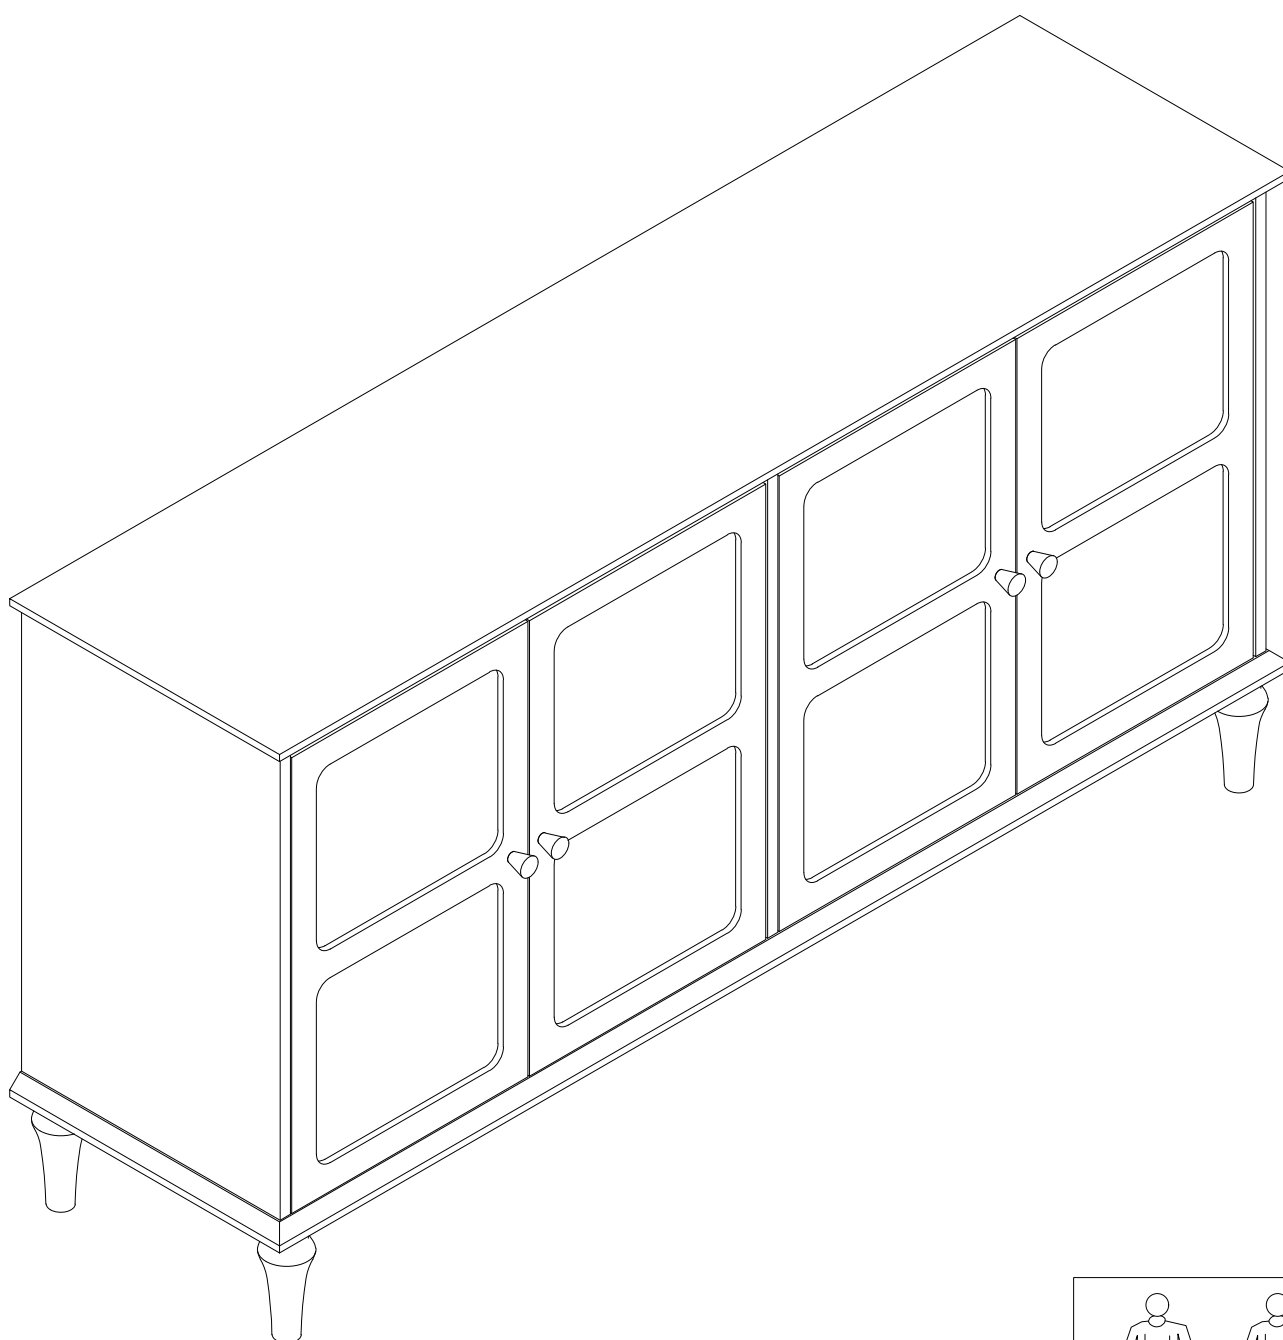
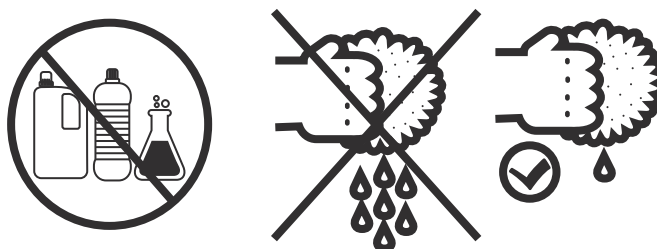
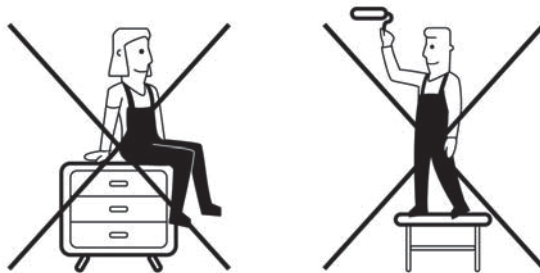



ASSEMBLY INSTRUCTIONS

Item NO.: YJJ250105

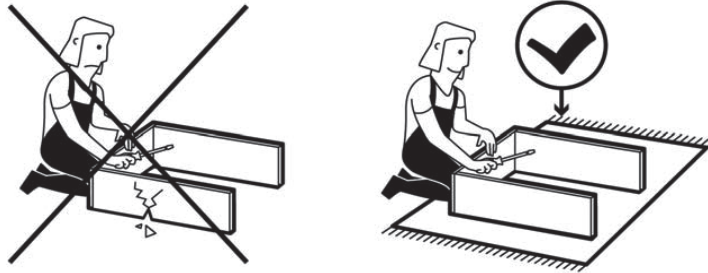

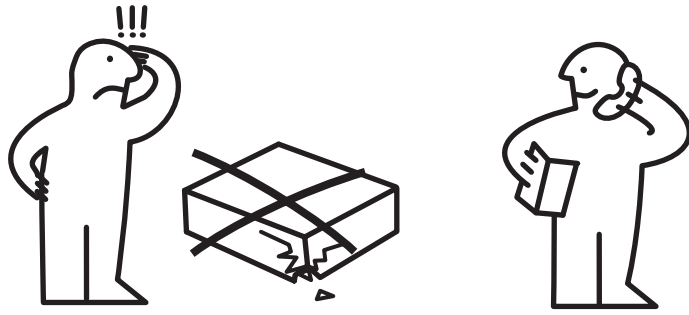


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

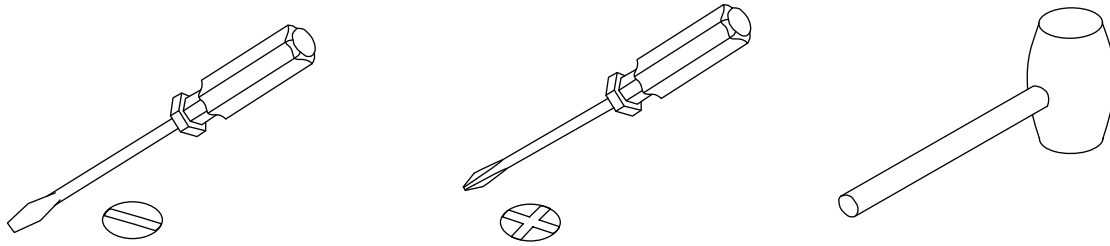

- * Before discarding packing materials, please check all parts and hardware are presented.
- * Please follow the instructions closely.
- * After few days of initial assembly, the product may have acclimated to new environment, please tighten all hardware again.




Dowel Installation

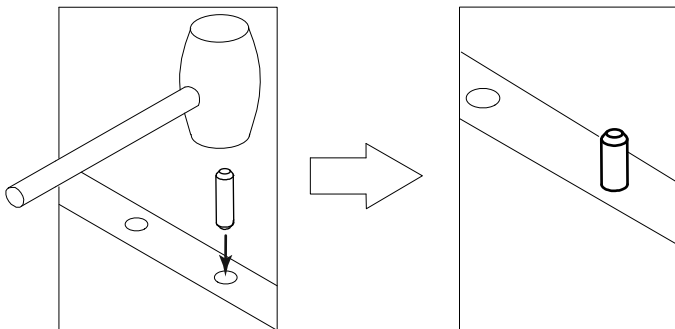

Gently tap dowel into hole with rubber mallet.



CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten

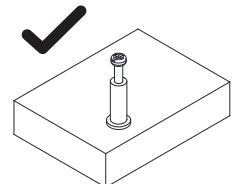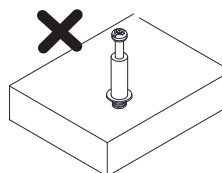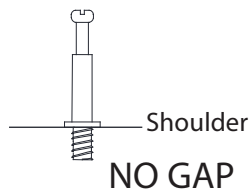


WHEN FITTING CAMS






ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM-PILLAR
TURN CLOCKWISE UNTIL SECURE

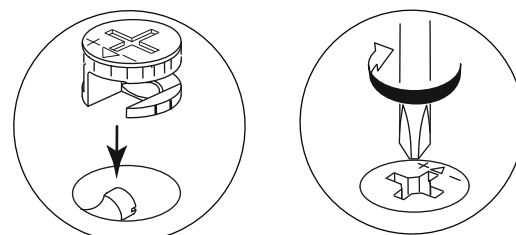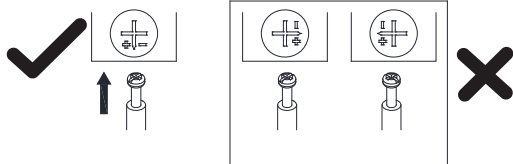

Laying out all the parts and hardware and identifying each part as shown below. It may help you when you assemble the item.



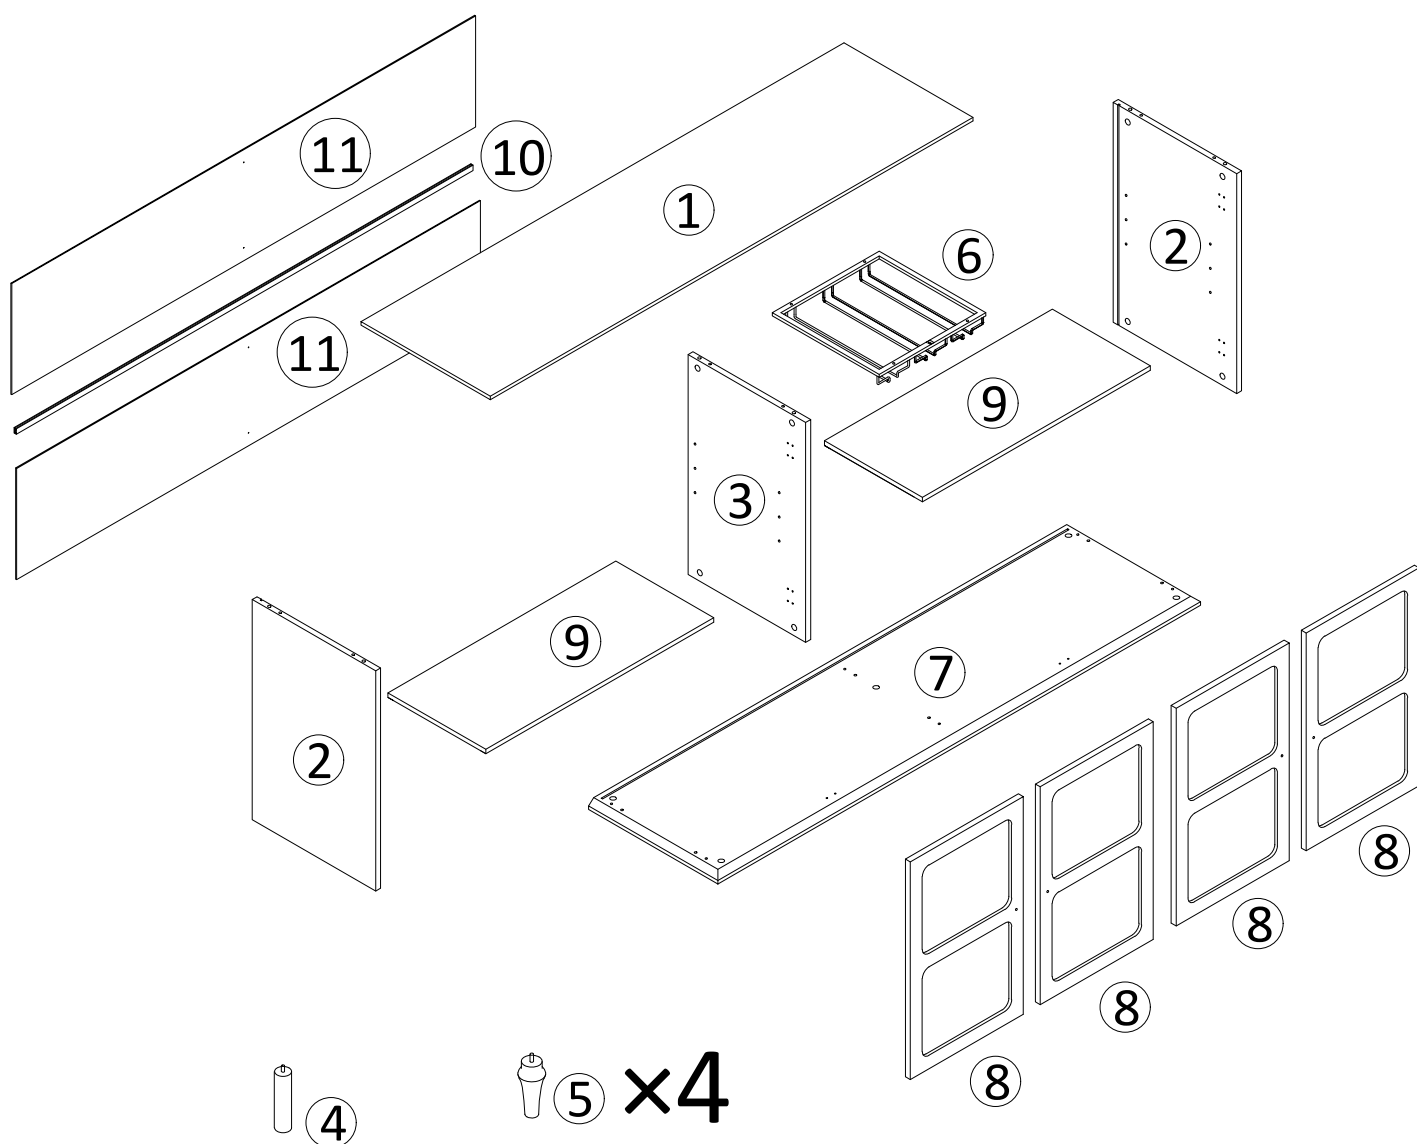


① ×1	② ×2	③ ×1	④ ×1	⑤ ×4	⑥ ×1
⑦ ×1	⑧ ×4	⑨ ×2	⑩ ×1	⑪ ×2	

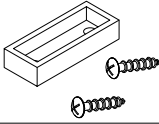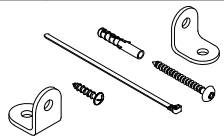A	×12+2(Spare)	B	×12+2(Spare)	C	×12+2(Spare)	D	×48+2(Spare)	E	×8
									
Ø6×27mm		Ø15×9.5mm		Ø6×30mm		FA4×12mm		ø26mm-L	
F	×4+1(Spare)	G	×3	H	×8	I	×4	J	×4+1(Spare)
									
FA4×20mm		FA3×12mm		FA3×16mm		Ø20×23mm		M4×20mm	
K	×5	M	×2	N	×8+1(Spare)	O	×2	P	×4
									
M6×15L-φ20×6T		φ8×2mm		M5×14mm		4×40mm/4×12mm		φ21 Sticker	
Q	×4+1(Spare)								
									
FA3×12mm									



1

Turn the screws vertically from slow to fast.

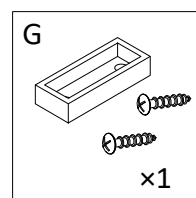
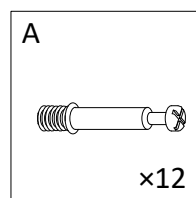
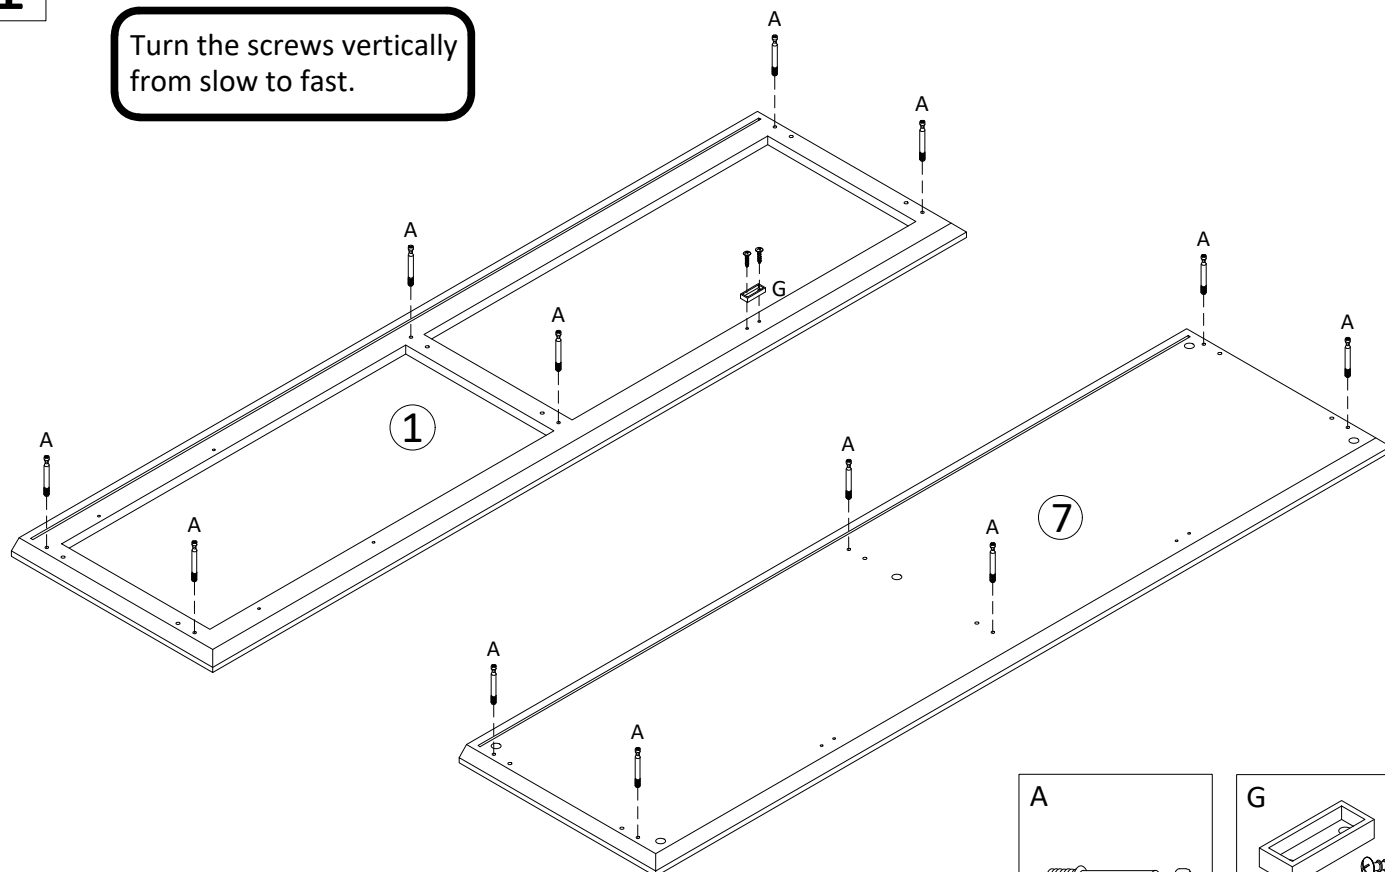


2



Turn the screws vertically from slow to fast.

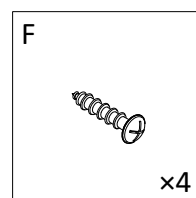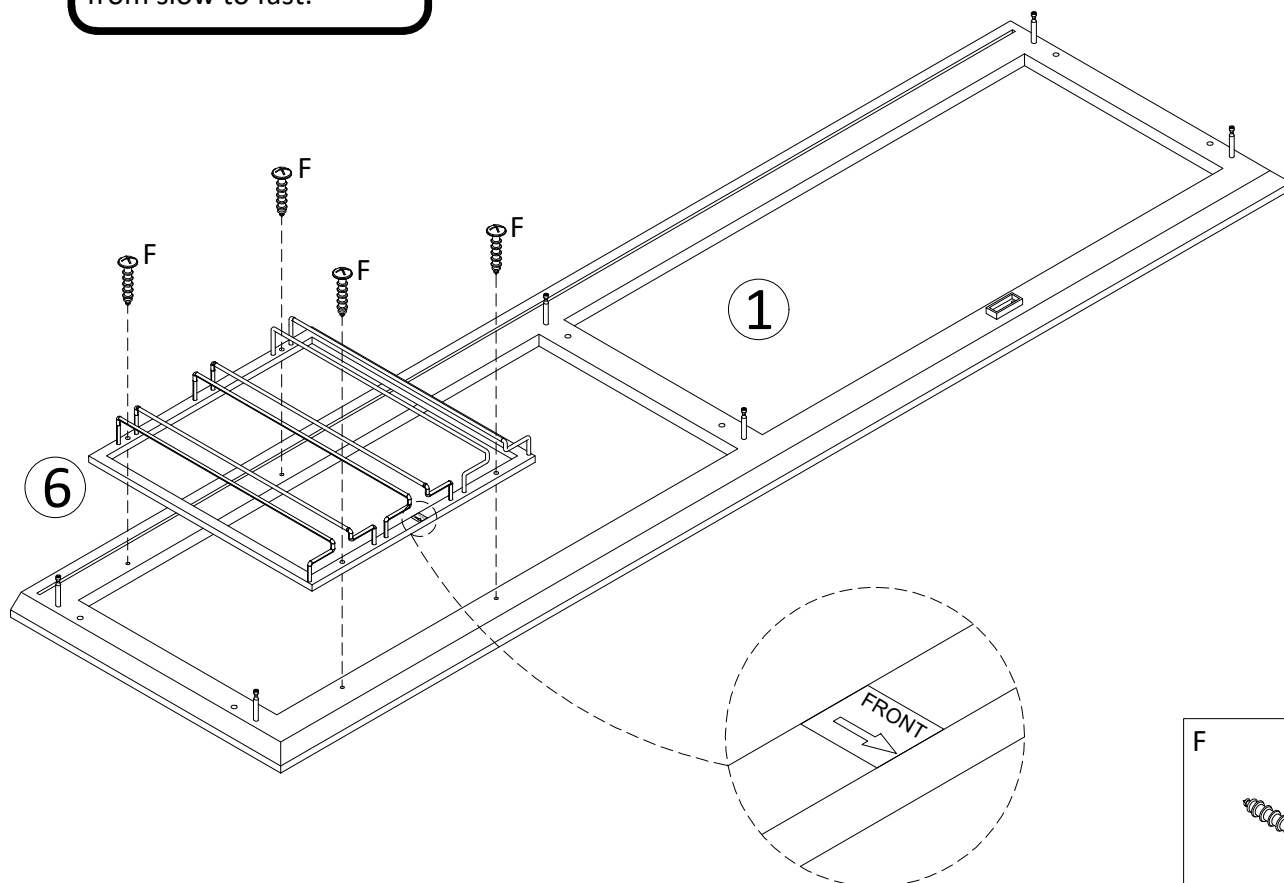

3

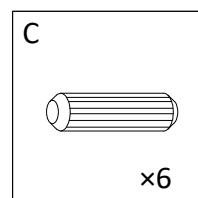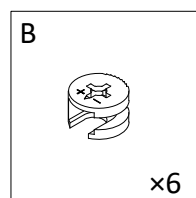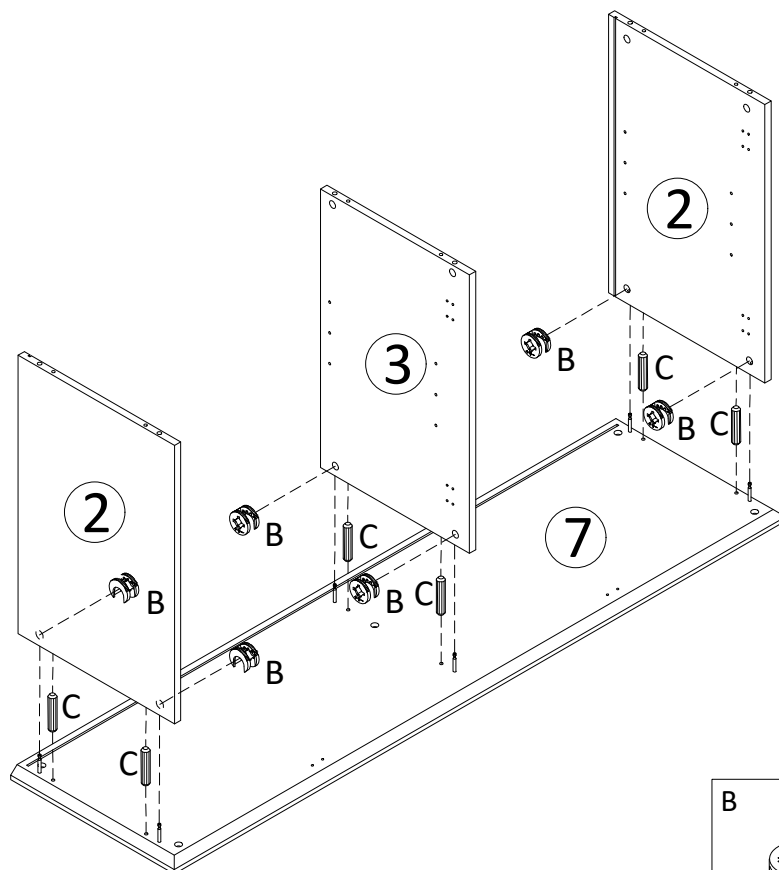


4

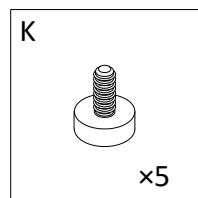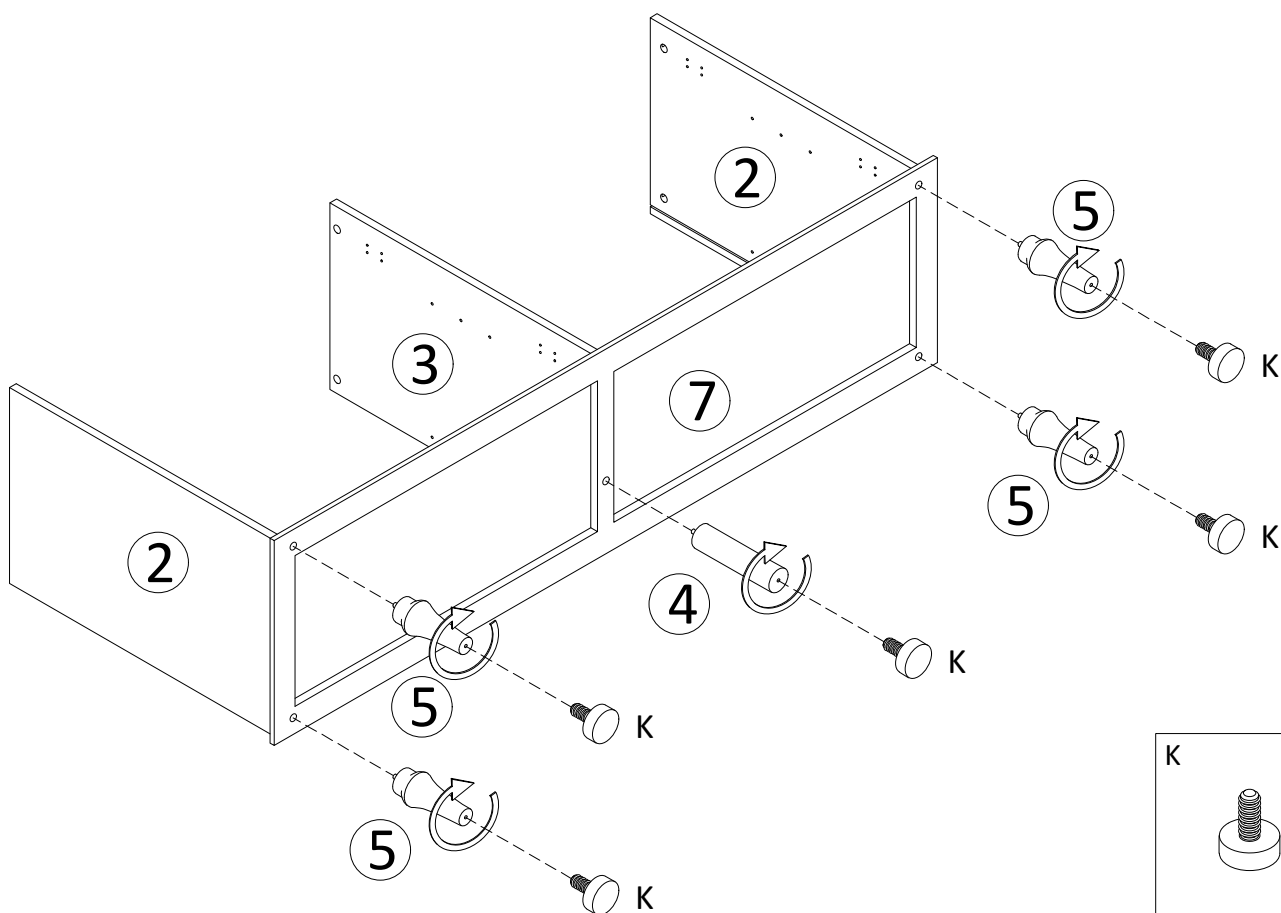


5




STEP (1)

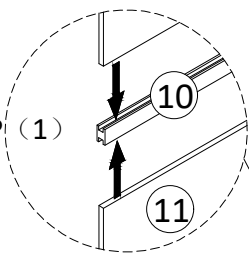




STEP (2)

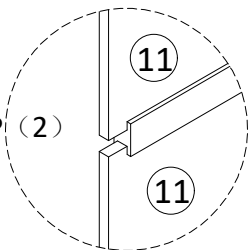

Turn the screws vertically
from slow to fast.

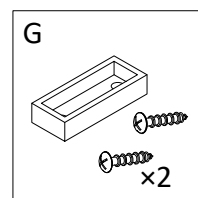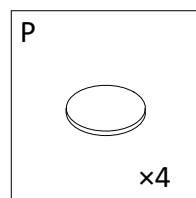
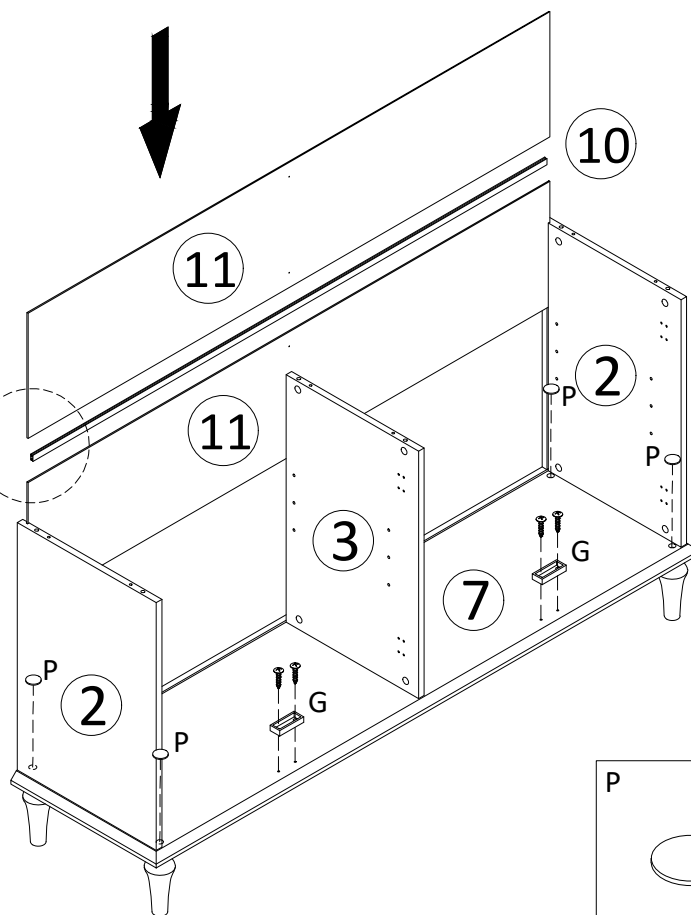


6

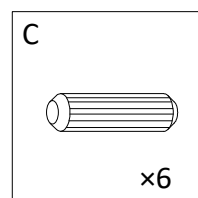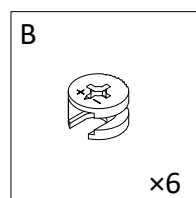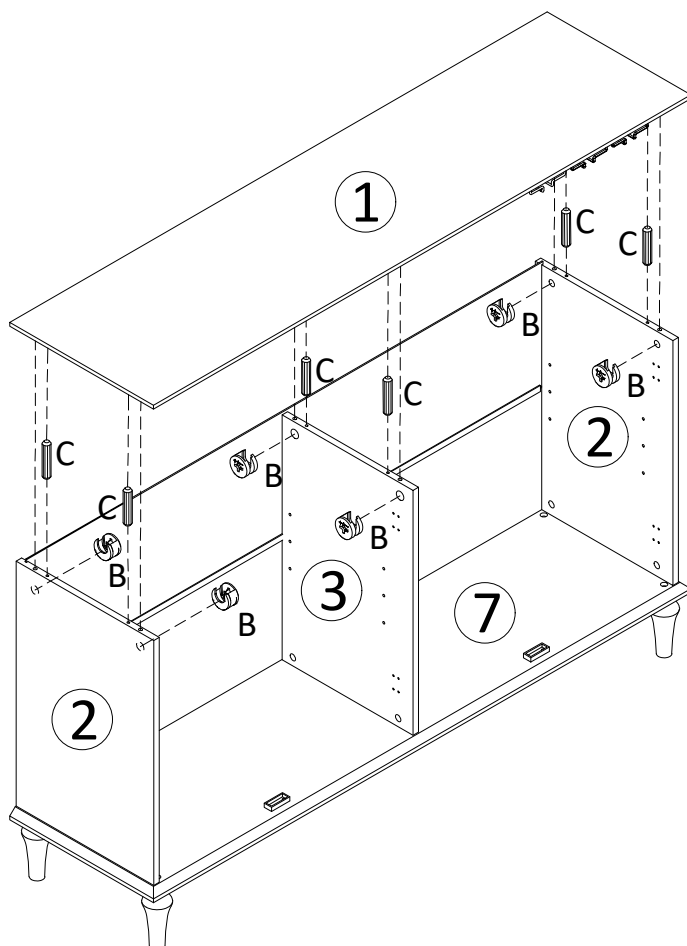




7

Turn the screws vertically
from slow to fast.

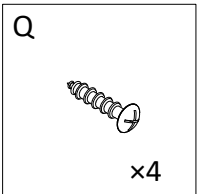
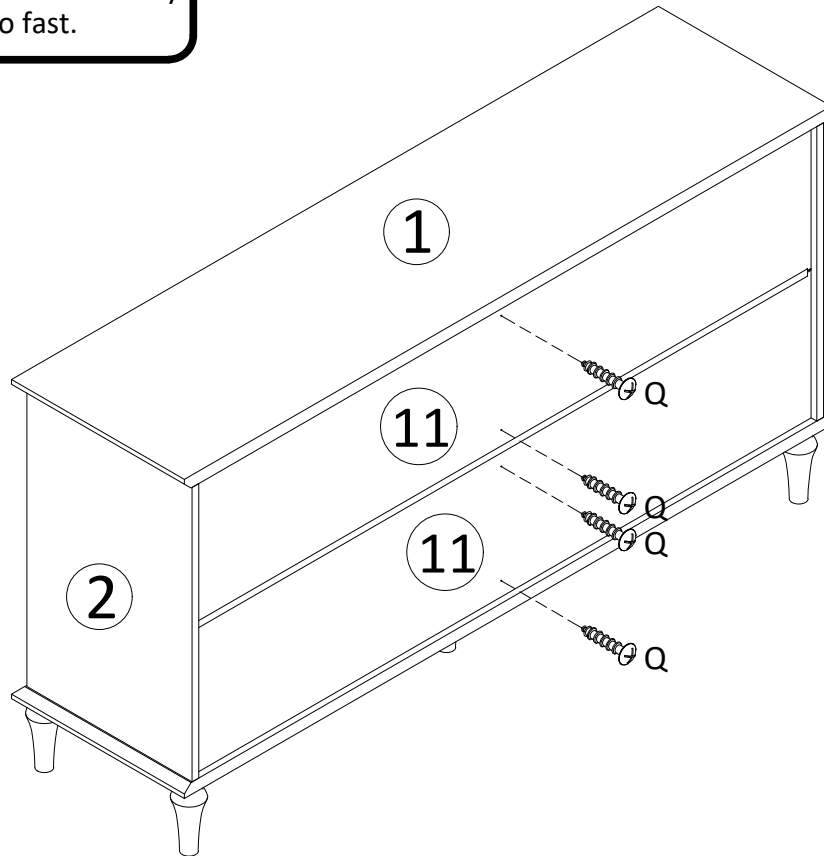


8

Turn the screws vertically
from slow to fast.

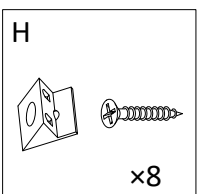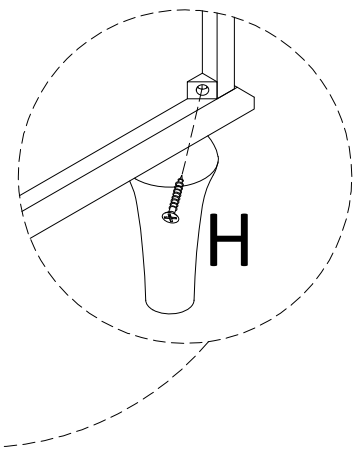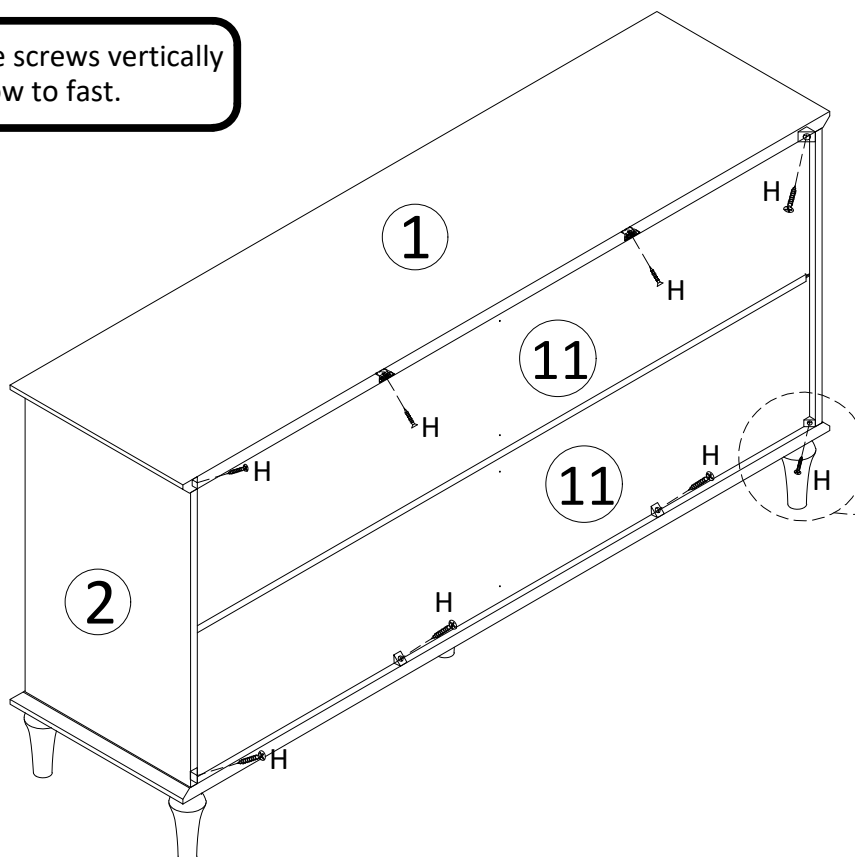


9



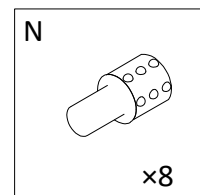
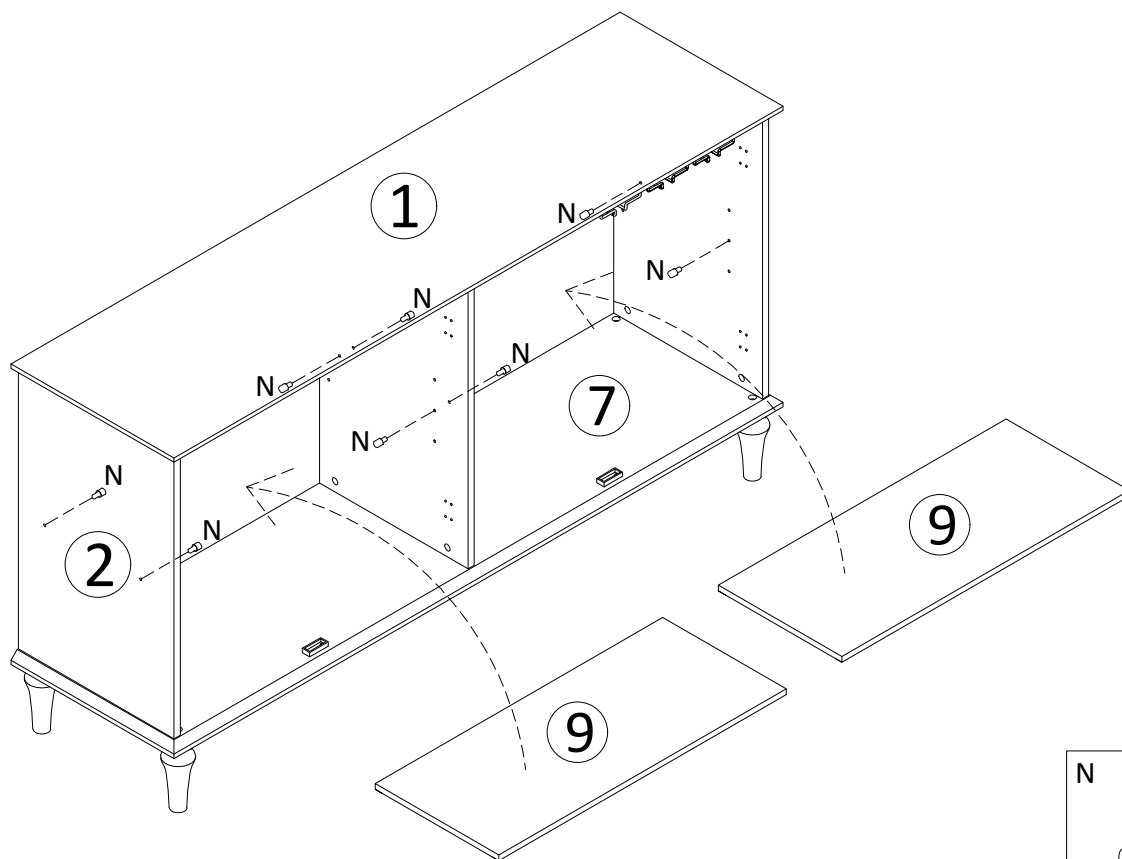


10


Turn the screws vertically from slow to fast.

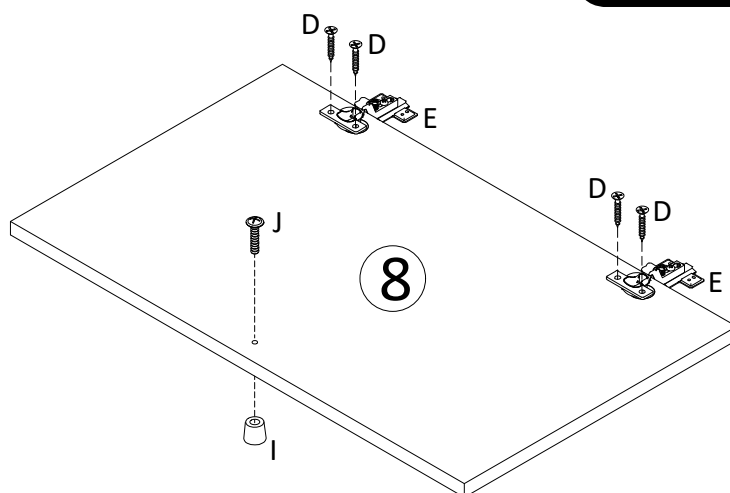

x4

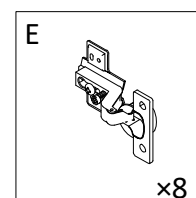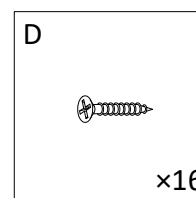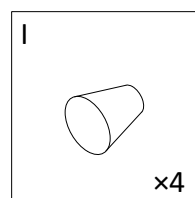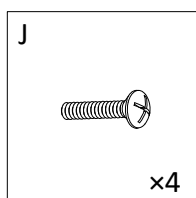


STEP (1)

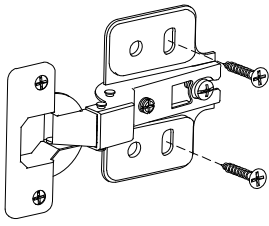


Tips: Turning the screw to approx 50% tightness, don't be fully tight.

STEP (2)

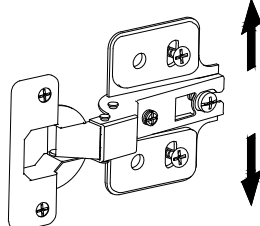


Tips: Moving the hinges up or down appropriately to adjust the gap between the door and cabinet top and bottom.

STEP (3)

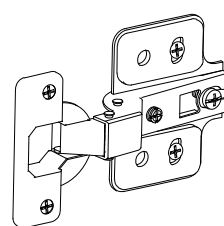


Tips: Tightening the screws completely.




STEP (4)

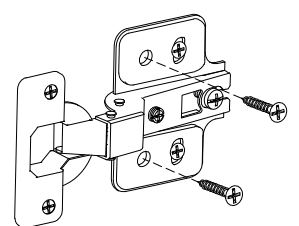




Tips: Tightening the other screws completely.

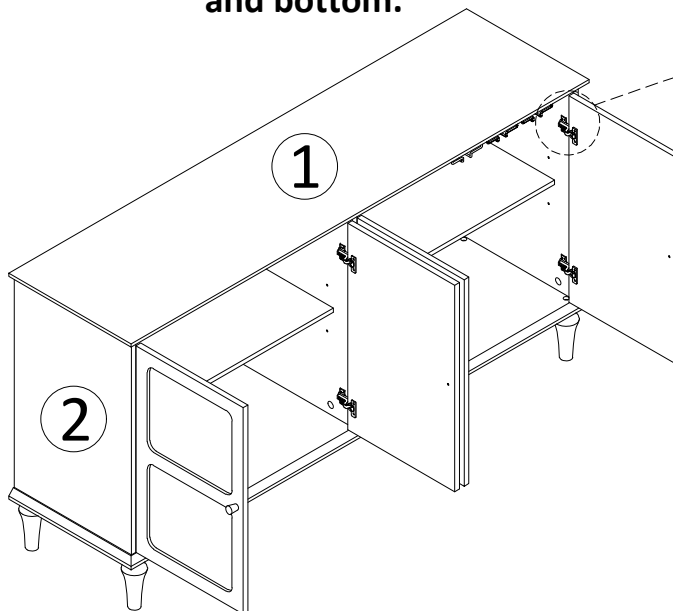




Turn the screws vertically from slow to fast.

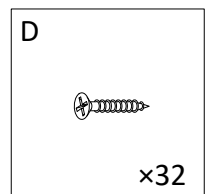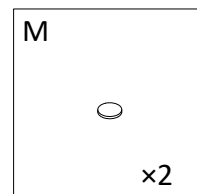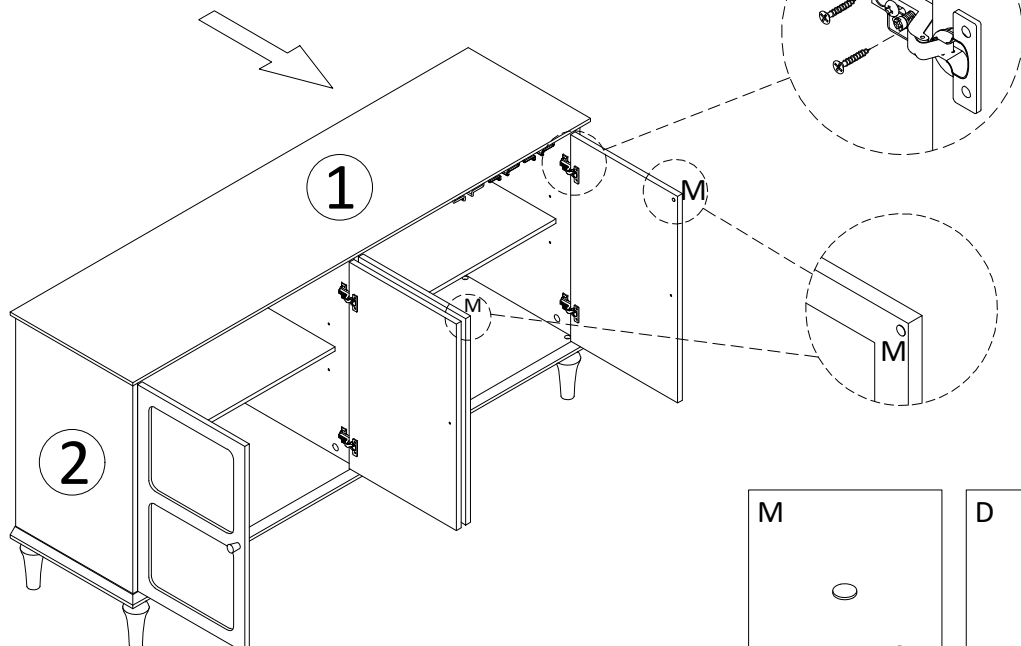




12 Tips: If the gap between the doors with the partition panel is too far or close, please turning the screw as shown below.

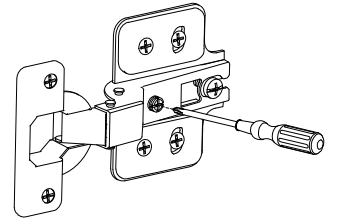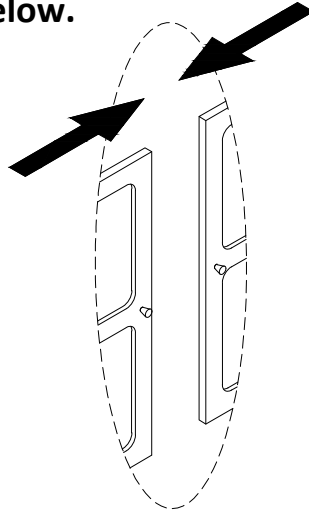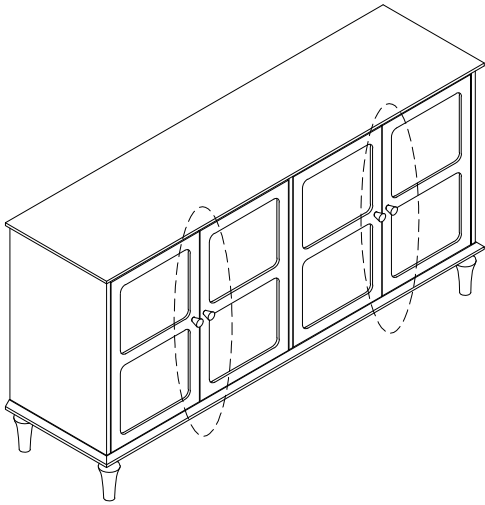




Tips: Adjusting the screw as shown in the following picture can make the door move forward or backward.

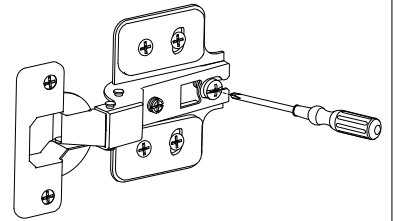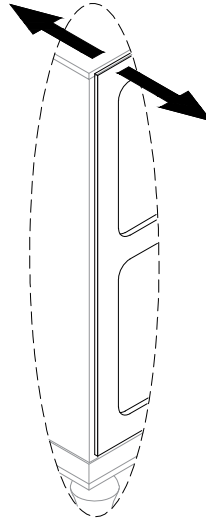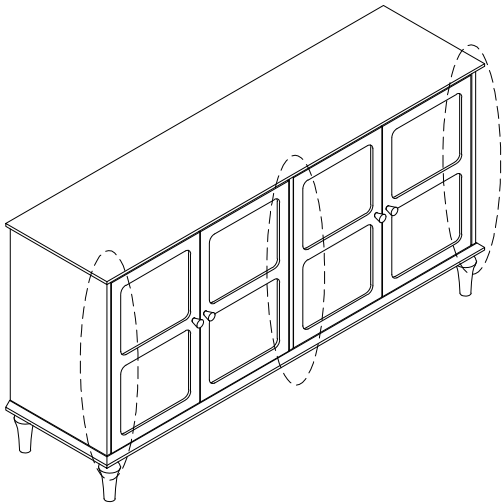

Tips: Adjusting the levelers appropriately underneath the bottom of the foot can make the gaps between the door and frames of cabinet even.

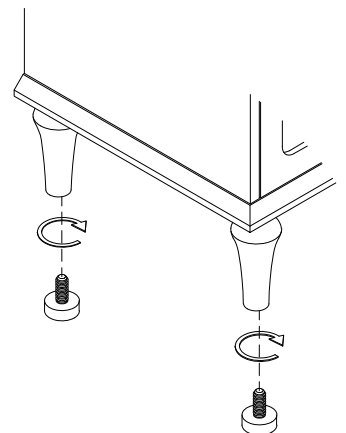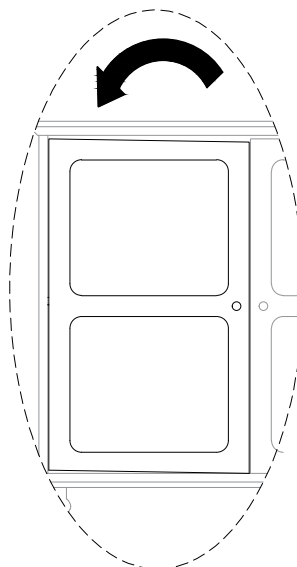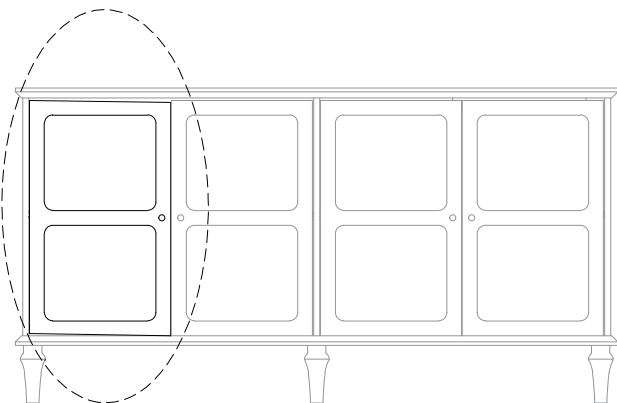

13

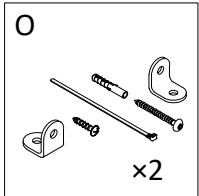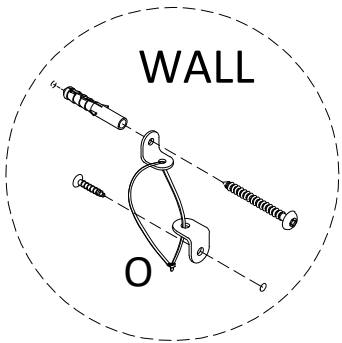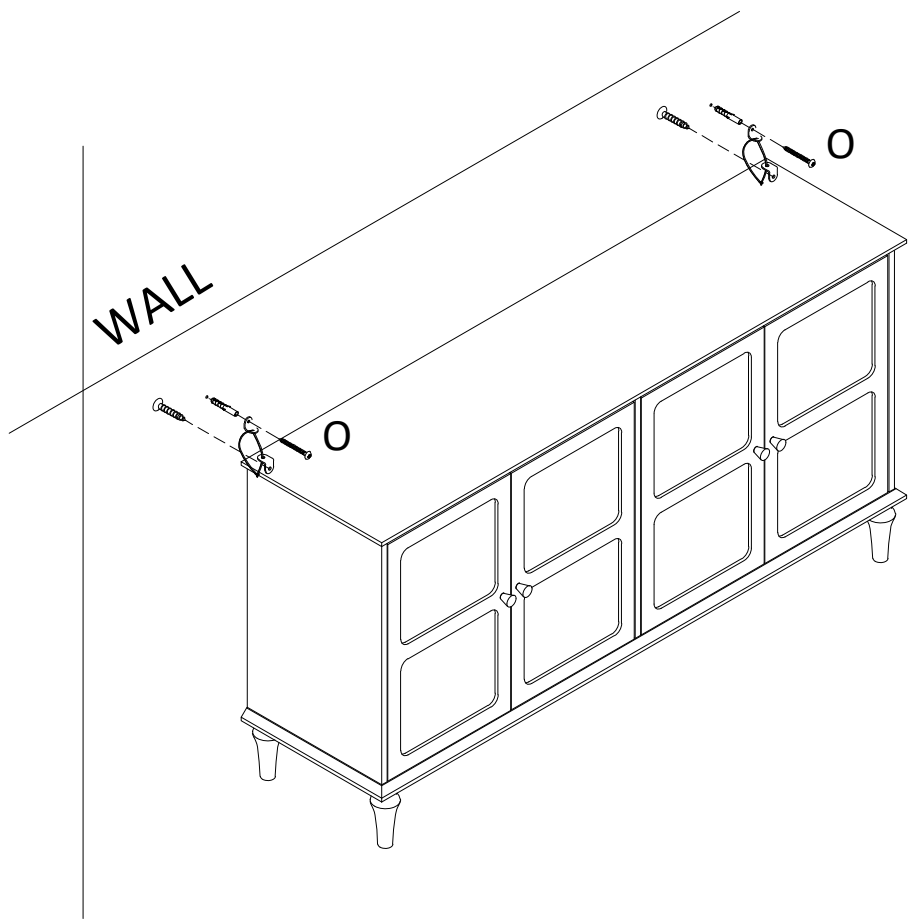

14

