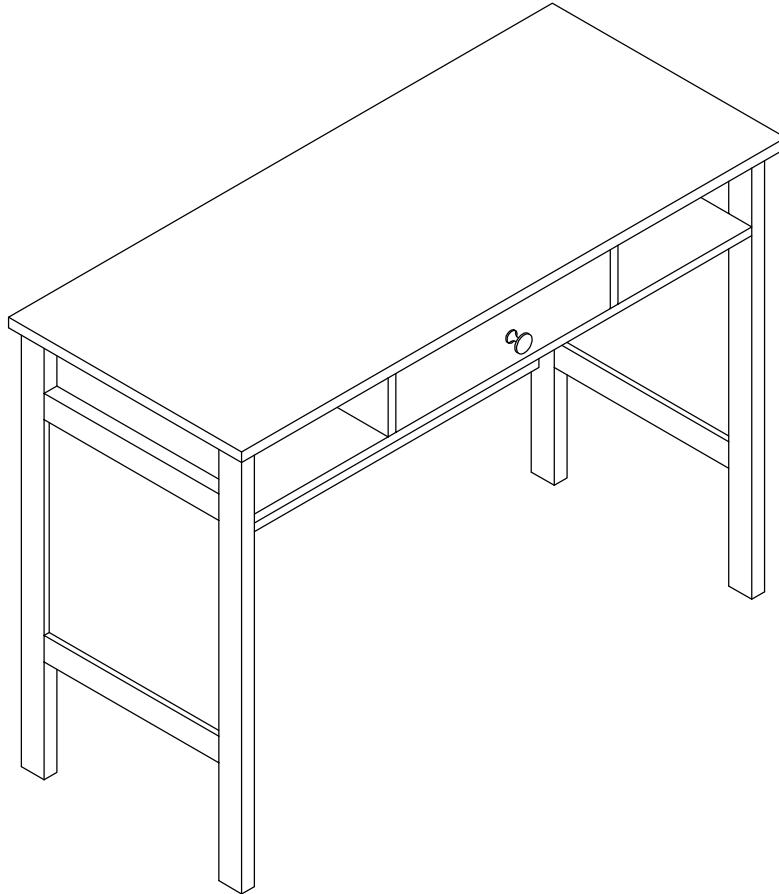


ASSEMBLY INSTRUCTIONS

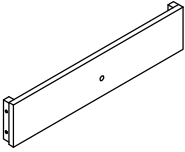
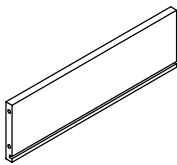
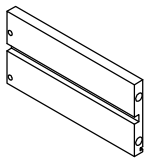
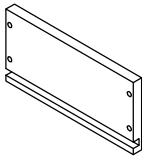
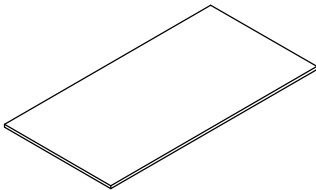
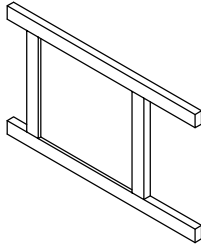
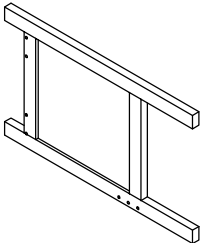
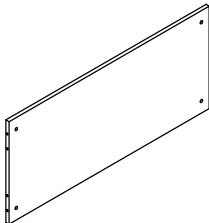
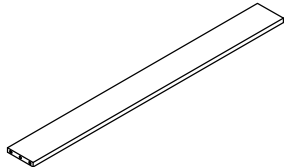
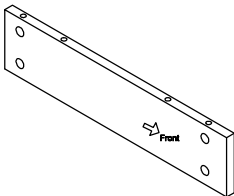
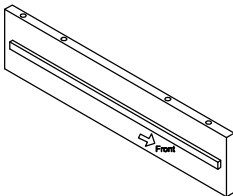
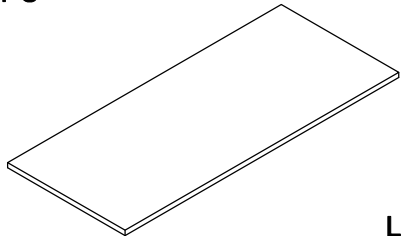
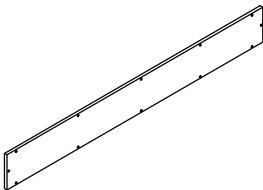
Desk









NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

PARTS LIST

DRAWER FRONT PANEL 1 PC 	DRAWER BACK PANEL 1 PC 	DRAWER LEFT SIDE PANEL 1 PC 
DRAWER RIGHT SIDE PANEL 1 PC 	DRAWER BOTTOM PANEL 1 PC 	LEFT SIDE FRAME 1 PC 
RIGHT SIDE FRAME 1 PC 	BOTTOM PANEL 1 PC 	ACROSS BAR 1PC 
MIDDLE PANEL 1 PC 	MIDDLE PANEL 1 PC 	TOP PANEL 1 PC 
BACK PANEL 1 PC 		

HARDWARE LIST

WOOD DOWEL 14 PCS 	CAM-BOLT CAM-LOCK 20 SETS 	FLAT HEAD SCREW STOPPER 1 SET 	ROUND HEAD SCREW 12 PCS 	FLAT HEAD SCREW 8 PCS 	KNOB BOLT 1 SET 
--	--	--	---	--	--

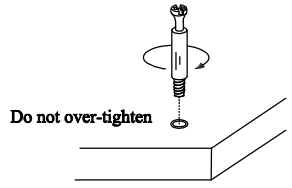
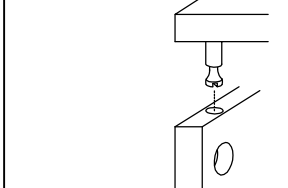
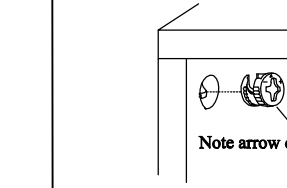
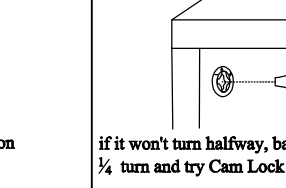
Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

To use Dowels:

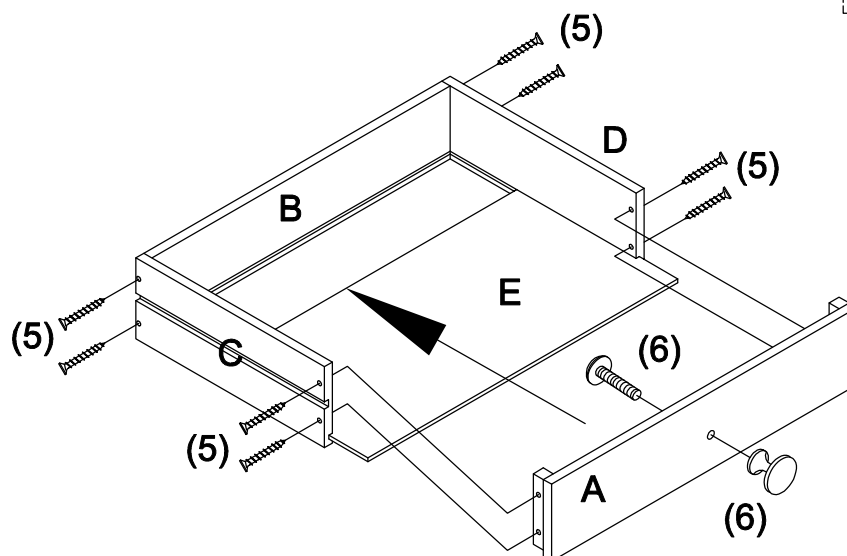
1. Add glue (about $\frac{1}{4}$ full) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.



To use Cam Locks:

1. Insert Cam Pin until snug 	2. Set boards together 	3. Insert Cam Lock 	4. Turn Cam Lock clockwise (half a turn) 
--	---	--	---

STEP 1: ASSEMBLE DRAWER

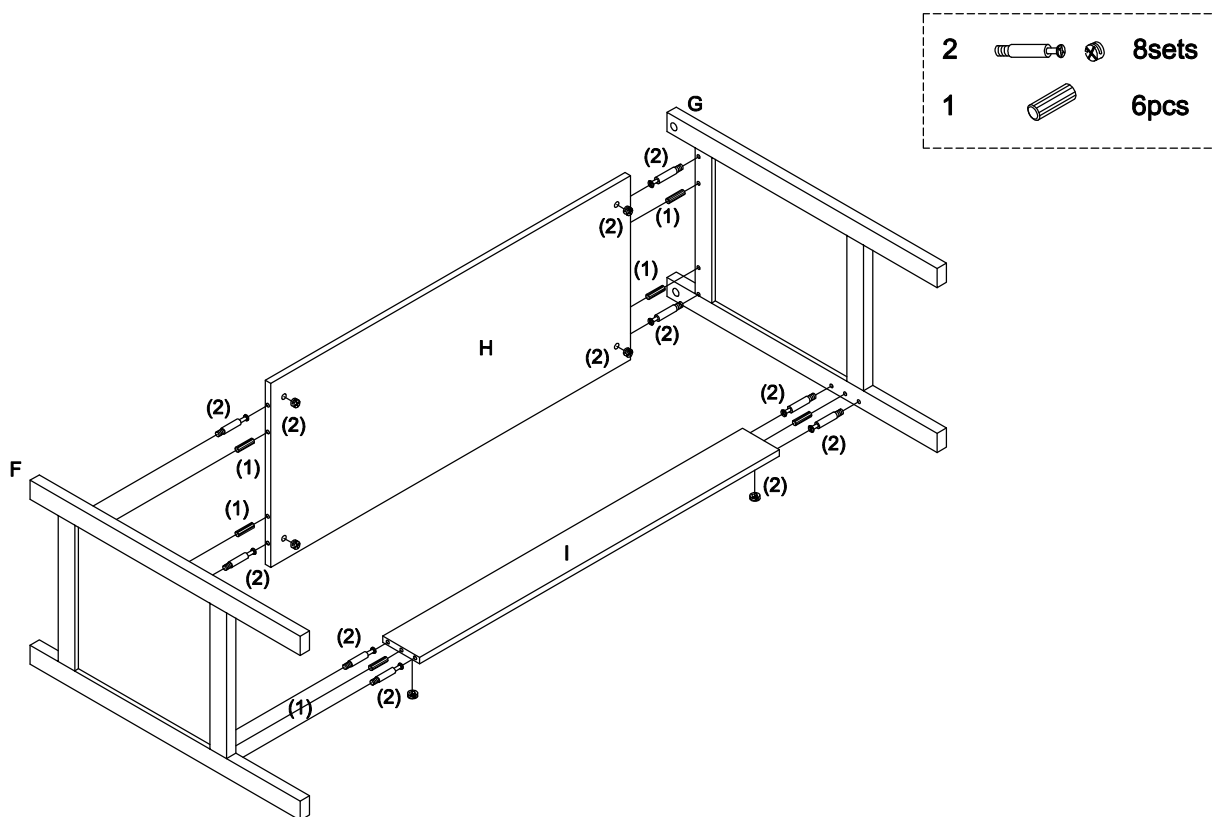
- Use screws (5) to attach drawer side panels (C & D) and back panel (B) together.
- Insert drawer bottom panel (E) into the grooves of side panels (C & D) and back panel (B).
- use screws (5) to attach drawer side panels (C & D) and drawer front panel (A) together.
- Use round bolt (6) to attach knob (6) onto drawer front panel (A).



5		8pcs
6		1sets

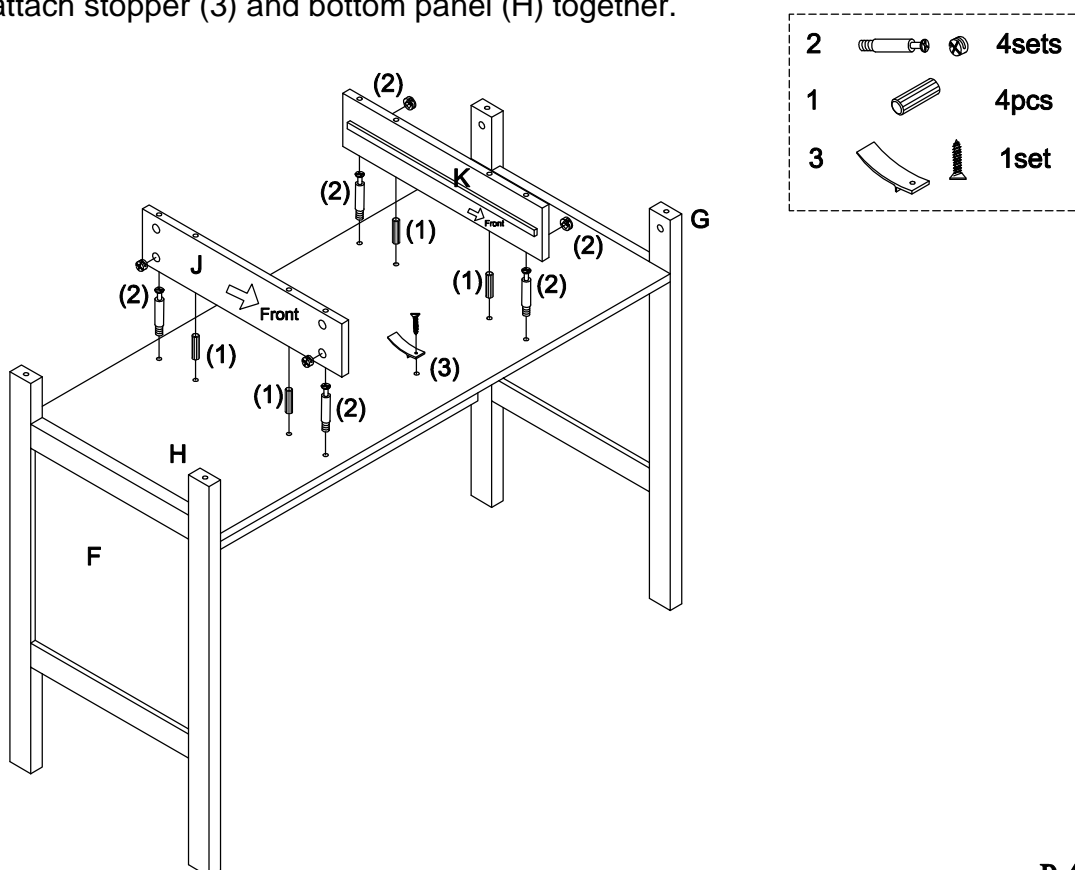
STEP 2: ASSEMBLE SIDE FRAME (F & G) ,BOTTOM PANEL (H) AND ACROSS BAR (I)

- Use wood dowels (1) cam-bolts & cam-locks (2) to assemble side frames (F & G) ,bottom panel (H) and across bar (I) together.





STEP 3: ASSEMBLE MIDDLE PANEL (J & K)

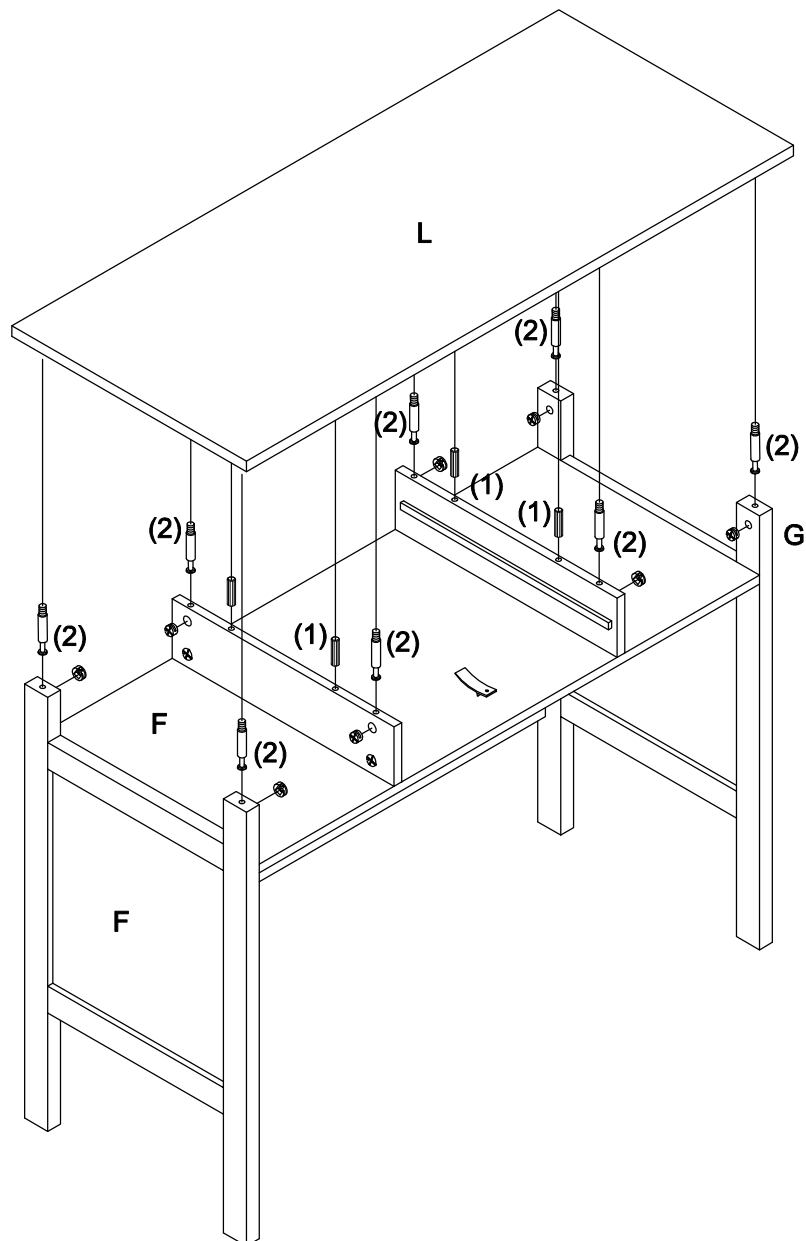
- Use wood dowels (1) and cam-bolts & cam-locks (2) to assemble middle panels (J & K) and bottom panel (H) together.
- Use screw (3) to attach stopper (3) and bottom panel (H) together.



STEP 4: ASSEMBLE TOP PANEL (L)

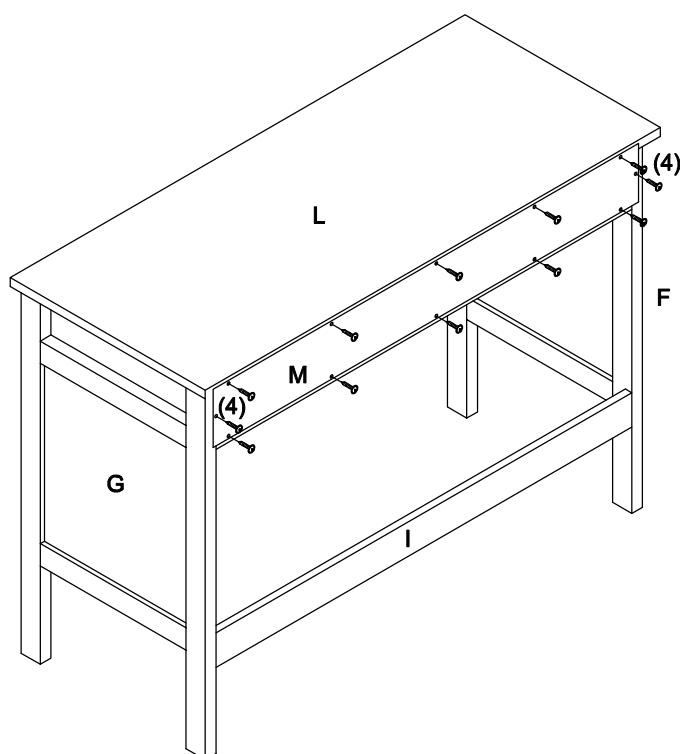
- Use wood dowels (1) and cam-bolts & cam-locks (2) to assemble top panel (L), side frames (F & G) and middle panels (J & K) together.


2		8sets
1		4pcs



STEP 5: ASSEMBLE BACK PANEL (M)

- Use round head screws (4) to attach back panel (M) on the back of pre-assembled unit.



4  12pcs

STEP 6: PLACE DRAWER

- Insert the pre-assembled drawer into the product body properly as shown. Please make sure the grooves on drawer side panels (C & D) catch the wood glide on middle panels (J & K) exactly.

