

Installation Guide of wall-mounted staircase



1
Unscrew 4 screws (1 on each side, 2 on the top crossbar of frame), take steps off.



2
Put the stair frame in the right place and mark the fixing holes.




3
Drill at marks with 12# bit.



4
Mount stair frame to wall.



5
Lift steps to the frame.

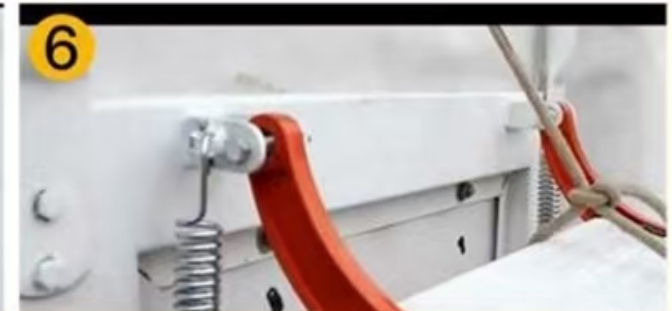

6
Tighten all bolts.