


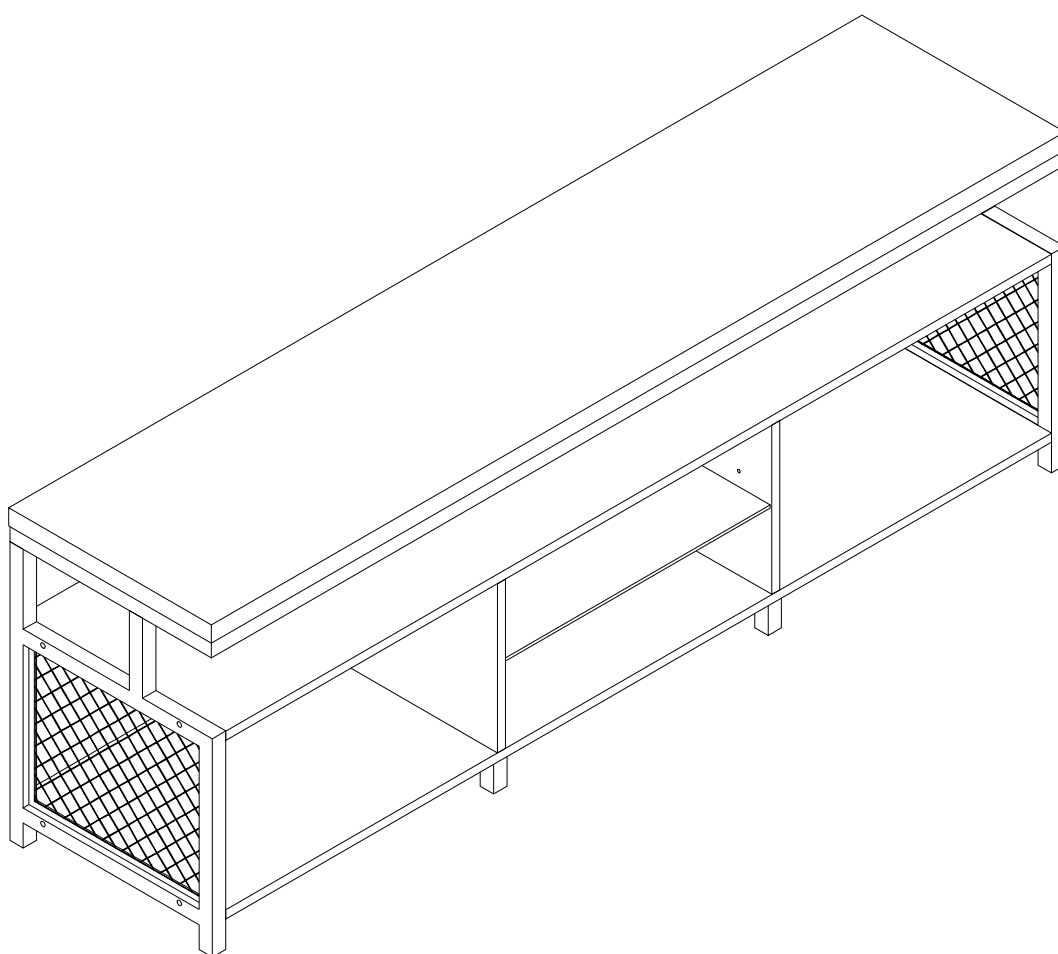
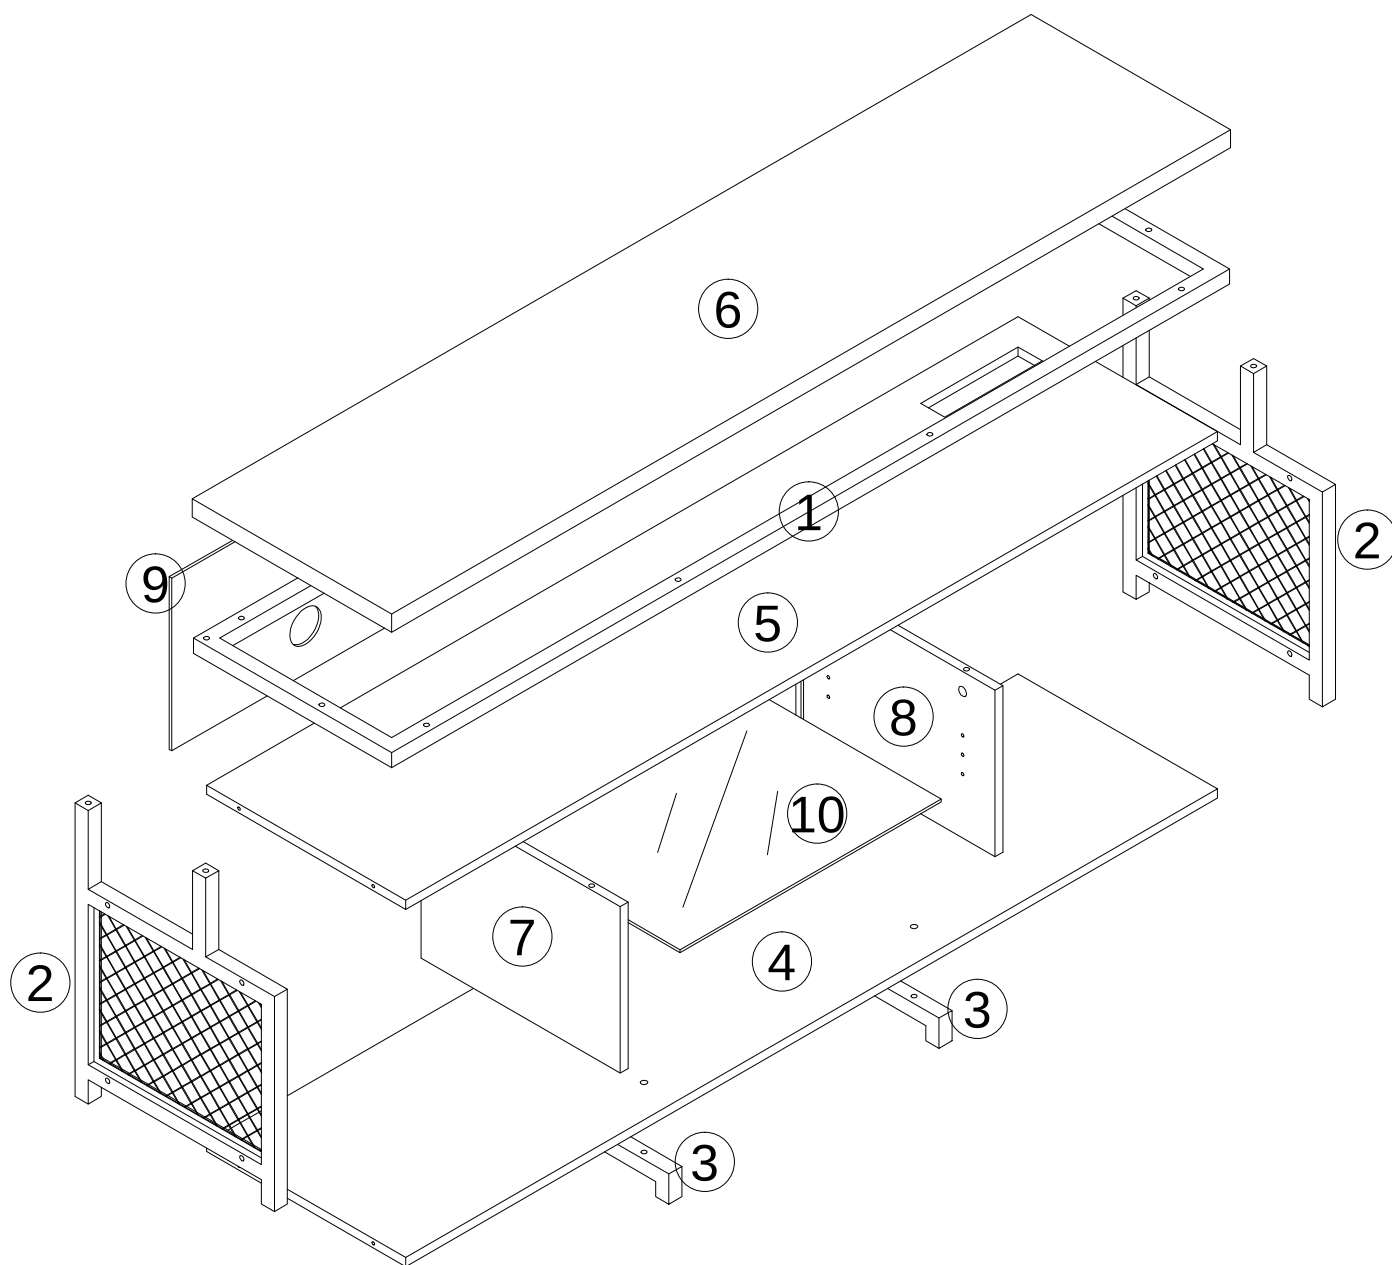
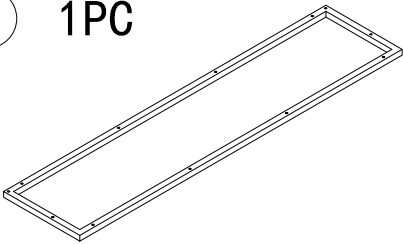
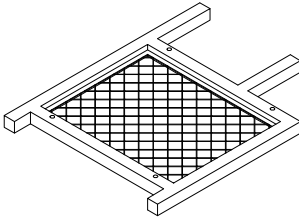

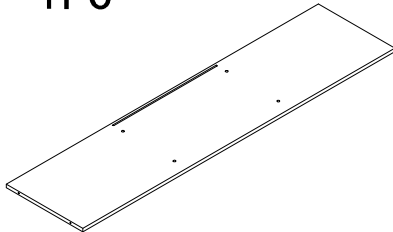
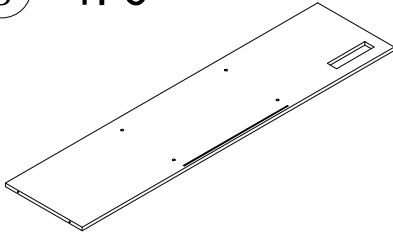
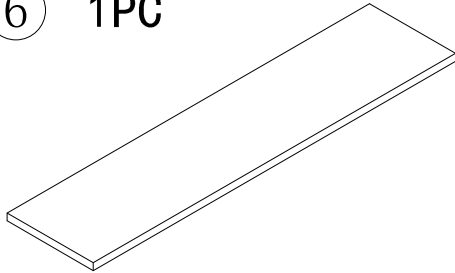
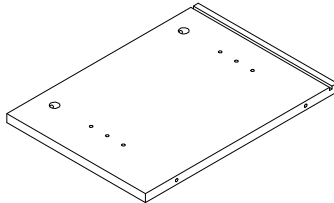
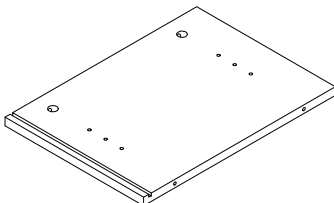
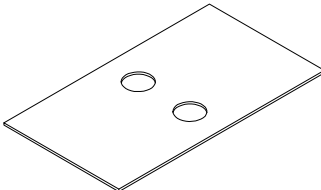
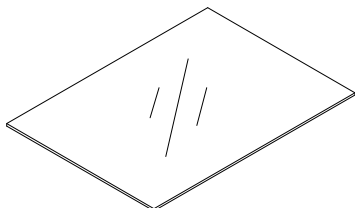

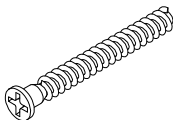



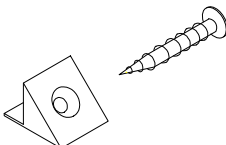





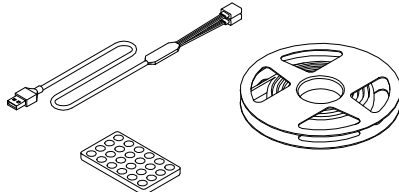

① 1PC 	② 2PCS 	③ 2PCS 		
④ 1PC 	⑤ 1PC 	⑥ 1PC 		
⑦ 1PC 	⑧ 1PC 	⑨ 1PC 	⑩ 1PC 	
A 4PCS  M6x40	B 4PCS  φ15x12	C 4PCS  7x58	D 8PCS  M8	E 8PCS  7x48
F 4PCS  M6x45	G 8PCS  M6x35	H 6PCS 	I 2PCS  3.5x14	J 4PCS 
K 1PCS 	L 1PC 	 T00L		

STEP1

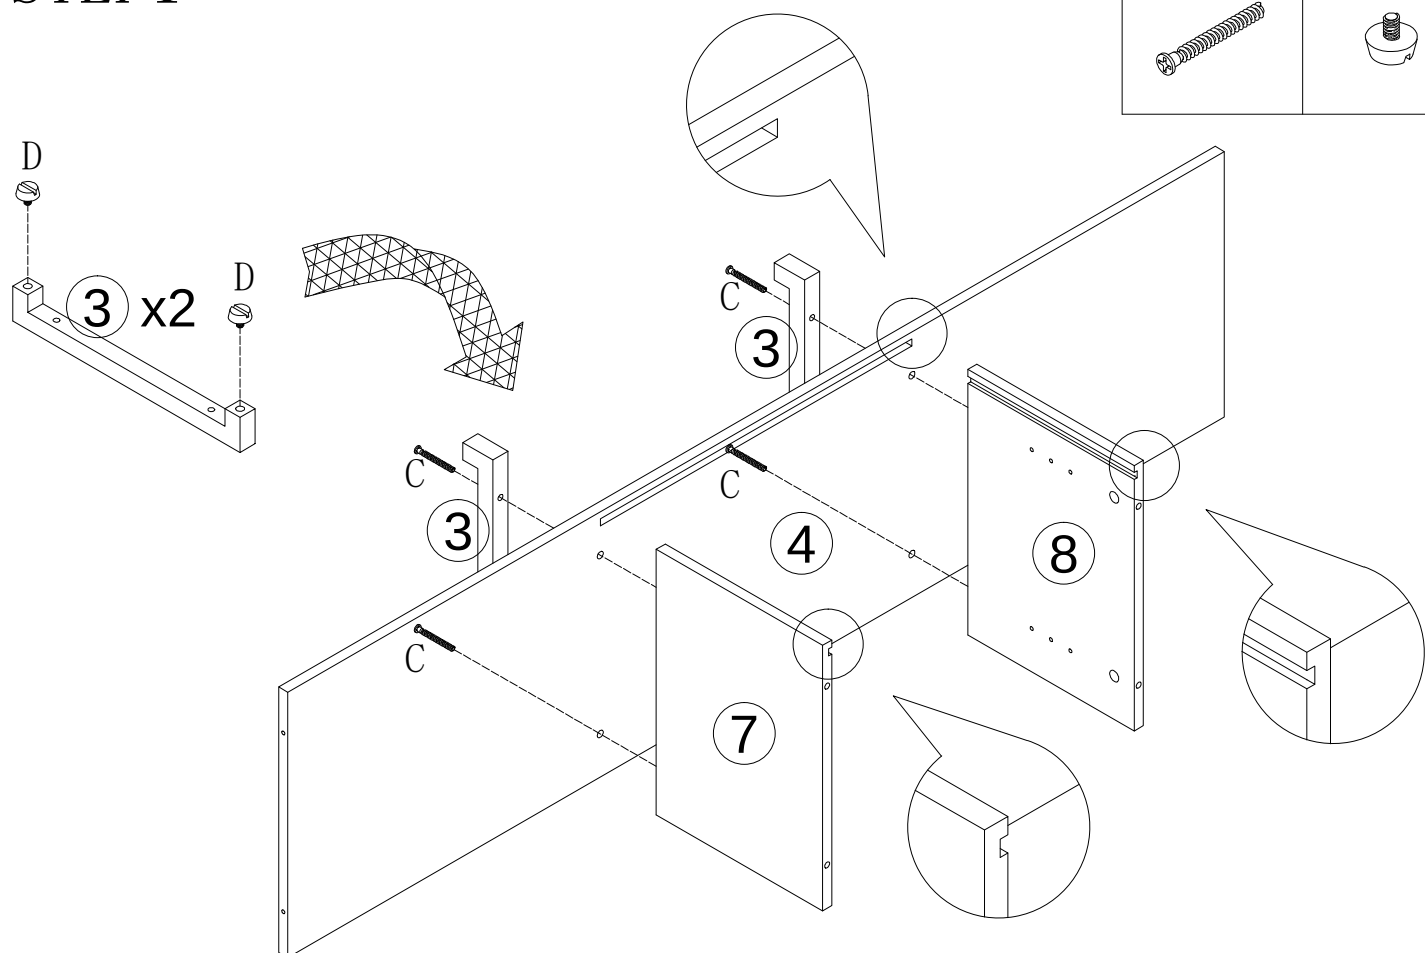


C 4PCS



D 4PCS



STEP2

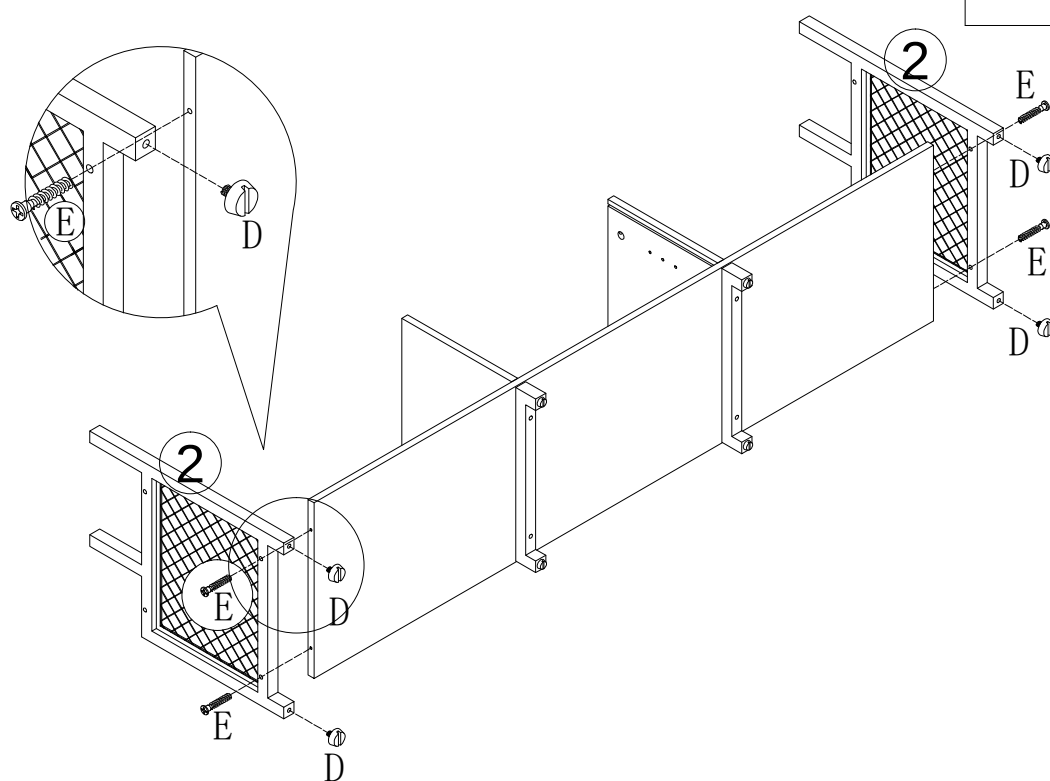


E 4PCS




D 4PCS




STEP3

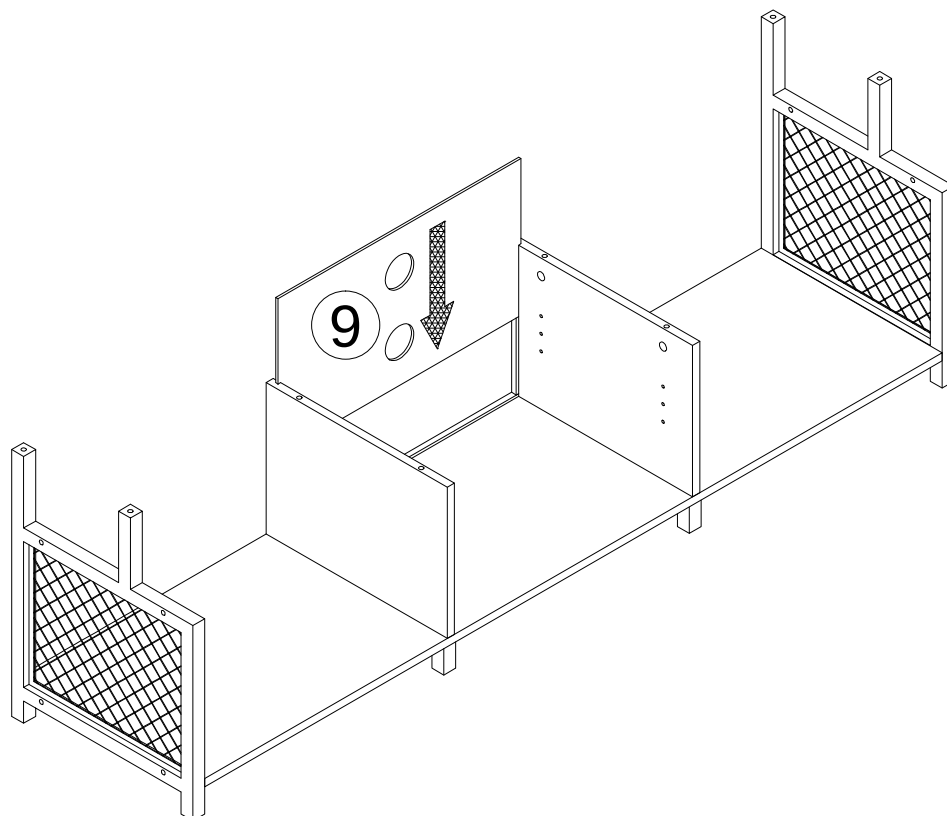

STEP4

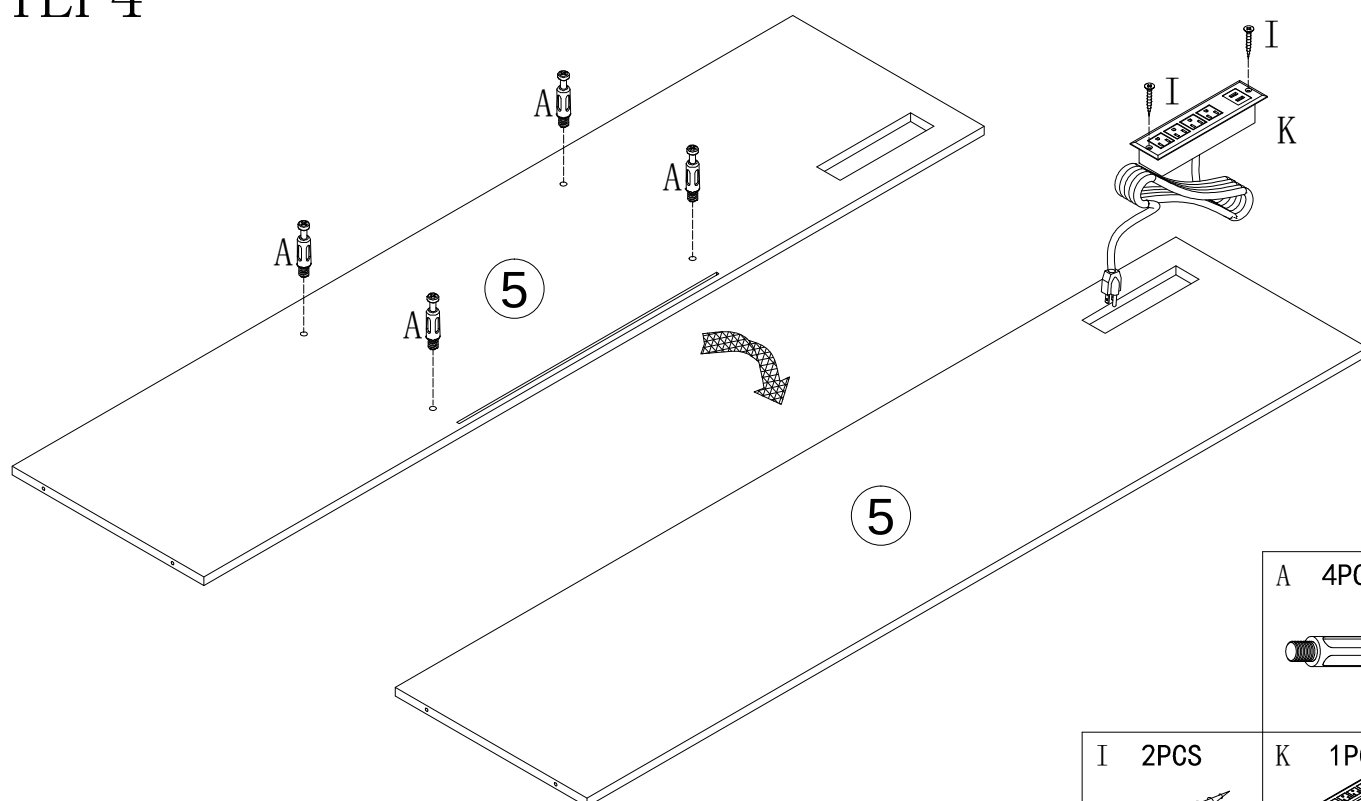


STEP5

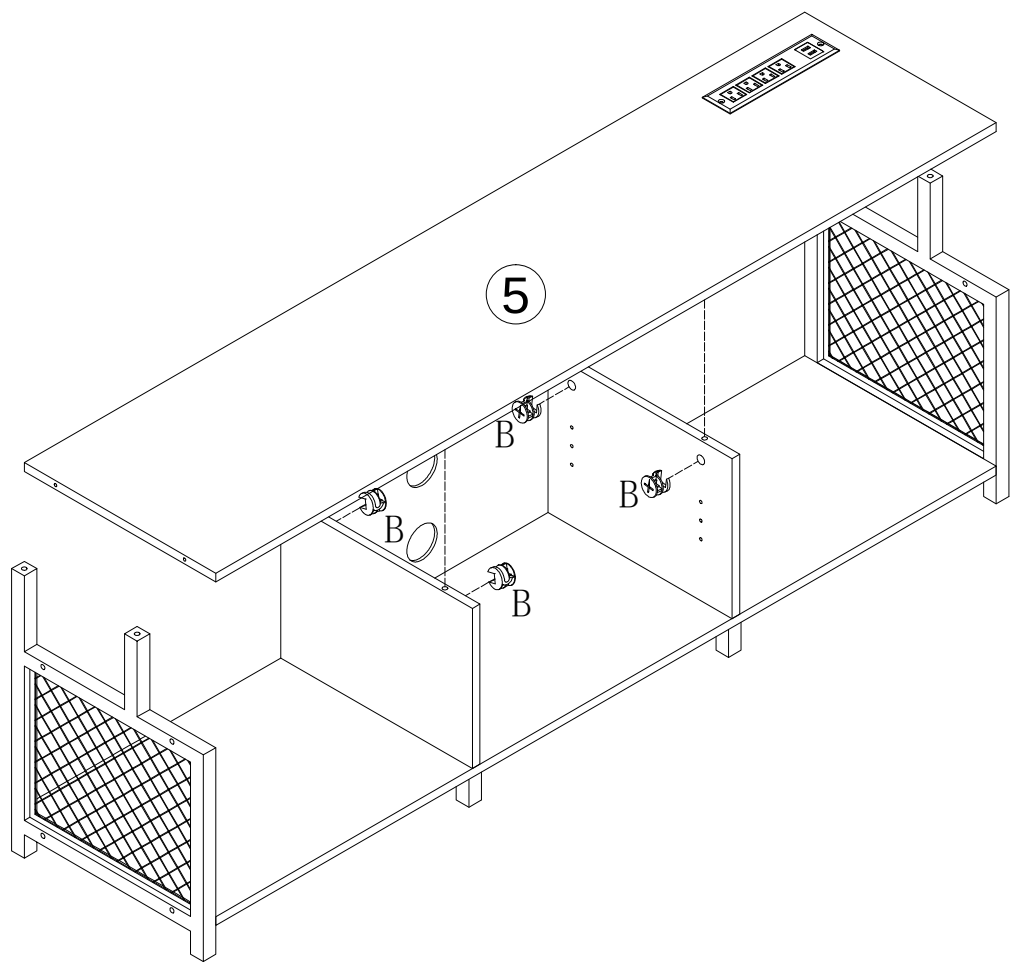

B 4PCS




STEP6

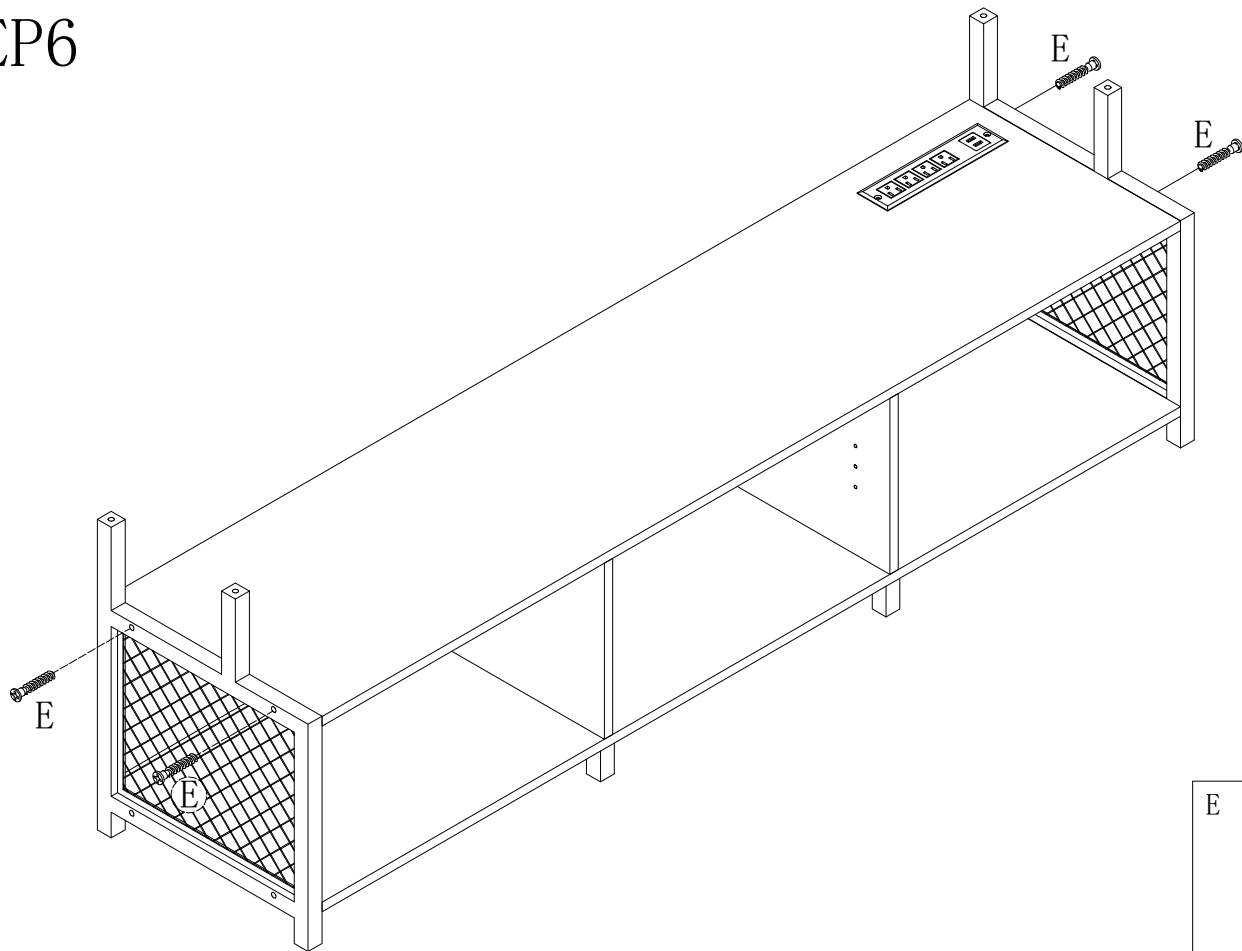

E 4PCS




STEP7

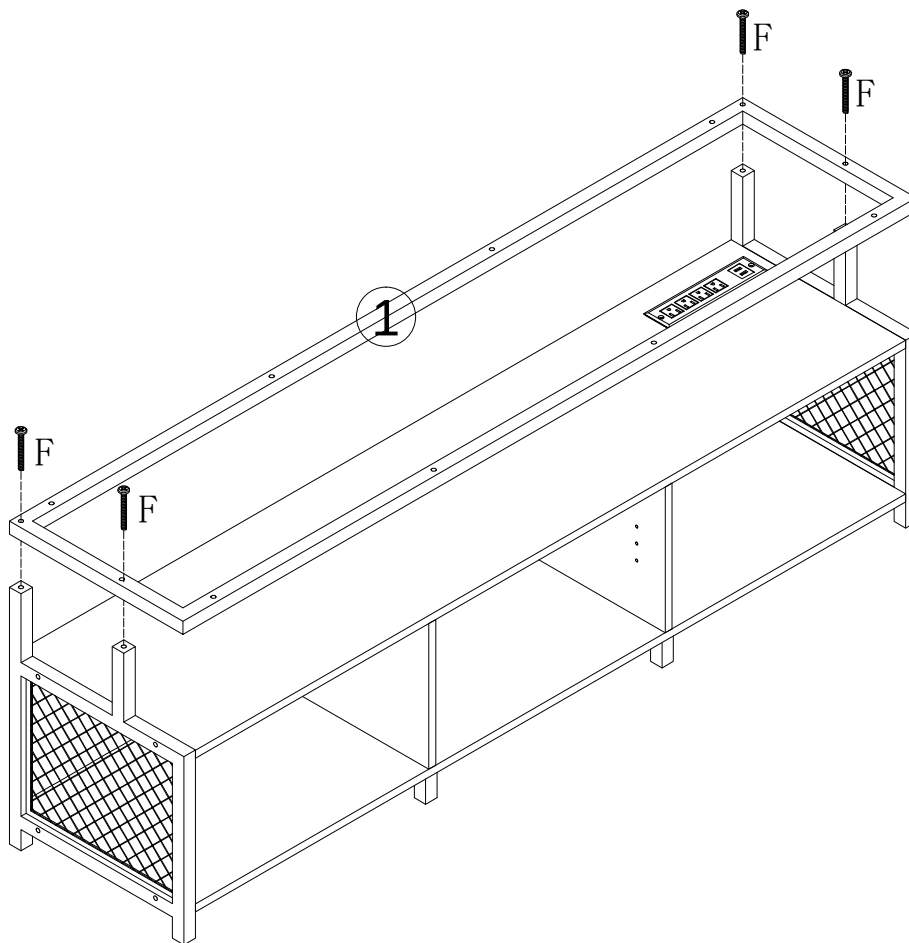

F 4PCS



STEP8


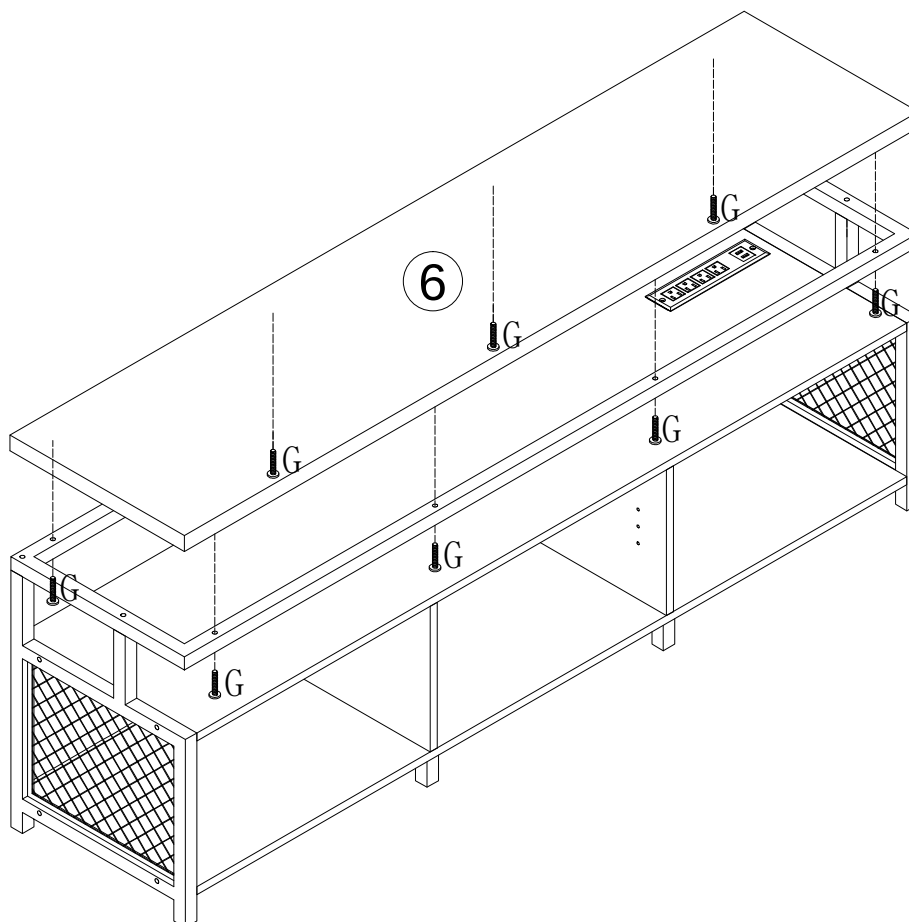


G 8PCS




STEP9

H 6PCS

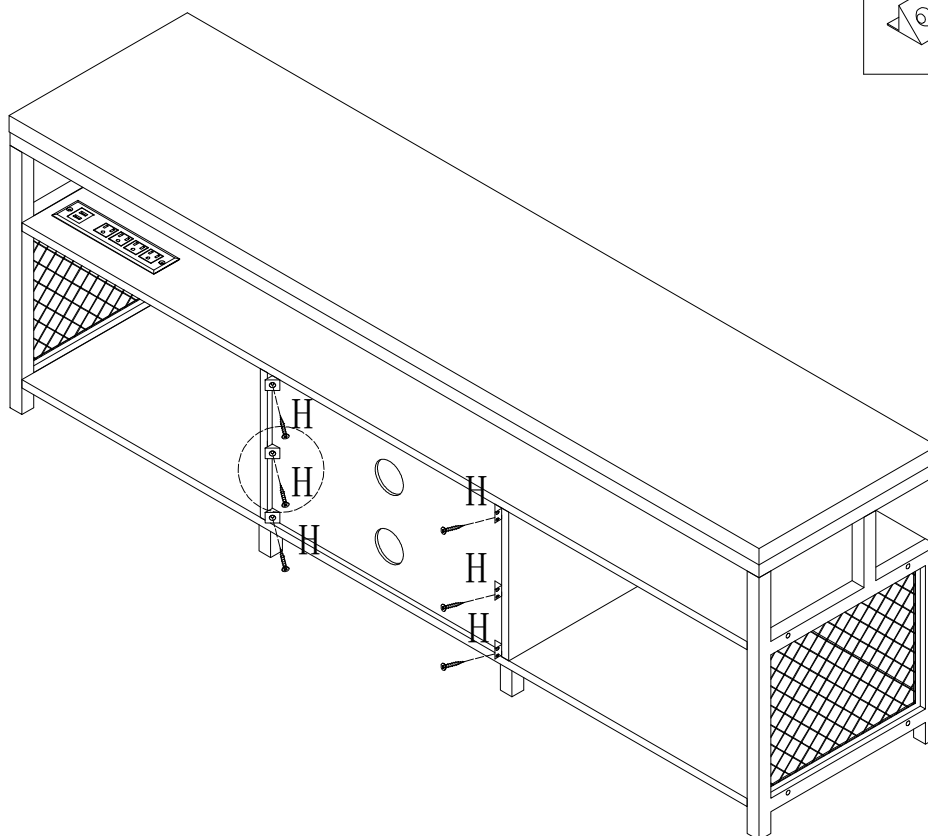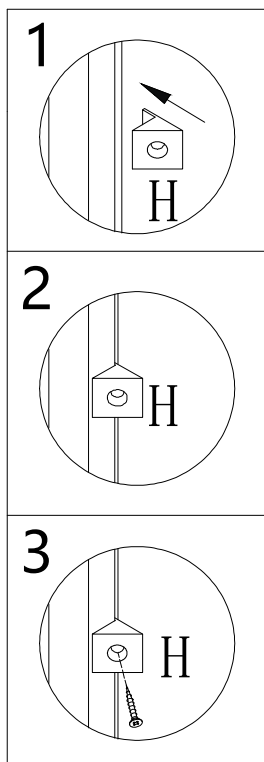


STEP10


J 4PCS

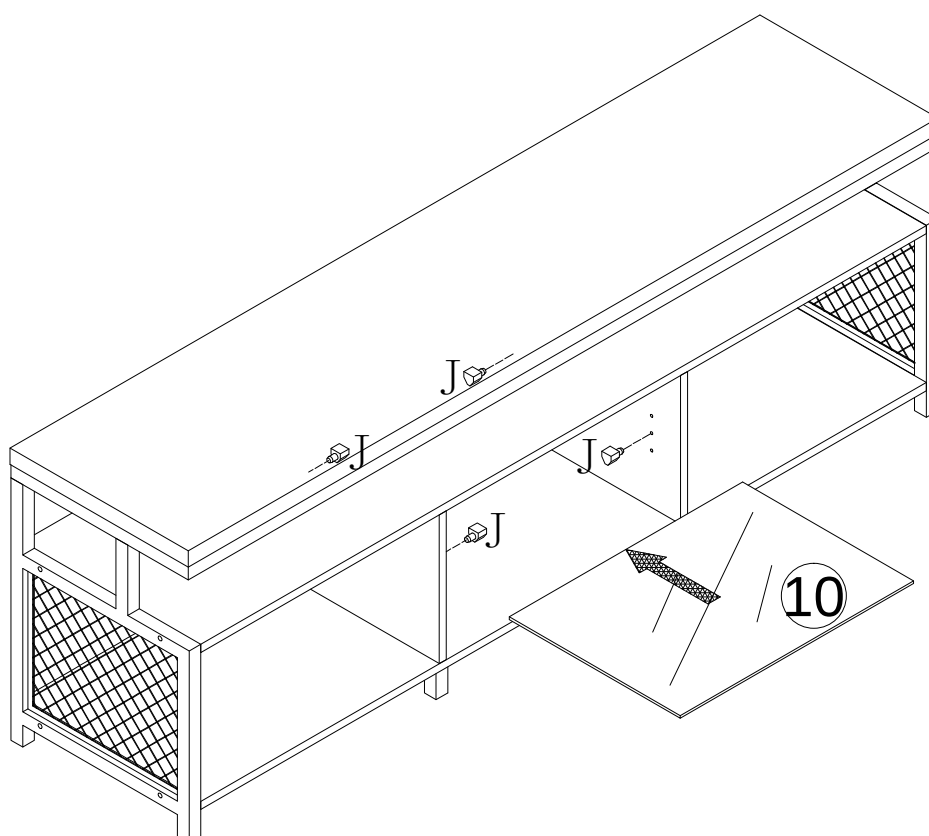

STEP11

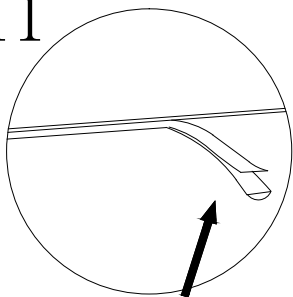


Tear off the tape and apply it to the bottom plate, then press it firmly with your hand

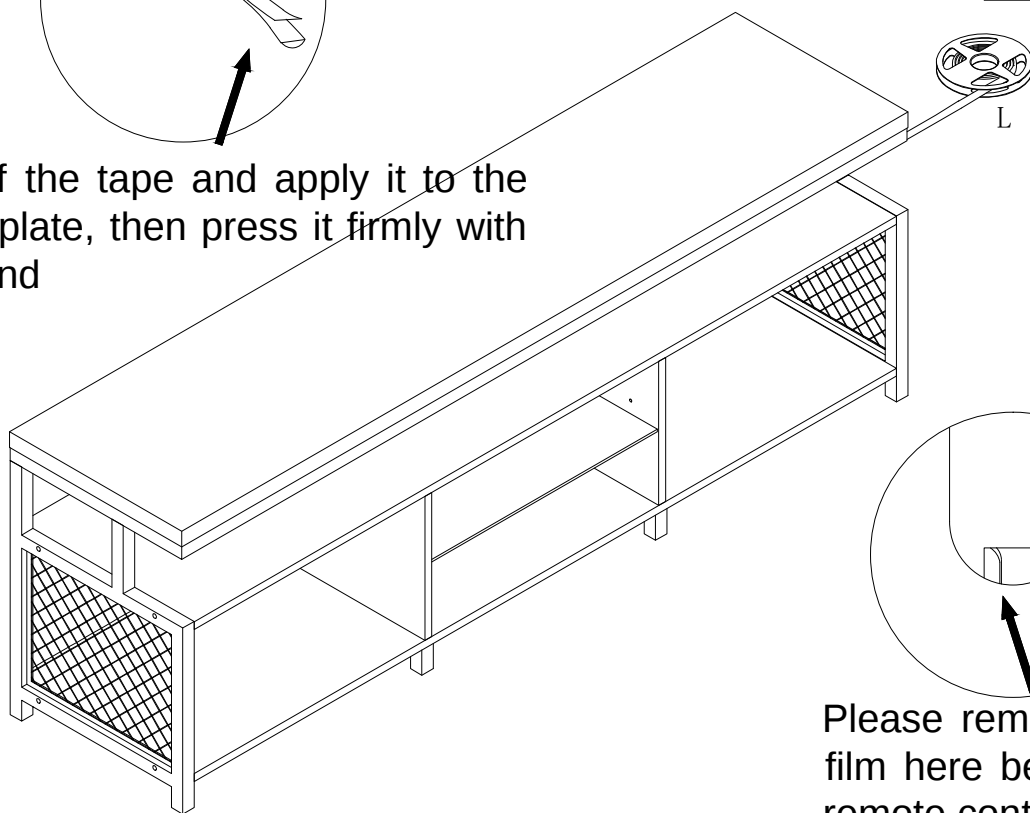

Please remove the plastic film here before using the remote control

STEP12

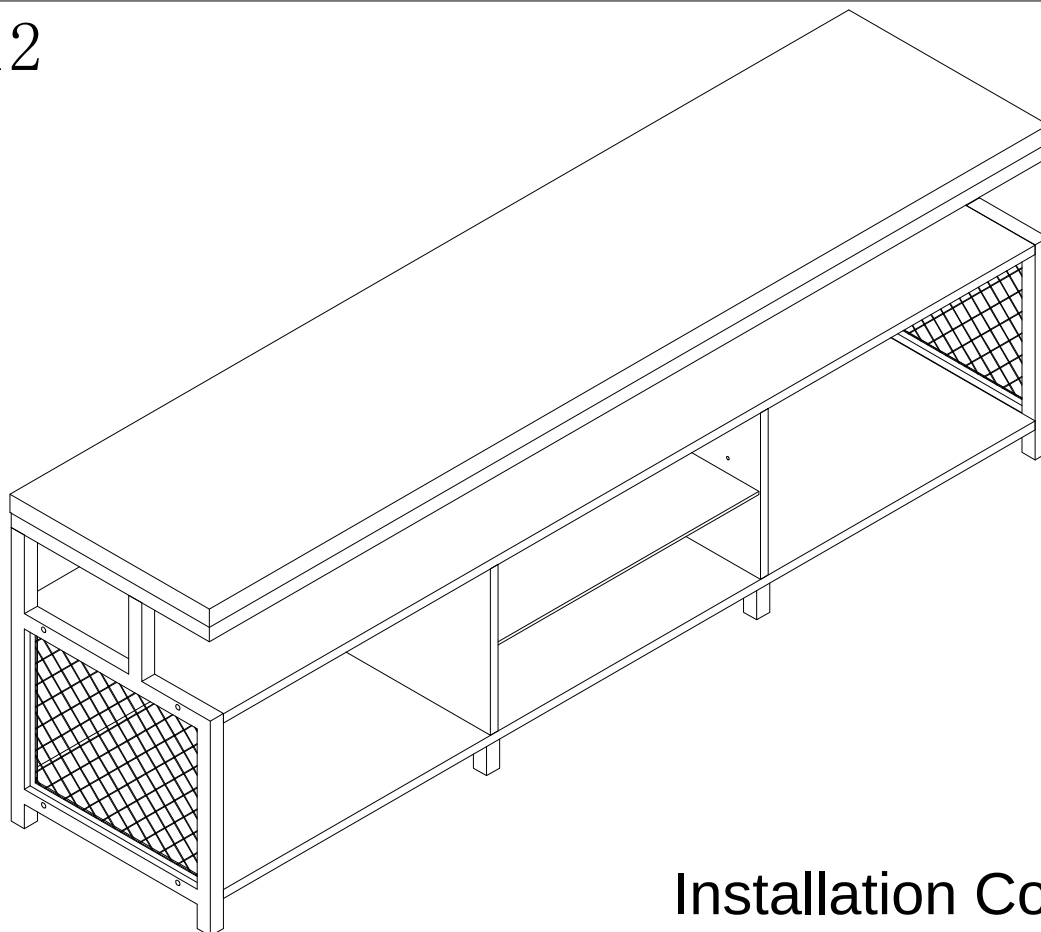

Installation Completed