


Product Installation Instructions

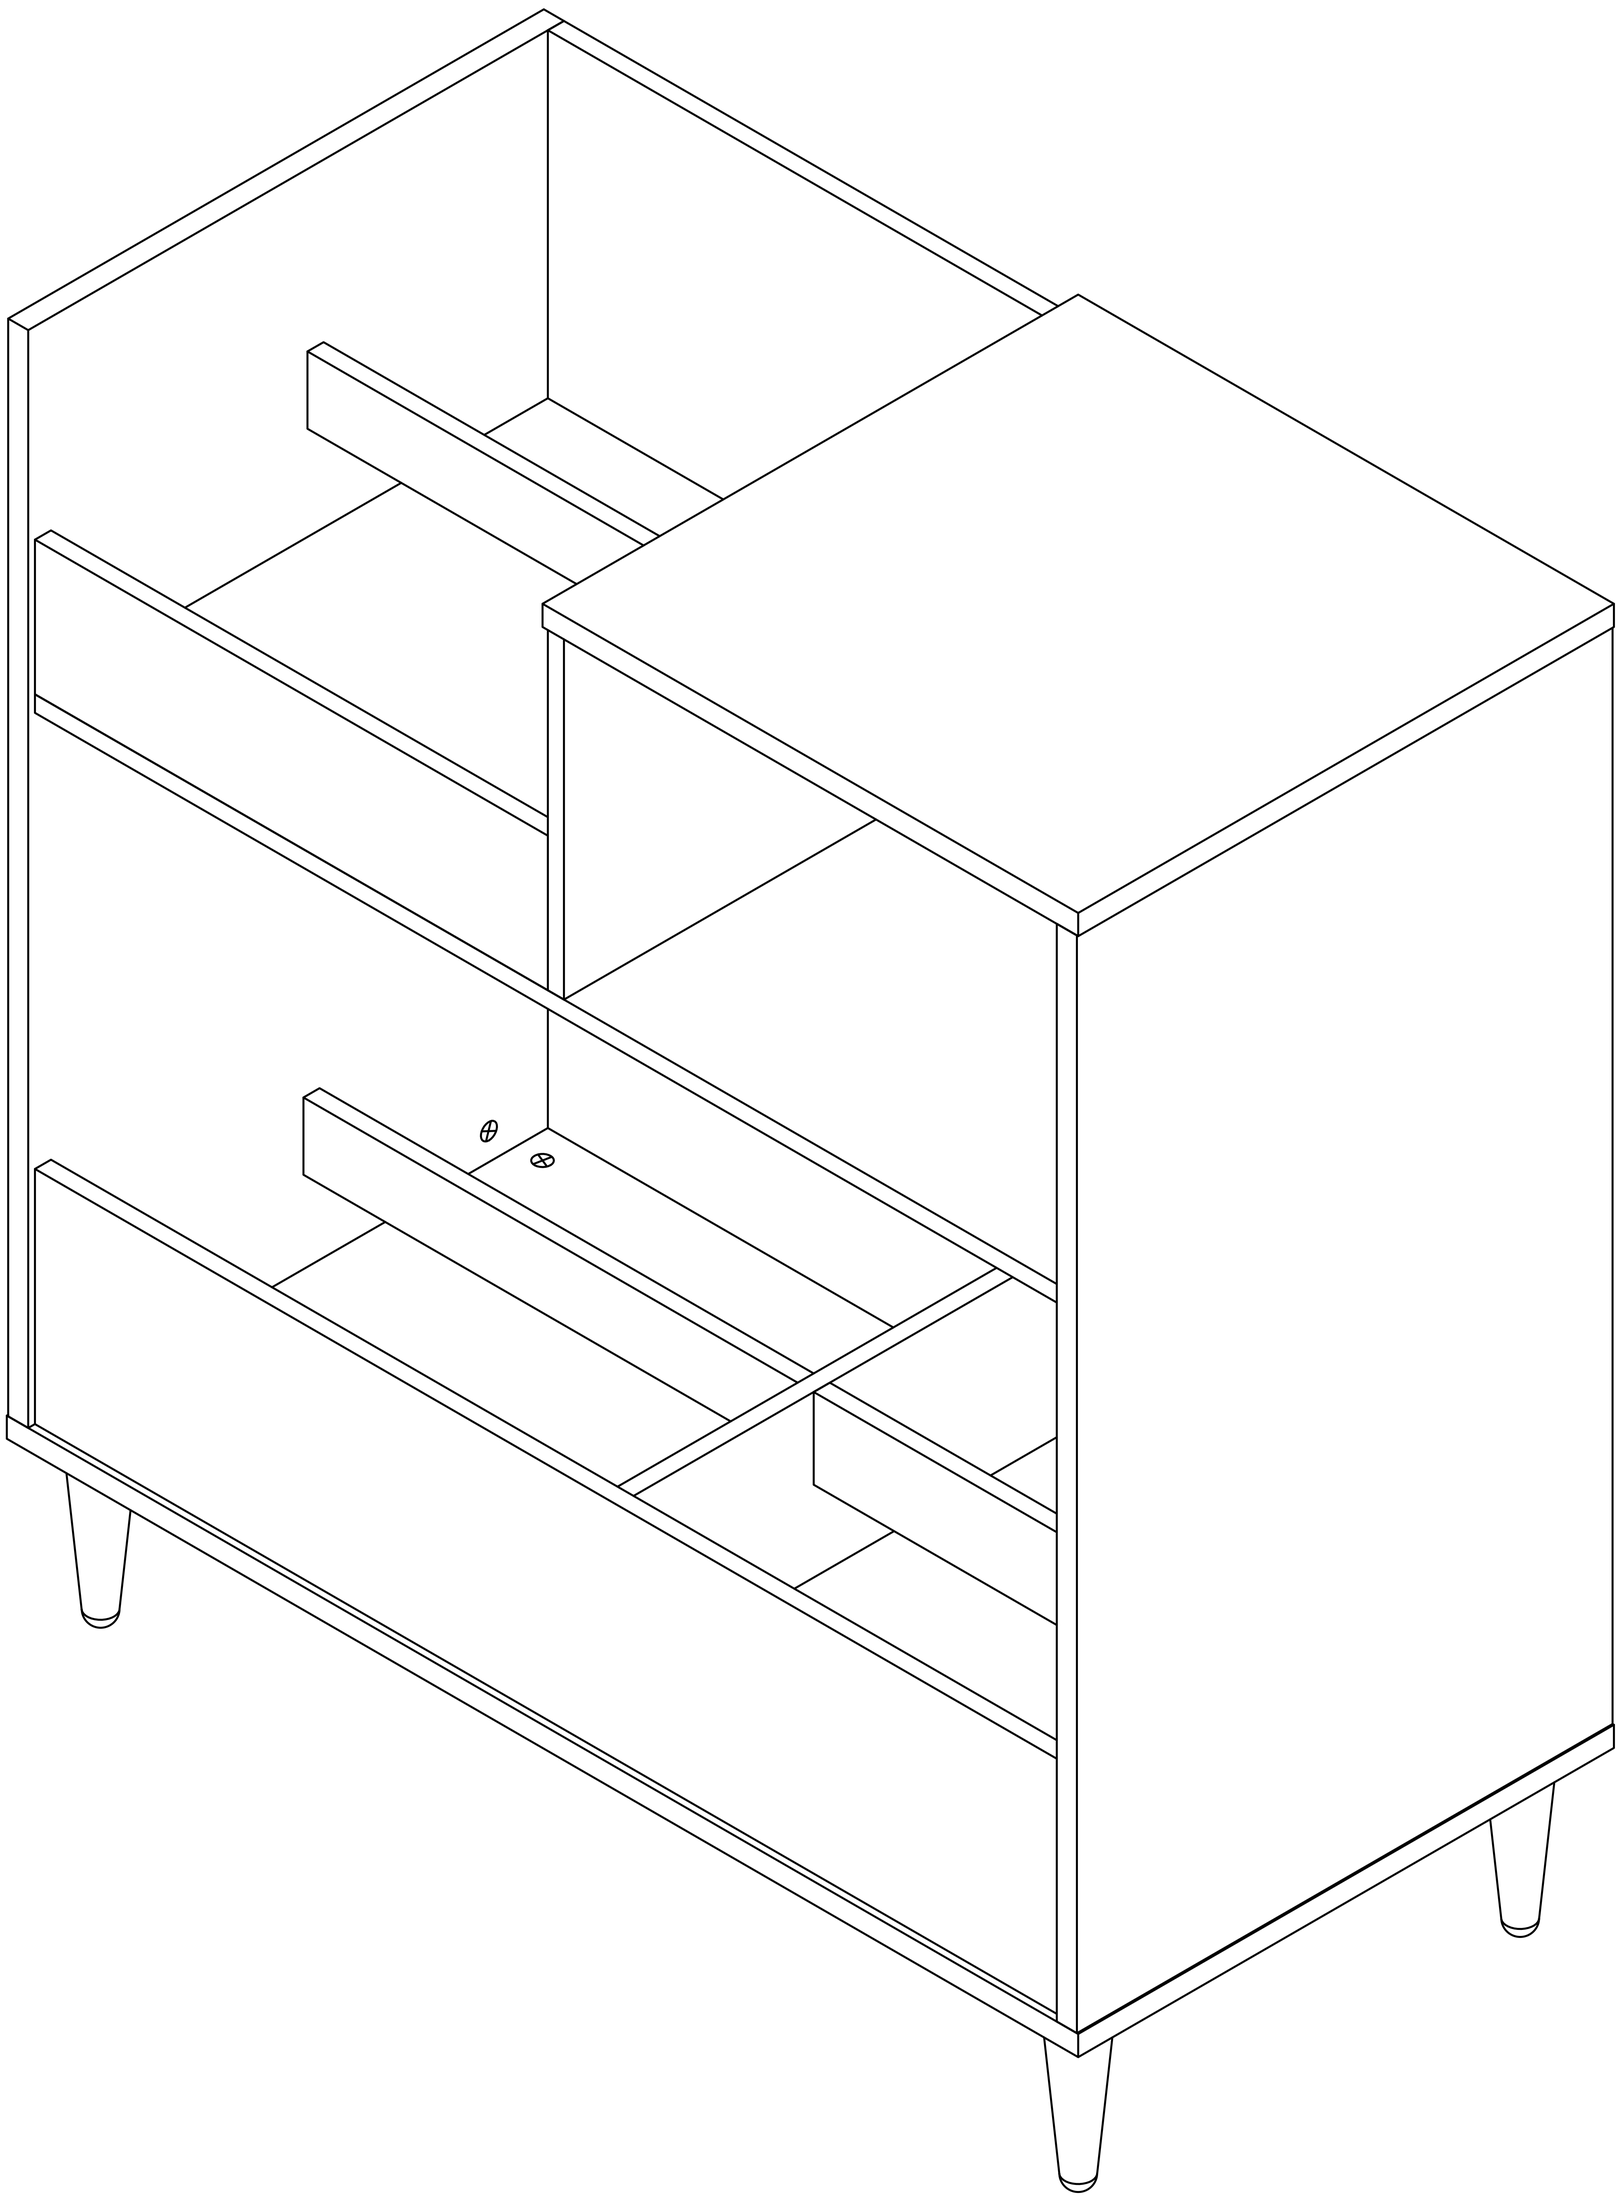


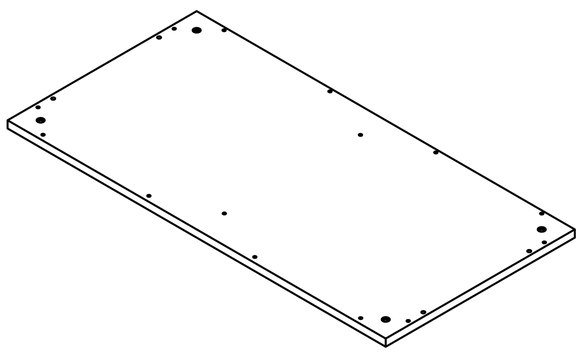


Ax1

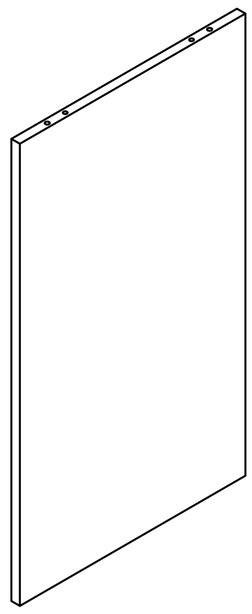


Bx1

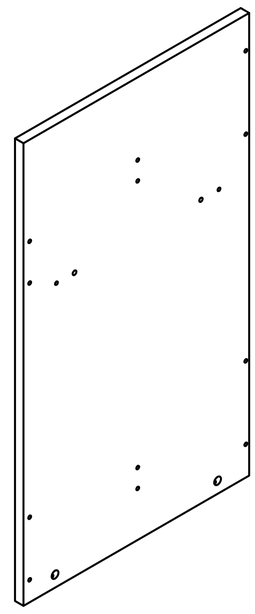


Cx1

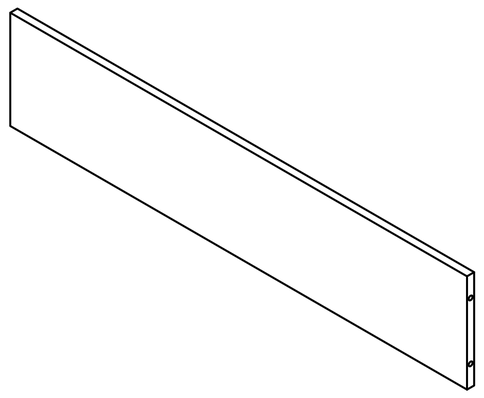


Dx1

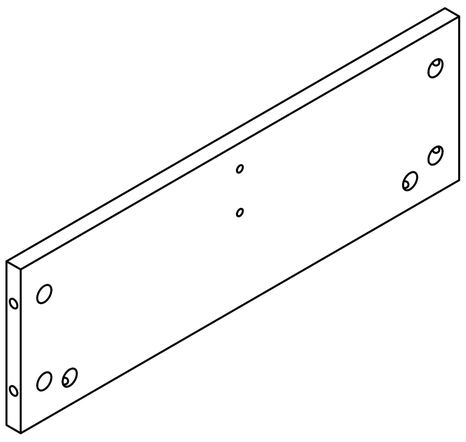


Ex1

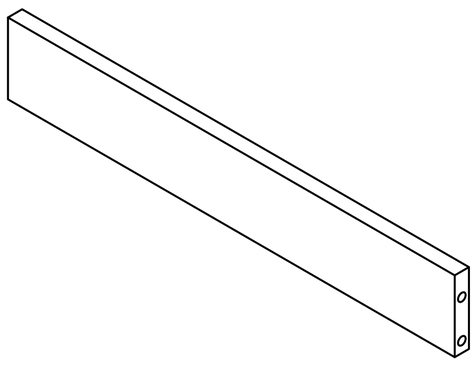


Fx1

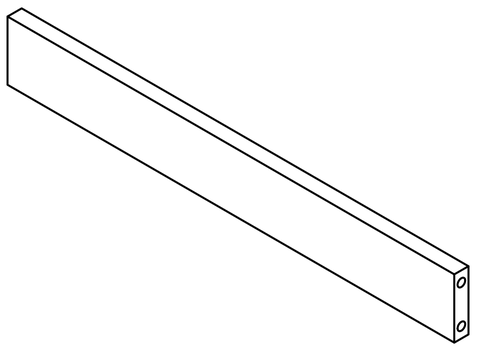


Gx1

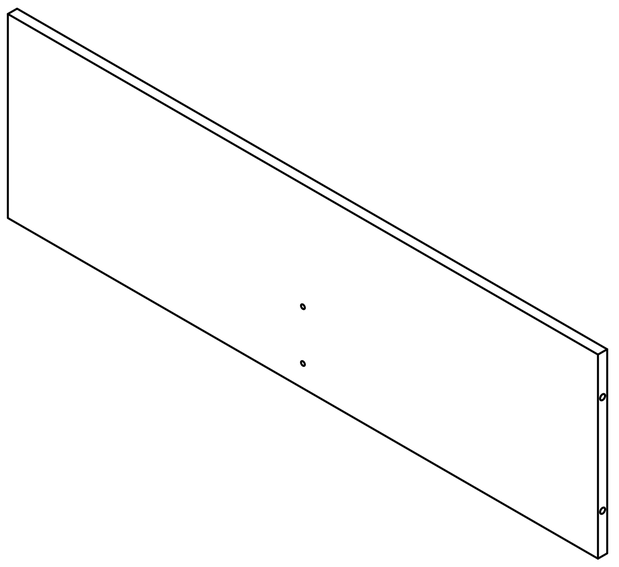


Hx1

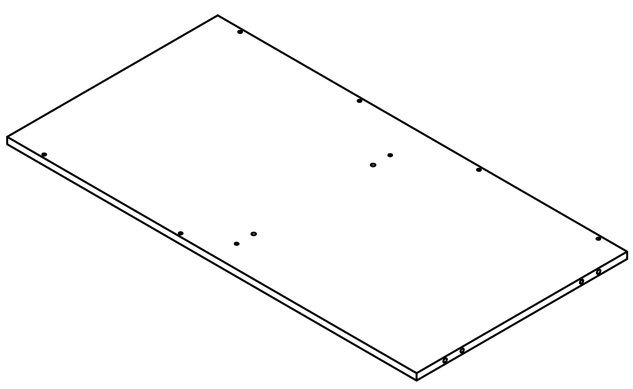


Ix1

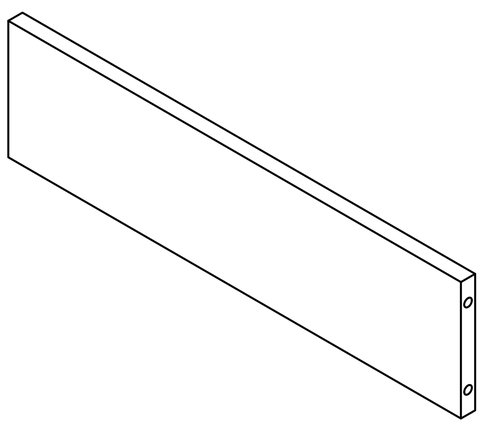


Jx1

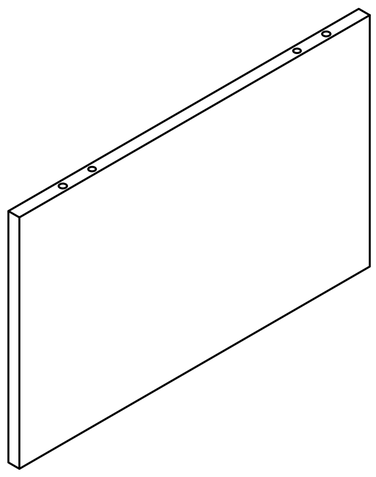


Kx1

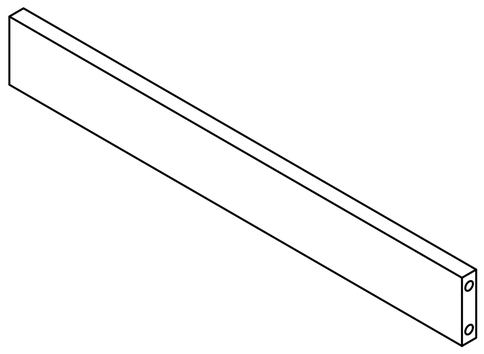


Lx1

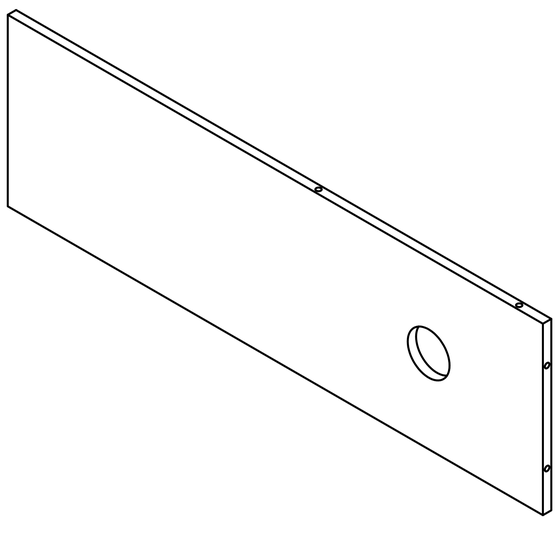

Mx1

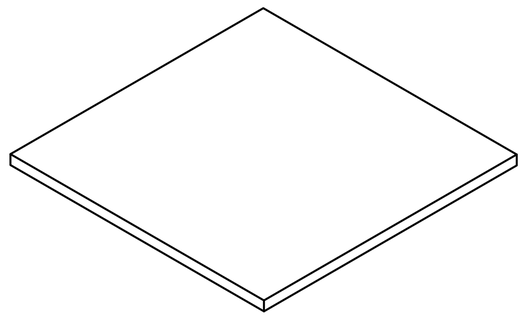






Nx1




0x4

1


Accessories list

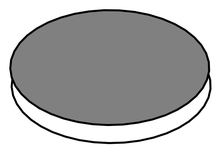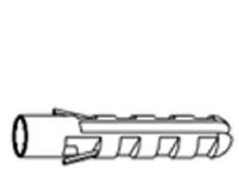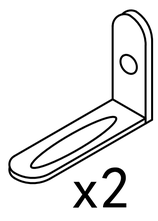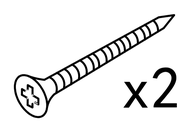1		Two in one screw (6x28mm)	64pcs +5pcs
2		Two in one nut (10x12mm)	64pcs +5pcs
3		Wood chipping (6x30mm)	14pcs +2pcs
4		Non-slip pads (φ12x2mm)	4pcs +1pcs
5	Anti Fall Hardware  x2  x2  x2 (3. 5x14mm)  x2 (4x45mm)  x4		


Double-head screwdriver, use as required

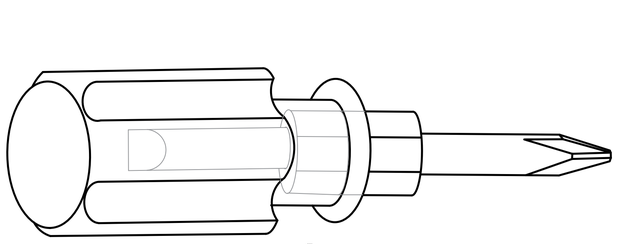

1pcs

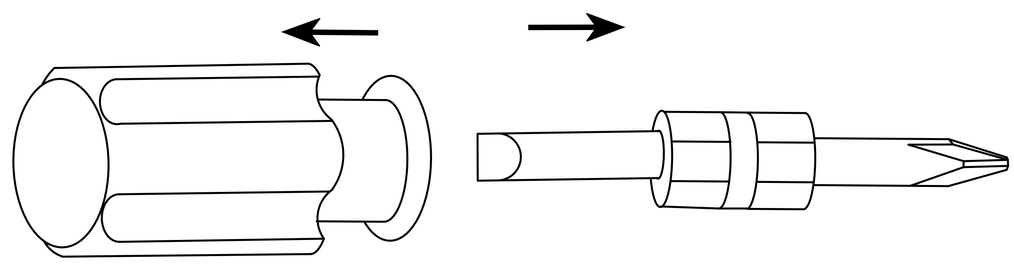


Product structure decomposition

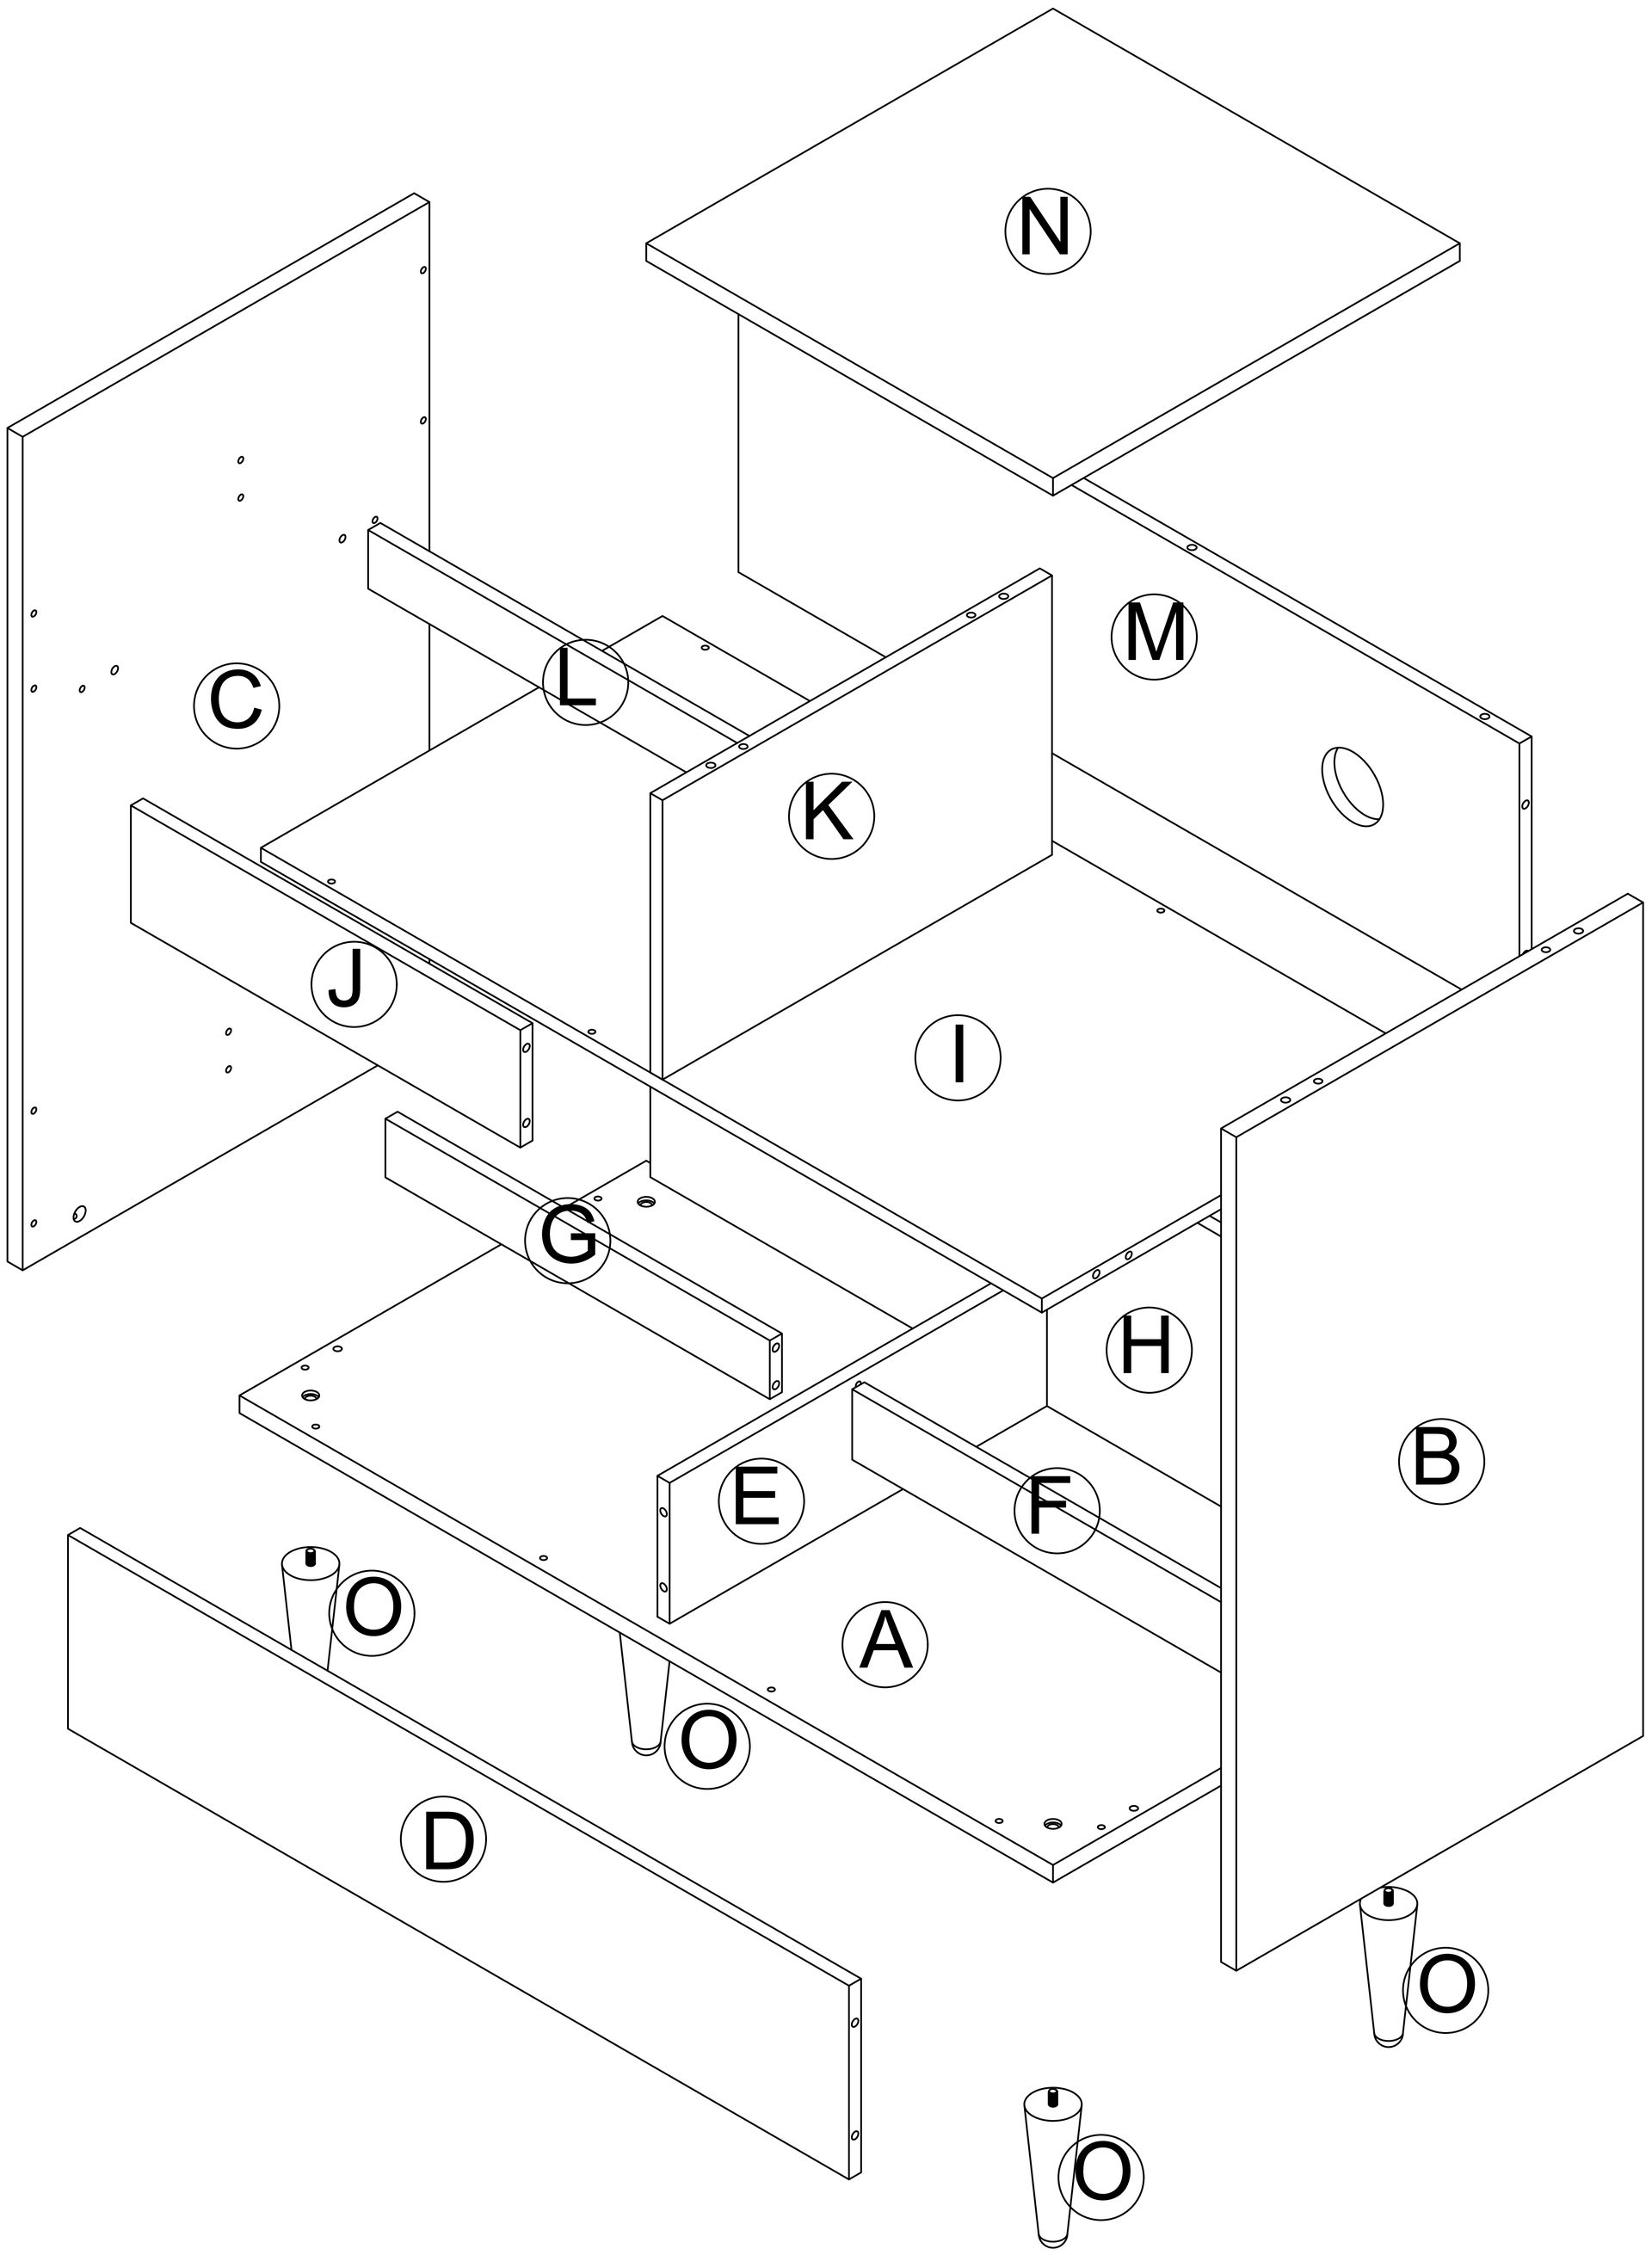


Use parts ① and ②


Step1

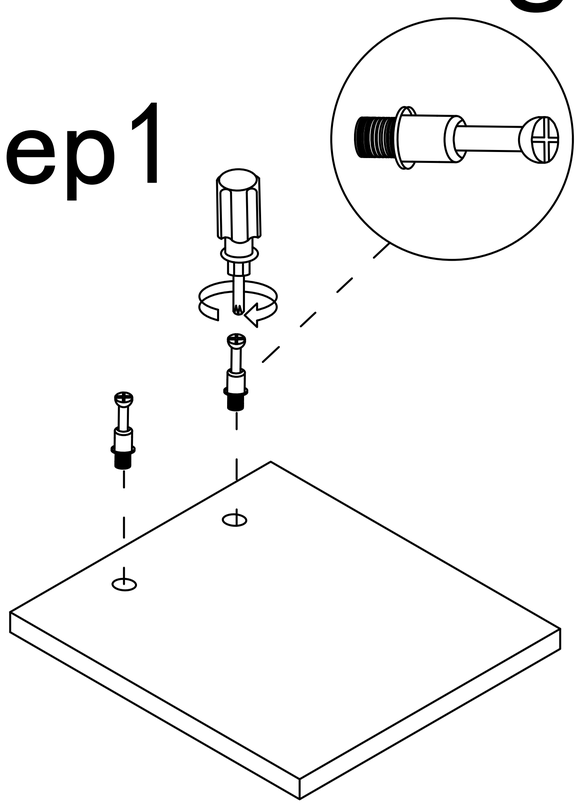


Step2

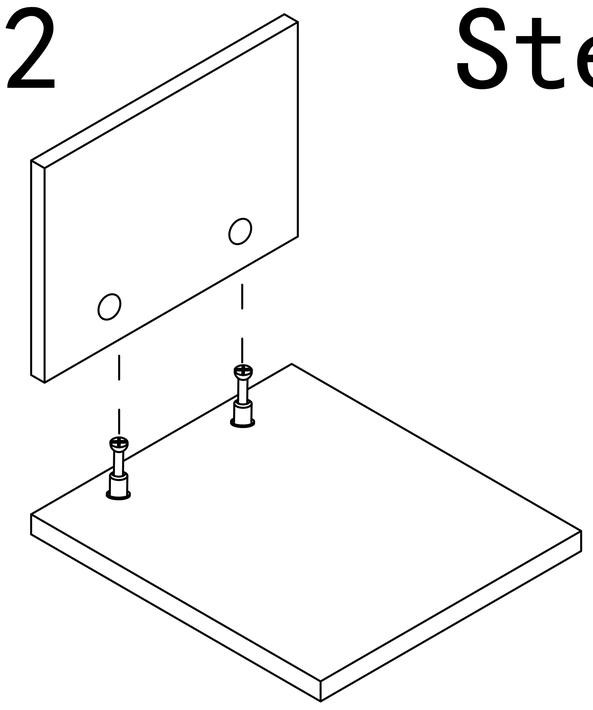


Step3

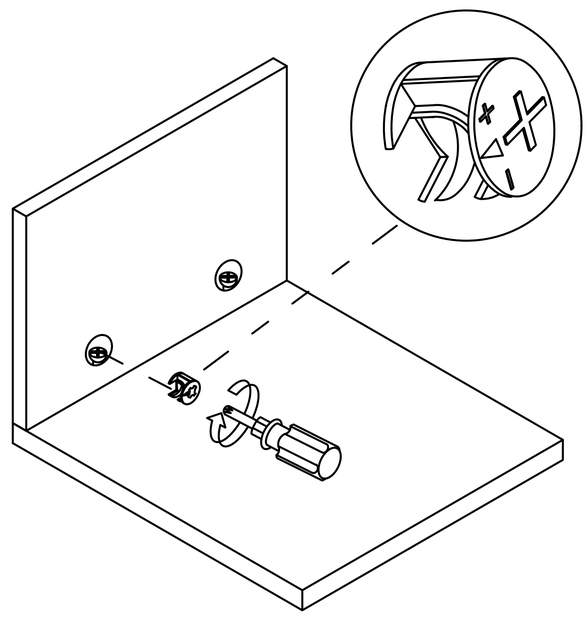

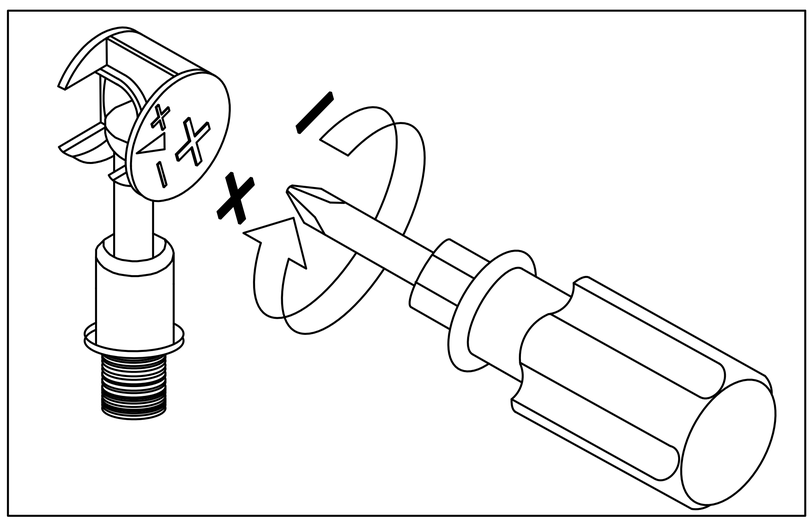



Use a screwdriver to lock in the direction of the "+" sign

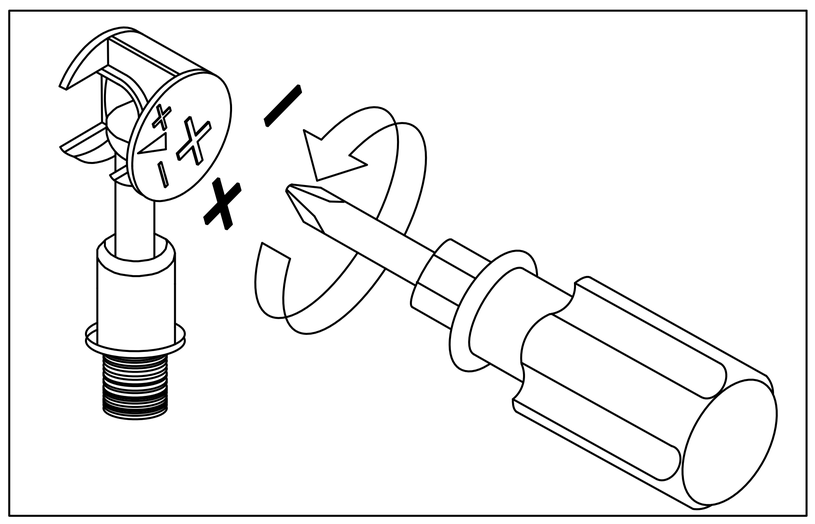

Disassemble along the direction of "-" sign


Step 1

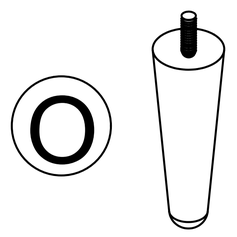


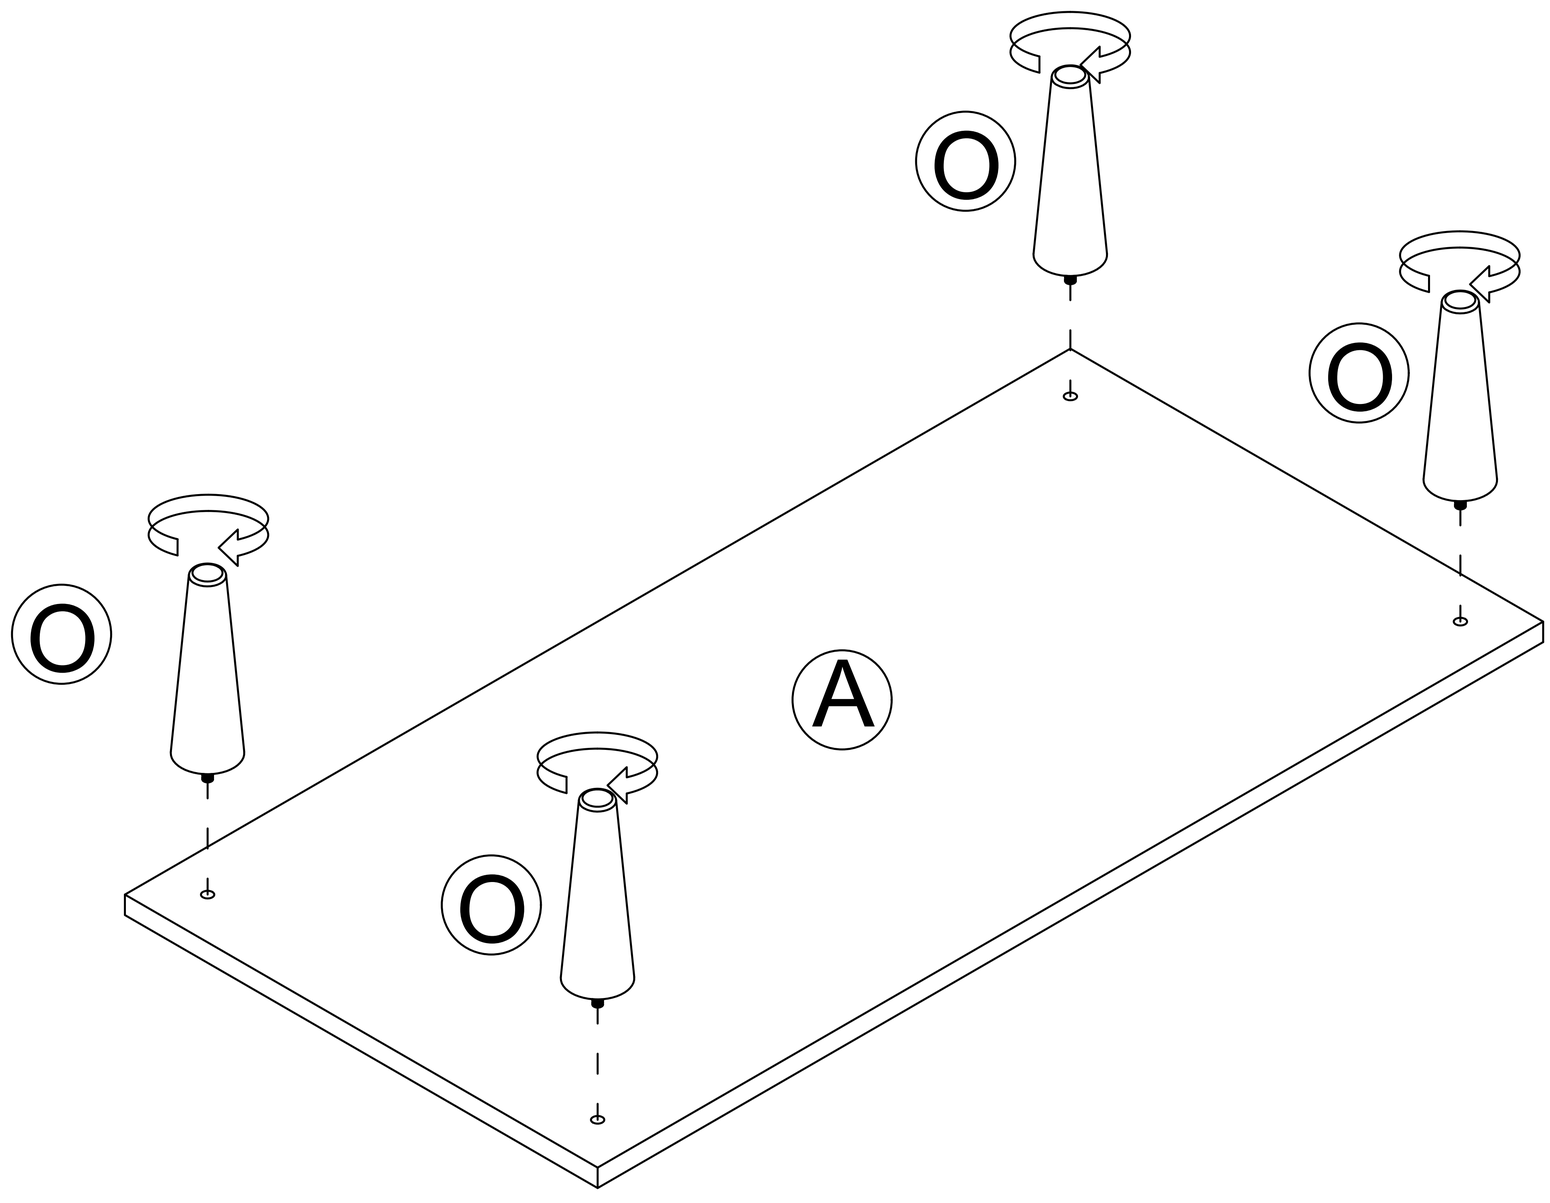


Step 2


Tear off release paper and stick the black foot pad on the board

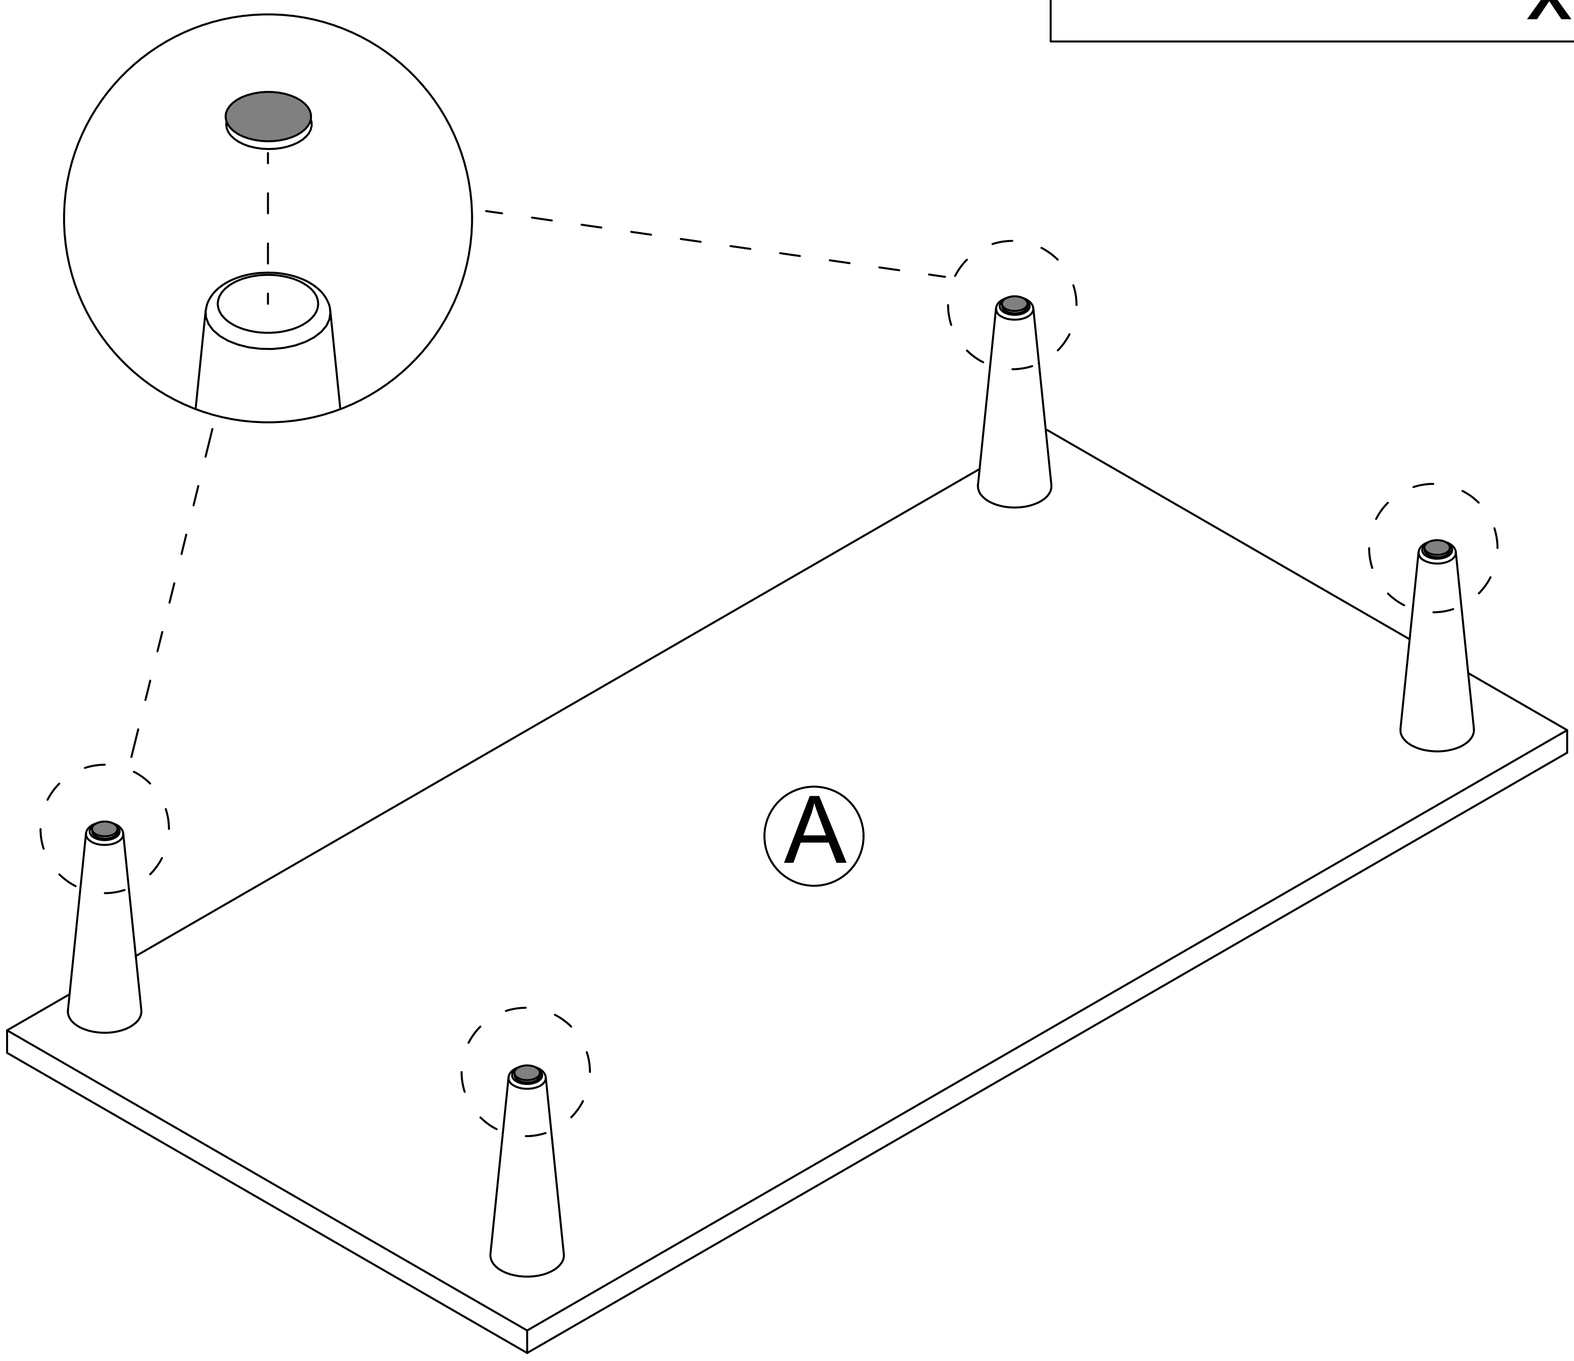

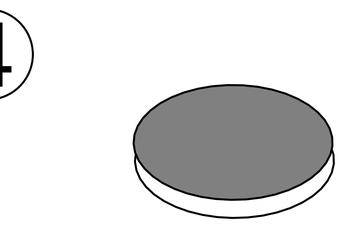



Step 3

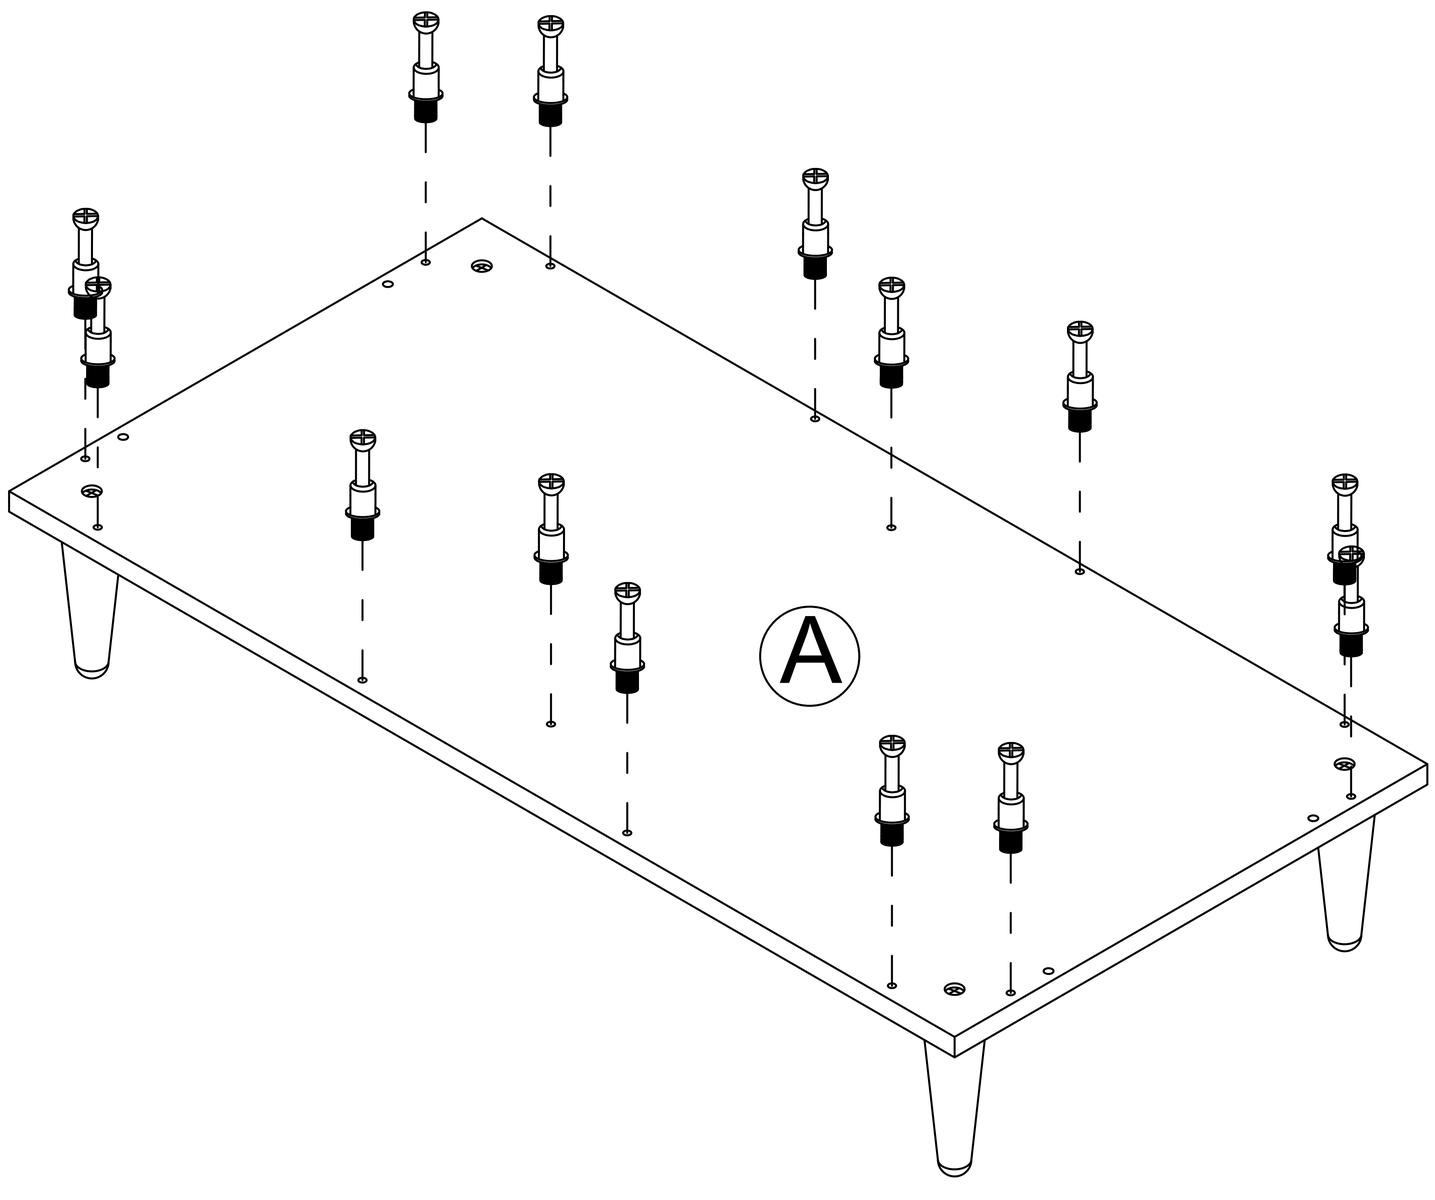

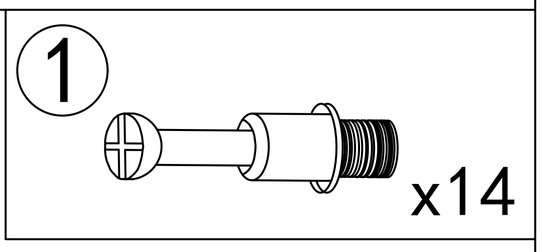



Step 4

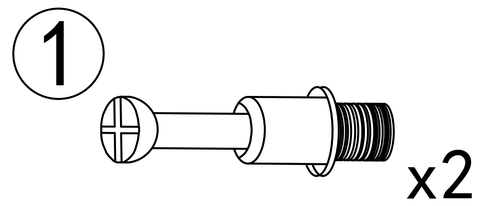

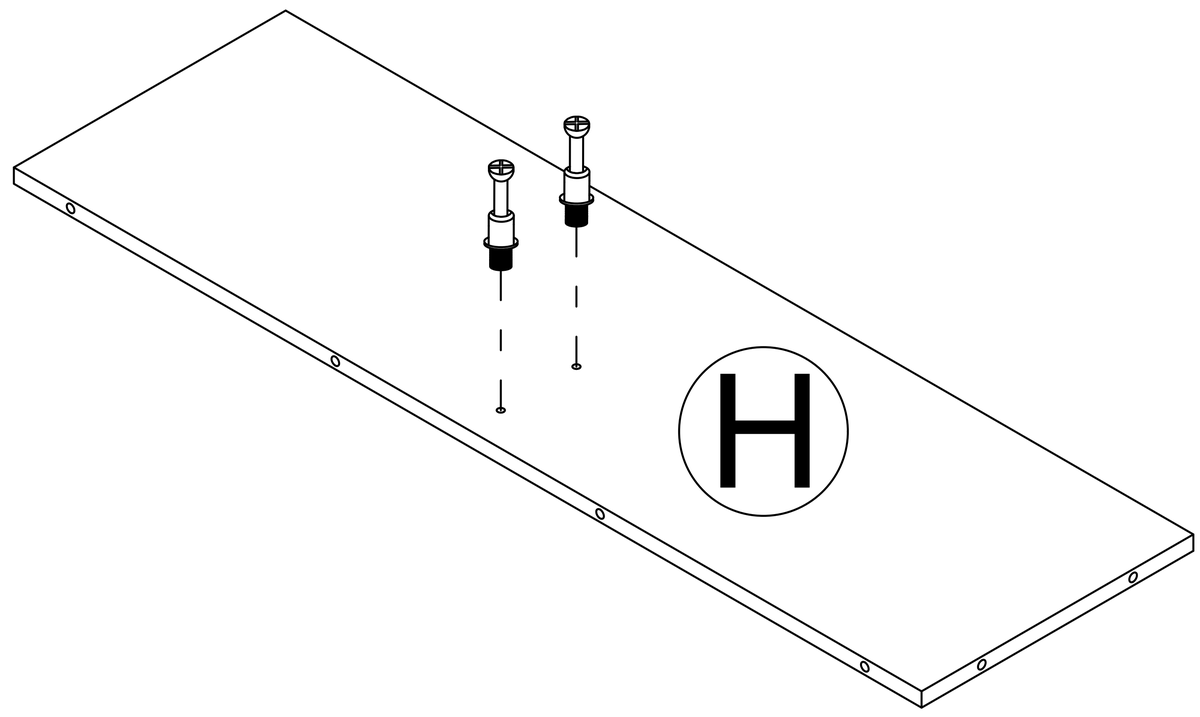



Step 5

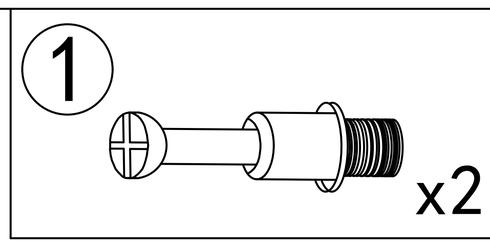

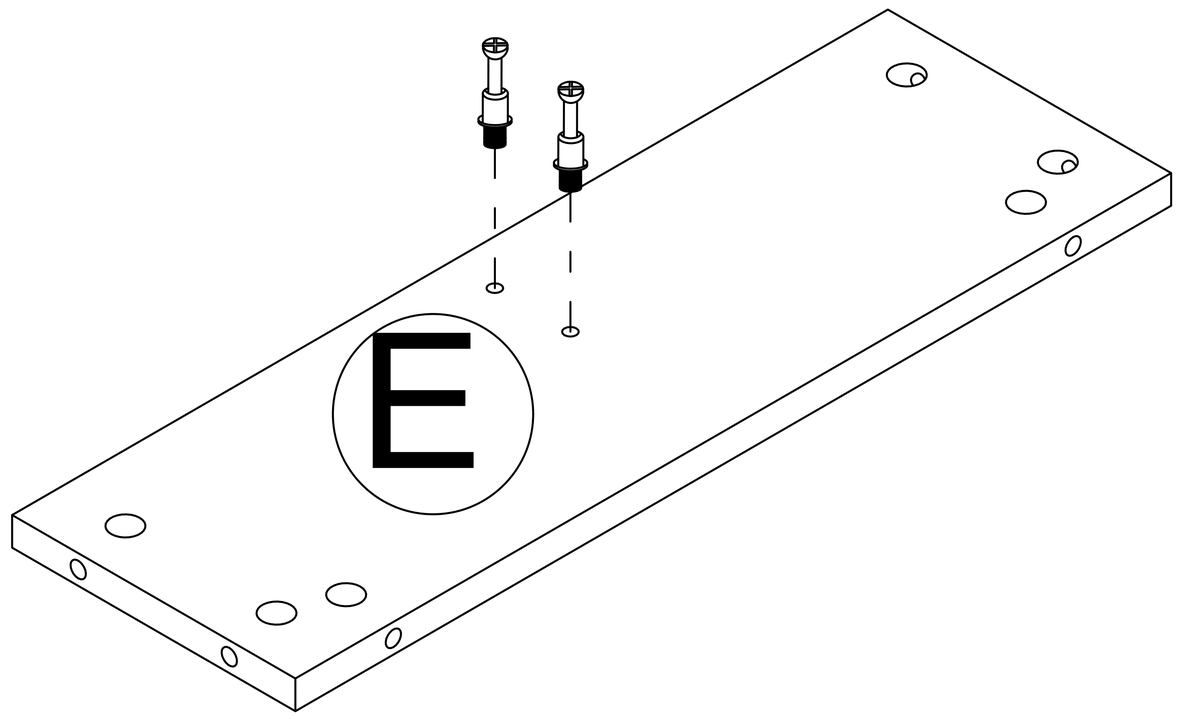



Step 6

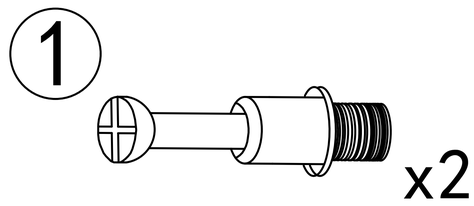

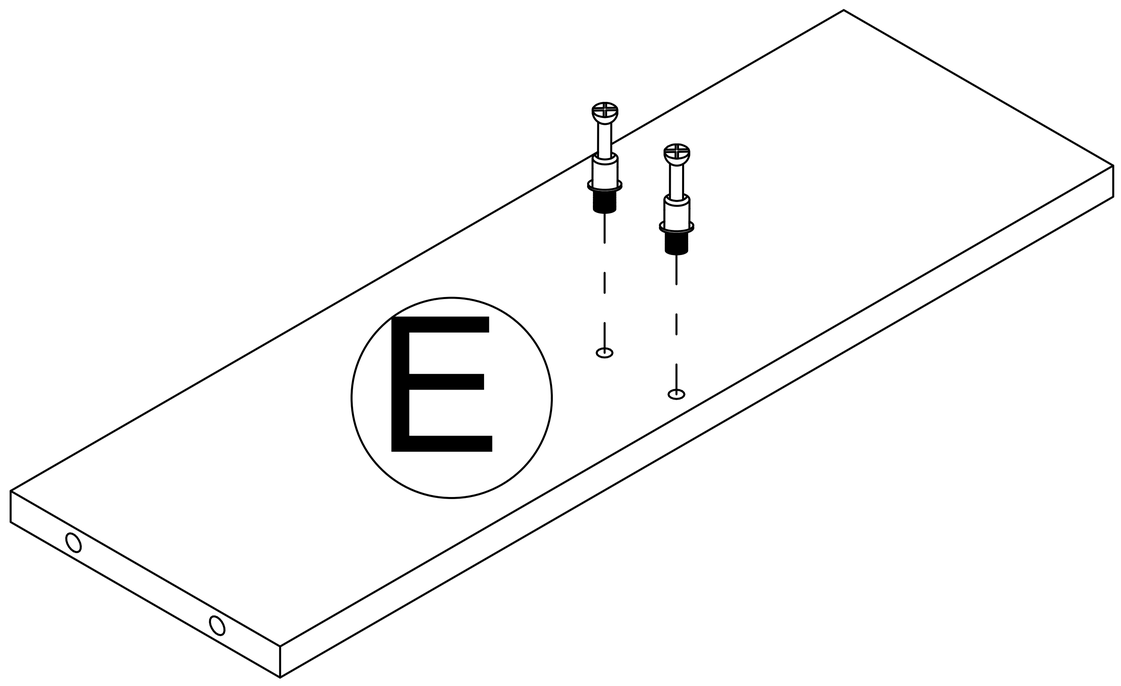

Step 7

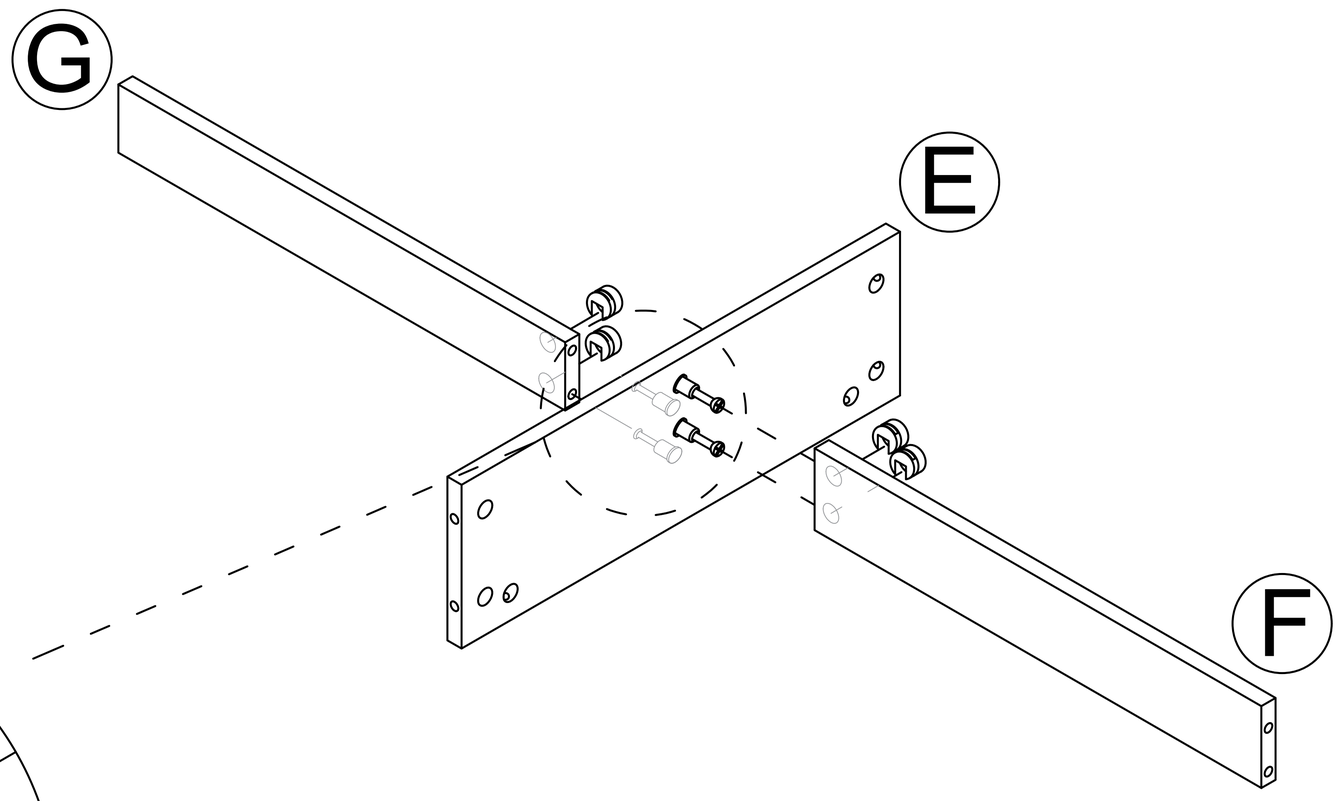


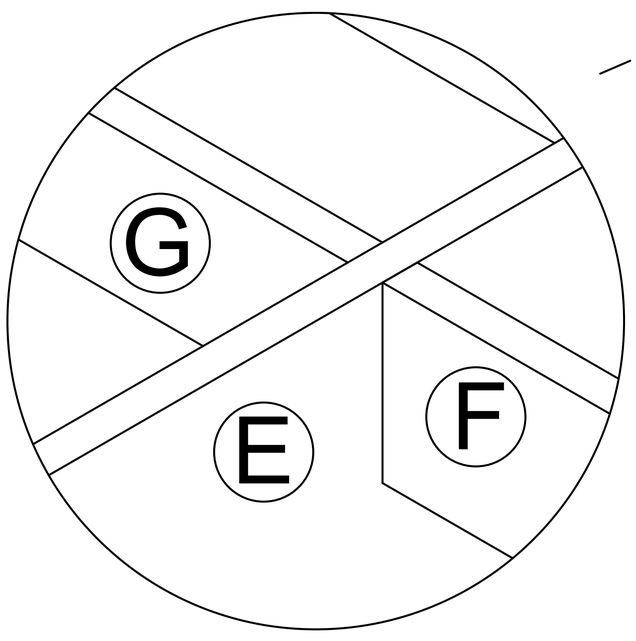


After installation, the F plate is level with the E plate.


Step 8

2  x2

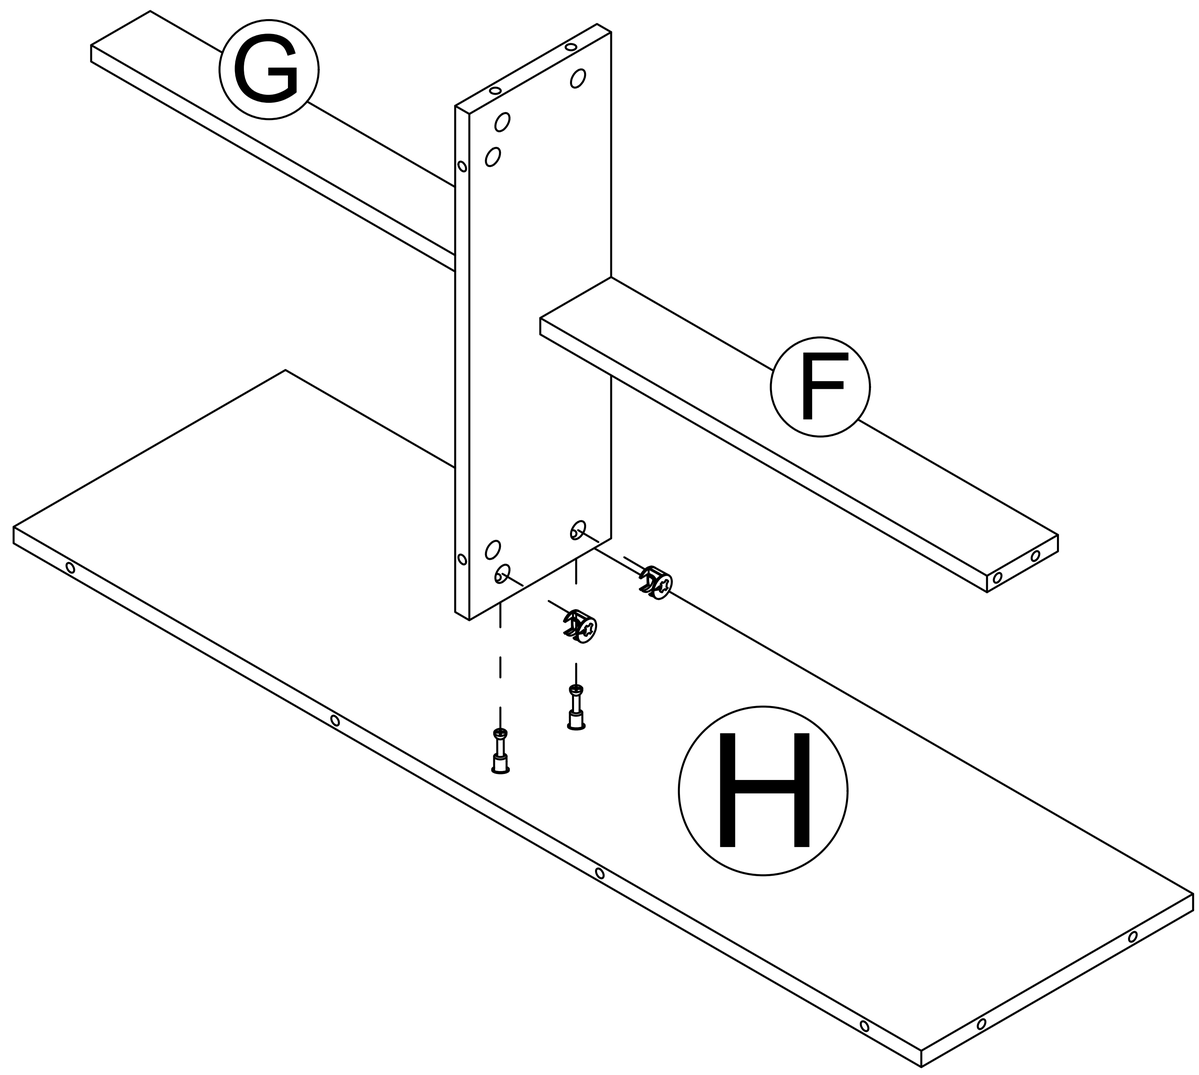



Step 9

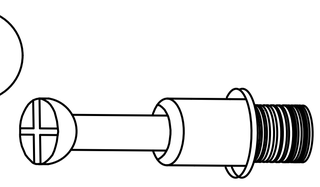1  x2

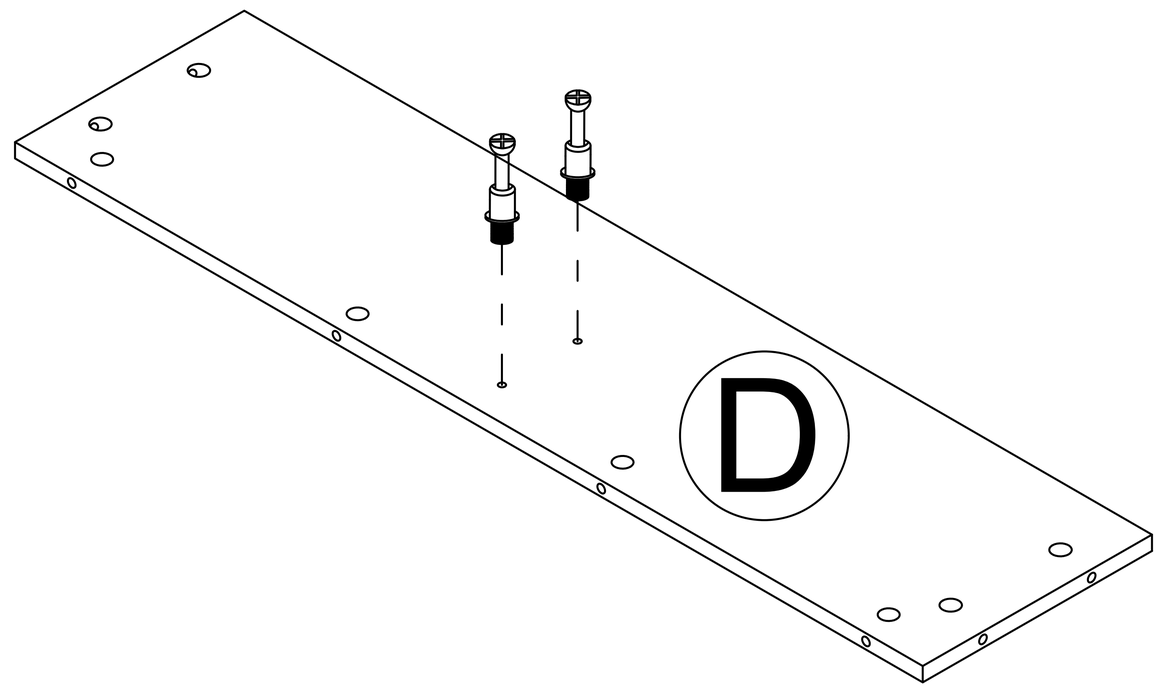



Step 10

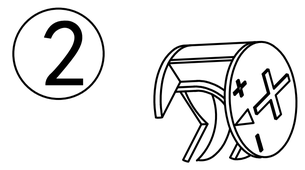

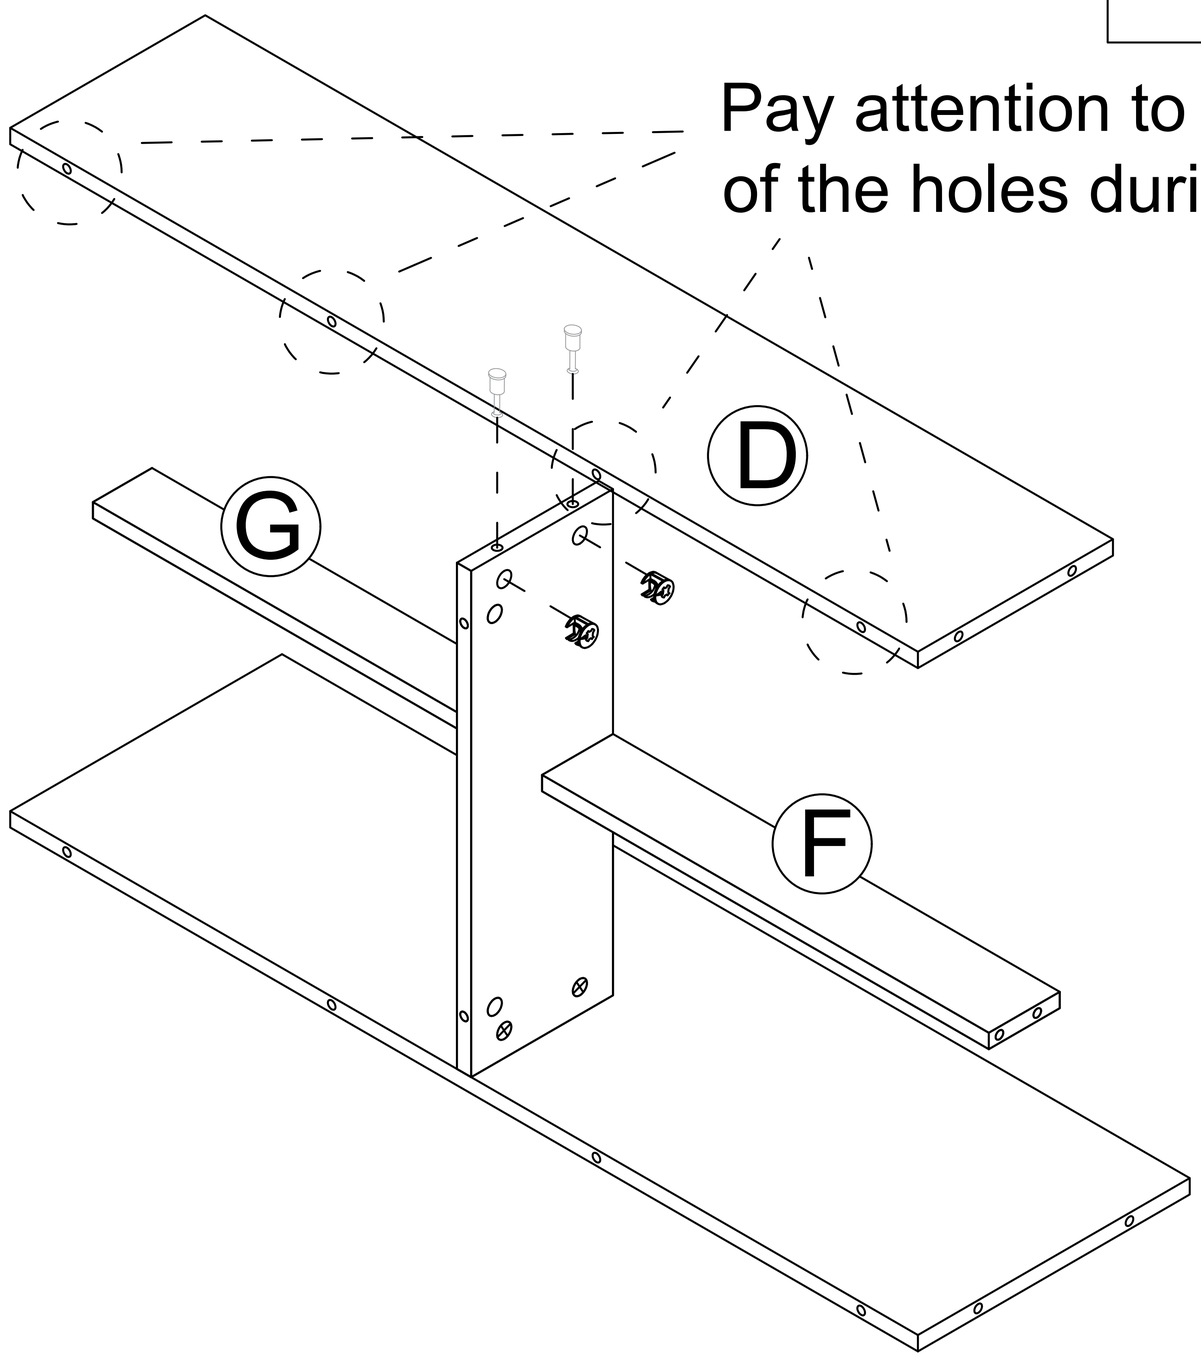


Step 11

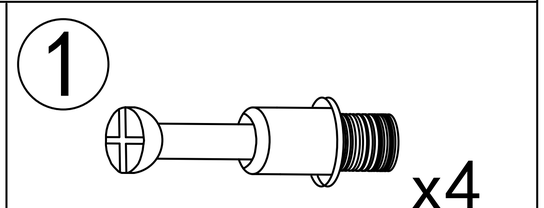

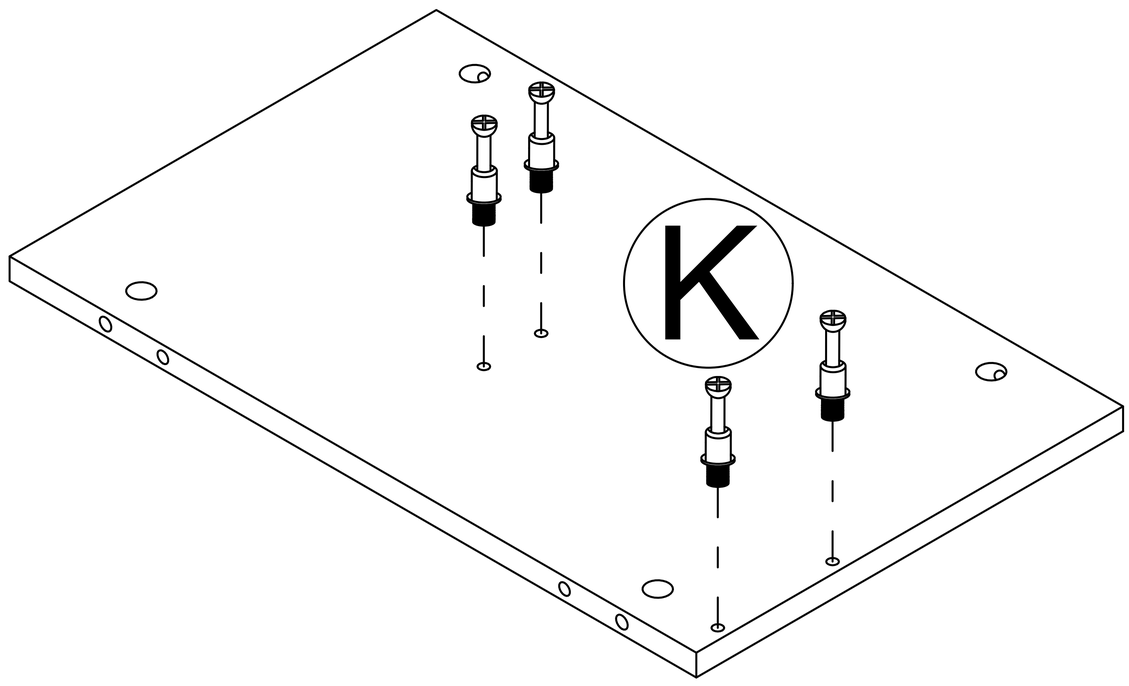


Step 12

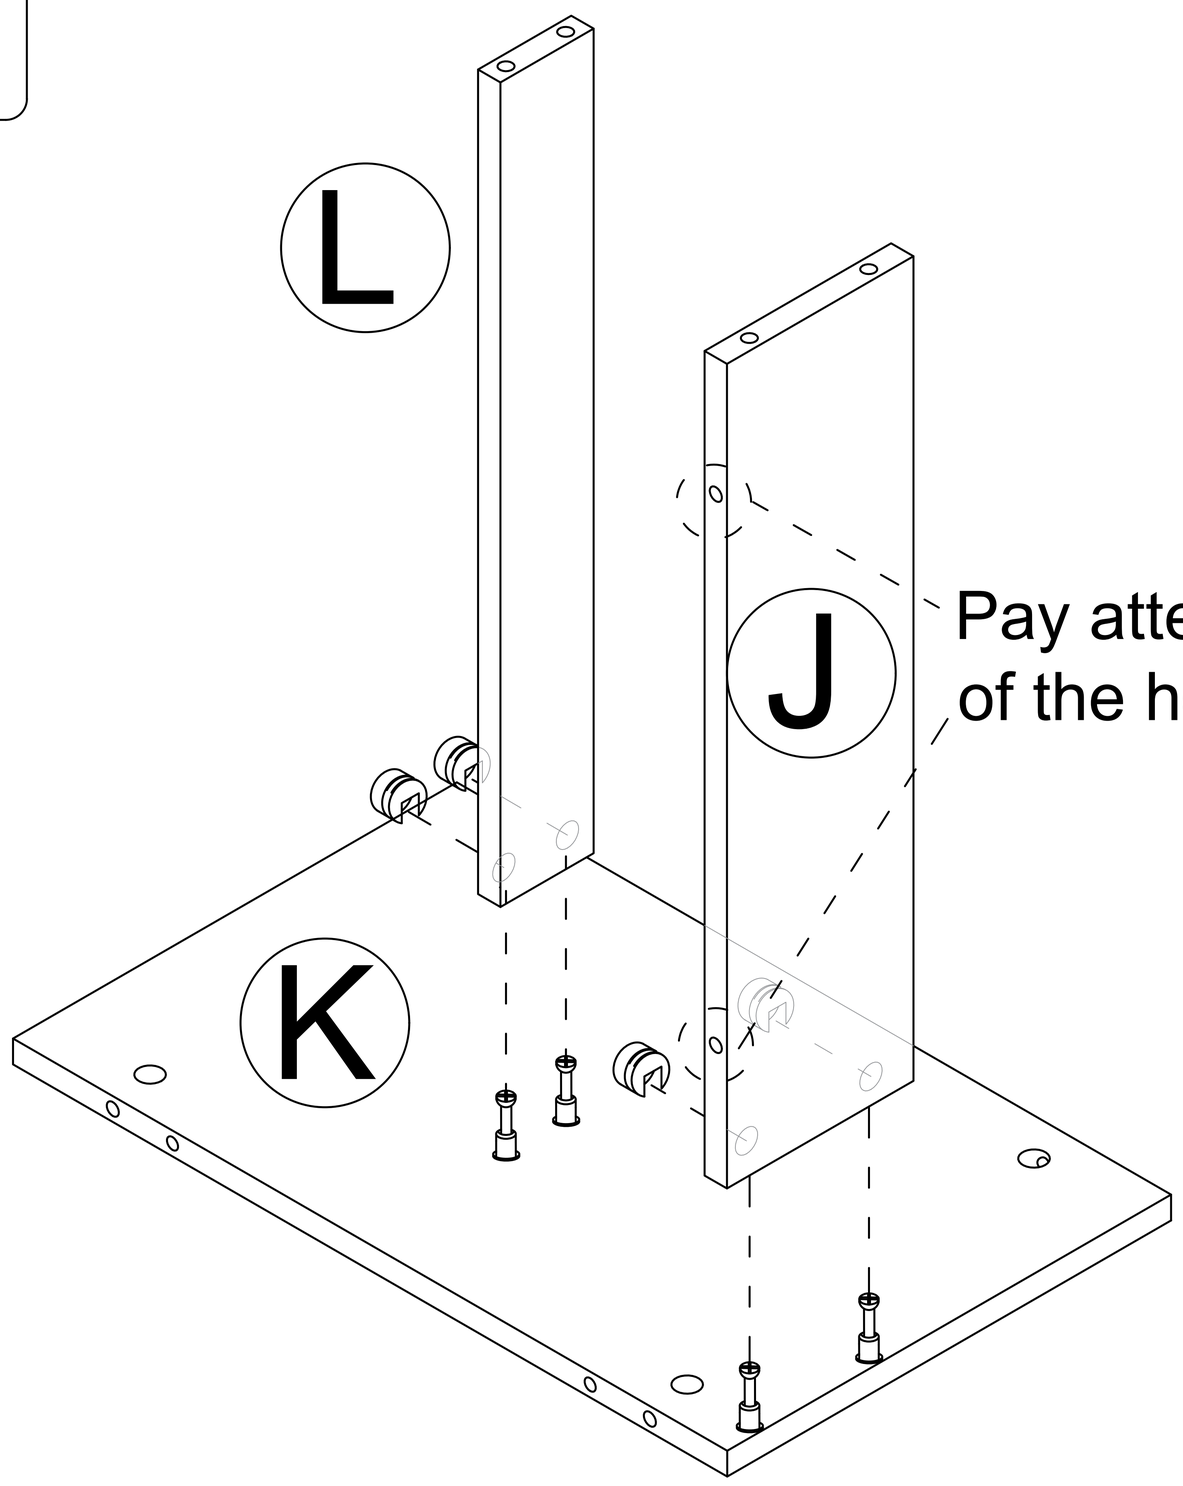

Pay attention to the orientation of the holes during installation

2 x4


Step 13

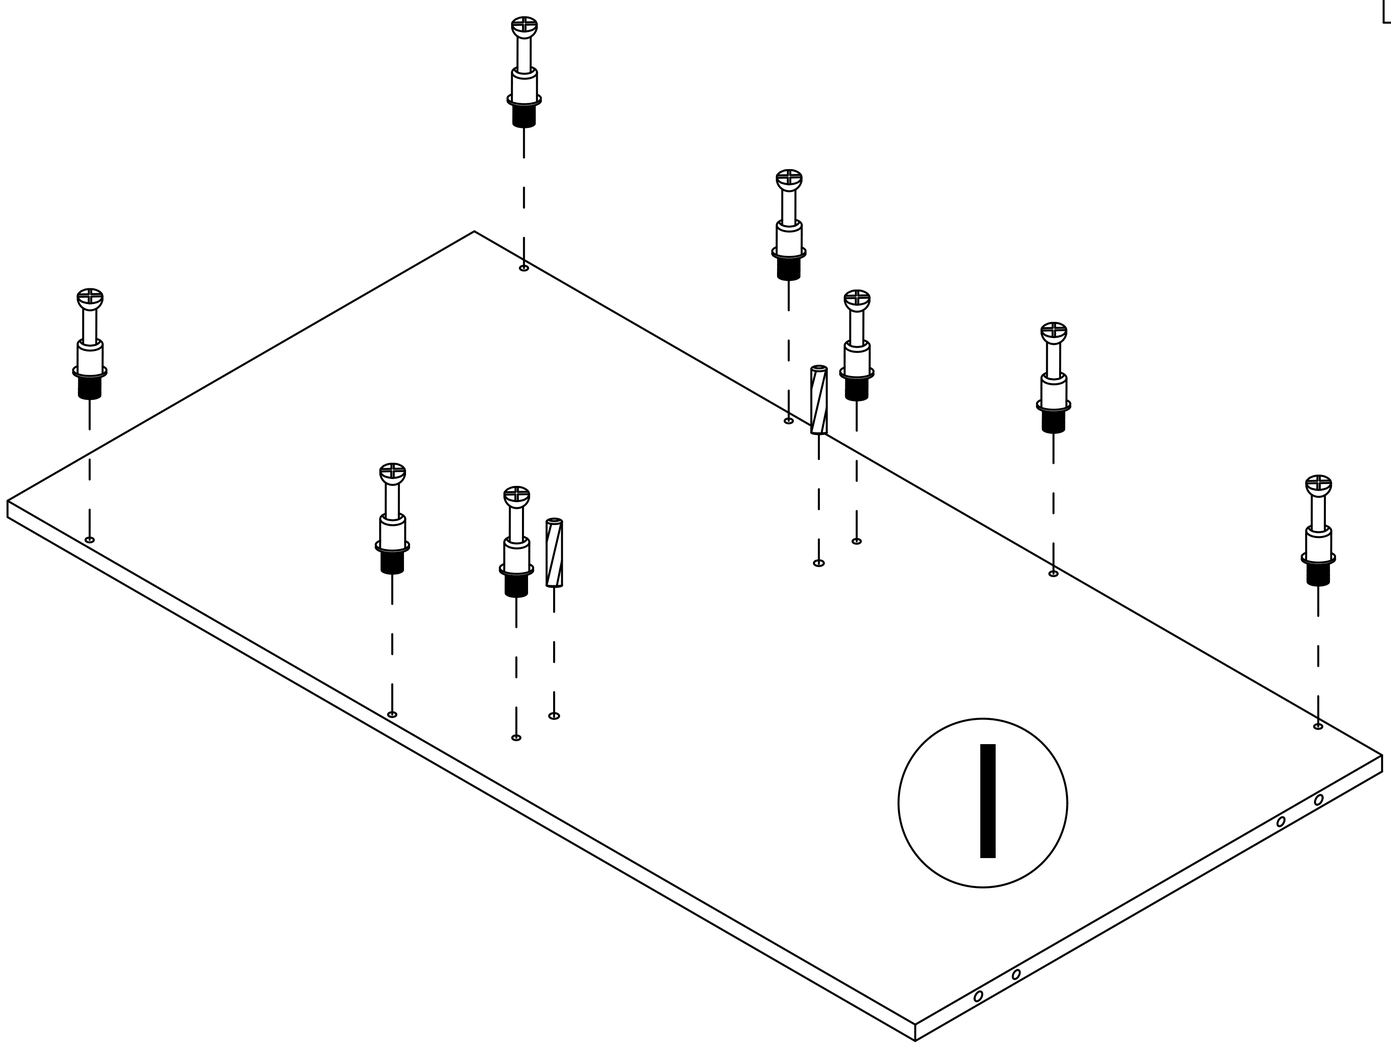


1 x8

3 x2


Step 14

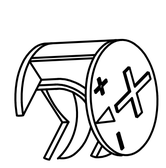2  x4

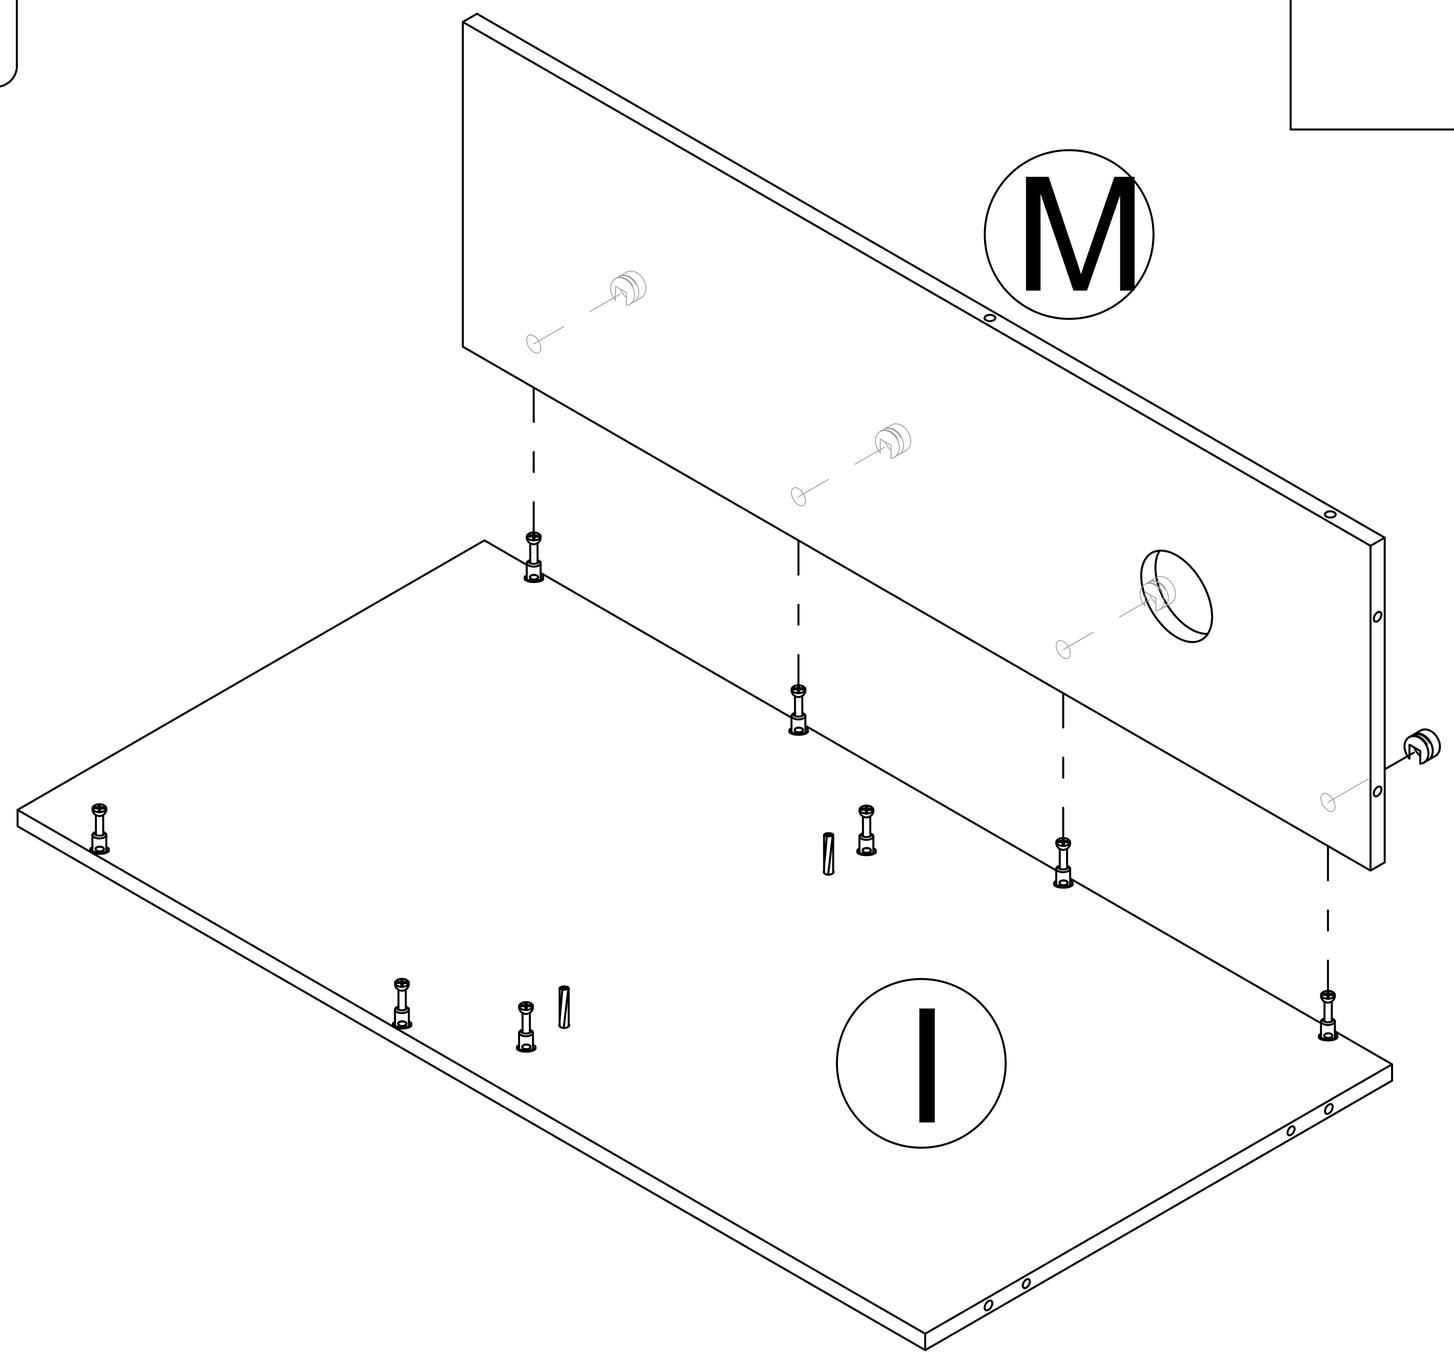



Step 15


2  x4

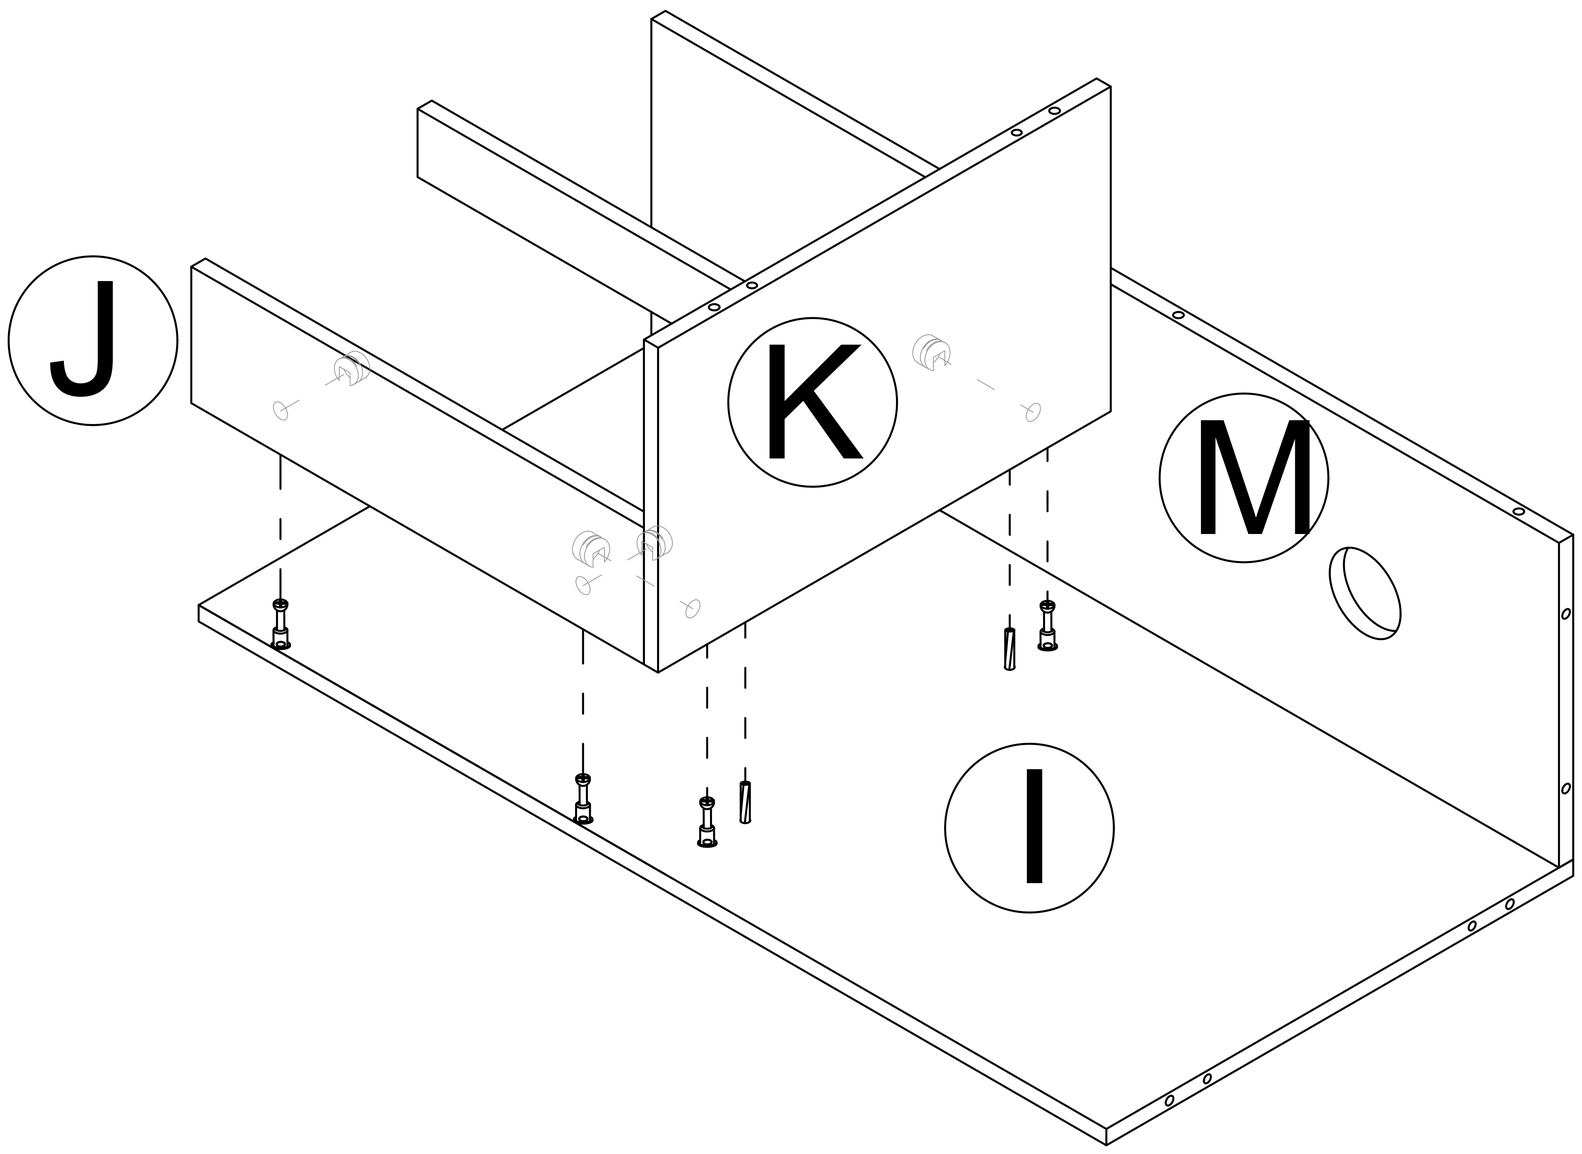


Step 16

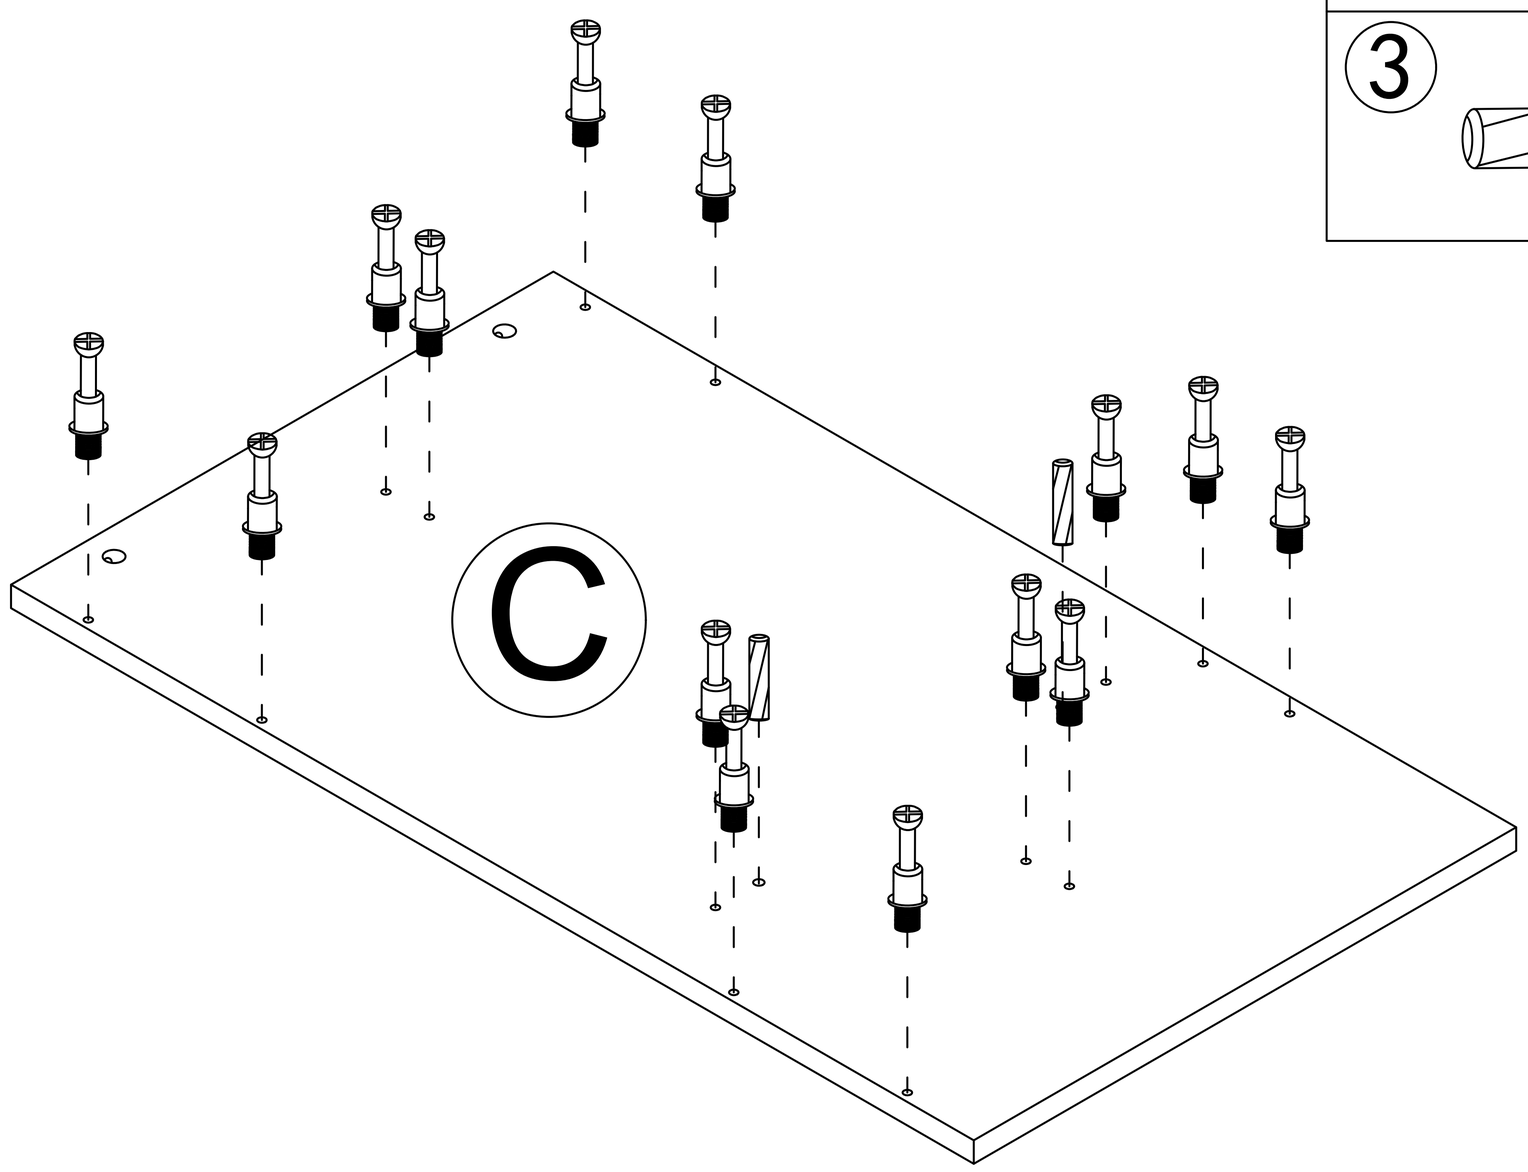


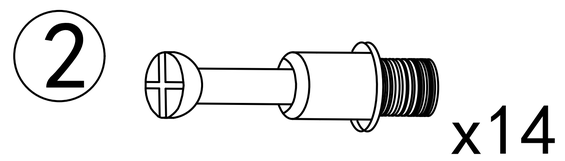

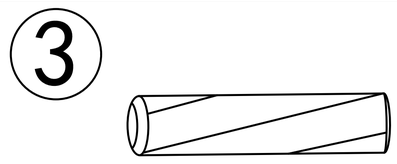


Step 17

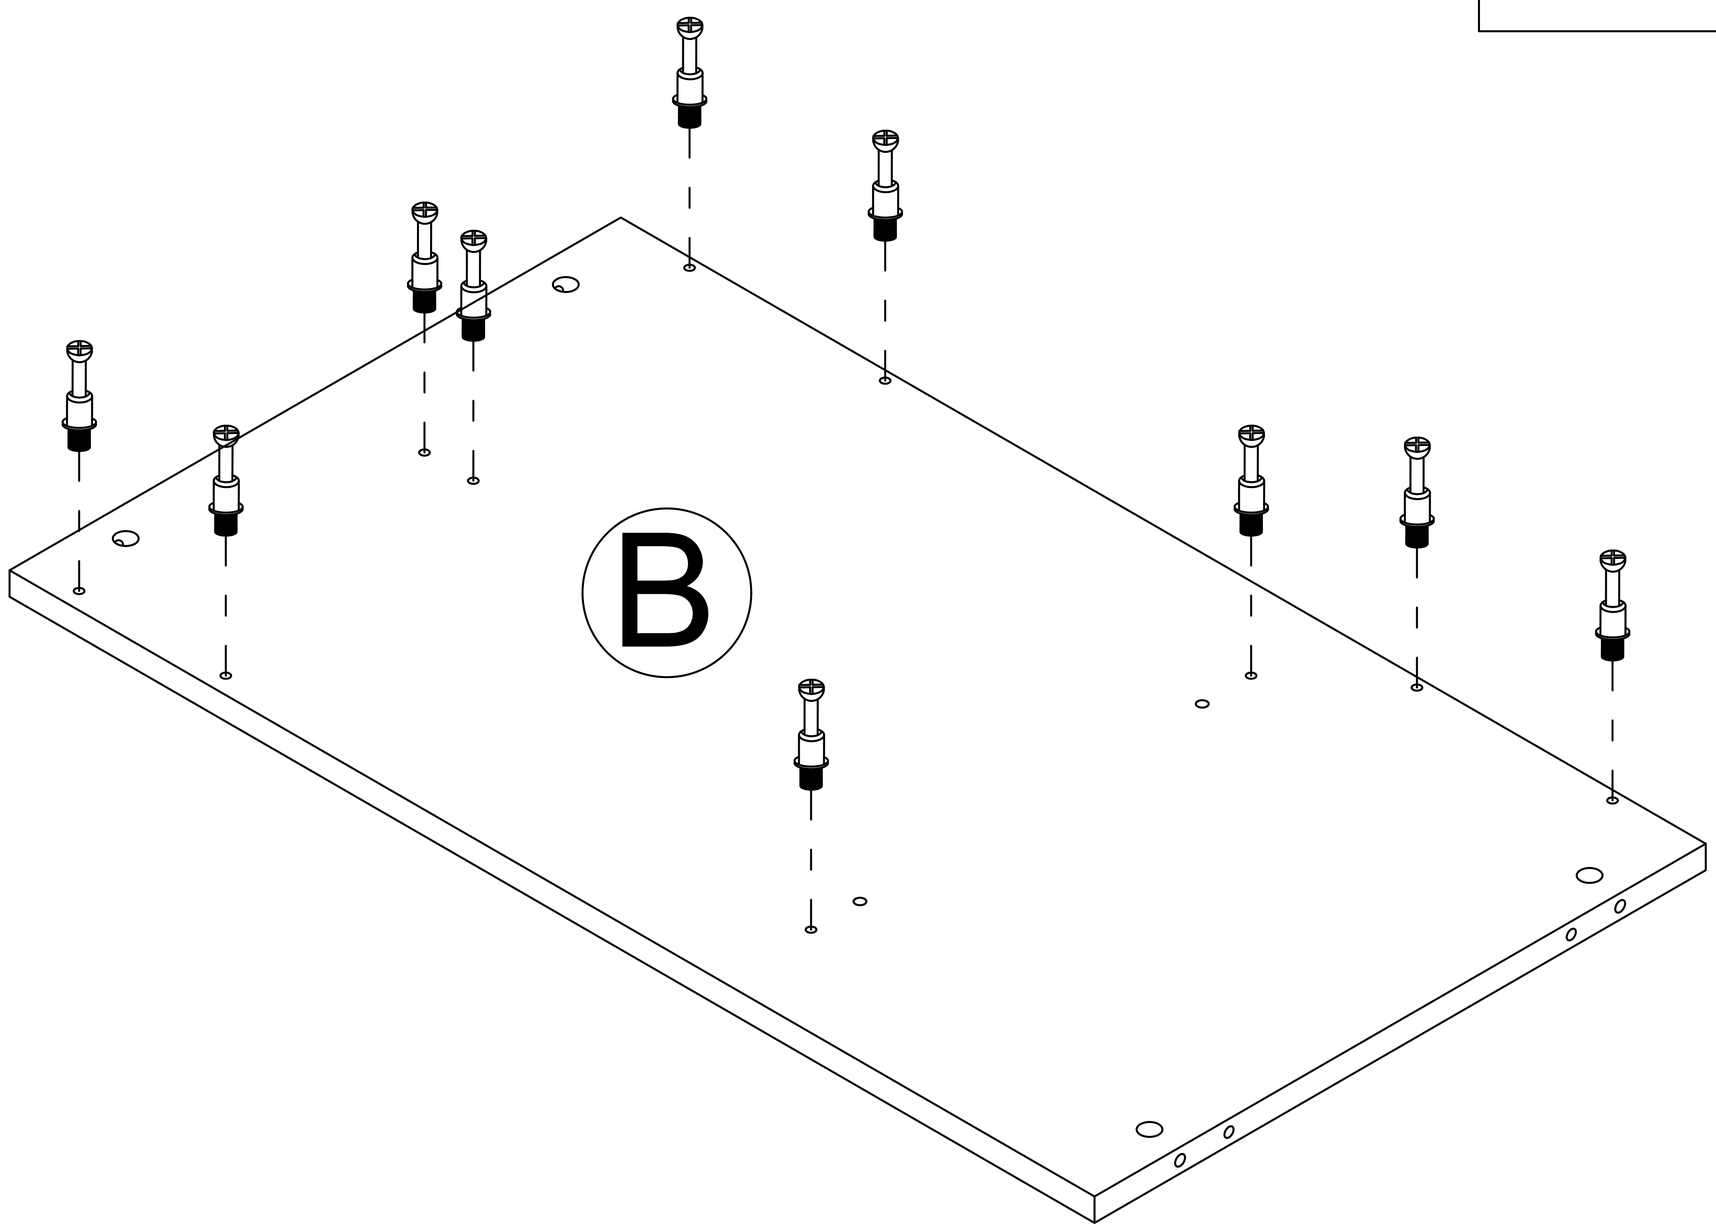

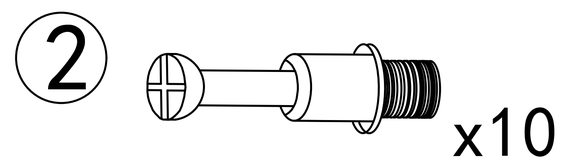


Step 18

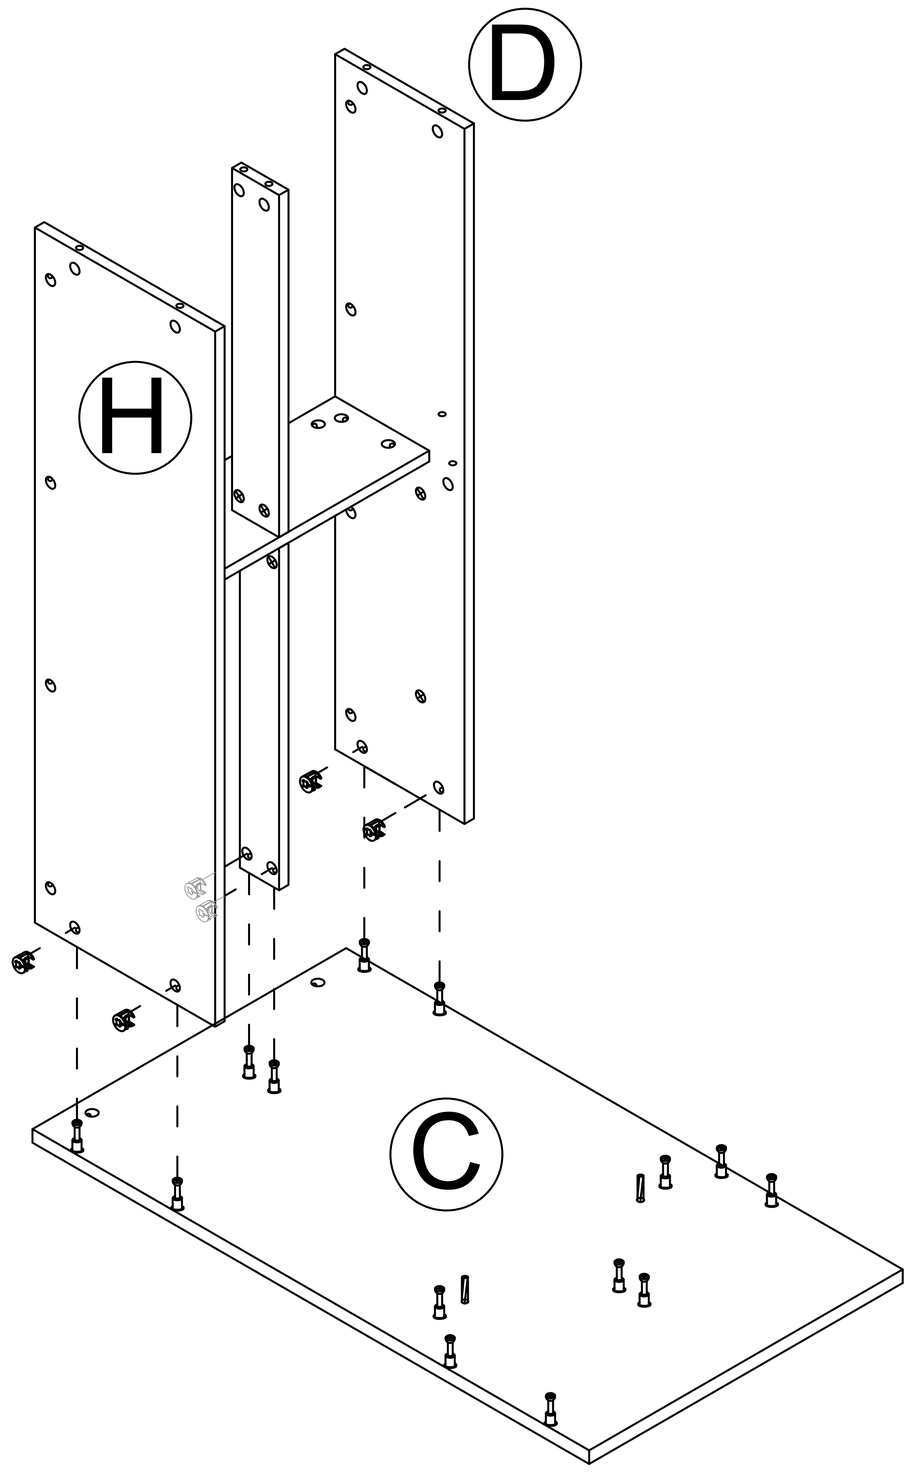

2  x6

Step 19

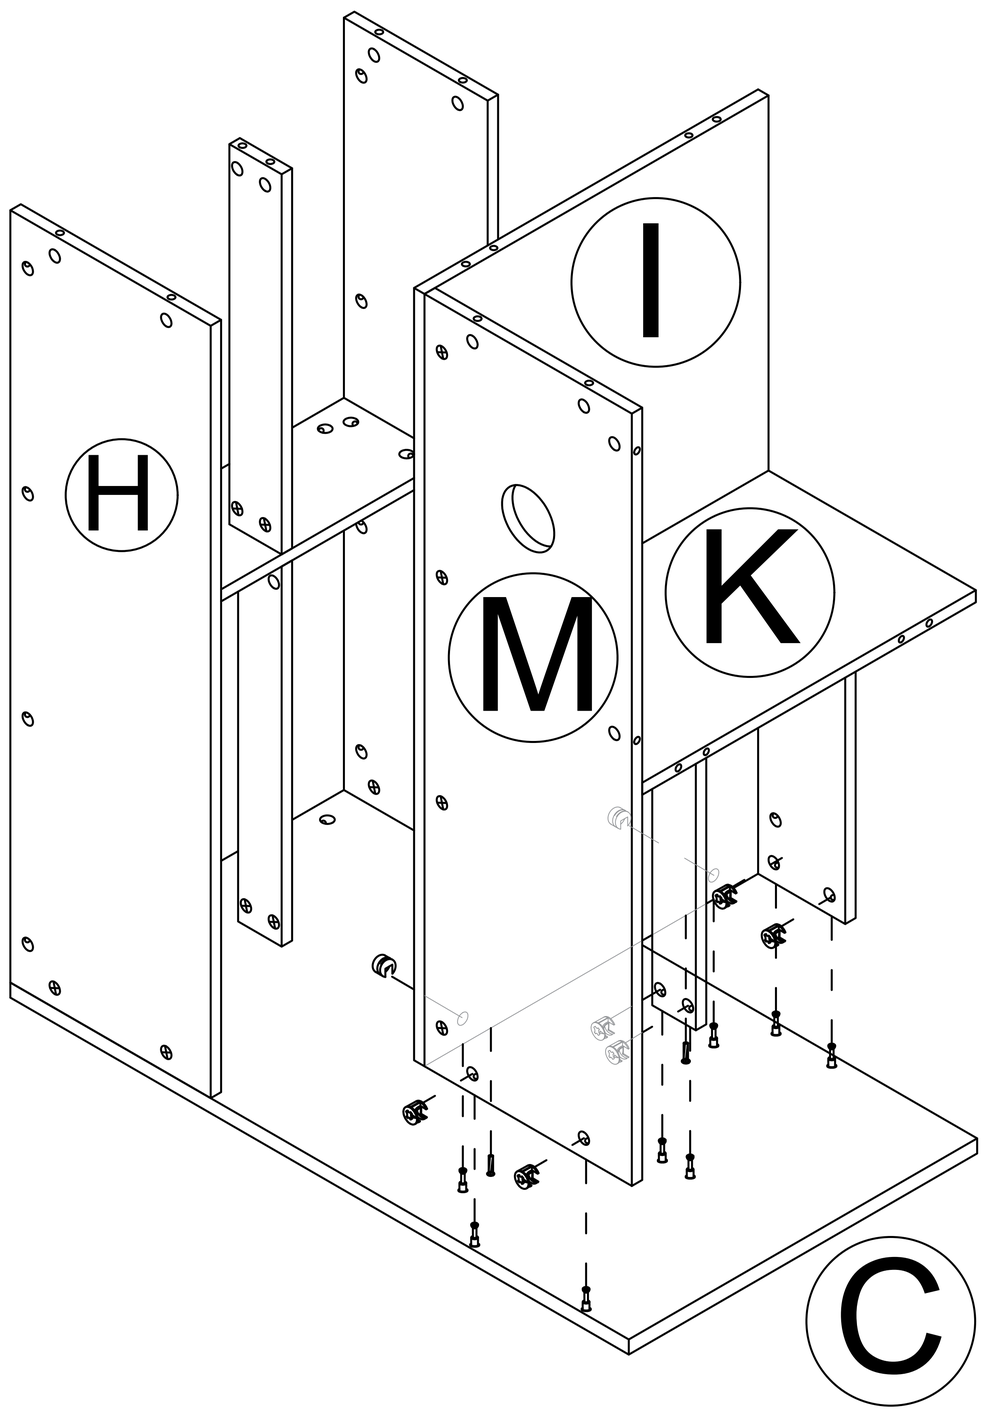


2  x8

Step 20

3




x2

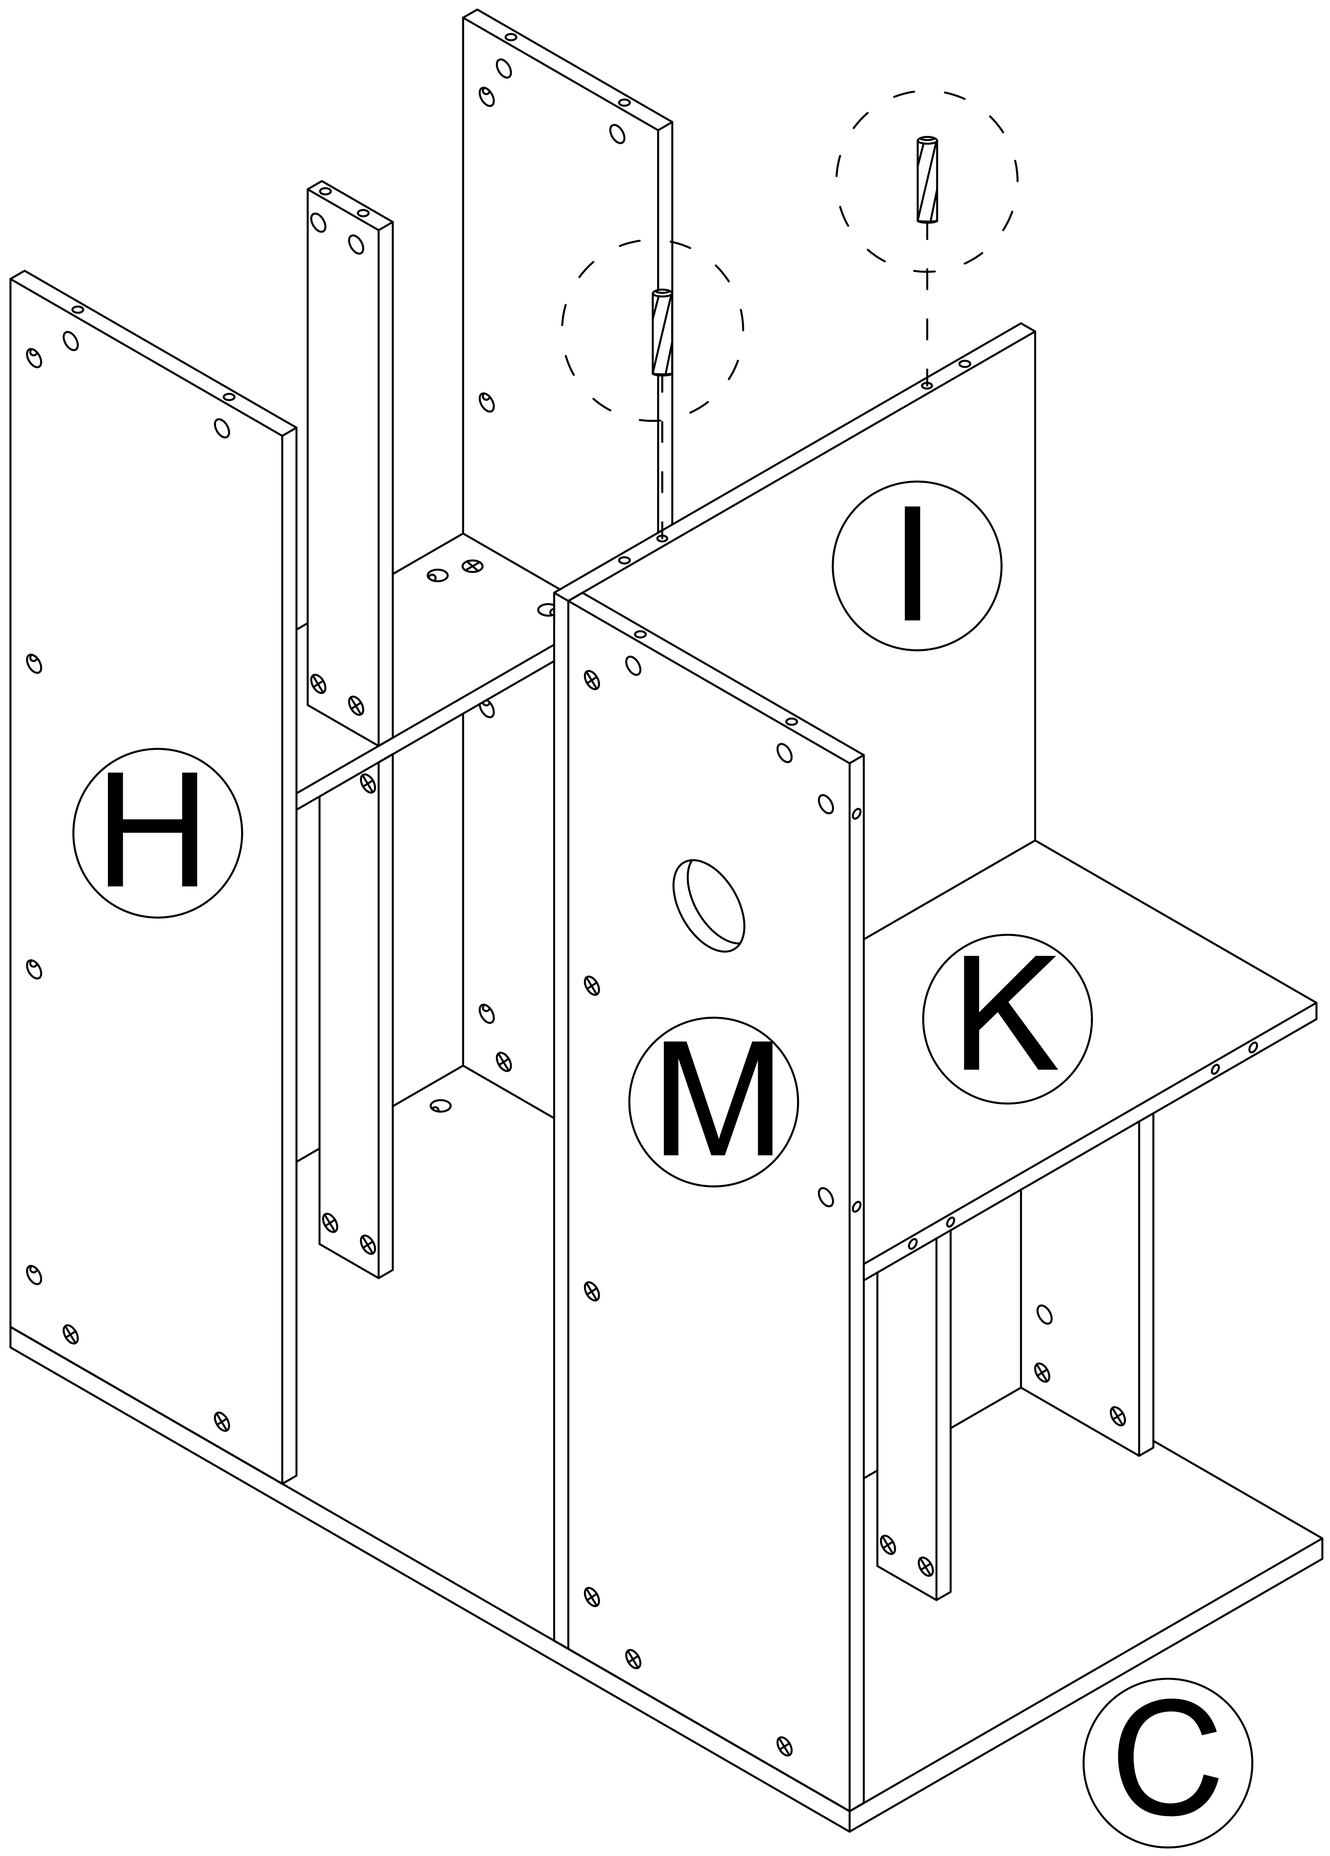



Step 21

2  x10

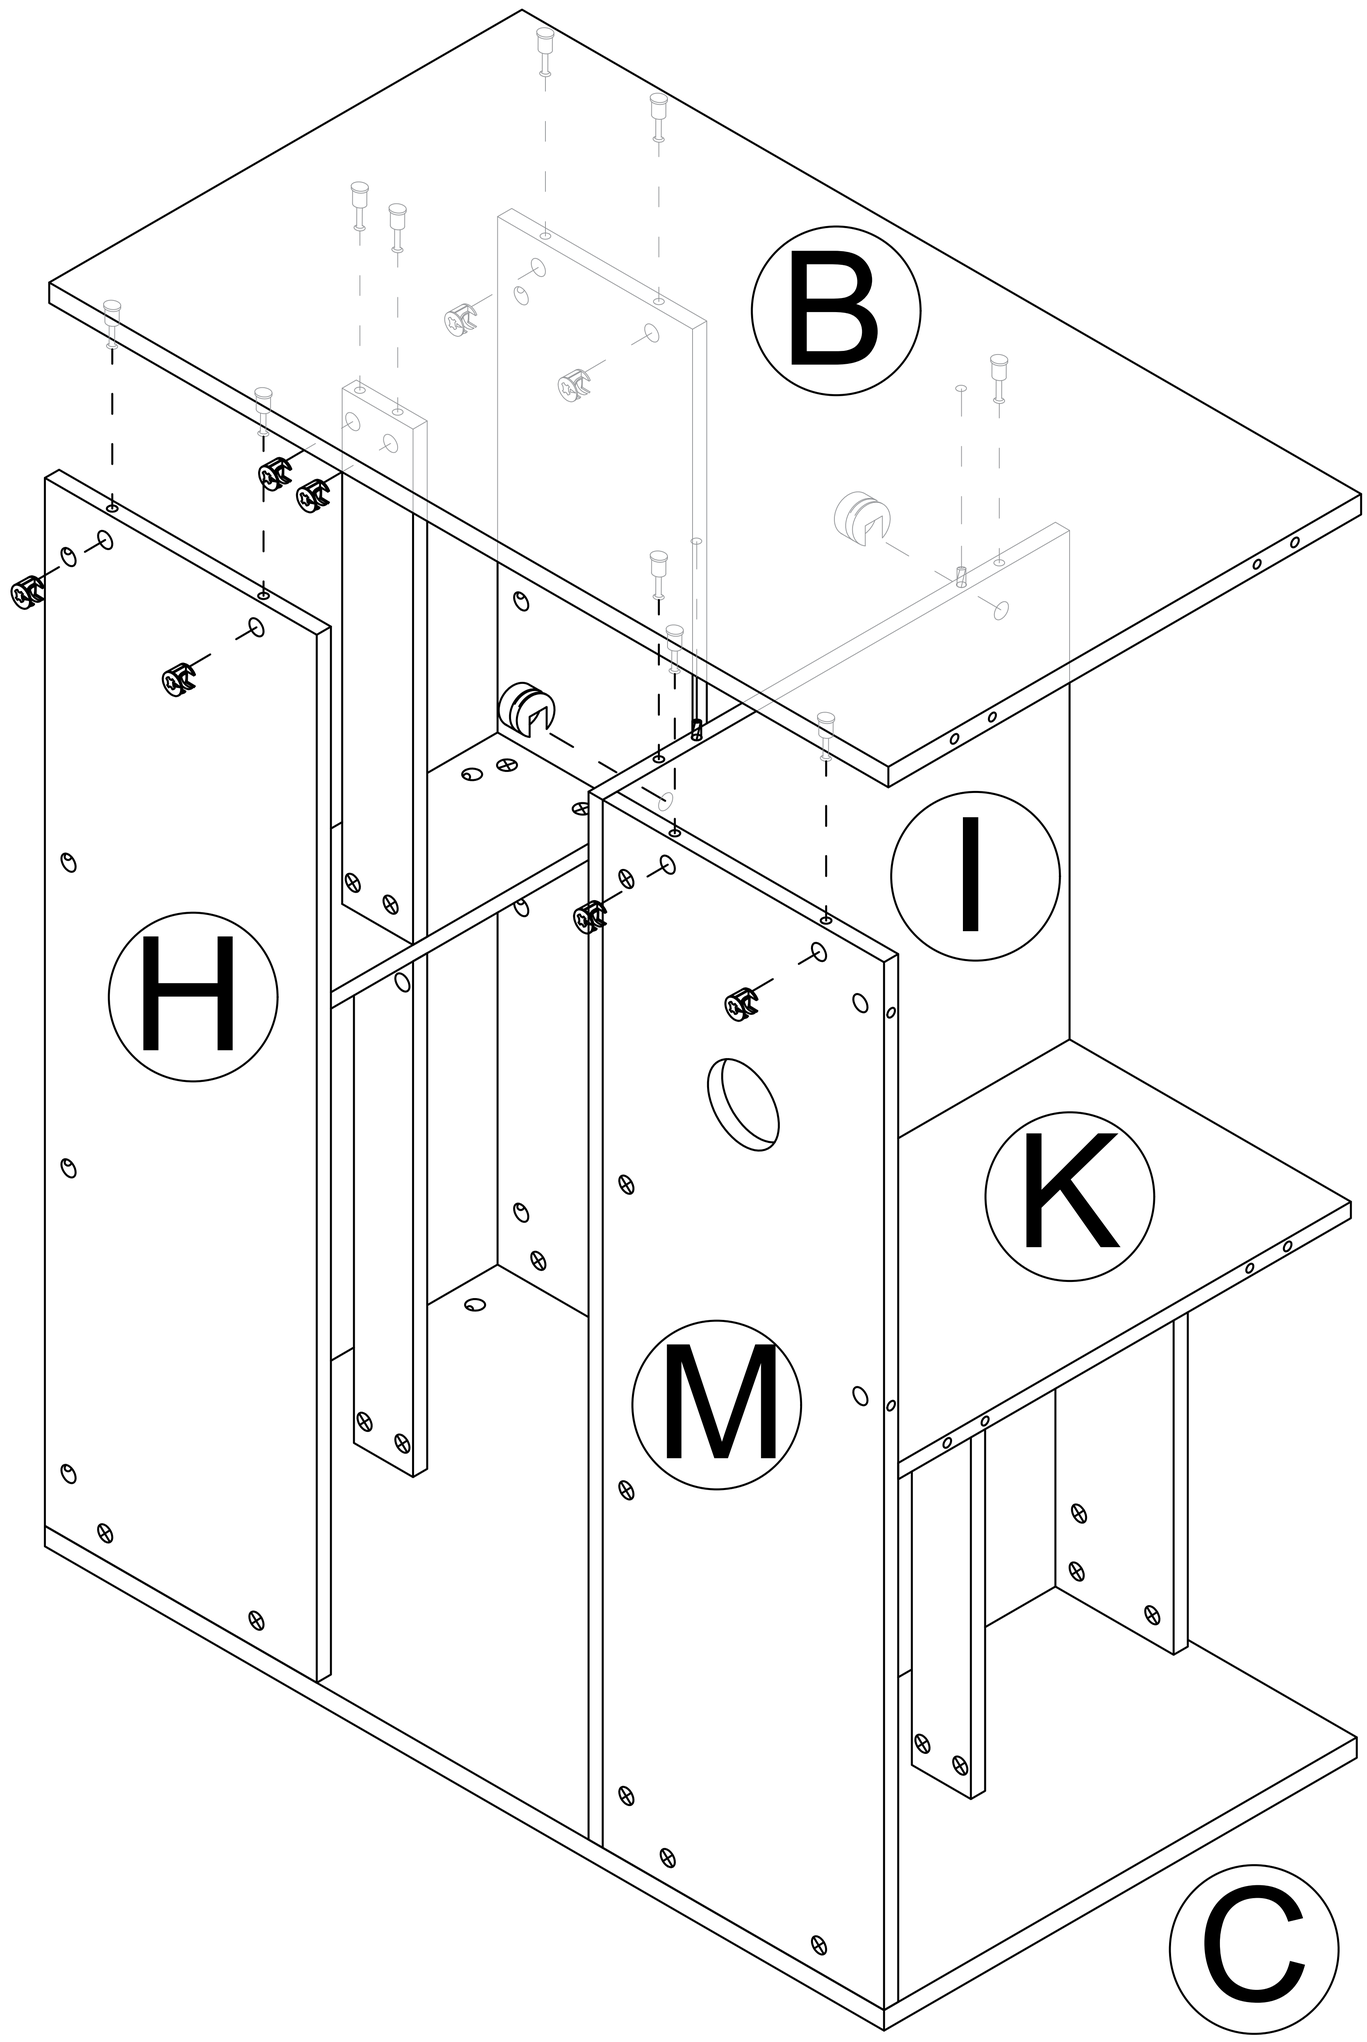



Step 22

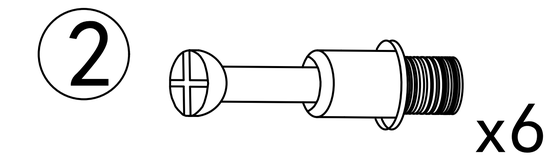

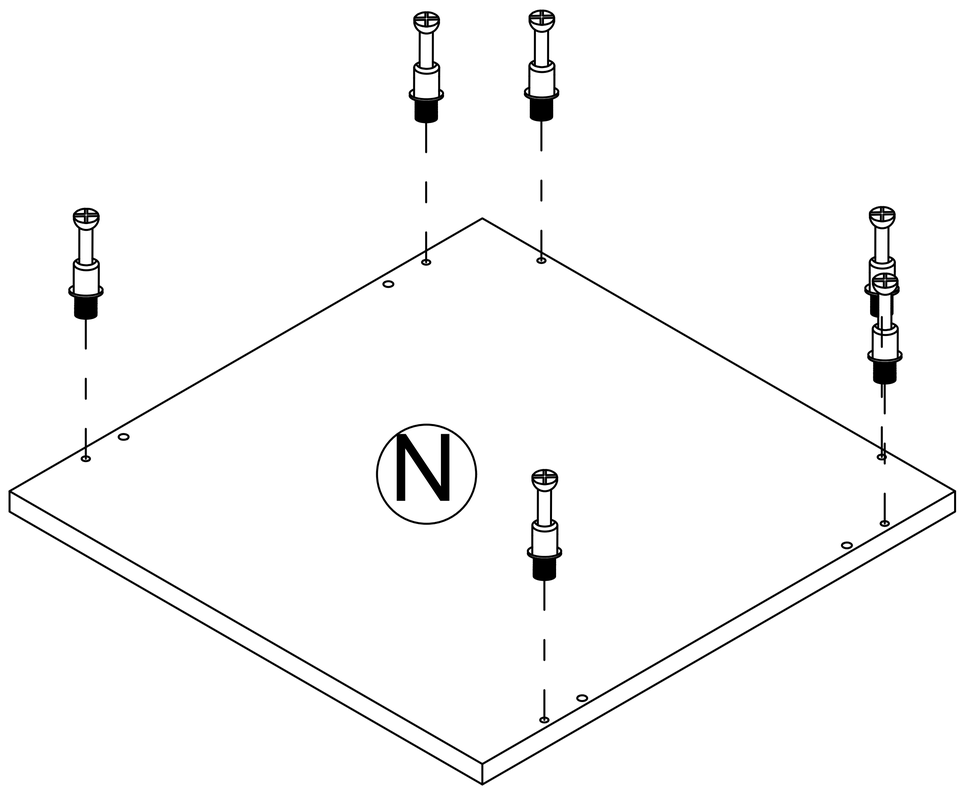


Step 23

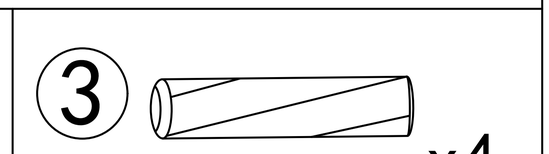

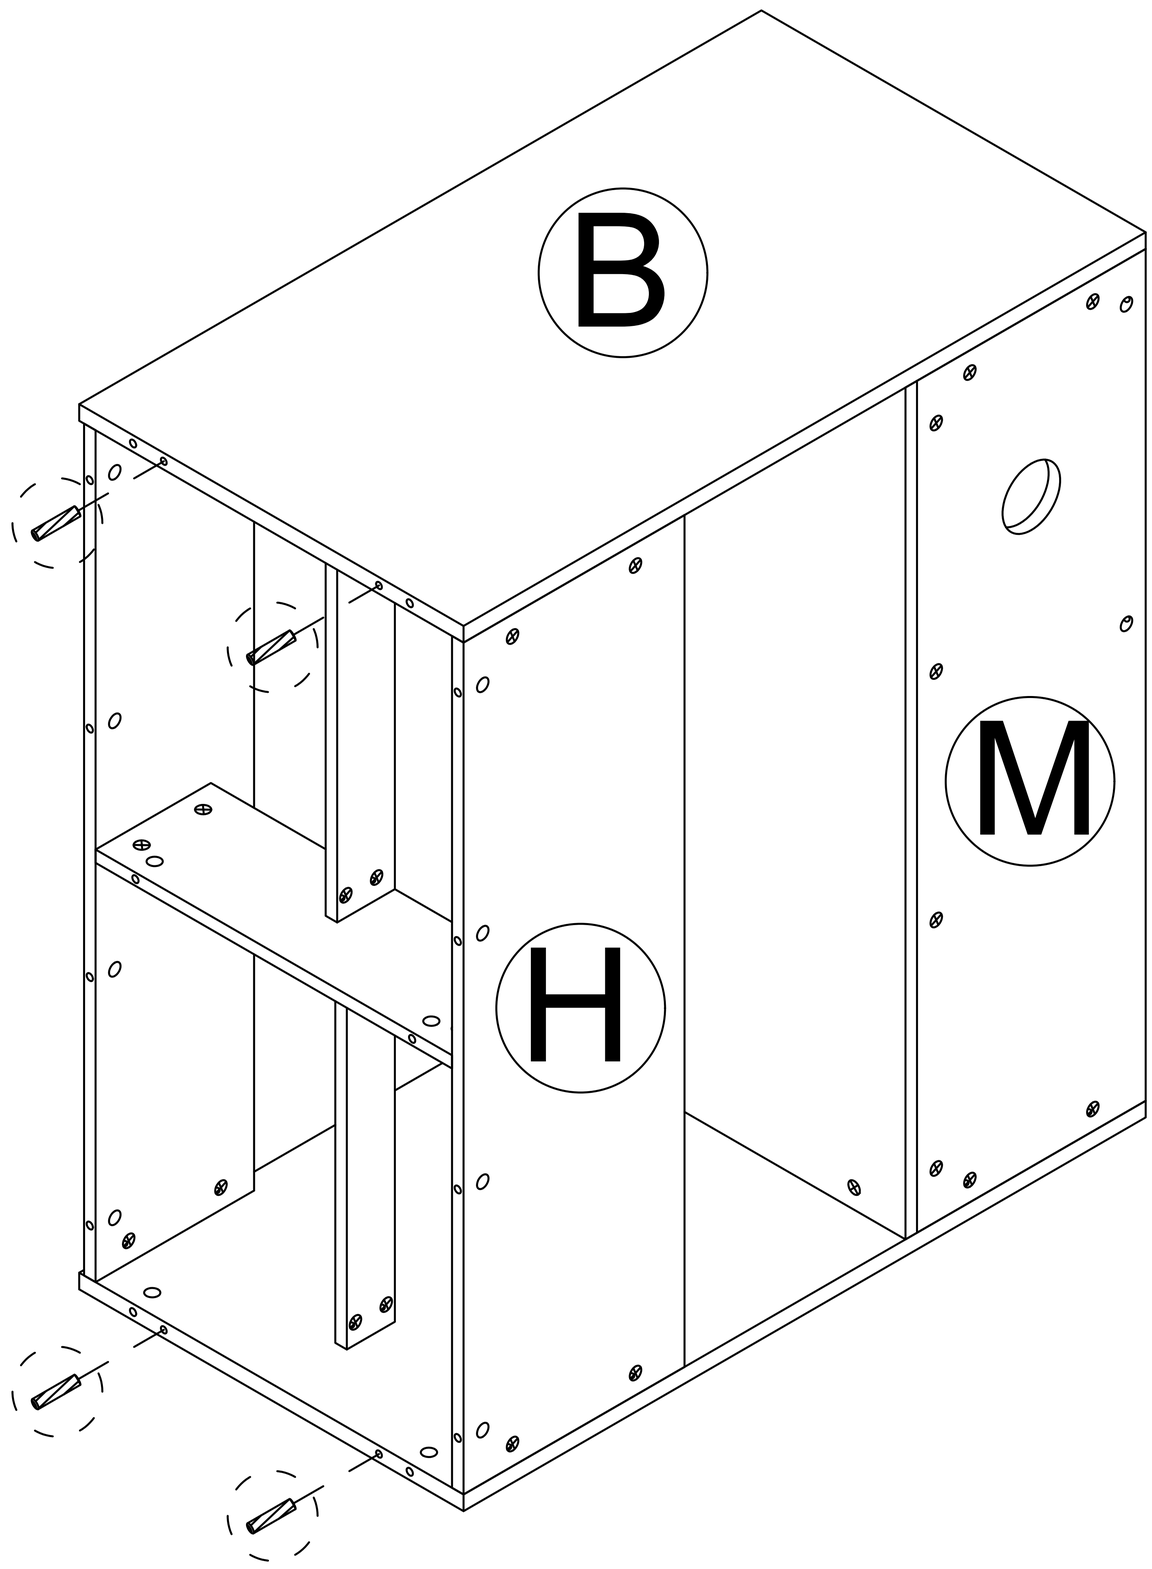


Step 24



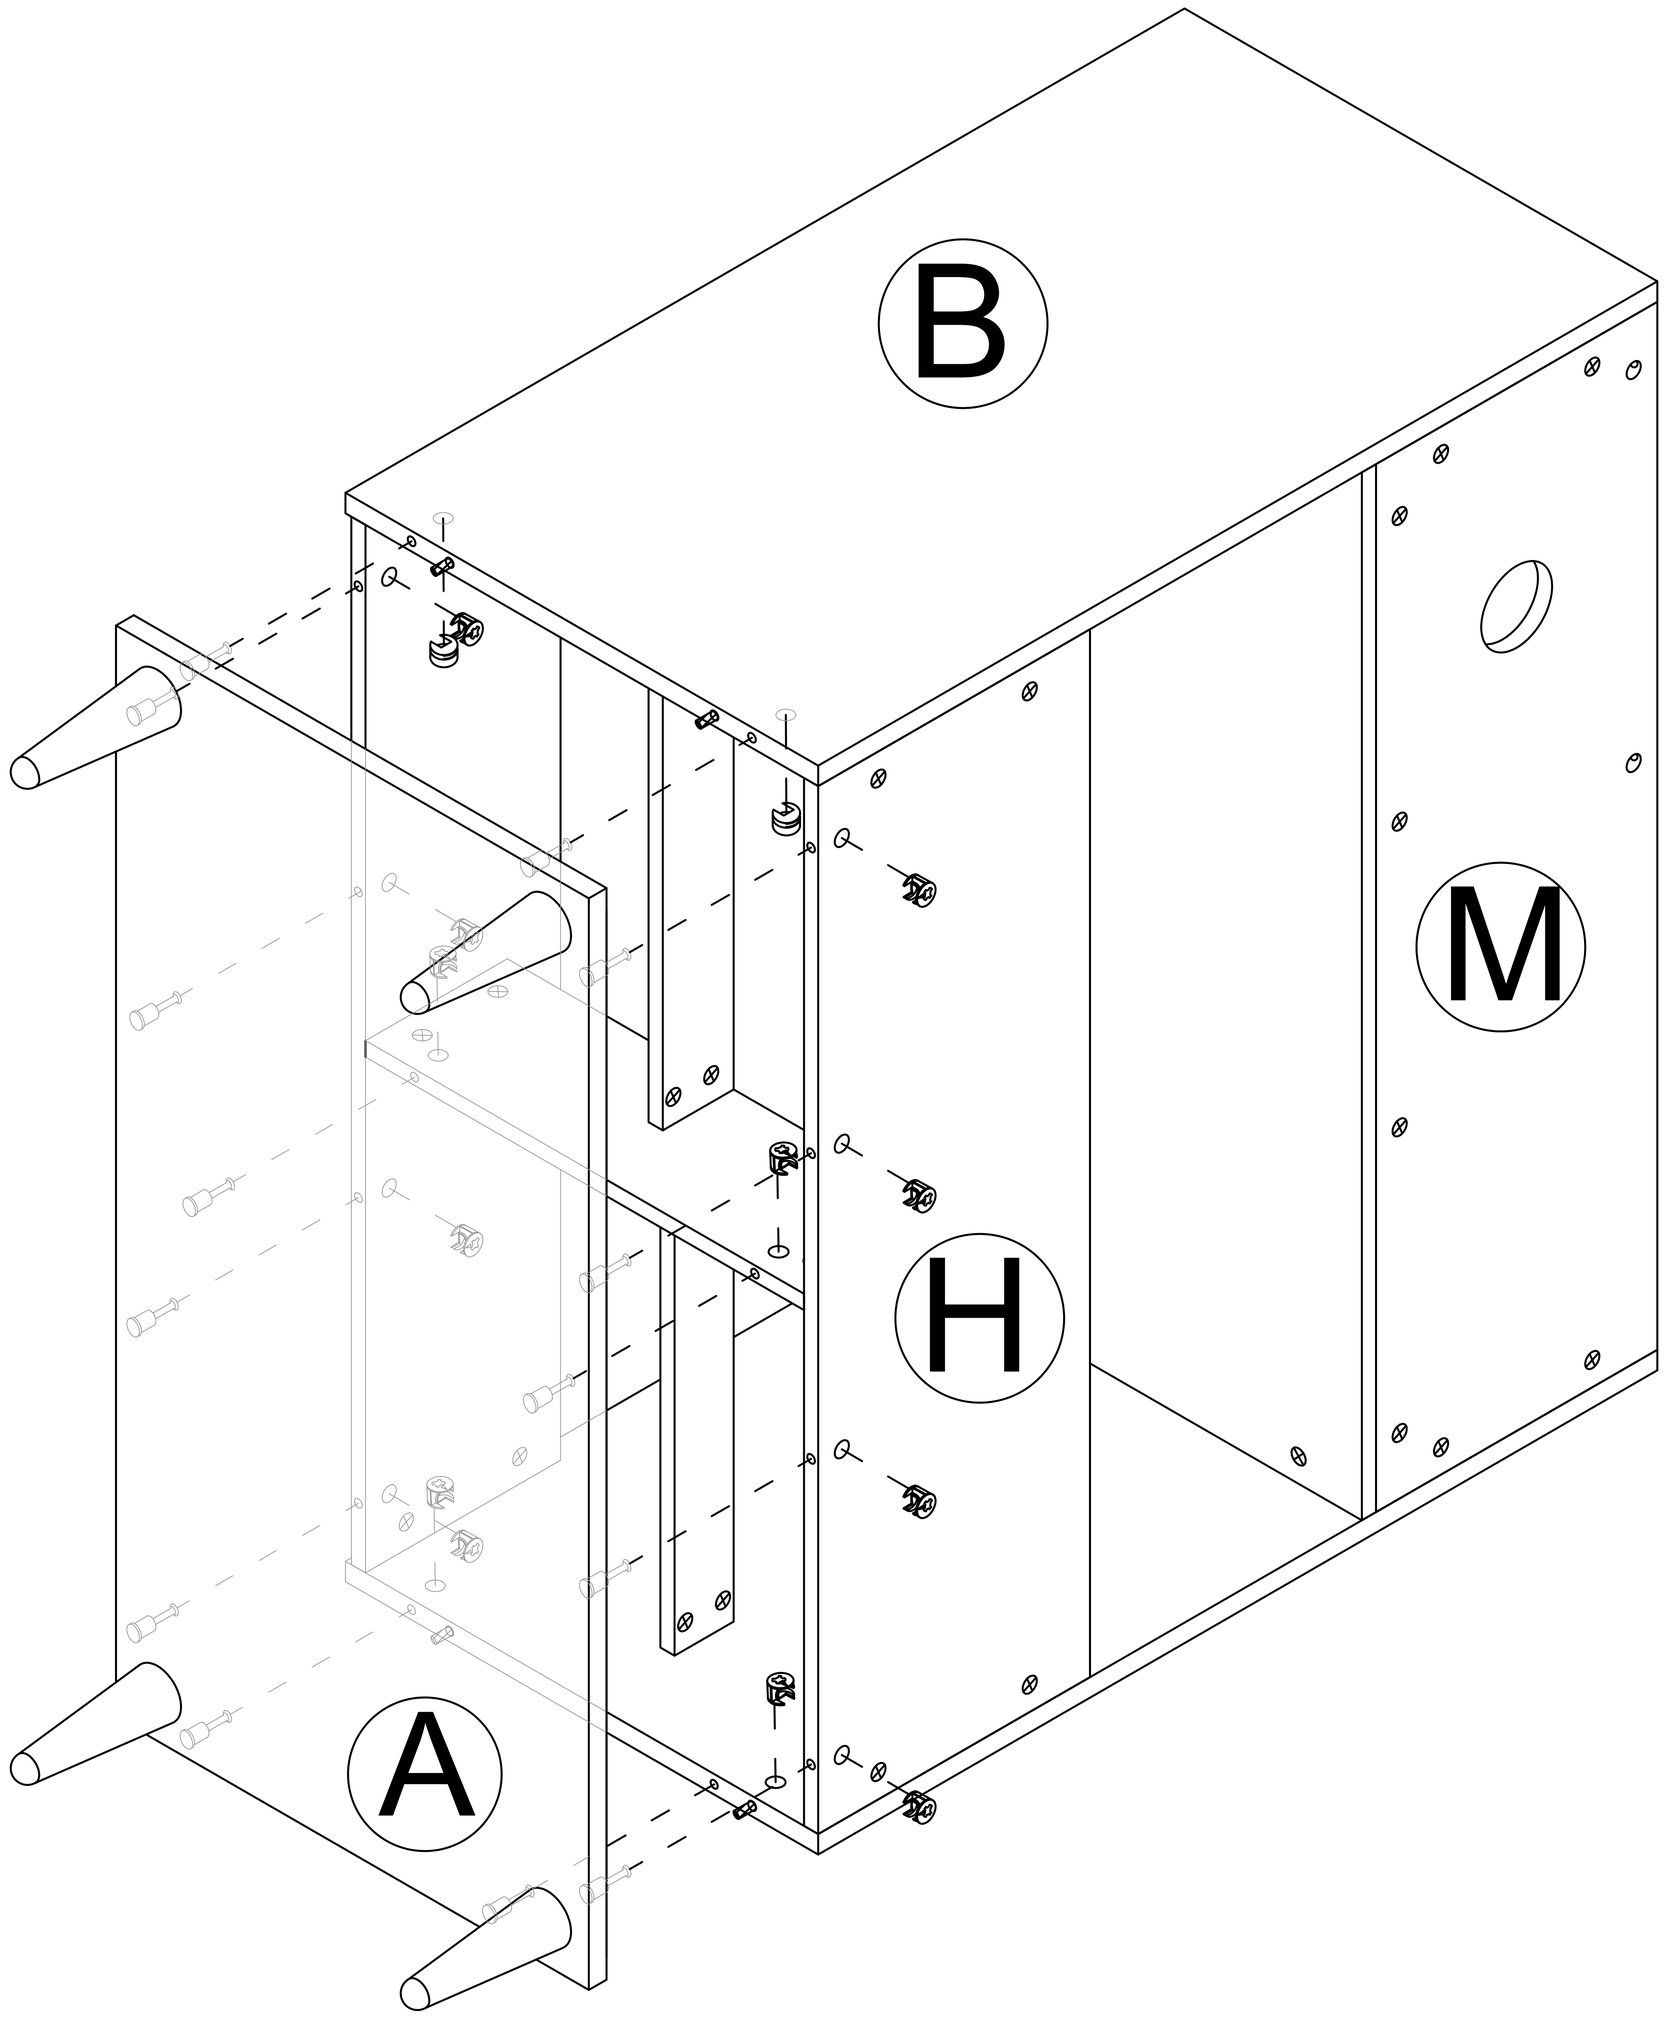


Step 25



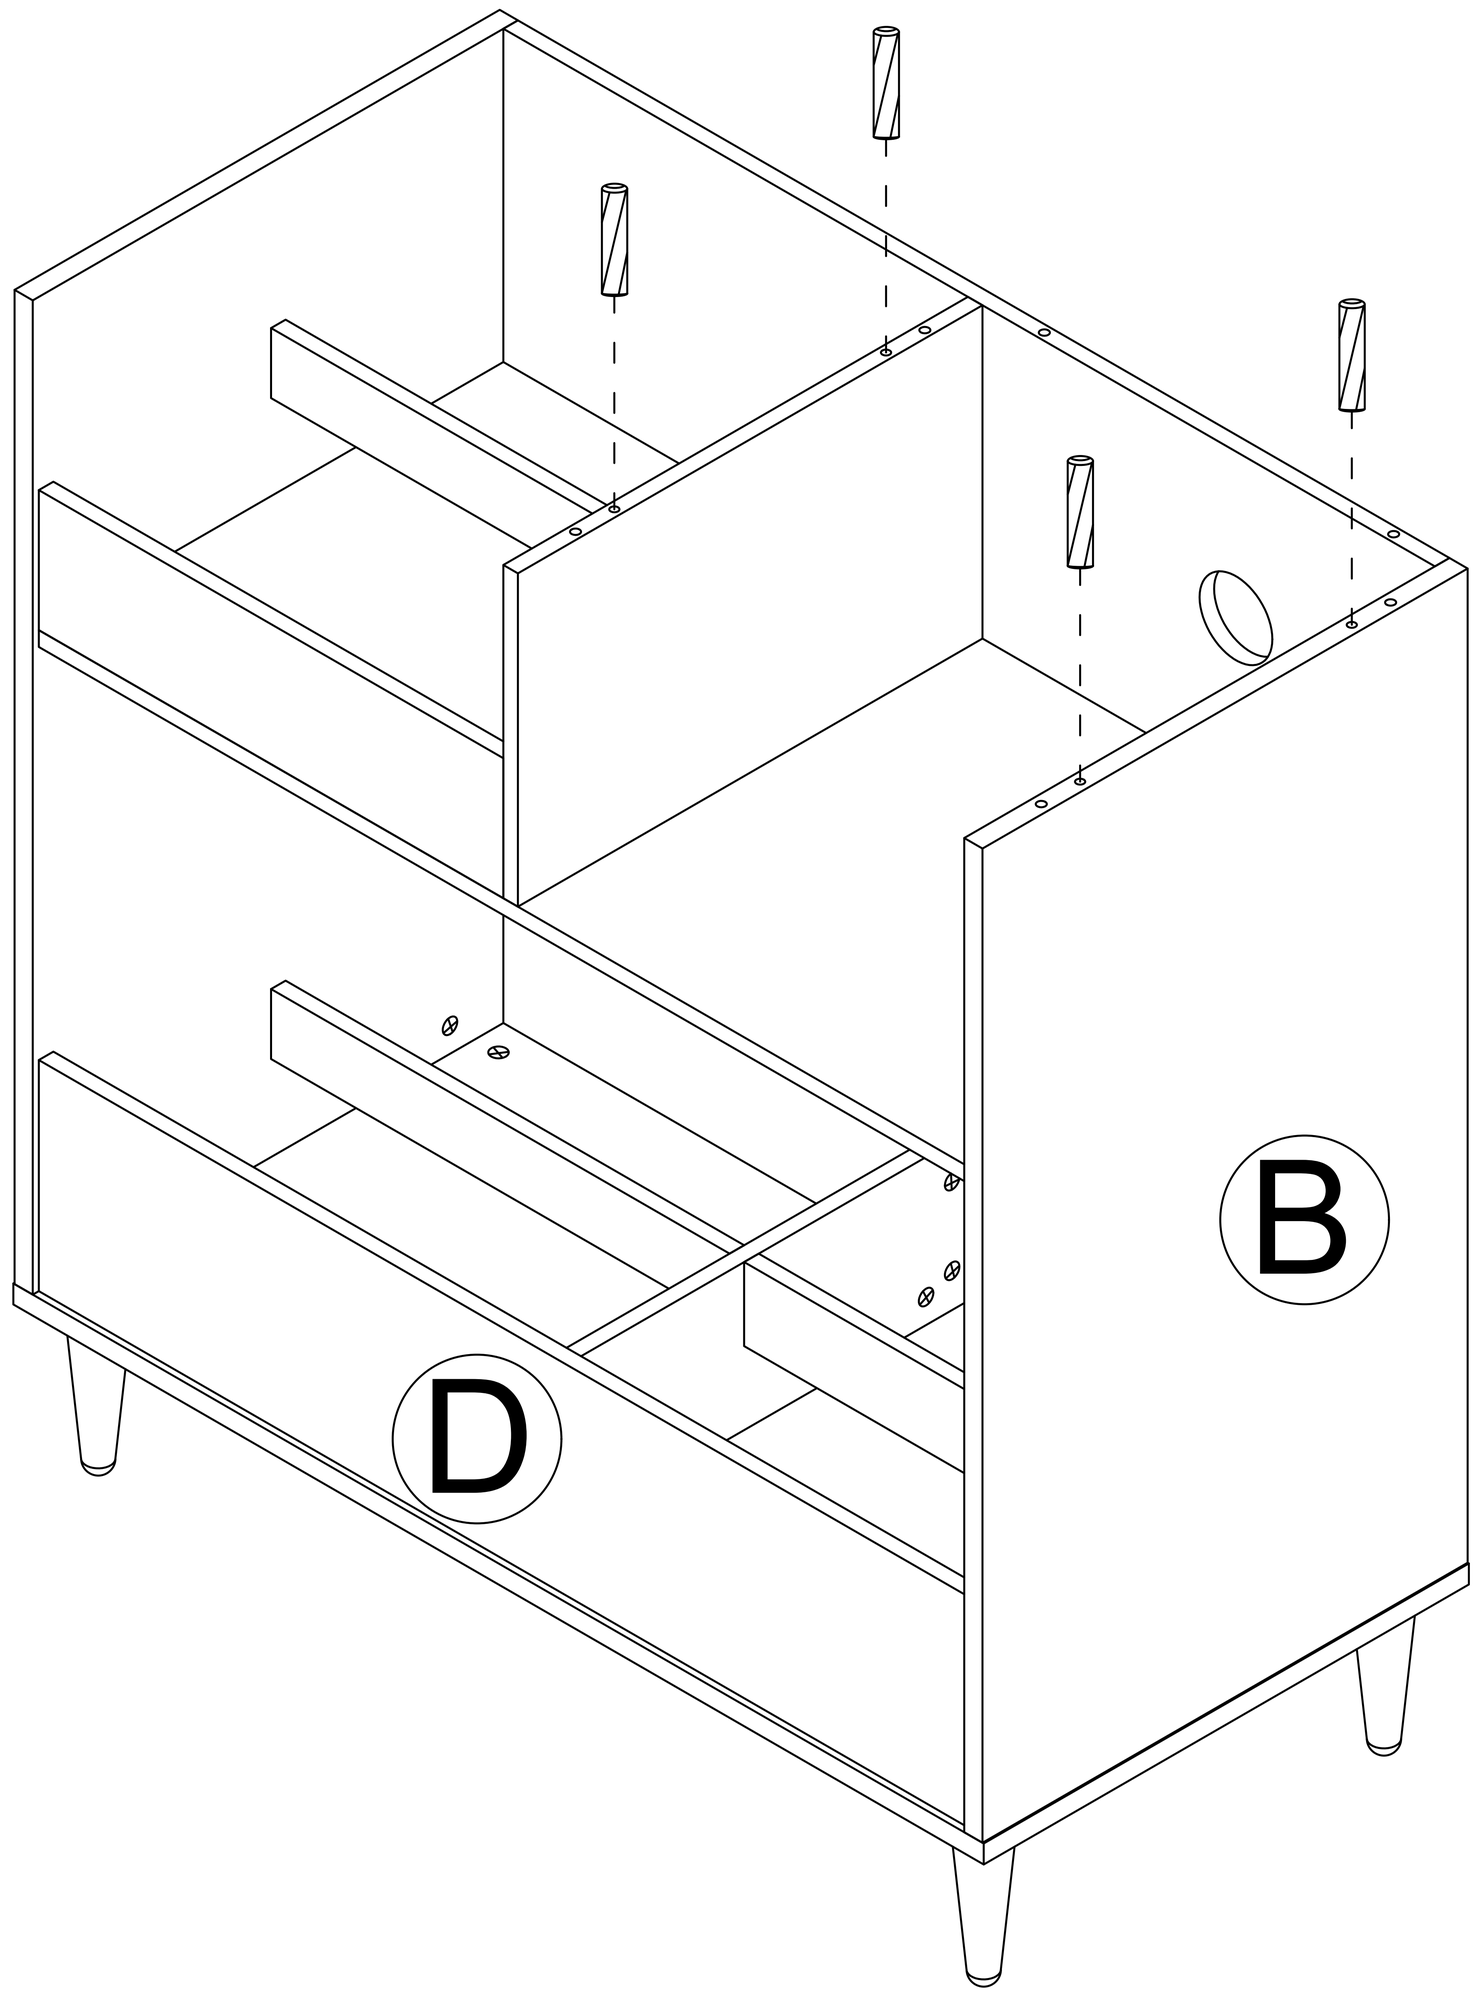

Step 26

2  x6

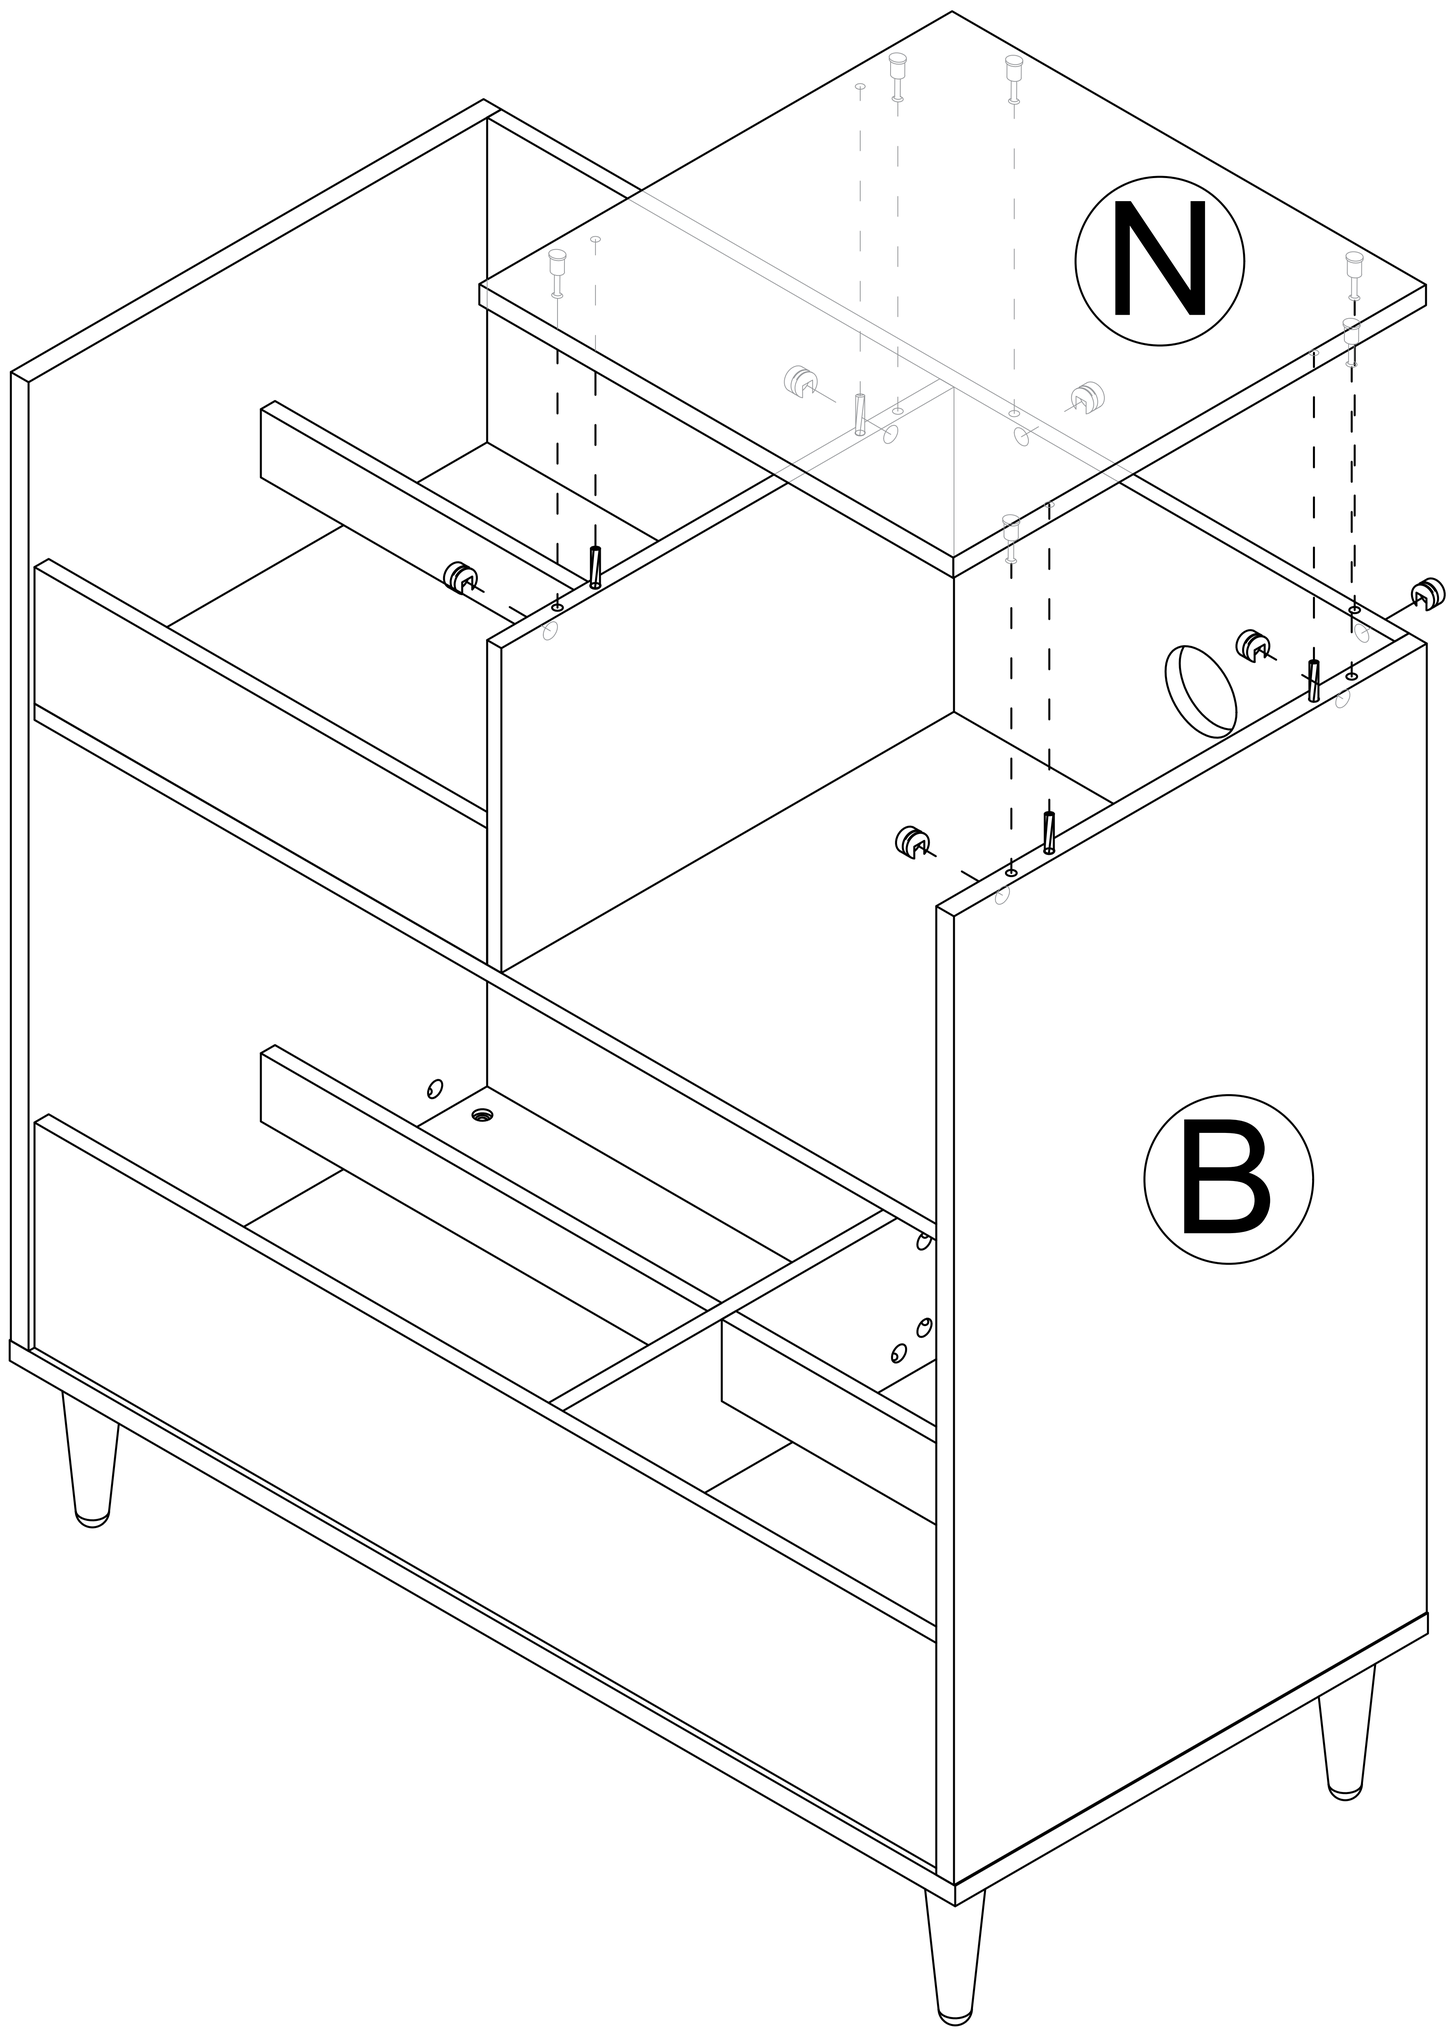


Step 27


Install as required


5 x2 x2 x2


3.5x14mm

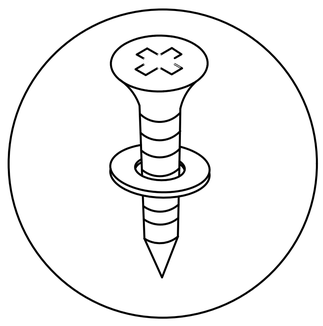

Install the anti fall hardware on the cabinet as shown in the picture first

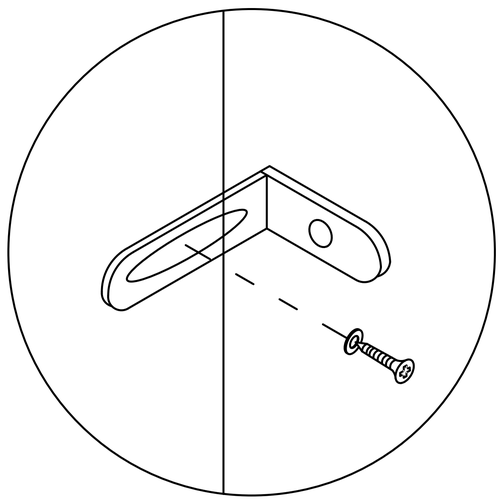

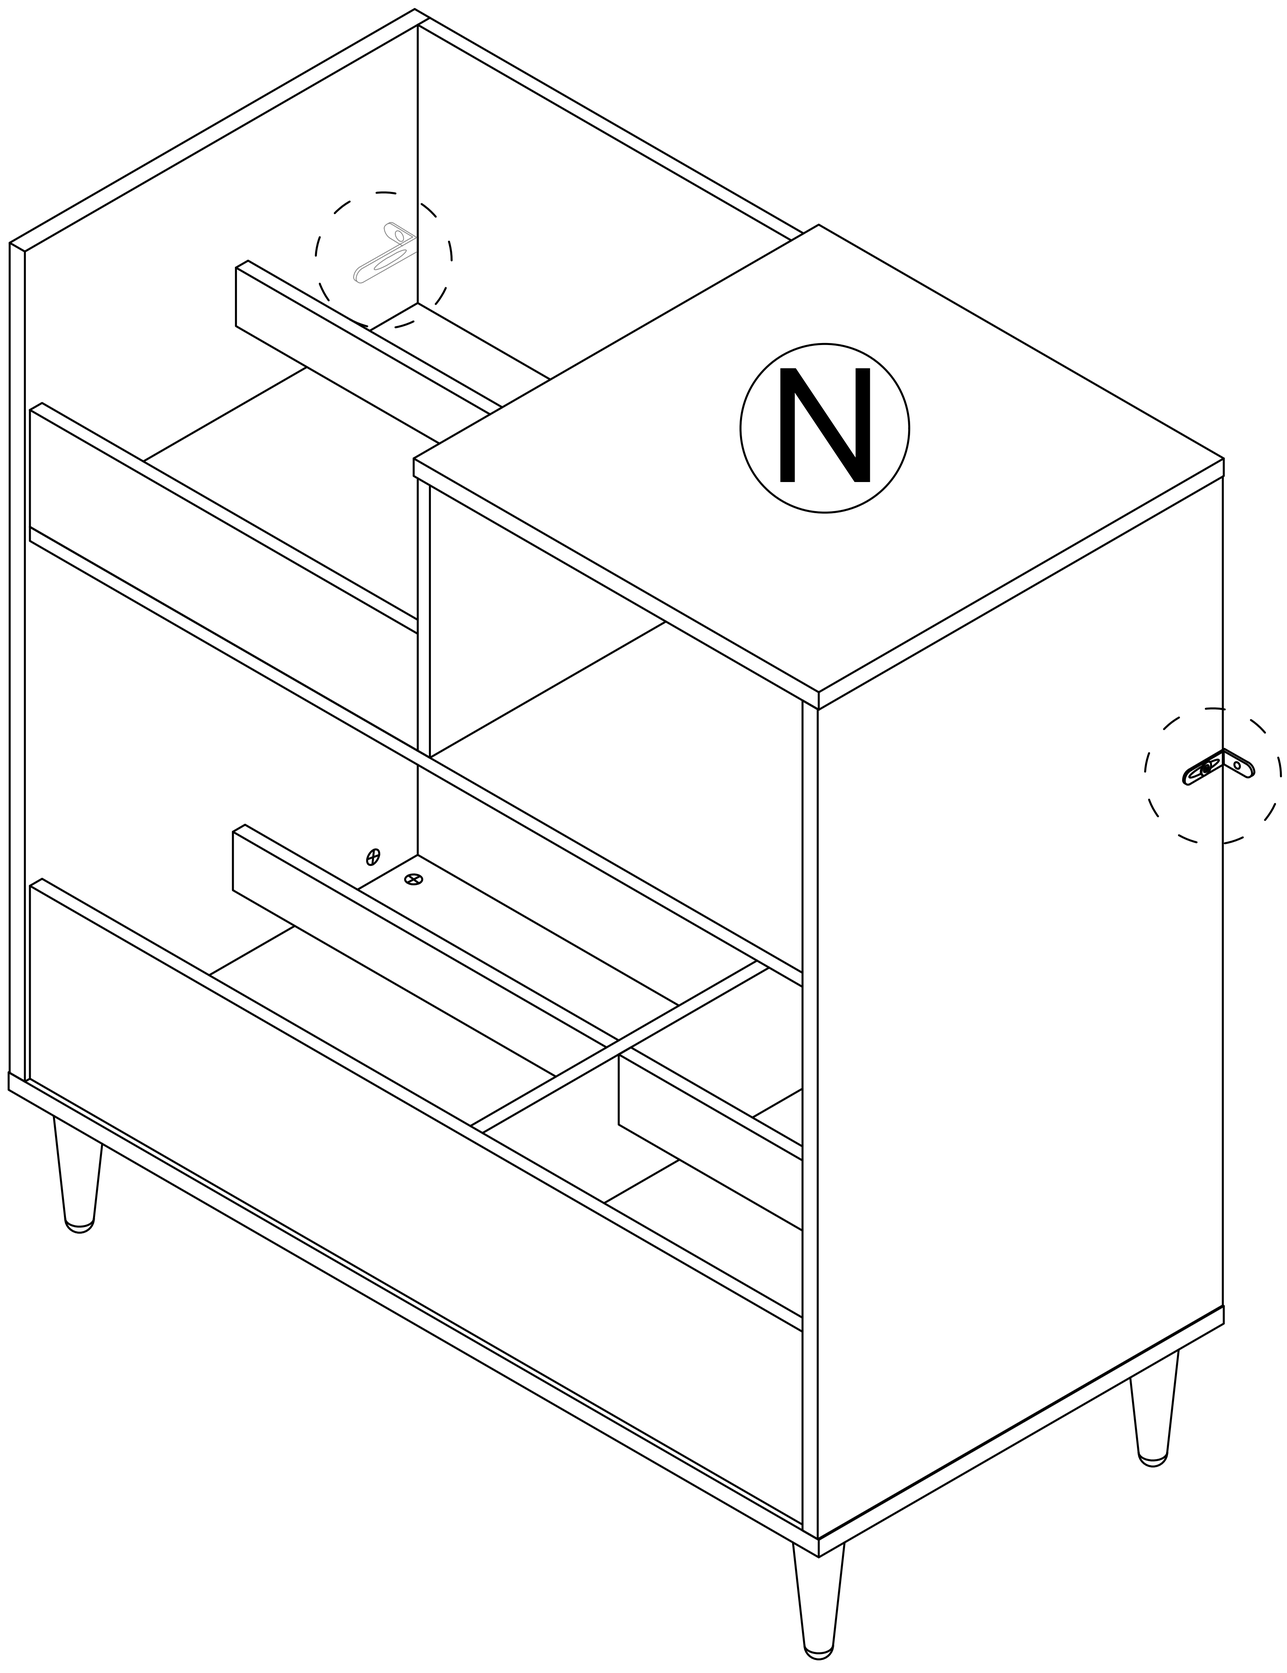


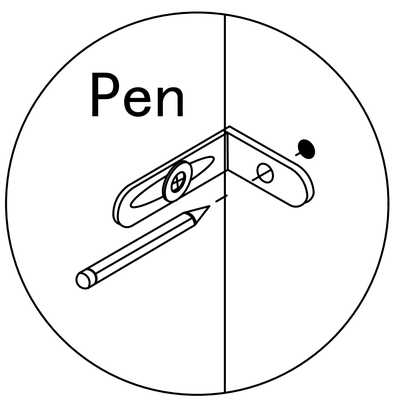


Then mark the wall with a pen through the holes in the anti-fall hardware

Step 28


use a ruler to measure theapproximate height of the producton the wall, and then mark it witha pencil.

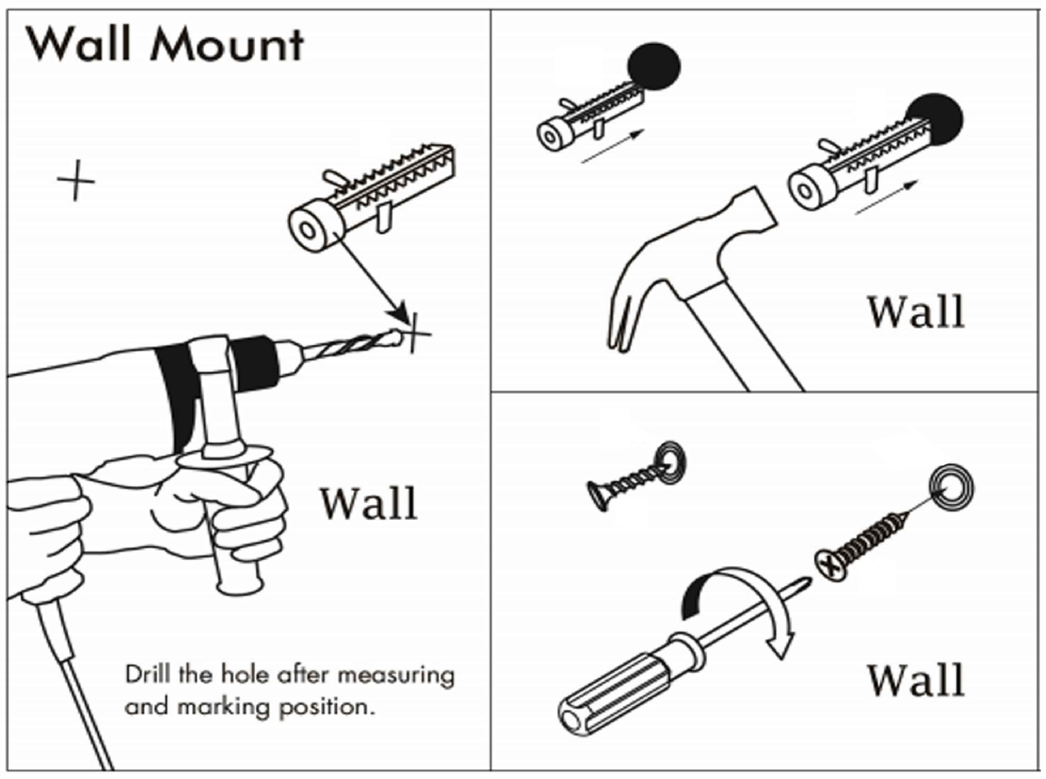


5

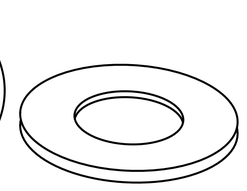

x2

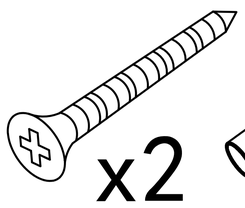

x2

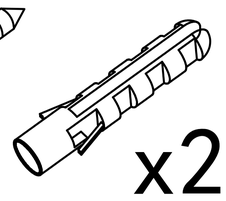



x2

Put the expansion bolt into the hole.

Pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

Use a tape drill to make holesin the wall that are suitable for theproduct screws.

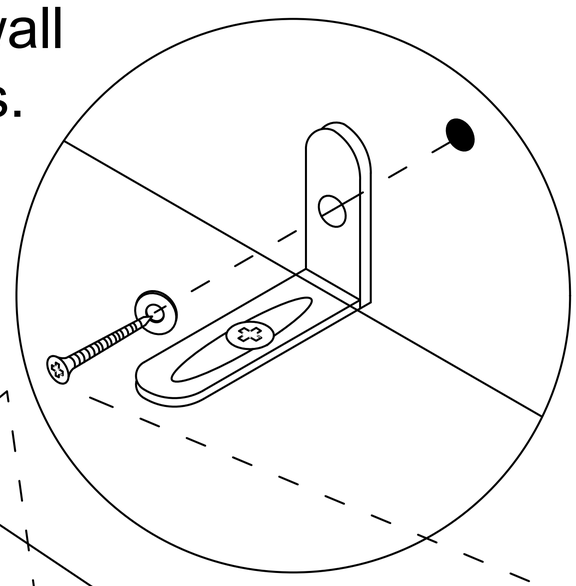

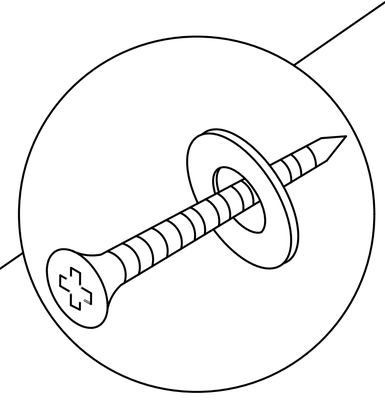

4x45mm

