

How To Use The Installation Manual

Read Thoroughly First

Before beginning assembly, carefully read all instructions and information in the manual. Verify that you have all the parts listed in the parts list.

Gloves Need To Be Worn During The Installation Process

Always wear protective gloves during assembly to prevent surface scratches. Gloves are provided in Box #1.

Understand The Diagrams

The manual includes diagrams and a parts list. Cross-reference the part numbers with the physical pieces to ensure all components are present.

Follow Step-By-Step

Do not skip ahead. Adhere strictly to the assembly instructions in the sequence provided to avoid errors.

Tools Needed For Installation



Electric Drill×1



Scraper×1



Ladder×1



Screw Driver×1



Tape Measure×1



Small Wrench×1



Glove×1

Requires 2-4 Adults To Install Simultaneously



Due to the large size of the product and for safety reasons, we recommend 2-4 adults to work together on the installation, which is expected to be completed in 12 hours.

Part Count

After receiving the goods we recommend that you open all six boxes first. Then, inventory the parts before proceeding with installation.

Ensure That The Ground Is Clean And level







Before installation, please clean and level the floor.

Self-Drilling Required



Note: Due to the ductility of the resin, there are no pre-drilled holes on the panel, so please drill your own holes.





Parts List

PROFILES	PART NO	SIZE(MM)	TOTAL QTY	THE QUANTITY PER BOX		
	E 105	1680*293	1	—	BOX2: 1	—
	E 106	1680*303	1	—	BOX2: 1	—
	E 107	1780*303	1	BOX1:1	—	—
	E 108	1780*303	1	BOX1:1	—	—
	E 109	1780*293	1	BOX1:1	—	—
	E 110	1780*303	1	BOX1:1	—	—
	E 111	1680*303	1	—	BOX2: 1	—
	E 112	1680*303	1	—	BOX2: 1	—
	E 17	1425*303	1	—	BOX2: 1	—
	E68-L	1165*303	1	—	—	BOX3:1
	E68-R	1165*303	1	—	—	BOX3:1
	E113	1680*286	2	—	BOX2: 2	—
	E29	1680*293	1	BOX1: 1	—	—
	E30-A	1680*248	1	—	BOX2: 1	—
	E30	1680*248	1	—	BOX2: 1	—
	E31	1680*278	10	—	BOX2: 6	—
	E33	1680*303	15	BOX4:2	BOX5:2	—
	E6	1165*248	2	—	BOX2: 11	—
	E7-G	1165*303	22	BOX4:2	BOX5:2	—
	E102	345*45	1	—	BOX2: 1	—



Parts List

PROFILES	PART NO	SIZE(MM)	TOTAL QTY	THE QUANTITY PER BOX		
	E13	1242*303	22	—	—	BOX3:14
				BOX4:4	BOX5:4	
	E49	1242*293	2	—	—	BOX3: 2
				—	—	
	E45-L	465*216	1	—	BOX2:1	—
				—	—	
	E45-R	465*216	1	—	BOX2:1	—
				—	—	
	E70-L	514*200	1	—	—	BOX3:1
				—	—	
	E70-R	514*200	1	—	—	BOX3:1
				—	—	
	E16	1680*170	1	BOX1:1	—	—
				—	—	
	E16-A	1680*170	1	BOX1:1	—	—
				—	—	
	E40-A	1780*70	1	BOX1:1	—	—
				—	—	
	E40	1780*70	1	BOX1:1	—	—
				—	—	
	B13	1810	1	BOX1:1	—	—
				—	—	
	B14	1810	1	BOX1:1	—	—
				—	—	
	B20	1473	1	BOX1:1	—	—
				—	—	
	B29	1191	1	BOX1:1	—	—
				—	—	
	B30	1191	1	BOX1:1	—	—
				—	—	
	B30-1	1191	2	BOX1:2	—	—
				—	—	
	F3	1680	11	BOX1:7	—	—
				BOX4:2	BOX5:2	
	F10	586	3	BOX1:1	—	—
				BOX4:1	BOX5:1	
	F11	733	1	BOX1:1	—	—
				—	—	
	F12	957	1	BOX1:1	—	—
				—	—	


Parts List

PROFILES	PART NO	SIZE(MM)	TOTAL QTY	THE QUANTITY PER BOX		
	F14	1680	4	BOX1:4	—	—
				—	—	—
	F27	708	2	BOX1:2	—	—
				—	—	—
	F28	955	2	BOX1:2	—	—
				—	—	—
	F33	1147	2	BOX1:2	—	—
				—	—	—
	F44	1212	2	BOX1:2	—	—
				—	—	—
	F70	586	8	BOX1:4	—	—
				BOX4:2	BOX5:2	—
	F71	1125	2	BOX1:2	—	—
				—	—	—
	F78	432	2	BOX1:2	—	—
				—	—	—
	F79-L	430	1	BOX1:1	—	—
				—	—	—
	F79-R	430	1	BOX1:1	—	—
				—	—	—
	F80-L	465	1	BOX1:1	—	—
				—	—	—
	F80-R	465	1	BOX1:1	—	—
				—	—	—
	F81-L	635	1	BOX1:1	—	—
				—	—	—
	F81-R	635	1	BOX1:1	—	—
				—	—	—
	F81-1	635	2	BOX1:2	—	—
				—	—	—
	F82	460	1	BOX1:1	—	—
				—	—	—
	F83	1212	2	BOX1:2	—	—
				—	—	—
	F84	1483	1	BOX1:1	—	—
				—	—	—
	F31	571	6	BOX1:2	—	—
				BOX4:2	BOX5:2	—
	H12	1780	2	BOX1:2	—	—
				—	—	—




Parts List

PROFILES	PART NO	SIZE(MM)	TOTAL QTY	THE QUANTITY PER BOX		
	H12-L	1780	1	BOX1:1	—	—
	H12-R	1780	1	BOX1:1	—	—
	H15	660	4	BOX1:4	—	—
	F40	586	6	BOX1:2	—	—
	F40-1	586	6	BOX4:2	BOX5:2	—
	J37	1158	1	BOX1:2	—	—
	J46	610	1	BOX4:2	BOX5:2	—
	J90	1667	3	—	—	BOX3:1
	J97	493	1	—	—	BOX3:1
	G29	130	1	—	—	BOX3:1
	J47	1212	10	—	—	BOX3:6
	J48	1190	5	BOX4:2	BOX5:2	—
	J49	290*30	5	BOX1:3	—	—
	J61	571*15	3	BOX4:1	BOX5:1	—
	C57	270*100	2	—	—	BOX3:3
	C53	123*123	2	BOX4:1	BOX5:1	—
	C54	123*123	2	—	—	BOX3:1
	J16	2.3*2.2*0.2	1	—	—	BOX3:2
	F21	1378*54	1	—	—	BOX3:2
	G1	100*100*41	4	BOX1:1	—	—
				BOX1:4	—	—

Parts List

PROFILES	PART NO	SIZE(MM)	TOTAL QTY	THE QUANTITY PER BOX		
	J31	90*20	1	—	—	BOX3:1
	J32	90*20	1	—	—	BOX3:1
	J4	10*70	10	—	—	BOX3:6
	J3	93*82*33	10	BOX4:2	BOX5:2	—
	J6	83*60	14	—	—	BOX3:10
	J1	73*73*16	4	BOX4:2	BOX5:2	—
	J62	60*12	1	—	—	BOX3:4
	G18	510*310	4	—	—	BOX3:1
	G5	290*467	4	—	BOX2:4	—
	G3	388*169	1	—	—	—
	G10	1785*320	1	—	BOX2:1	—
	G12	700*320	3	BOX1:1	—	—
	J18	180*25*32	2	—	—	—
	J28	70*45	4	BOX1:1	—	—
	D21	280*147	2	BOX4:1	BOX5:1	—
	D33	170*120	4	—	—	BOX3:2
	D62	50*45	1	—	—	—
				—	—	BOX3:4
				—	—	—
				—	—	BOX3:2
				—	—	—
				—	—	BOX3:4
				—	—	—
				—	—	BOX3:1
				—	—	—

Parts List

PROFILES	PART NO	SIZE(MM)	TOTAL QTY	THE QUANTITY PER BOX		
	D90	23*195	4	—	—	BOX3:4
				—	—	
	D91	22*100	4	—	—	BOX3:4
				—	—	
	D64	6*45	20	—	—	BOX3:12
				BOX4:4	BOX5:4	
	J21	4*14	148	—	—	BOX3:136
				BOX4:6	BOX5:6	
	J19	6*30	44	—	—	BOX3:26
				BOX4:9	BOX5:9	
	J60	3.5*10	16	—	—	BOX3:16
				—	—	
	J68	6*25	26	—	—	BOX3:18
				BOX4:4	BOX5:4	
	J20	5*12	435	—	—	BOX3:335
				BOX4:50	BOX5:50	
	J45	6*265	5	—	—	BOX3:3
				BOX4:1	BOX5:1	
	J69	4.2*32	25	—	—	BOX3:25
				—	—	
	J70	5*30	14	—	—	BOX3:14
				—	—	
	J71	5*20	48	—	—	BOX3:16
				BOX4:16	BOX5:16	

Included Tools List

NO	ITEM NAME	PROFILES	THE QUANTITYPER BOX
1	CorkHammer		BOX3:1
2	Scraper		BOX3:2
3	Gloves		BOX3:2
4	Small Wrench		BOX3:1
5	Socket Wrench		BOX3:1
6	5mm Allen Key With Phillips Tip		BOX3:1
7	8mm Drill Bit		BOX3:1
8	5mm Hex Driver Bit		BOX3:1
9	Phillips Driver Bit		BOX3:1
10	Door lock		BOX3:1
11	Hardware Hooks		BOX3:2


1 The Ground

Parts needed

PROFILES	PART NO	QTY	Located in Box #
	E6	2	3
	E7-G	22	3.4.5
	F10	3	1.4.5
	F11	1	1
	F12	1	1
	G1	4	1
	J1	4	3
	F78	2	1

PROFILES	PART NO	QTY	Located in Box #
	F21	1	1
	F27	2	1
	F28	2	1
	F31	6	1.4.5
	F33	2	1
	J20	82	3.4.5
	J21	2	3.4.5


Dimension of the storage room
362 cm (L) × 254 cm (W) × 223 cm (H).
Before assembly, ensure the
installation area has a level floor
and sufficient space.

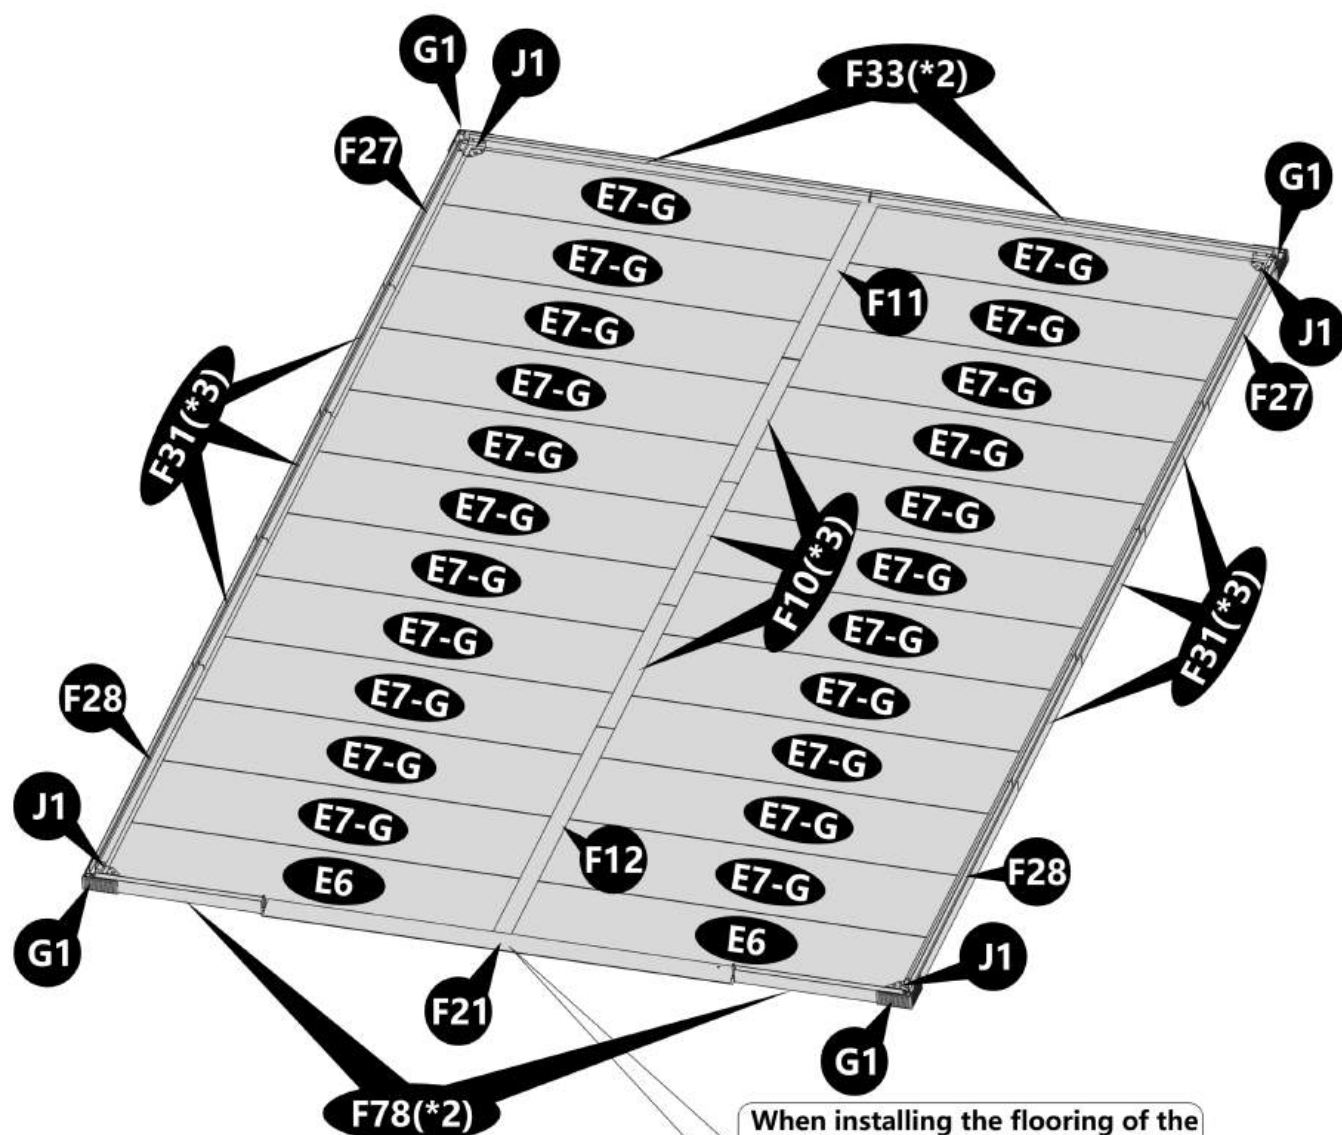

When installing the flooring of the storage room, be sure to confirm the swing direction of the storage room door.



E6(*2)




E7-G(*22)






Scraper



Cork Hammer

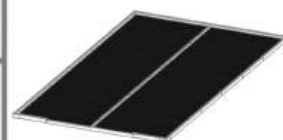

Make 2 Sets

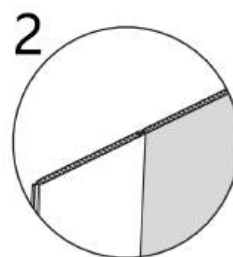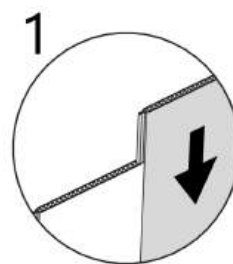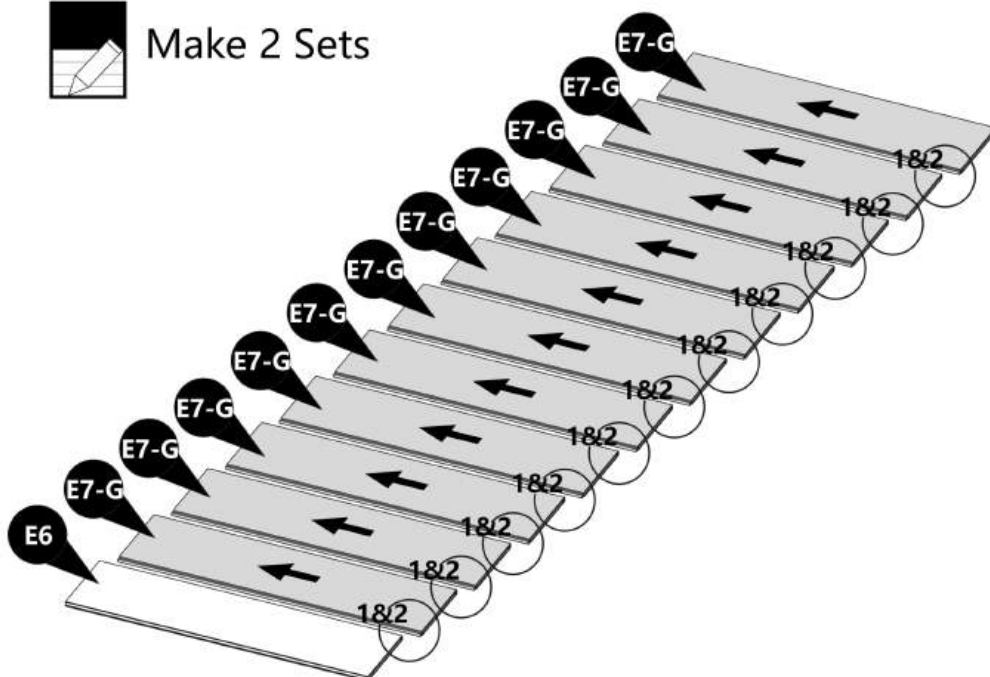

F12(*1)



F10(*3)






F11(*1)



Scraper



Cork Hammer












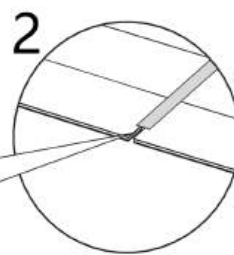
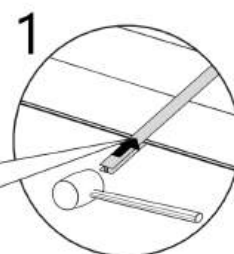
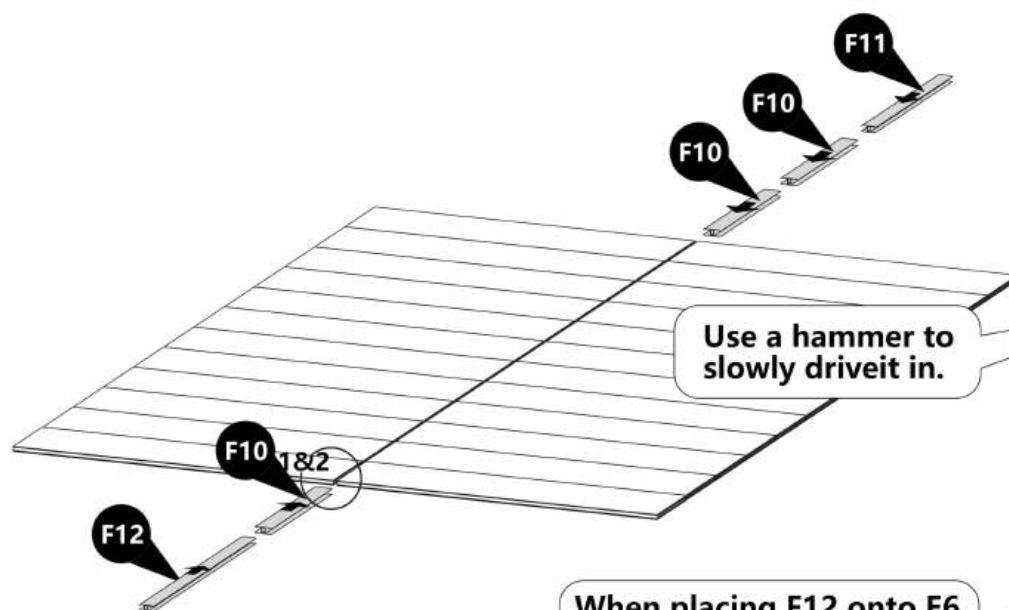




Electric Drill



Phillips

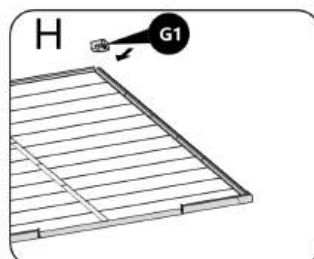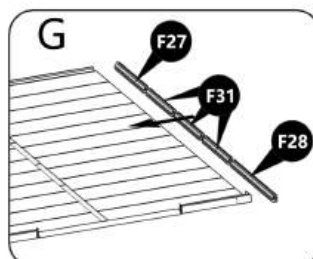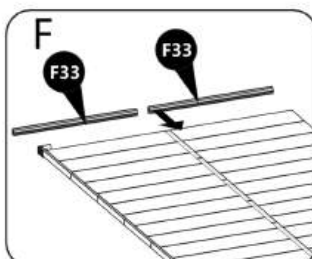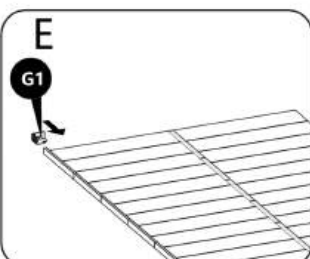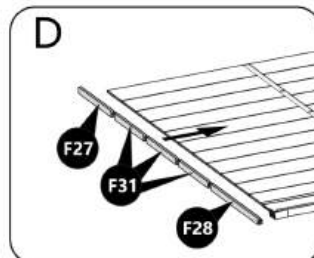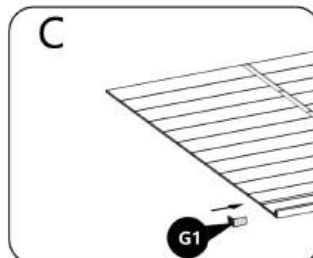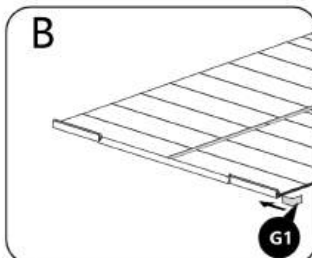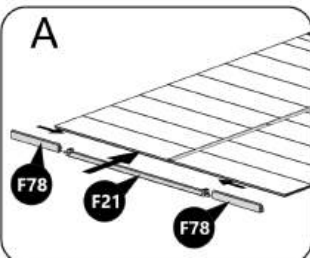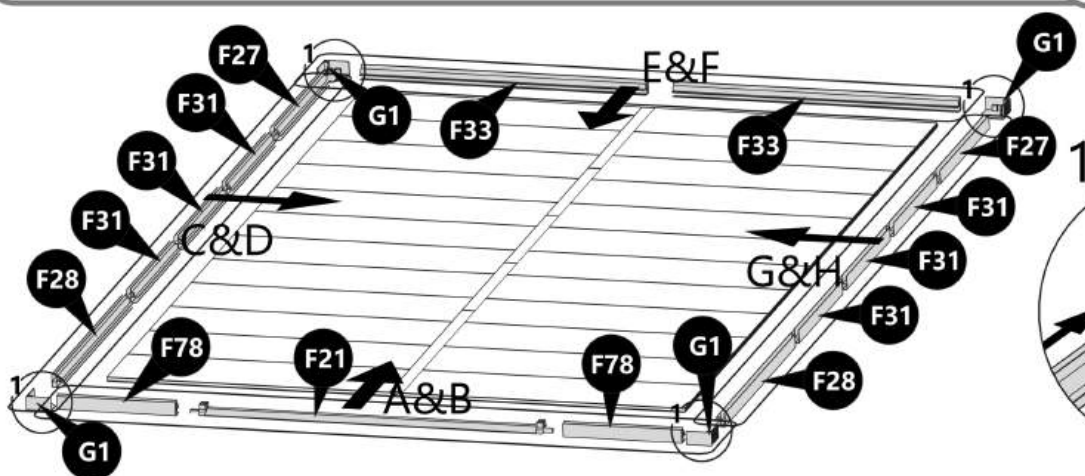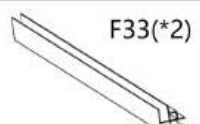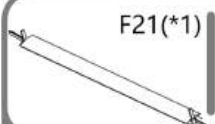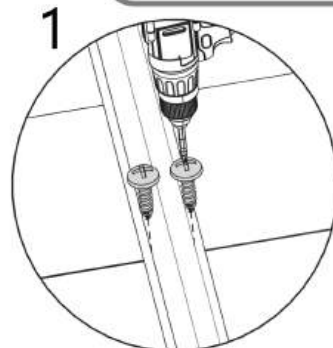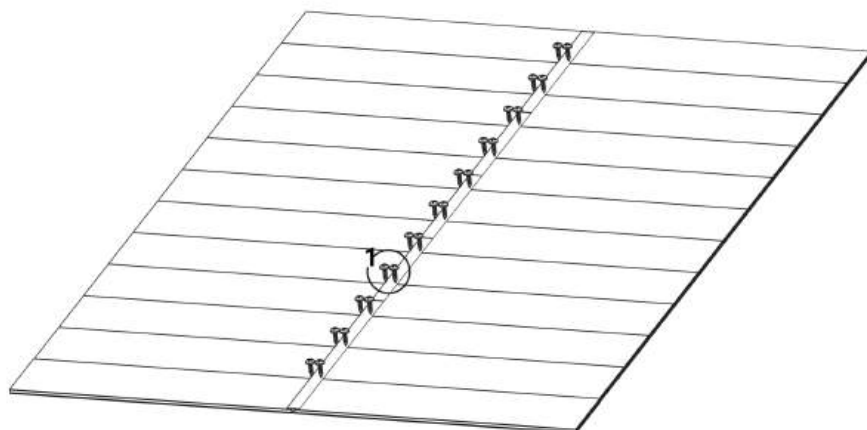



J21(*2)




J20(*32)

Electric Drill


Phillips



When fixing the corners, leave at least 8 cm of space for installation of J1.

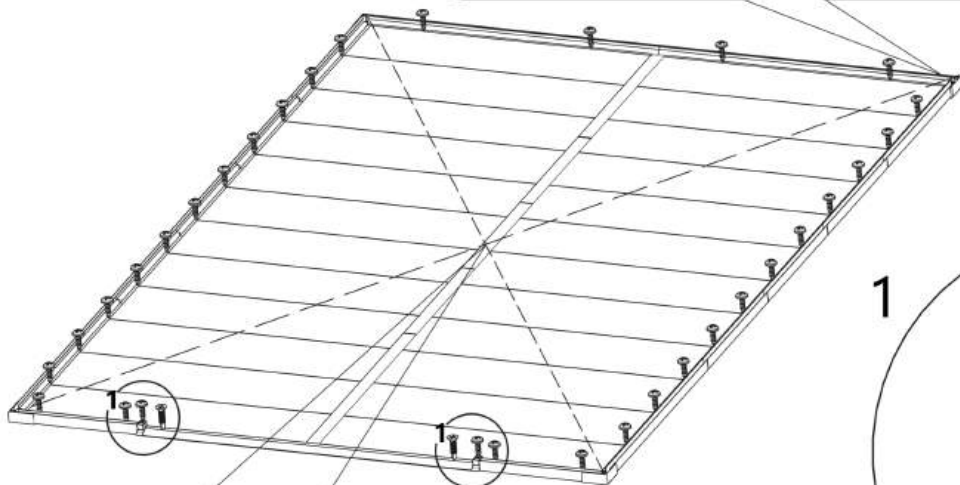

Ensure the two diagonal lines marked with dashed lines in the diagram are equal in length to confirm the floor area forms a perfect rectangle.

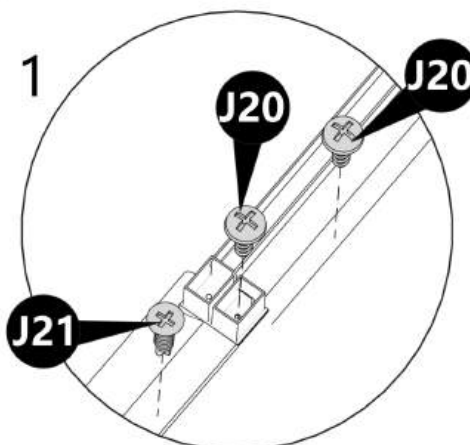



J1(*4)



J20(*28)

Electric Drill

Phillips

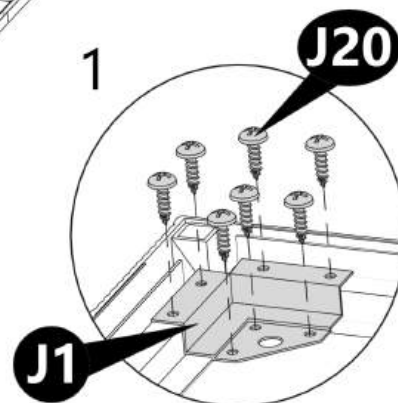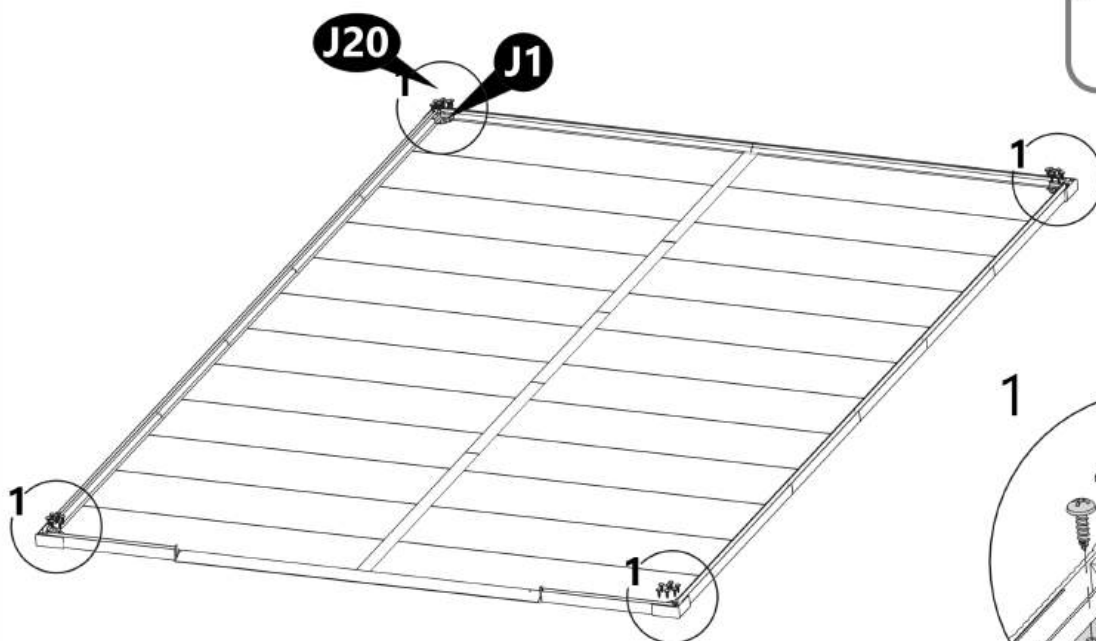


2

Parts needed

PROFILES	CODE	QTY	Package number where located
	E30-A	1	2
	E30	1	2
	E105	1	2
	E106	1	2
	E111	1	2
	E112	1	2
	G18	2	2
	G5	2	2
	B29	1	1
	B30	1	1
	E16	1	1
	E16-A	1	1


PROFILES	CODE	QTY	Package number where located
	E31	10	2.4.5
	E33	15	2.4.5
	F3	11	1.4.5
	F14	4	1
	E45-L	1	2
	E45-R	1	2
	F80-L	1	1
	F80-R	1	1
	F81-L	1	1
	F81-R	1	1
	E113	2	2

PROFILES	CODE	QTY	Package number where located
	E29	1	1
	B13	1	1
	B14	1	1
	B20	1	1
	F40	6	1.4.5
	F79-L	1	1
	F79-R	1	1
	F84	1	1
	J20	178	3.4.5

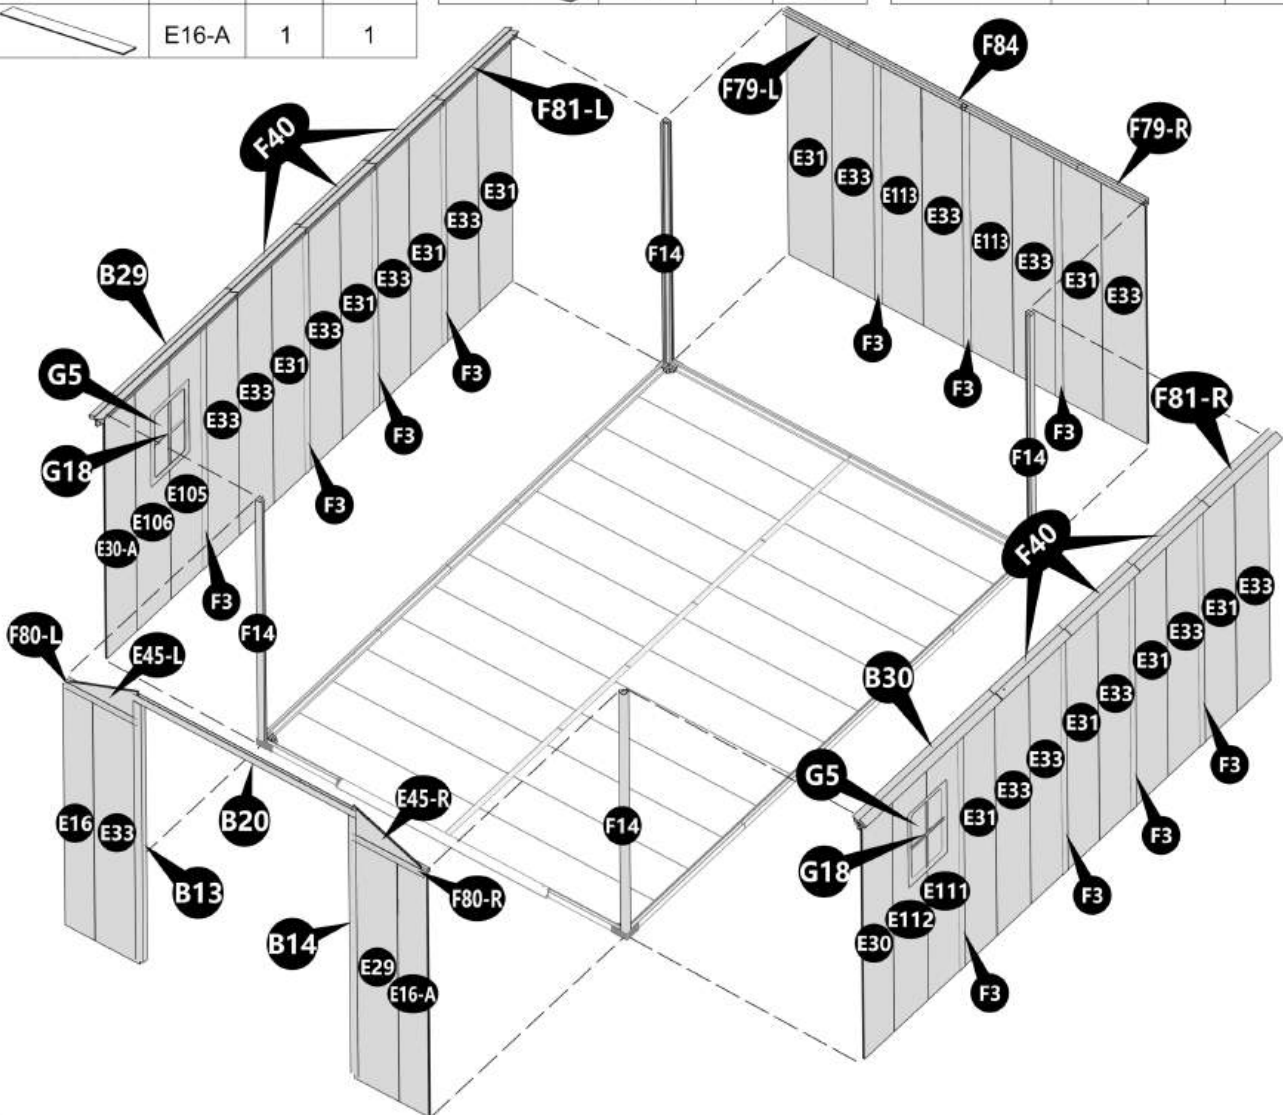





F14(*1)

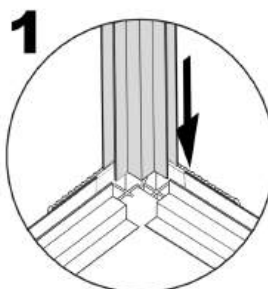


**When installing the wall panel,
have someone hold F14 in place.**

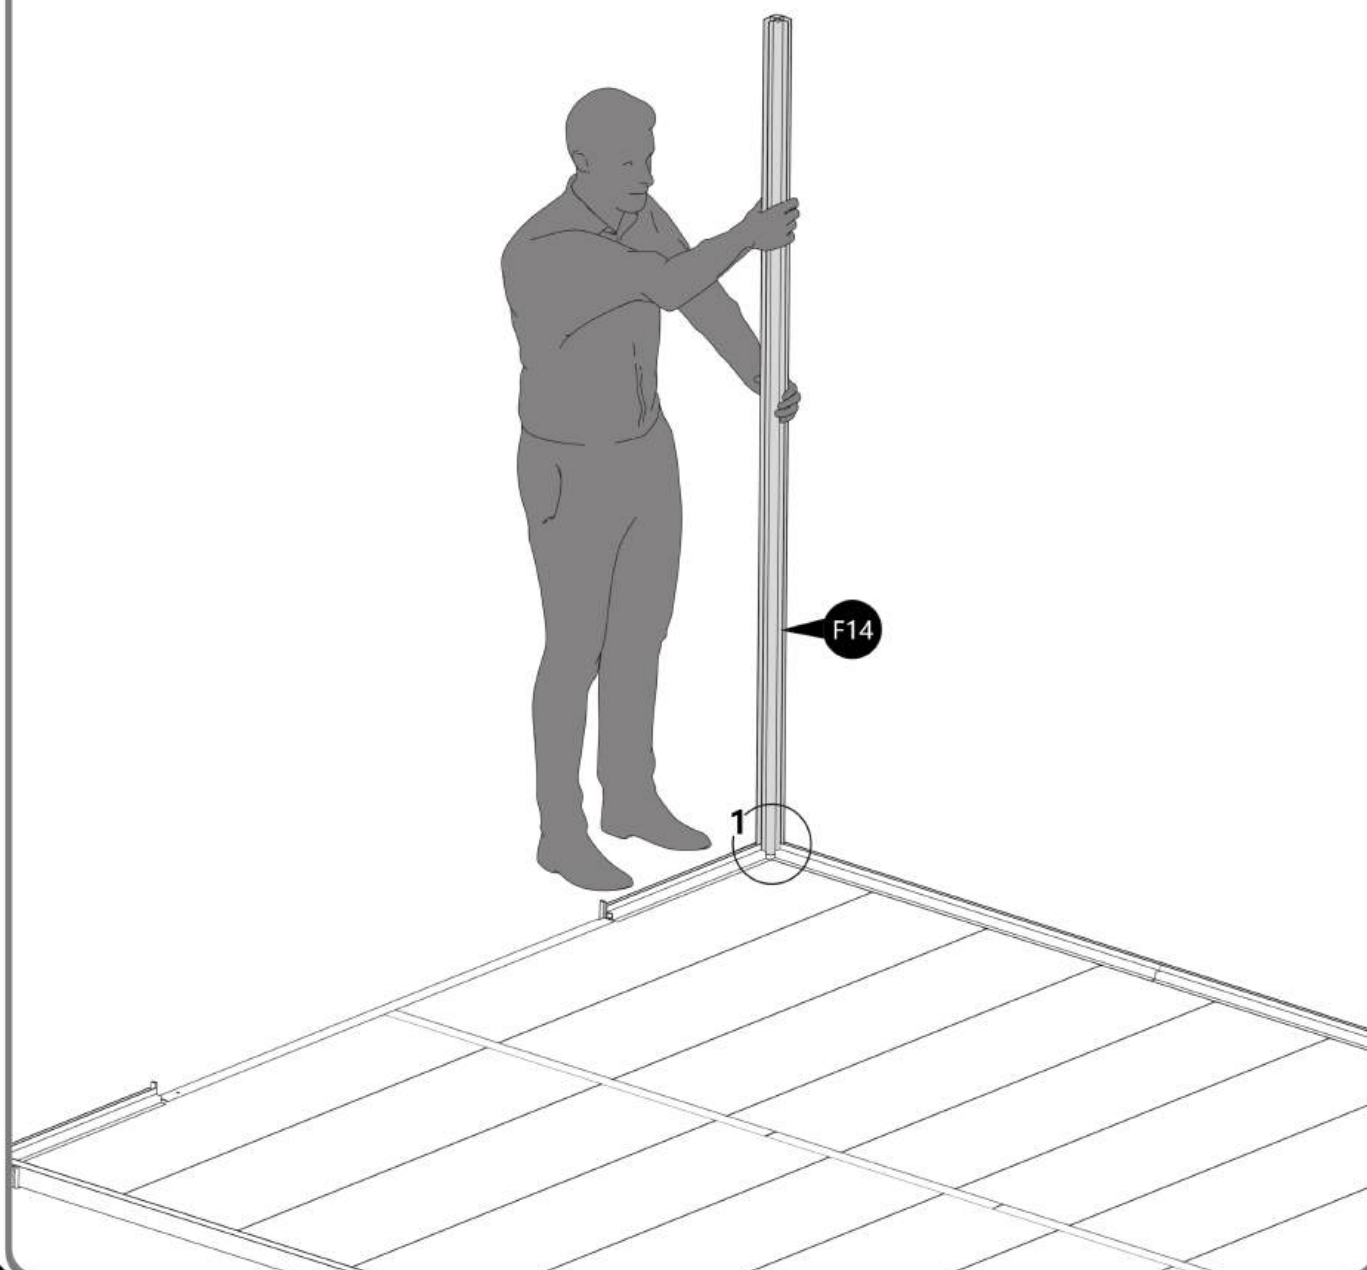


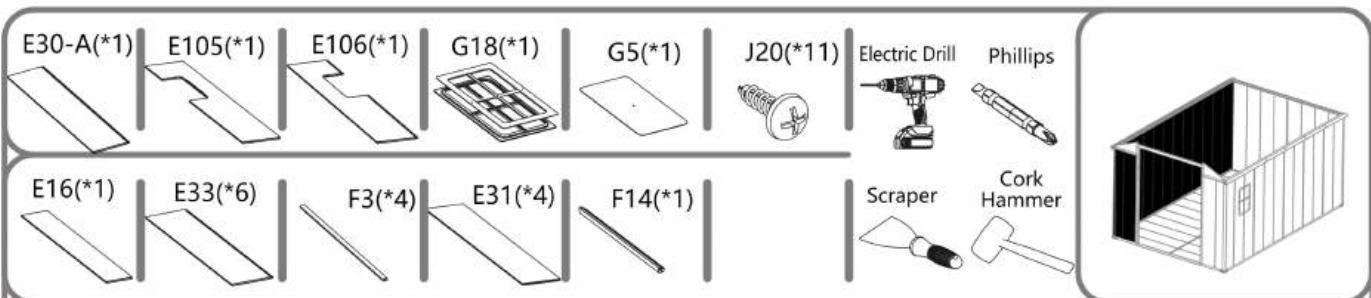



A

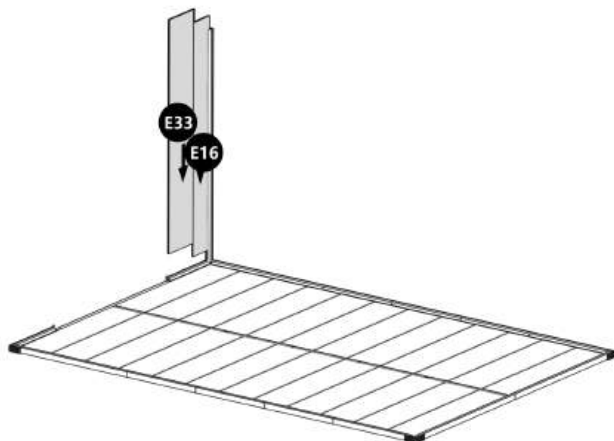


B

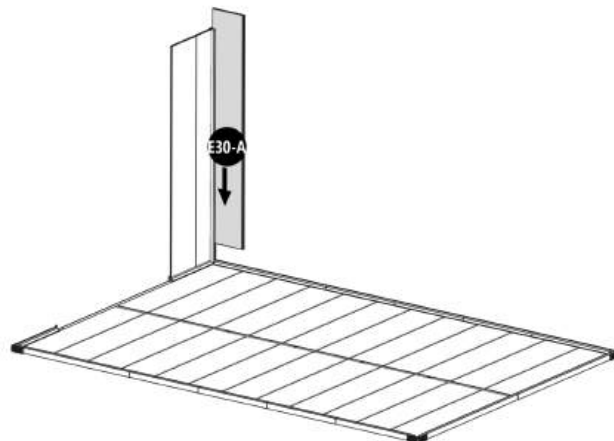


C

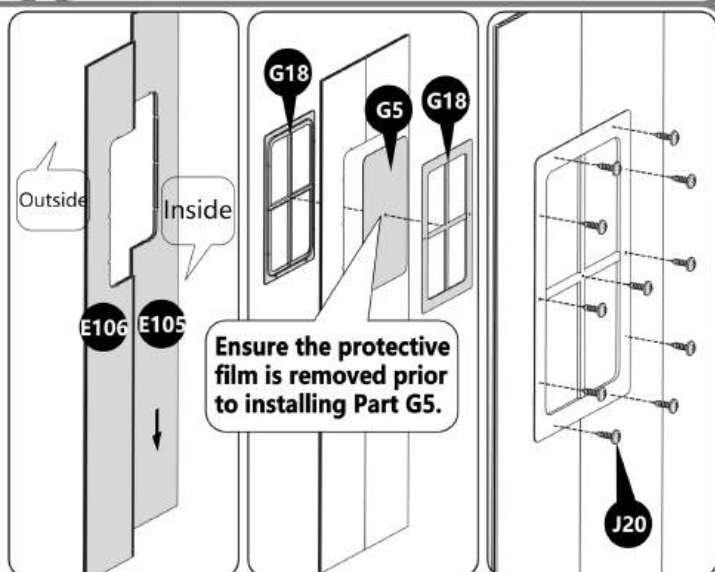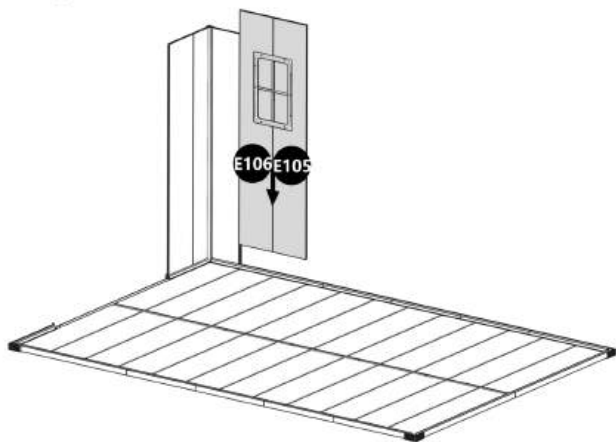

D

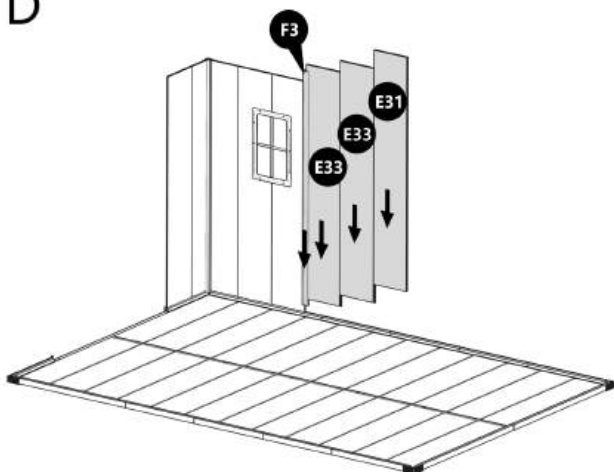

E

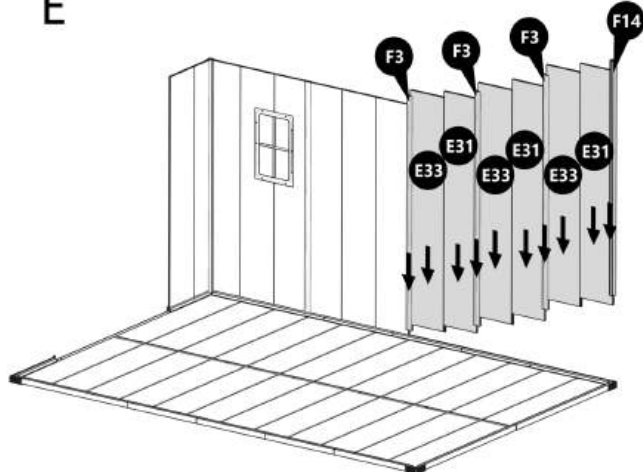




J20(*42)



Electric Drill



Phillips

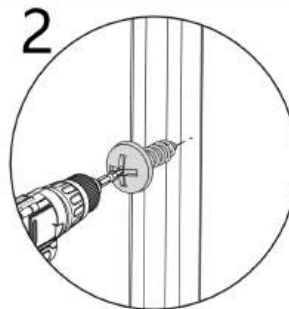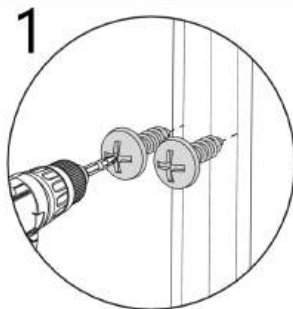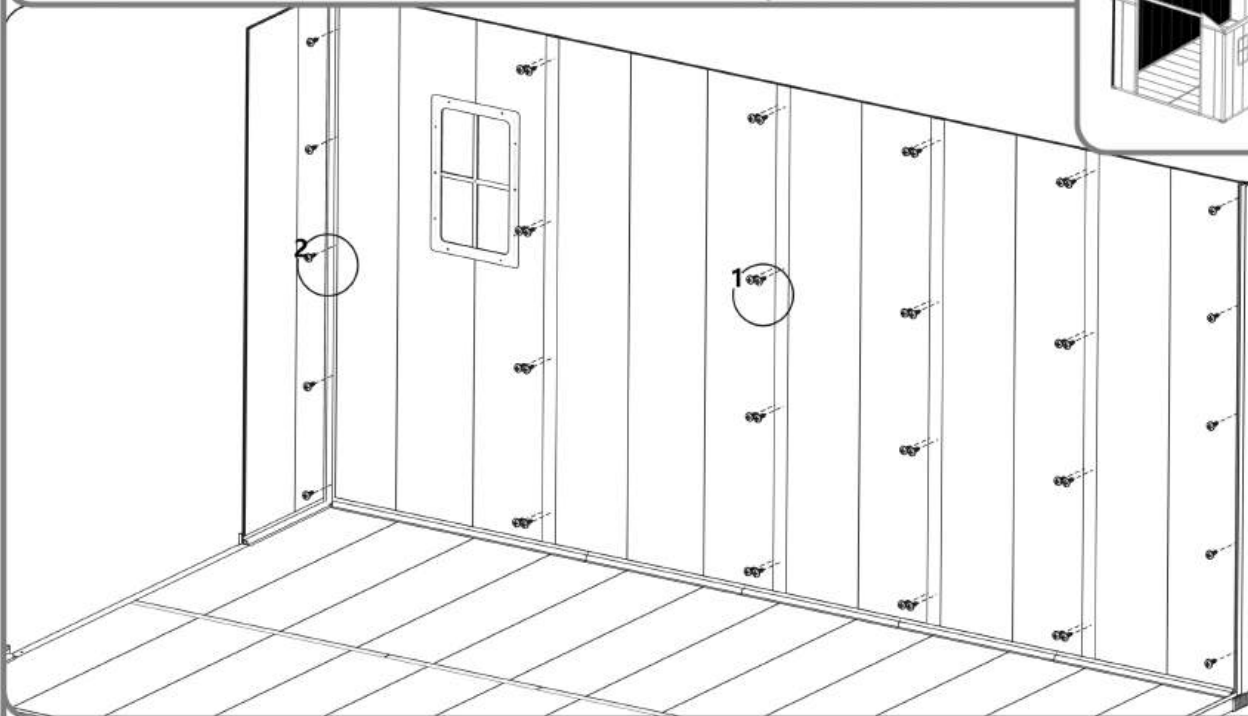

E33(*4)




E31(*2)



E113(*2)



F3(*3)





F14(*1)



Scraper



Cork Hammer

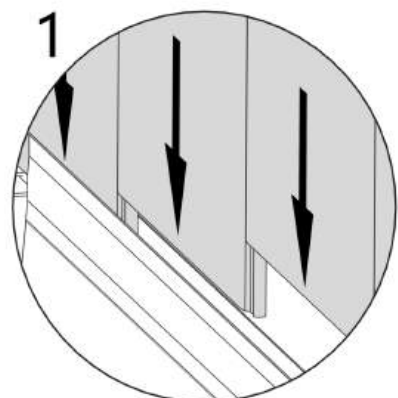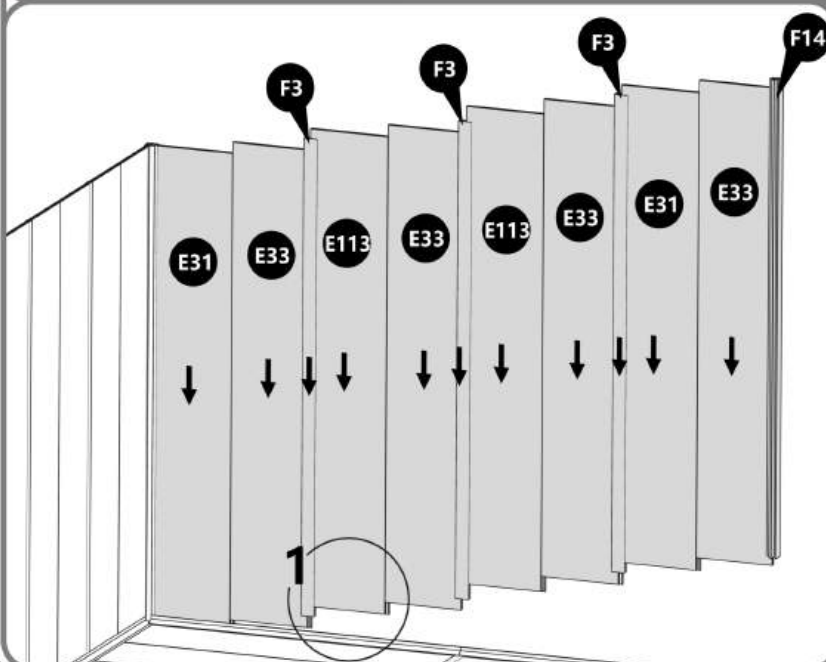







J20(*34)


Electric Drill




Phillips

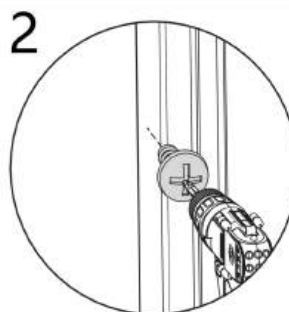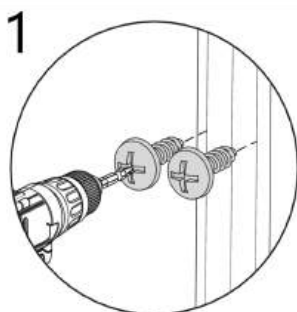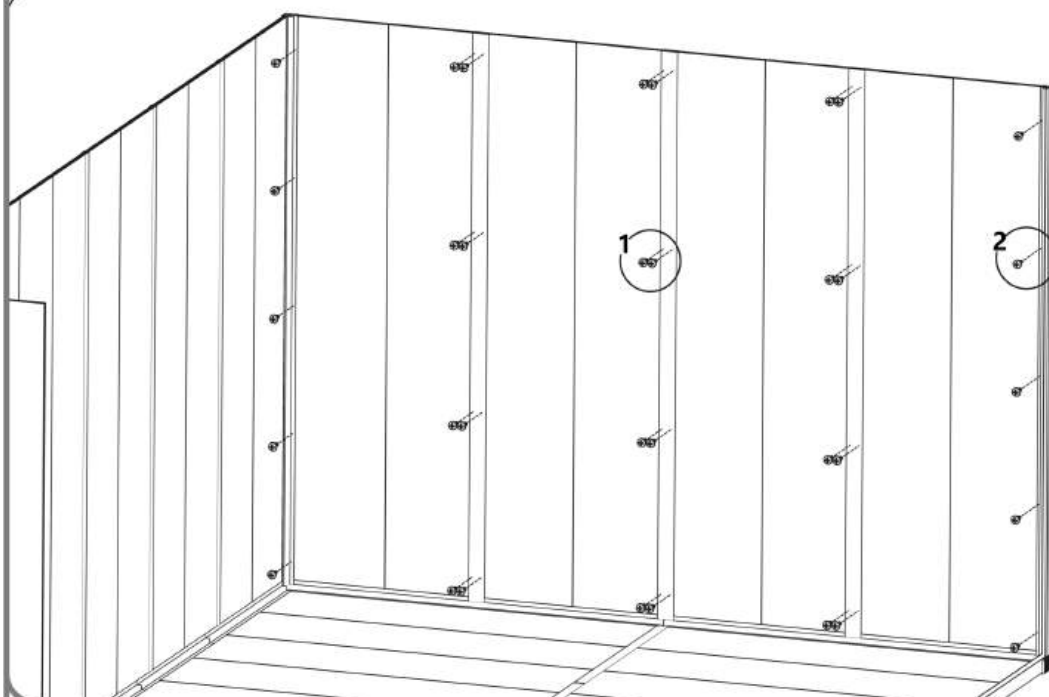

E33(*3)



E31(*3)





F3(*3)




Scraper




Cork Hammer

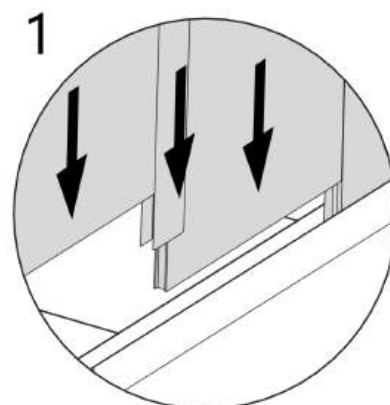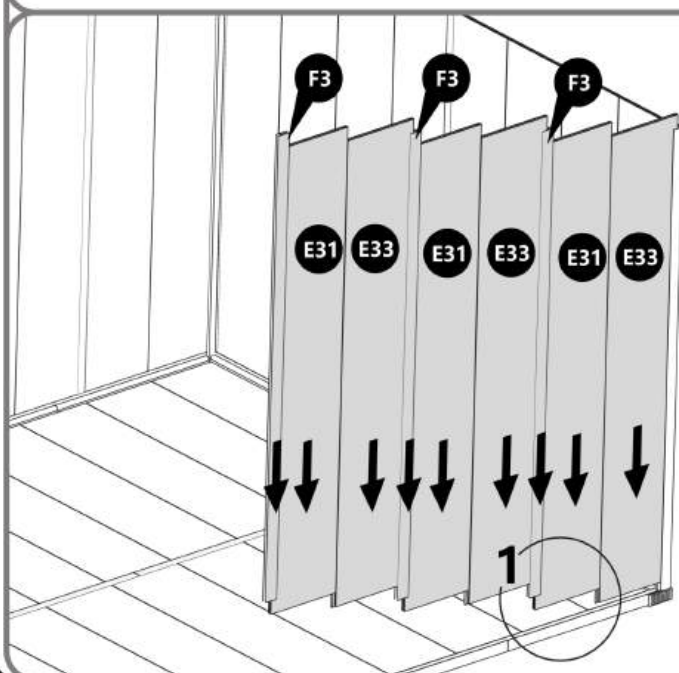


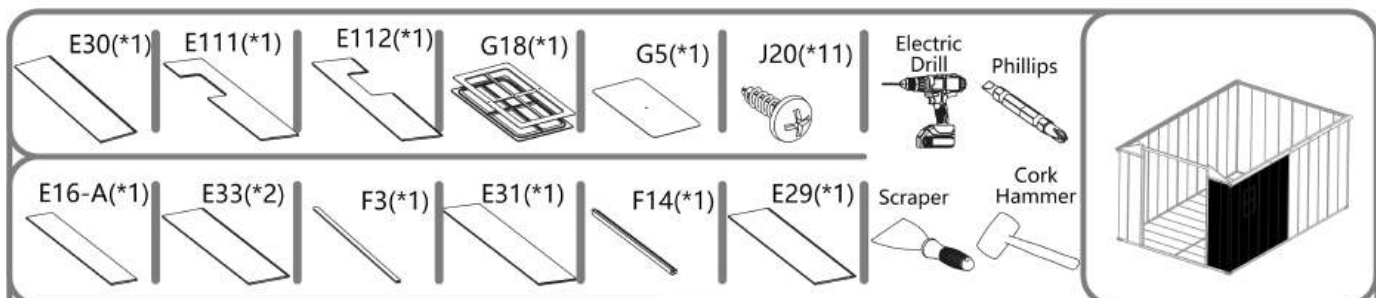



A

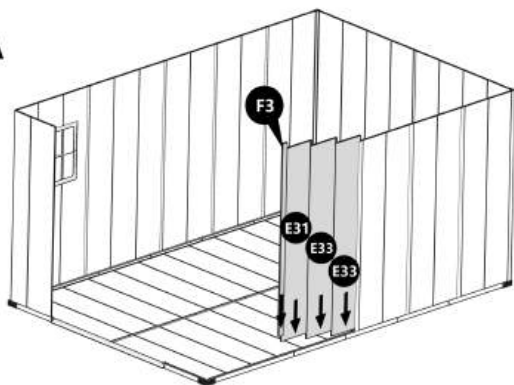

B

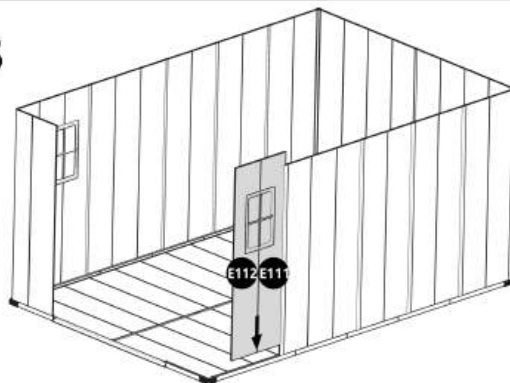

C

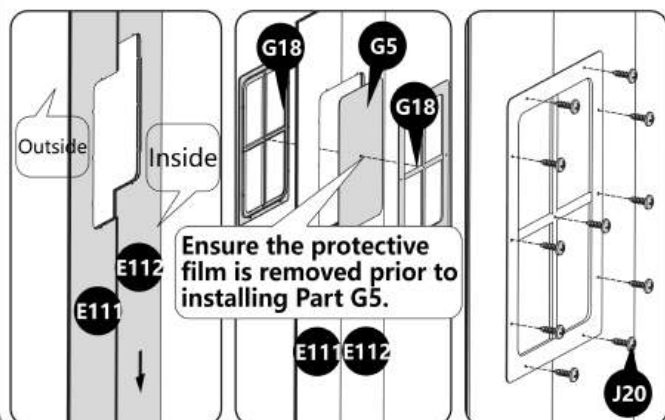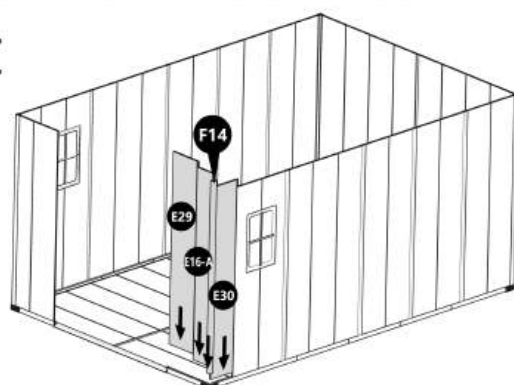


J20(*42)




Electric Drill


Phillips







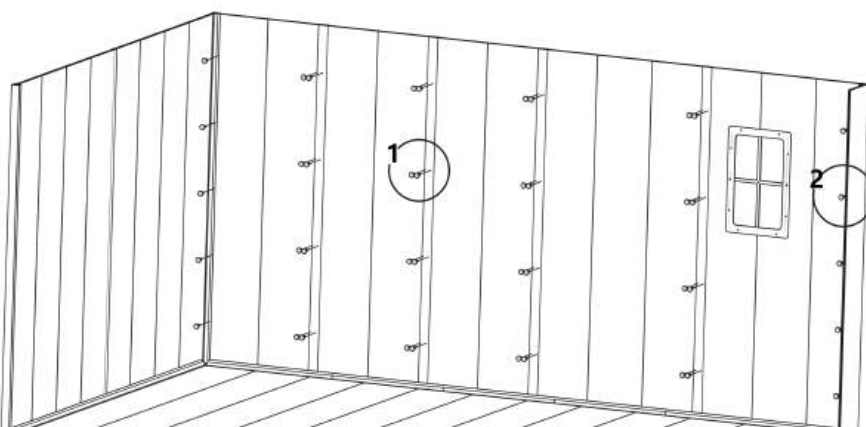


1

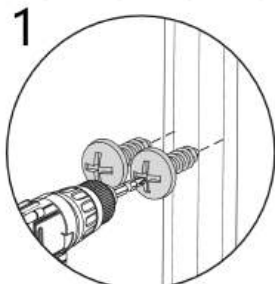



2

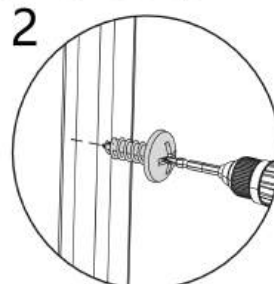

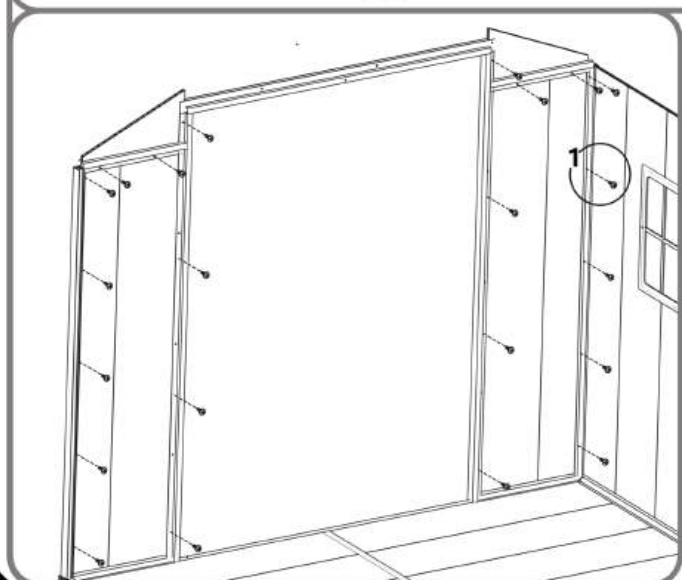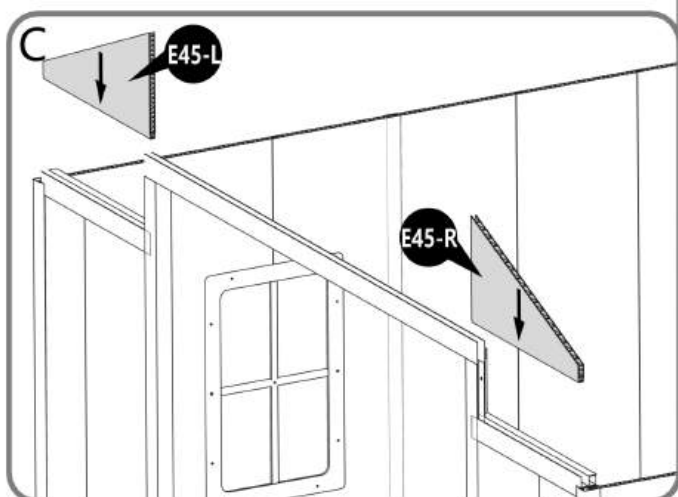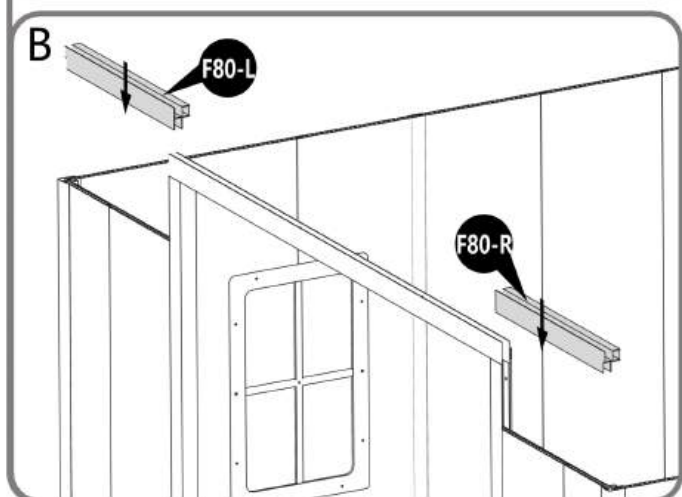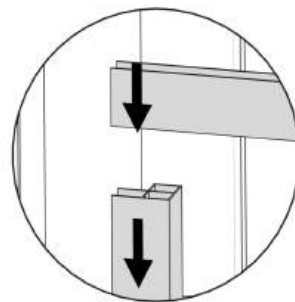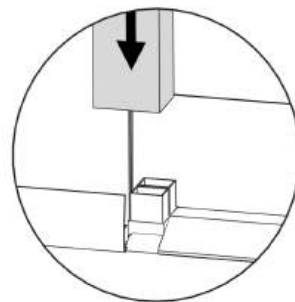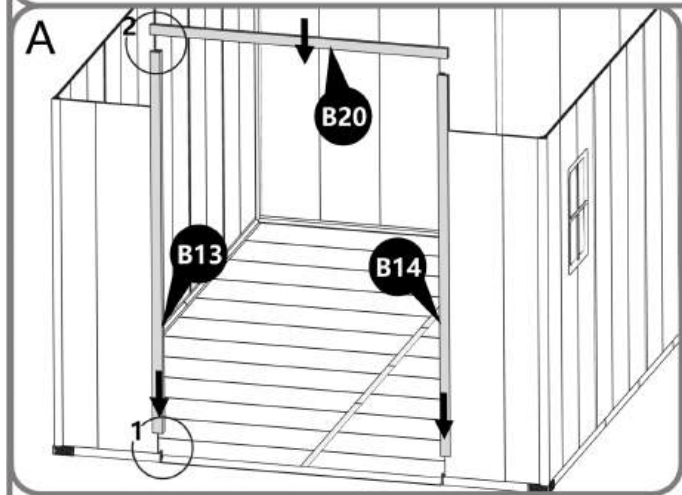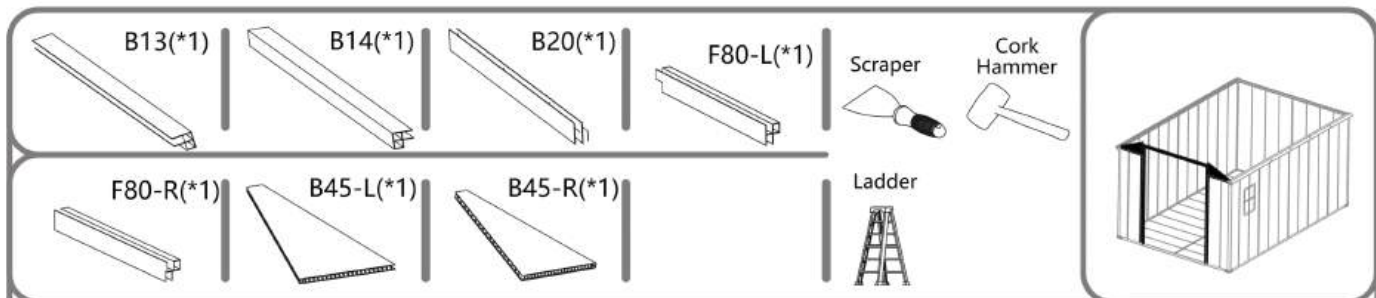


Use the Phillips driver bit for installation.

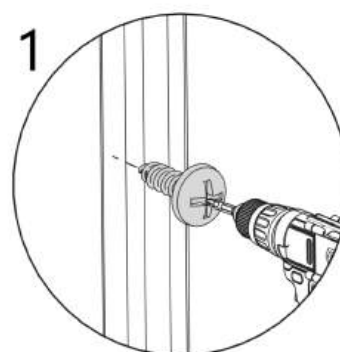


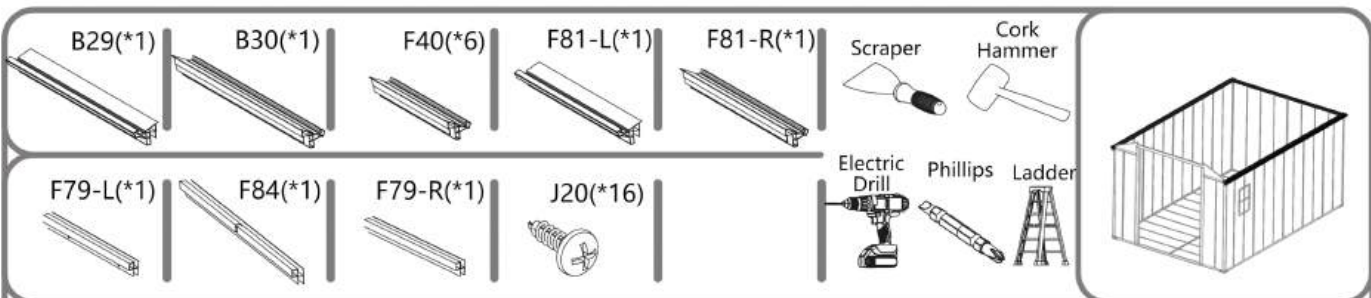

A

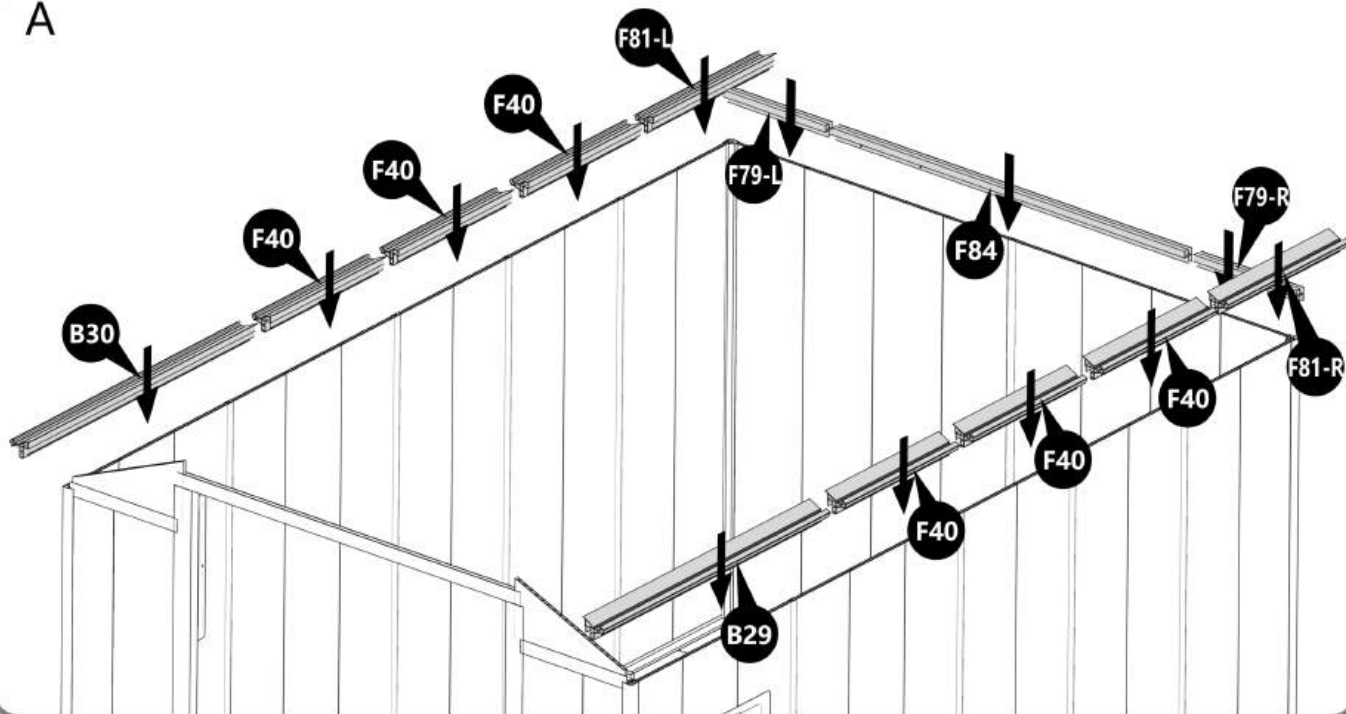

B

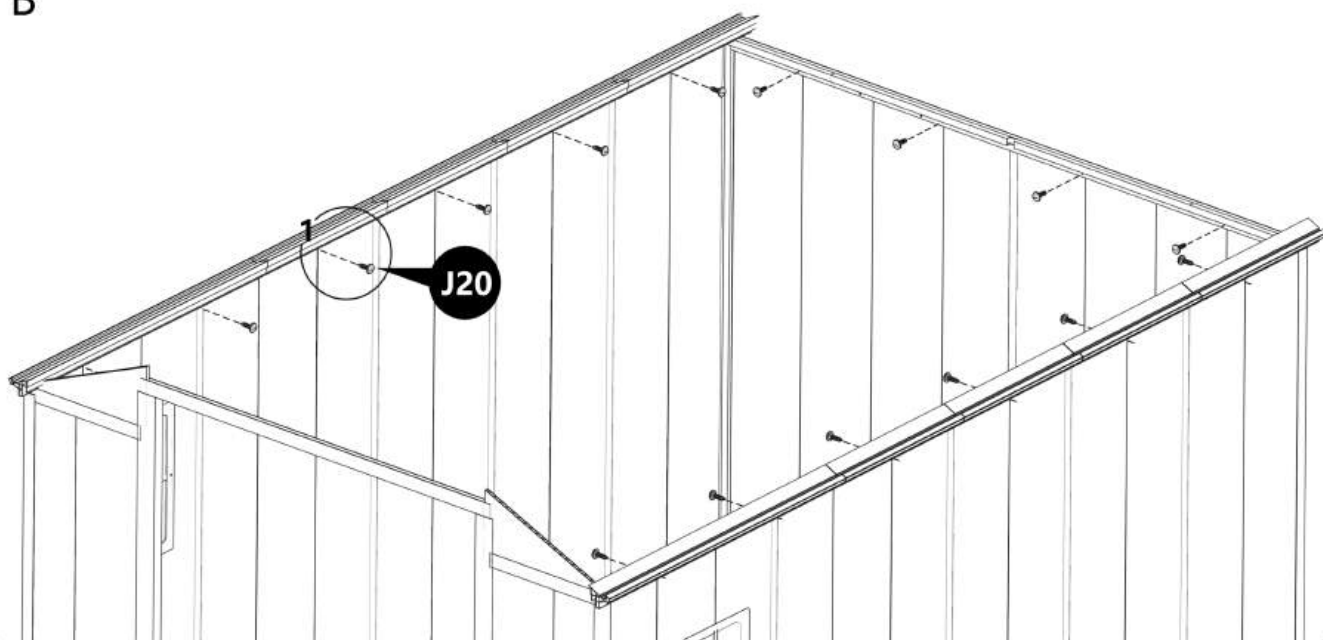

When installing J20, first turn to page 26 to check the positions of J3 and J4 before proceeding. This will prevent overlap and ensure J3 and J4 can be installed properly.

