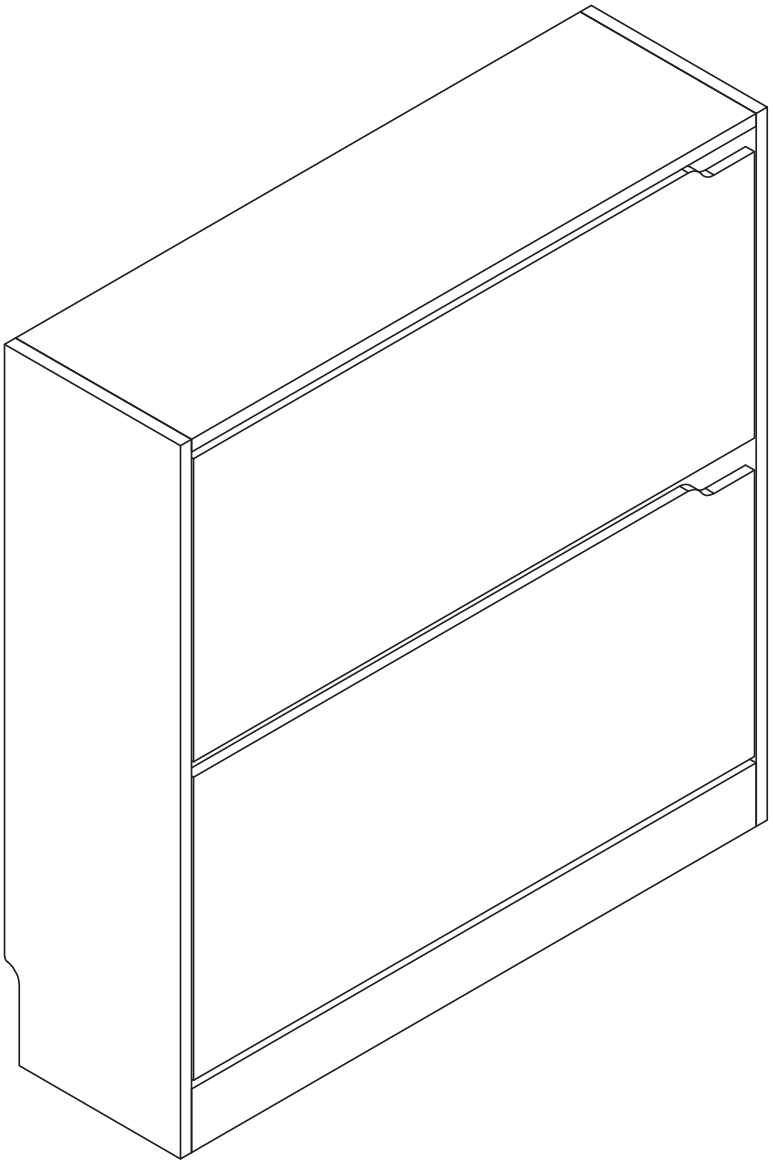
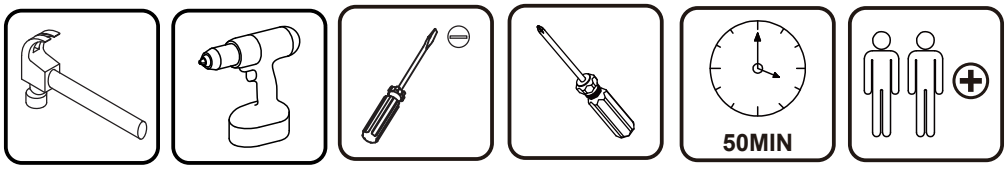
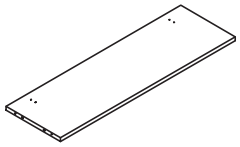
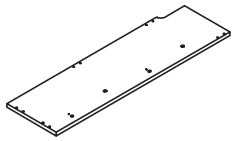
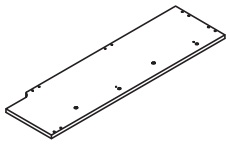
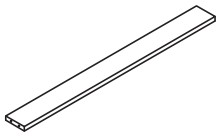
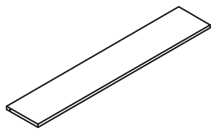
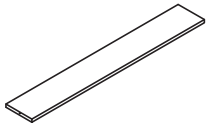
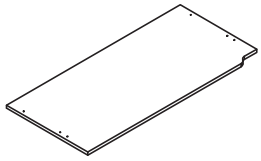

Installation & Assembly

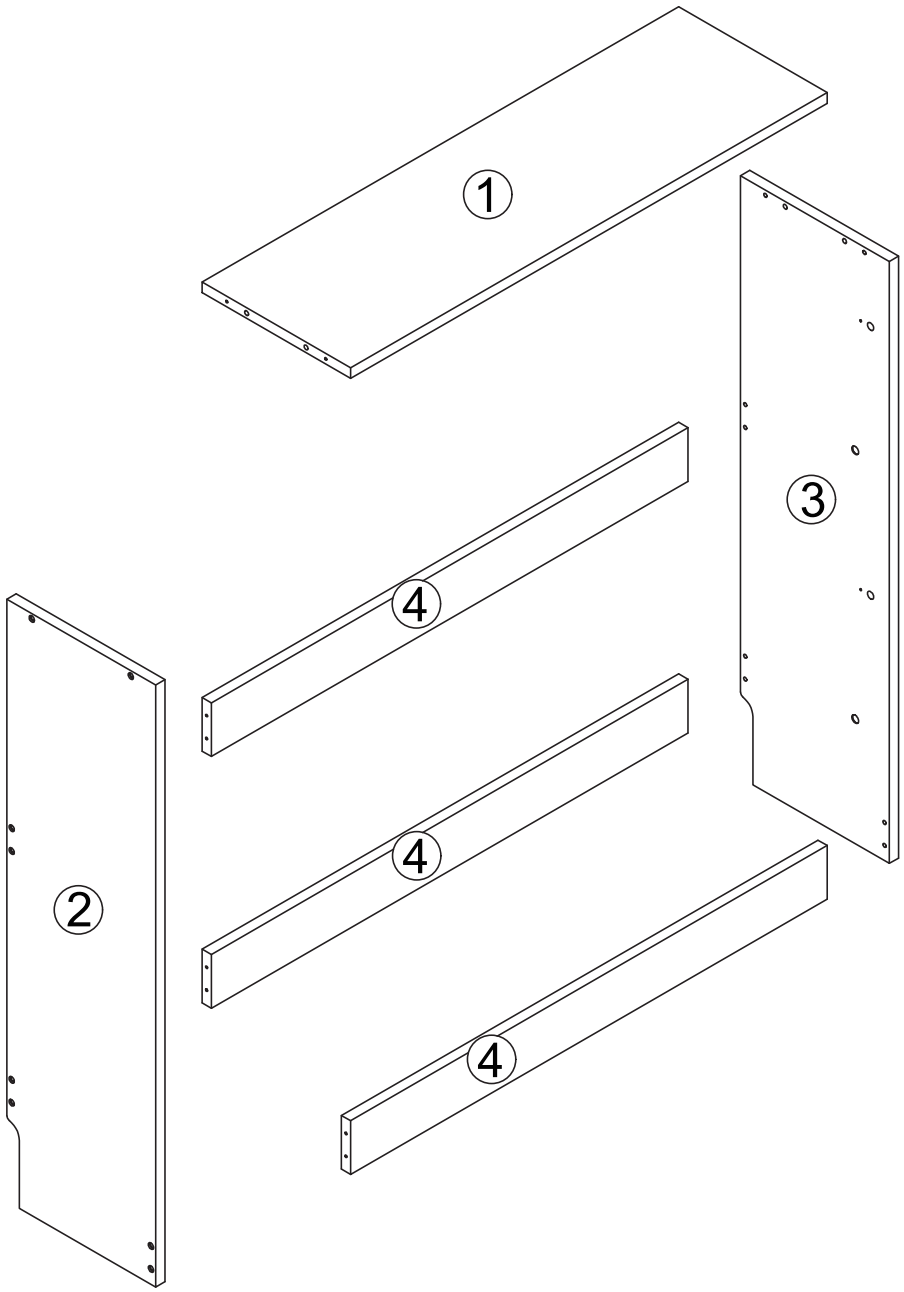


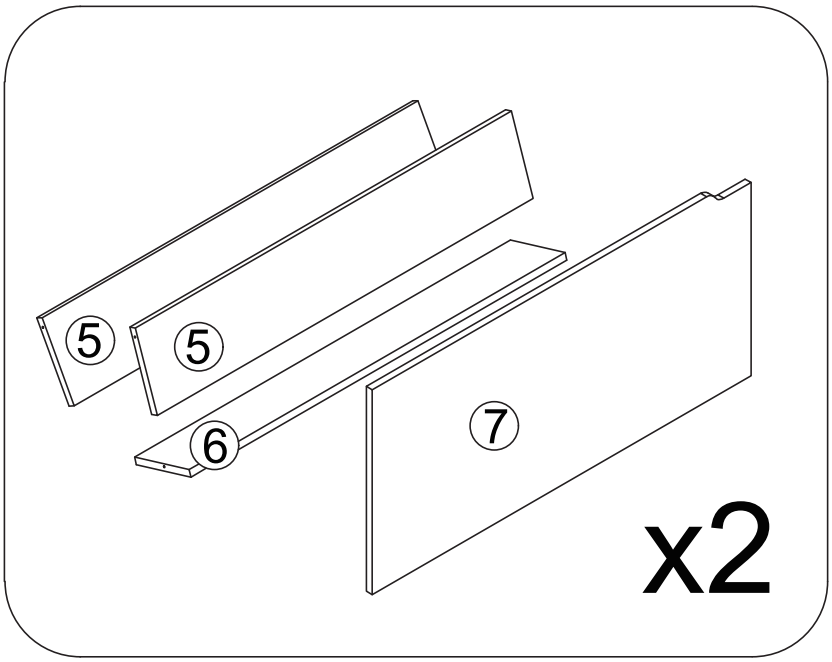


***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

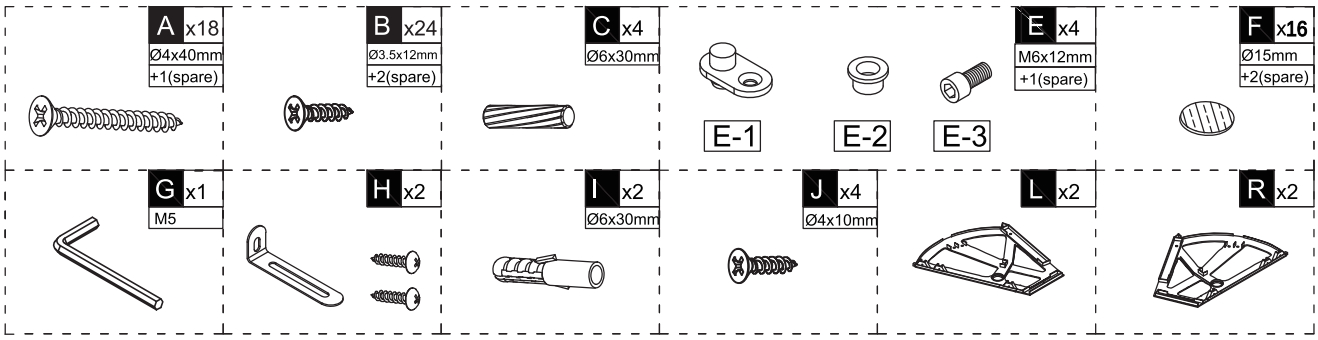
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x3	
⑤		x4	
⑥		x2	
⑦		x2	
	 Hardware Kit	x1	

NO.	PARTS	QTY	SPARE

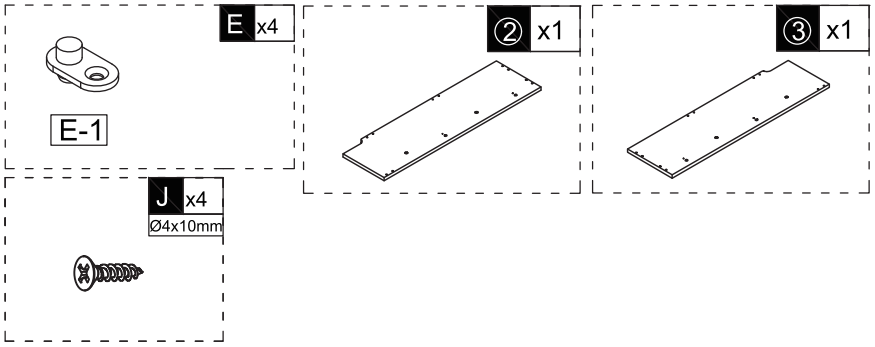

1
3
4
4
4
2

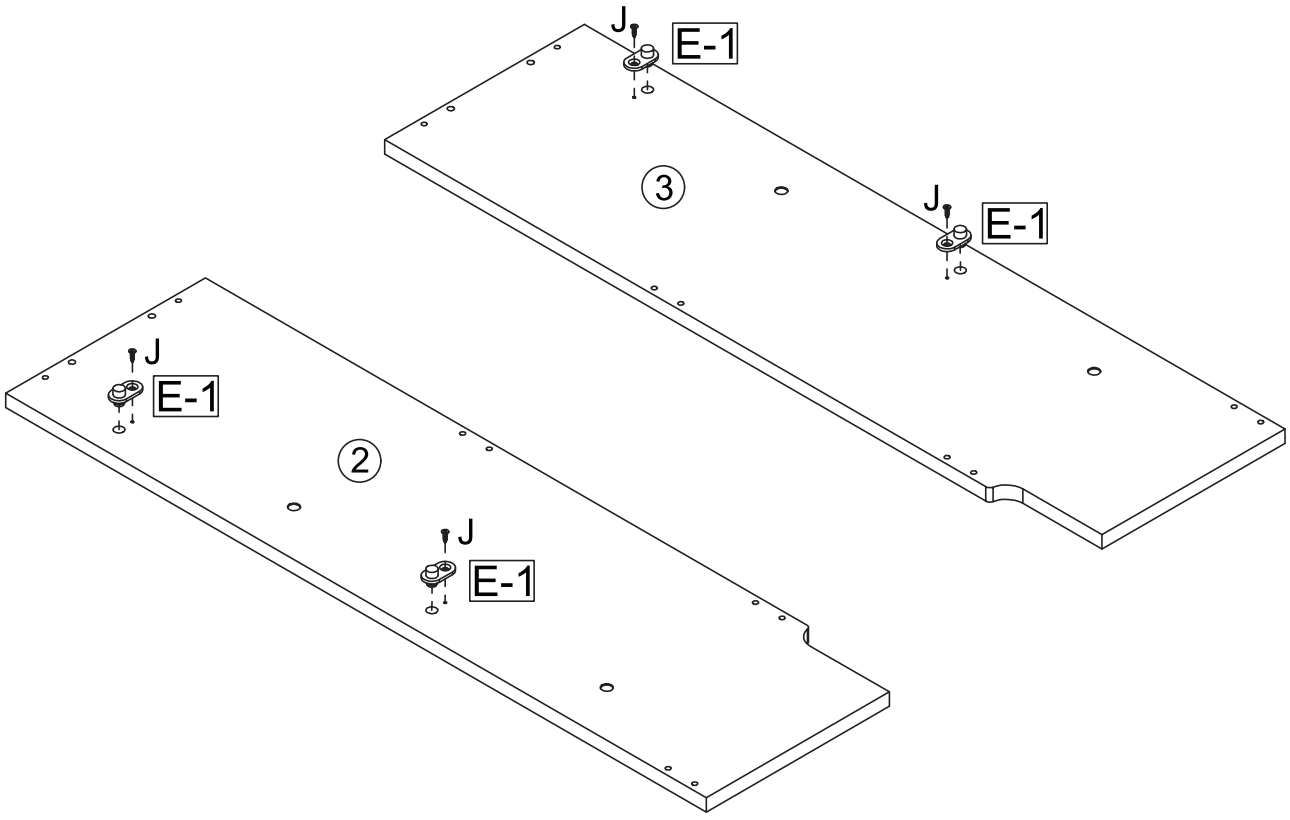

5
5
6
7
x2

HARDWARE

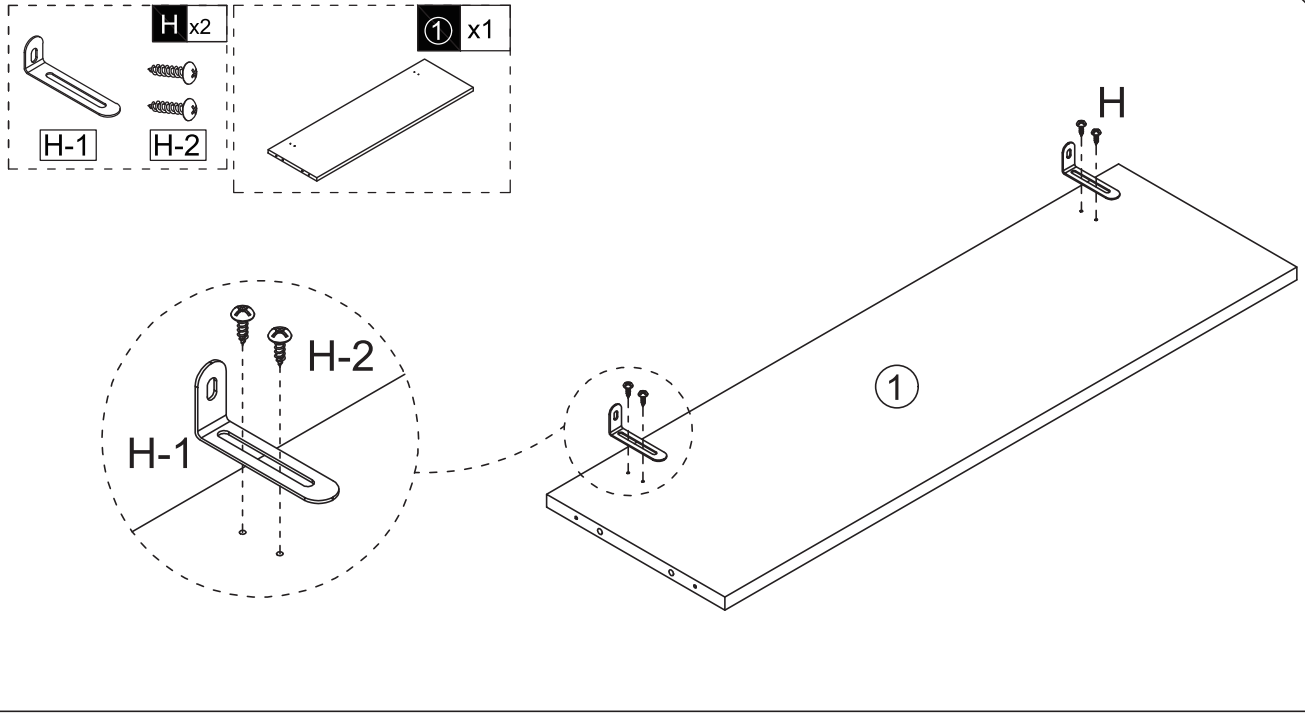

A x18
Ø4x40mm
+1(spare)
B x24
Ø3.5x12mm
+2(spare)
C x4
Ø6x30mm
E-1
E-2
E-3
E x4
M6x12mm
+1(spare)
F x16
Ø15mm
+2(spare)
G x1
M5
H x2
I x2
Ø6x30mm
J x4
Ø4x10mm
L x2
R x2

01

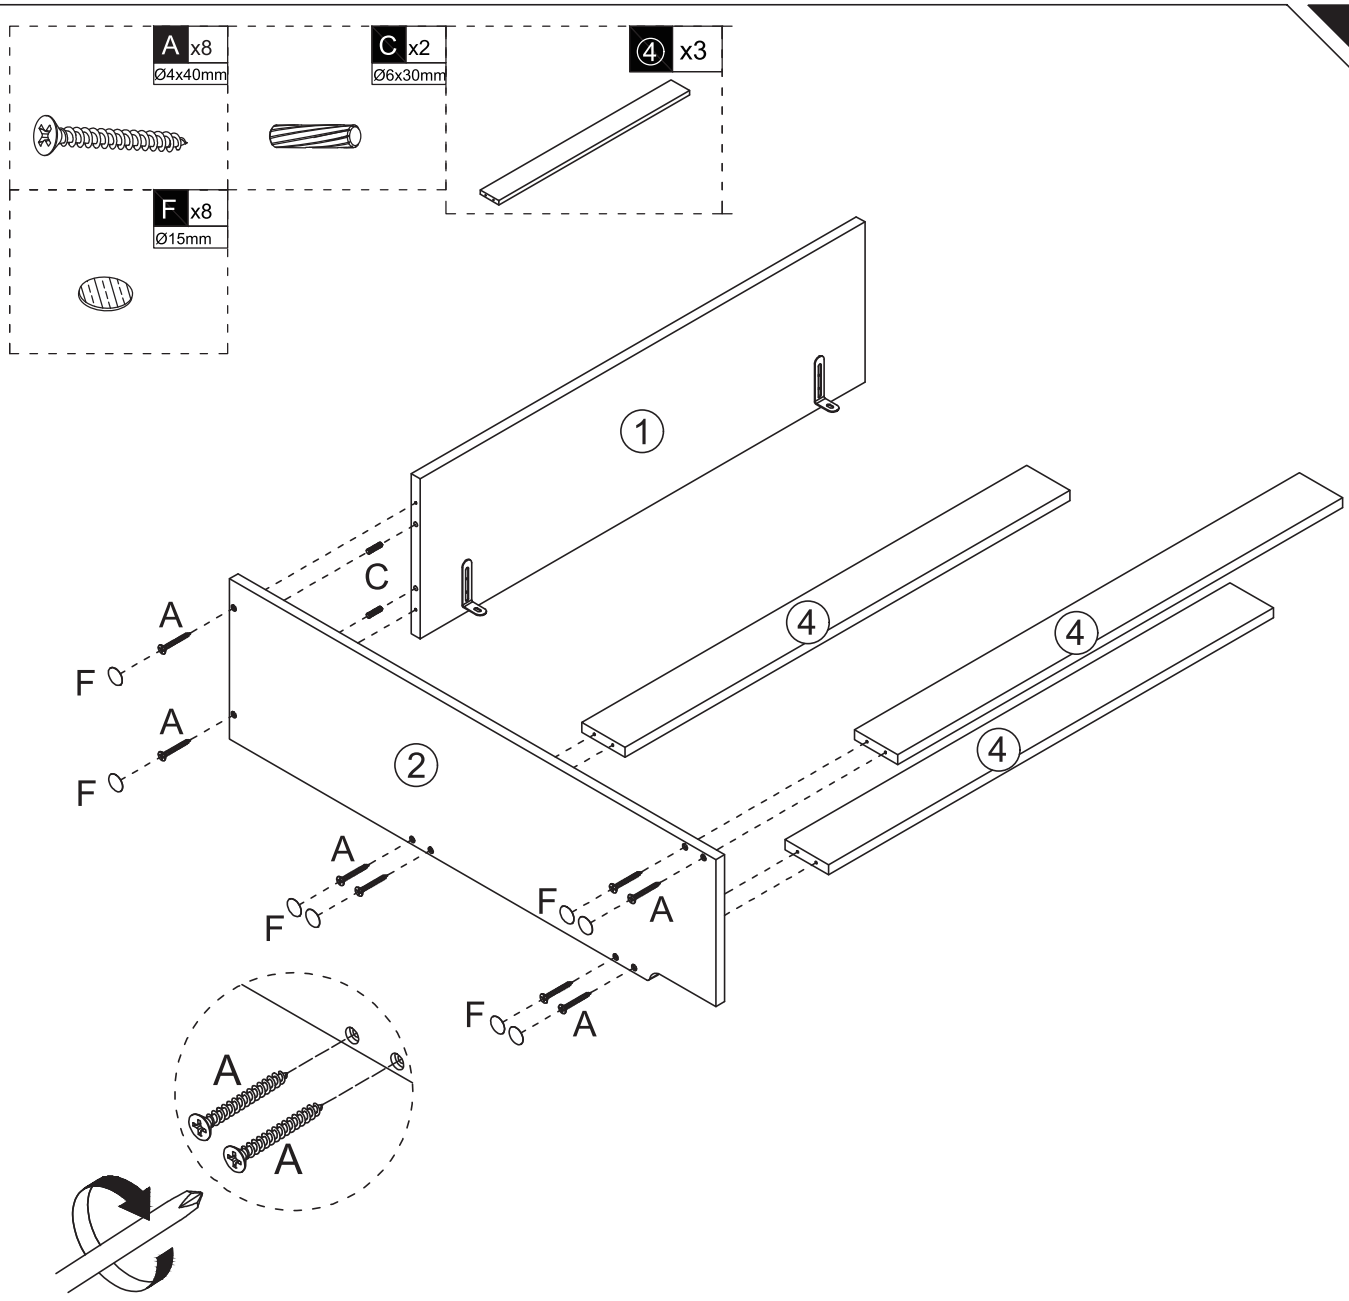

E x4
E-1
② x1
③ x1
J x4
Ø4x10mm

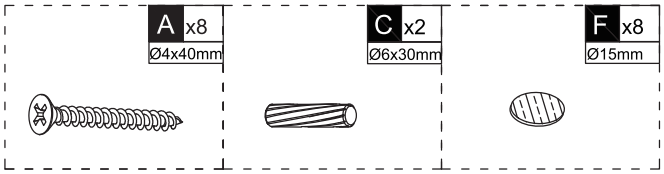

J
E-1
③
J
E-1
J
E-1
②
J
E-1

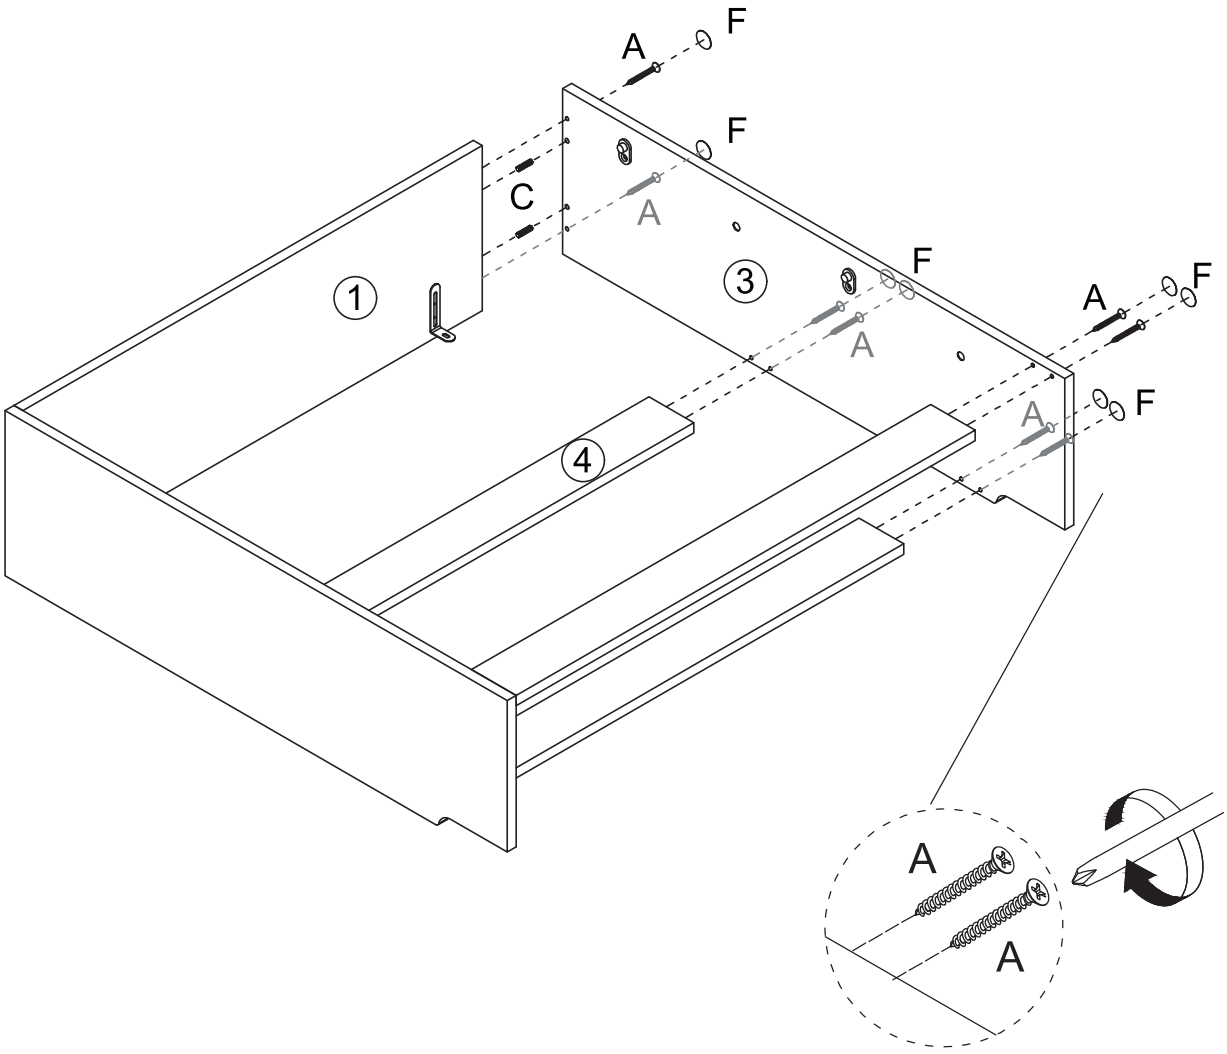
02


H x2
H-1
H-2
① x1
H
H-2
H-1
①

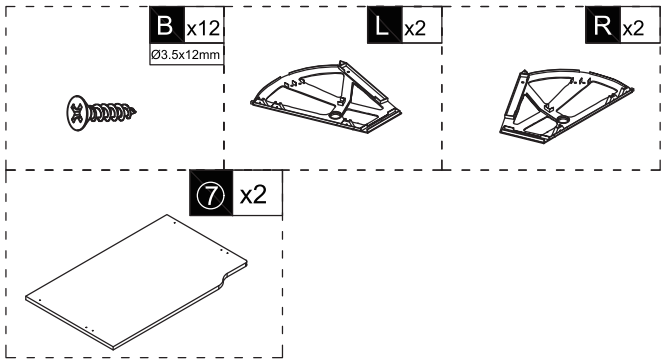
03

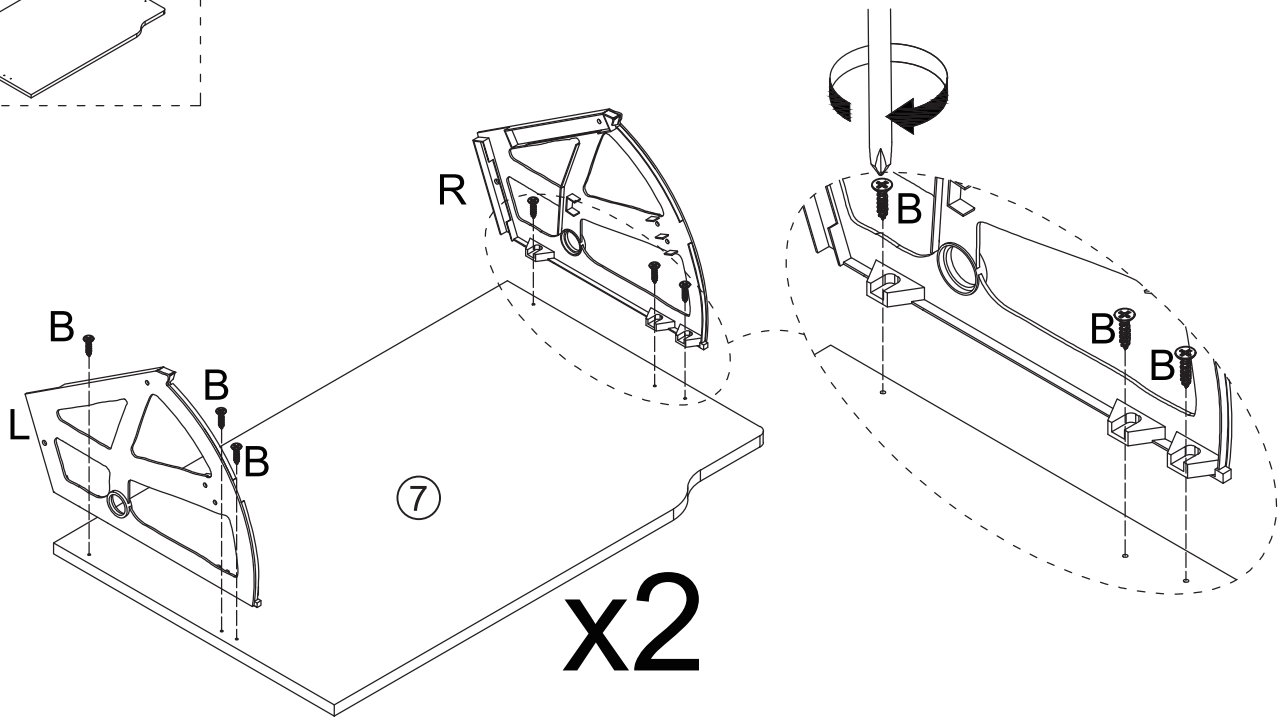

A x8
Ø4x40mm
C x2
Ø6x30mm
④ x3
F x8
Ø15mm
①
C
A
F
A
F
②
A
F
F
A
F
A
④
④
④
A
A


A x8
Ø4x40mm
C x2
Ø6x30mm
F x8
Ø15mm

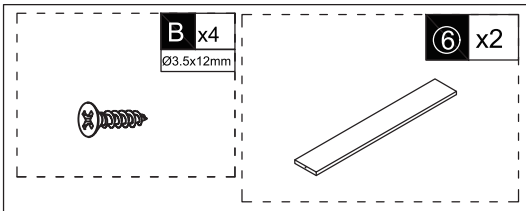

A
F
F
C
A
1
3
F
A
F
A
A
F
4
A
A

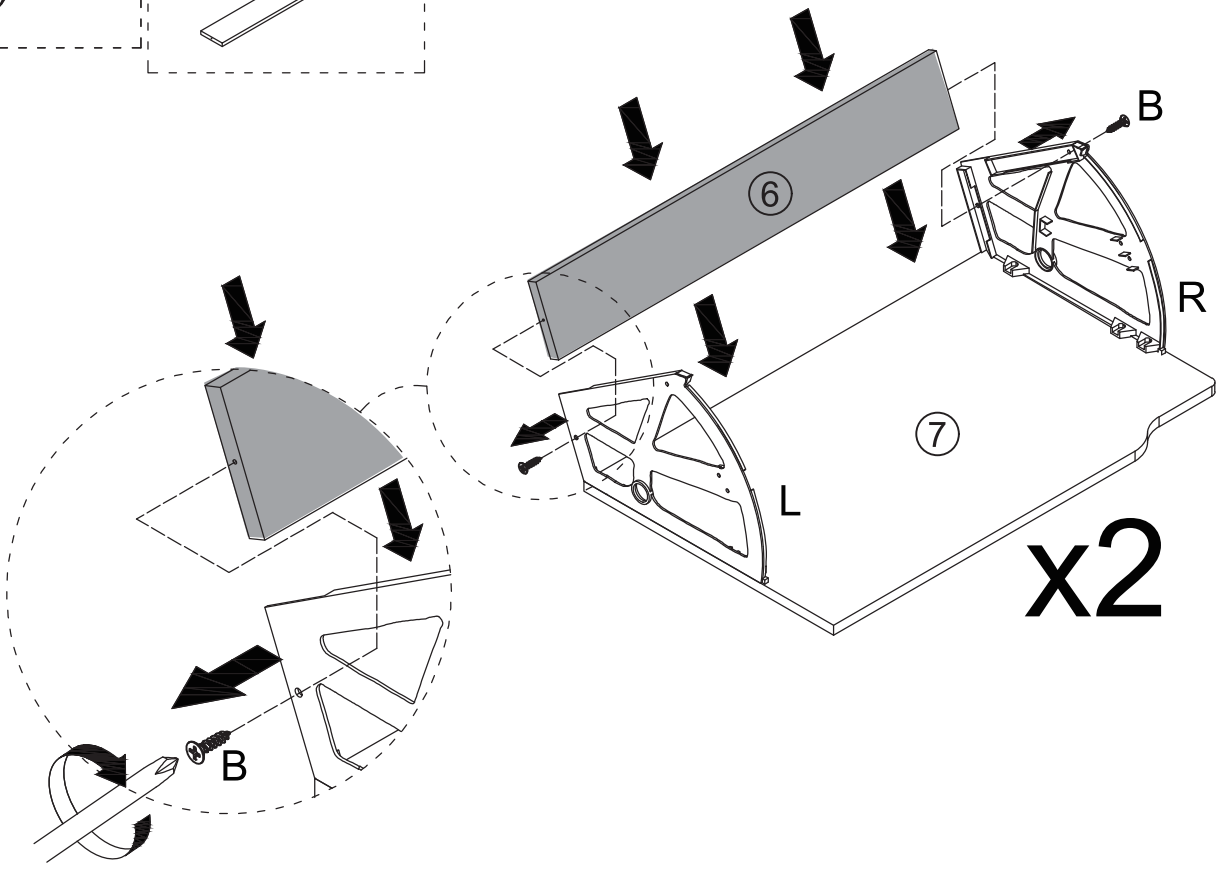
05


B x12
Ø3.5x12mm
L x2
R x2
⑦ x2

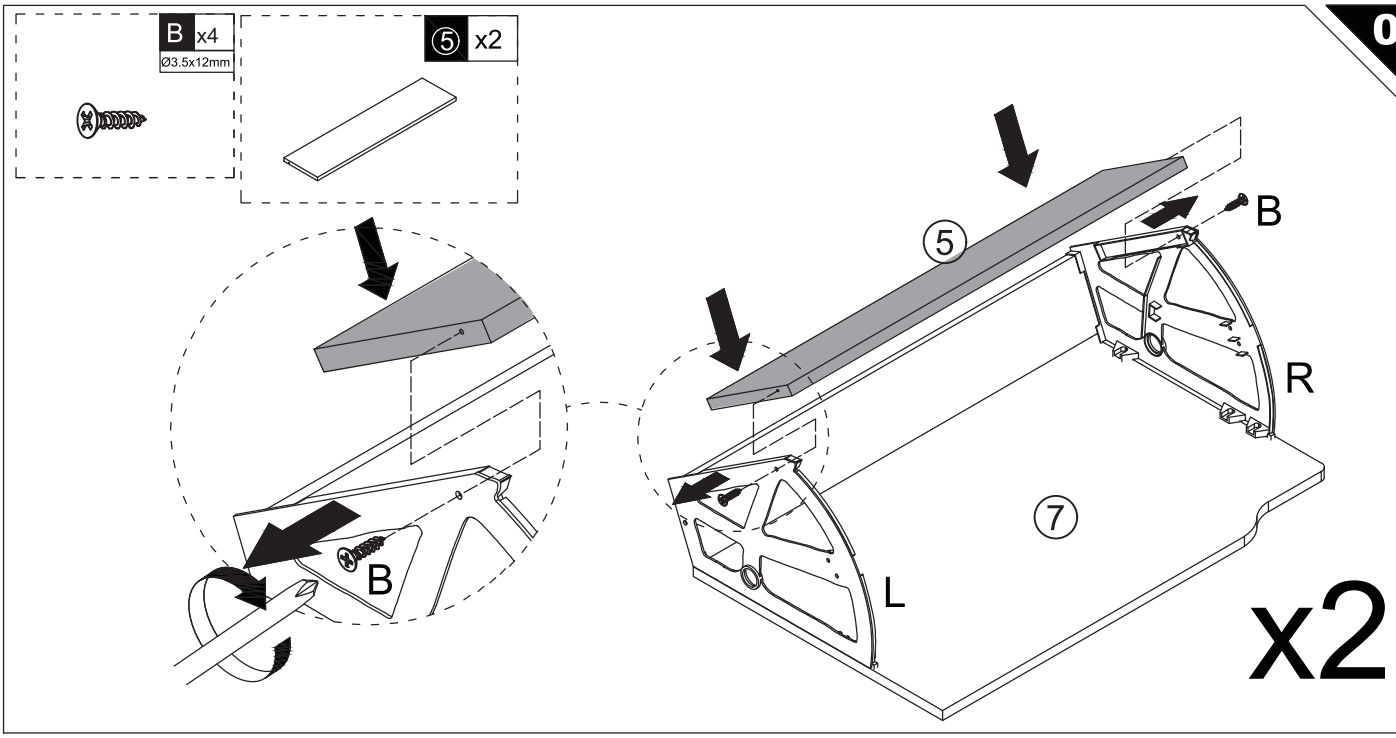

R
B
B
B
L
B
B
⑦
x2

06

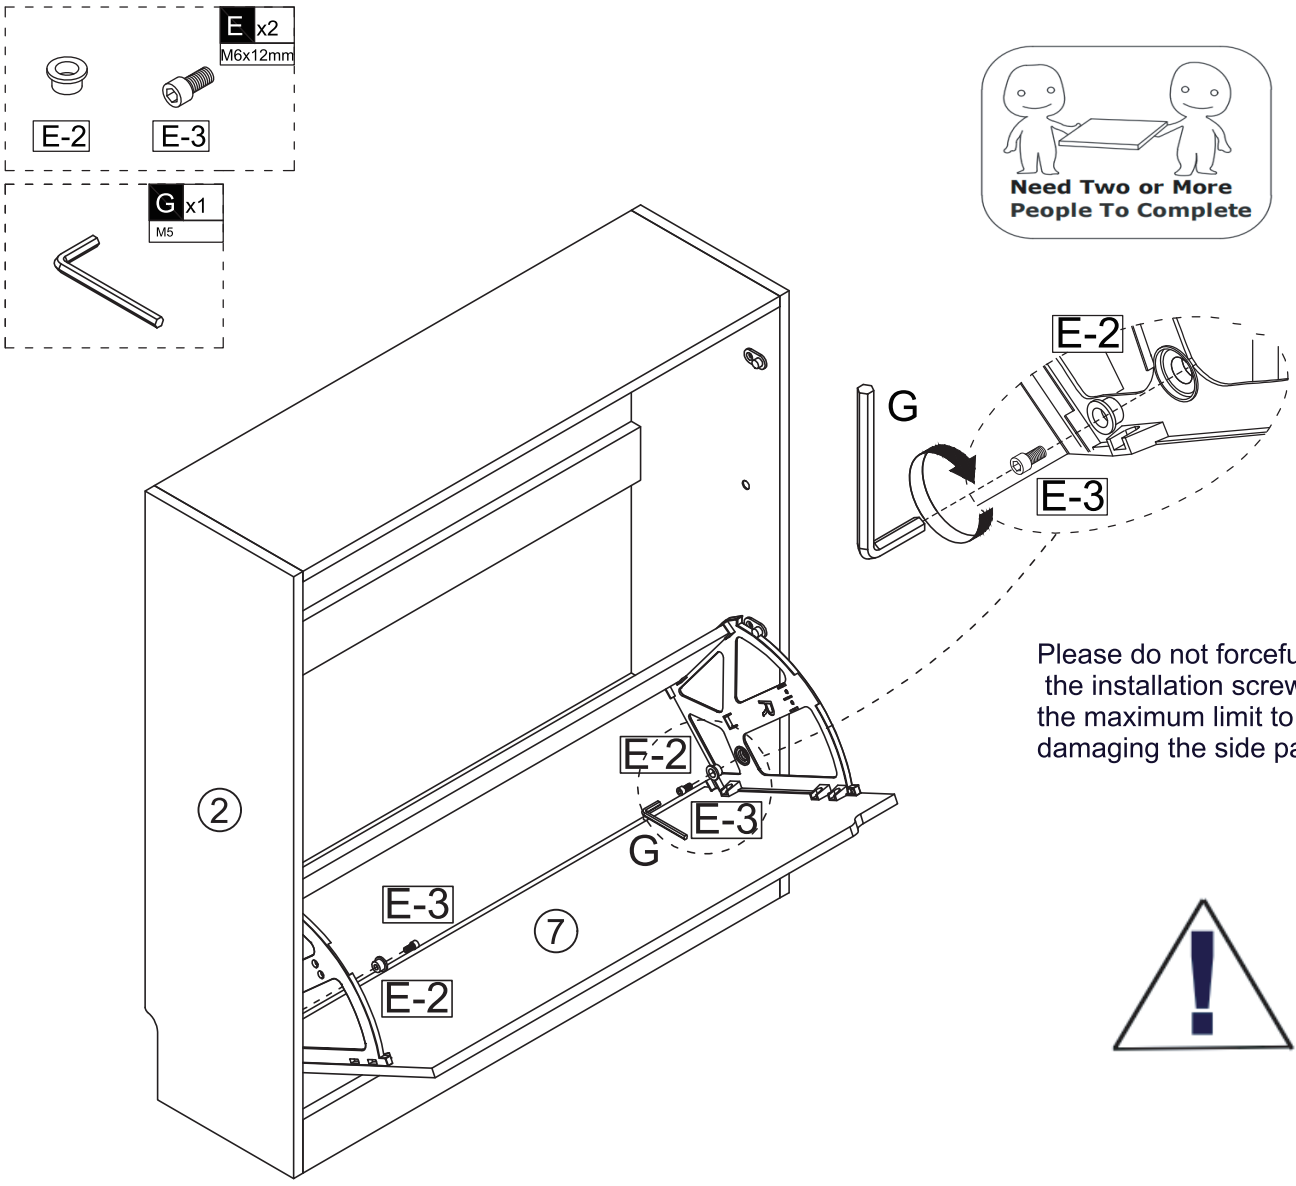

B x4
Ø3.5x12mm
⑥ x2


⑥
B
R
⑦
L
x2
B

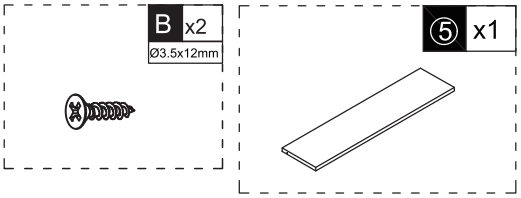
07

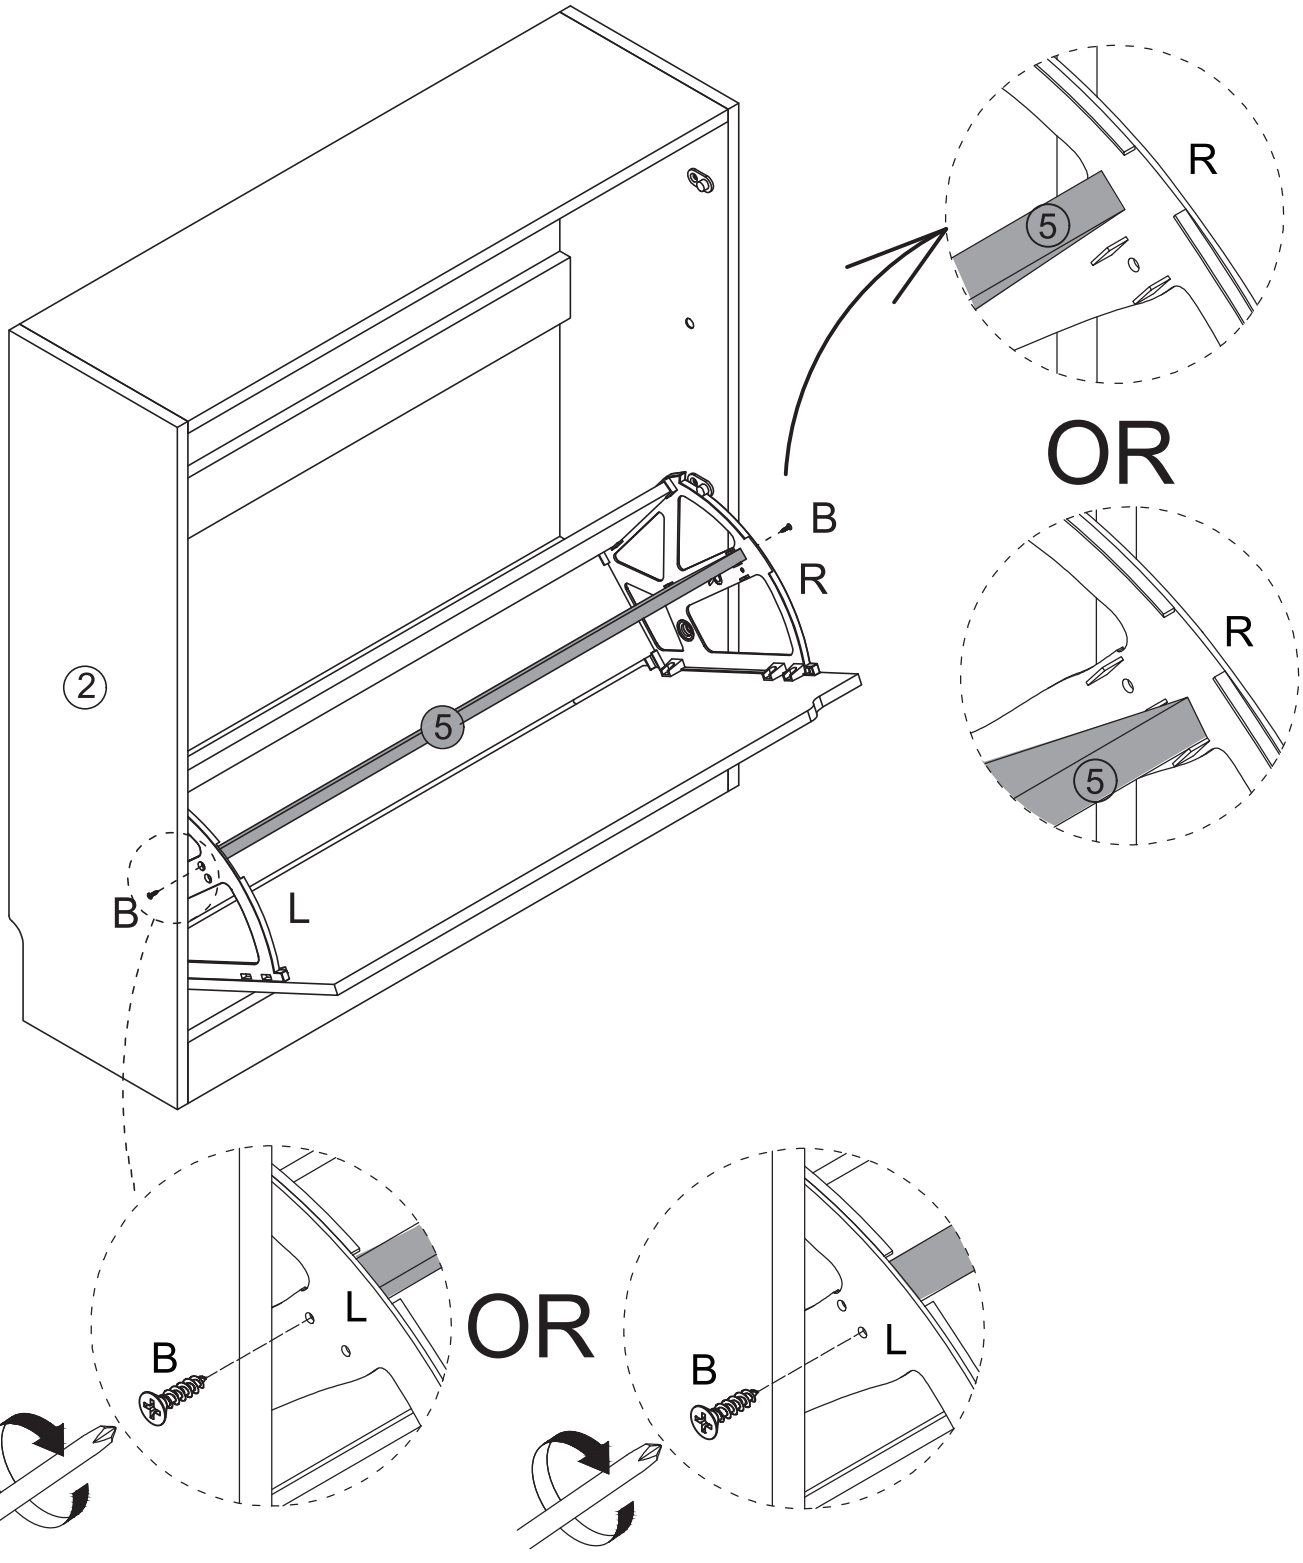


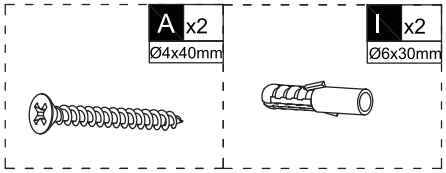
08

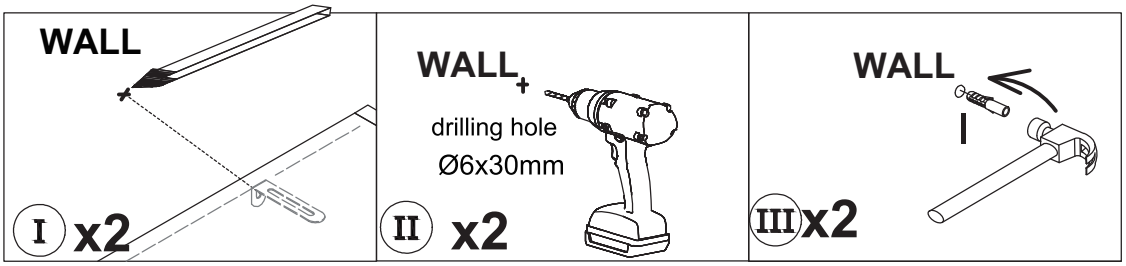


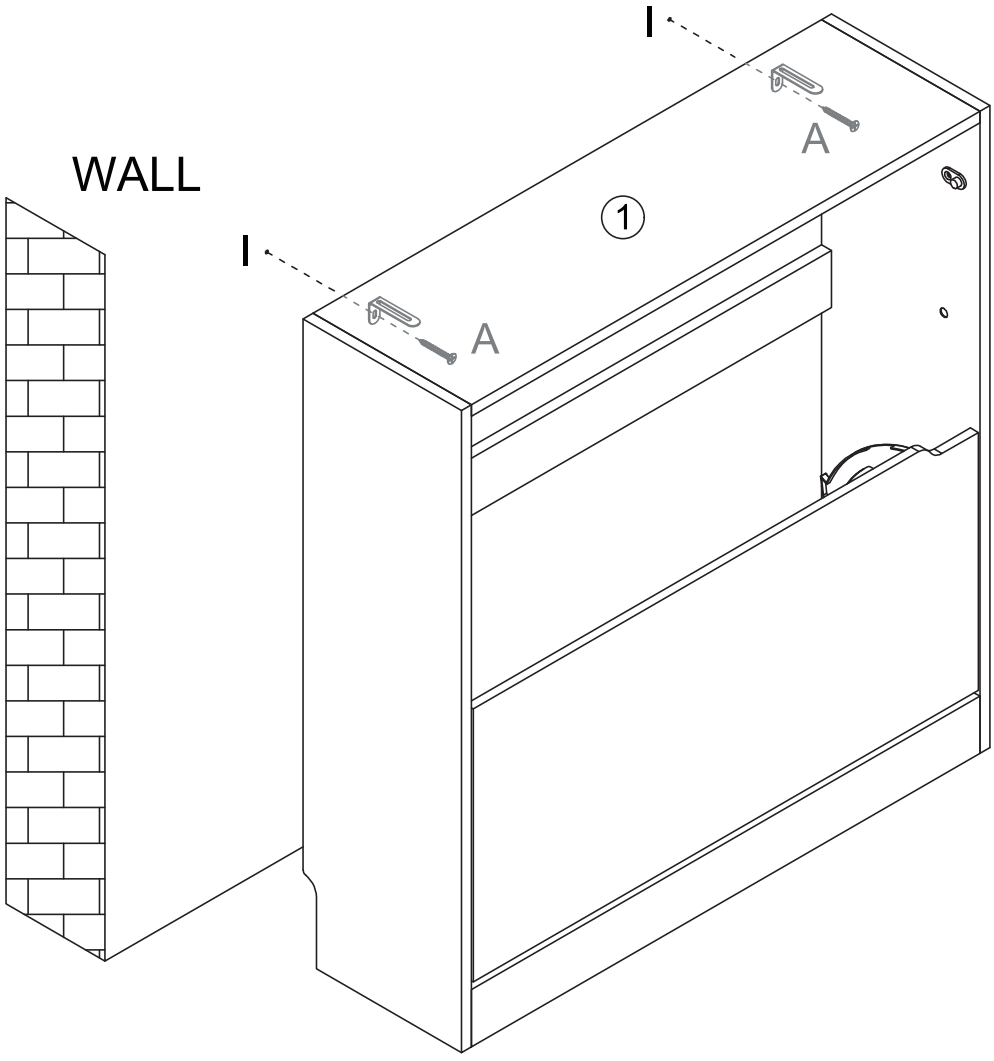
Please do not forcefully lock the installation screws to the maximum limit to avoid damaging the side panel.

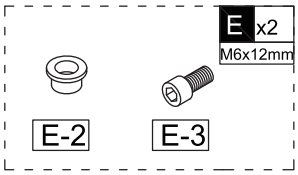

B x2
Ø3.5x12mm
⑤ x1

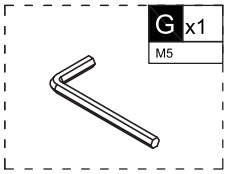

R
5
OR
B
R
2
5
B
L
R
5
B
L
OR
B
L

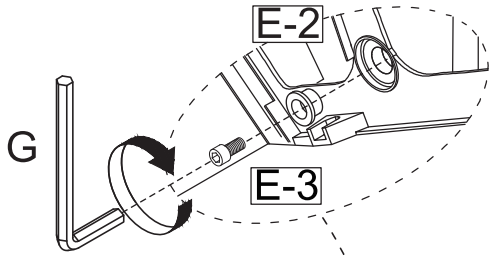

A x2
Ø4x40mm
I x2
Ø6x30mm

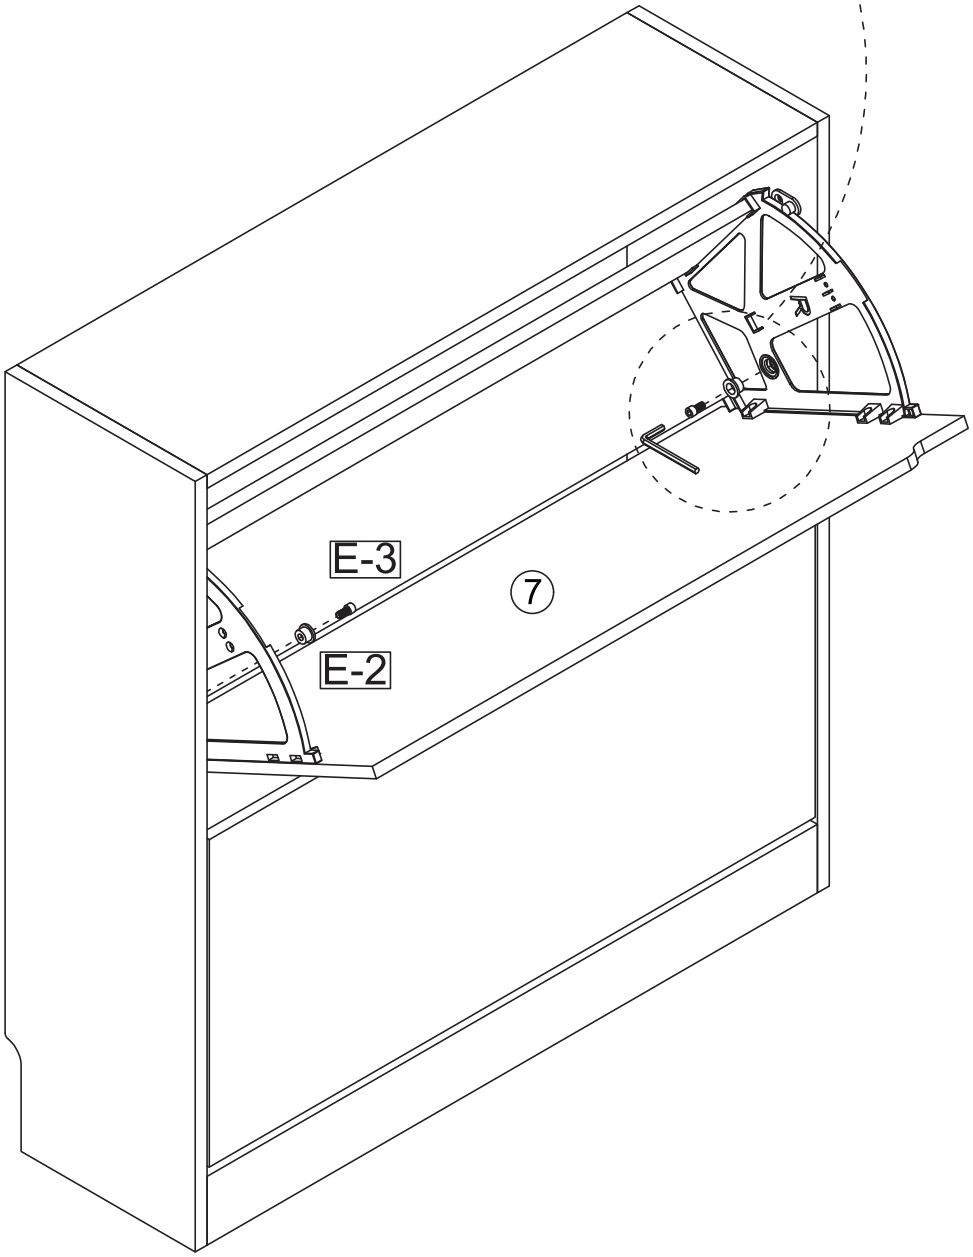

WALL
I x2
WALL
drilling hole
Ø6x30mm
II x2
WALL
I
III x2

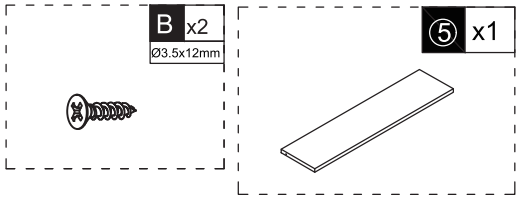

WALL
I
A
1
I
A

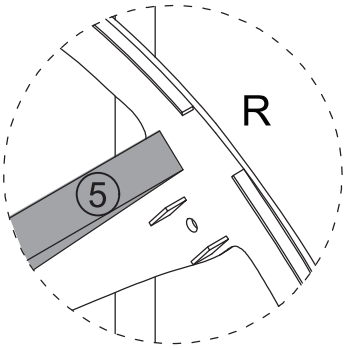

E x2
M6x12mm
E-2
E-3


G x1
M5

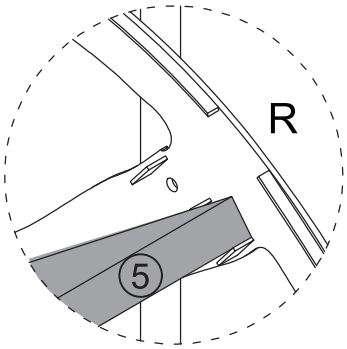

E-2
G
E-3

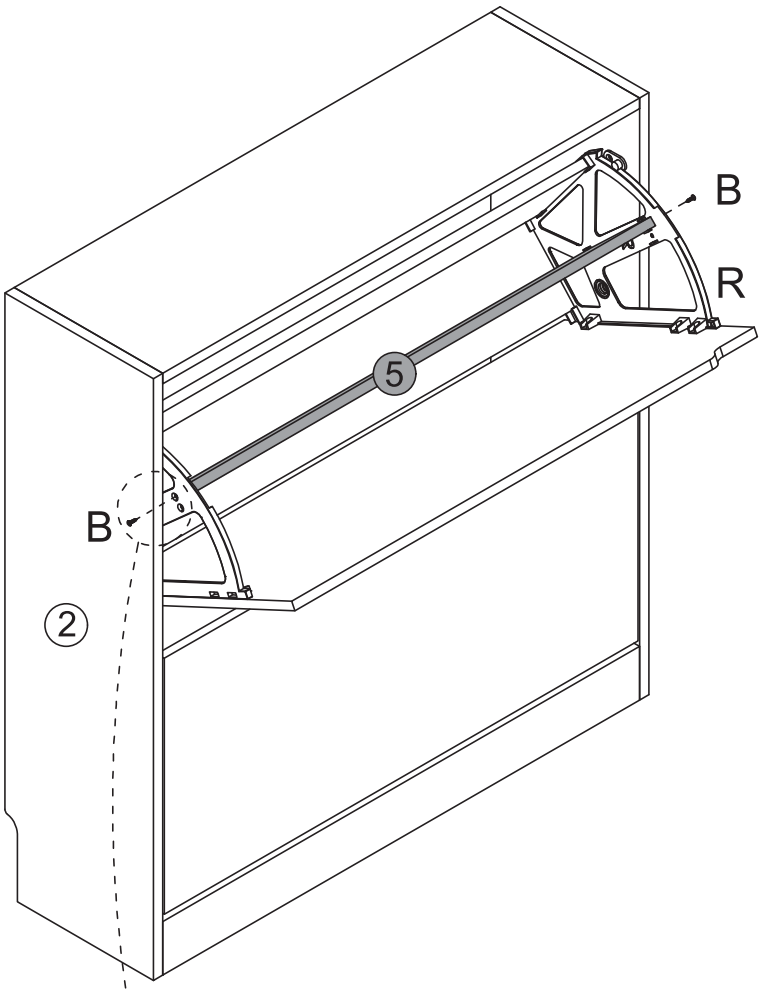

E-3
7
E-2

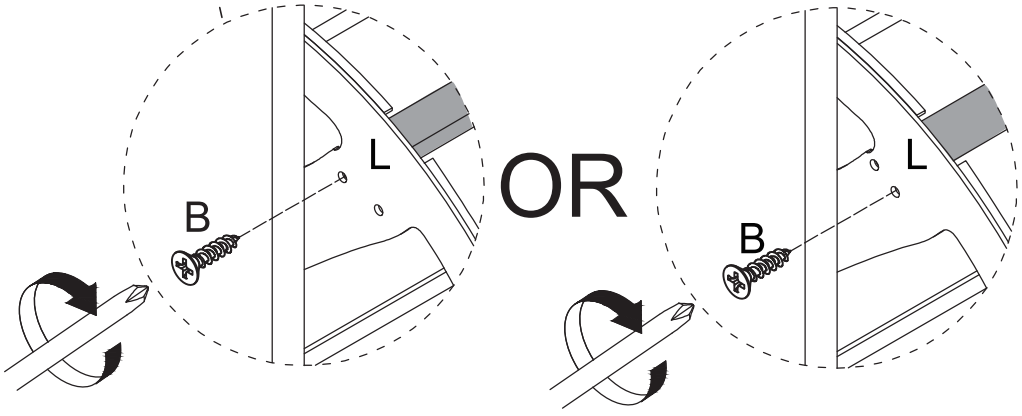




OR







Done

