


ASSEMBLY INSTRUCTIONS


V-TS23-0270A

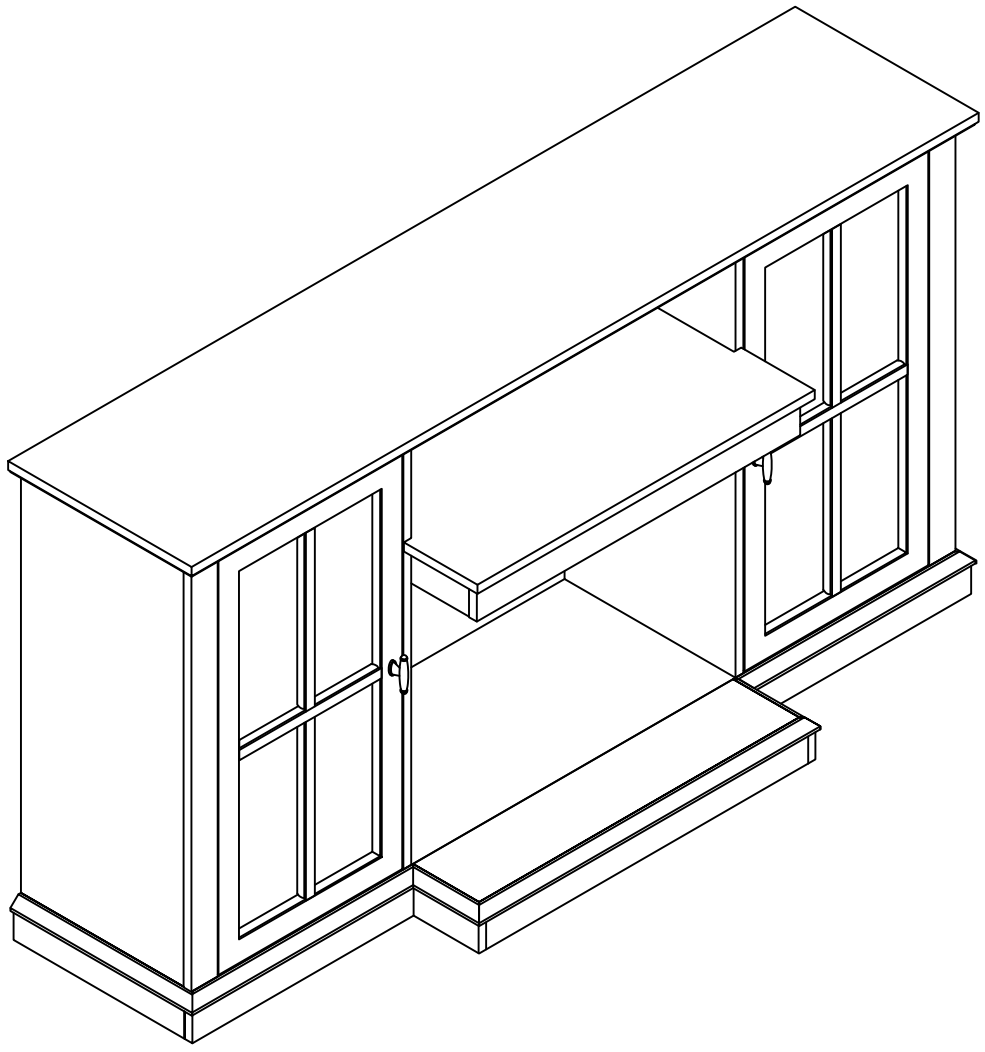


WARNING



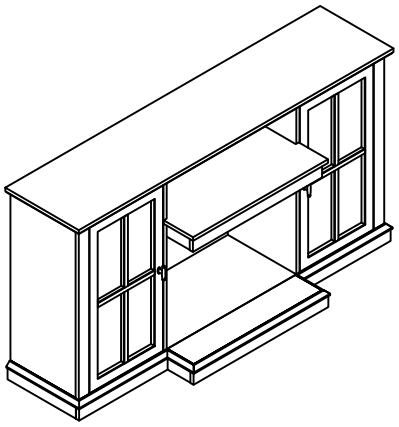

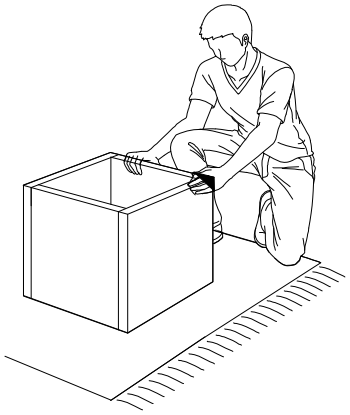


Assembly the furniture on empty carton, carpet, or rug to prevent scratchrs or damage,

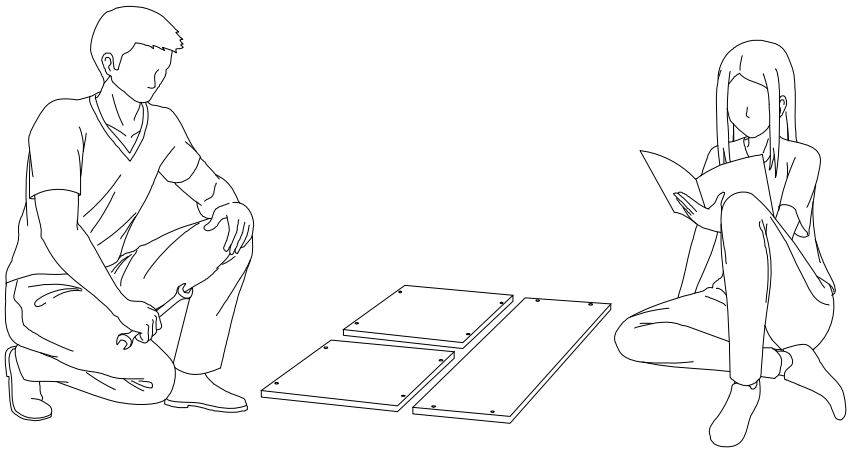


This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.

PACKAGE CONTENT

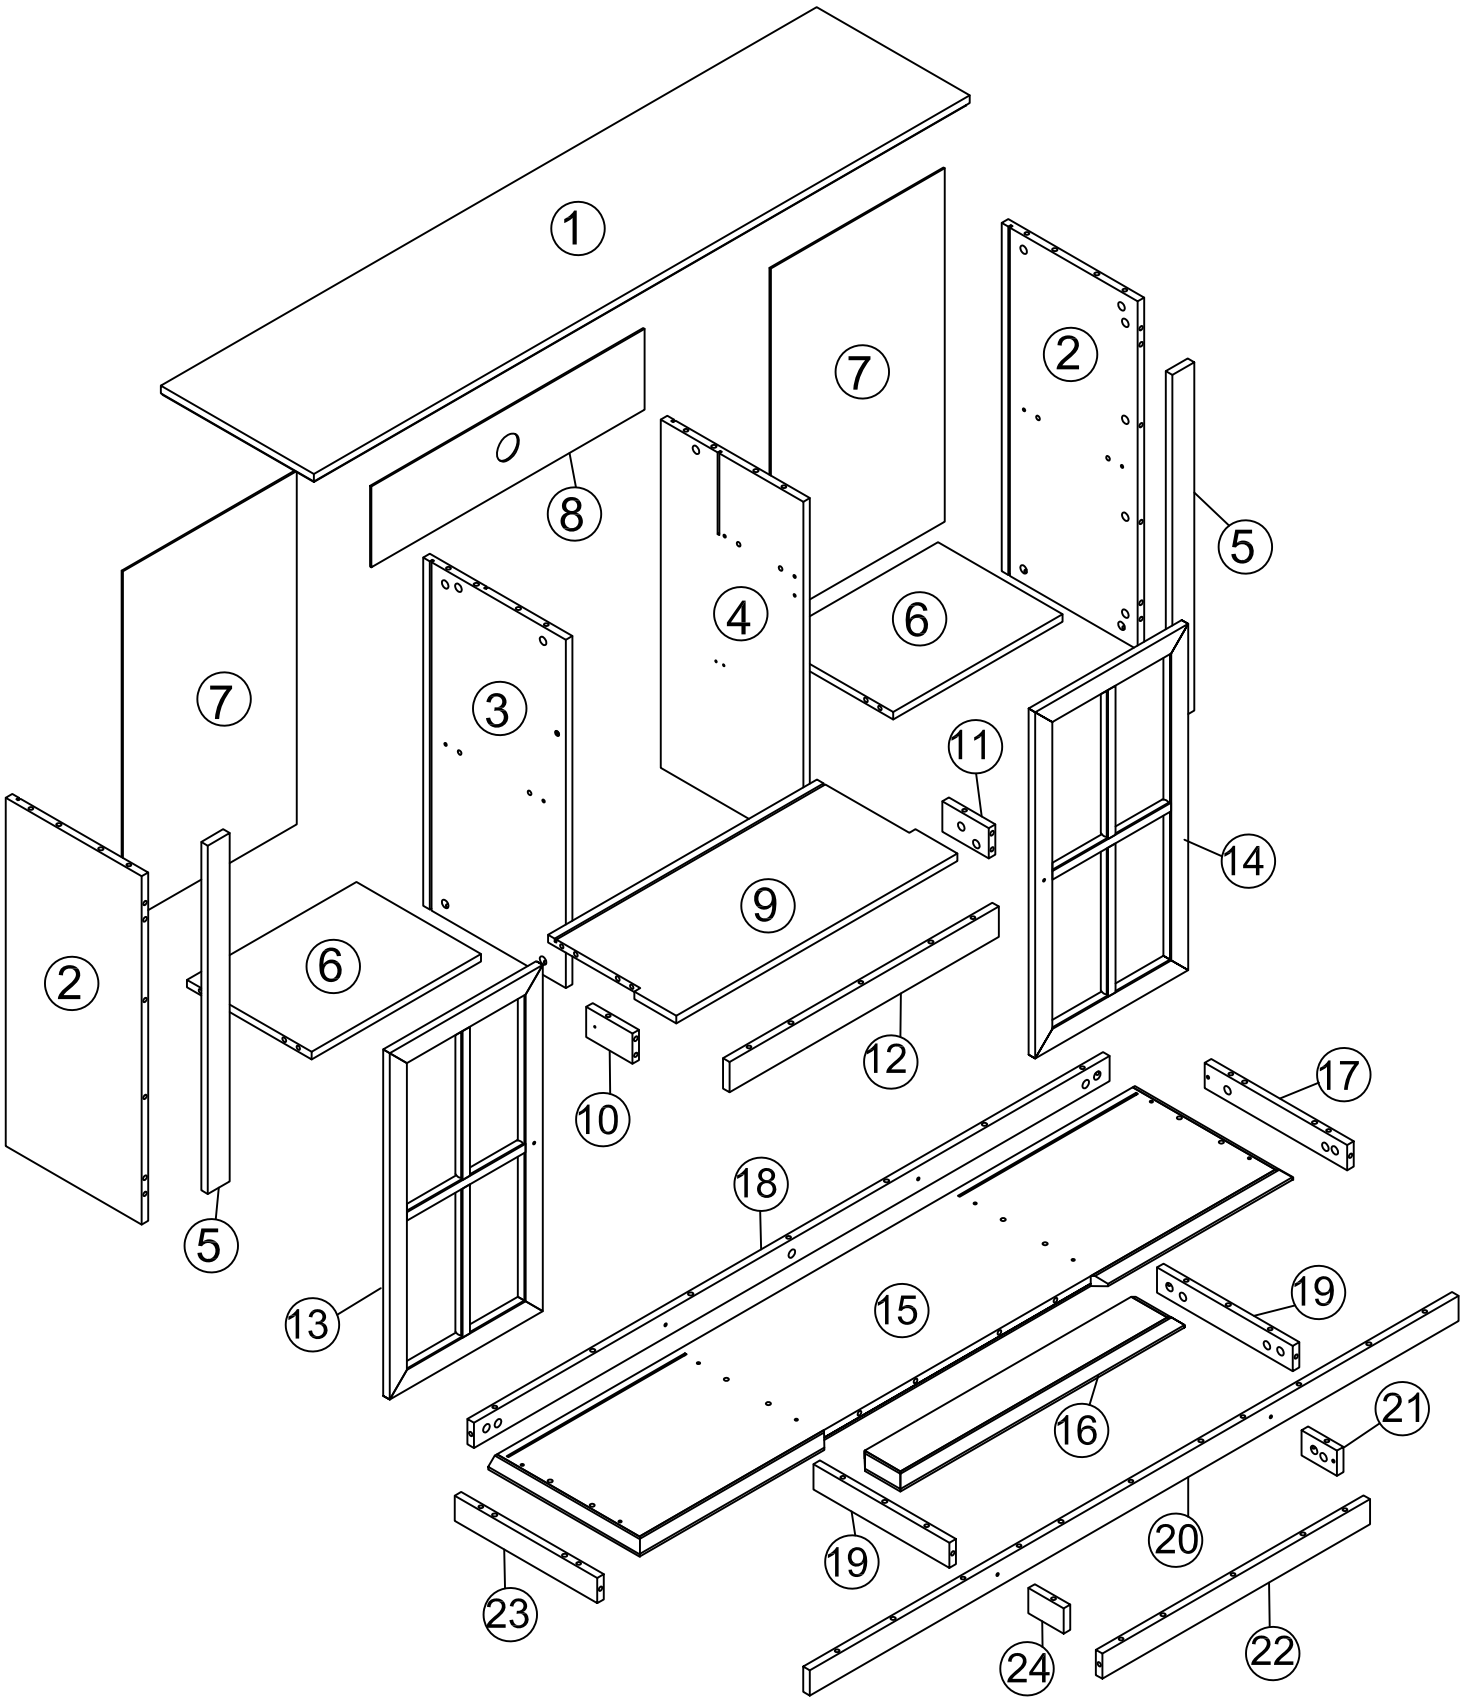


BOARD IDENTIFICATION


Not actual size

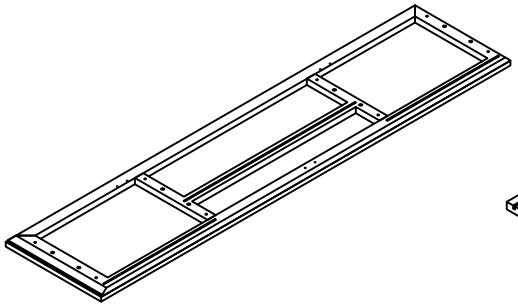


①X1

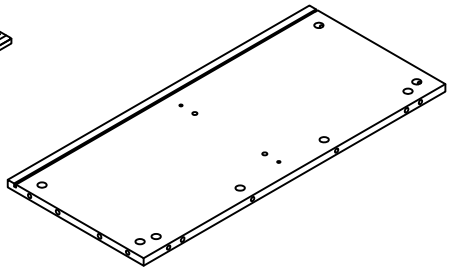


②X2

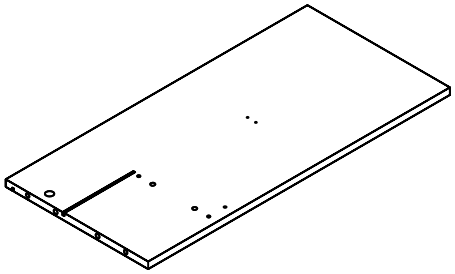


③X1

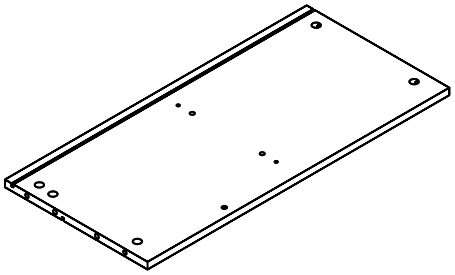


④X1

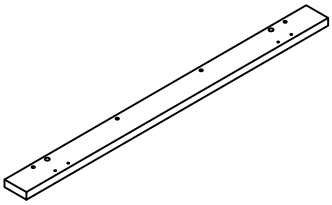


⑤X2

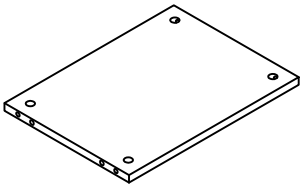


⑥X2

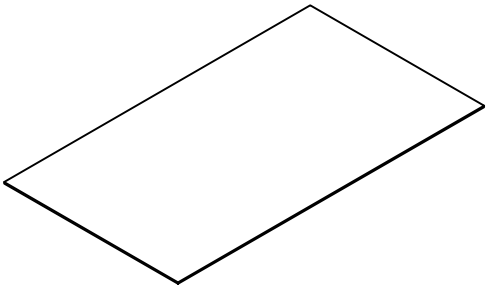


⑦X2

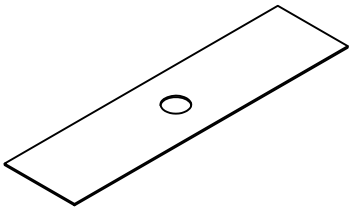


⑧X1

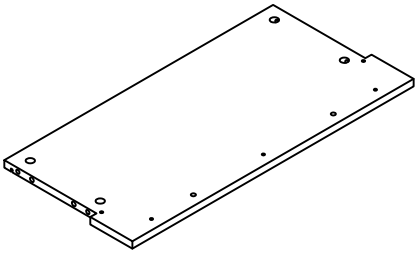


⑨X1



⑩ X1




⑪ X1

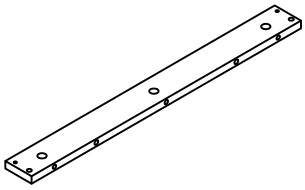


⑫ X1


Not actual size

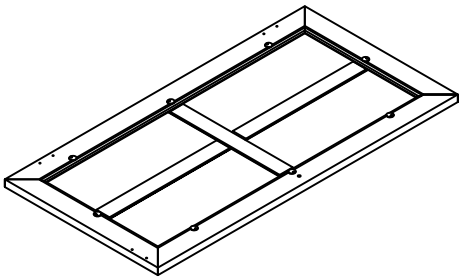


⑬ X1

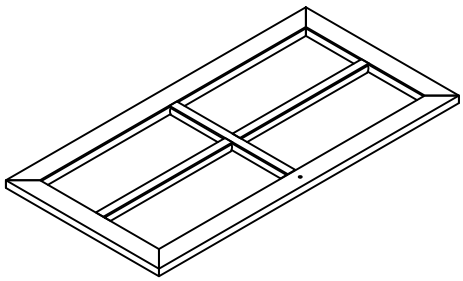


⑭ X1

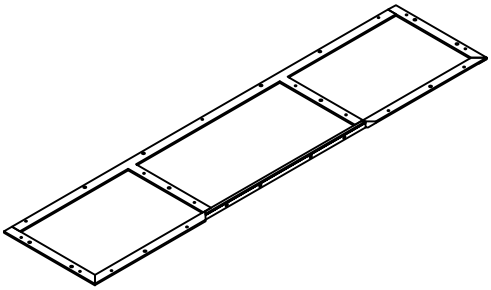


⑮ X1

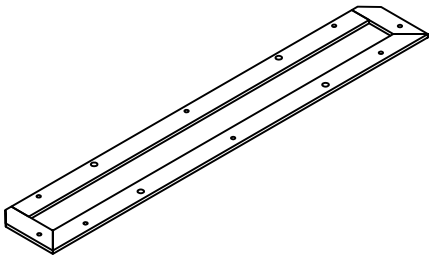


⑯ X1

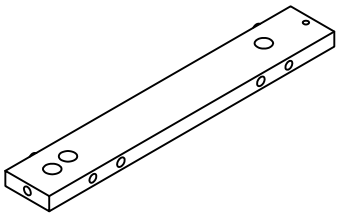


⑰ X1

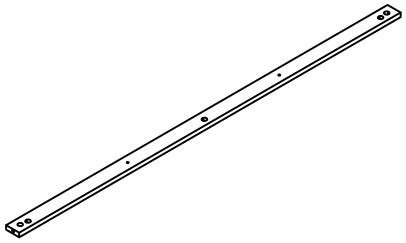


⑱ X1

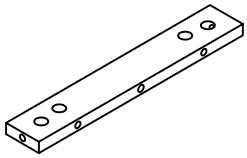


⑲ X2

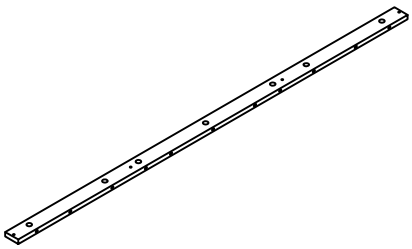


⑳ X1




㉑ X1

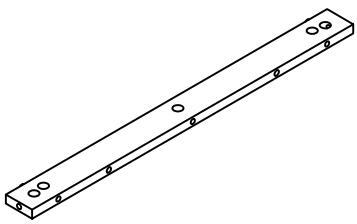

㉒ X1

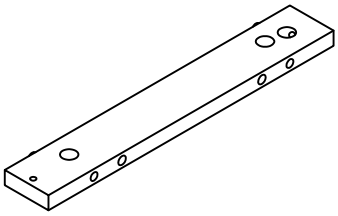


㉓ X1




㉔ X1


HARDWARE PART LIST


Ⓐ	X78+1
	
Ø15*9.5	

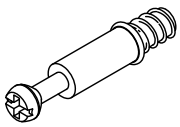
Ⓑ	X78+1
	
Ø6*33	

Ⓒ	X56+1
	
Ø8*30	


Ⓓ	X4
	
Ø3*12	


Ⓔ	X2
	
M4*19	


Ⓕ	X16+1
	
Ø3*12	


Ⓖ	X4
	
Ø3*14	


Ⓗ	X4
	
50*46*24	

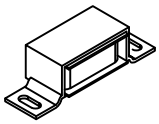
Ⓘ	X2
	
46*15*14	


Ⓙ	X2
	
45*12	

Ⓚ	X2
	
62*14*31	

Ⓛ	X1
	
70*30*5	

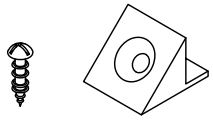Ⓜ	X8+1
	
Ø3*14	

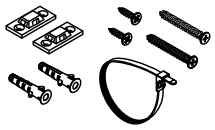
Ⓝ	X1SET
	

Ⓞ	X2
	
Ø4*25	


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

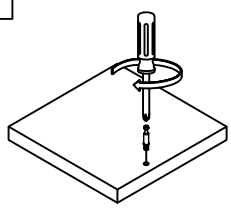

2

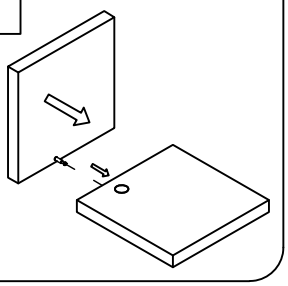


3

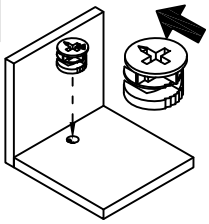



The opening must point toward the edge of the board

4

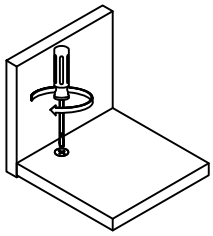



STEP 1

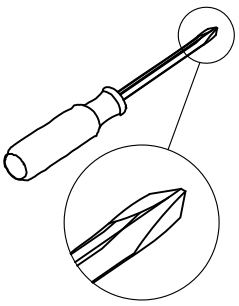


Ⓑ	X23
	
Ø6*33	


Ⓒ	X4
	
Ø8*30	

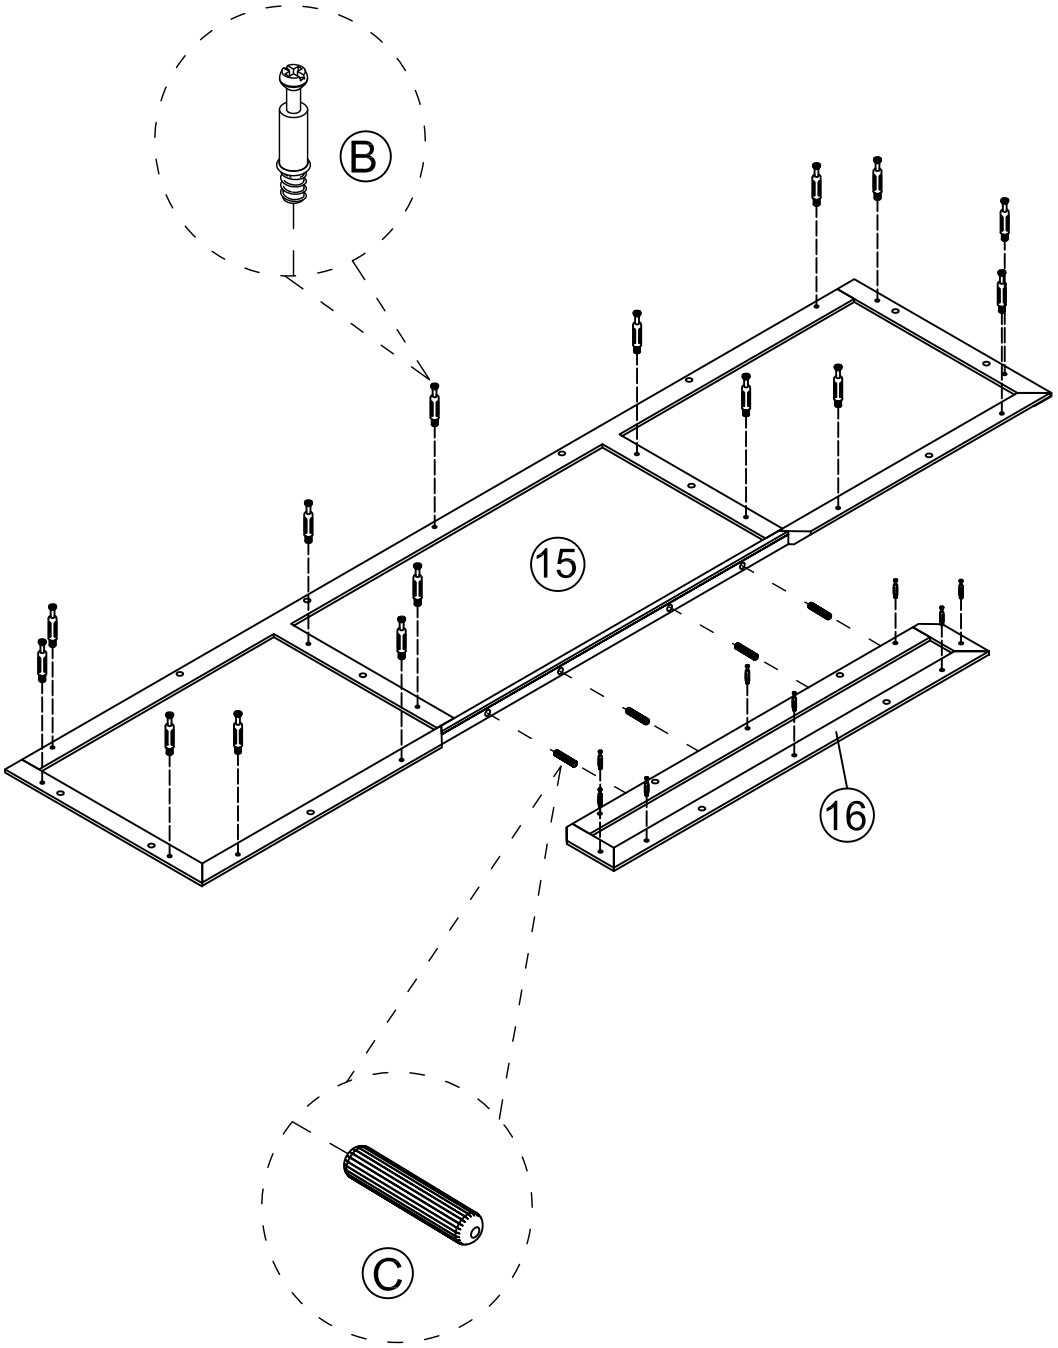


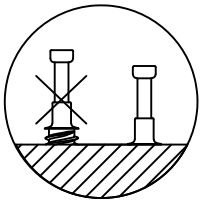


STEP 2

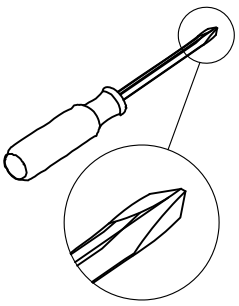



B	X12
	
Ø6*33	

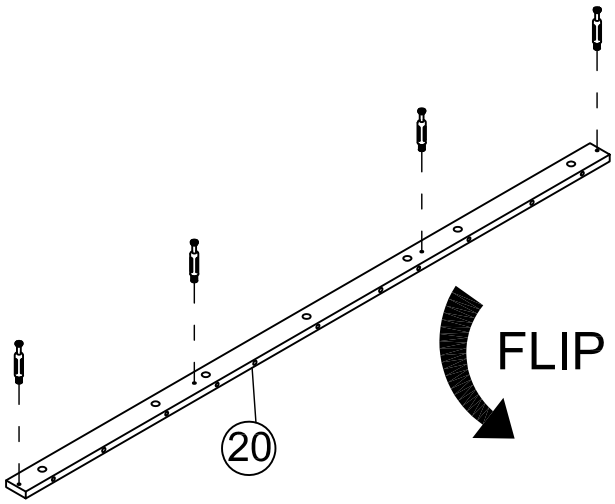



FLIP OVER

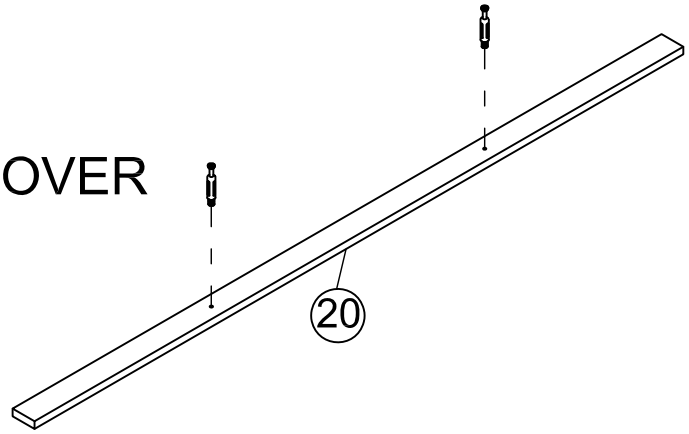


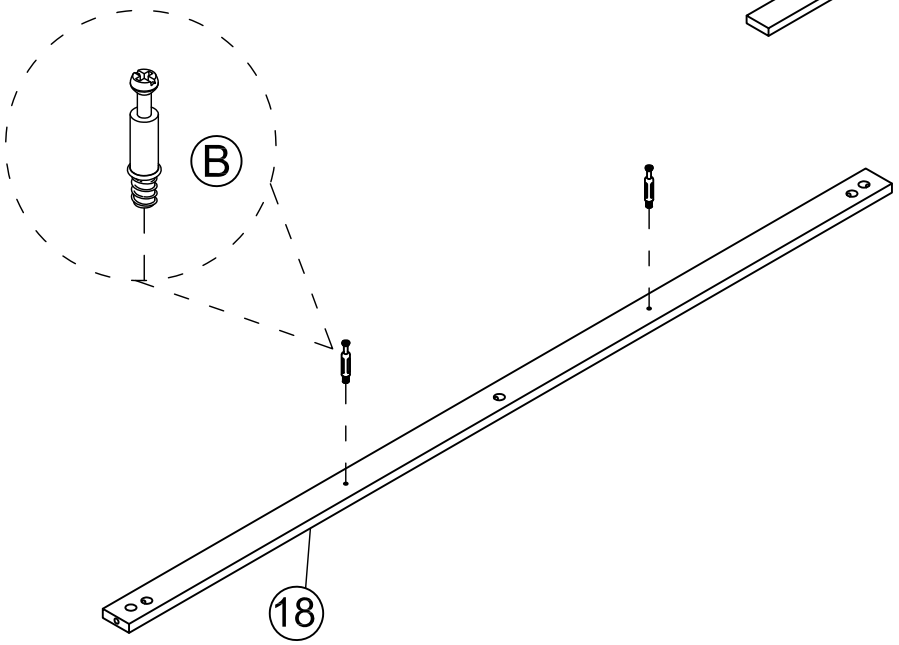


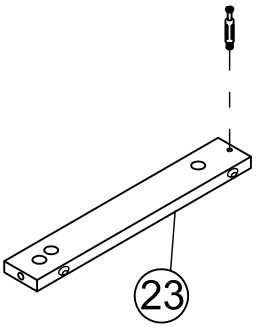

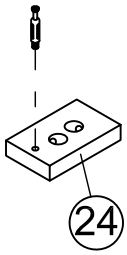


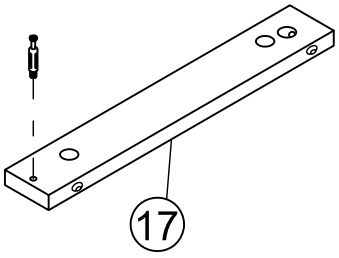

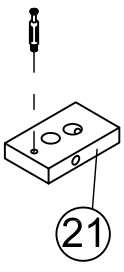


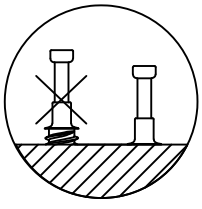


STEP 3

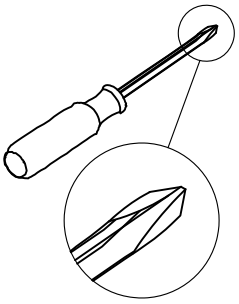

A	X6
	
Ø15*9.5	

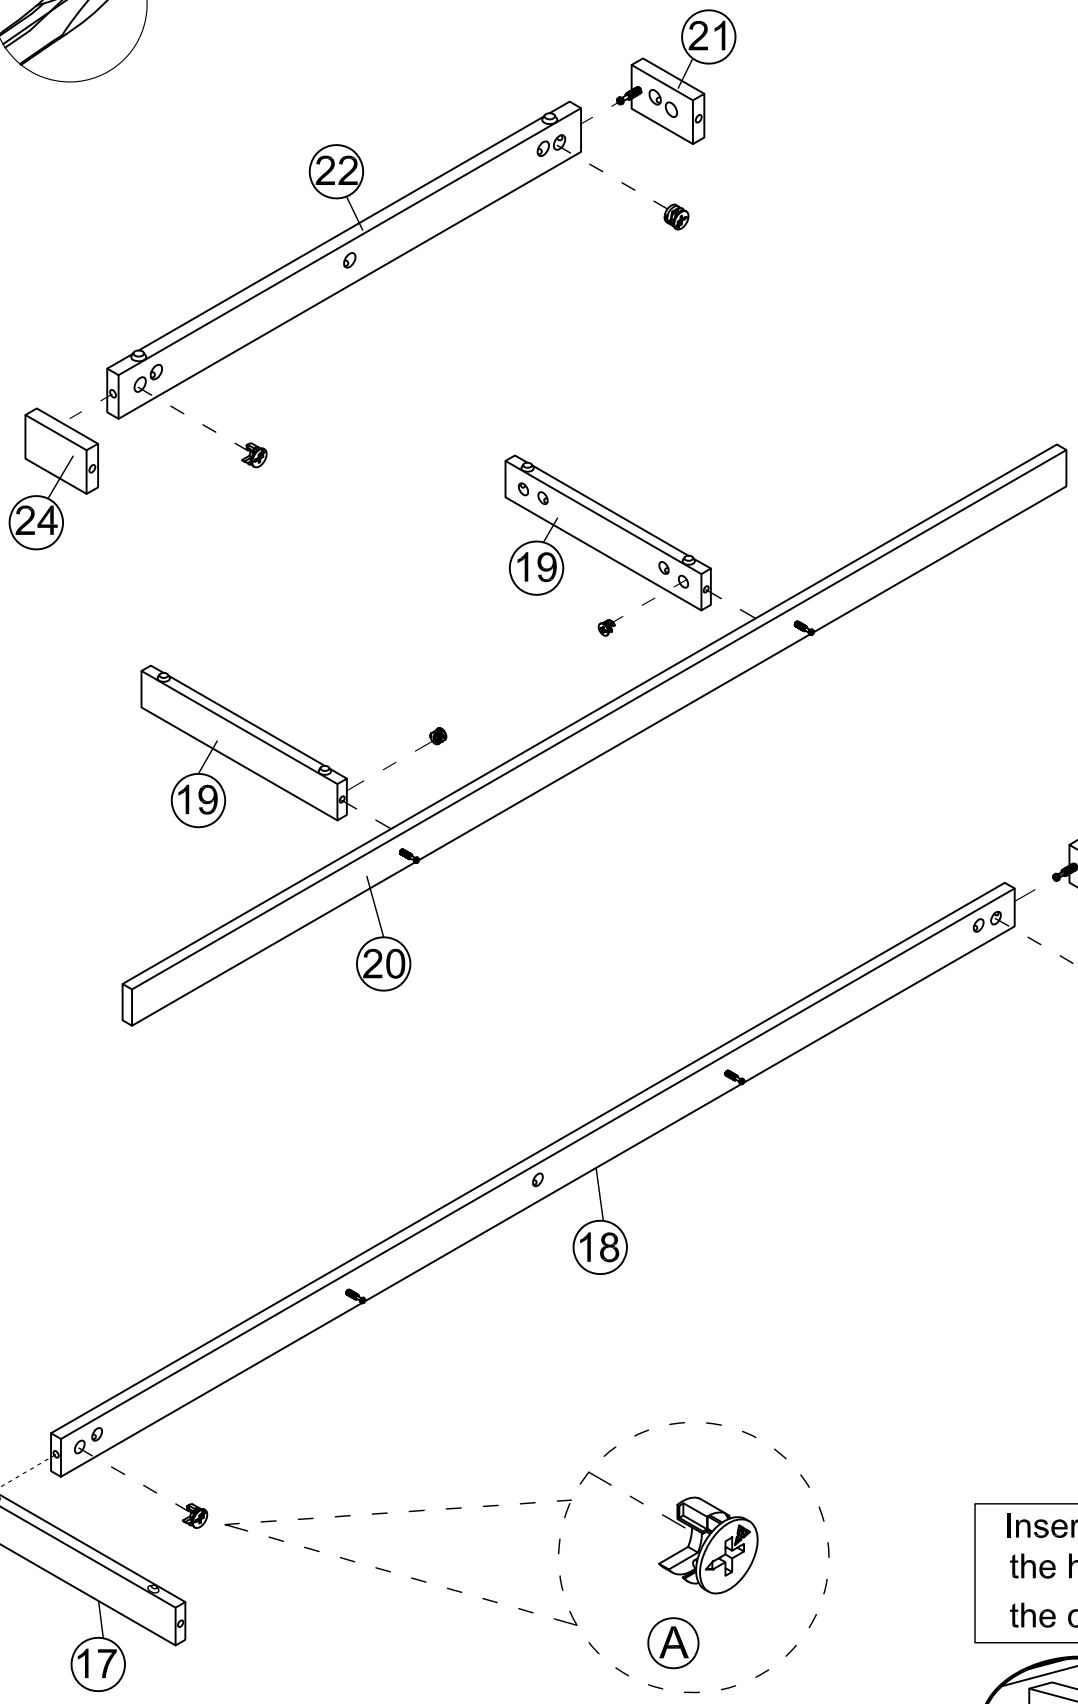


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

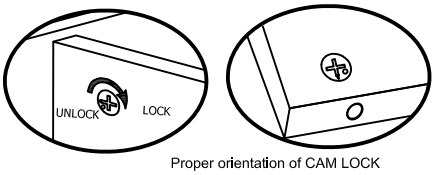


Proper orientation of CAM LOCK


STEP 4

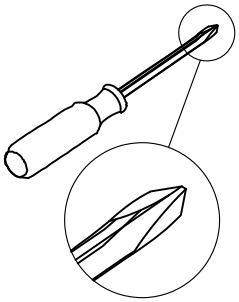

A	X6
	
Ø15*9.5	

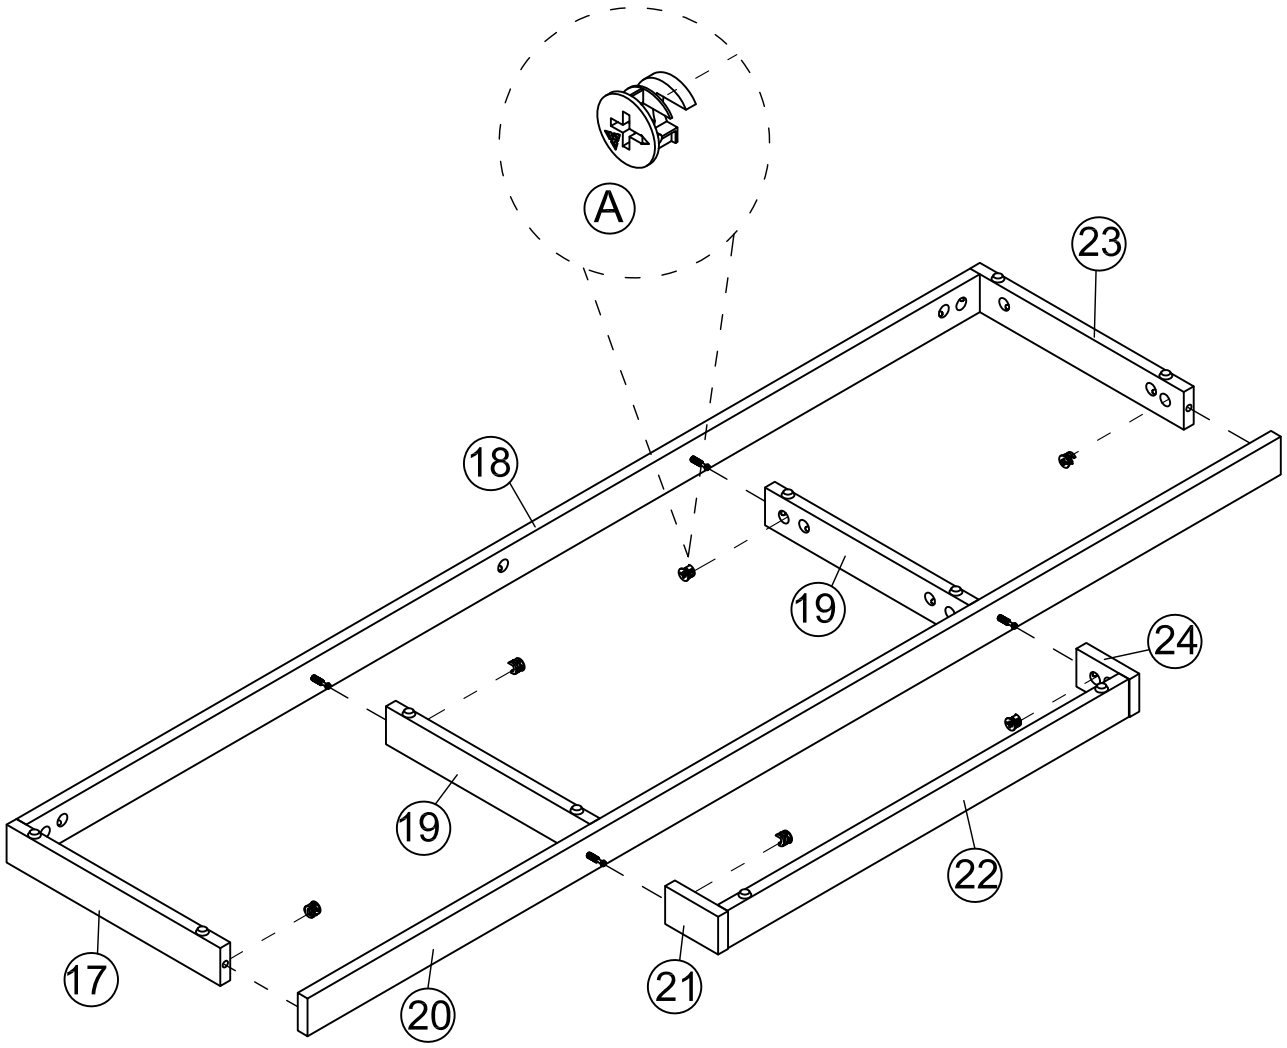


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

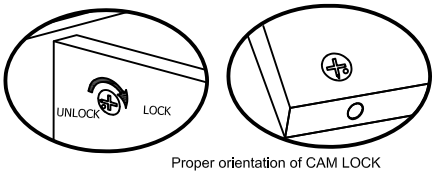


Proper orientation of CAM LOCK

STEP 5

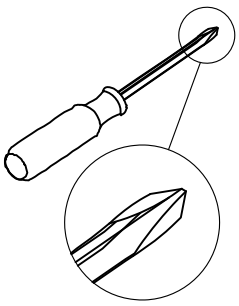


Ⓐ	X23
	
Ø15*9.5	

Ⓒ	X16
	
Ø8*30	

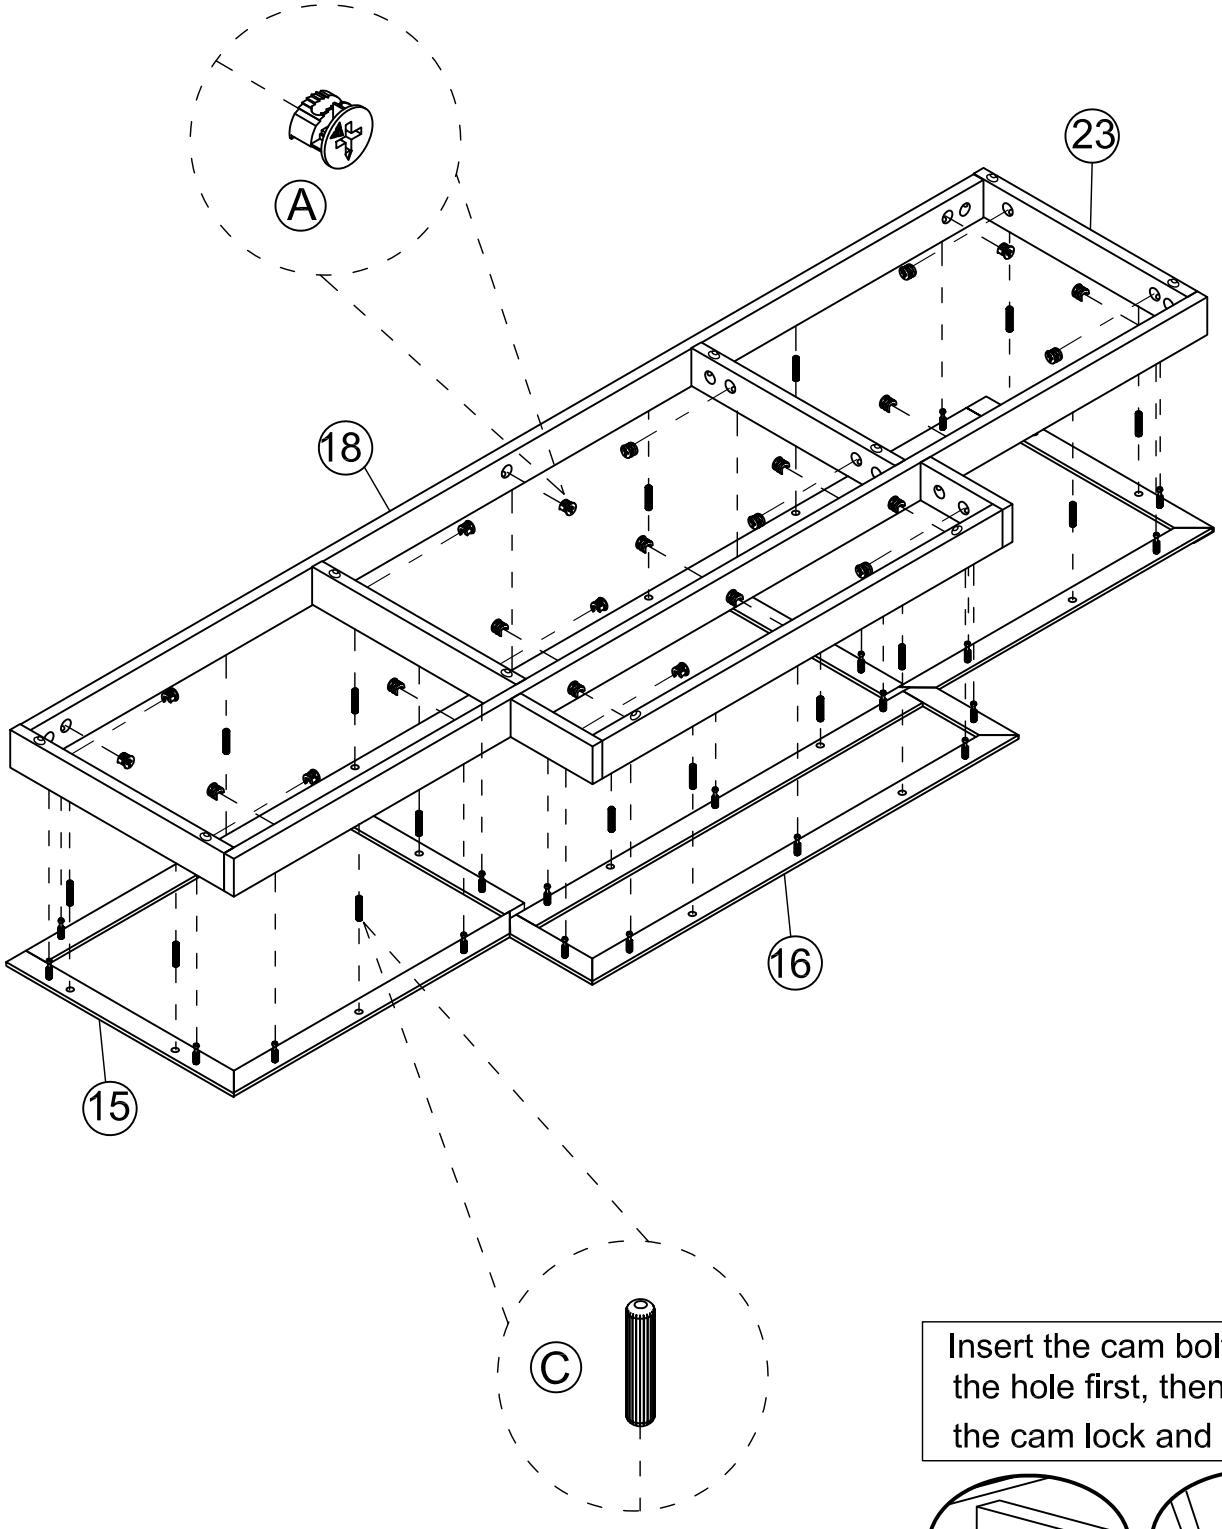



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

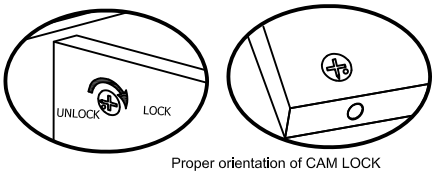



Proper orientation of CAM LOCK


STEP 6

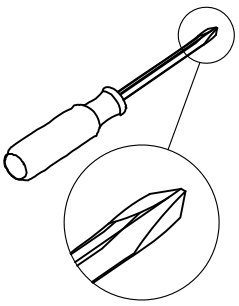



Ⓑ	X15
	
Ø6*33	

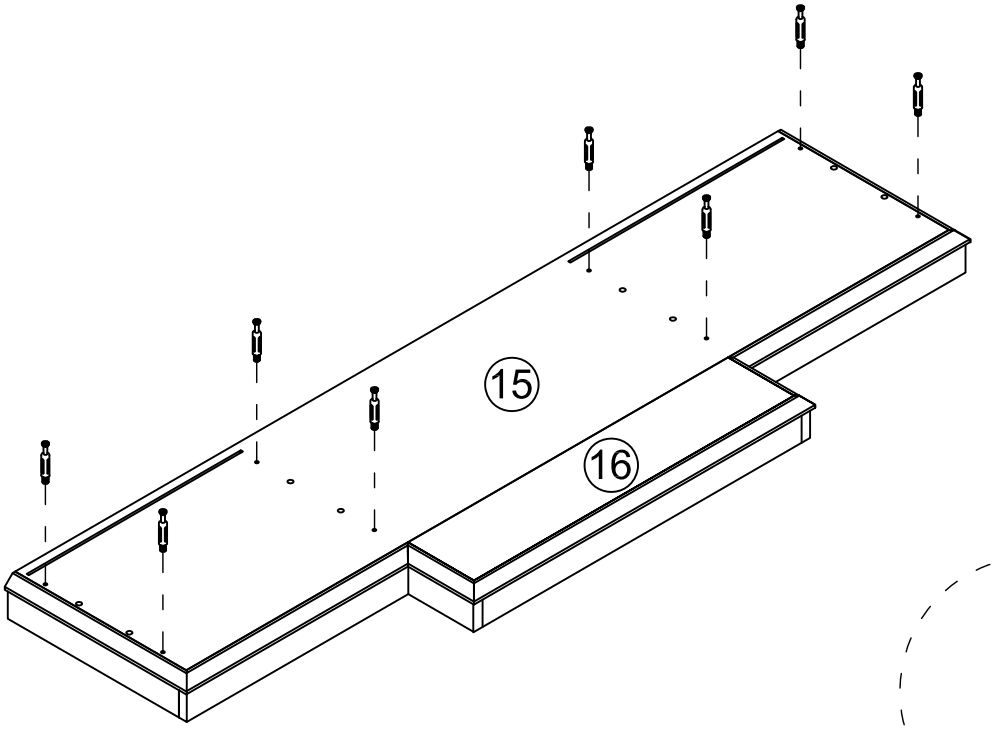

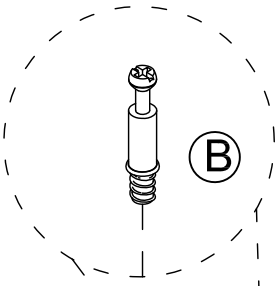


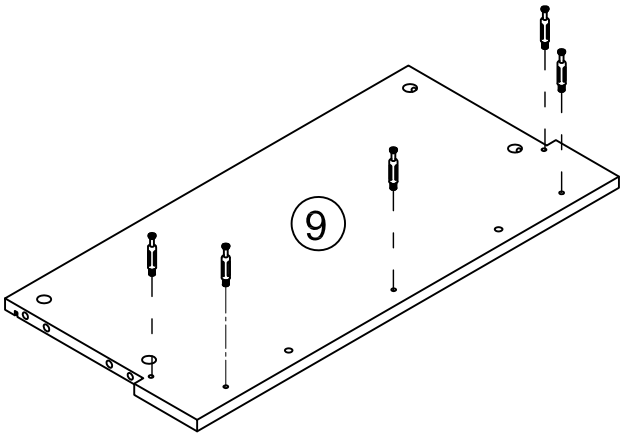

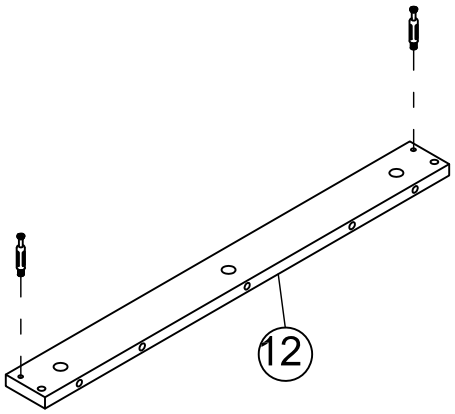


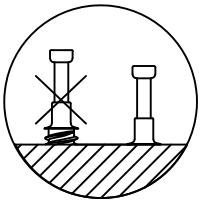


STEP 7

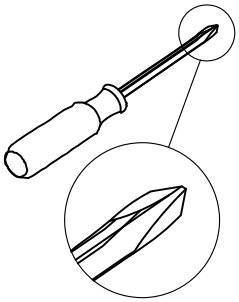


A	X7
	
Ø15*9.5	

C	X4
	
Ø8*30	

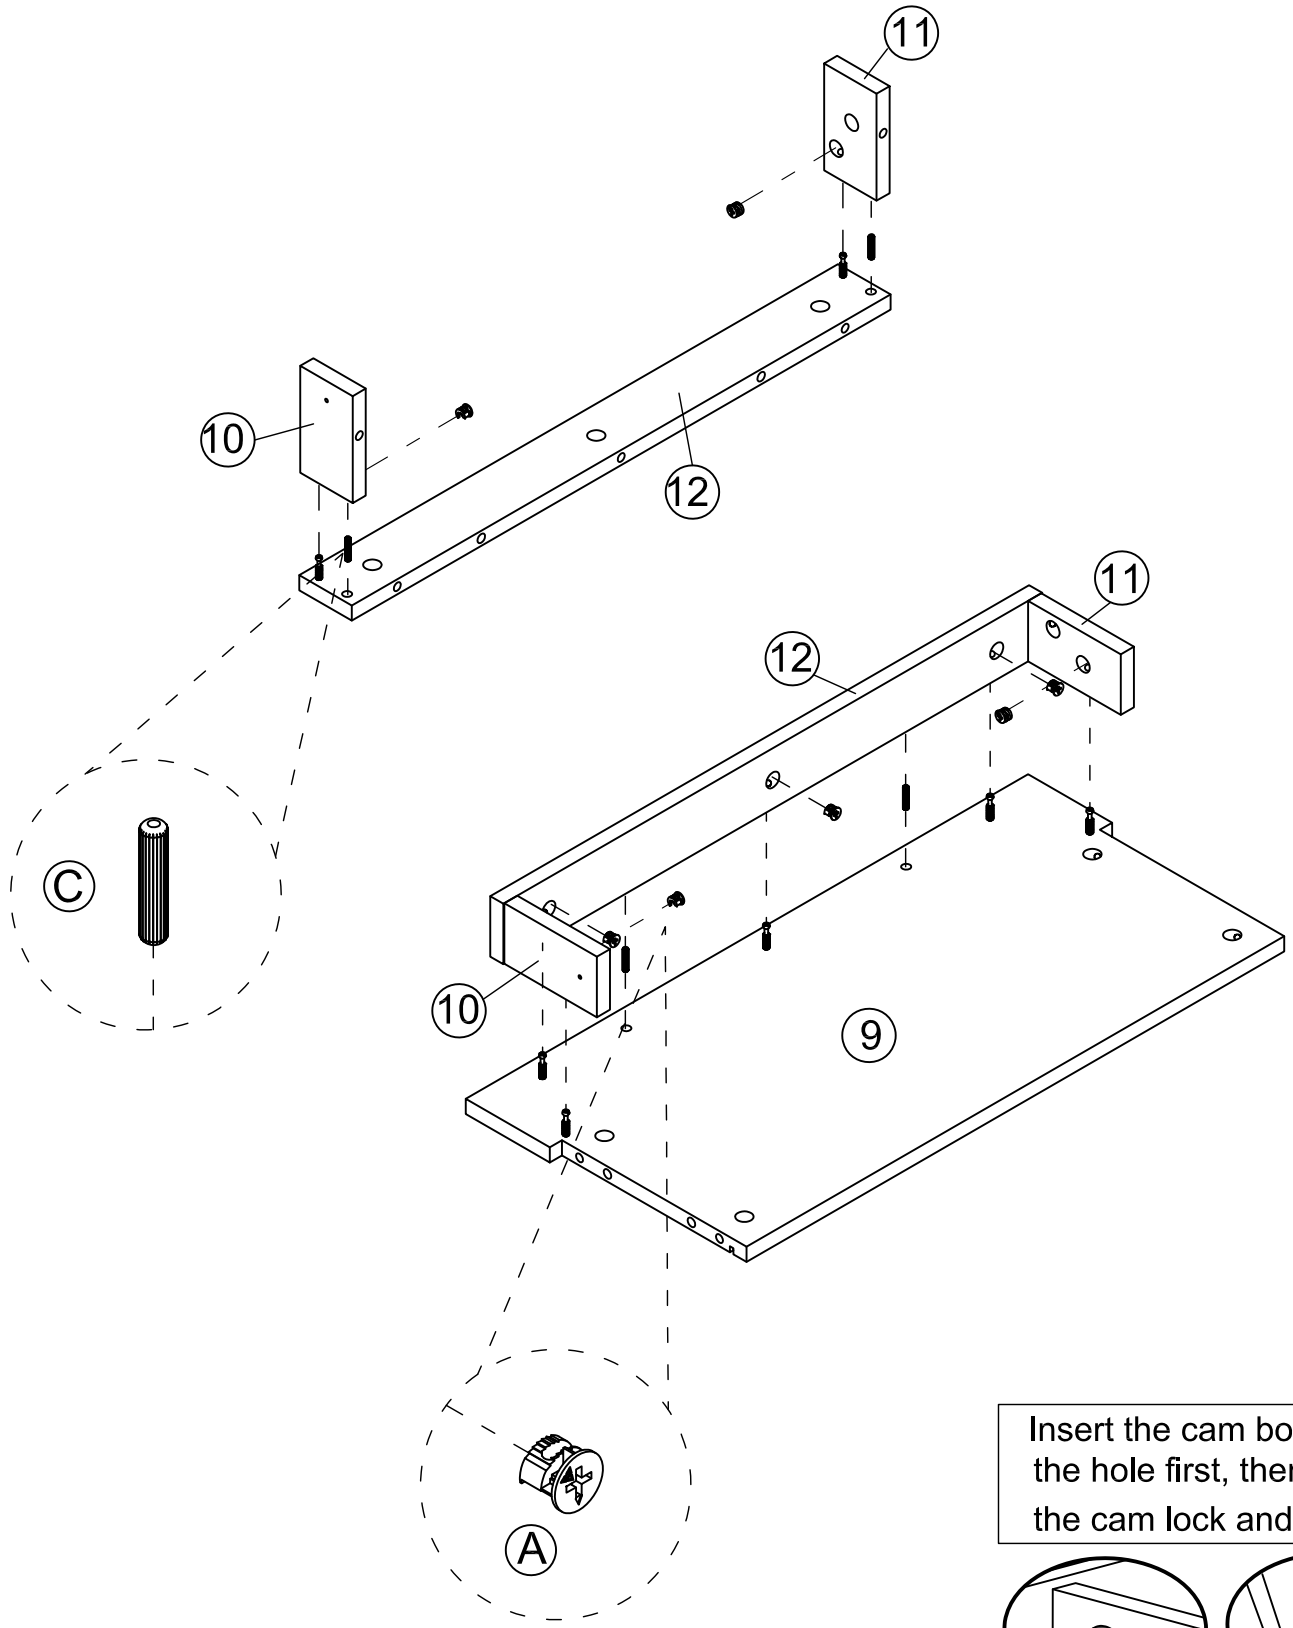



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

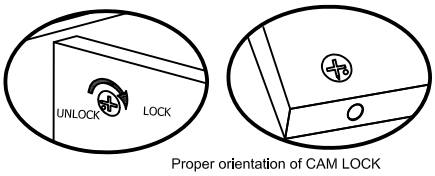


Proper orientation of CAM LOCK


STEP 8

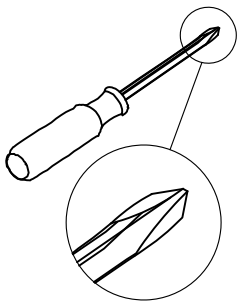


B	X8
	
Ø6*33	

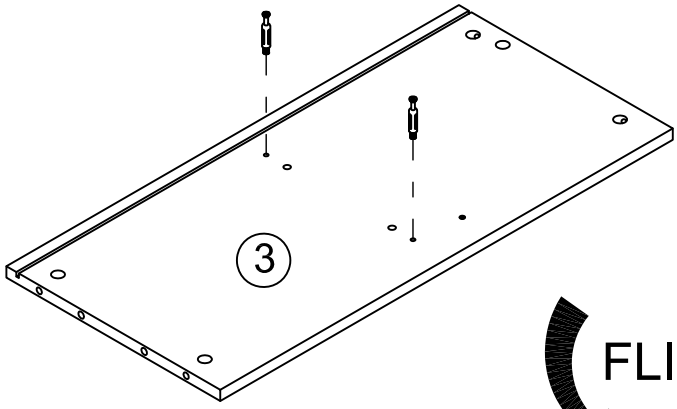



FLIP OVER

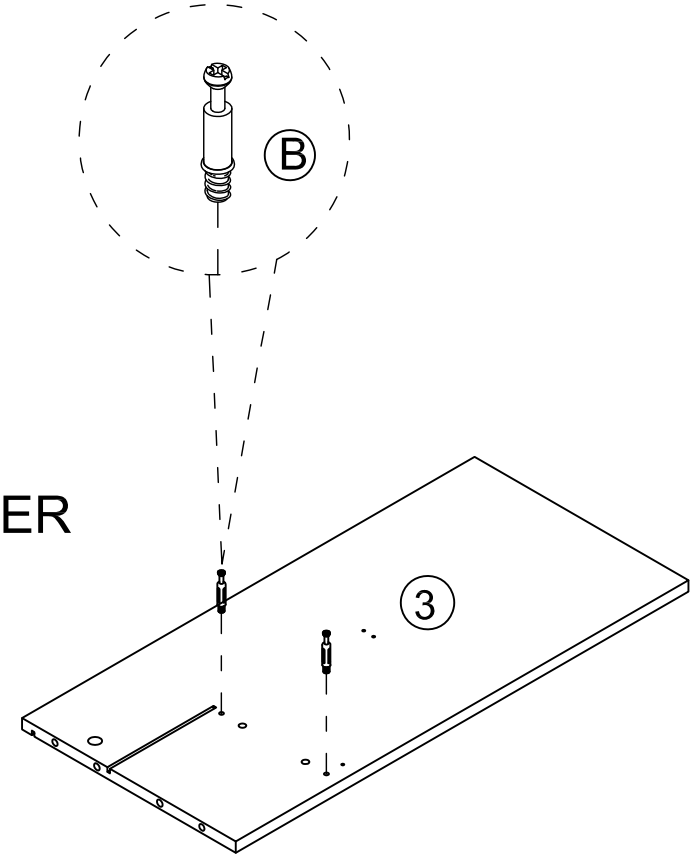

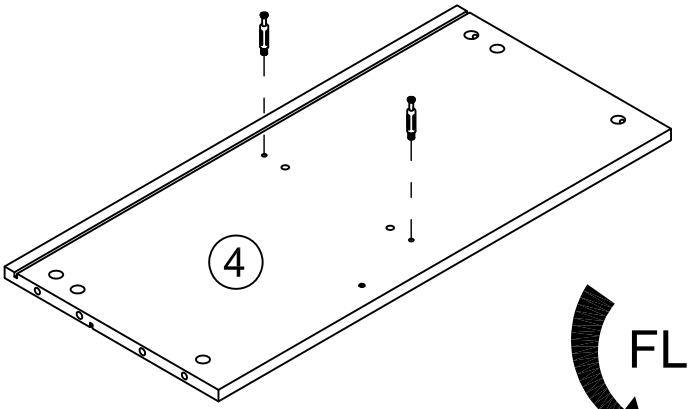


FLIP OVER

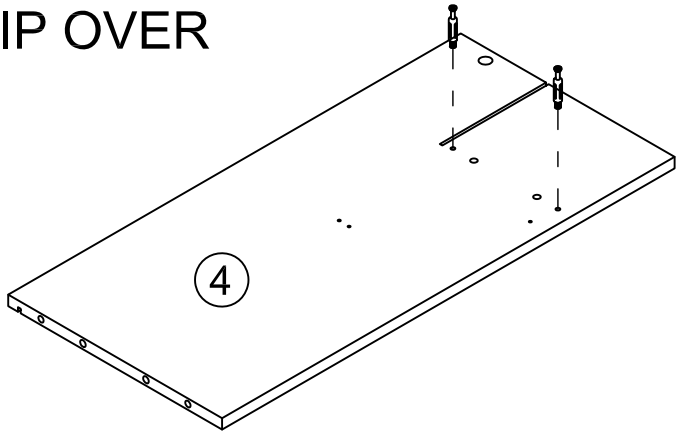

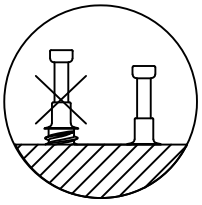


STEP 9

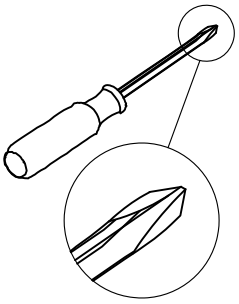


A	X4
	
Ø15*9.5	

C	X4
	
Ø8*30	

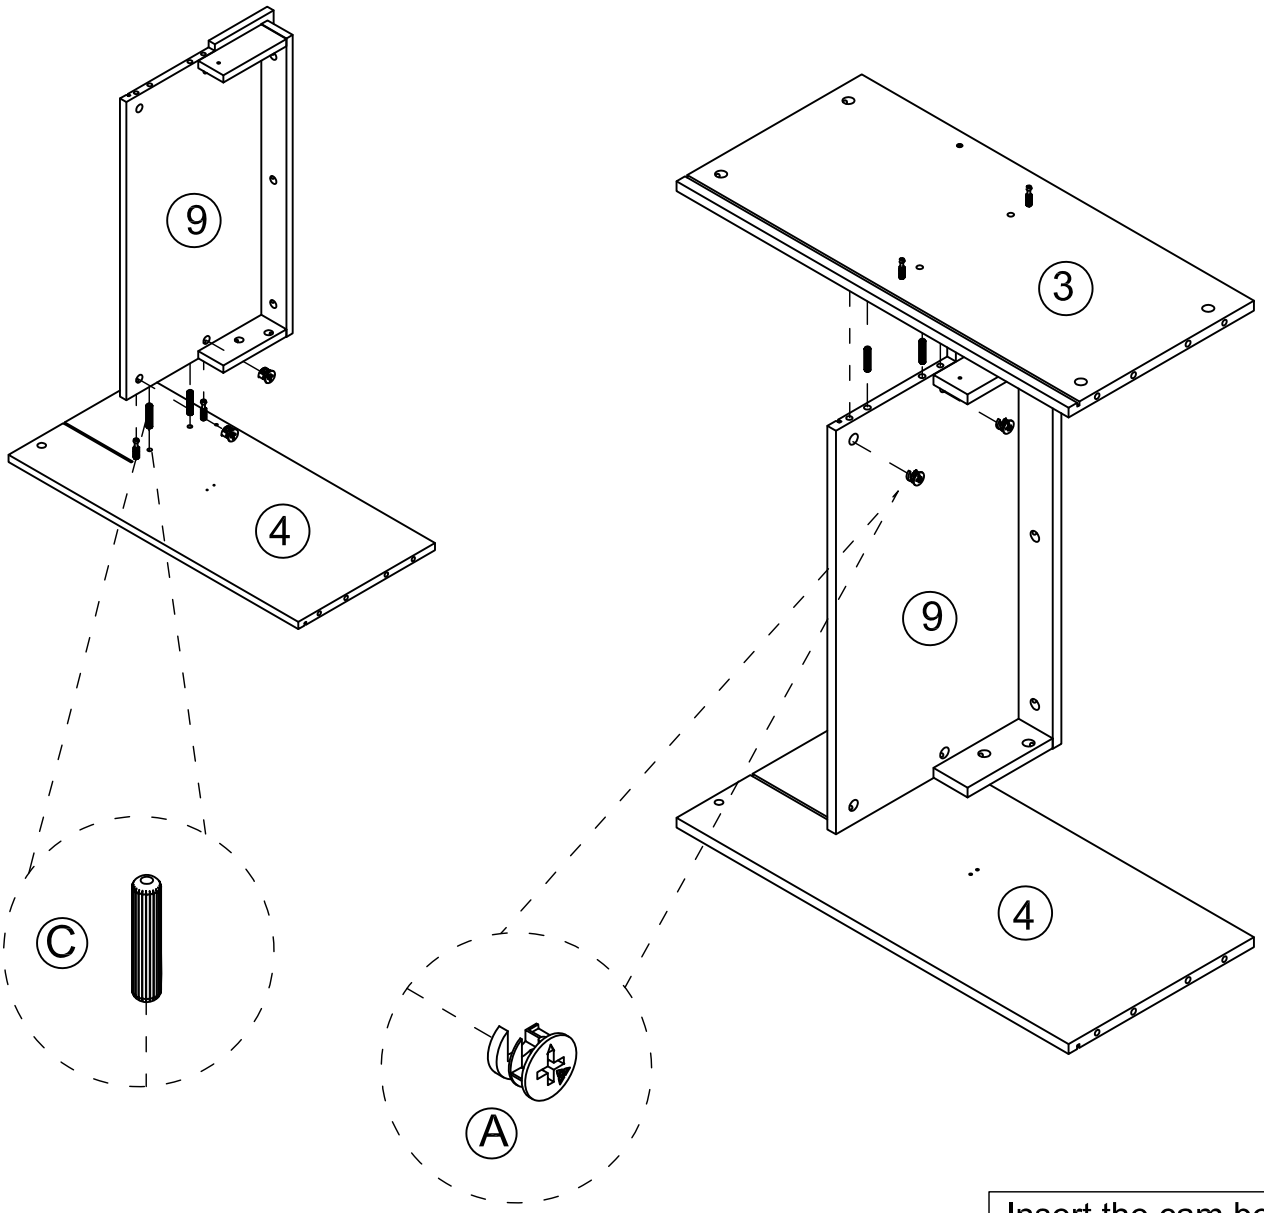


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

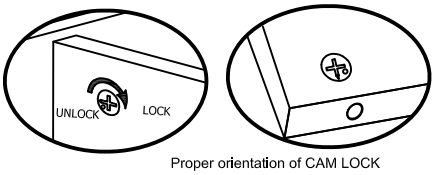


Proper orientation of CAM LOCK


STEP 10

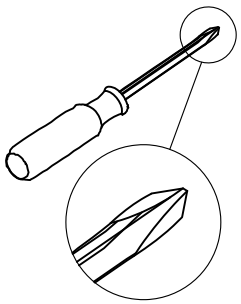


A	X8
	
Ø15*9.5	


C	X4
	
Ø8*30	

B	X12
	
Ø6*33	

F	X8
	
Ø3*12	


H	X4
	
52*46*24	

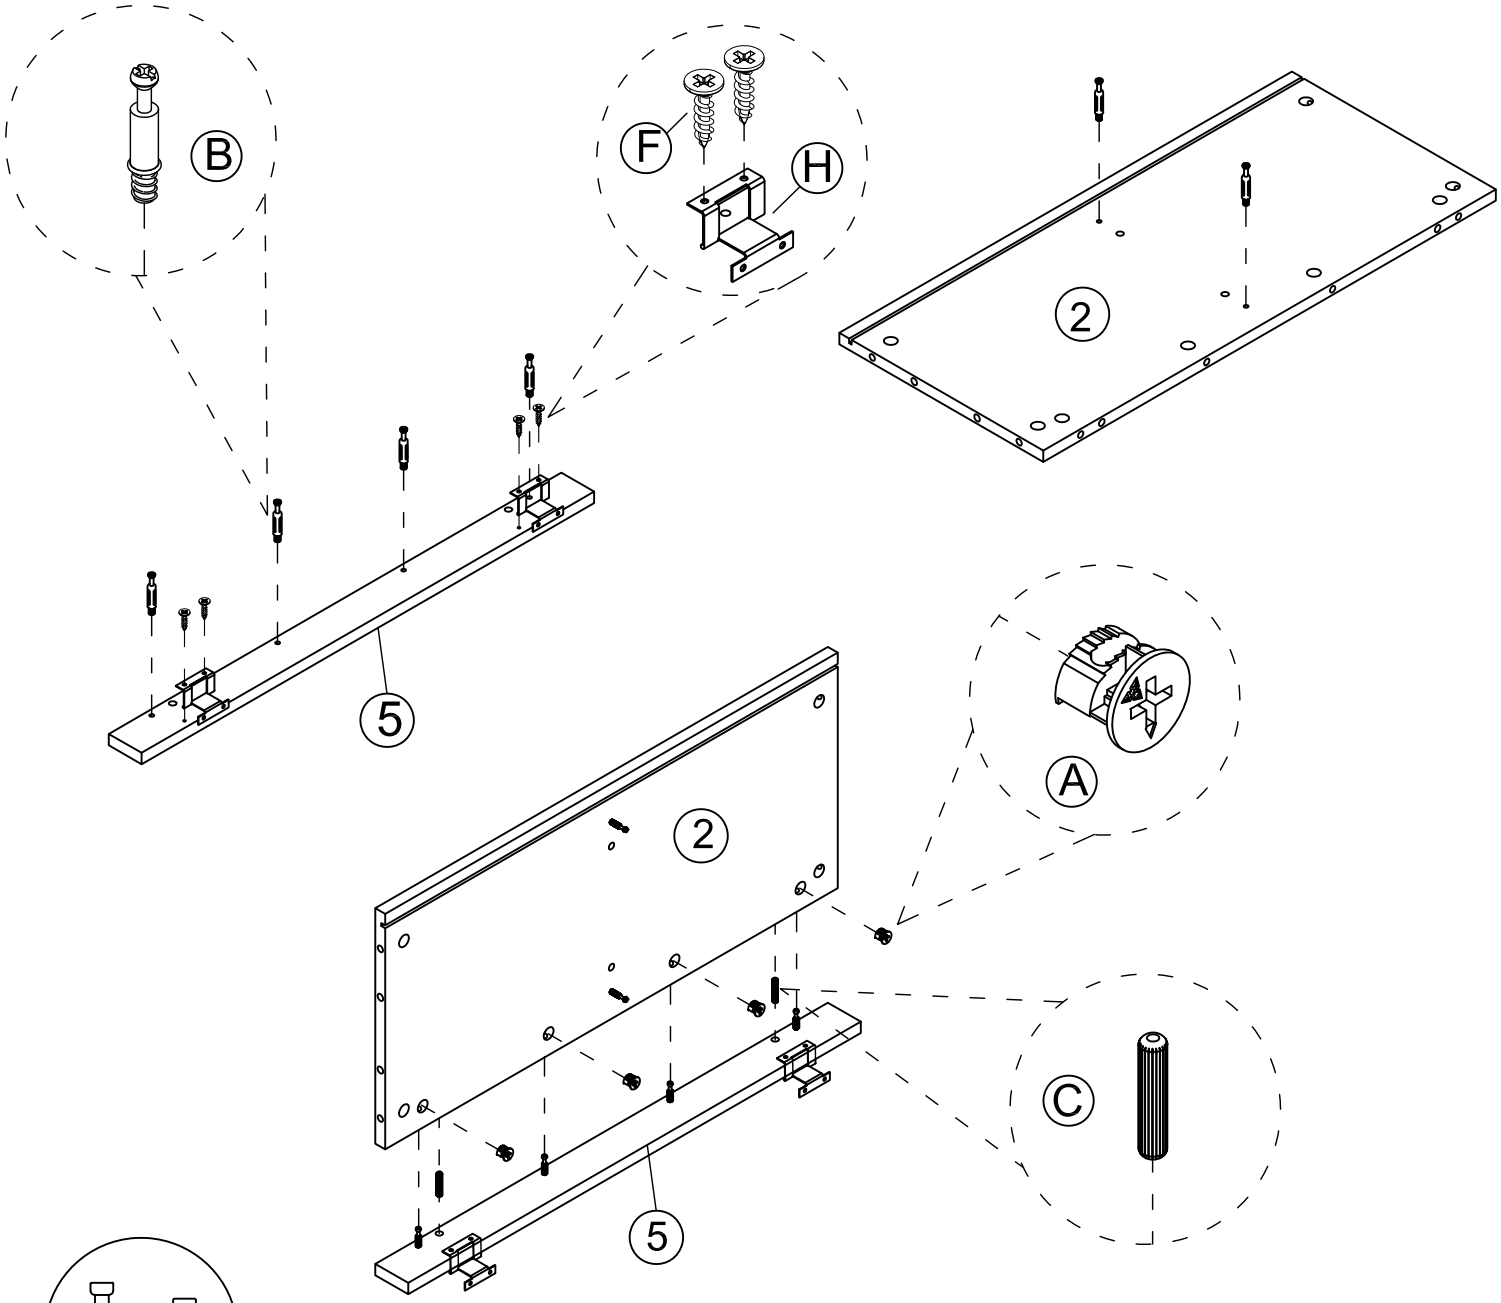

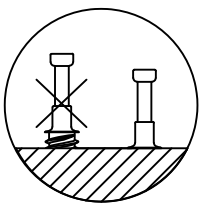


X 2

STEP 11

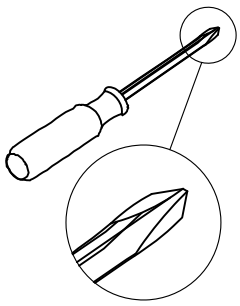


A	X4
	
Ø15*9.5	


C	X4
	
Ø8*30	

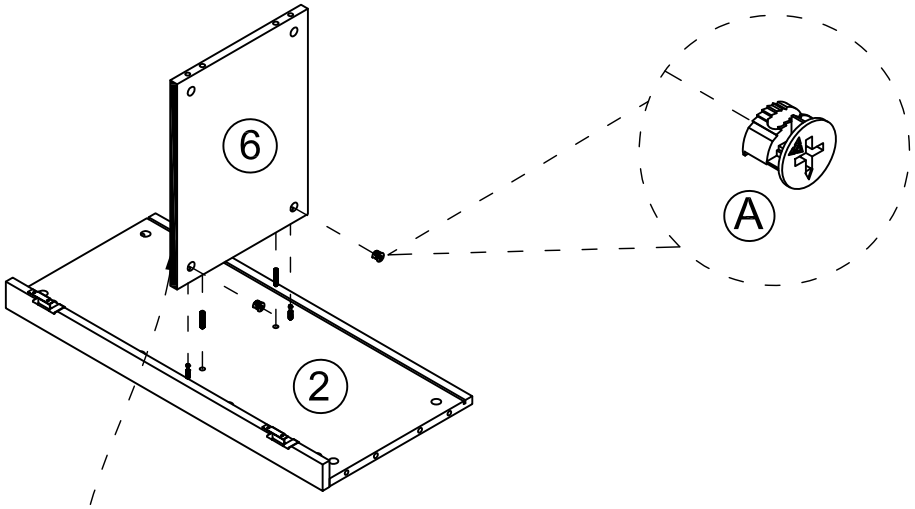


Edge banding

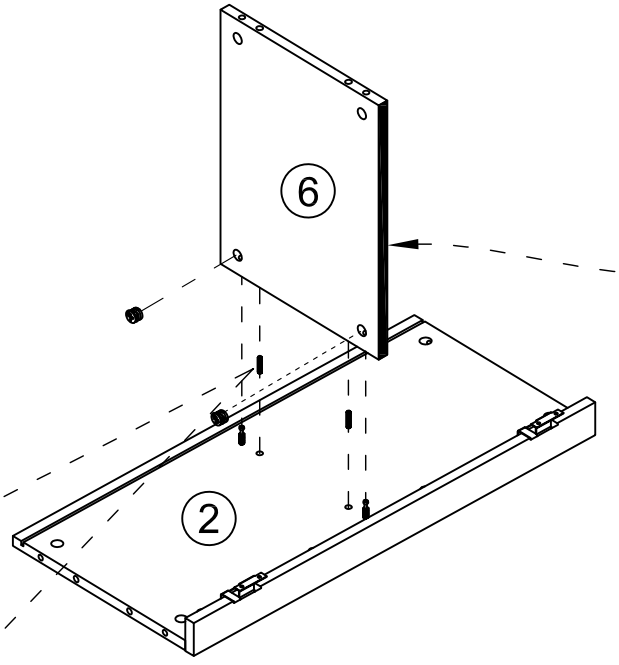

Edge banding

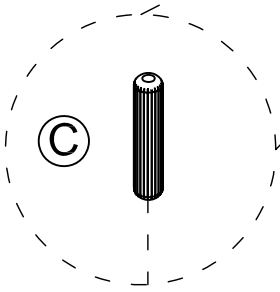


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

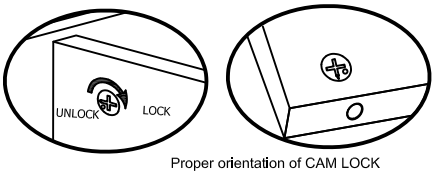


Proper orientation of CAM LOCK


STEP 12

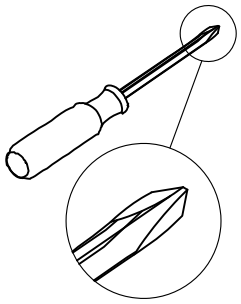


A	X4
	
Ø15*9.5	

C	X4
	
Ø8*30	

O	X2
	
Ø4*25	

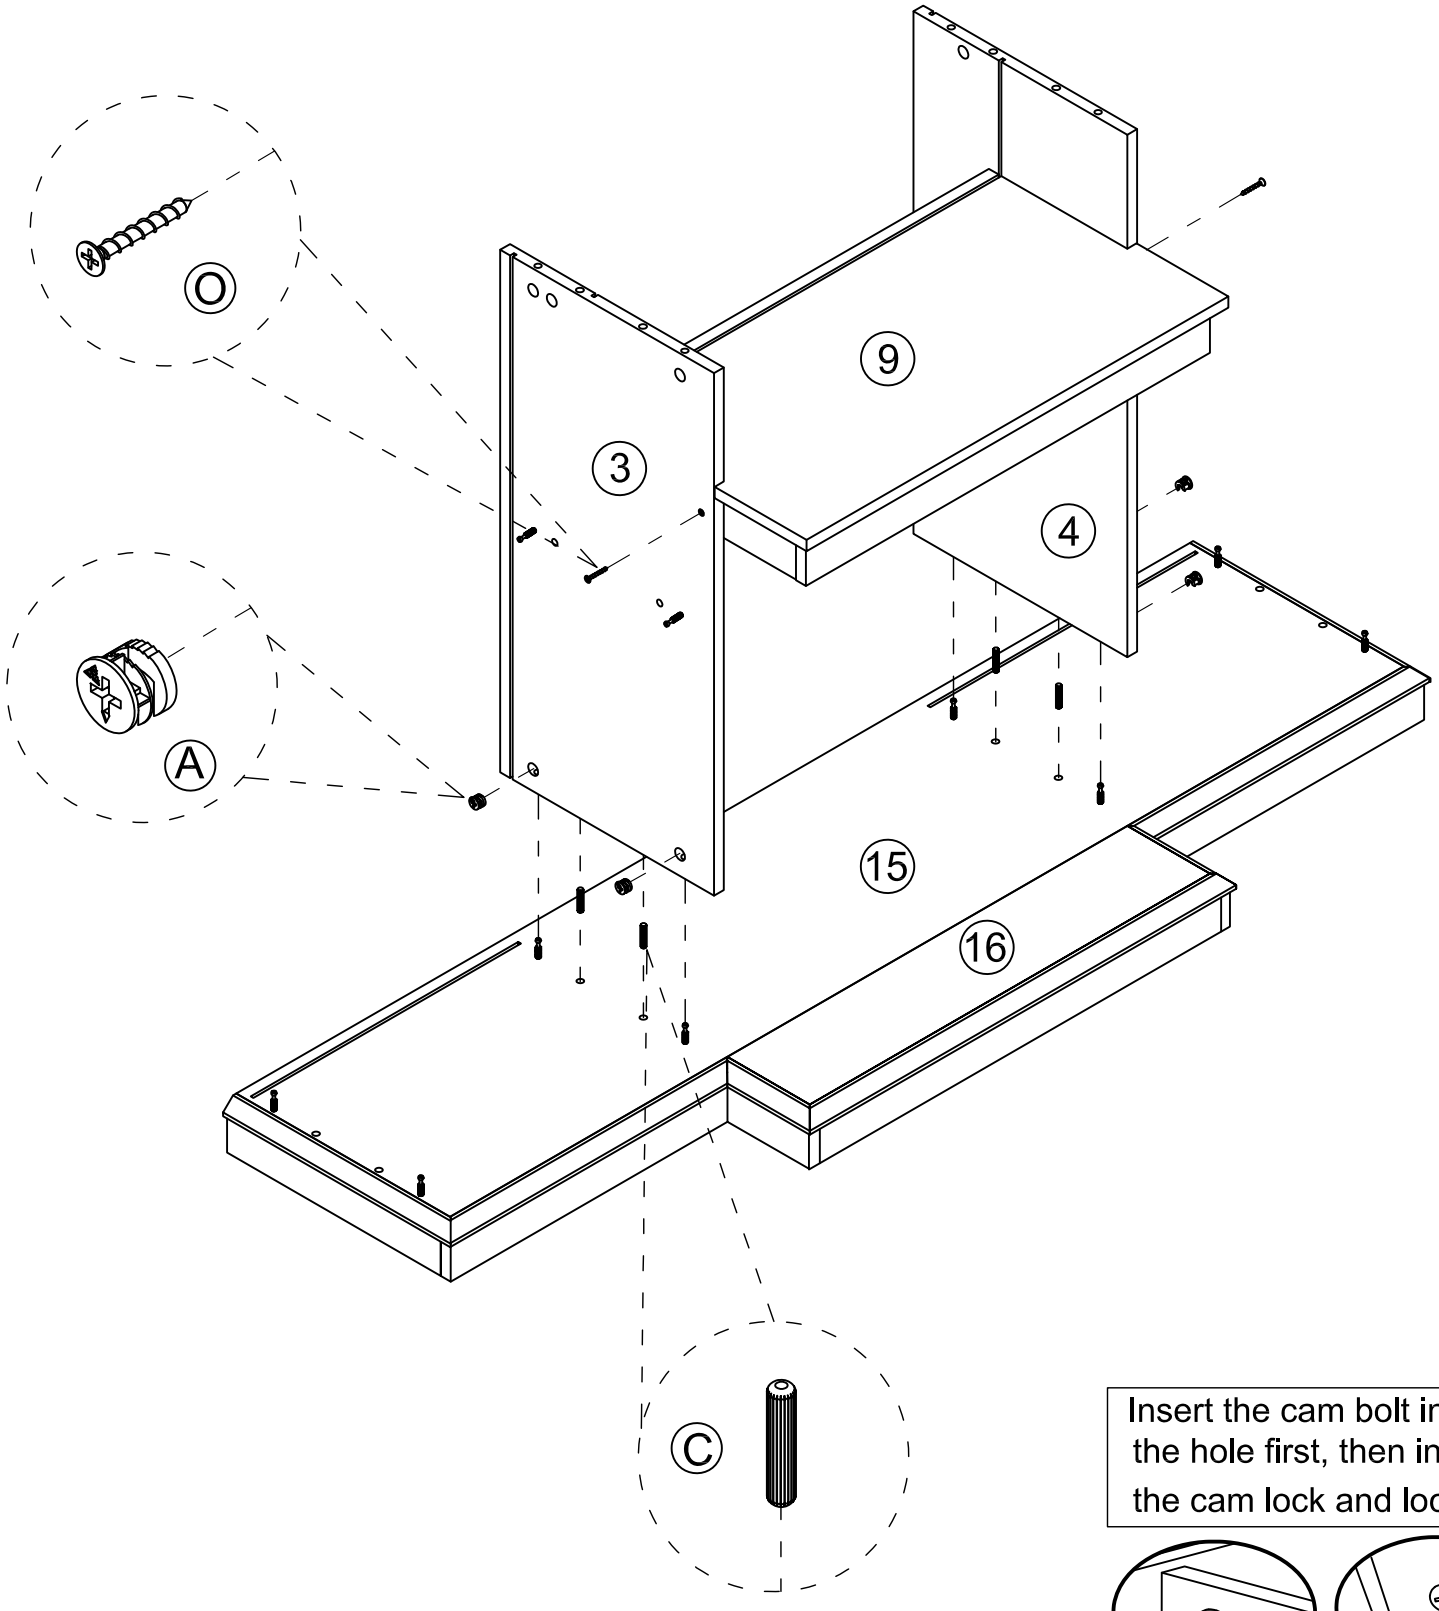


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

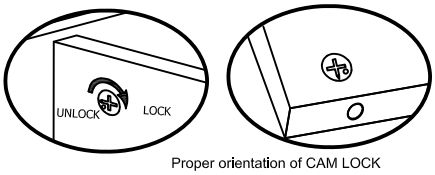


Proper orientation of CAM LOCK

STEP 13

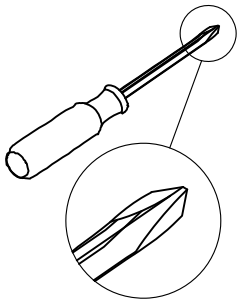


Ⓐ	X8
	
Ø15*9.5	

Ⓒ	X8
	
Ø8*30	

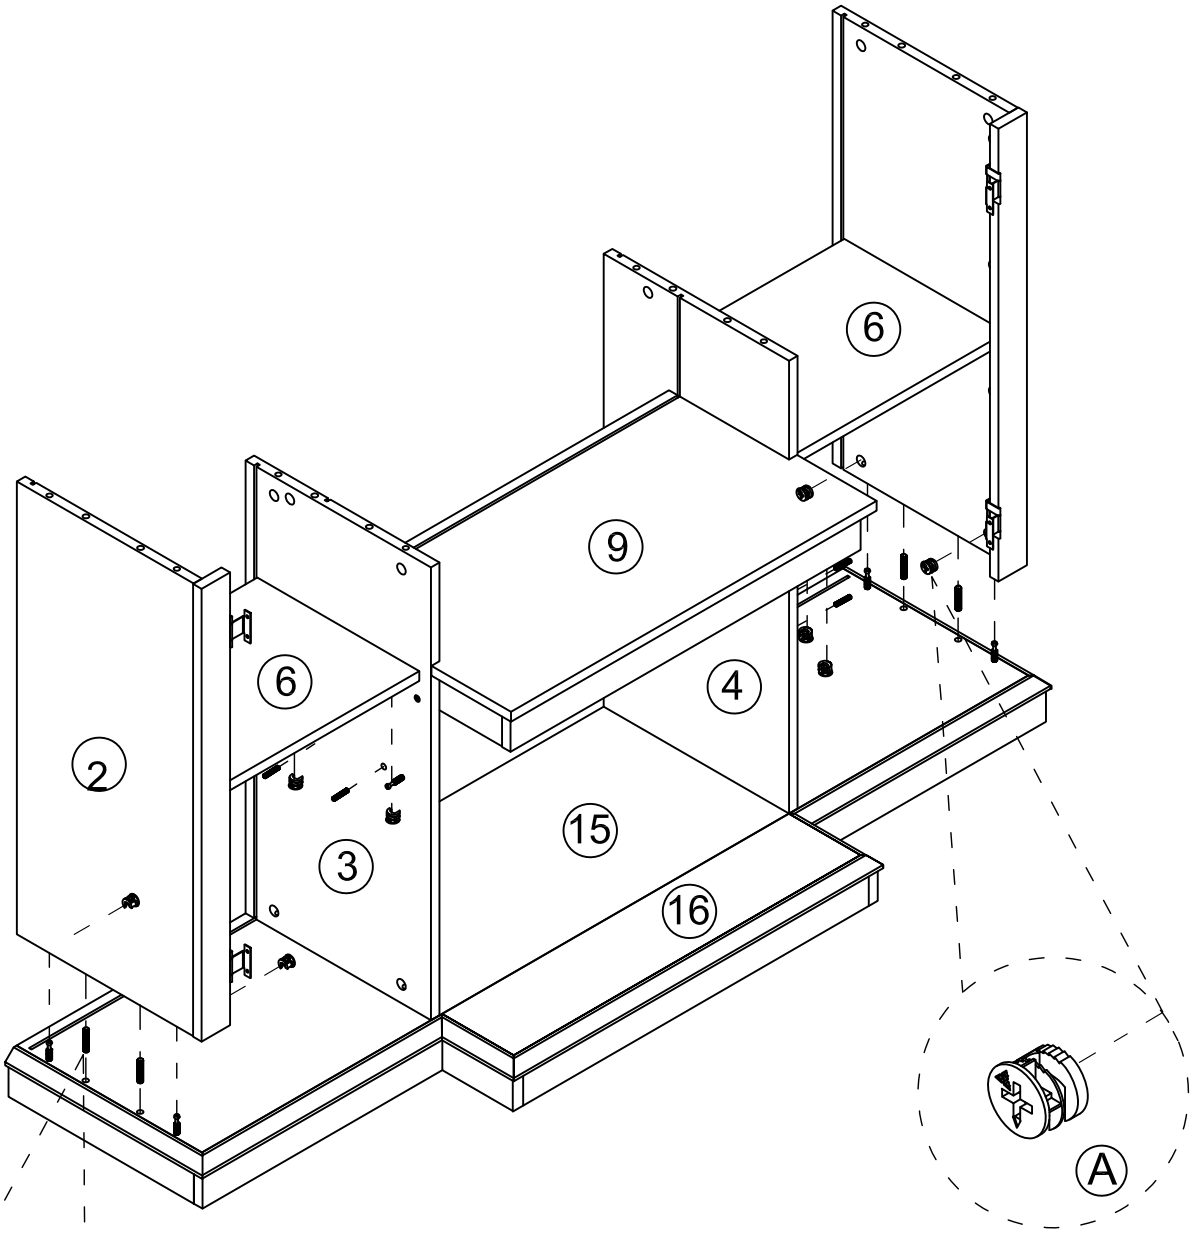


After the 2 plates are connected to the 15 plates, they need to be tilted outward, and the 6 plates are connected to the 3、4 plates.

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

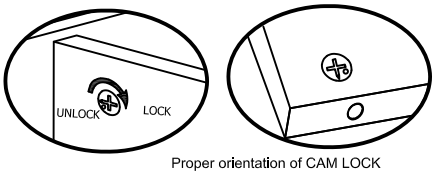


Proper orientation of CAM LOCK


STEP 14

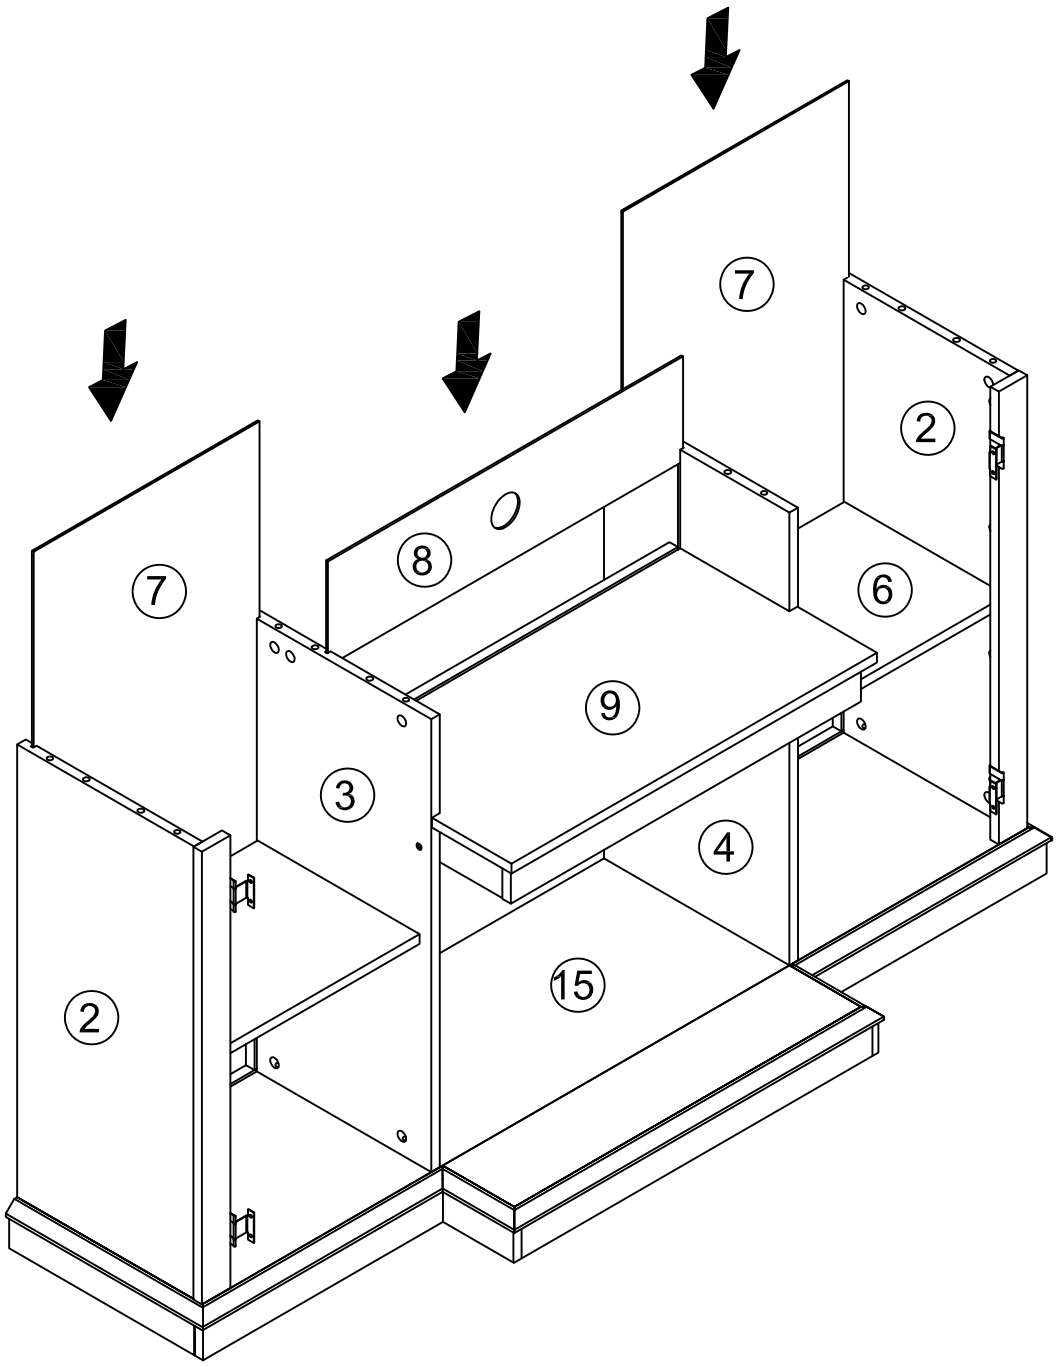


STEP 15

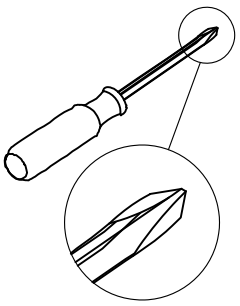


A	X8
	
Ø15*9.5	


B	X8
	
Ø6.5*33	

C	X8
	
Ø8*30	


G	X4
	
Ø3*14	

I	X2
	
46*15*14	


N	X1SET
	

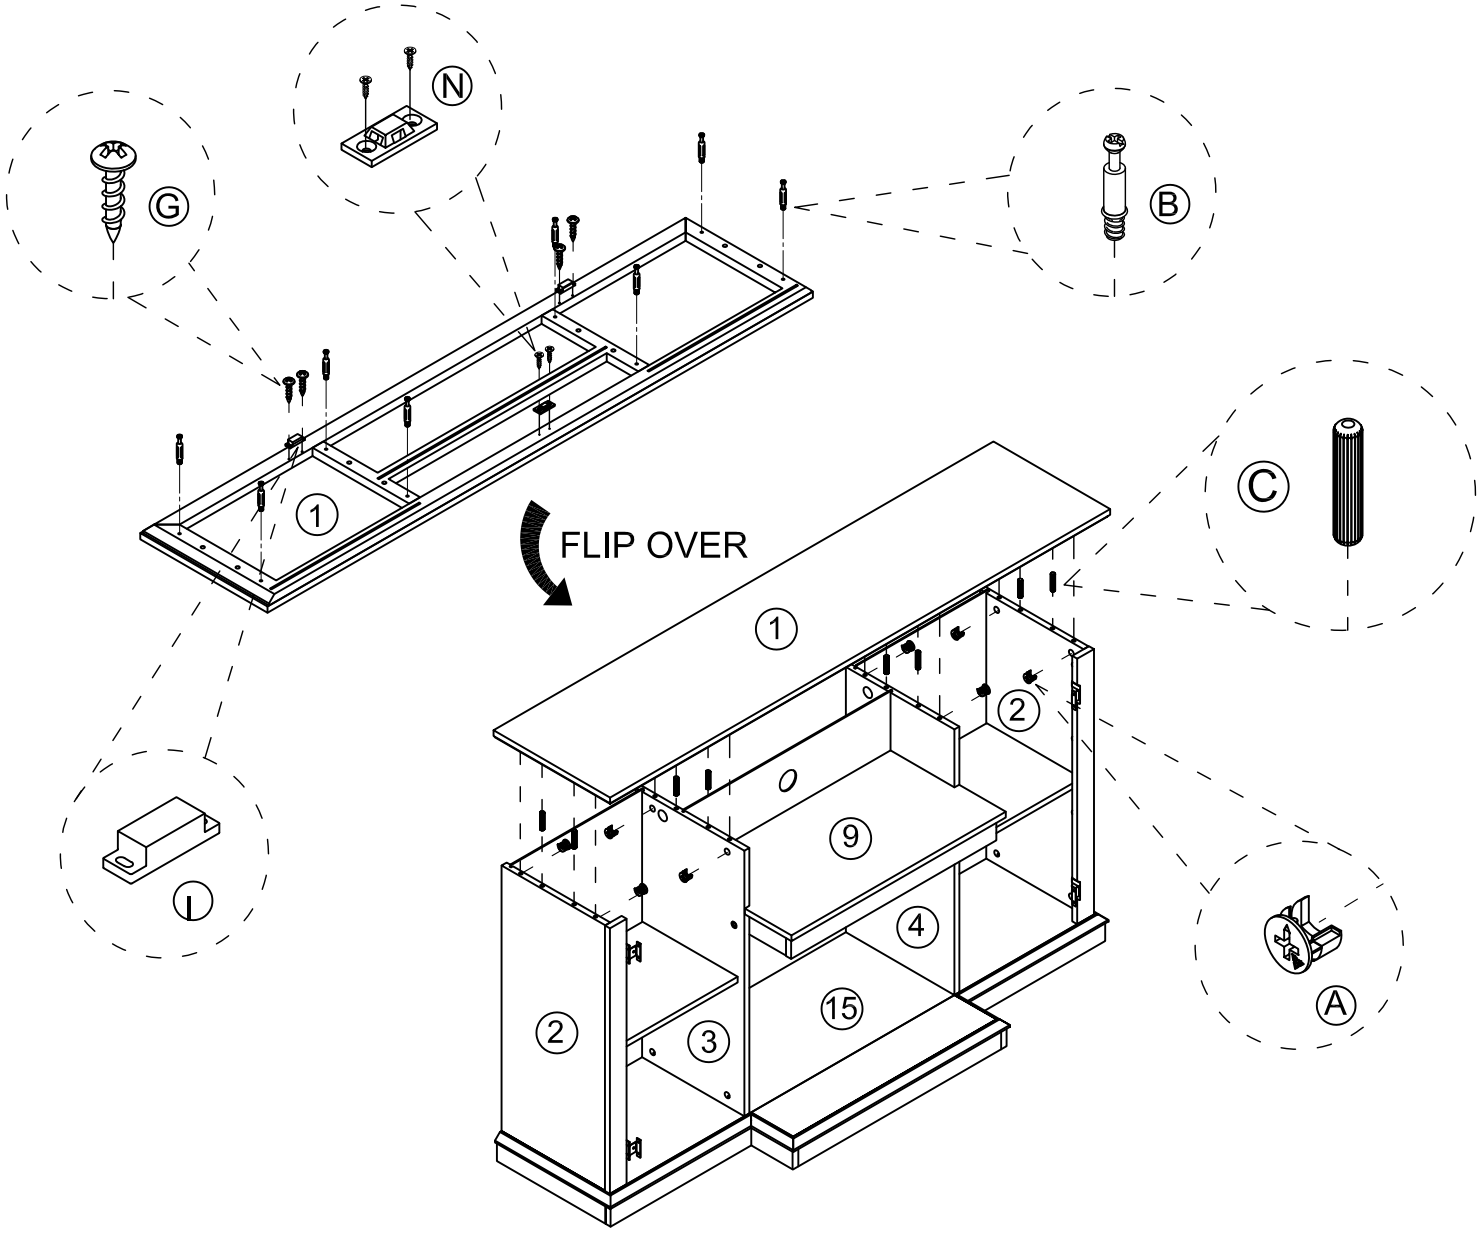



STEP 16

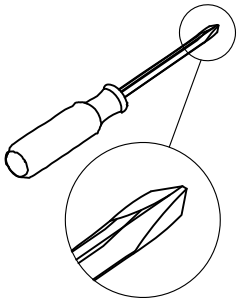



D	X4
	
Ø3*12	

E	X2
	
M4*19	


F	X8
	
Ø3*12	

J	X2
	
45*12	


K	X2
	
62*14*31	

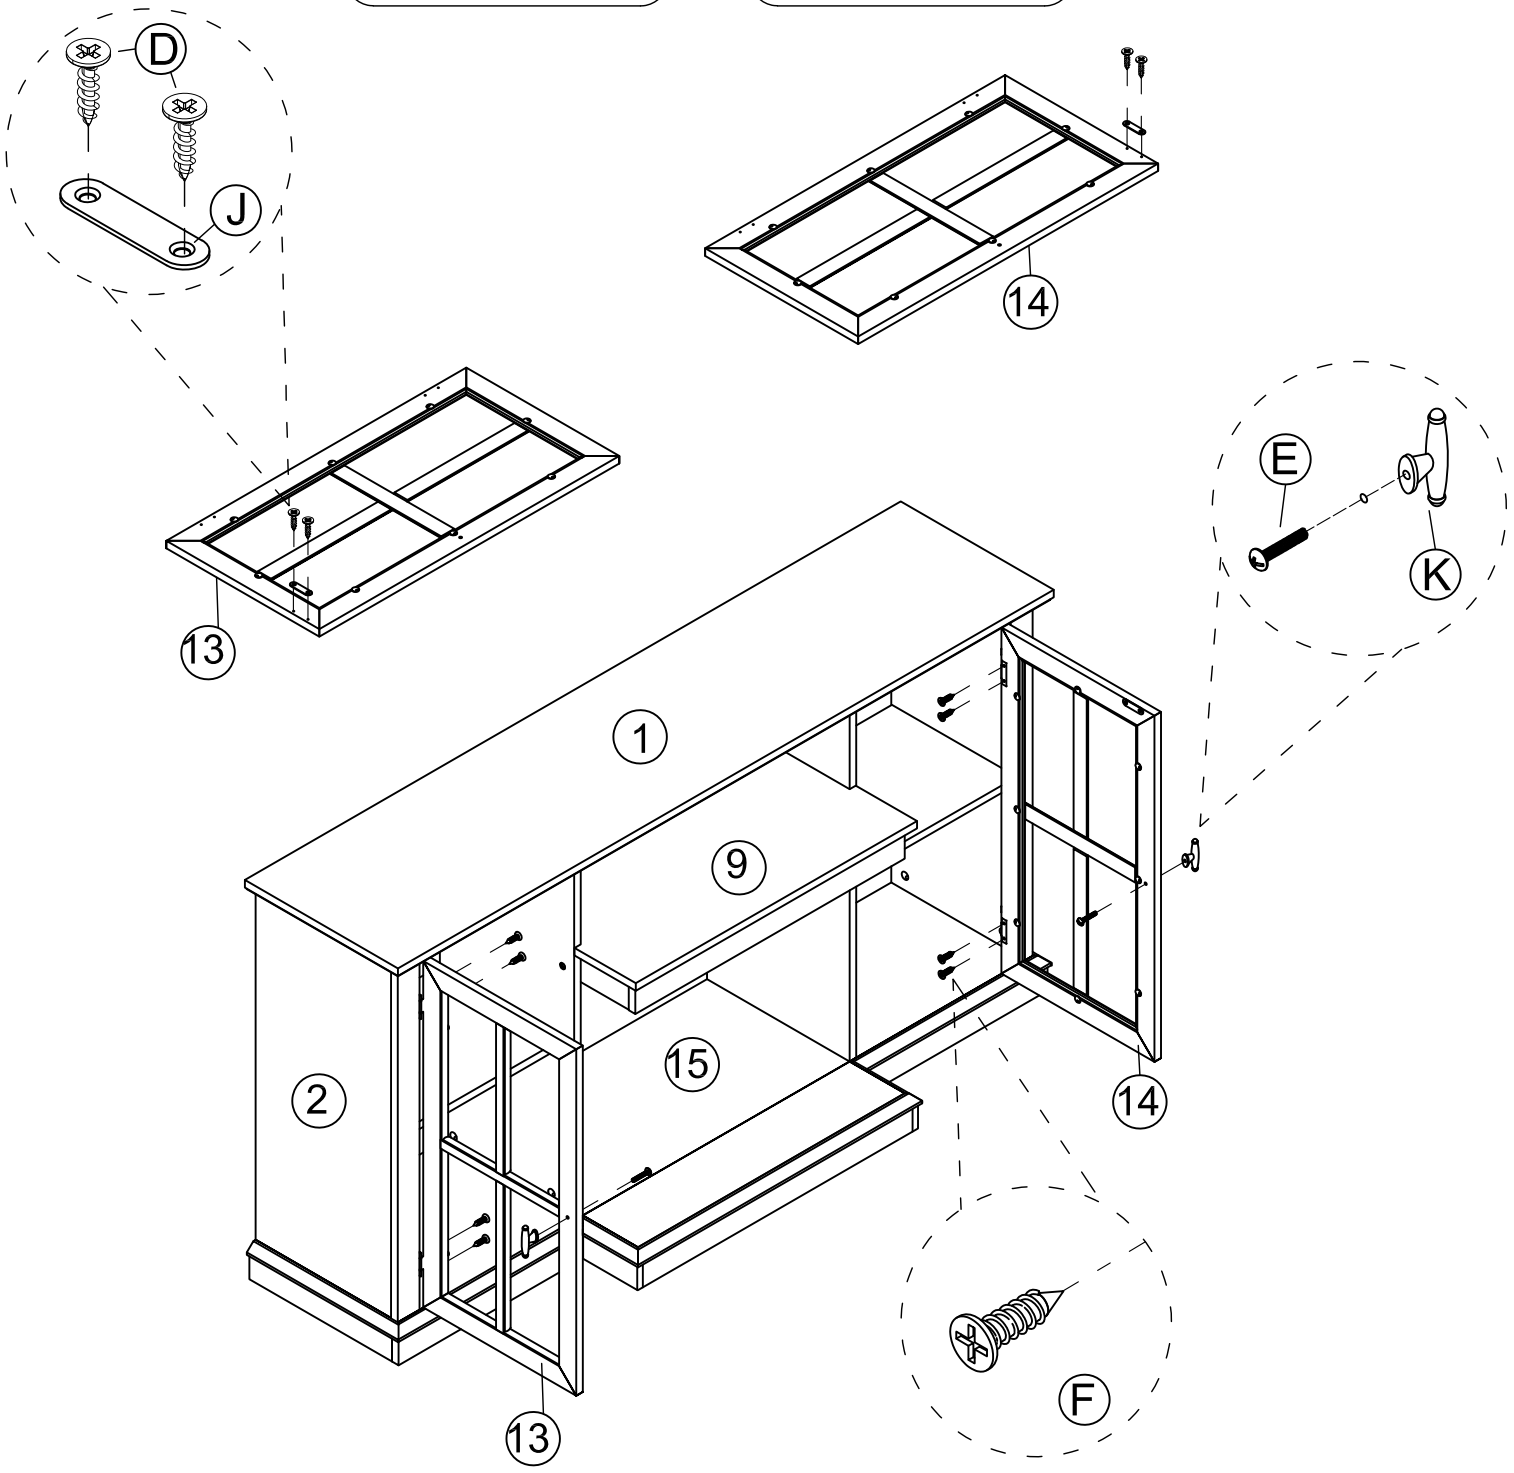

STEP 17

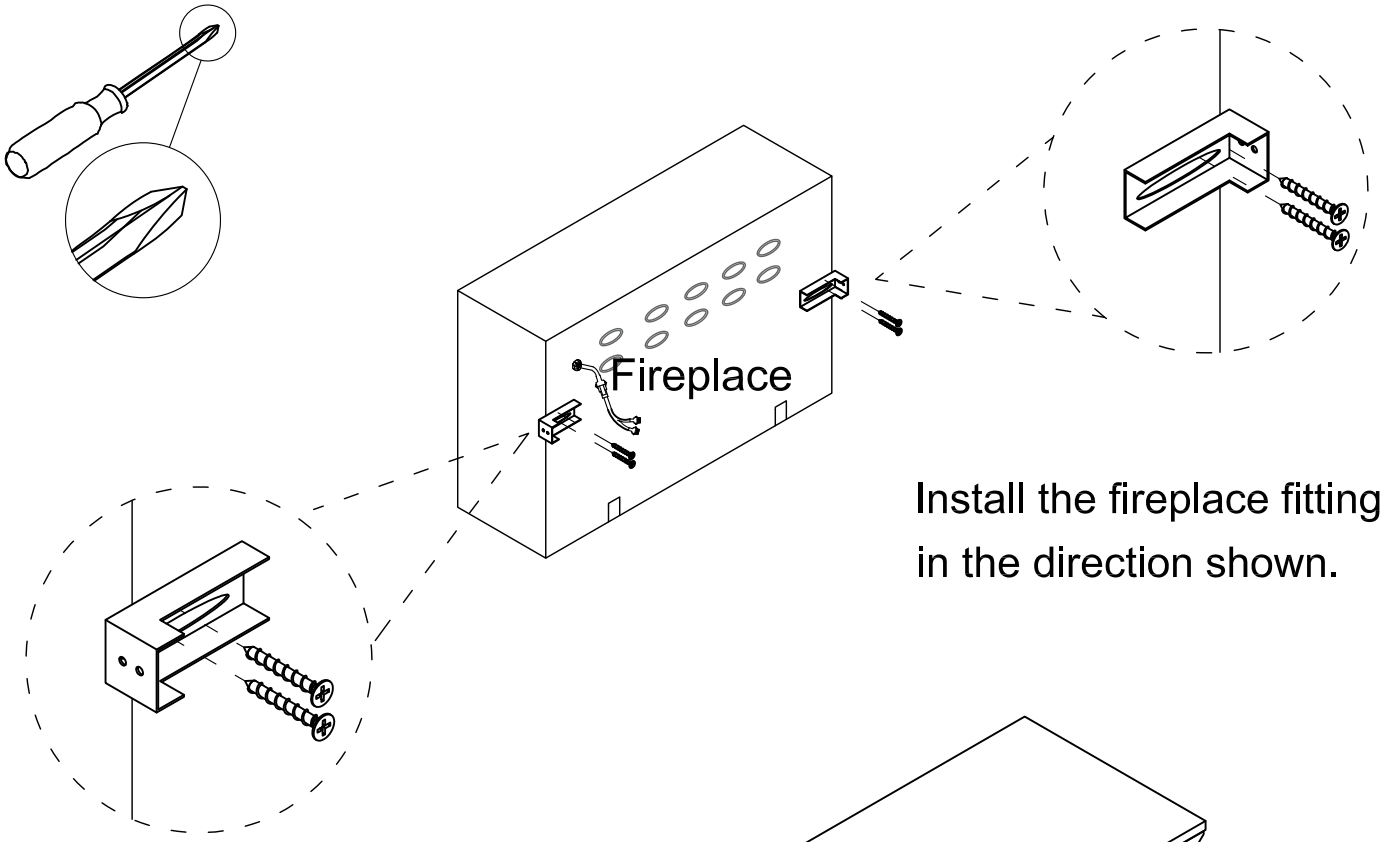



Install the fireplace fittings in the direction shown.

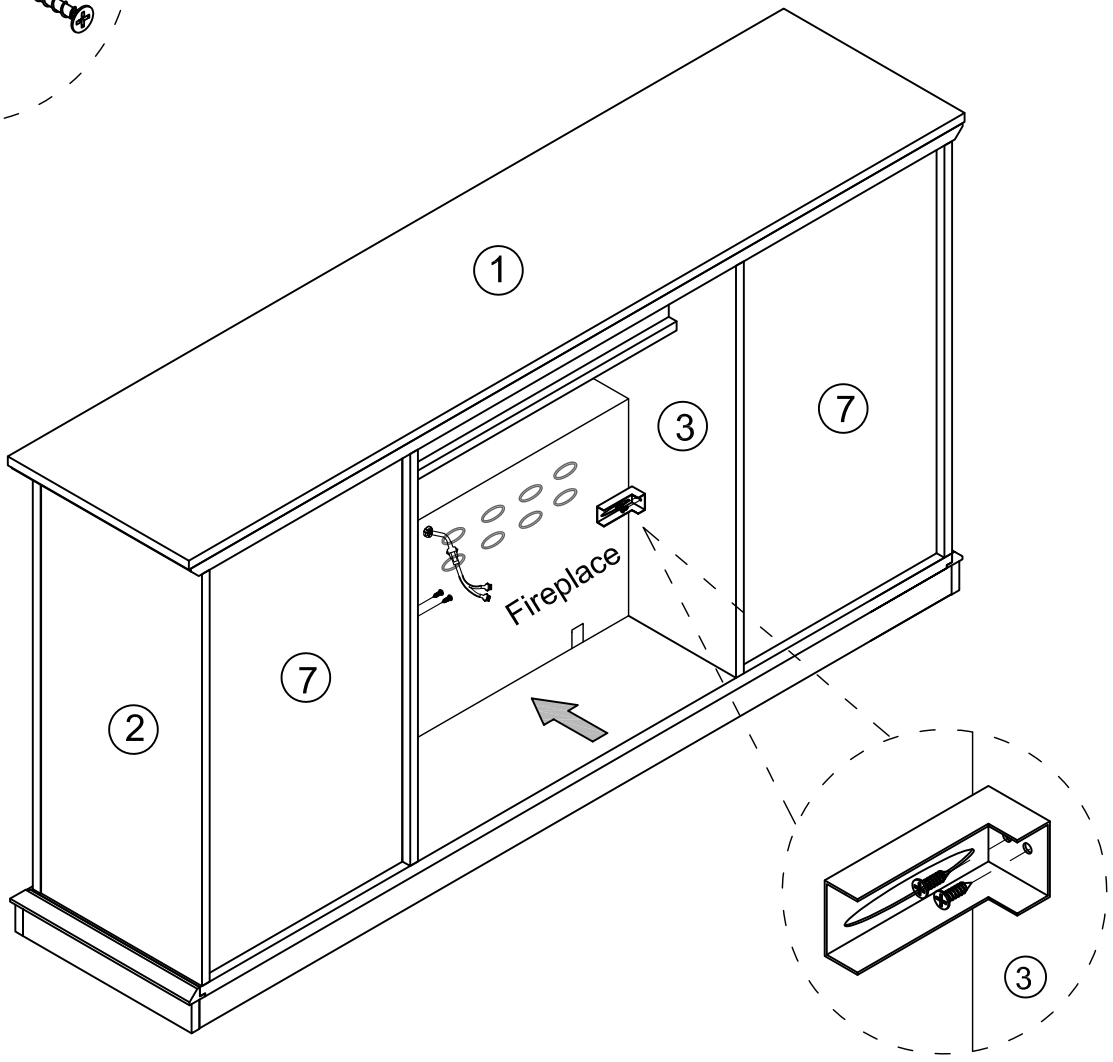


Align the fireplace with the upper holes of plates 3 and 4 and tighten them with screws.


STEP 18

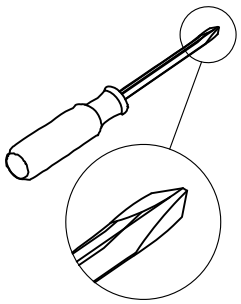

Ⓜ	X8
	
Ø3*14	

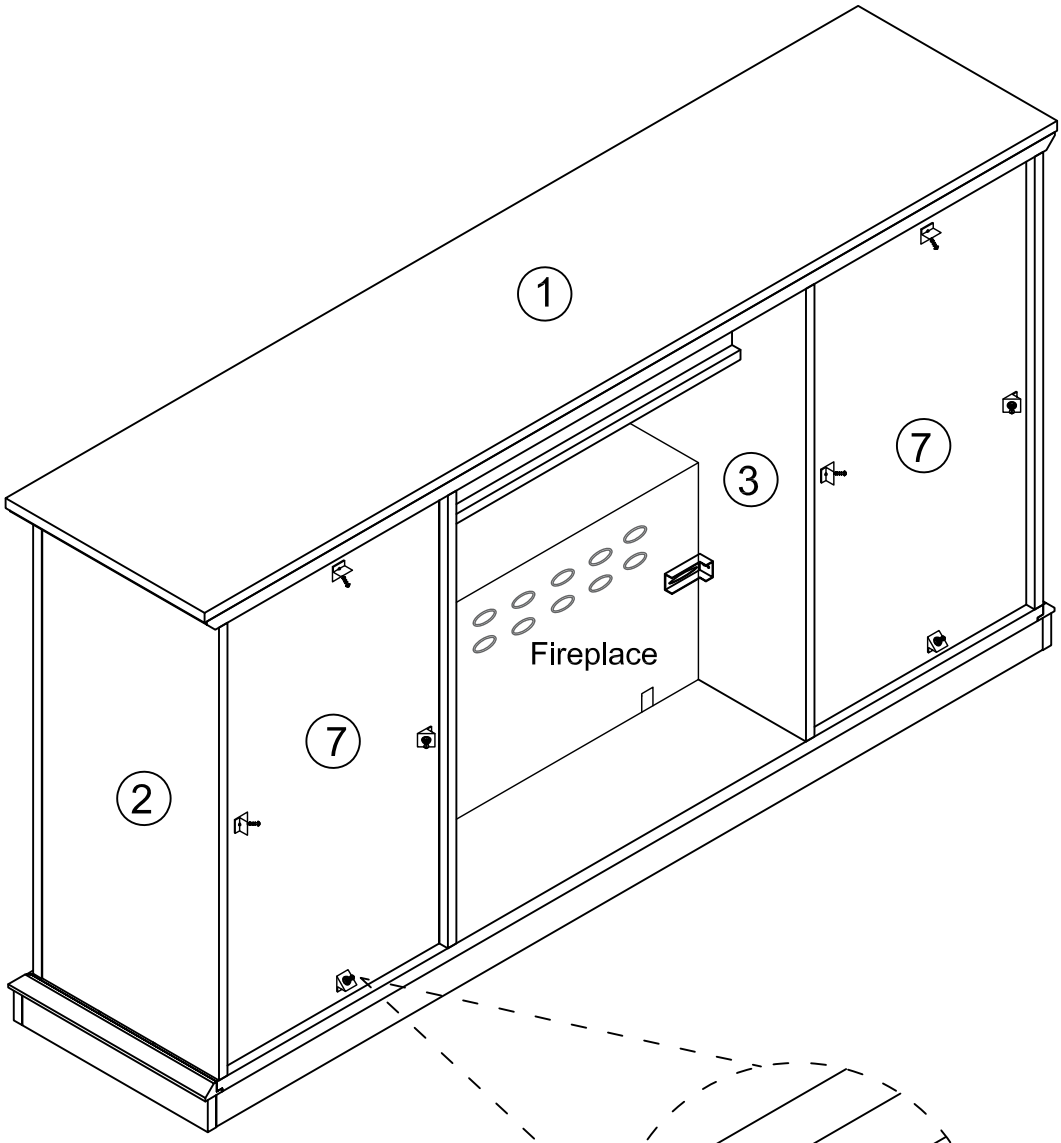


FINISH!

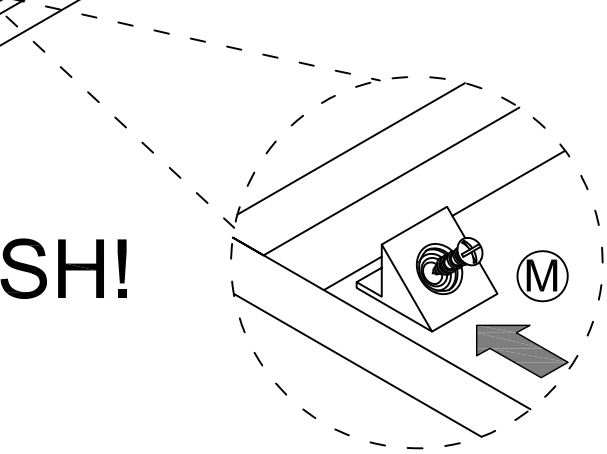


Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.

STEP 19


If you have purchased a fireplace with a light, please follow the following steps to continue the installation. Otherwise, skip this section.

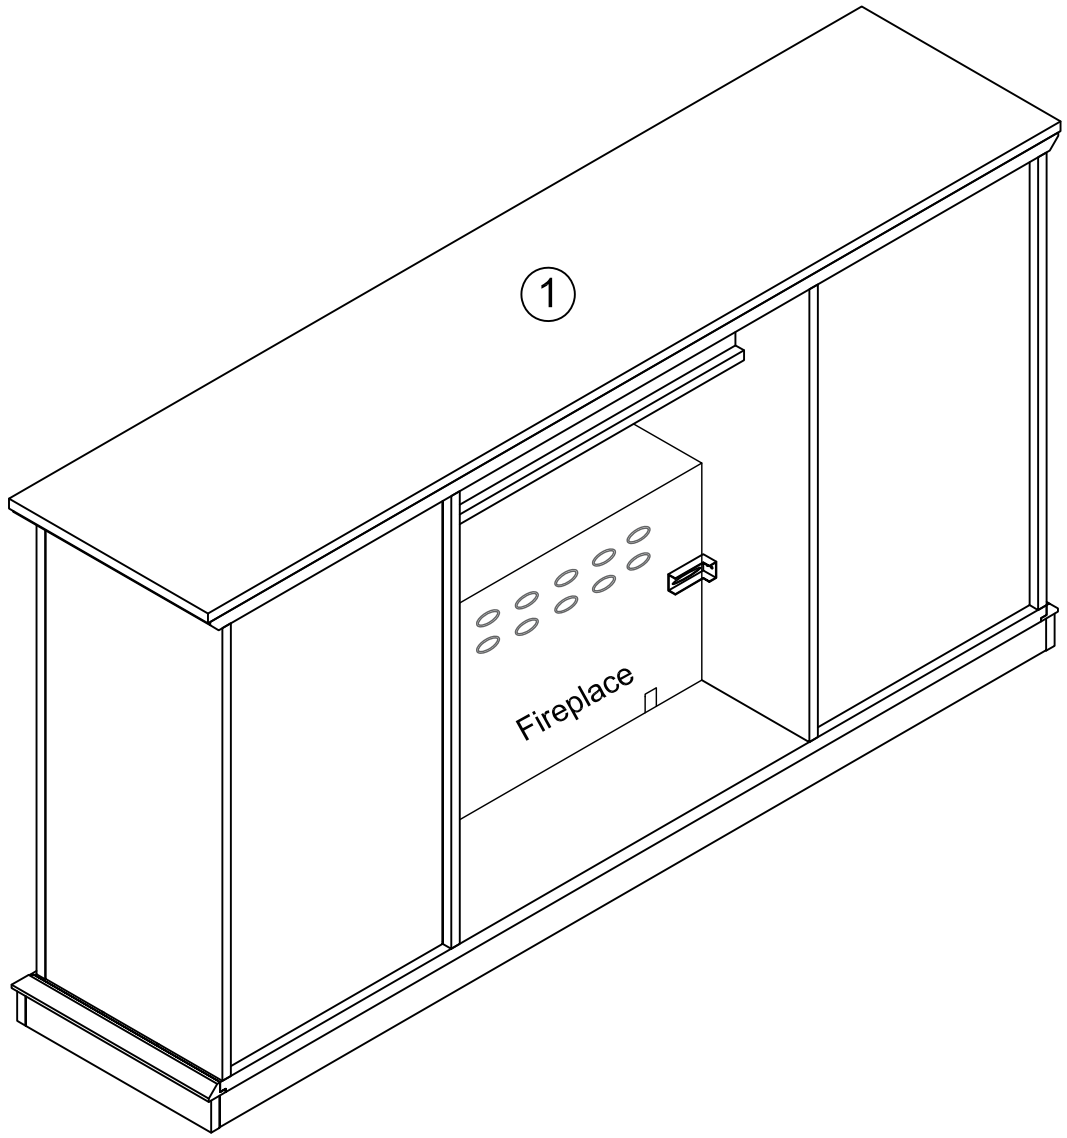

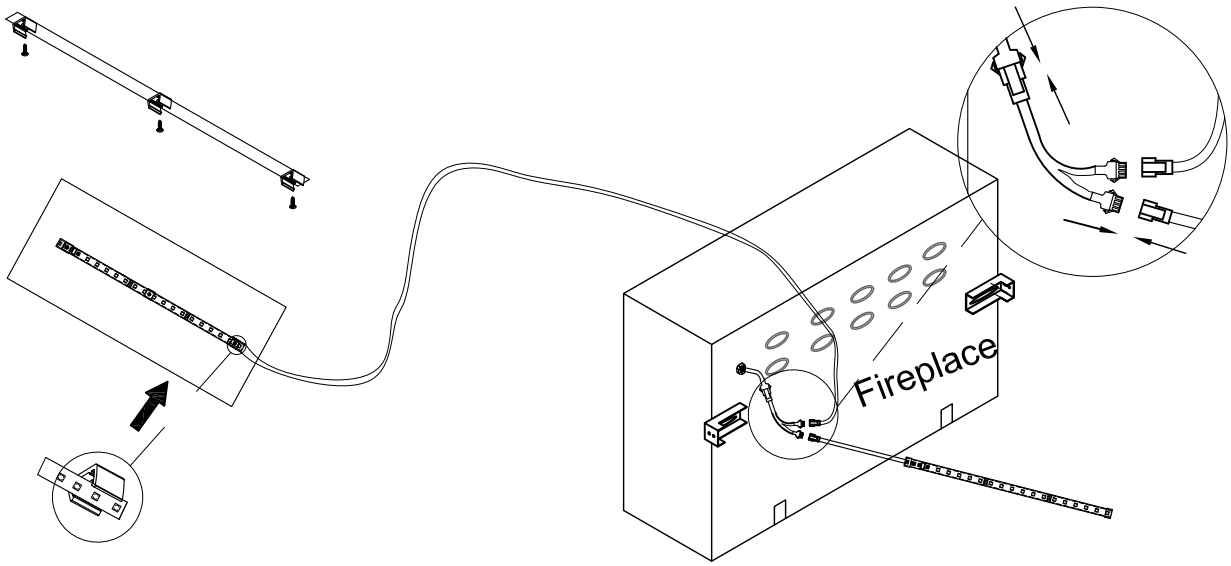

STEP 20

If you have purchased a fireplace with a light, please follow the following steps to continue the installation. Otherwise, skip this section.

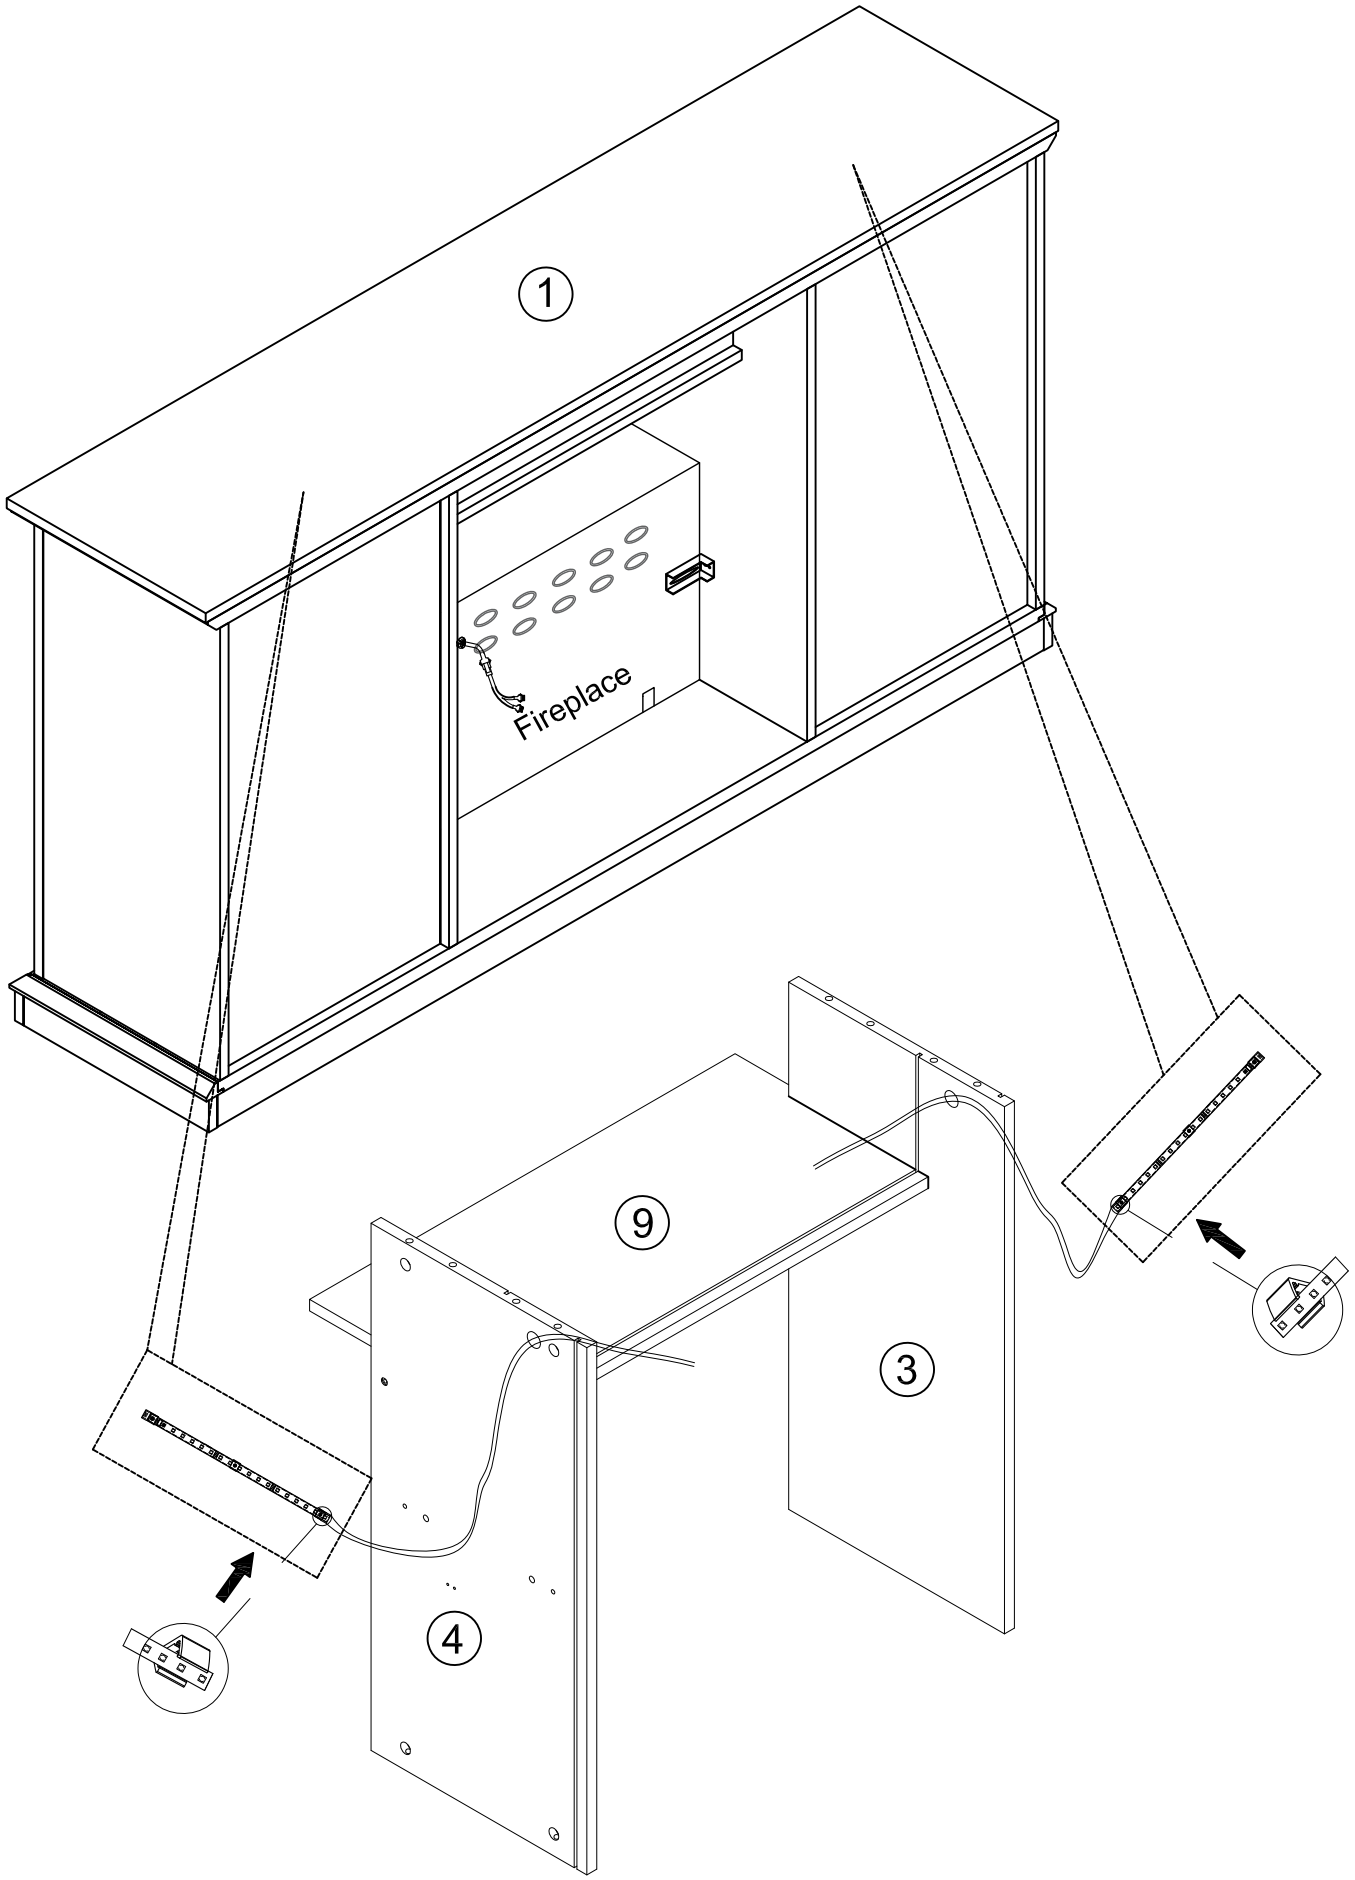


STEP 21


Ⓝ	X1 set
	




Install the tipping restraint hard ware

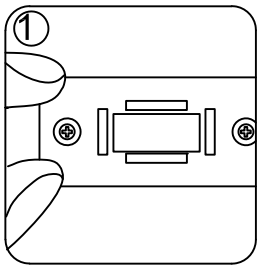


1.make mark on the wall

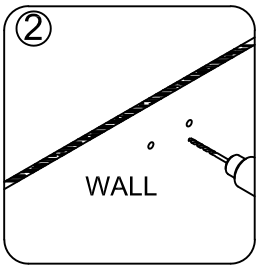


2.drill two Ø6 holes on the wall

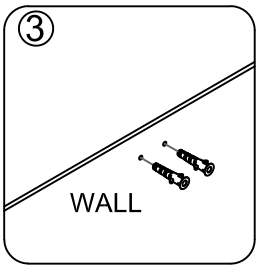

3.put two anchors in the holes

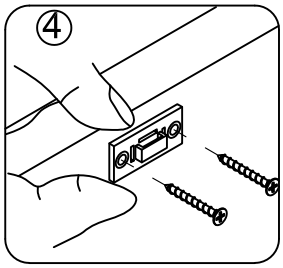

4.fix the device on the wall by the long srews

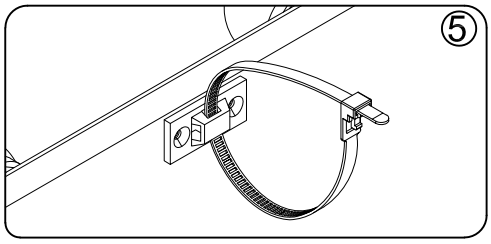

5.Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

