


Installation & Assembly

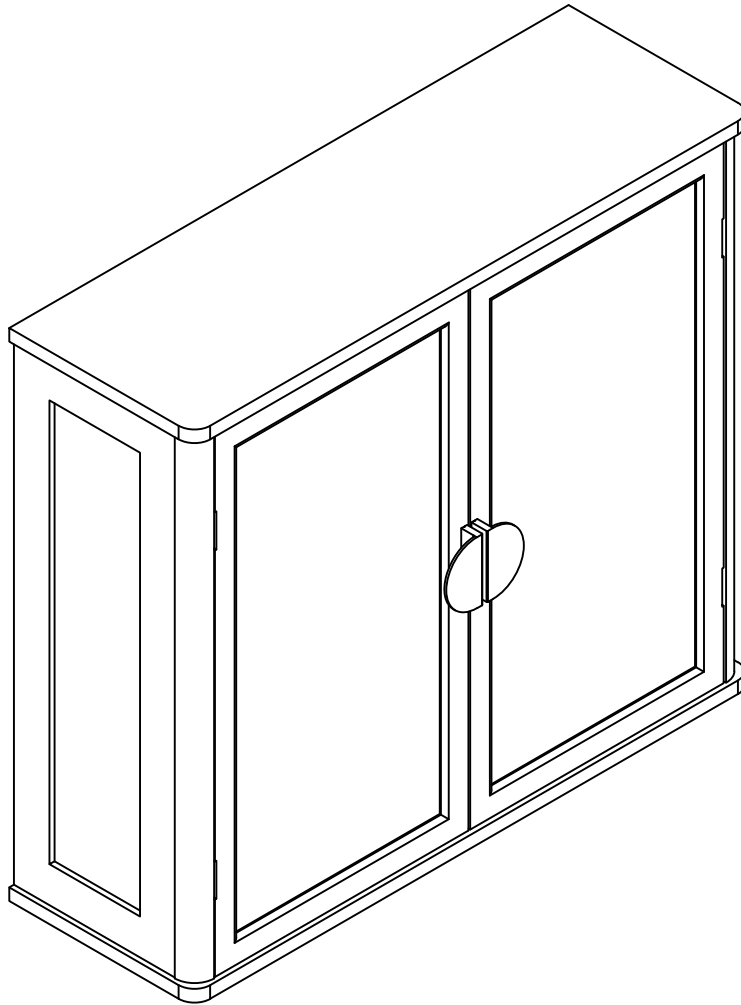

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

MADE IN CHINA

CONTACT US ANYTIME FOR TOP-NOTCH CUSTOMER SERVICE

Q: Need help with assembly?

A: We could provide detailed installation videos. Contact us for step-by-step guidance to ensure successful installation.

Q: Found damaged panels or missing accessories?


A: Let us know, and we'll promptly send replacements your way.

Q: Have feedback on product usage?

A: Contact us, and we'll collaborate to ensure the best experience for you.

**DO NOT RETURN PRODUCT TO WAREHOUSE
CONTACT US BY EMAIL OR PHONE**

Before You Start

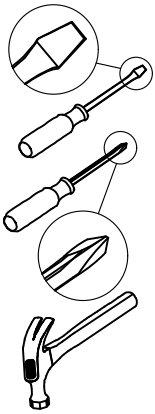


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

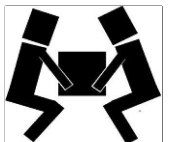


Board Identification


Not actual size

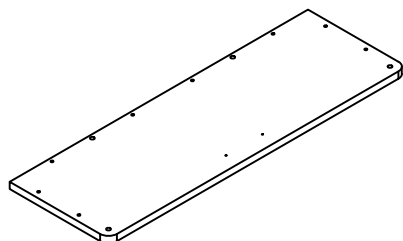


Ⓐ
Qty:1

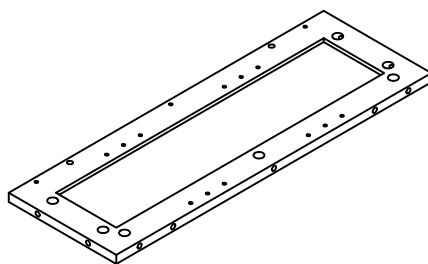


Ⓑ
Qty:2

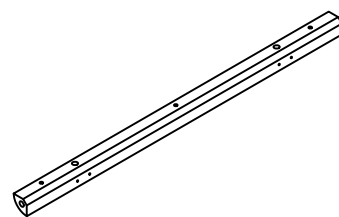


Ⓒ
Qty:2

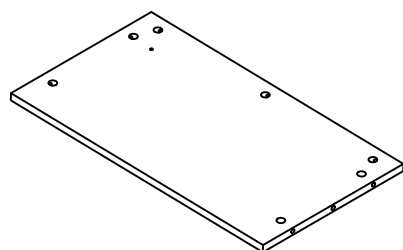


Ⓓ
Qty:1

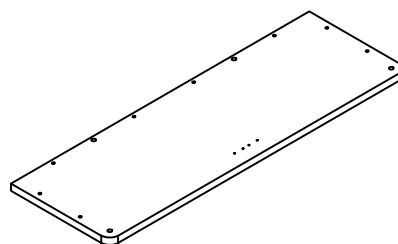


Ⓔ
Qty:1

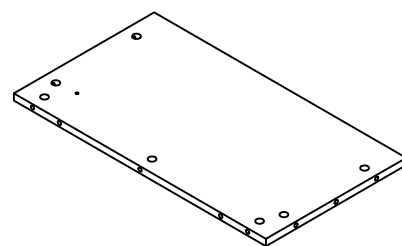


Ⓕ
Qty:1

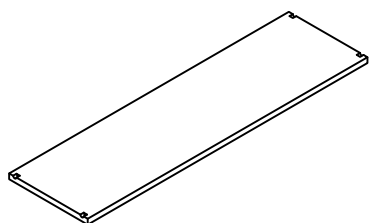

Ⓖ
Qty:2

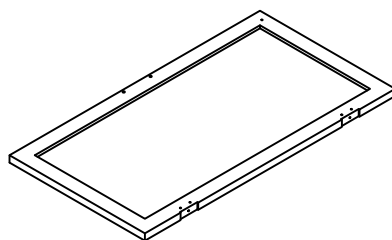


Ⓗ
Qty:1

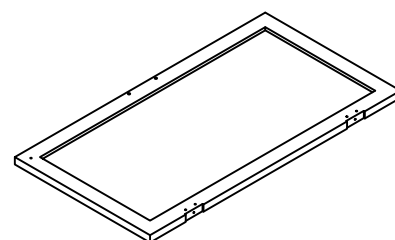


Ⓘ
Qty:1


Part List

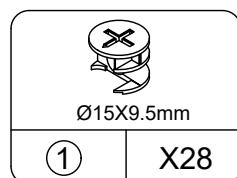


CAM LOCK
spare:2

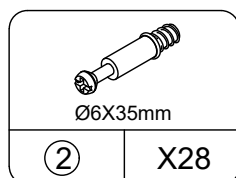


CAM BOLT
spare:2

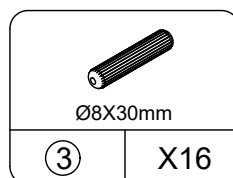


WOOD DOWEL
spare:2

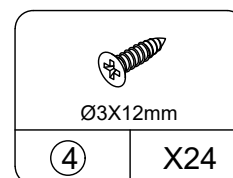


SCREW
spare:2

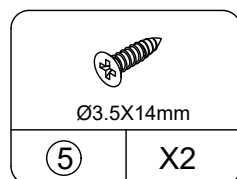


SCREW

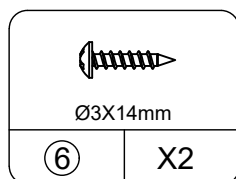


SCREW

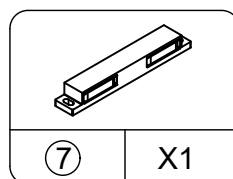


MAGNETIC CATCH

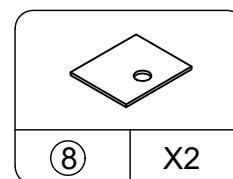


IRON SHEET

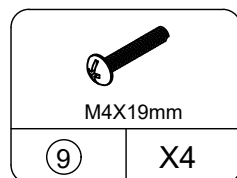


SCREW
spare:1

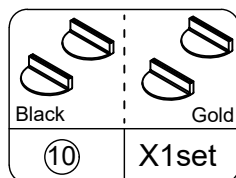


HANDLE

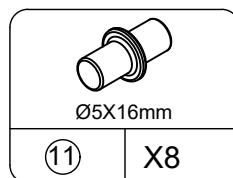


SHELF SUPPORT

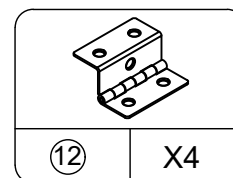


HINGE

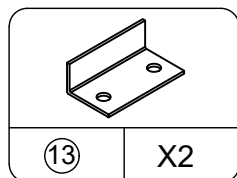


DOOR CATCH

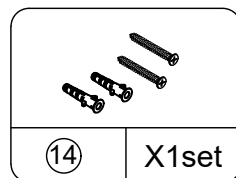

SCREW ANCHOR SET

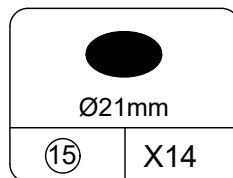


HOLE STICKER
spare:2

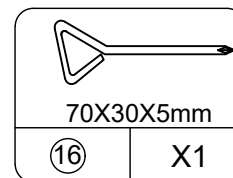

SCREWDRIVER


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.





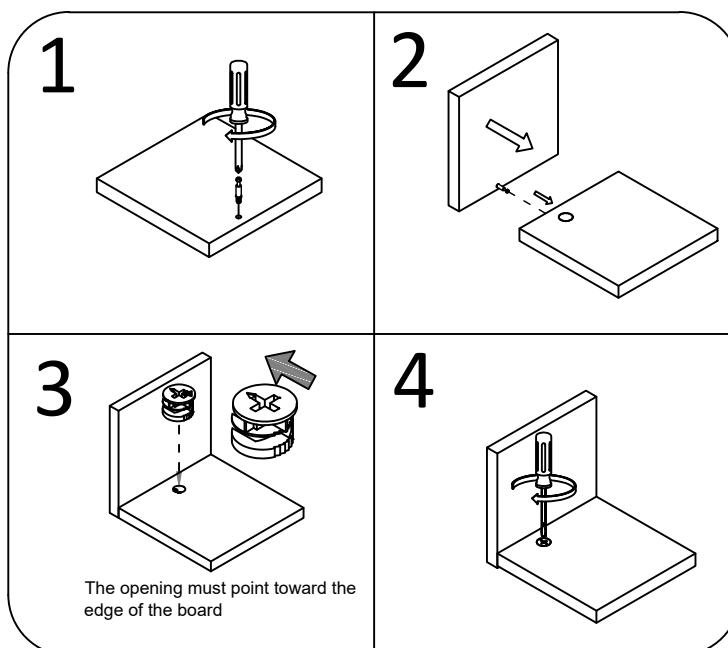


Board Identification

Not actual size

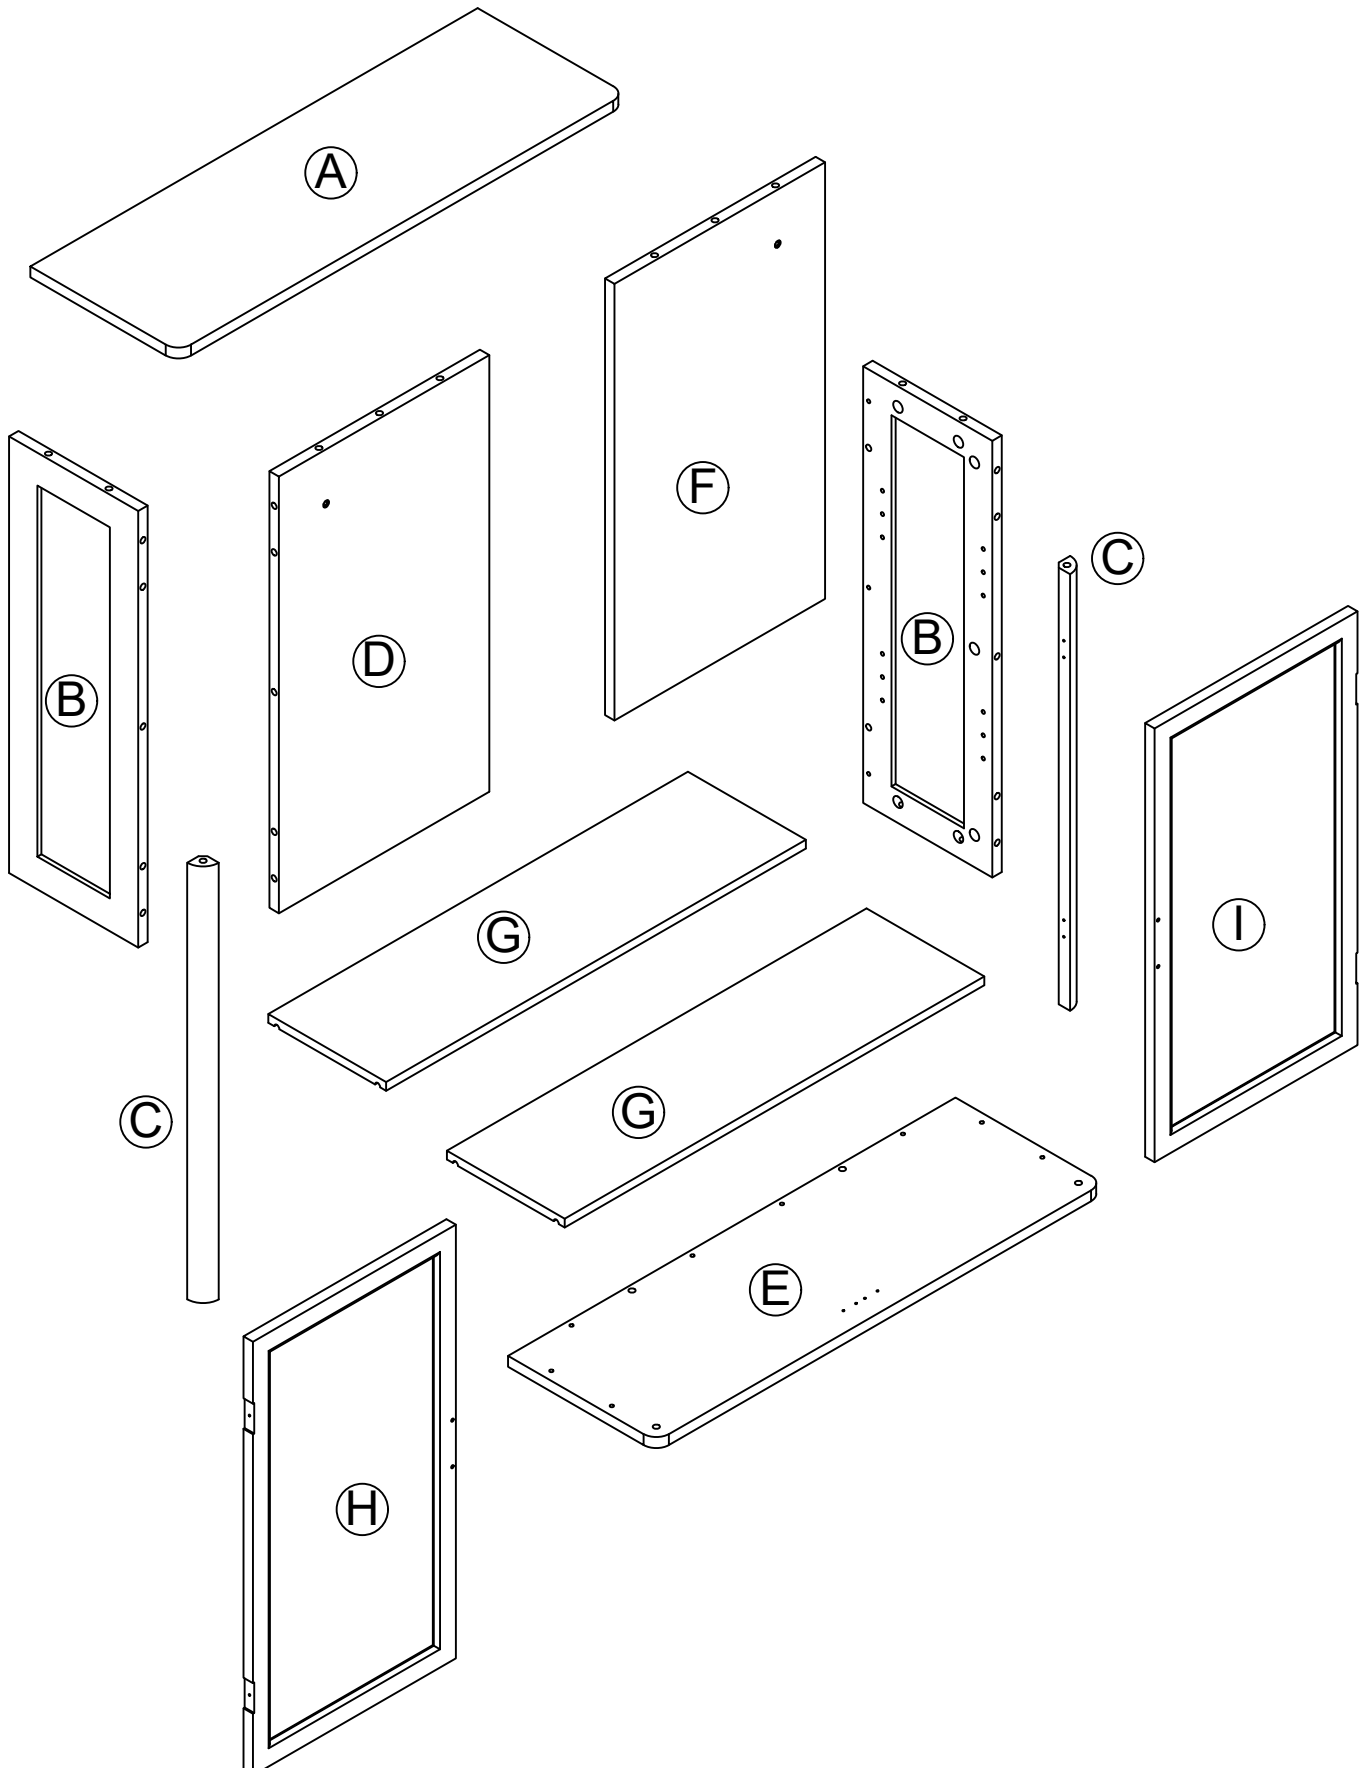


STEP1

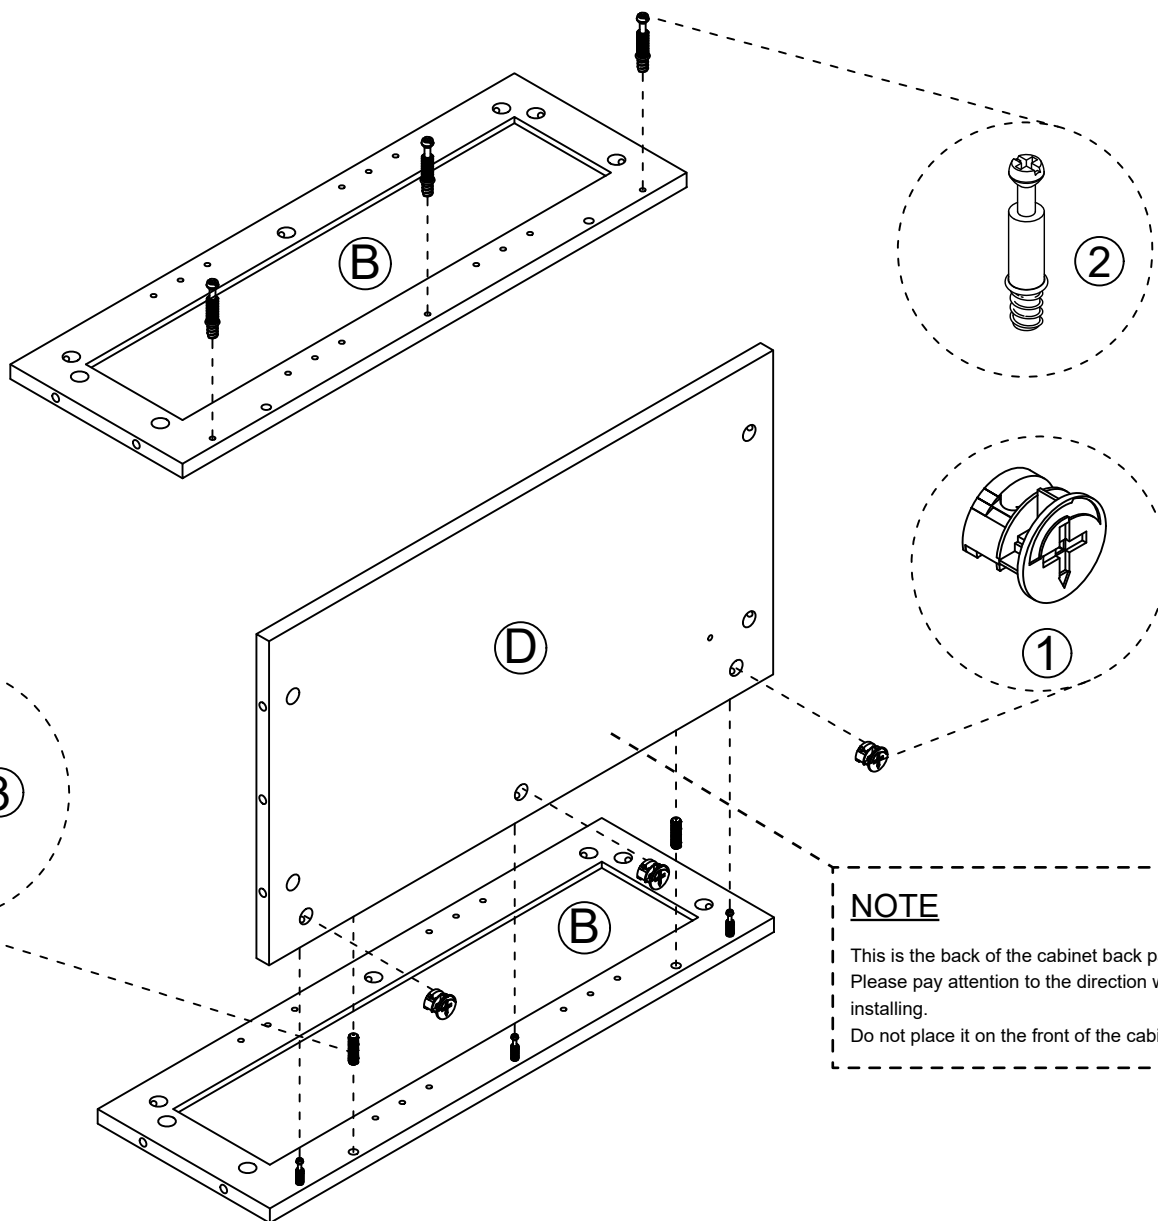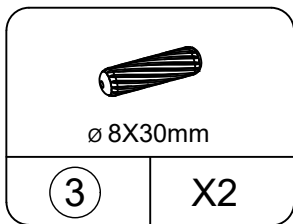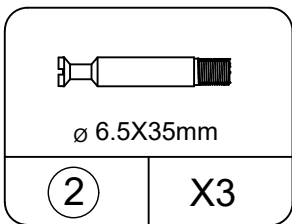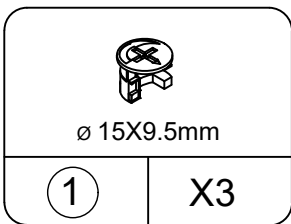
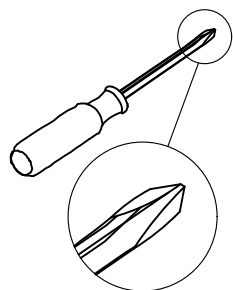


NOTE

This is the back of the cabinet back panel.
Please pay attention to the direction when
installing.
Do not place it on the front of the cabinet!








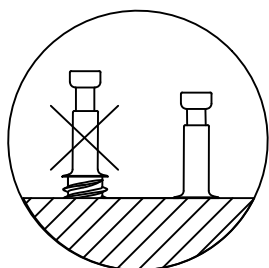


Insert the cam bolt into
the hole first, then insert
the cam lock and lock it.


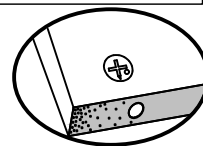
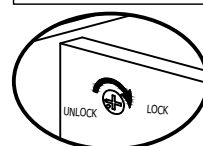


Proper orientation of CAM LOCK

STEP2

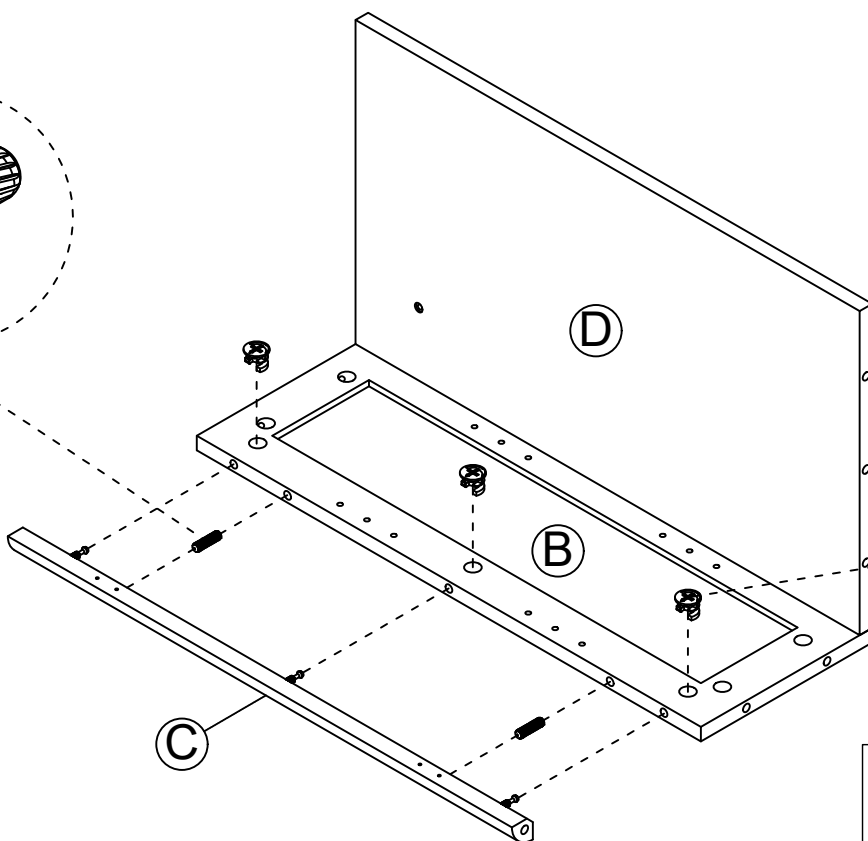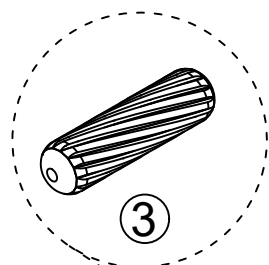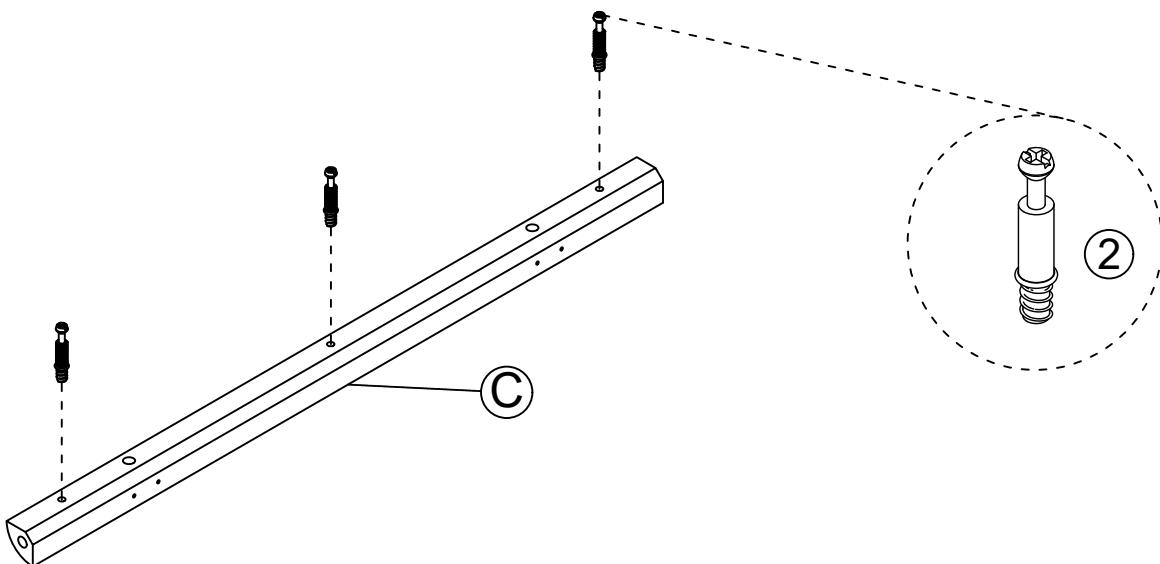
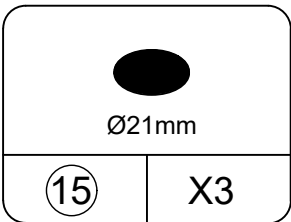
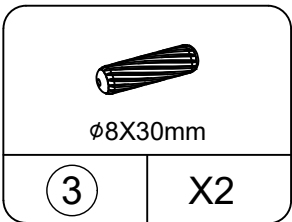
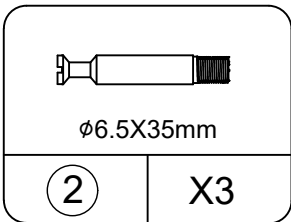
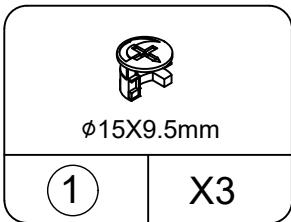
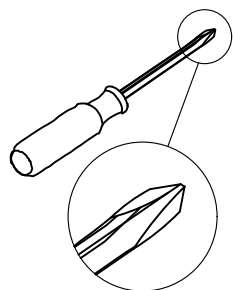


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



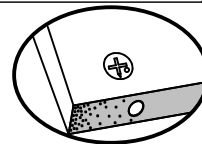
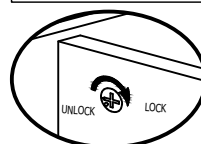
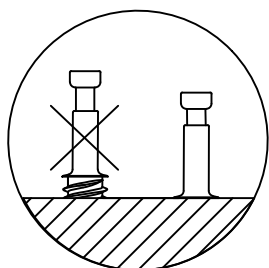


Proper orientation of CAM LOCK


STEP3

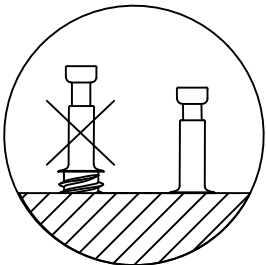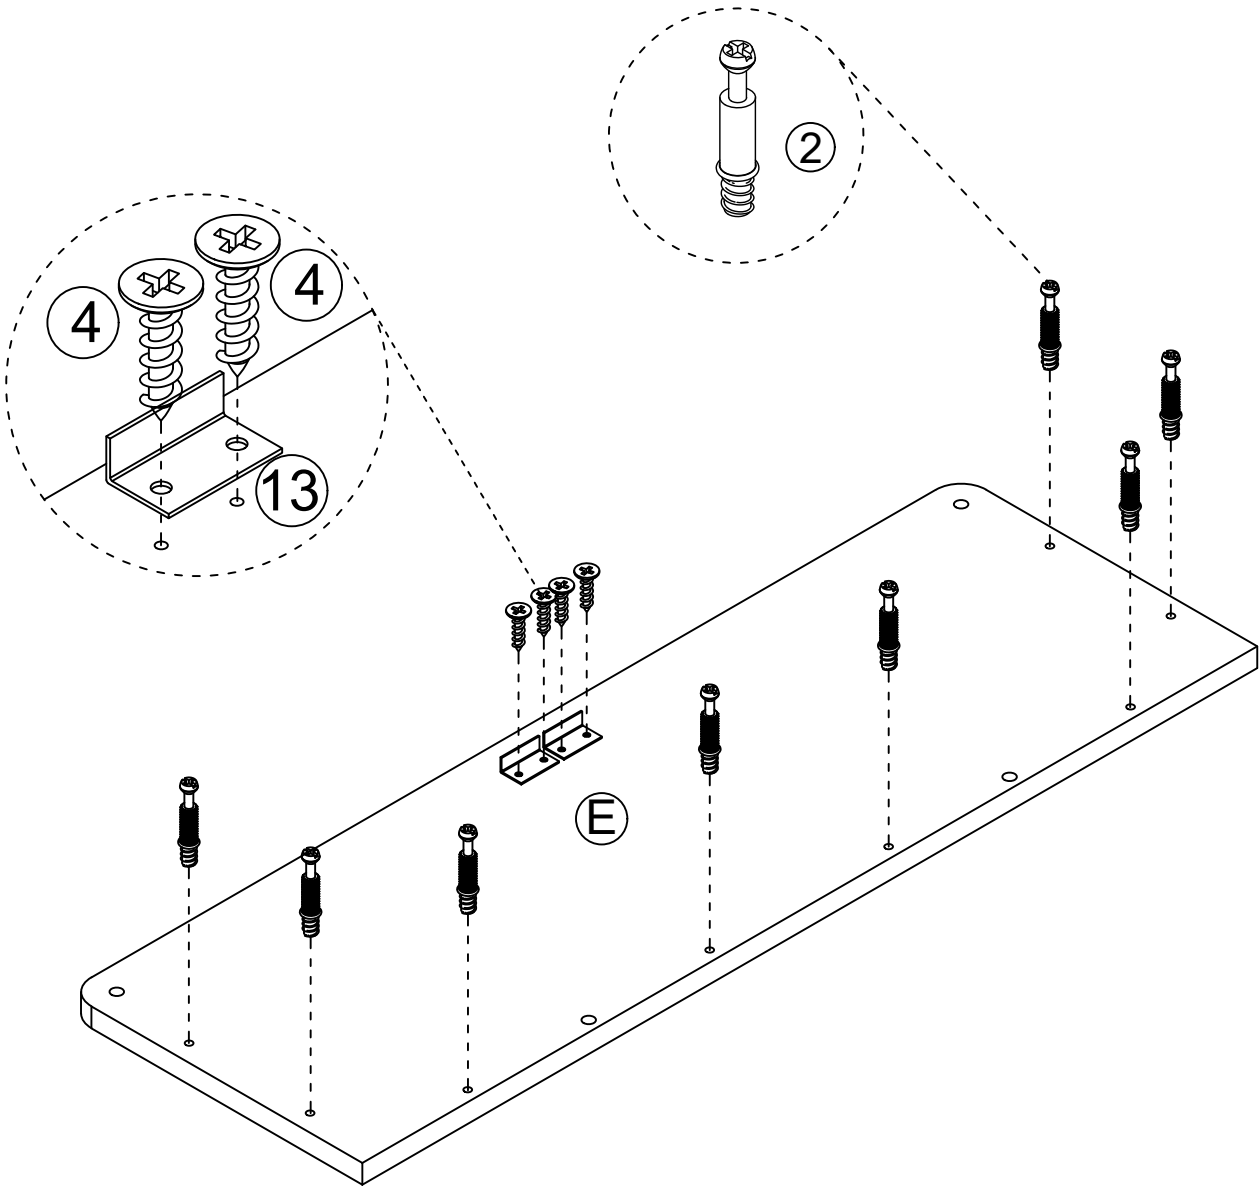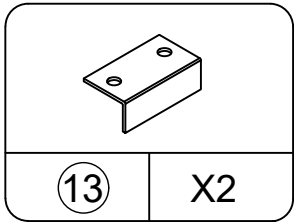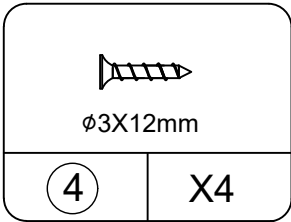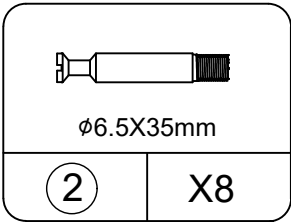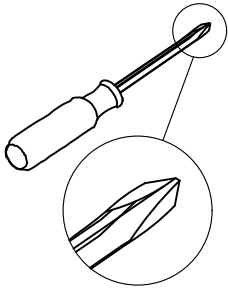

STEP4

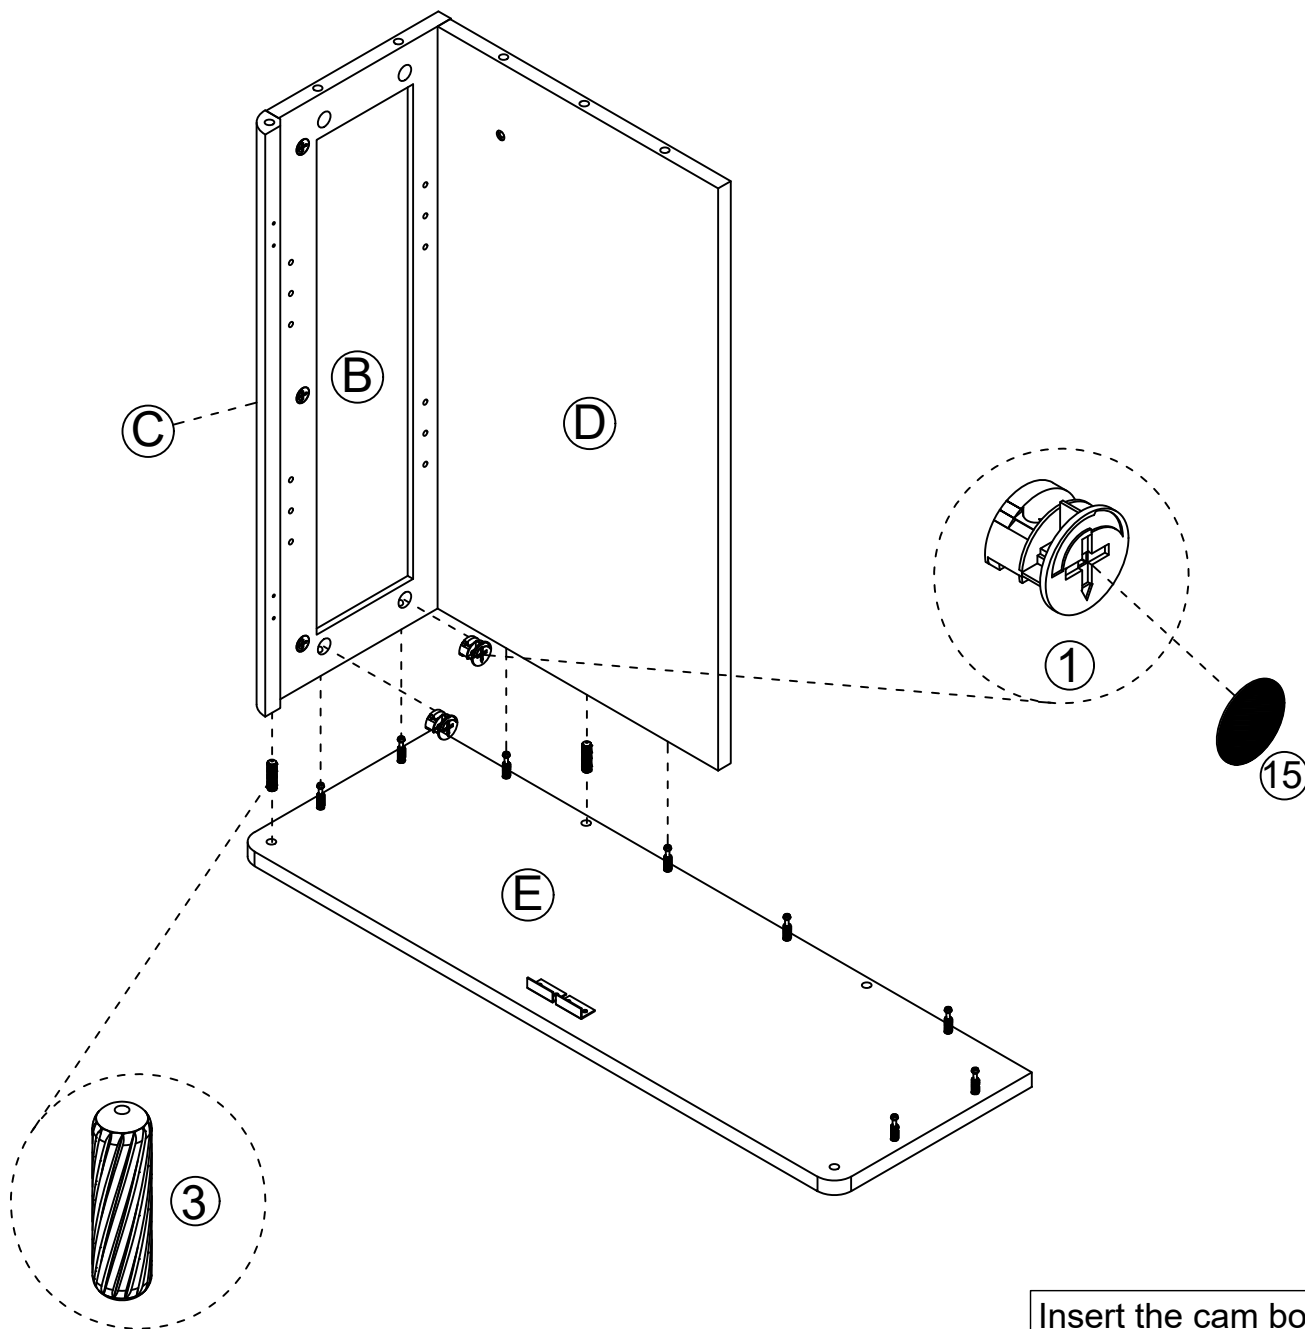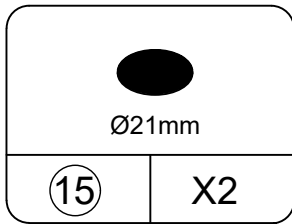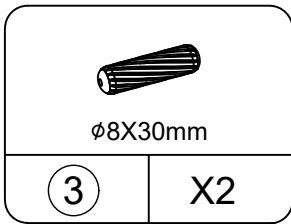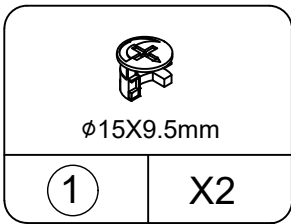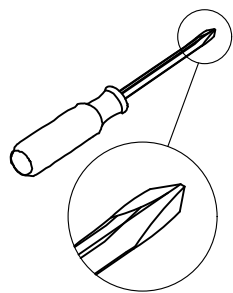


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

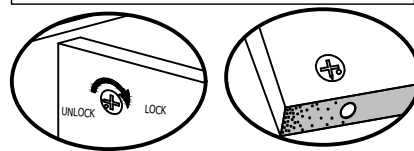


Proper orientation of CAM LOCK


STEP5

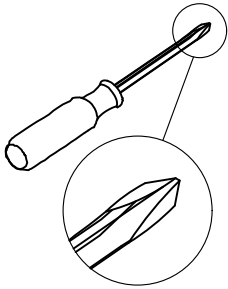

	
ø15X9.5mm	
1	X3


	
ø6.5X35mm	
2	X3

	
ø8X30mm	
3	X2

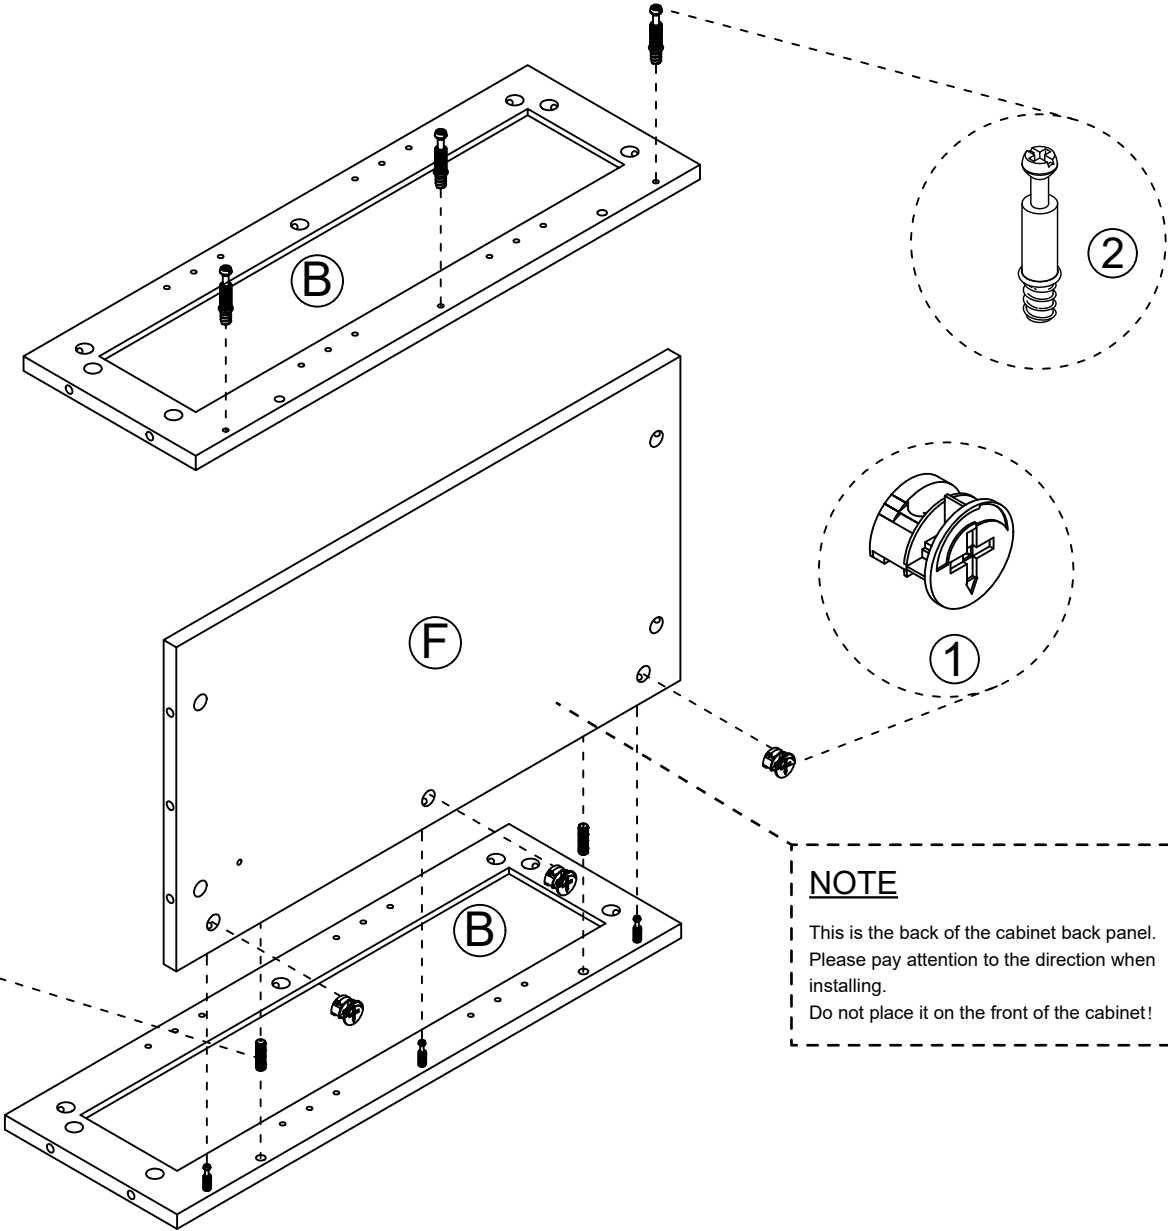


NOTE

This is the back of the cabinet back panel.
Please pay attention to the direction when
installing.
Do not place it on the front of the cabinet!








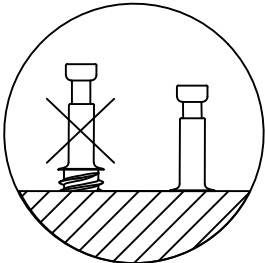


Insert the cam bolt into
the hole first, then insert
the cam lock and lock it.



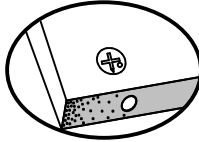


Proper orientation of CAM LOCK

STEP6

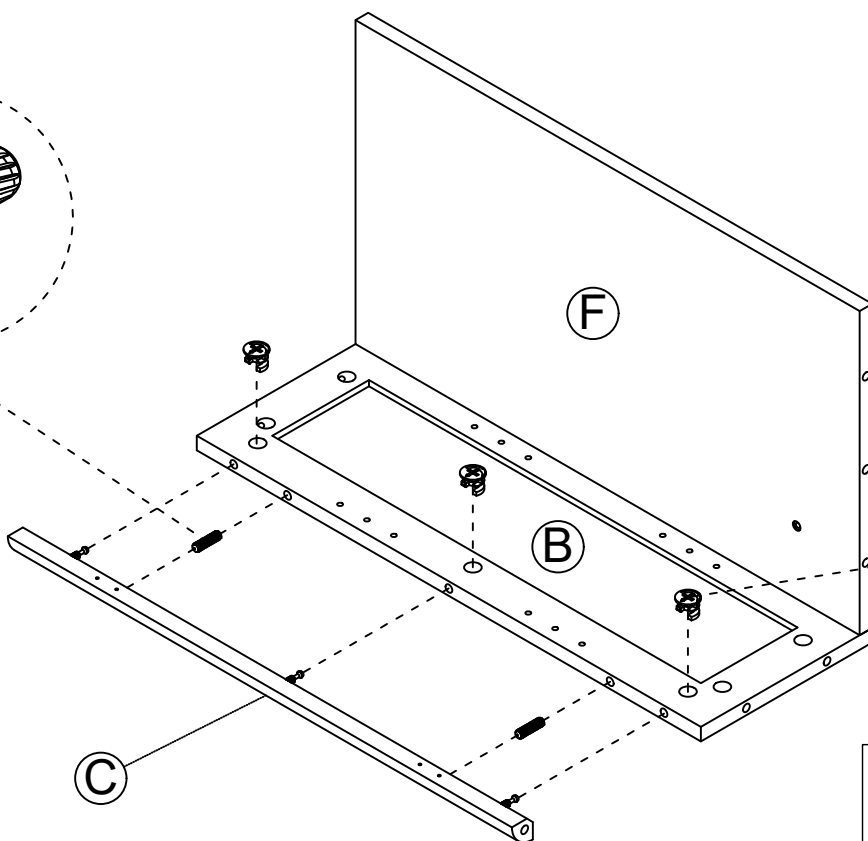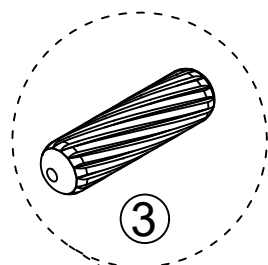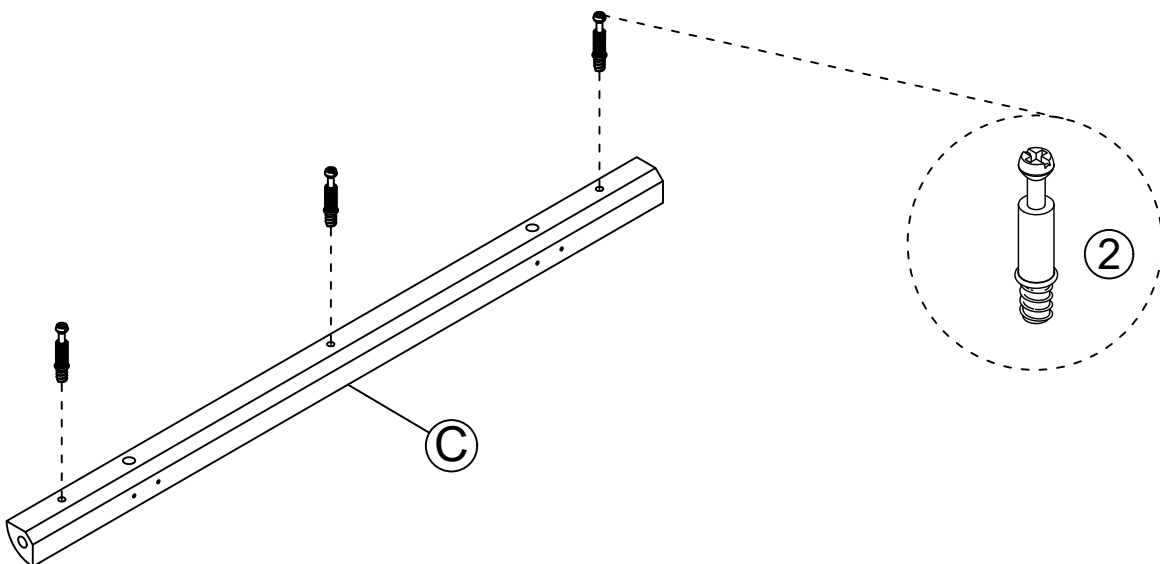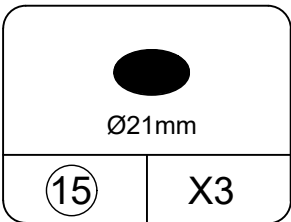
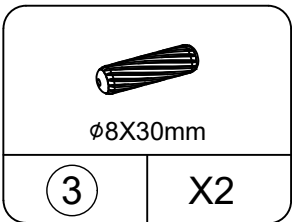
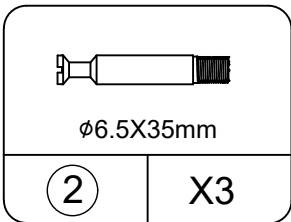
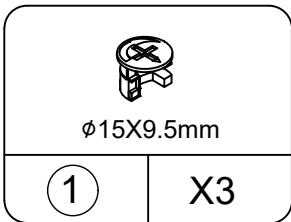
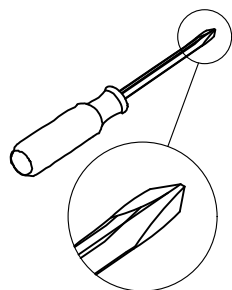


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

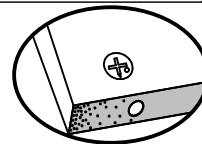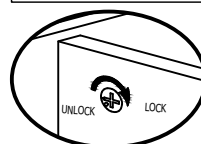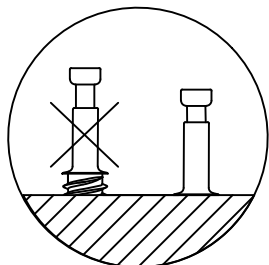


Proper orientation of CAM LOCK

STEP7

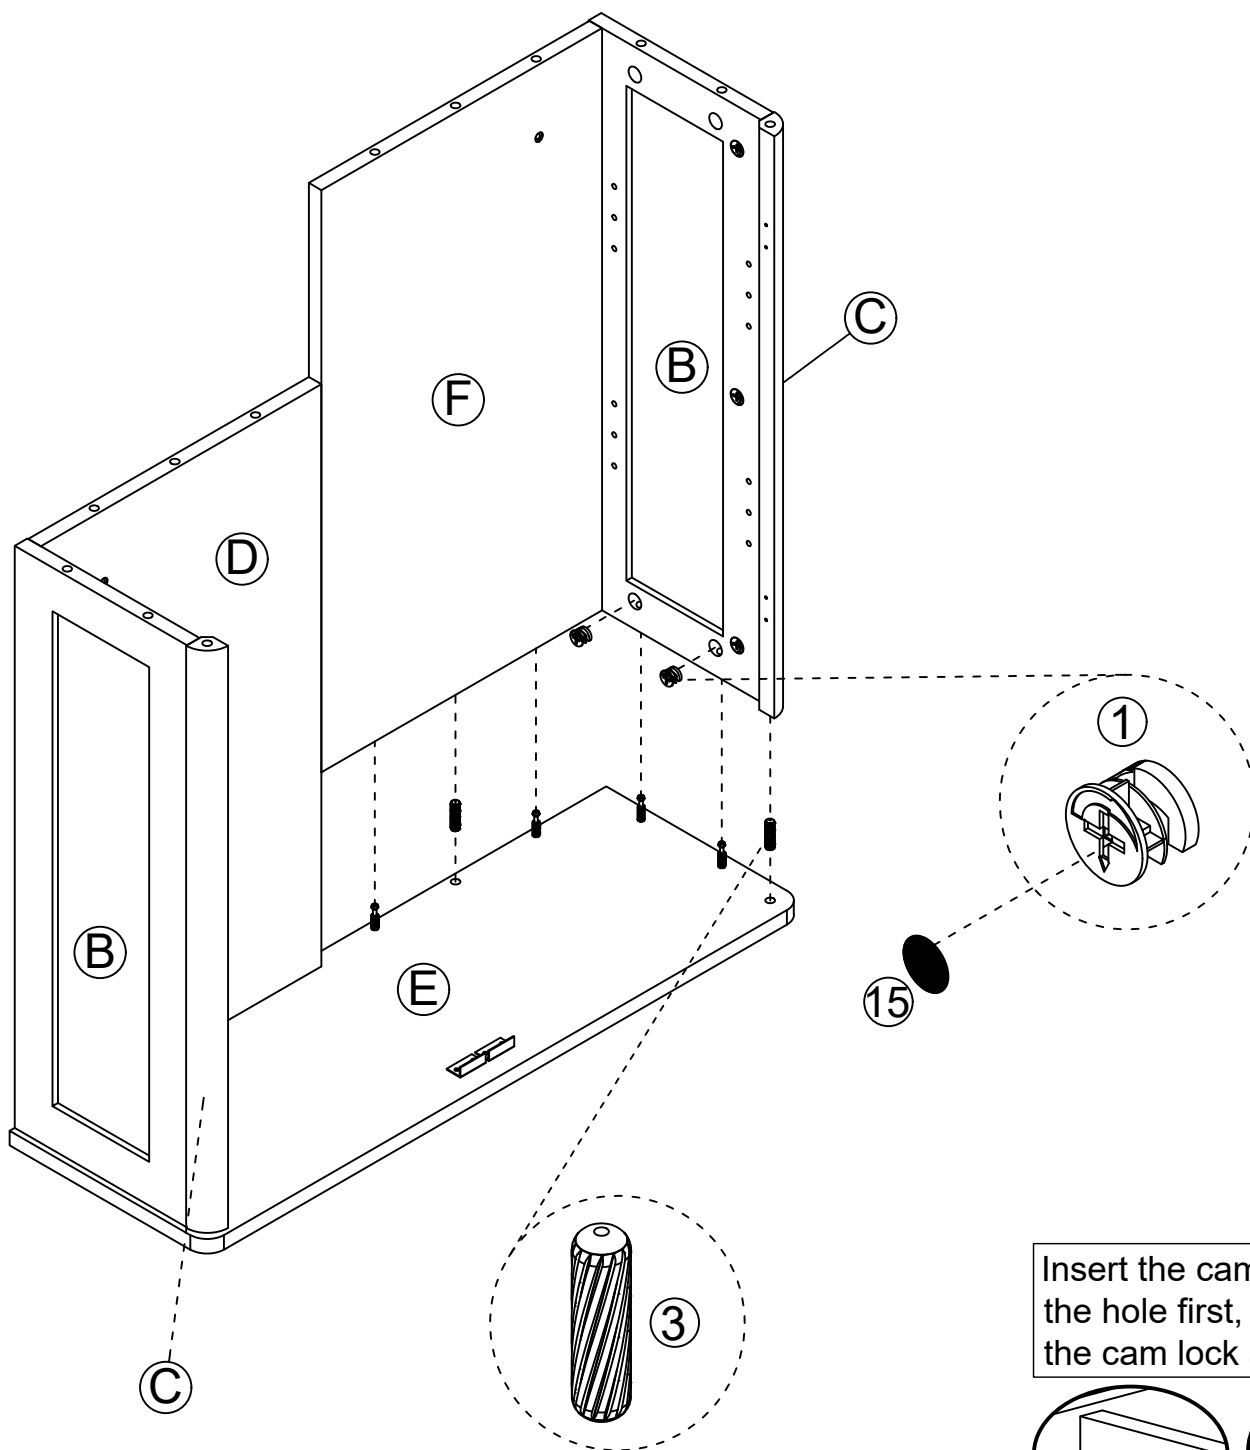
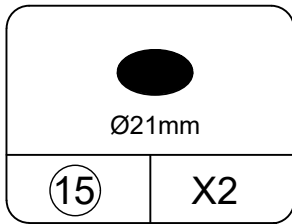
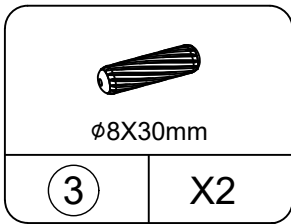
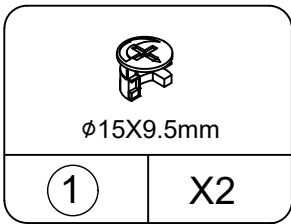
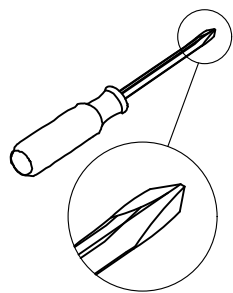


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

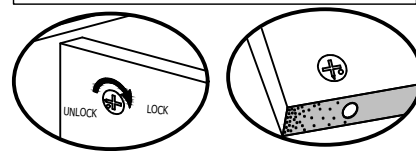



Proper orientation of CAM LOCK

STEP8

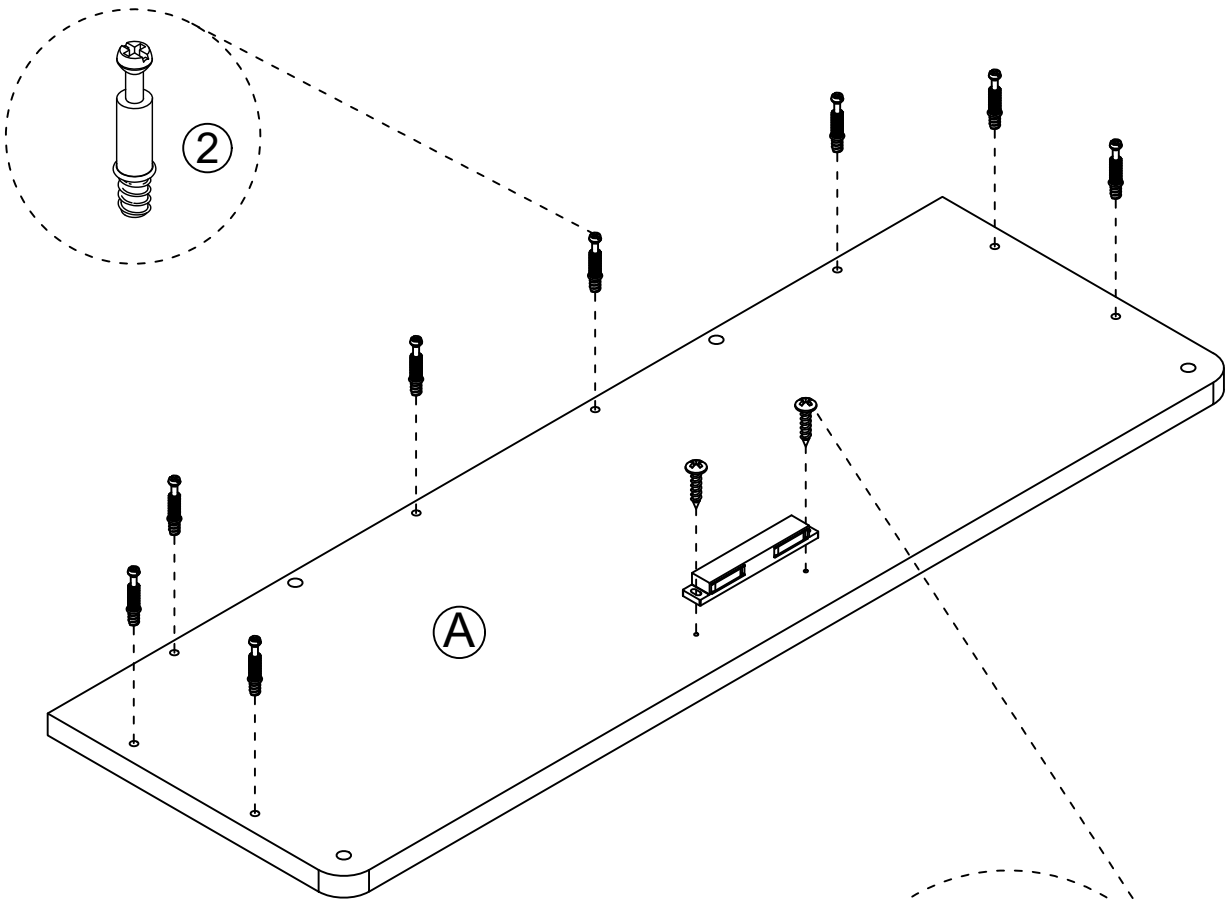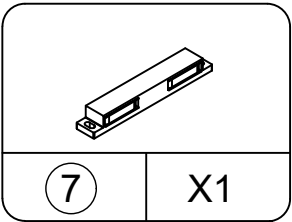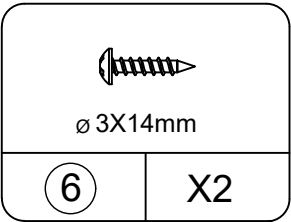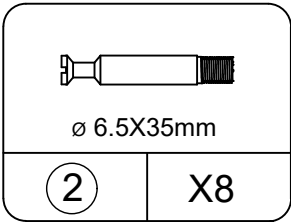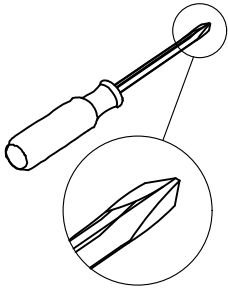


NOTE

After fixing the magnets on the top of the cabinet, if you feel that the suction force between the magnet piece and the door is not enough.
Pls reach out to us SERVICENOW.GDC@GMAIL.COM for guidance until assembly is complete.

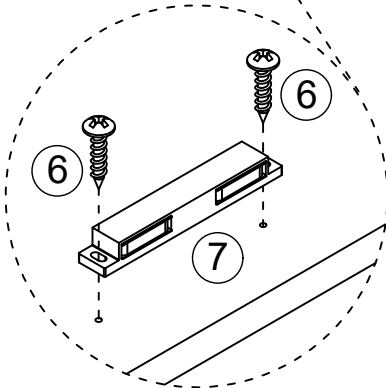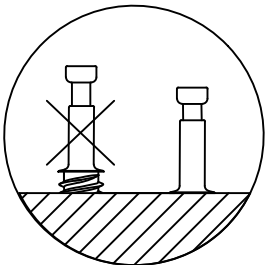


STEP9

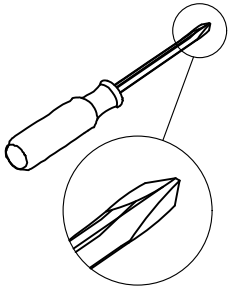


 ø15X9.5mm	
1	X12

 ø8X30mm	
3	X4

 Ø21mm	
15	X4


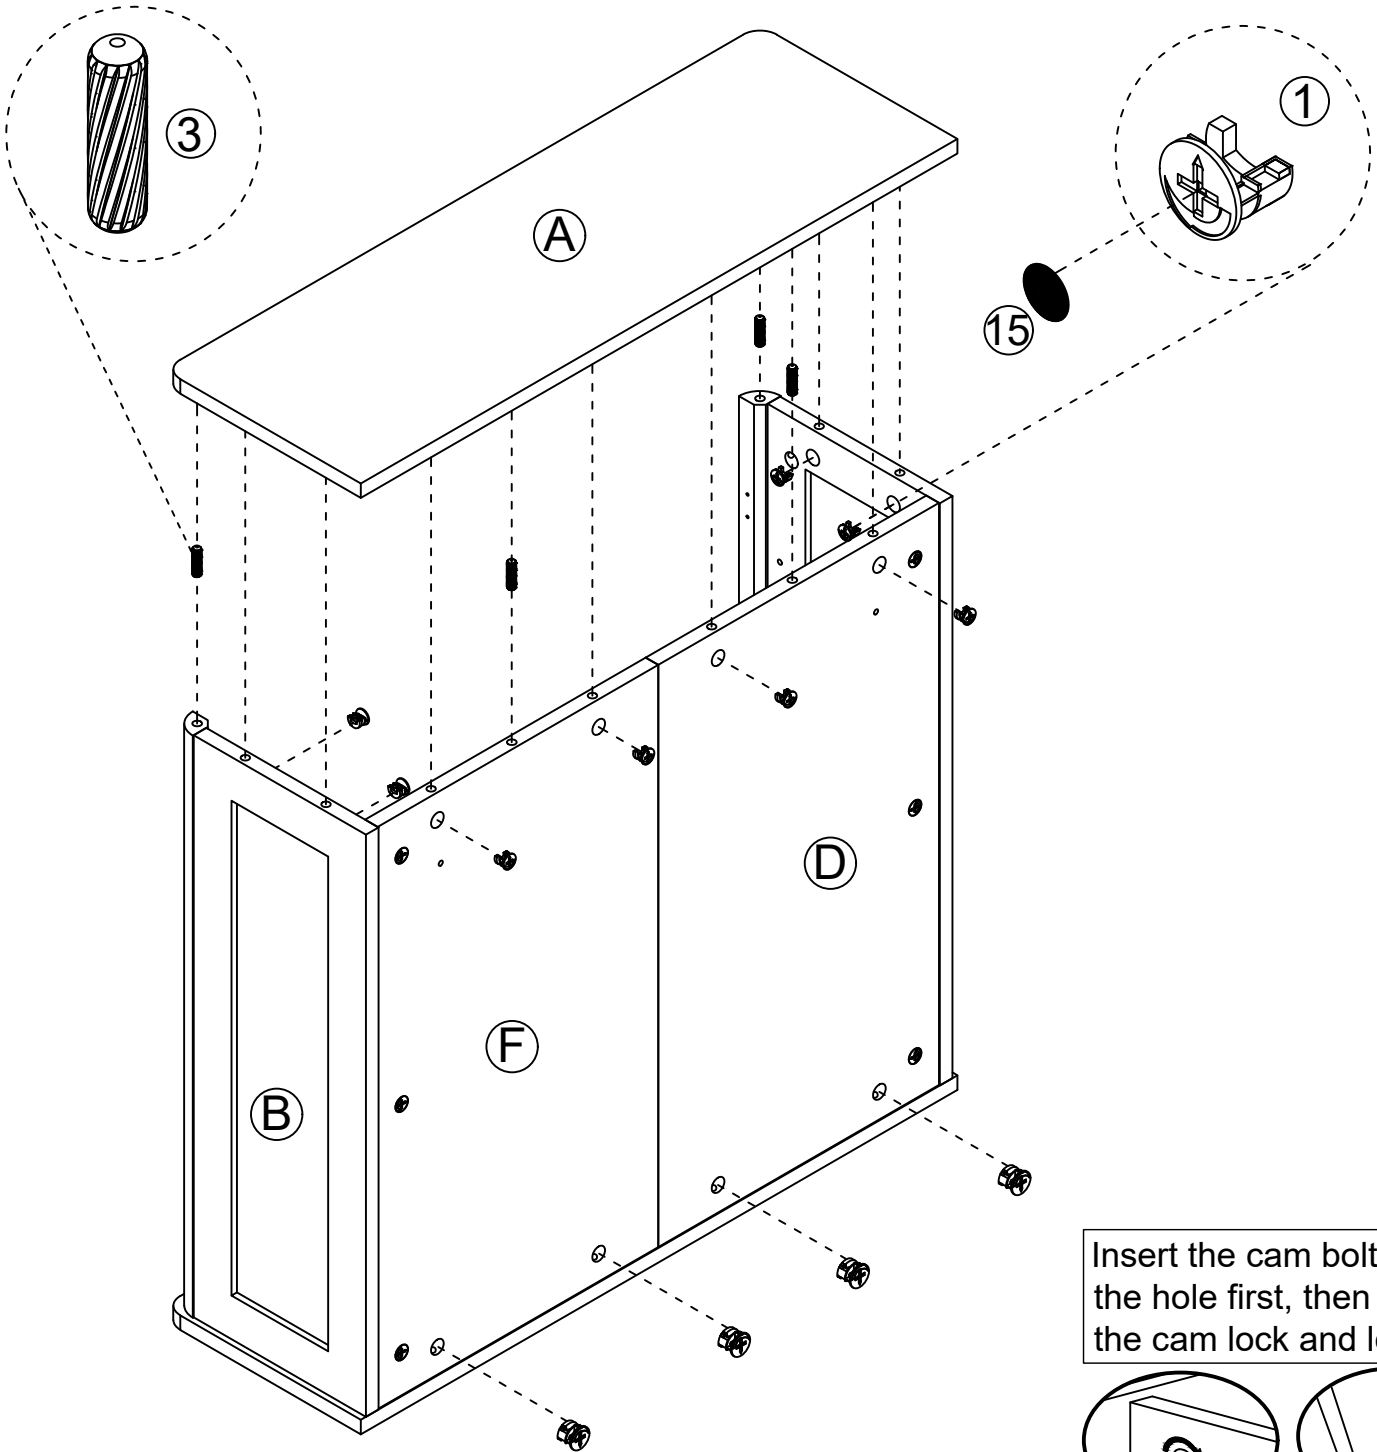


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

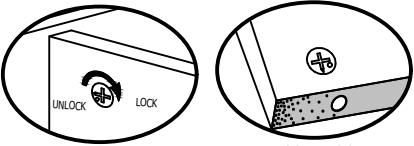



Proper orientation of CAM LOCK

STEP10

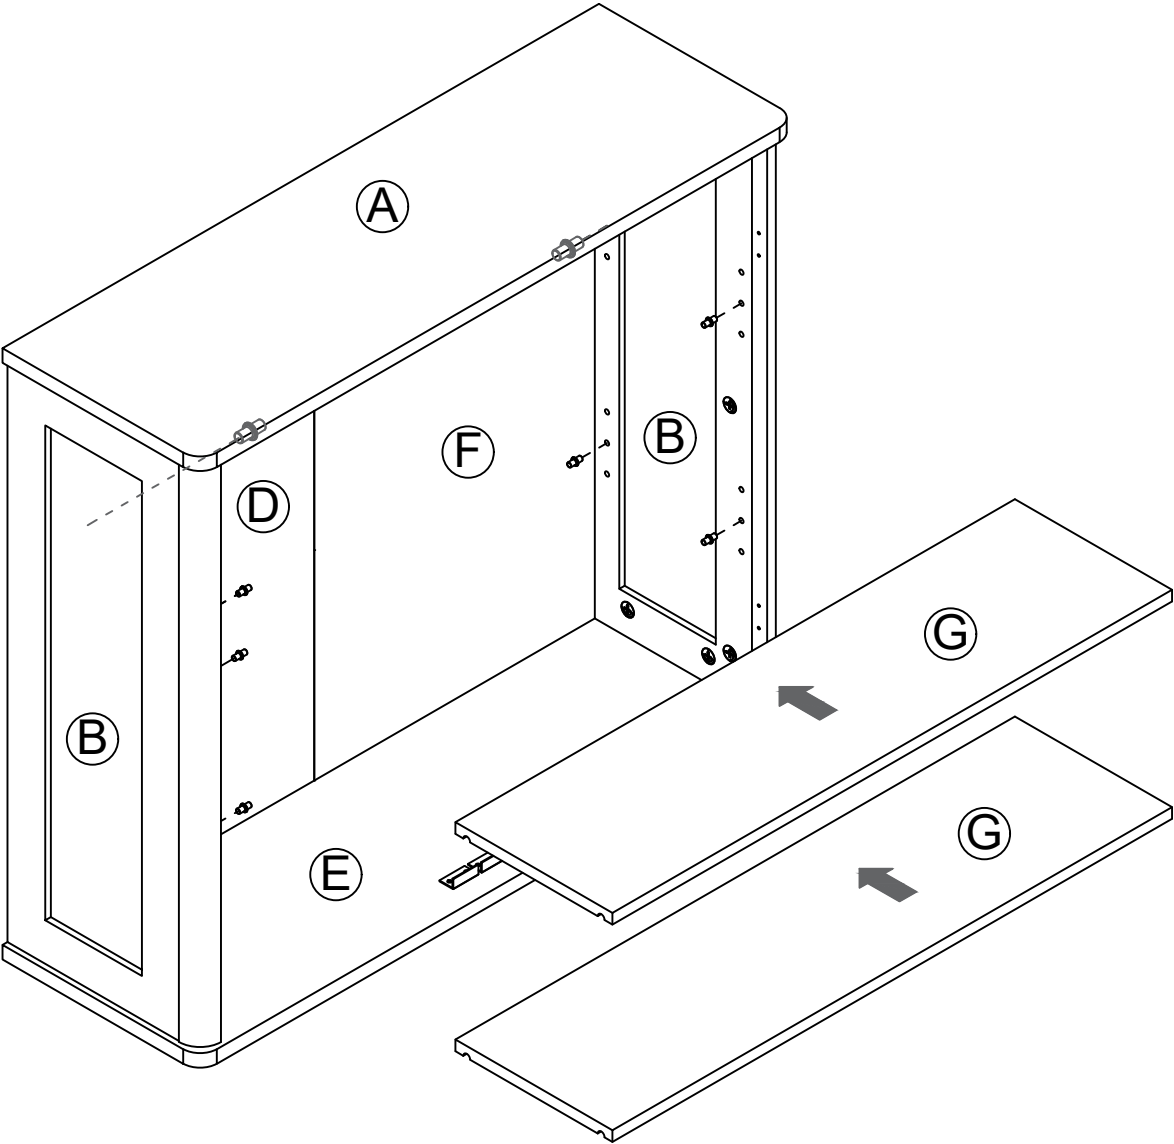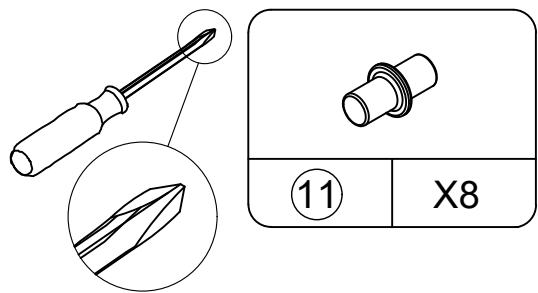



STEP11

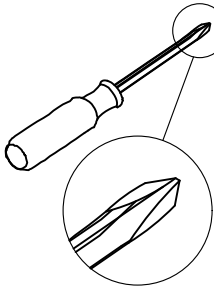


 ø3X12mm	
4	X12


 ø3.5X14mm	
5	X2

	
8	X2


	
12	X4

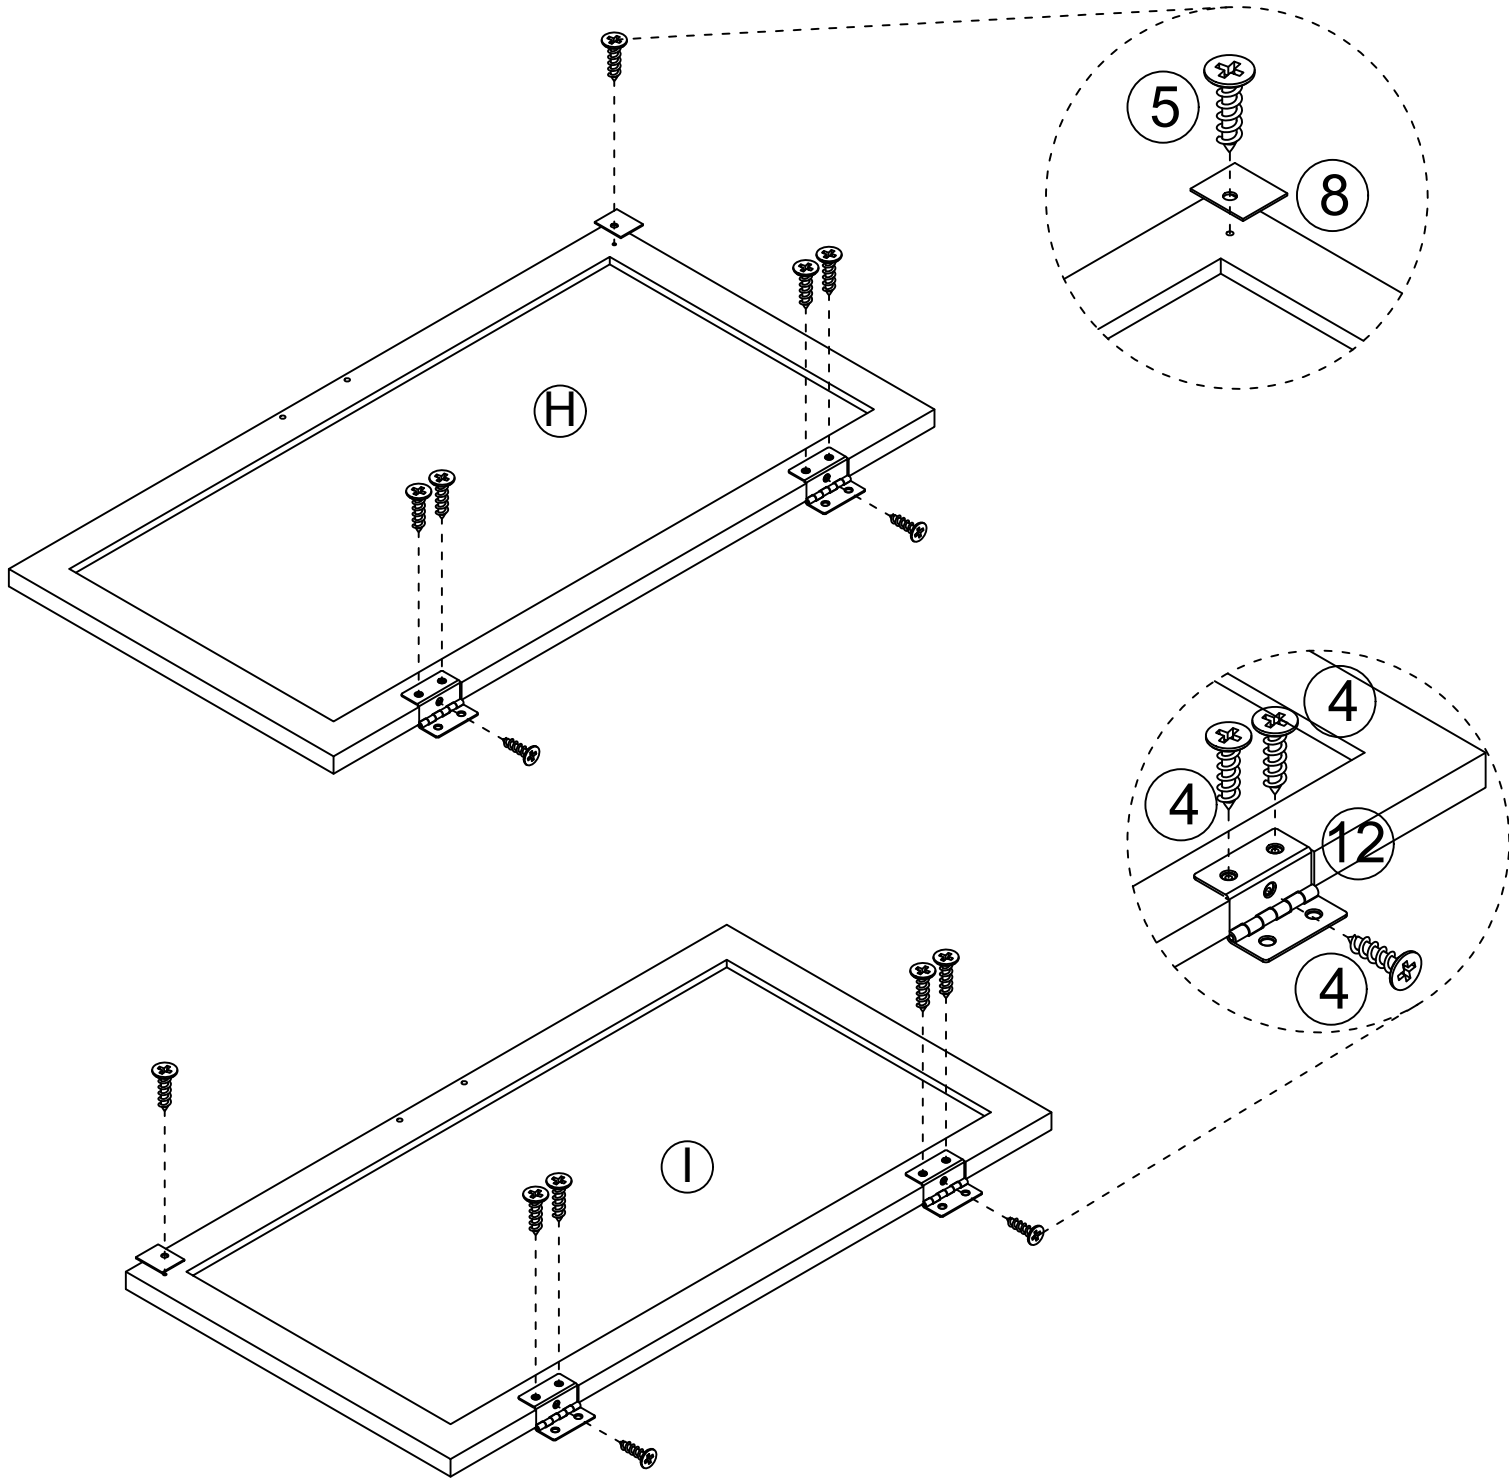

STEP12

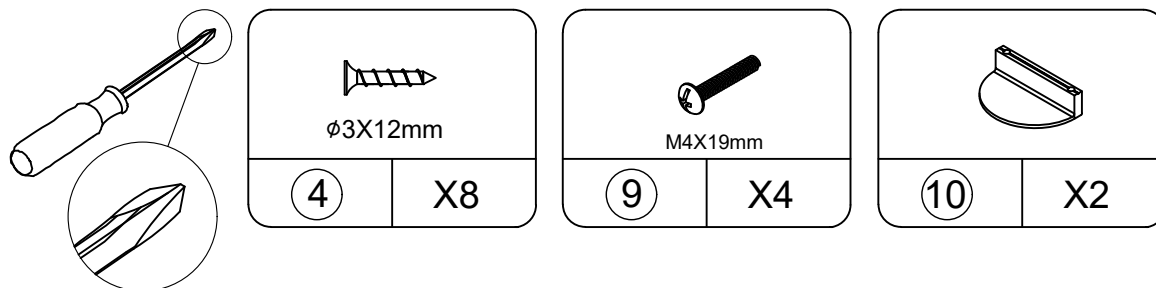

When installing the handle, you can choose gold or black according to your own preference.

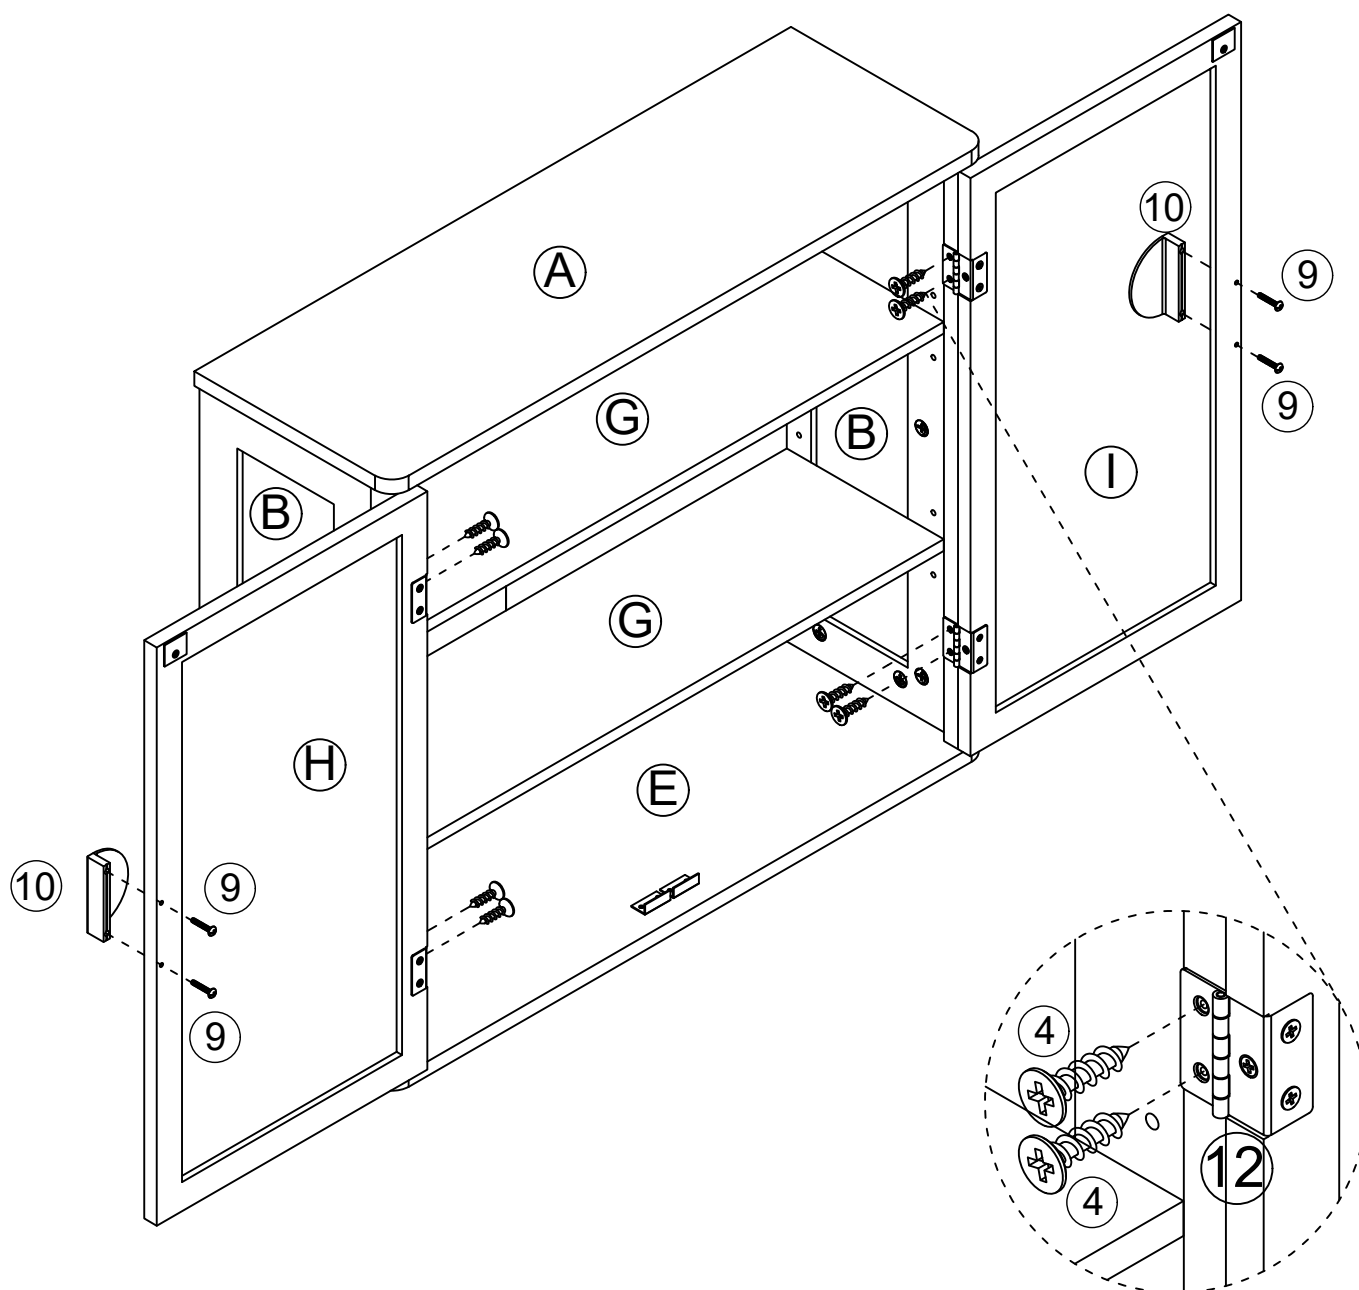

STEP13

