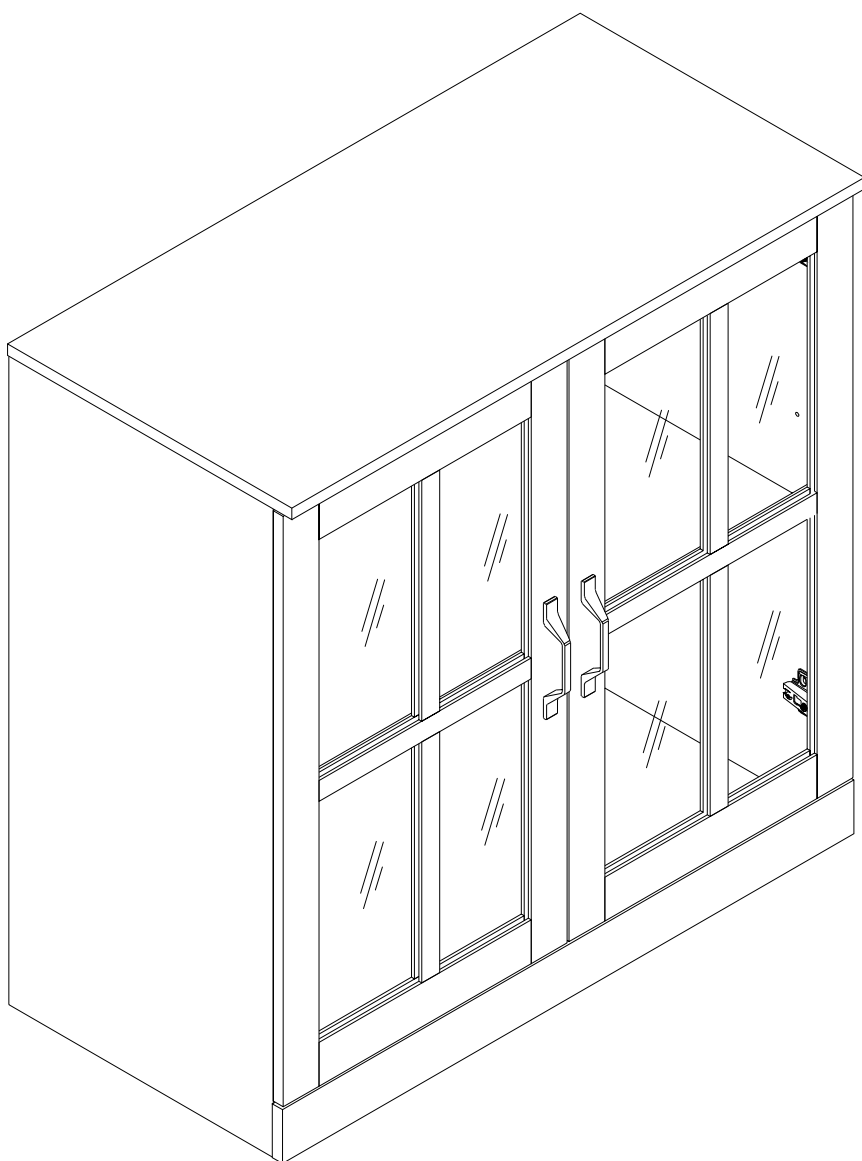




STORAGE CABINET

User Manual

INTRODUCTION

Thank you for choosing the Storage Cabinet. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact us by email with your order number and details.










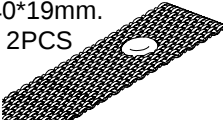
PACKAGE CONTENTS


- ☐ 1 x Storage Cabinet
- ☐ 1 x Pack of Accessories
- ☐ 1 x User Manual

PRODUCT CARE

- ☐ Please follow the instruction to assemble this item correctly.
- ☐ Don't make the screws be too loose or too tight.
- ☐ Please put the screws into the holes' position just as shown in the arrows of the image, and then clockwise rotate 90° or 180°
- ☐ More product parts, it is recommended that two people install
- ☐ The fittings pack contains small accessories that should be kept away from small children.

HARDWARE SUPPLIED

A. 6.5x36mm  24+2PCS	B. 15x9.8mm  24+2PCS	C. Ø6x30mm  16+2PCS	D. M3.5x14mm  24+2PCS	E. Ø13.8*18*4mm  4PCS
F.  F.1 12PCS	G. 145*19*27mm  2PCS	H. M4*16mm  4PCS	I. 12*12*2mm  2PCS	J. 140mm  1PC
K.  4PCS	L. Ø5*7*17mm  4PCS	M. Ø20mm  24+2PCS	N.1  Ø6x35mm. 2PCS	
			N.2  Ø8xM4x35mm. 2PCS	
O.1 140*19mm. 2PCS 				
O.2  Ø8xM4x16mm. 2PCS		O.3  Ø16xØ6x1mm. 4PCS		

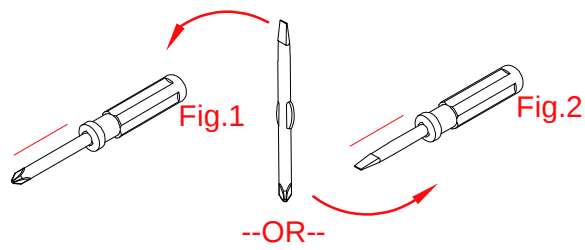


PARTS LIST

Unit: (mm)





① 800*397*14 1PC	② 786*369*14 1PC	③ 786*369*14 1PC	④ 768*350*14 1PC
⑤ 764*340*14 1PC	⑥ 768*50*14 1PC	⑦ 798*65*14 1PC	⑧ 768*65*14 1PC
⑨ 768*96*14 1PC	⑩ 778*322*3 2PCS	⑪ 714*396.5*14 2PCS	

PANEL LAYOUT

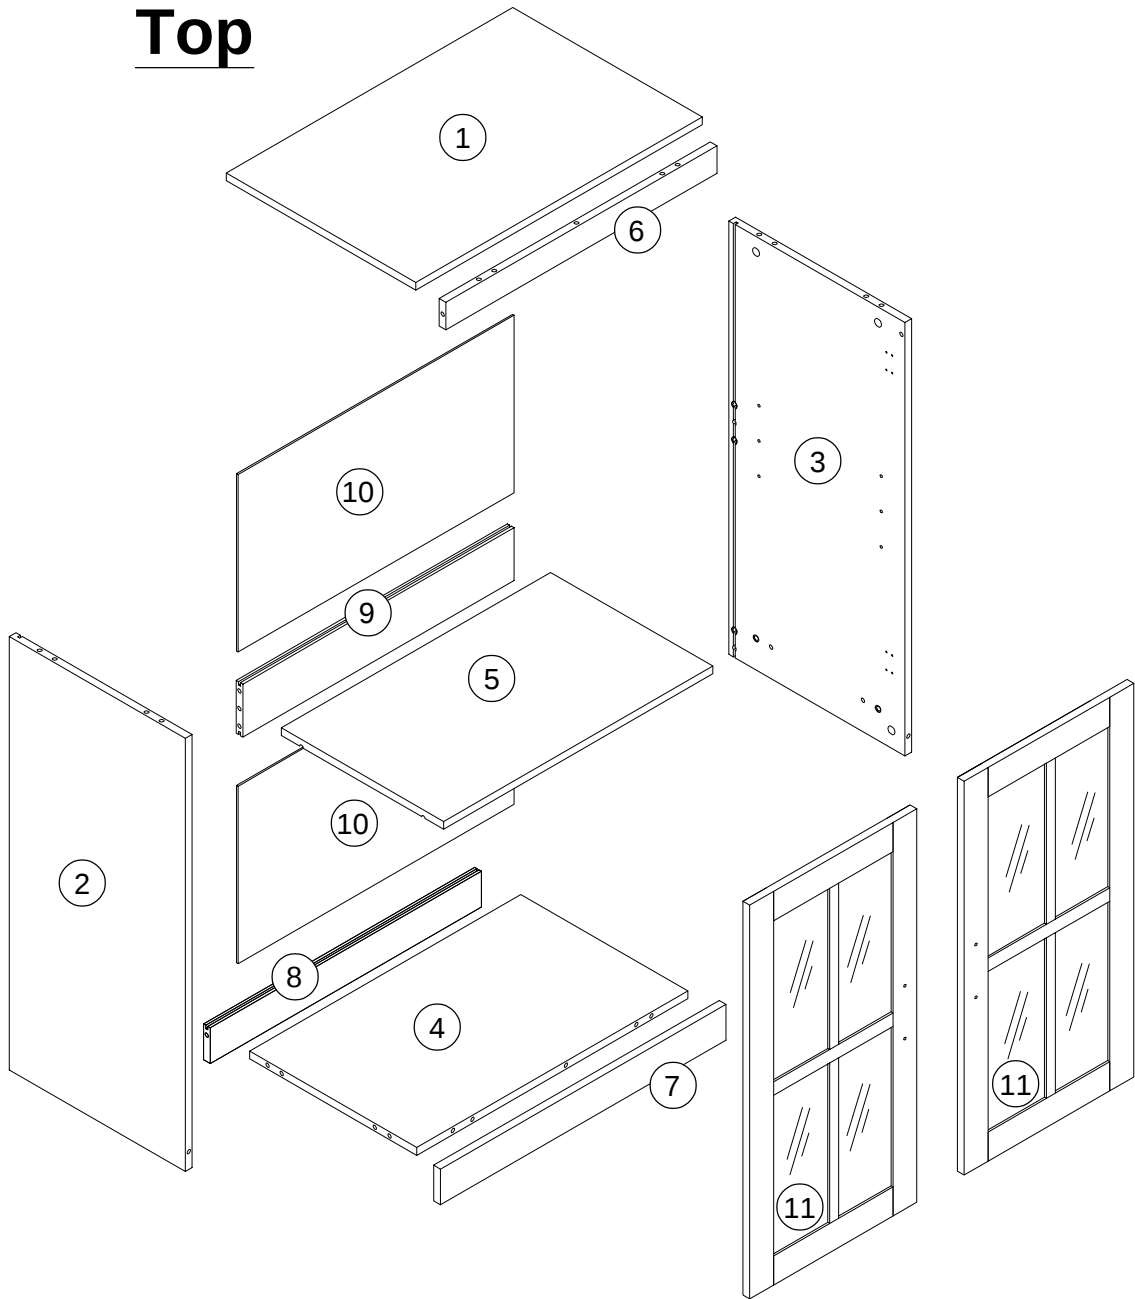Top



Bottom

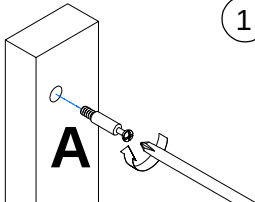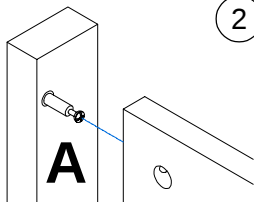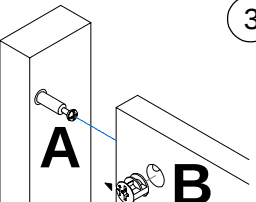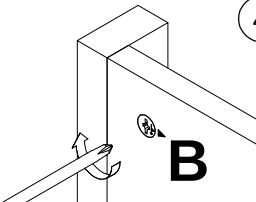HOW TO  Cam lock Cam bolt	①  A 1. Screw Cam Bolt into panel	②  A 2. Insert Cam Bolt into bolt hole of joining panel.	③  A B 3. Insert Cam Lock with arrow facing bolt.	④  B 4. Gently turn Cam Lock 180° clockwise to lock into position.
--	--	---	--	---

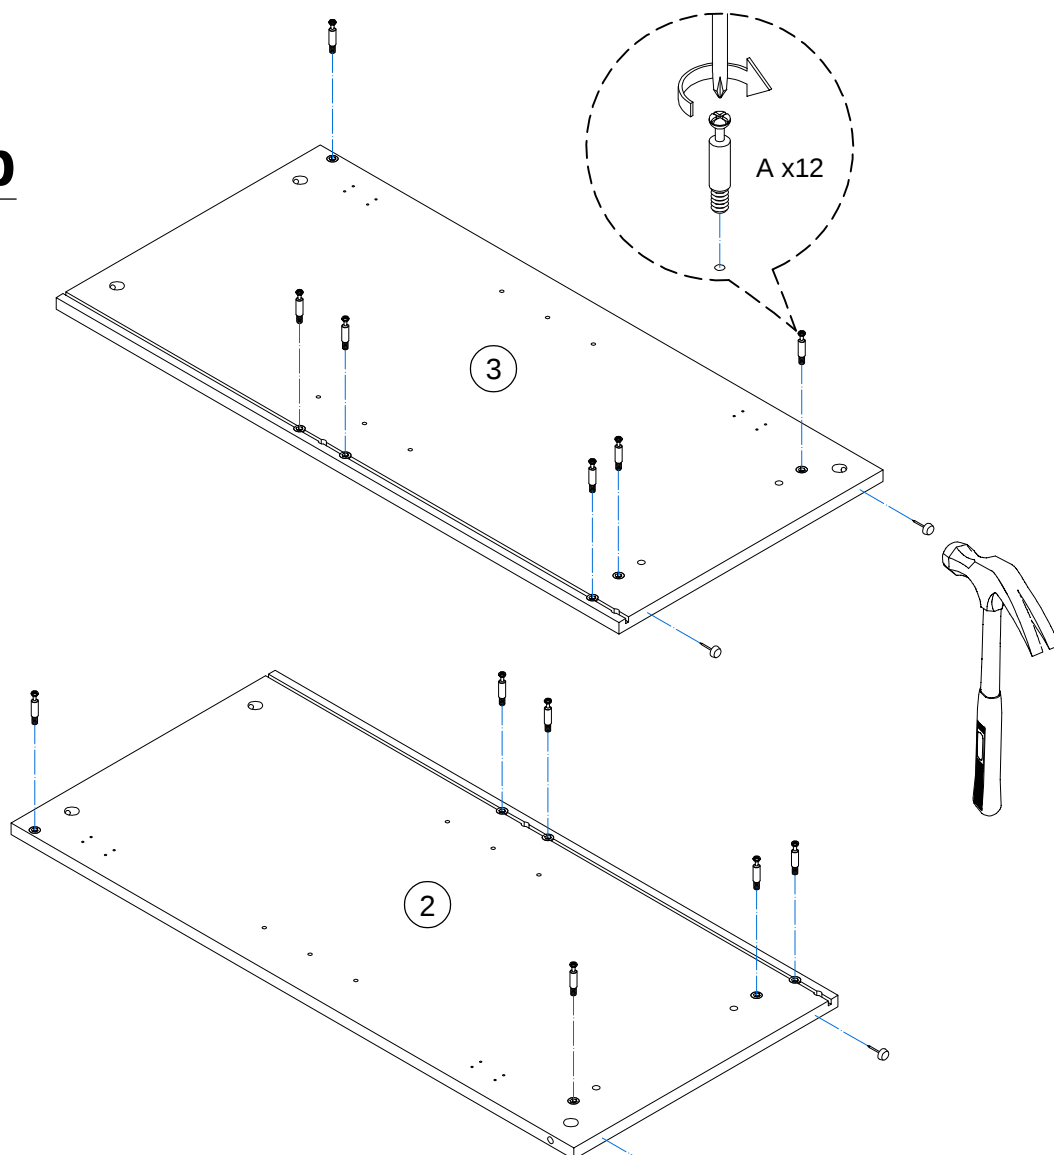
1

YOU WILL NEED





A x12

E x4

Top



Bottom

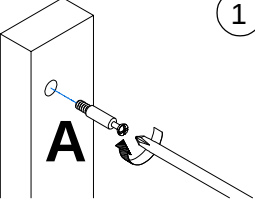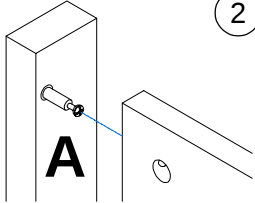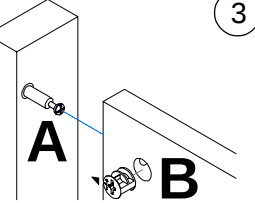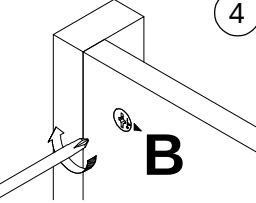HOW TO  Cam lock Cam bolt	1  A 1. Screw Cam Bolt into panel	2  A 2. Insert Cam Bolt into bolt hole of joining panel.	3  A B 3. Insert Cam Lock with arrow facing bolt.	4  B 4. Gently turn Cam Lock 180° clockwise to lock into position.
--	--	---	--	---


2

YOU WILL NEED	
B x6	C x4

Top

Bottom

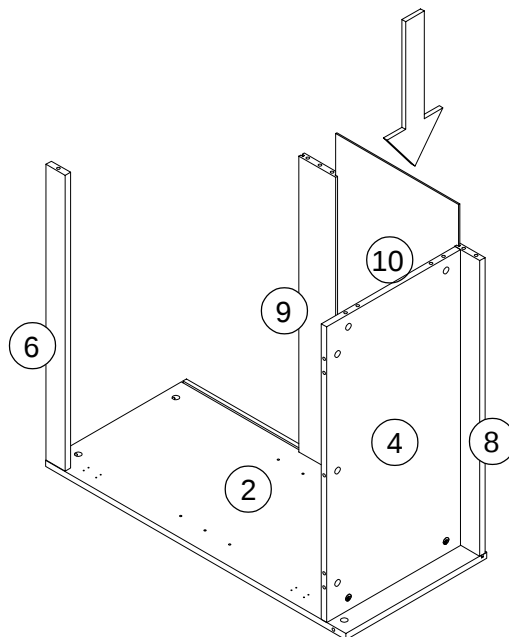
3

Top**Bottom****HOW TO**

Cam lock




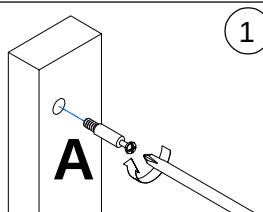Cam bolt




1

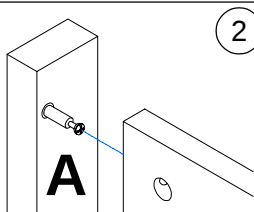1. Screw Cam Bolt into panel




2

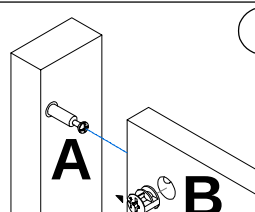2. Insert Cam Bolt into bolt hole of joining panel.



3

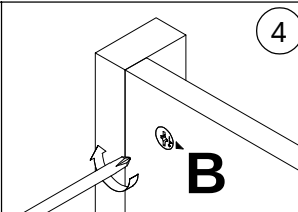3. Insert Cam Lock with arrow facing bolt.



4


4. Gently turn Cam Lock 180° clockwise to lock into position.





4

YOU WILL NEED

Bx6

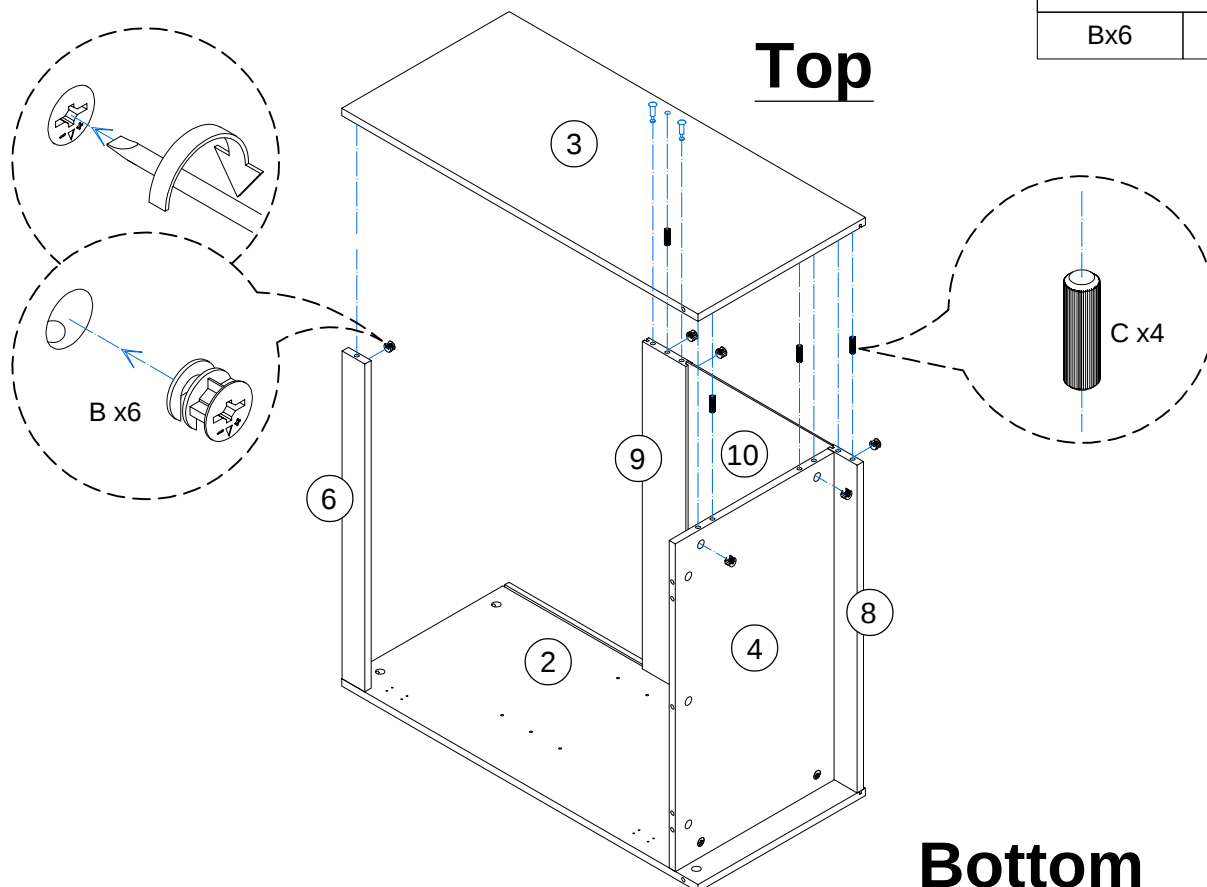C x4


Top**Bottom**

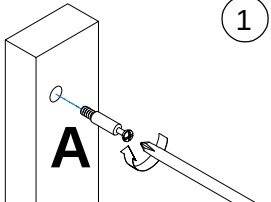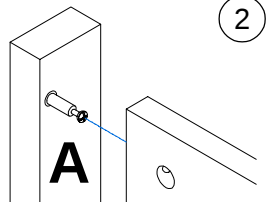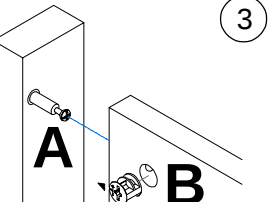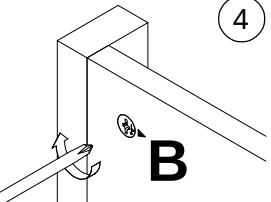HOW TO  Cam lock Cam bolt	1  A 1. Screw Cam Bolt into panel	2  A 2. Insert Cam Bolt into bolt hole of joining panel.	3  A B 3. Insert Cam Lock with arrow facing bolt.	4  B 4. Gently turn Cam Lock 180° clockwise to lock into position.
--	--	---	--	---

5

YOU WILL NEED

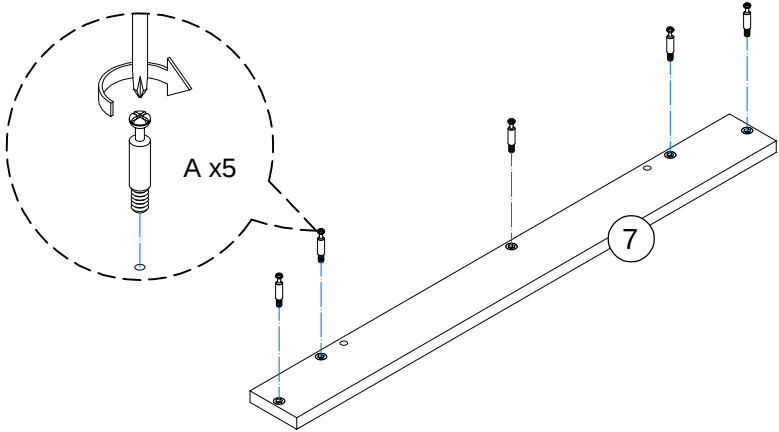A x5




6





YOU WILL NEED

B x5 C x2

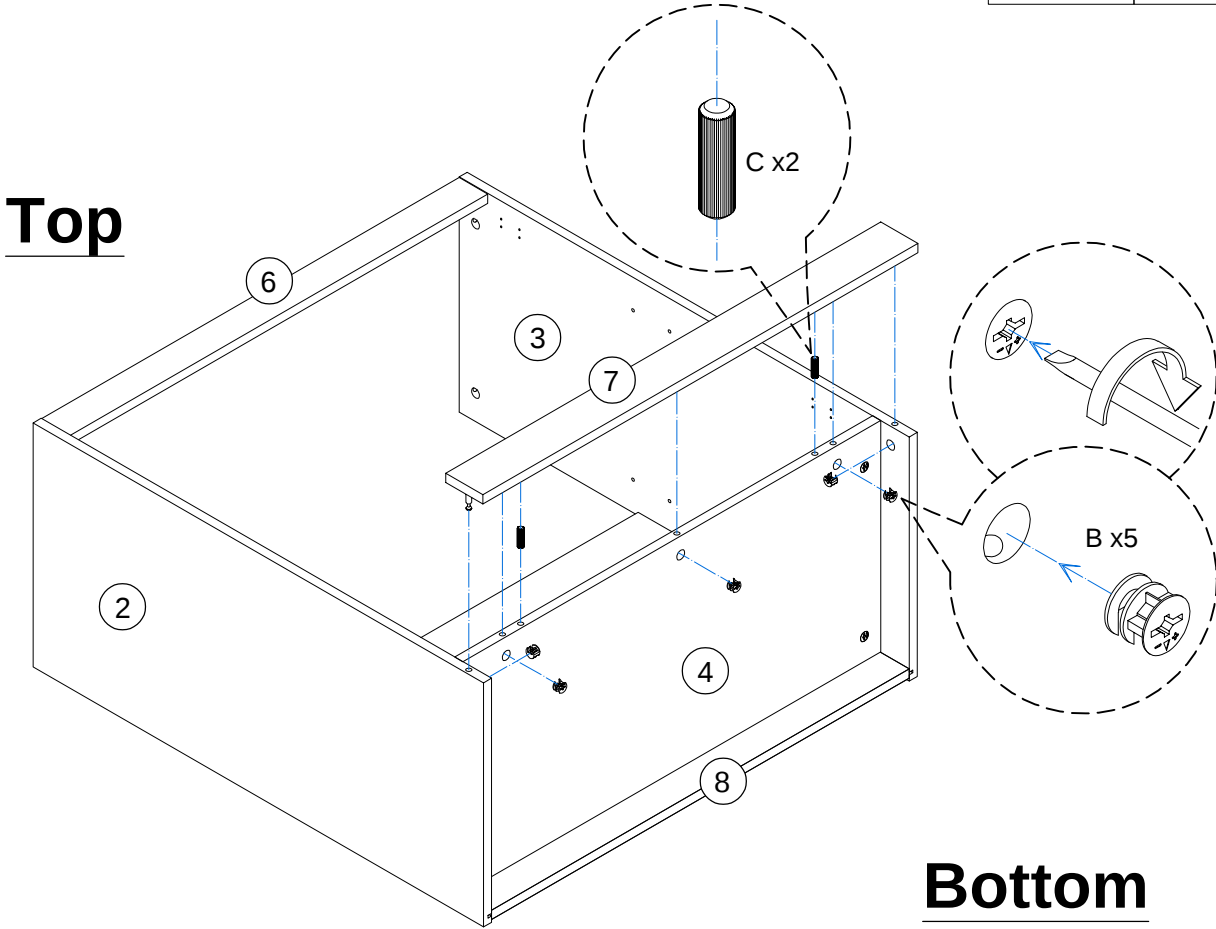
Top



Bottom

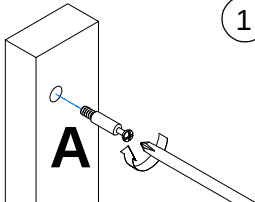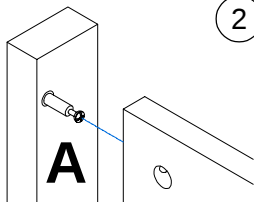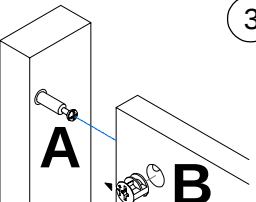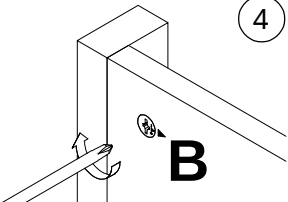HOW TO  Cam lock Cam bolt	①  A 1. Screw Cam Bolt into panel	②  A 2. Insert Cam Bolt into bolt hole of joining panel.	③  A B 3. Insert Cam Lock with arrow facing bolt.	④  B 4. Gently turn Cam Lock 180° clockwise to lock into position.
--	--	---	--	---

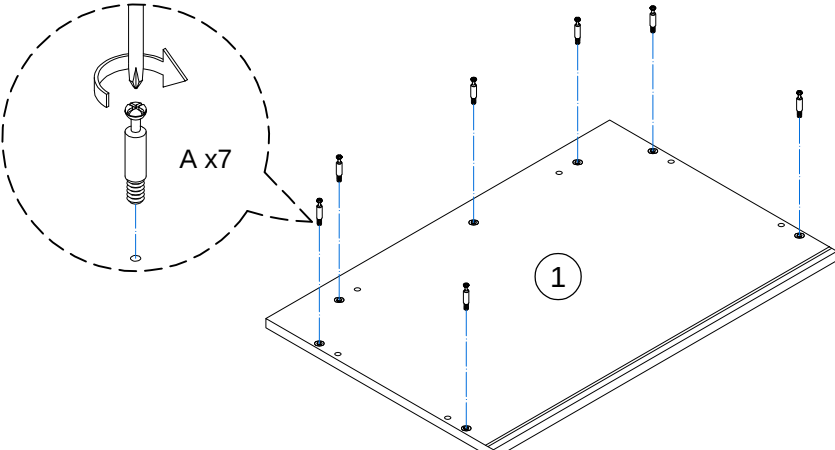7




①

YOU WILL NEED

A x7

8

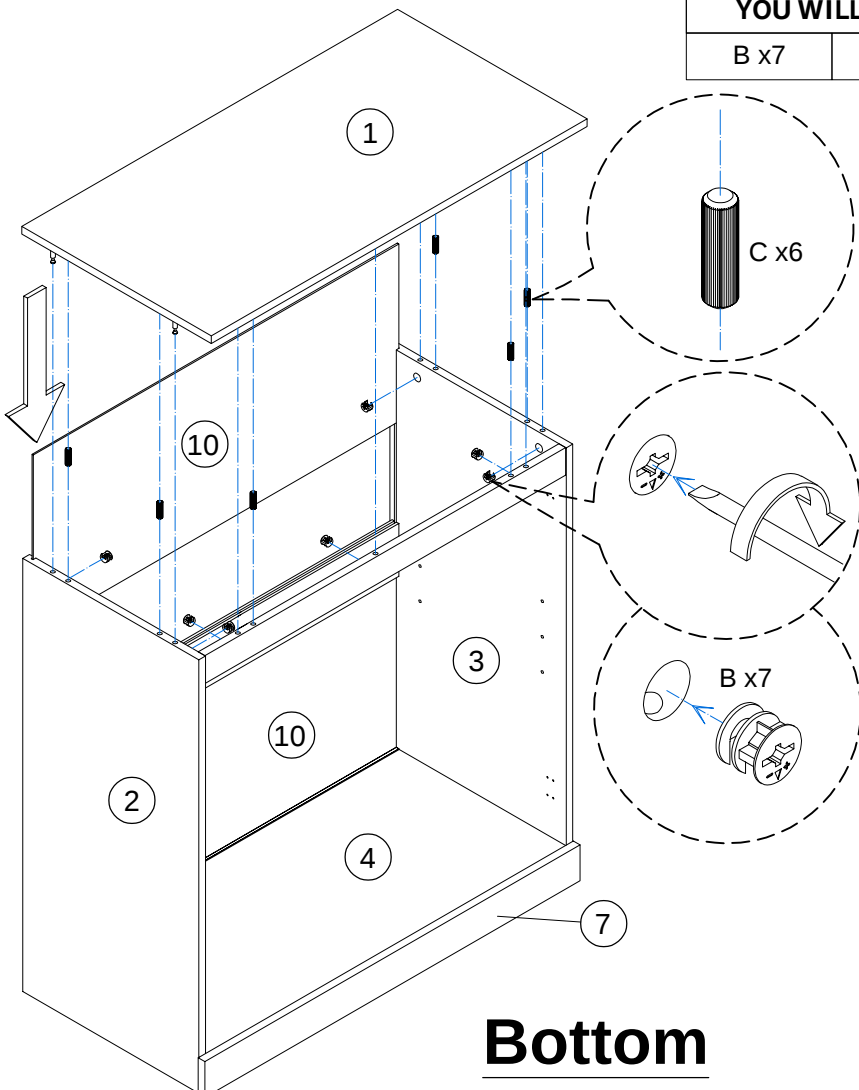Top



①

Bottom

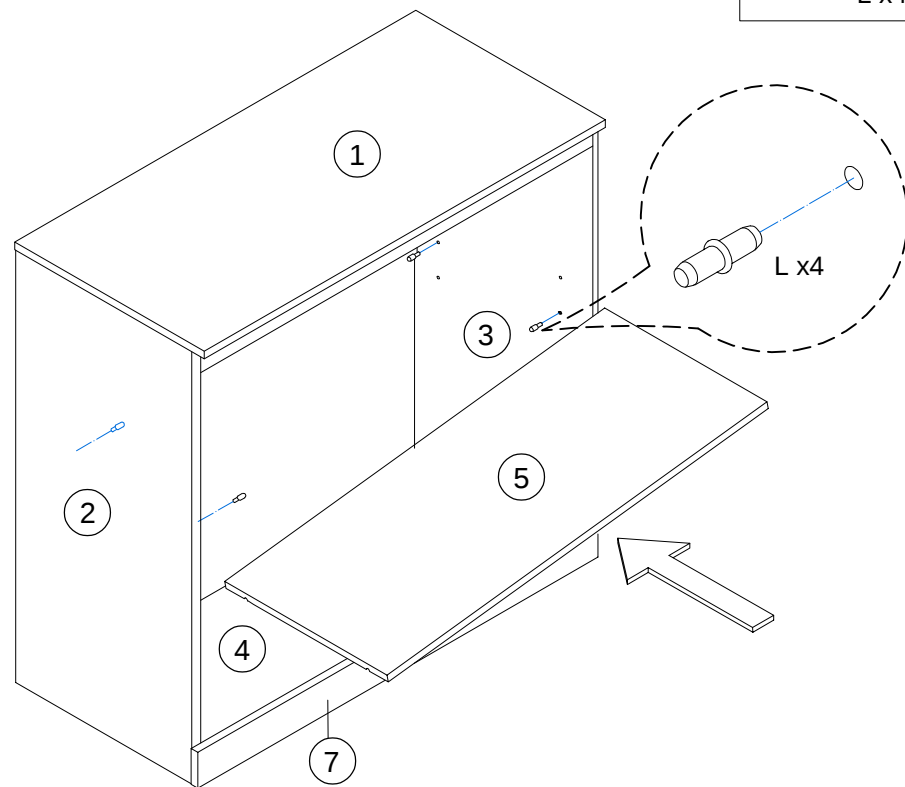
YOU WILL NEED

B x7
C x6

9

YOU WILL NEED

L x4




10

YOU WILL NEED

D x8

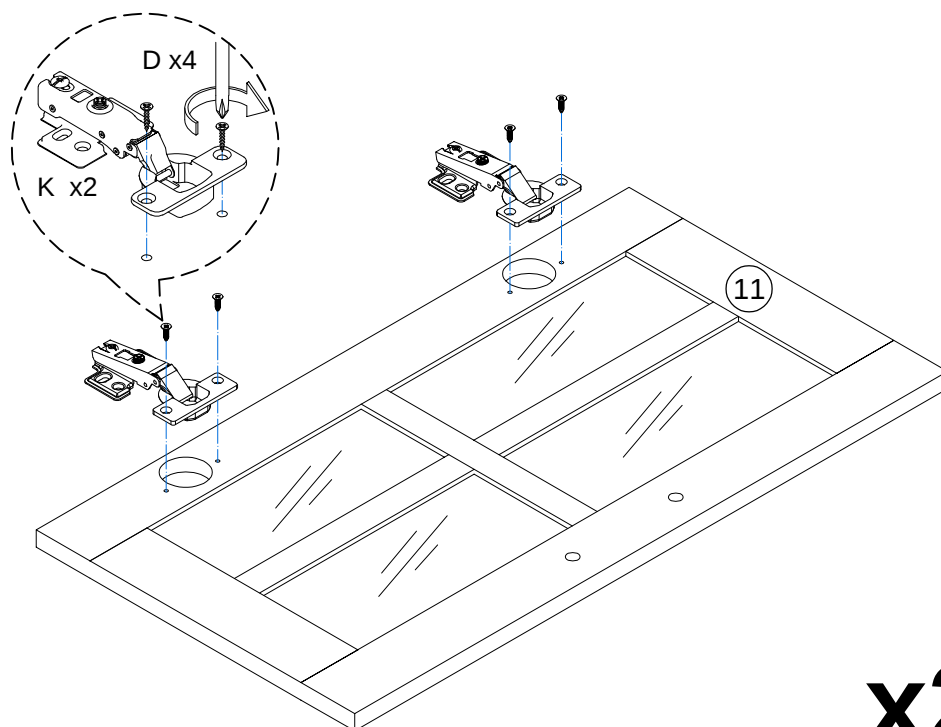K x4


**x2**

11

YOU WILL NEED

D x8 I x1

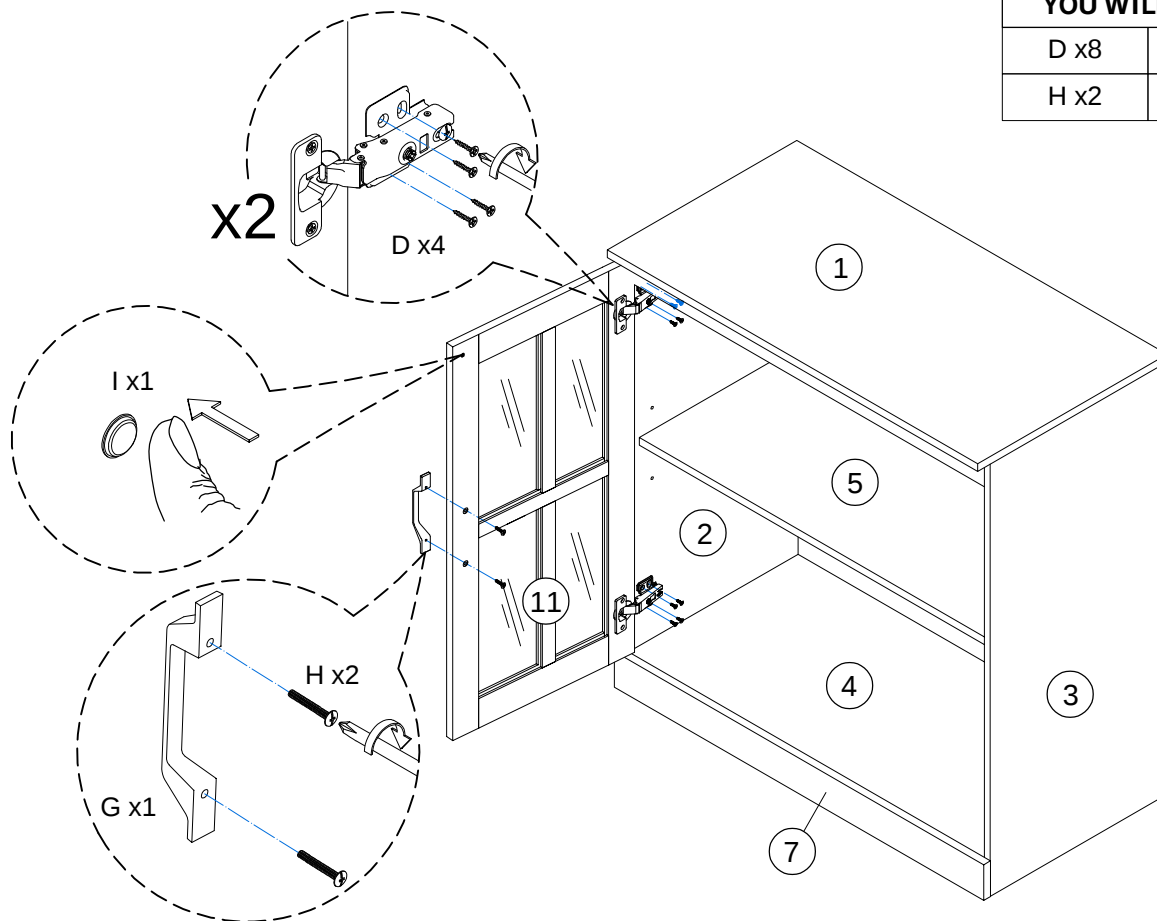H x2 G x1




12

YOU WILL NEED


D x8 I x1

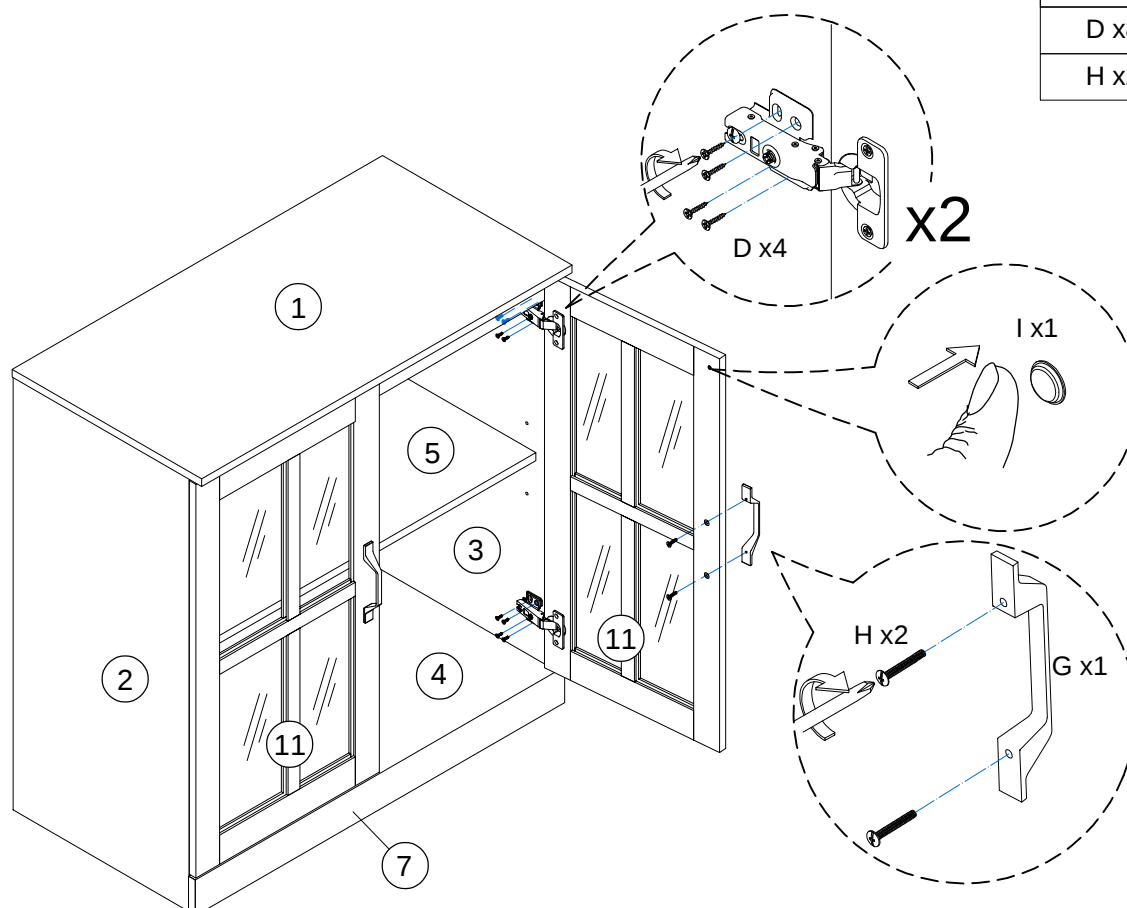H x2 G x1




YOU WILL NEED

O.1 x2	O.2 x2	O.3 x2
F.1 x12	F.2 x12	

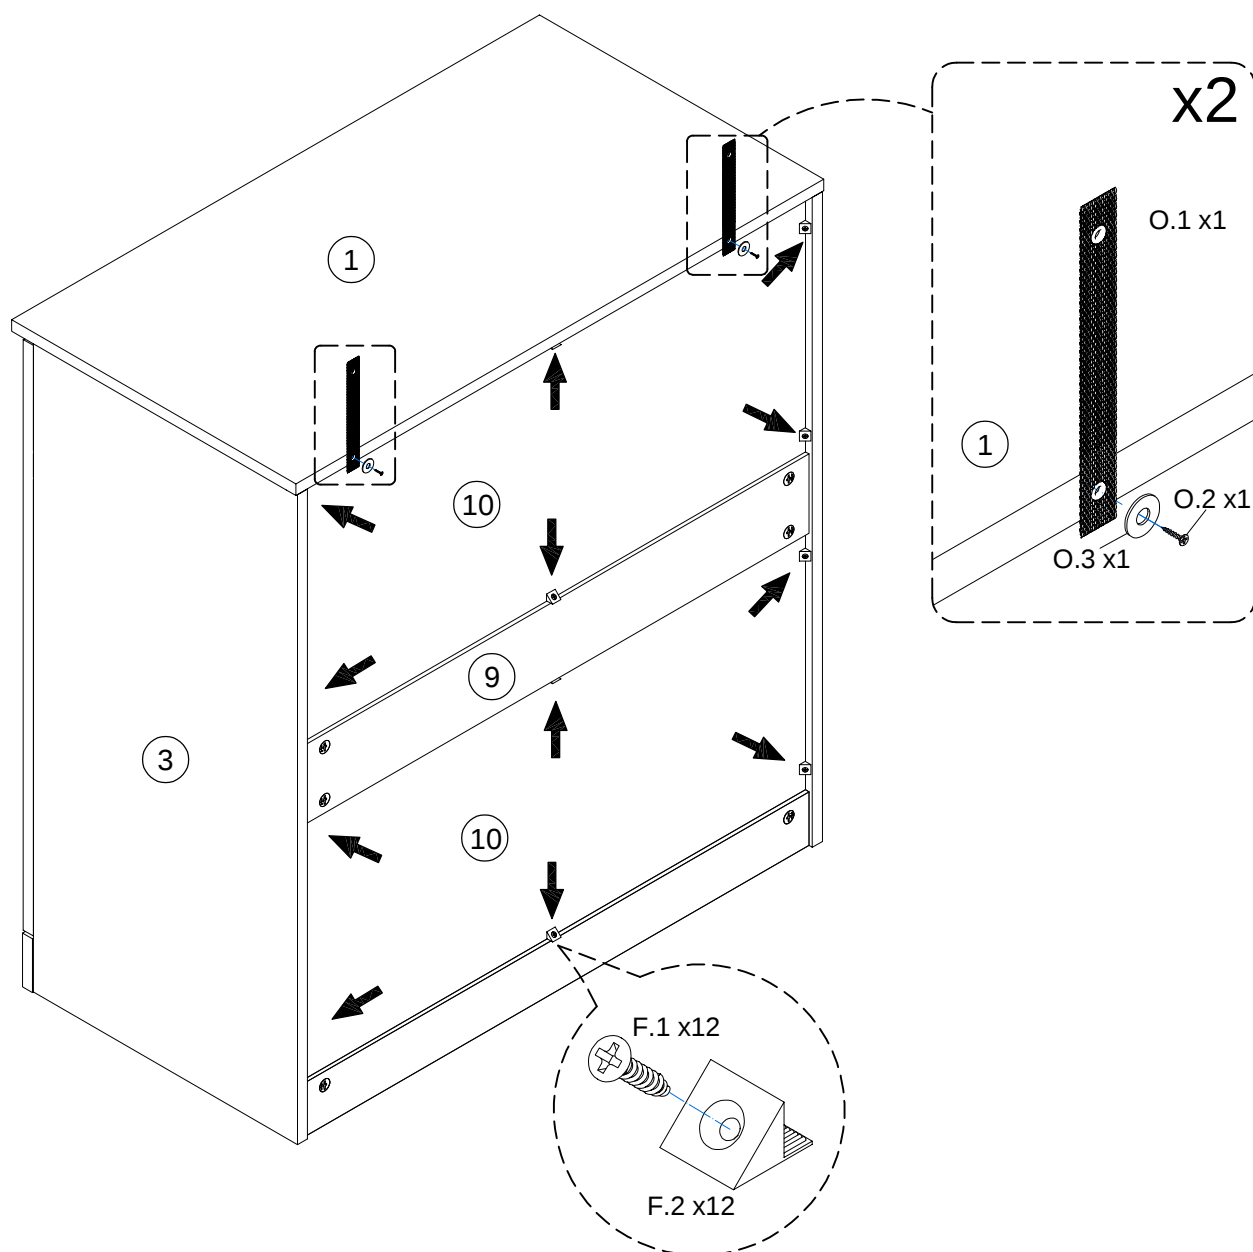

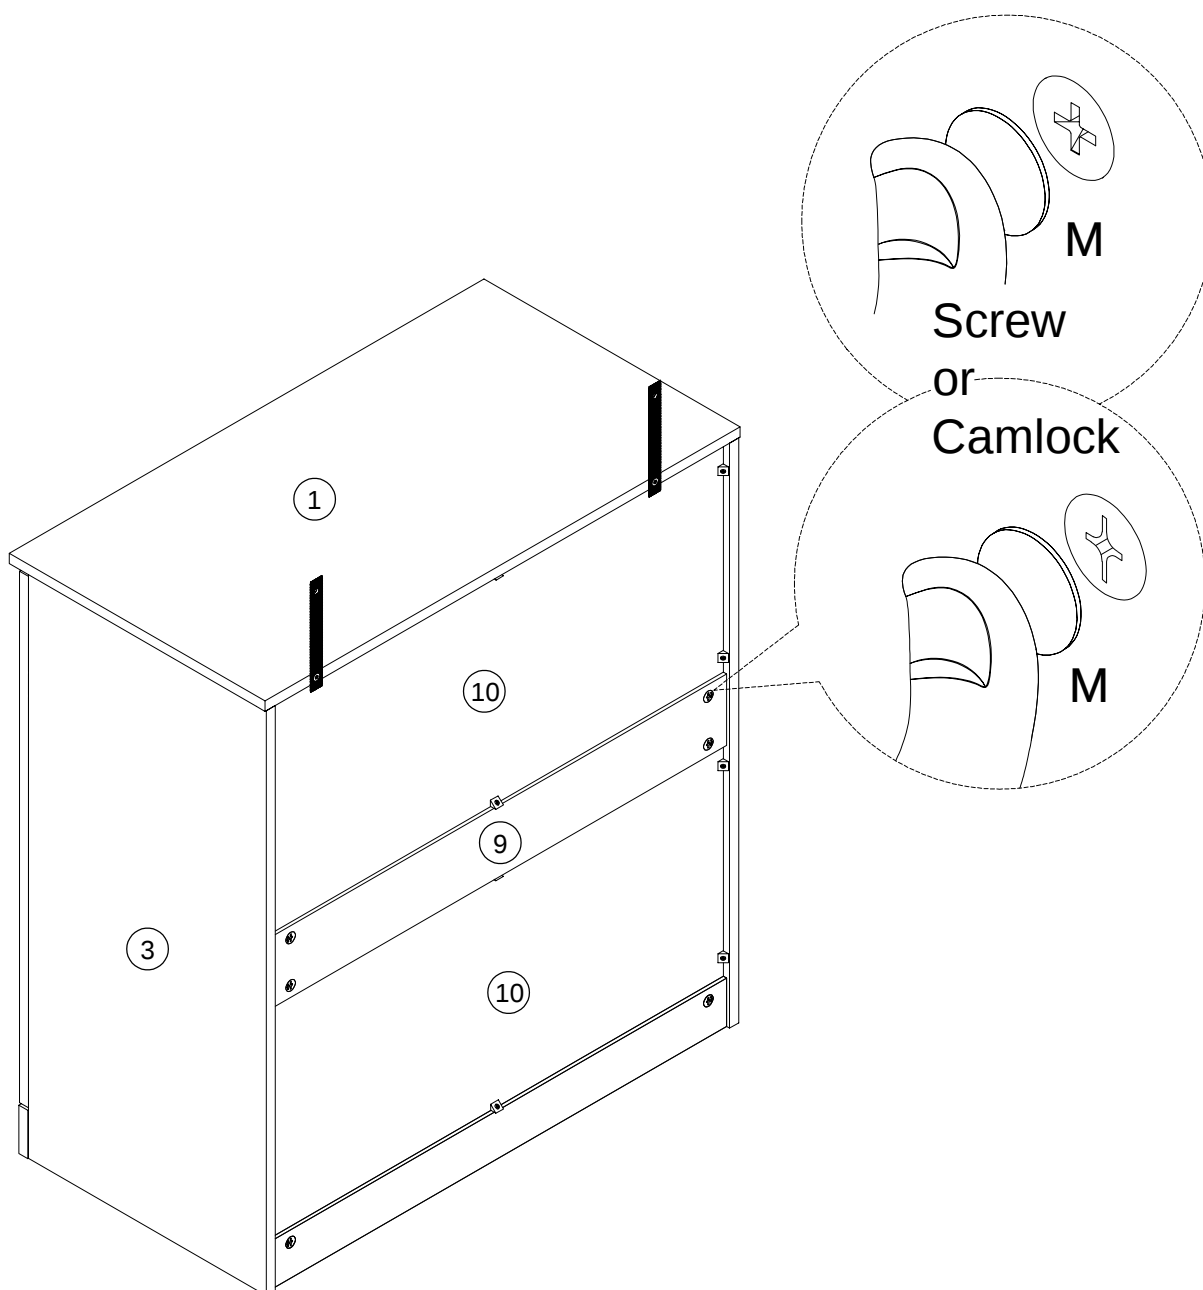**Add (M) fittings to all exposed holes (Screw or Camlock)
on the front of the product**




YOU WILL NEED

O.3 x2

N.1 x2

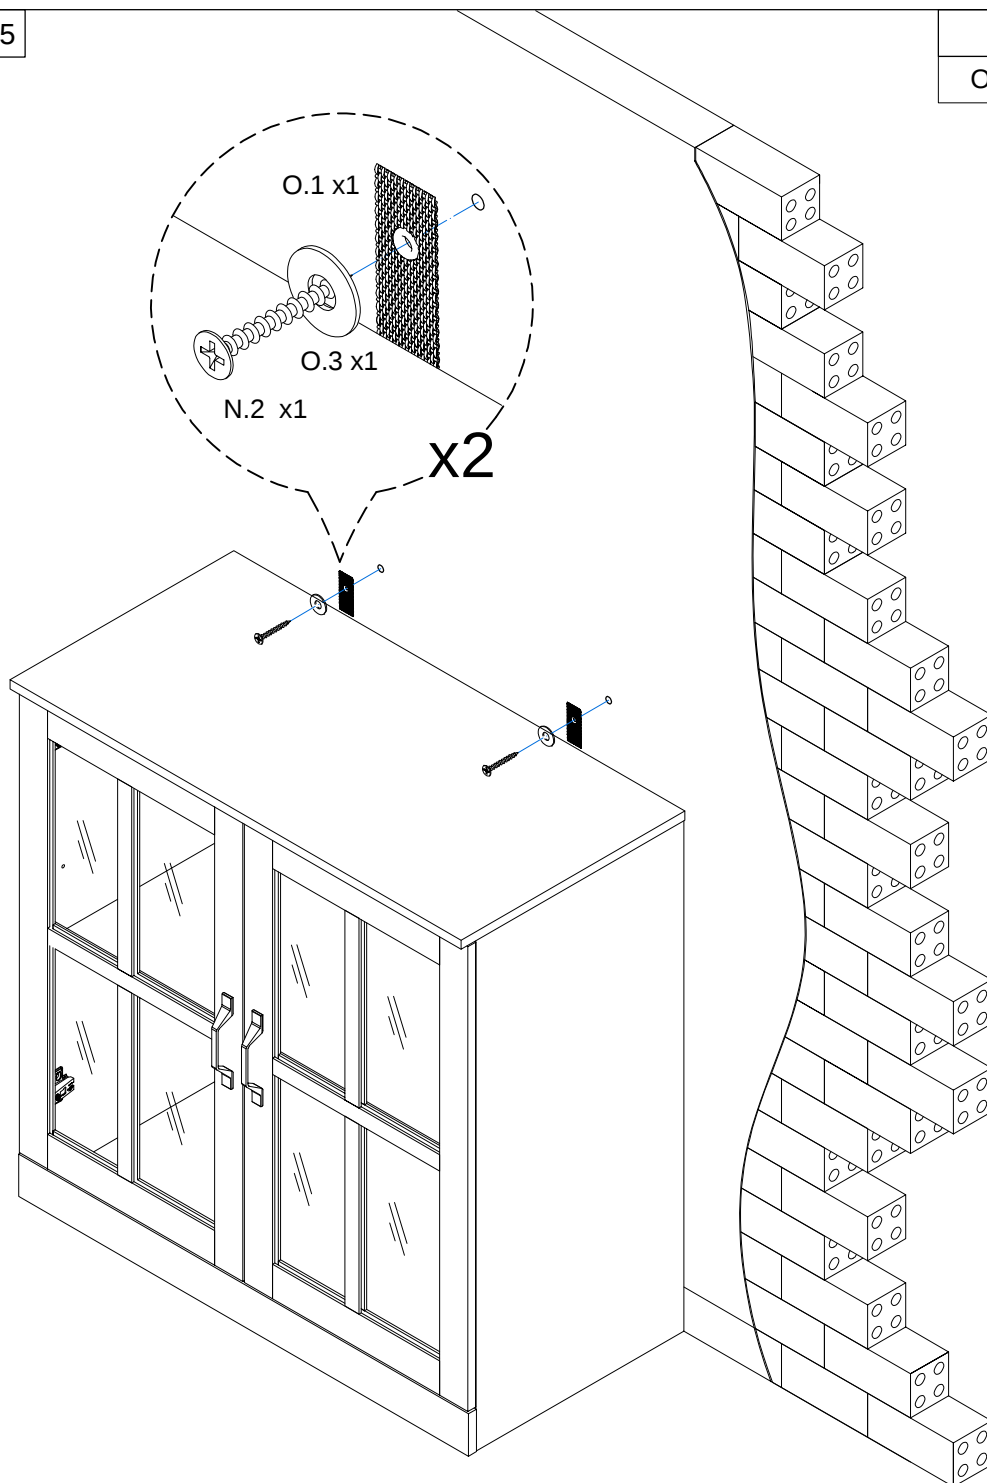N.2 x2



WALL

Mark the
hole drilling
location

I x2

WALL

Drill a hole

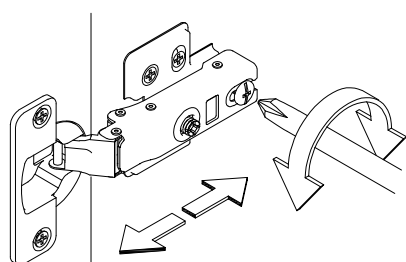
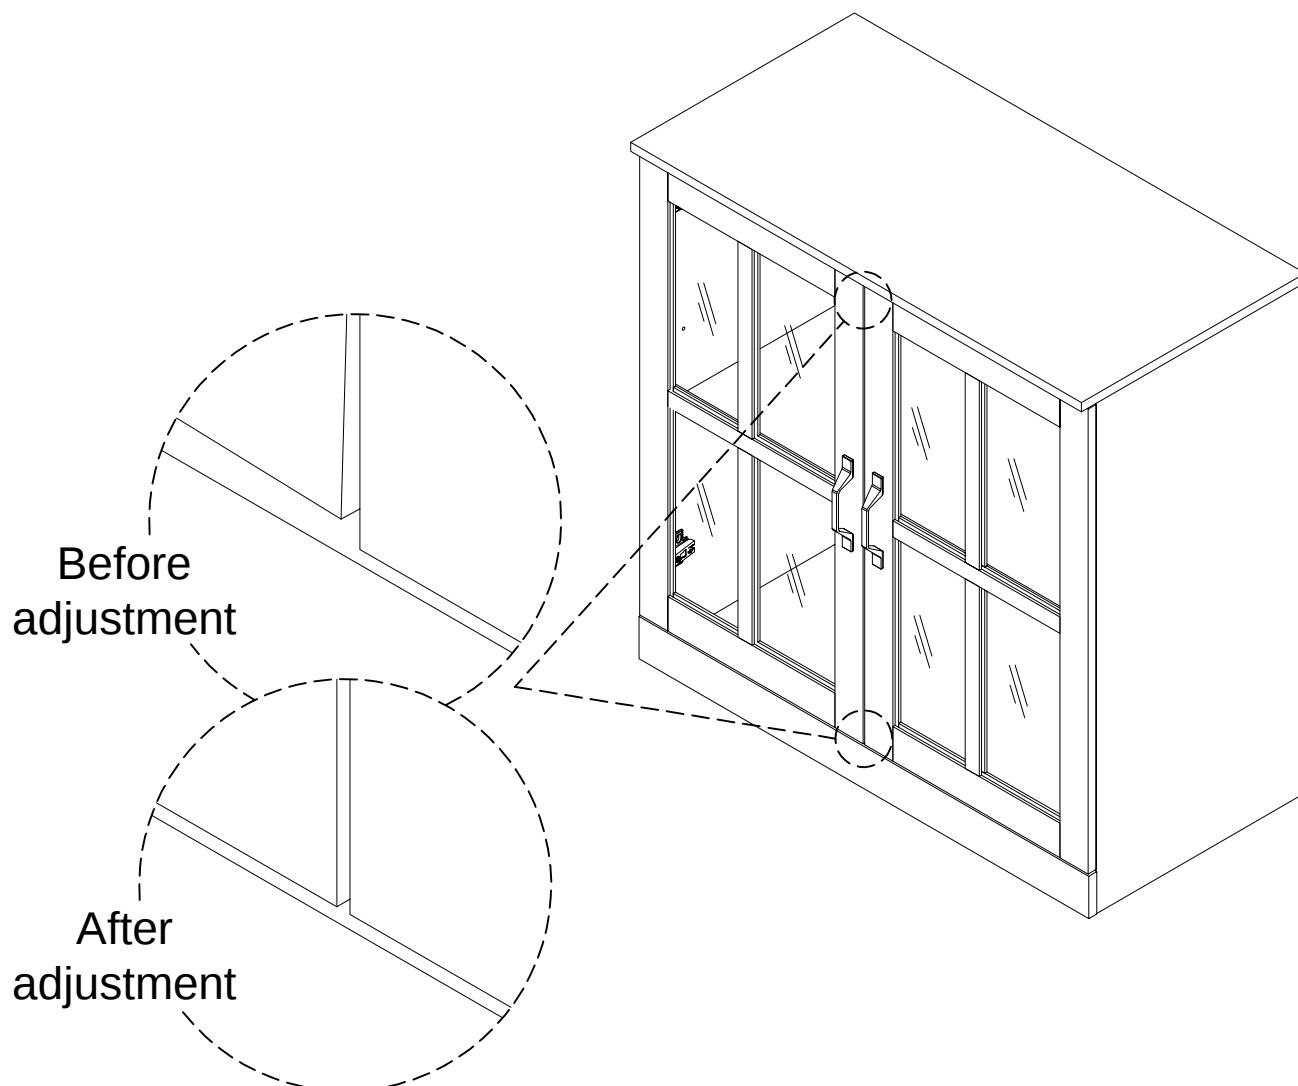
II x2

WALL


Use a hammer
to close
anchor (N.1)

III x2


Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.
Step 2: drill the hole and then fixed the anchor (N.1) on the wall
Step 3: use screw (N.2) to fix the strap (O.1), and washers (O.3) on the wall

***IF THE DOOR ARE NOT BALANCE**

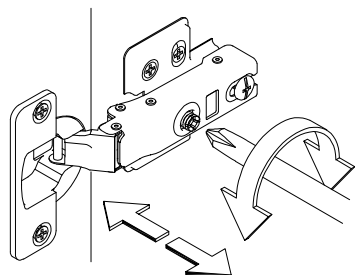Adjust the
door to run
back and
forth



Adjust the
door left
and right

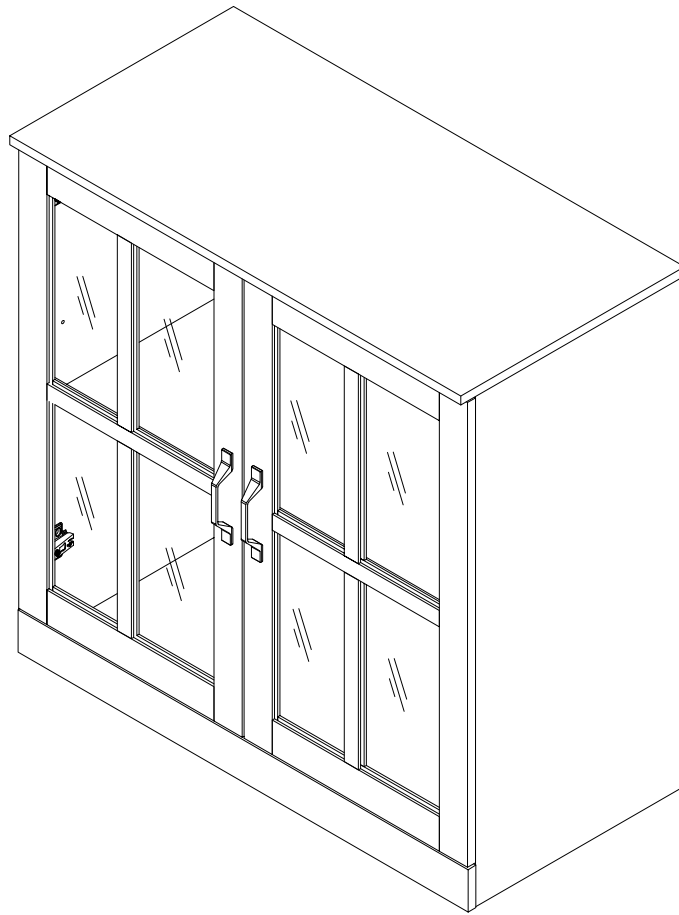

GUARANTEE

Storage Cabinet offers a 90-days warranty that begins on the date of the original purchase and applies to problems caused by the manufacturer. For questions, assistance, or support, please contact the Customer Service by e-mail with your order number and details. We will send you further information about the solution.

Model: SZG-013

Made in VIETNAM

