
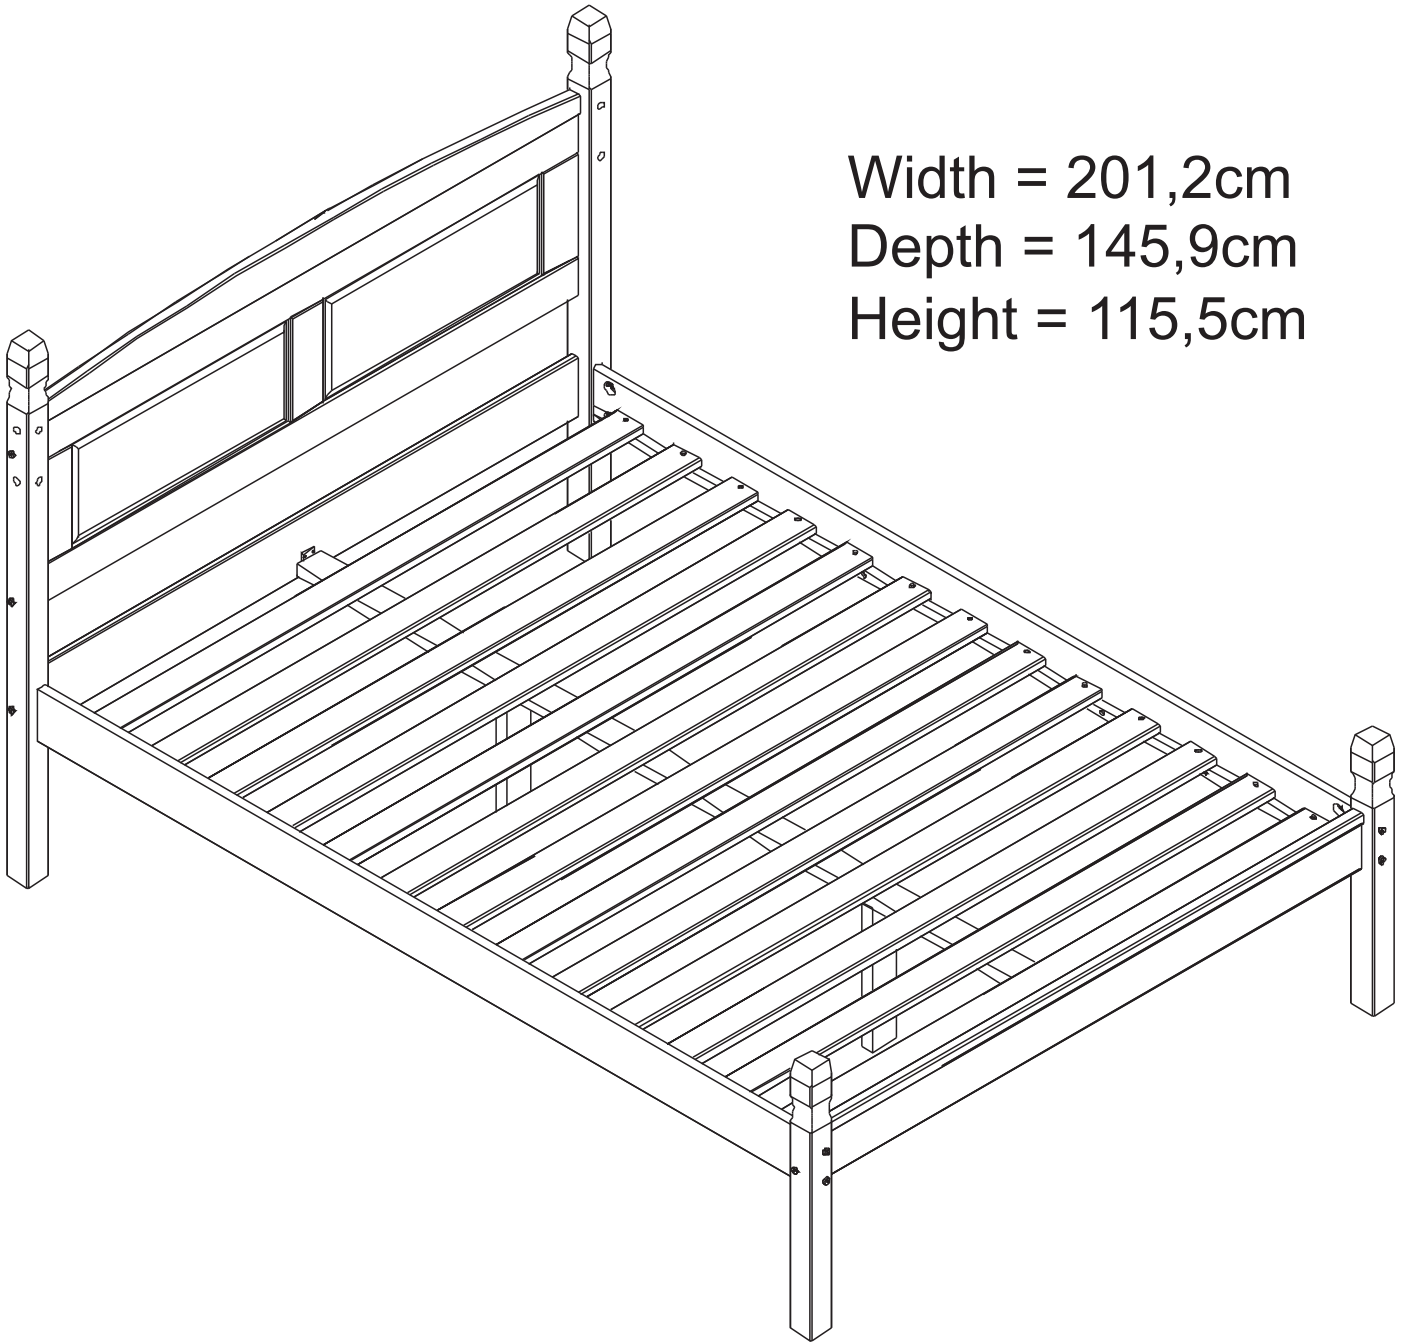
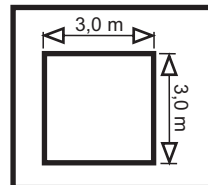
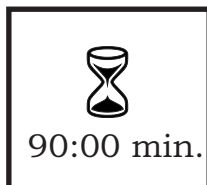



4'6 BED LOW FOOT

Width = 201,2cm
Depth = 145,9cm
Height = 115,5cm


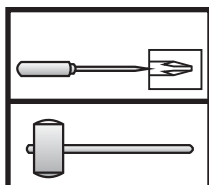










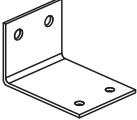

- Please check that all fittings are correct before assembling the item.
- Replacement parts can be supplied for any damages to the item.
- Please keep all packaging until the item is assembled as we will require information from this if replacement parts are required.

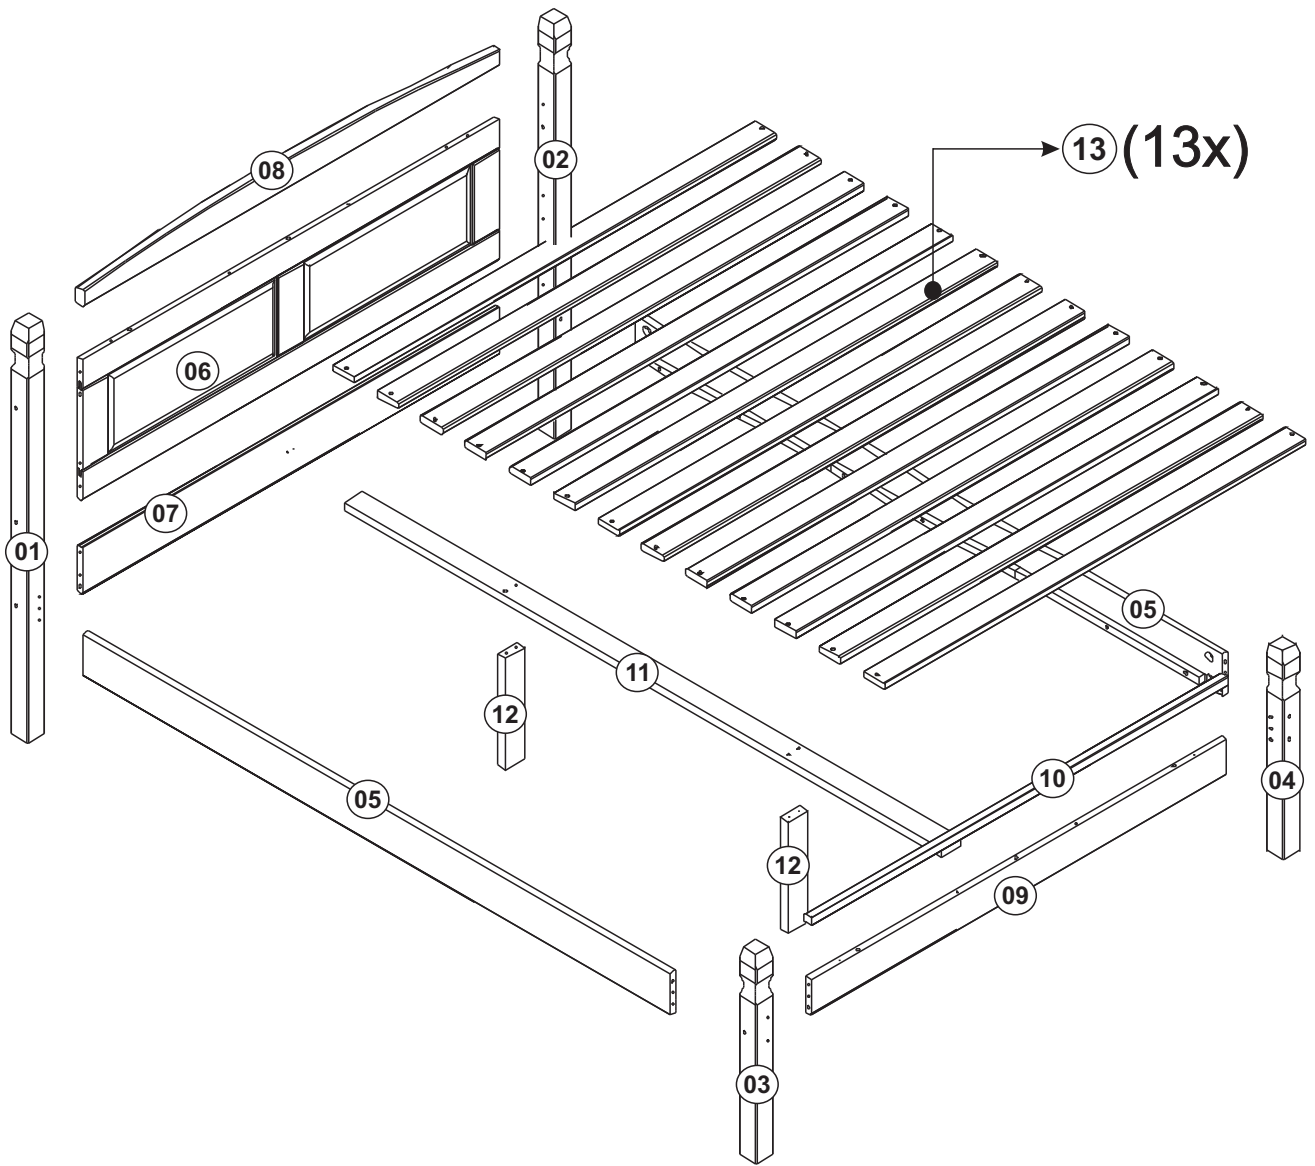







“PLEASE NOTE - IT IS ADVISABLE TO USE WOOD GLUE ON ALL THE DOWELS FOR EXTRA STRENGTH





A	 8 x 40	22
B	 3,5 x 30	34
C	 1/4 x 100 Cab. 17	08
D	 1/4	08
E	 7 x 90 Cab. 17	08
F		01
G	 7 x 50 Cab. 10	04

H	 10g	02
I	 Space block	02
J	 3,0 x 14	08
K		02
L		08


04

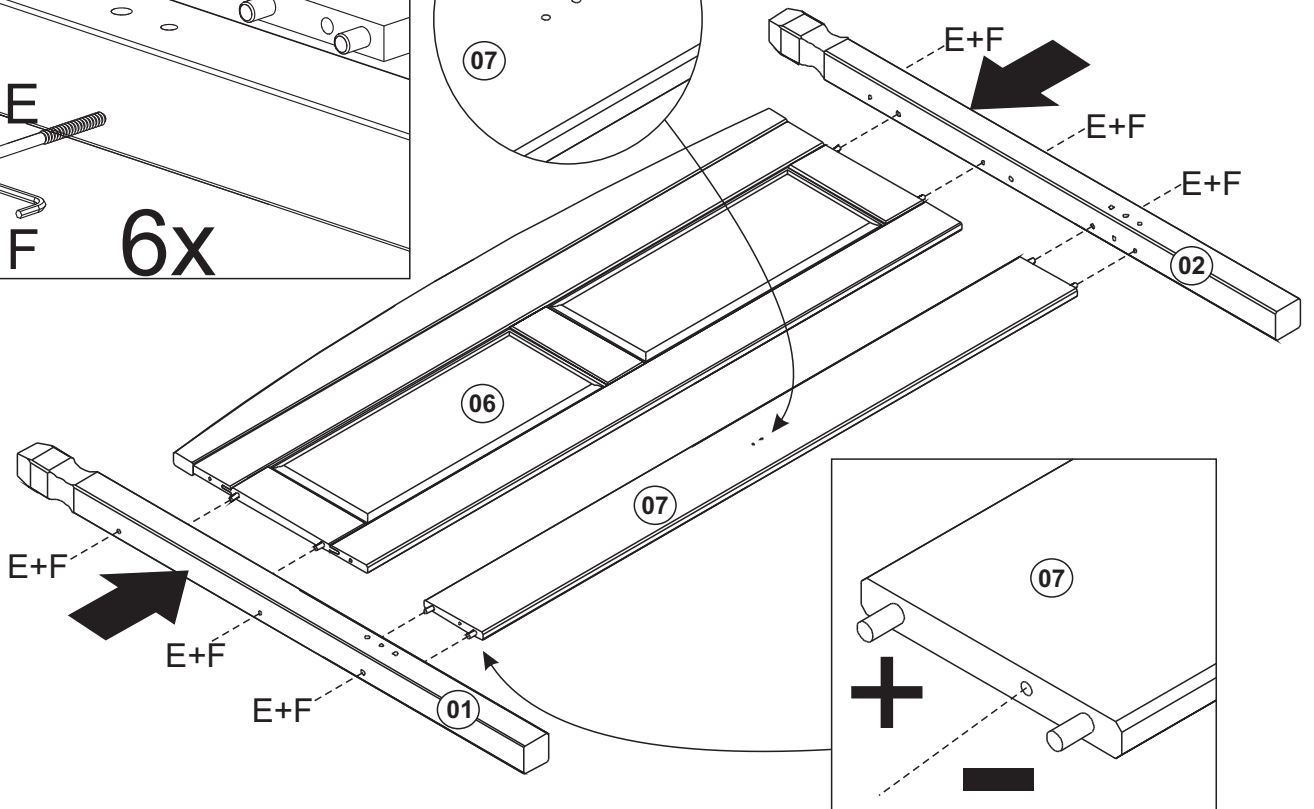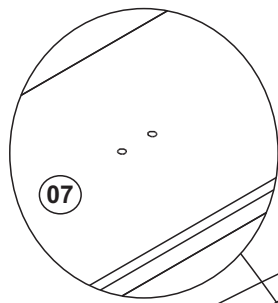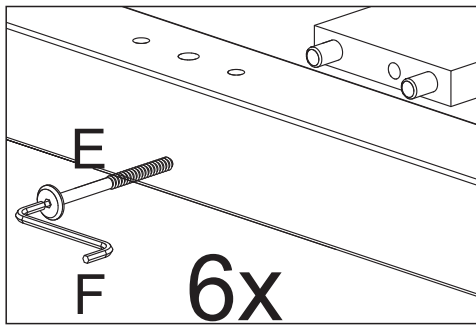

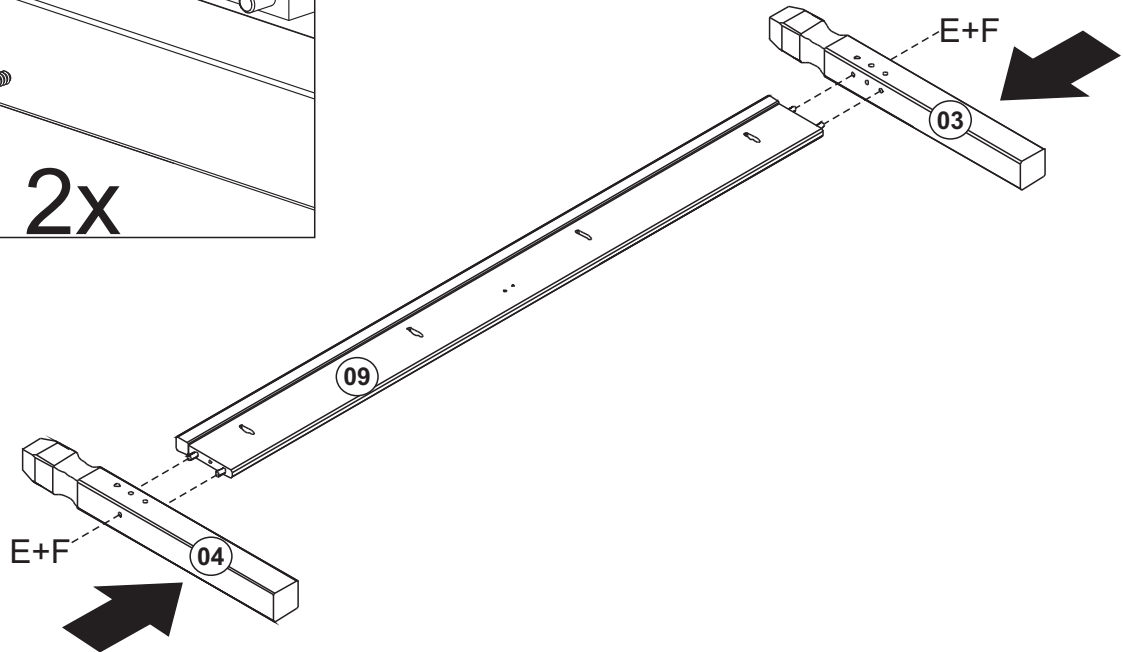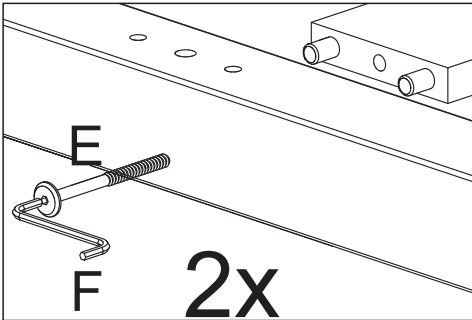

05

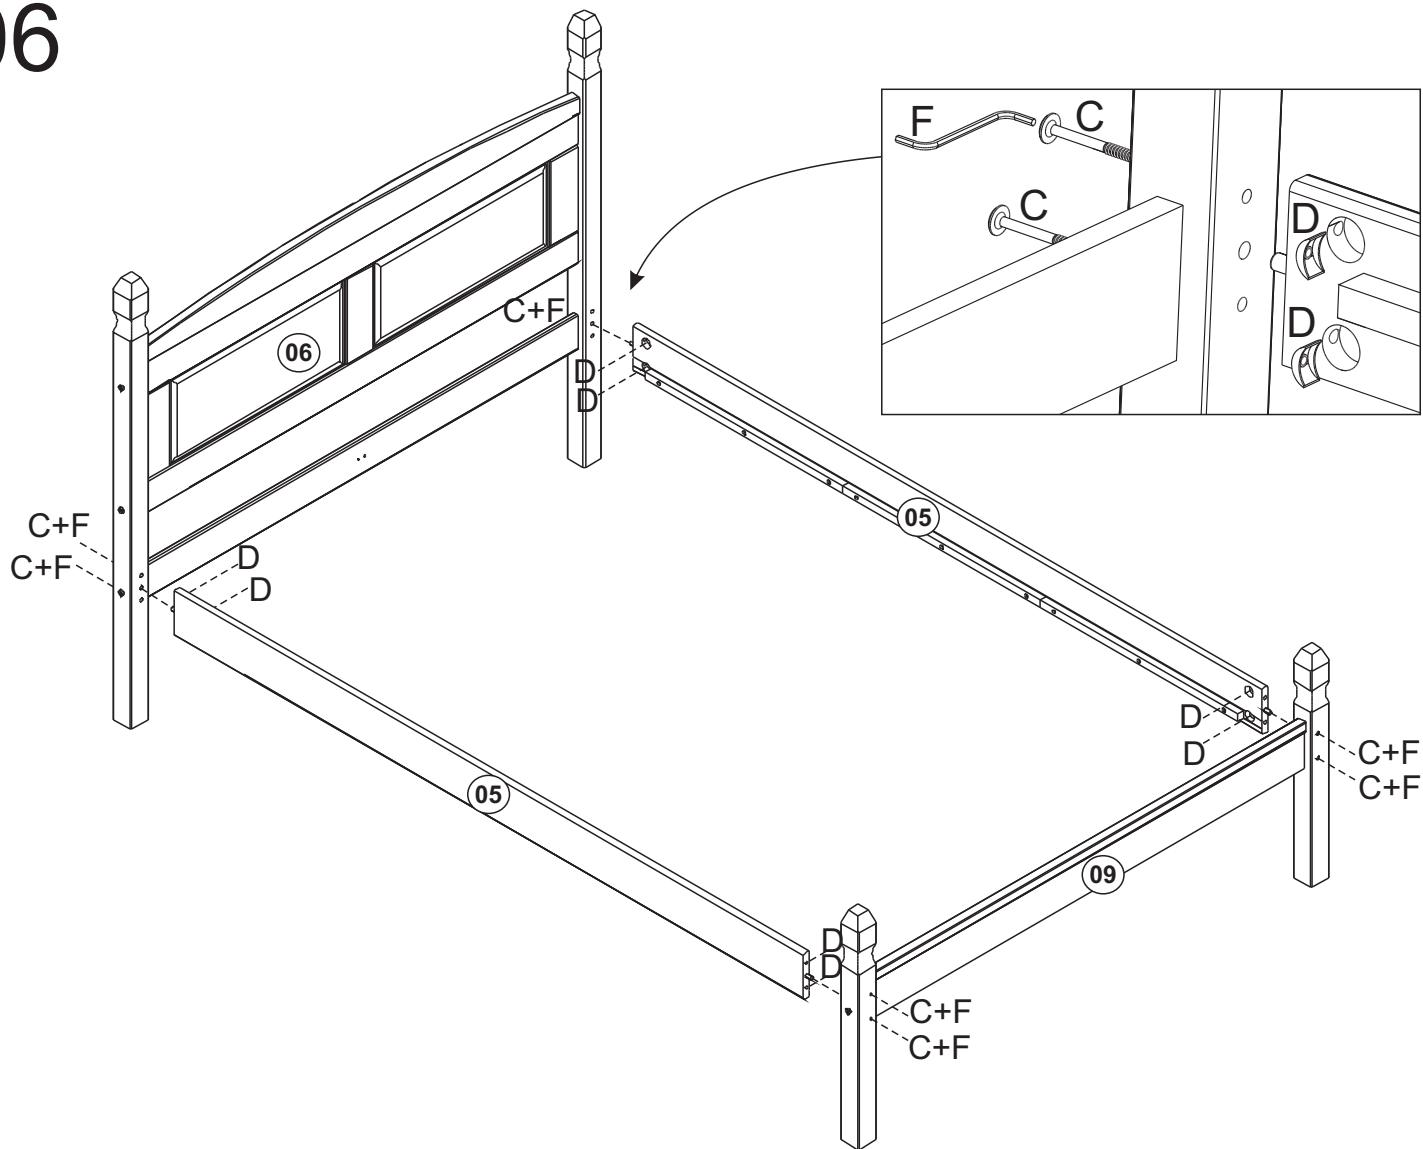

06





F  **01x**


C  **08x**
Ø1/4 x 100mm


D  **08x**
1/4


07

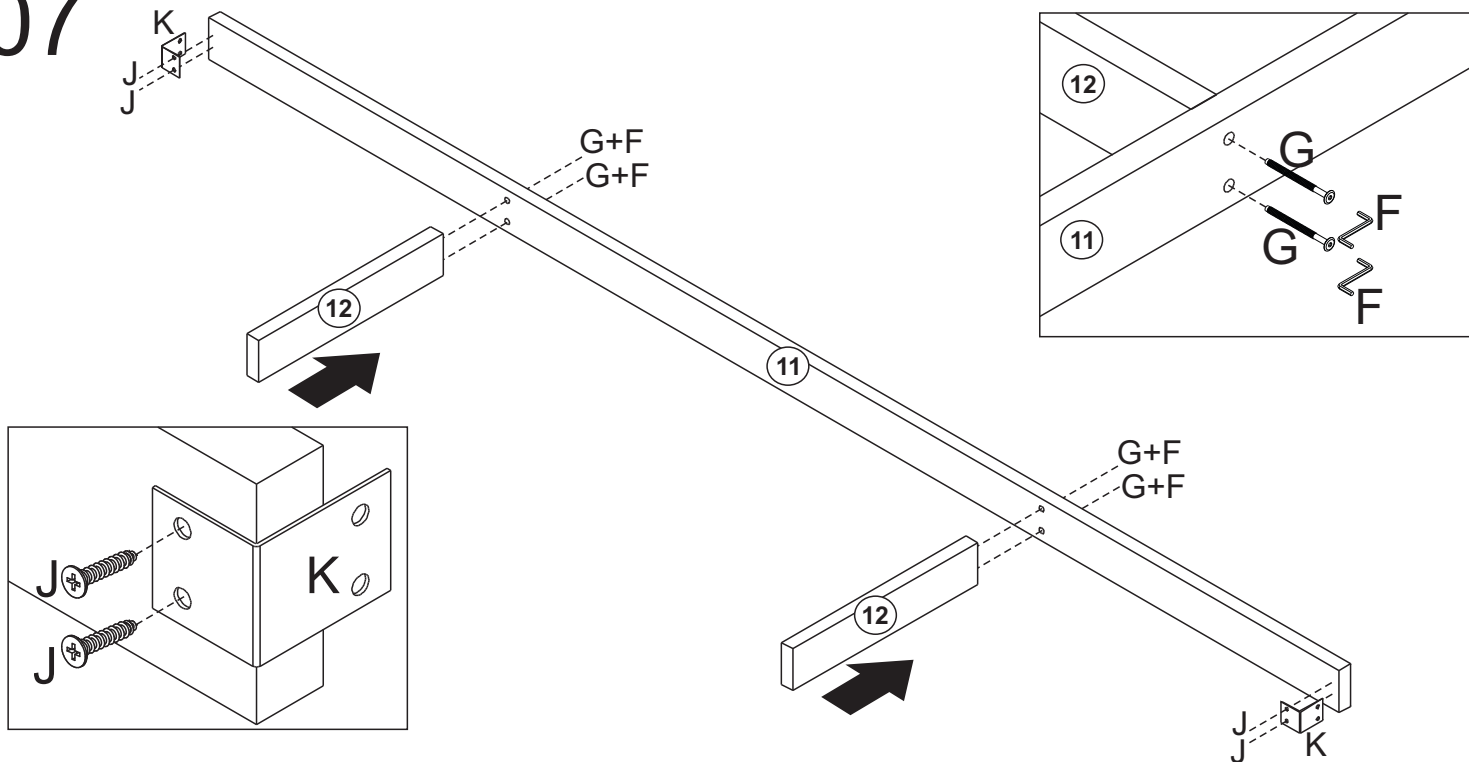


F  **01x**


G  **04x**
Ø7 x 50mm

J  **04x**
Ø3,0 x 14mm



K  **02x**


08

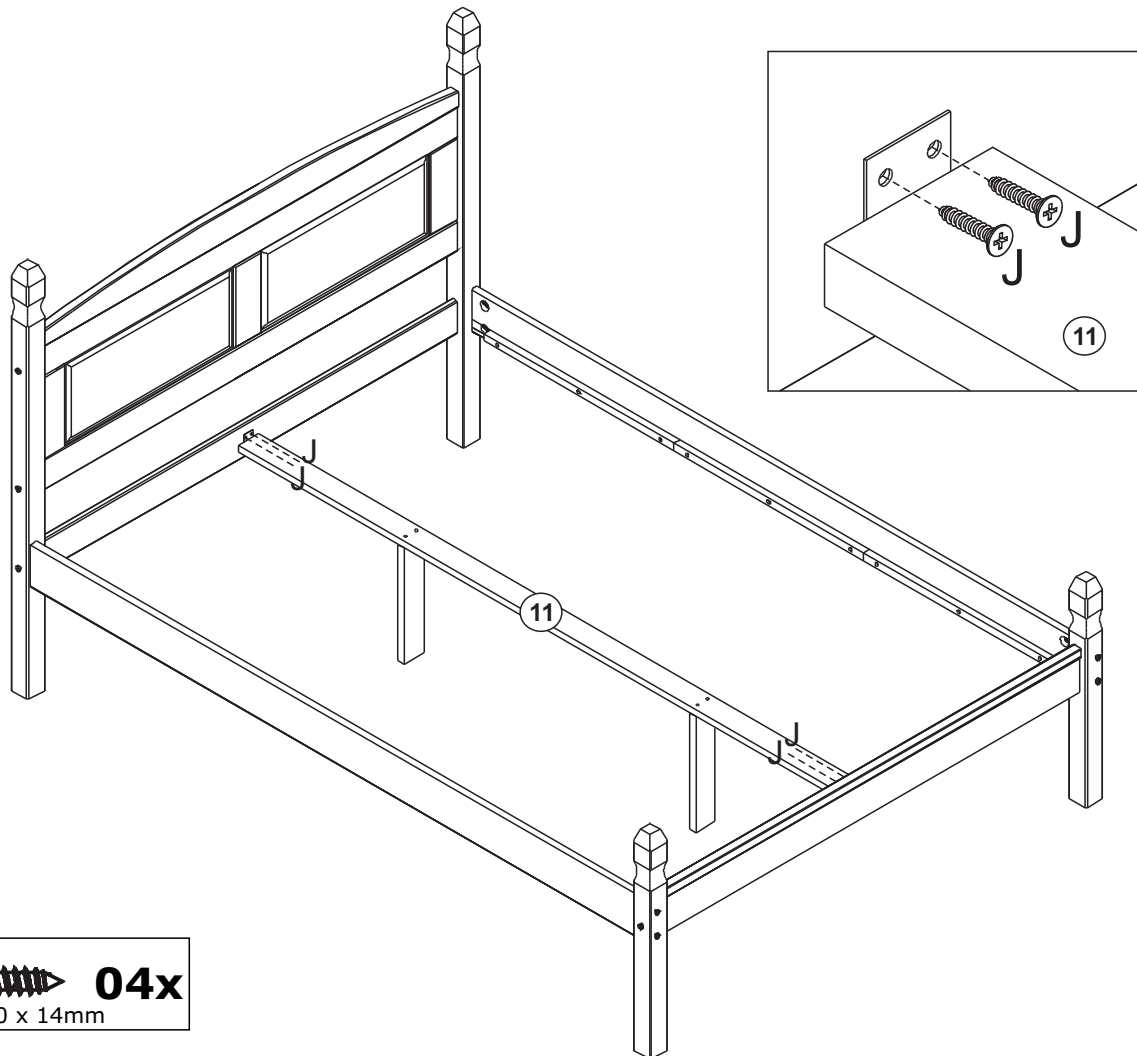



J  **04x**
Ø3,0 x 14mm

09

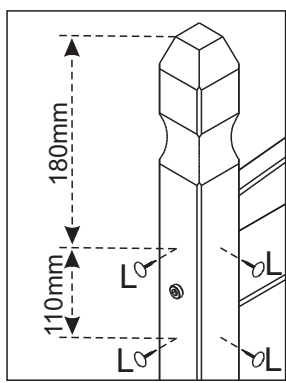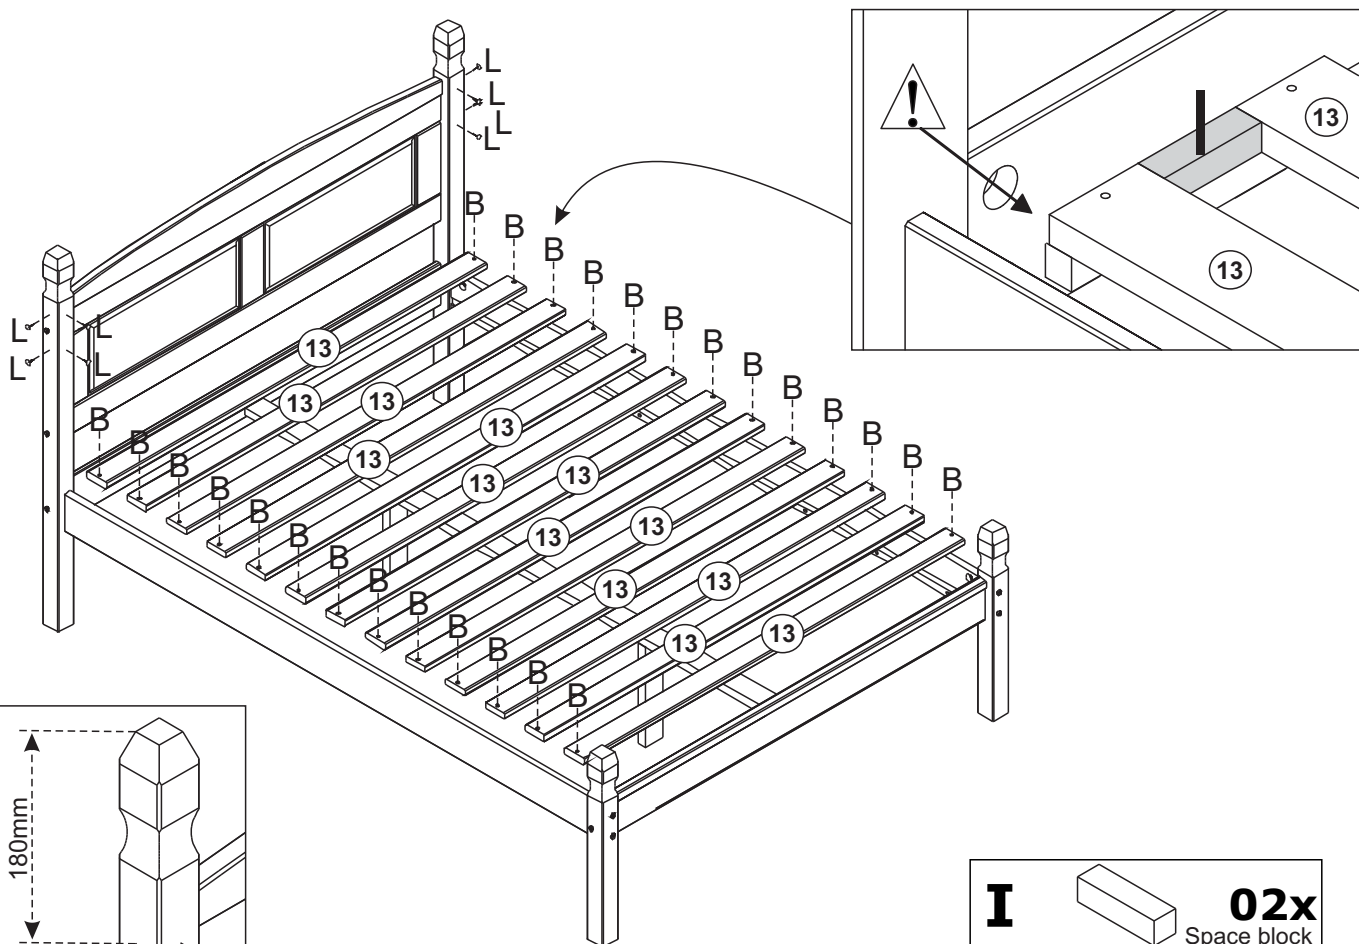

L  **08x**

I  **02x**
Space block

B  **26x**
Ø3,5x30mm