

EP Decking – Shiplap Wall Panel Guide





EP Wall Panel are made from Polystyrene materials that are durable and reliable. Acoustic 3D panels to enhance your interior space.


- ✓ **Sound Reduction**
- ✓ **3D View**
- ✓ **100% Waterproof**
- ✓ **Easy to Install! Good for DIY.**
- ✓ **Enhances your indoor space**
- ✓ **No painting or staining is required**

Installation Guide


- (1) It is recommended that the wall panels be installed on drywall, plasterboard, or plywood that is free of debris and flat. Wallpapers must be removed.
- (2) Measure the length needed. The wall panel can be installed in both vertical and horizontal directions.

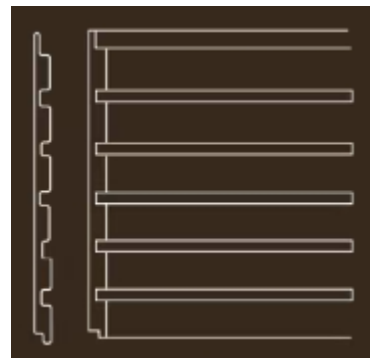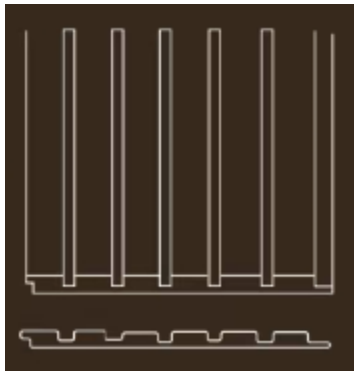



- (3) The wall panels can be cut using a jigsaw, circular saw or miter saw.

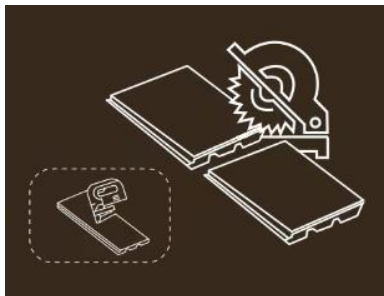


(4) Apply polymer-based interior construction adhesive on the back of the panel.

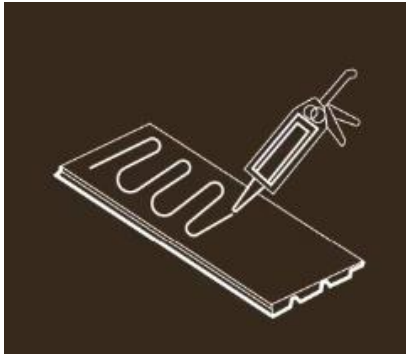


(5) Position the panel on the wall with the tongue side facing out for the next panel to overlap. It is strongly suggested to use a Level to make sure the panel is straight.

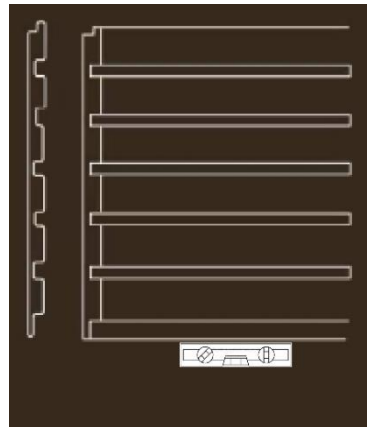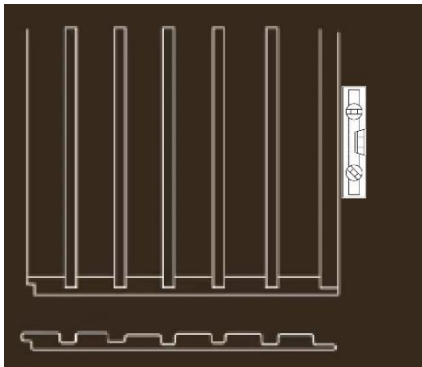

(6) Carefully use a fine nail gun at the tongue side to secure the panel, be mindful of the placement of each nail to ensure that it will not be visible after the next panel overlaps.

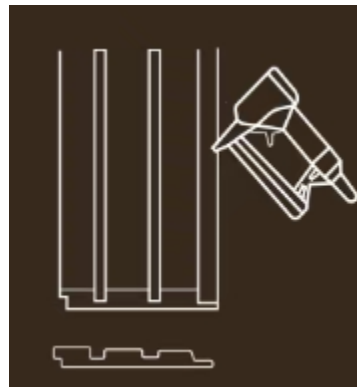

(7) Repeat processes (4), (5), and (6) to install other panels one at a time with the Top half lap over the previous panel's bottom half lap.

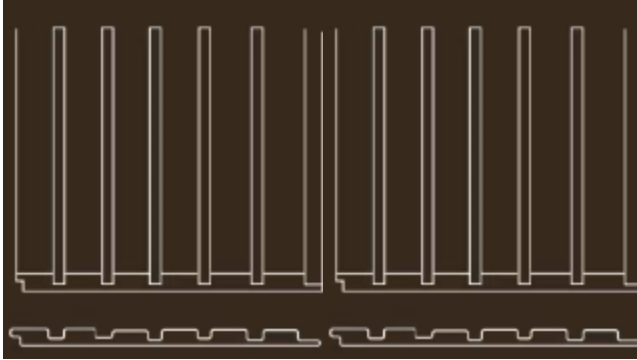

Notes:

- (i) If an outward-facing corner installation is needed, start at the edge of the wall by combining two Top Half Laps of two different panels.**



Do you have questions, comments, or concerns? E-mail us (sales@epdecking.com) or call us at **(866) 344-2600 (Sales)**.