



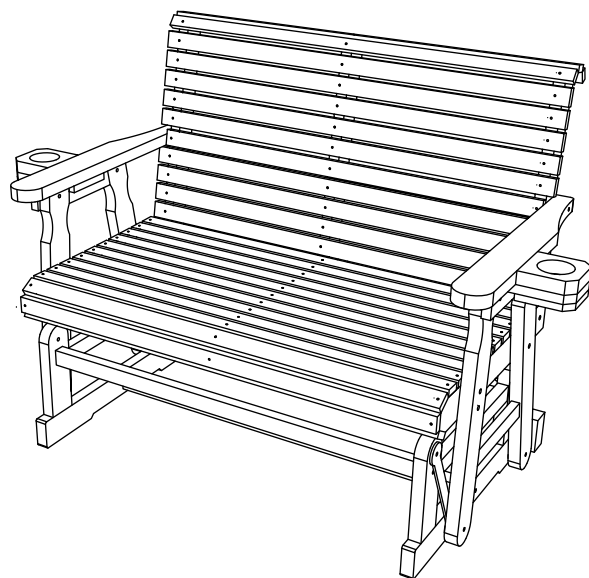


Note: Do not tighten all the bolts until last step

A

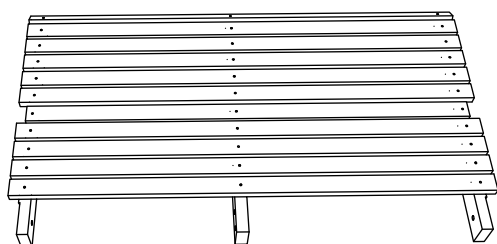


1pc

B

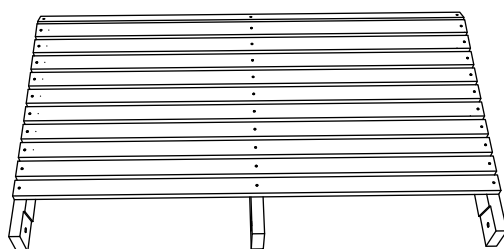


1pc

C(C1, C2)

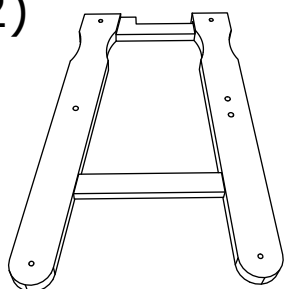


2pcs

D

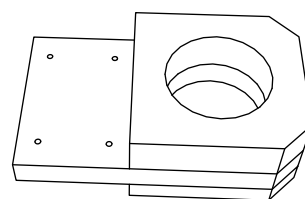


2pcs

E
















1pc

F




1pc

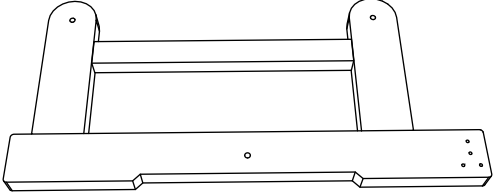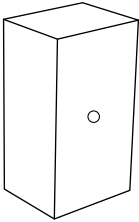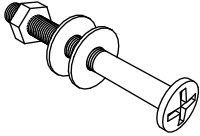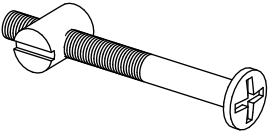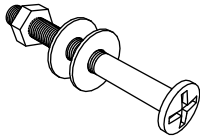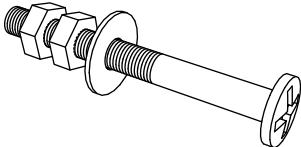
G(G1, G2)  2pcs	H  3pcs
I  2pcs	1 8*65mm  8pcs
2 6*60mm  6pcs	3 3.5*35mm  8pcs
4 6*50mm  4pcs	5 8*60mm  2pcs
6 6*80mm  2pcs	7 6*50mm  4pcs

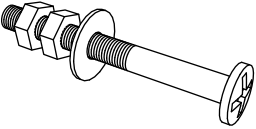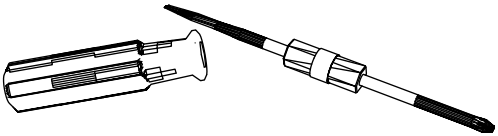8 6*45mm  4pcs	9 3.5*50mm  6pcs
10 Hang Hardware  4pcs	11 M6  4pcs
12  wood pin 2pcs	13 screwdriver  1pc


1

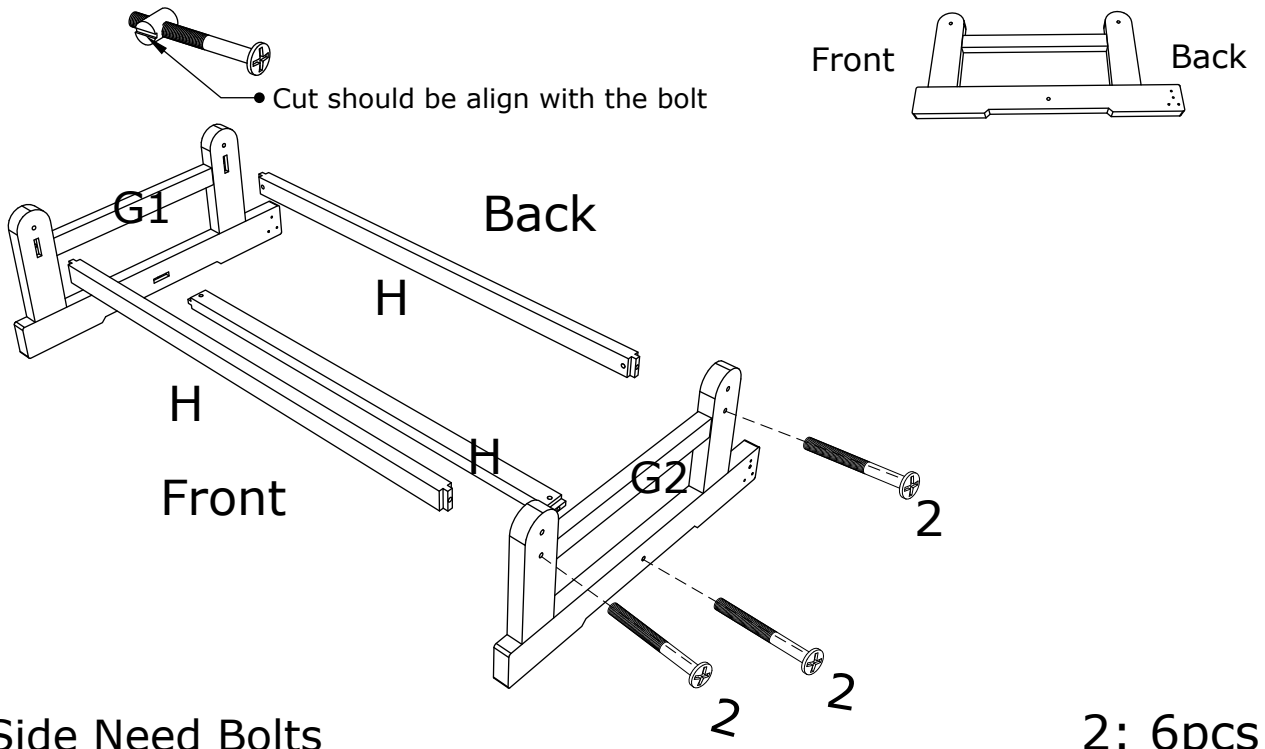

2

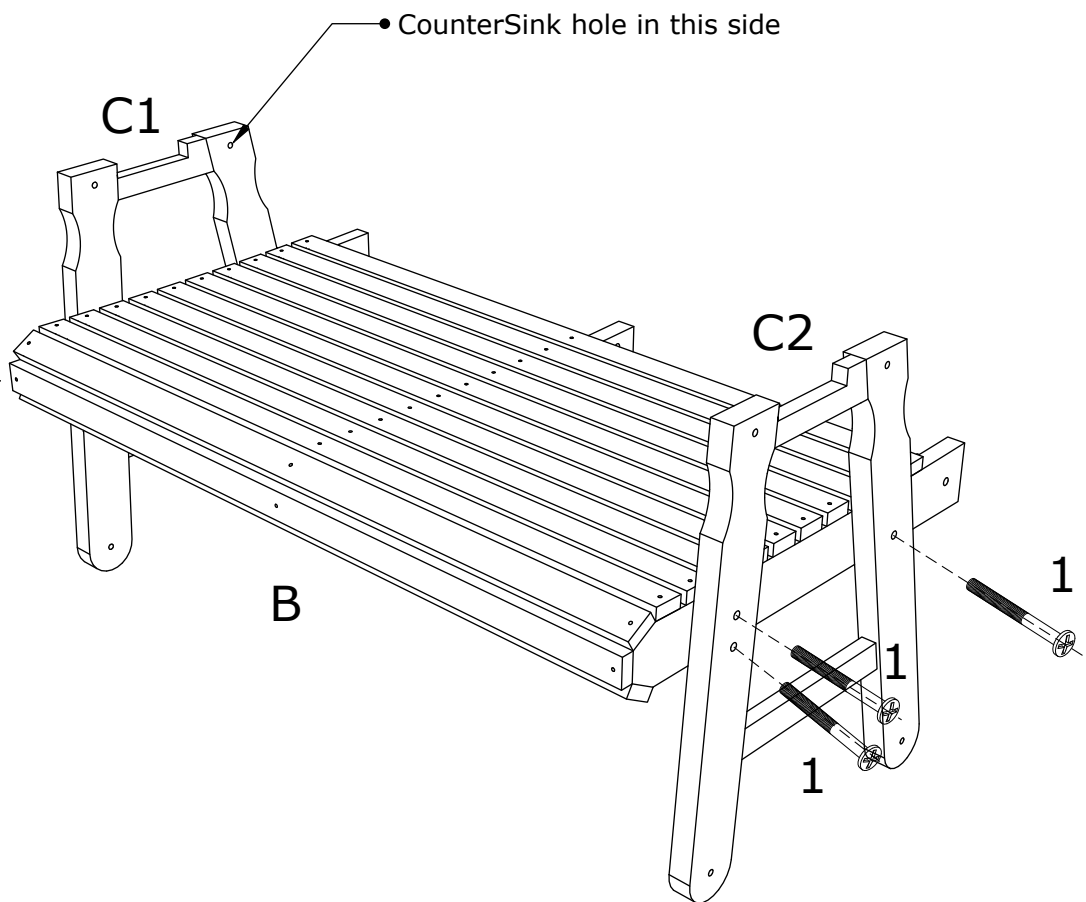

3

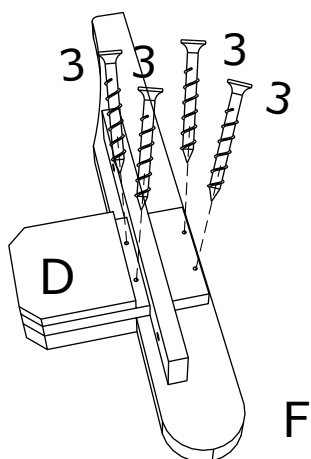


Repeat This Step To Assemble
The Other Handrest(E)

3: 8pcs


4

Both Sides Need Bolts

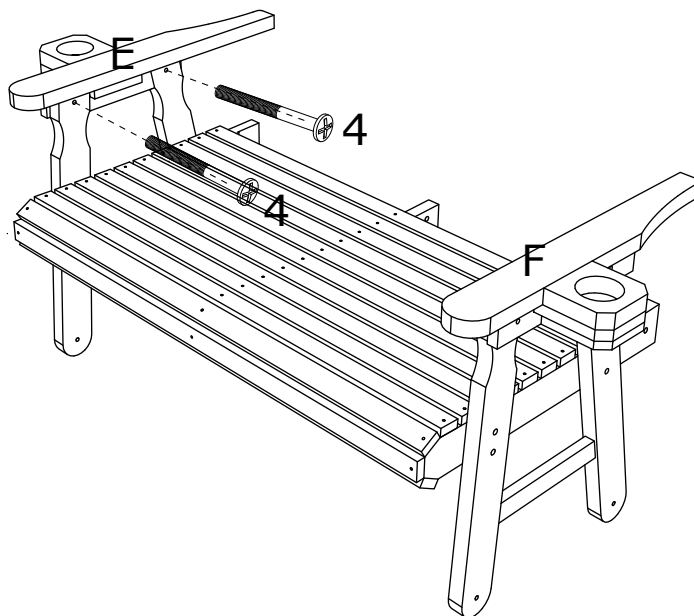


4: 4pcs

5

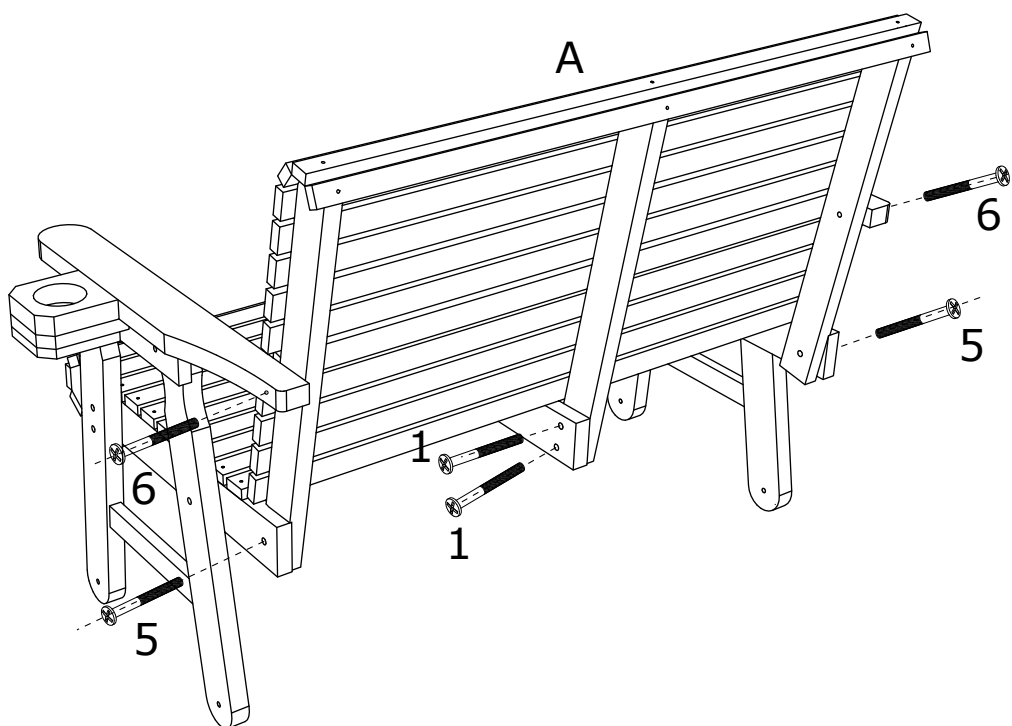


1: 2pcs
5: 2pcs
6: 2pcs

6

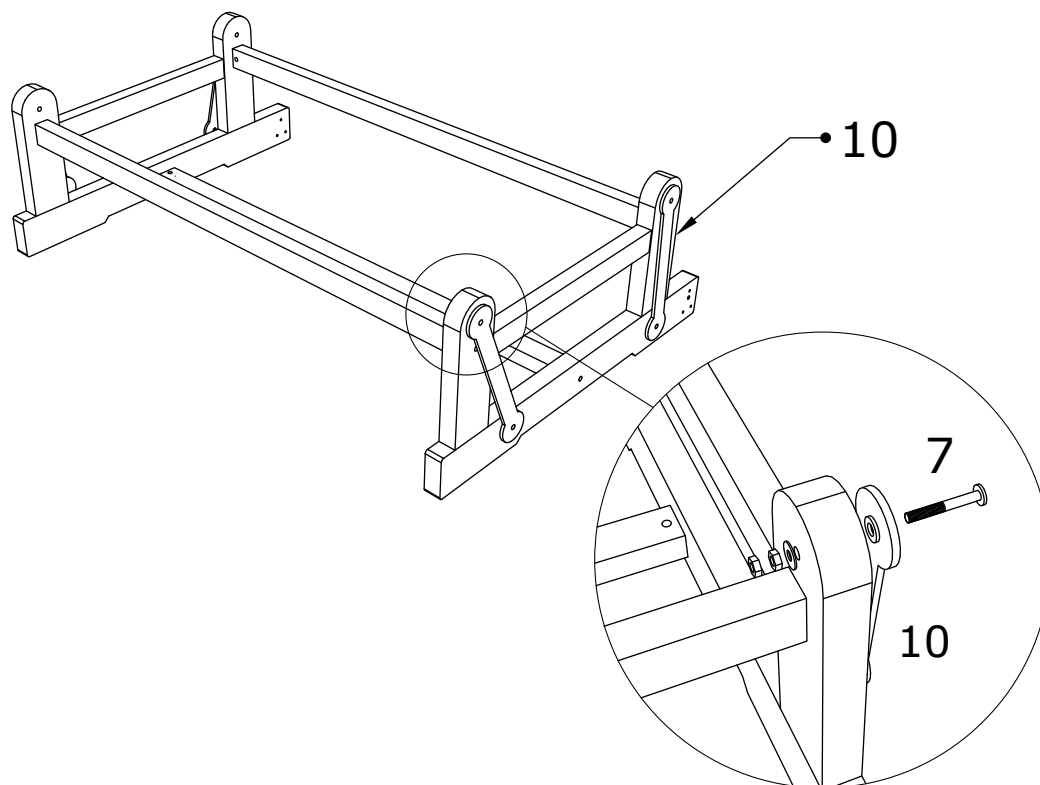


7: 4pcs

7

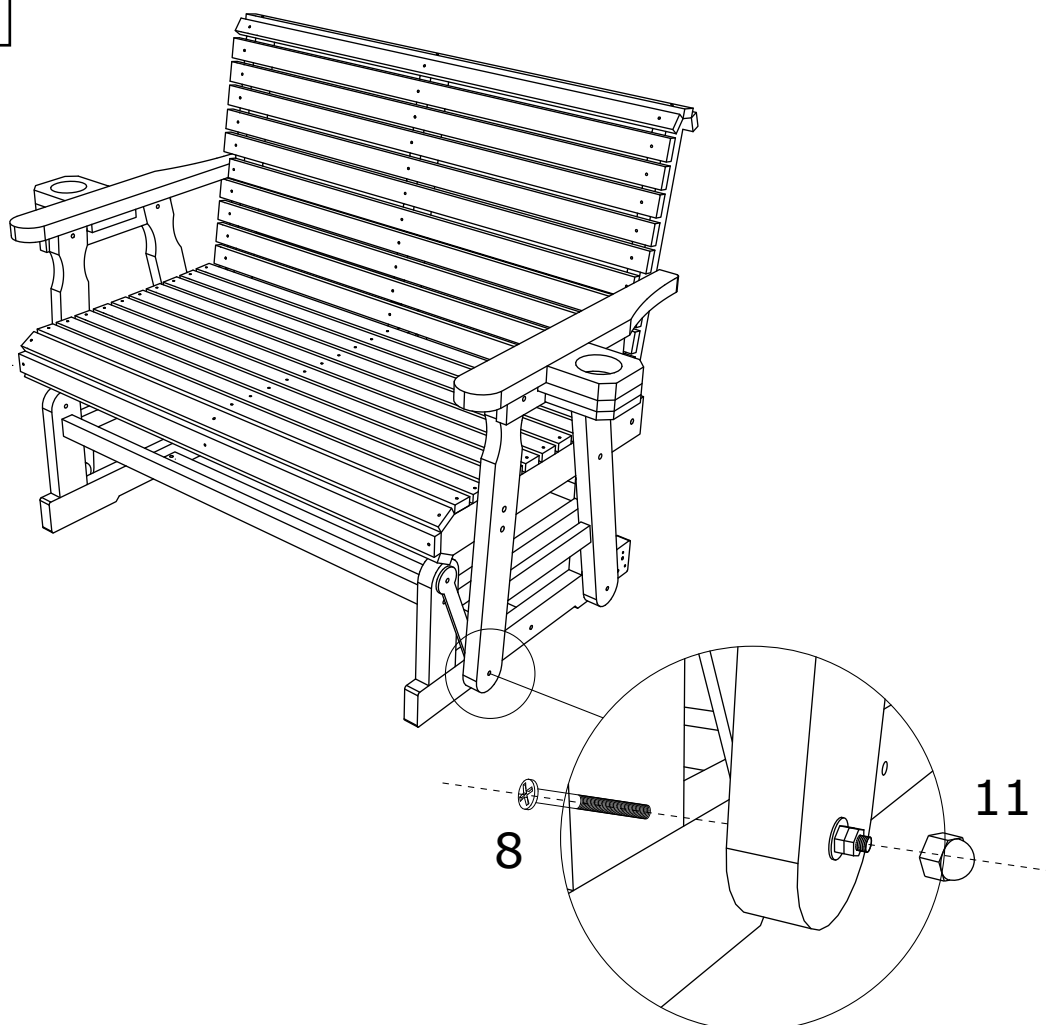

8: 4pcs

8

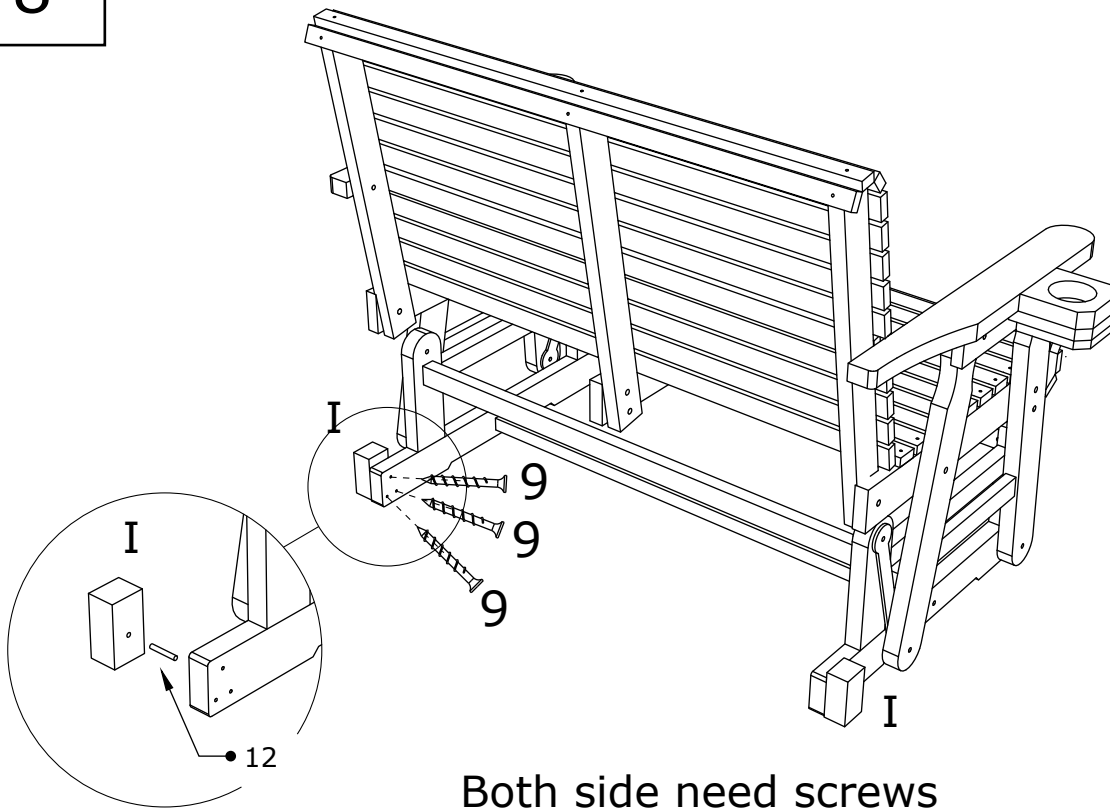

Both side need screws

9: 6pcs