



Parts Bag



Do not tighten hex bolts completely until all steps are completed.


1

To build end frames using Allen Wrench (H):
Attach 2 Support Rods (F) to 1 Short Rod (E) to using 2 Hex Bolts (G).
Place 1 Top End Frame (A) on to tapered end of Support rods (F),
attach 2 Side Rods (D) using 2 Hex Bolts (G).

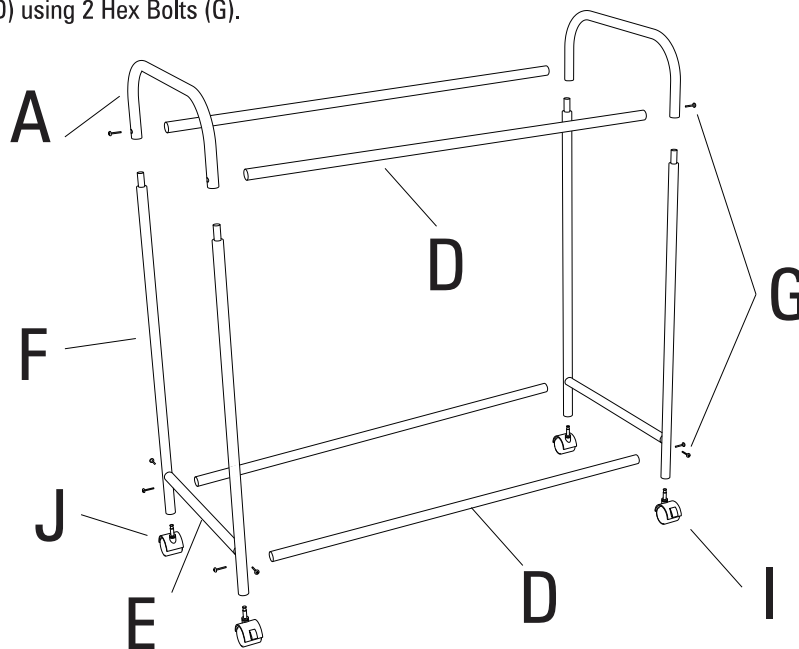

2

To build end frames using Allen Wrench (H):
Attach 2 Side Rods (D) to the bottom on the end frame using 2 Hex Bolts (G).
Repeat the above steps to build second end frame.
Insert Locking caster (I) and non-locking caster (J) into bottom of side frames.

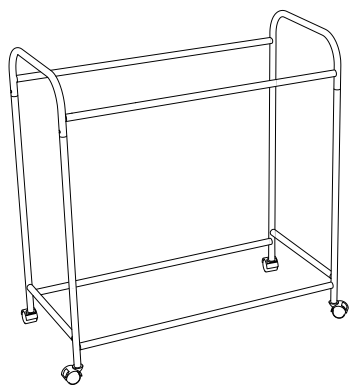

3

Insert Laundry Bag Handles (C) through the sewn loops at the top of Laundry Bag (B).

Hang "Handle Hook" over the top Side Rods (D) of the assembled unit as shown.

