
ASSEMBLY INSRTRUCTION

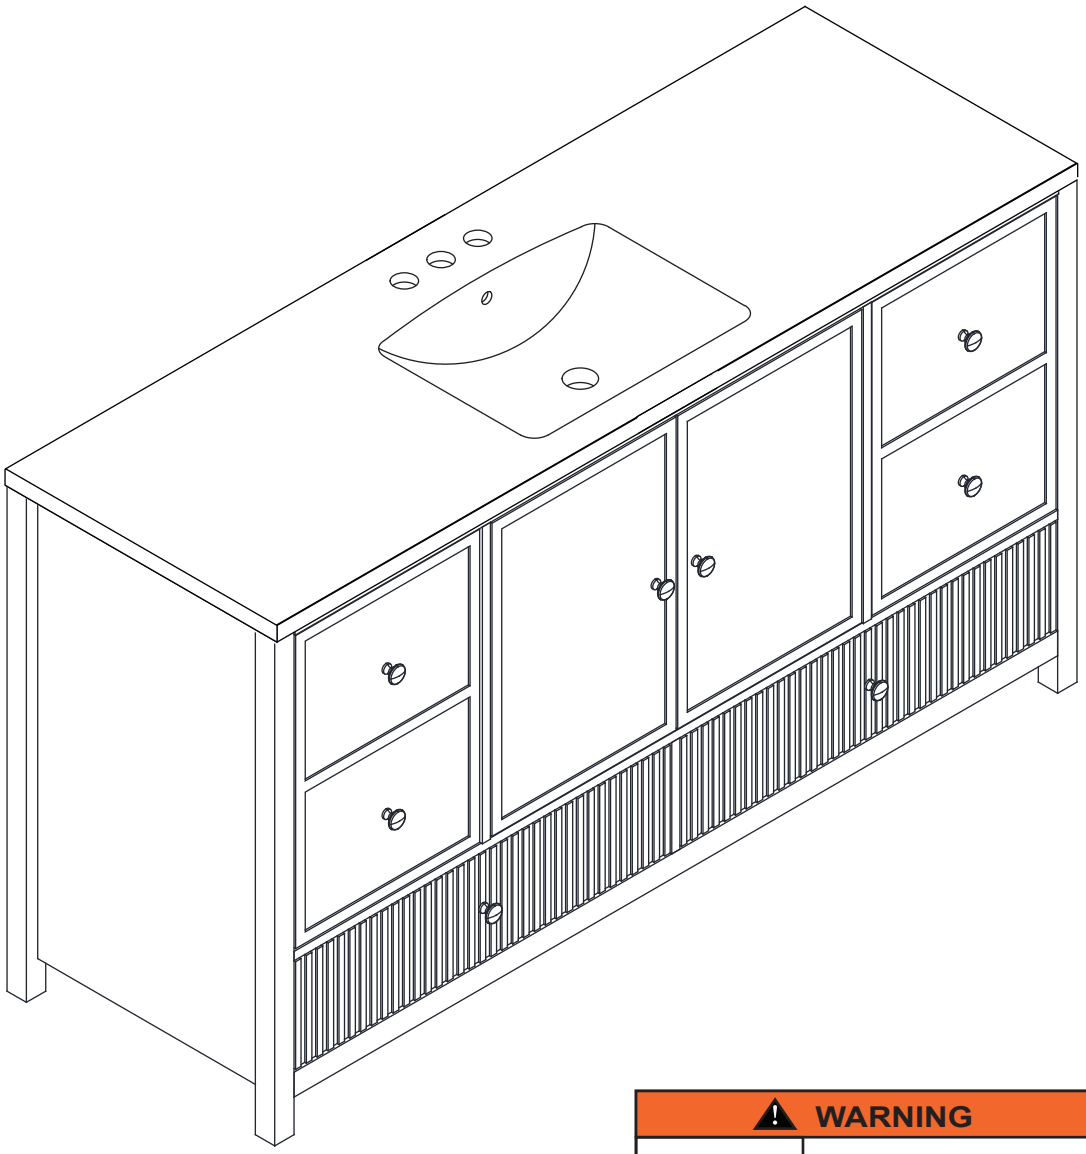

WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Before Installation

Important-Please read these instructions fully before starting assembly


Thank you for purchasing this quality product.Be sure to check all packing materials carefully for small parts,which may have come loose inside the carton during shipment.Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below.Check you have all the components and tools listed on the following pages.

•We recommend that you assemble this product with the assistance of another person;this will make the assembly easier,and will help eliminate damage to the product or injury to persons during assembly.

•Please do not over tighten screws or bolts until the assembly is completed.

•Keep children and animal away from the work area,small parts could choke if swallowed.·Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

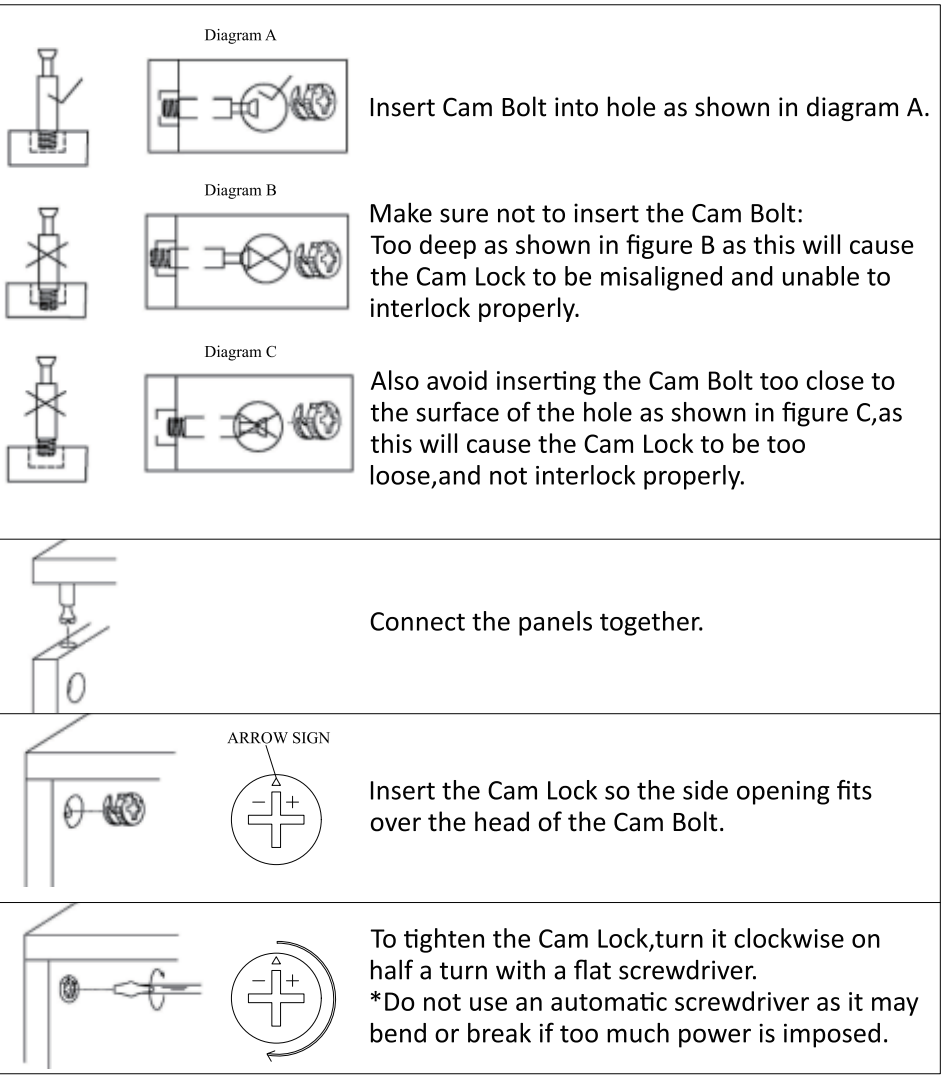

Insert Cam Bolt into hole as shown in diagram A.


Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C,as this will cause the Cam Lock to be too loose,and not interlock properly.


Connect the panels together.
















Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.




To tighten the Cam Lock,turn it clockwise on half a turn with a flat screwdriver.
*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.








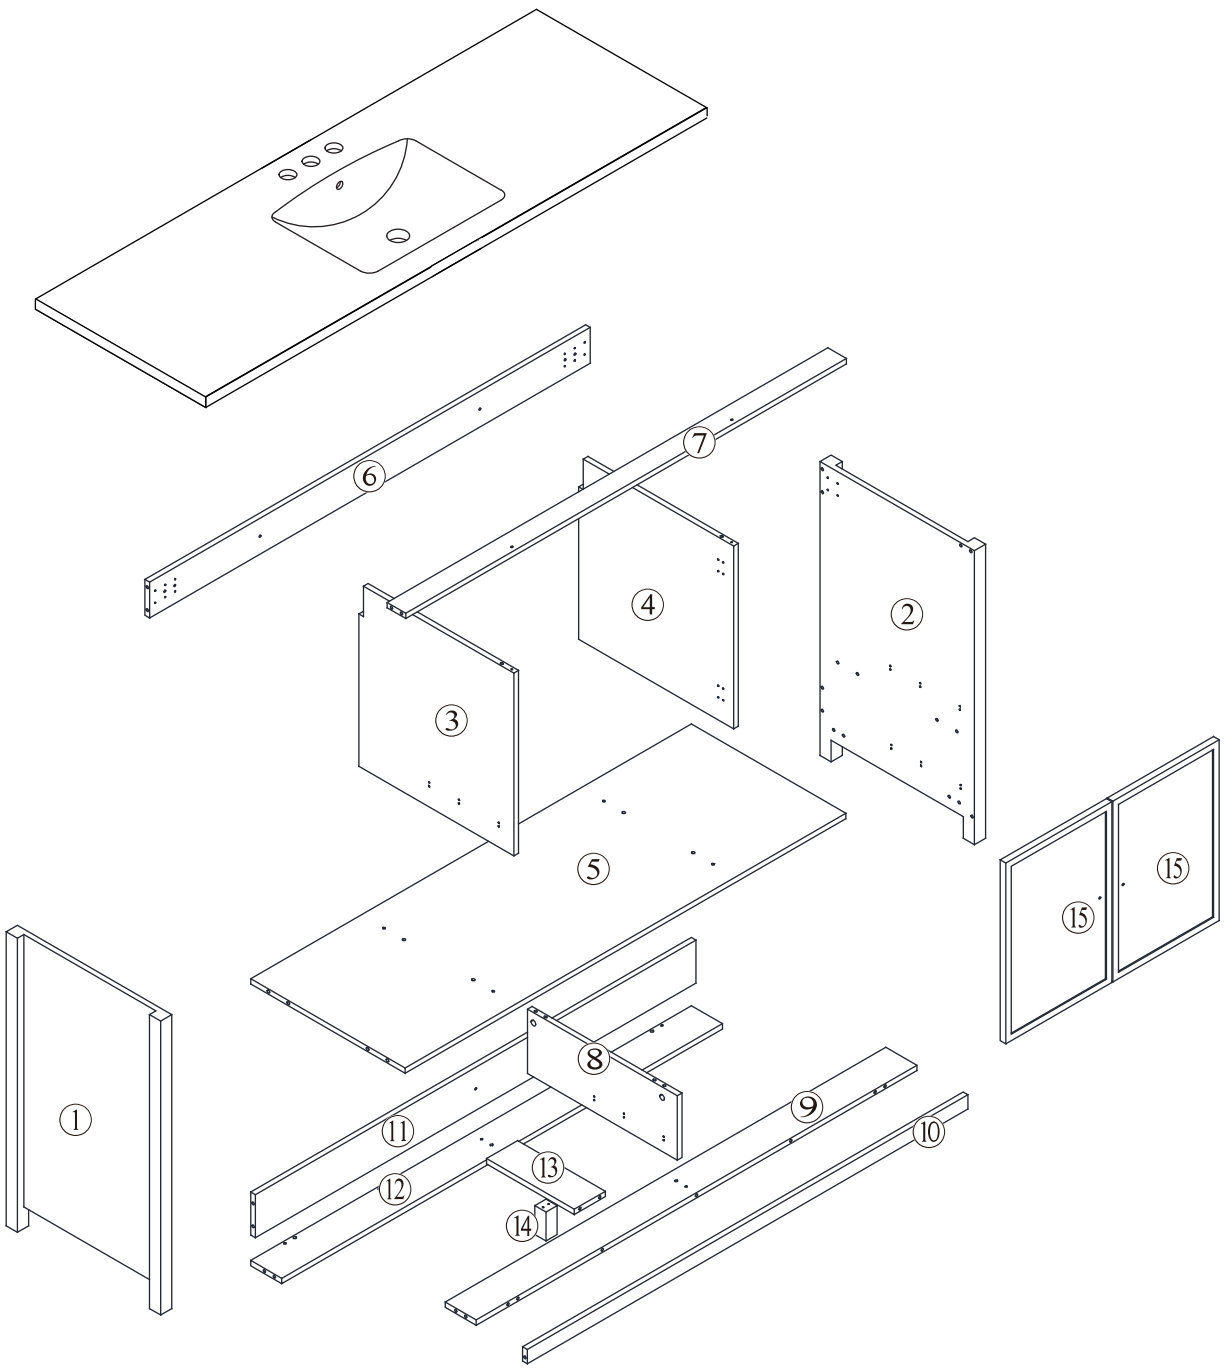

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
15

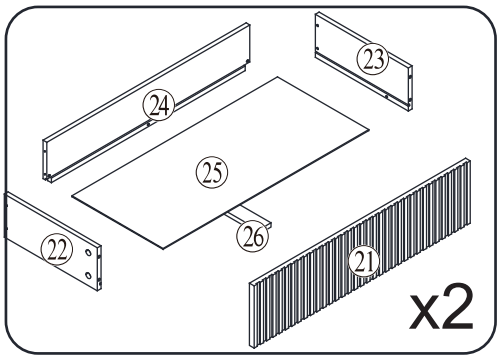

22
24
23
25
26
21
x2








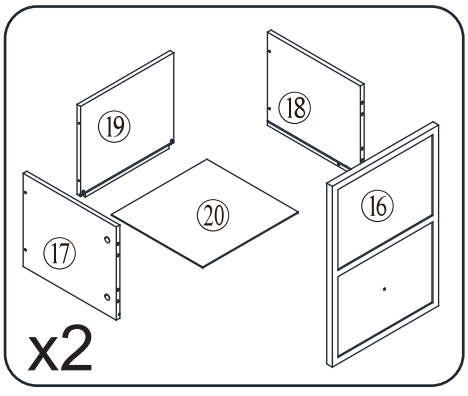

19
18
20
16
17
x2

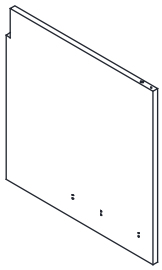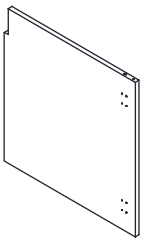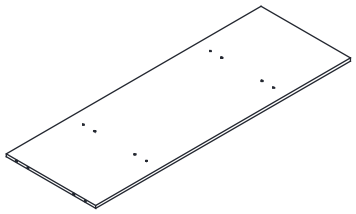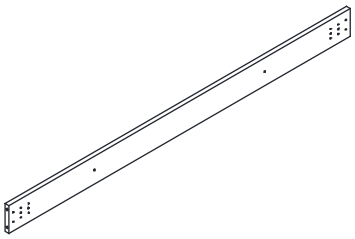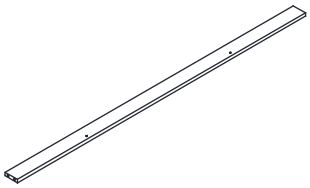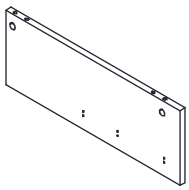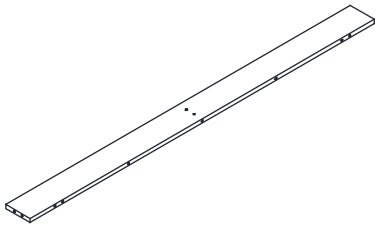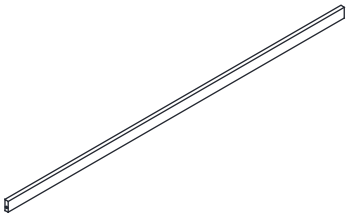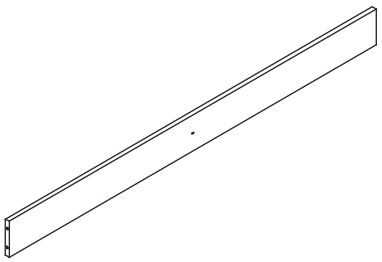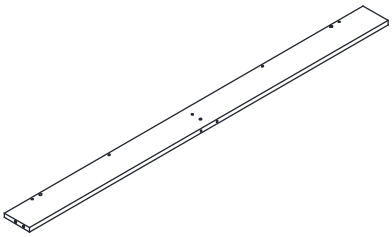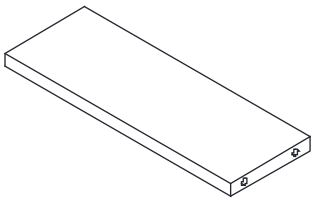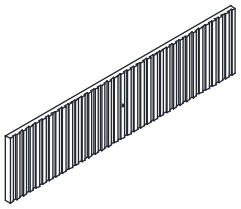		
③ x1	④ x1	⑤ x1
		
⑥ x1	⑦ x1	⑧ x1
		
⑨ x1	⑩ x1	⑪ x1
		
⑫ x1	⑬ x1	⑭ x1
		
⑮ x2	⑯ x2	㉑x2

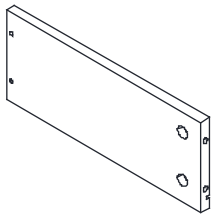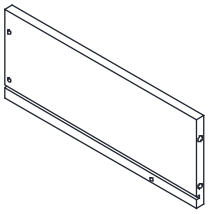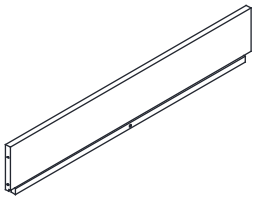
		
㉒ x2	㉓ x2	㉔ x2

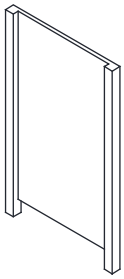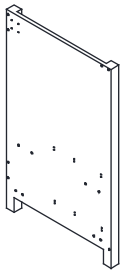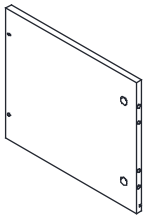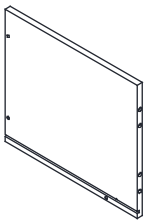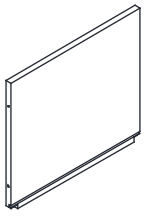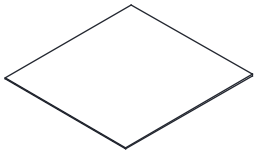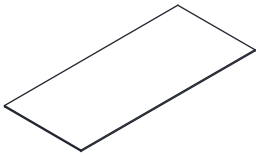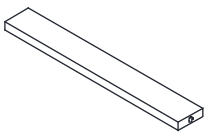		
① x1	② x1	⑰ x2
		
⑱ x2	⑲ x2	⑳ x2
		
㉕ x2	㉖ x2	

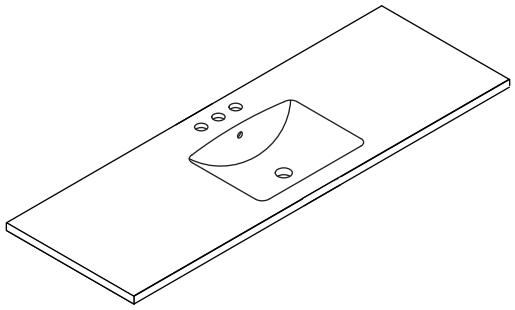


 Φ6x35mm	 Φ15x10mm	 Φ8x30mm	 Φ4x35mm			 Φ4x14mm
A x 48+2	B x 48+2	C x 25+2	D x 35+2	E x 1	F x 4	G x 32+2
		 M4x20mm	 Φ6x60mm		 Φ4x14mm	
H x 1	I x 8	J x 8+1	K x 4	L x 2	M x 72+2	N x 4
				 Φ8x30mm		
O x 4	P x 4	Q x 1	R x 4	S x 8+1		

Step 1

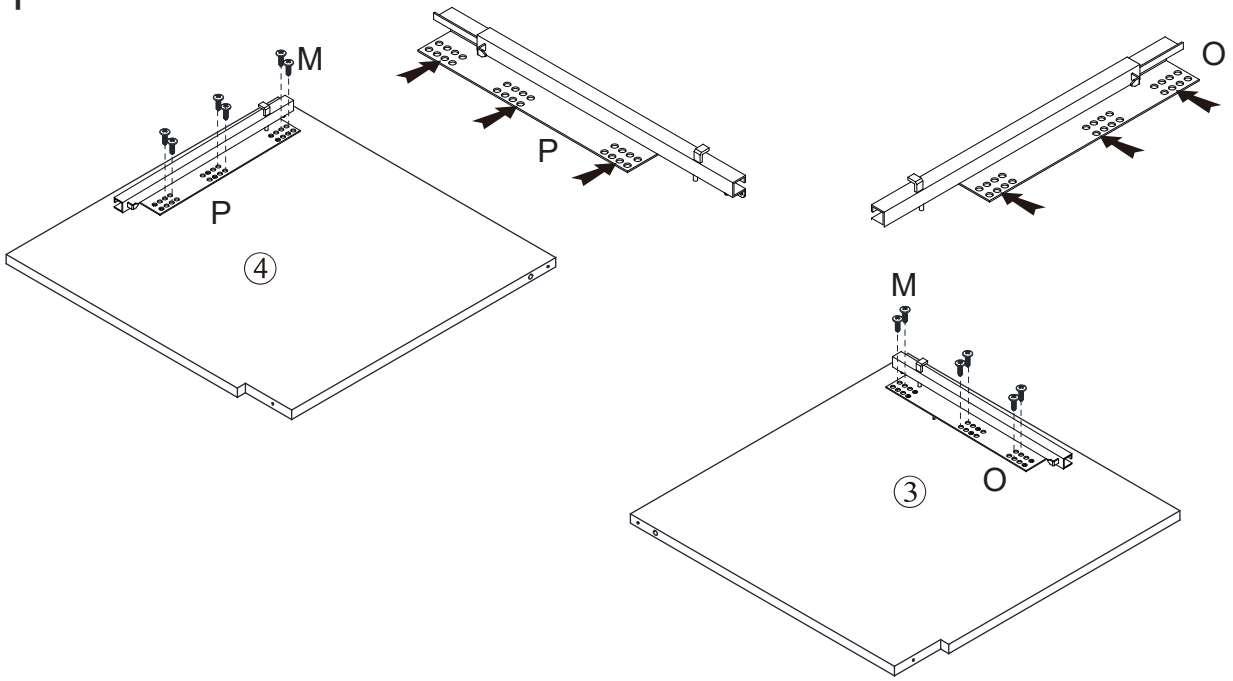


Φ4x14mm		
M x 12	O x 1	P x 1

Step 2

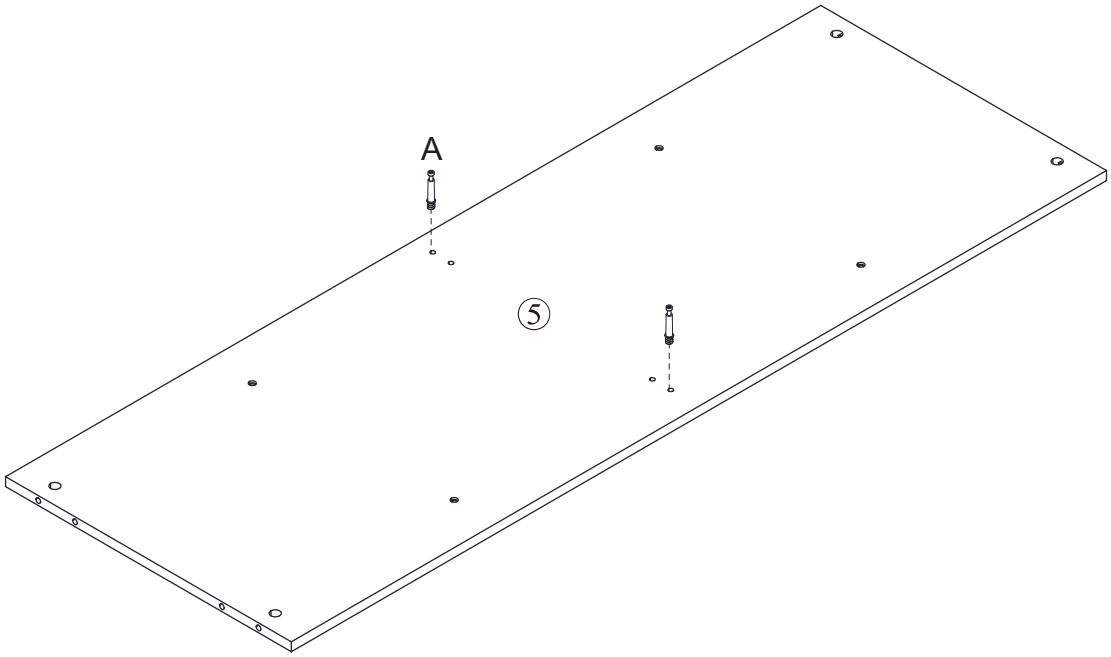


Φ6x35mm
A x 2

Step 3

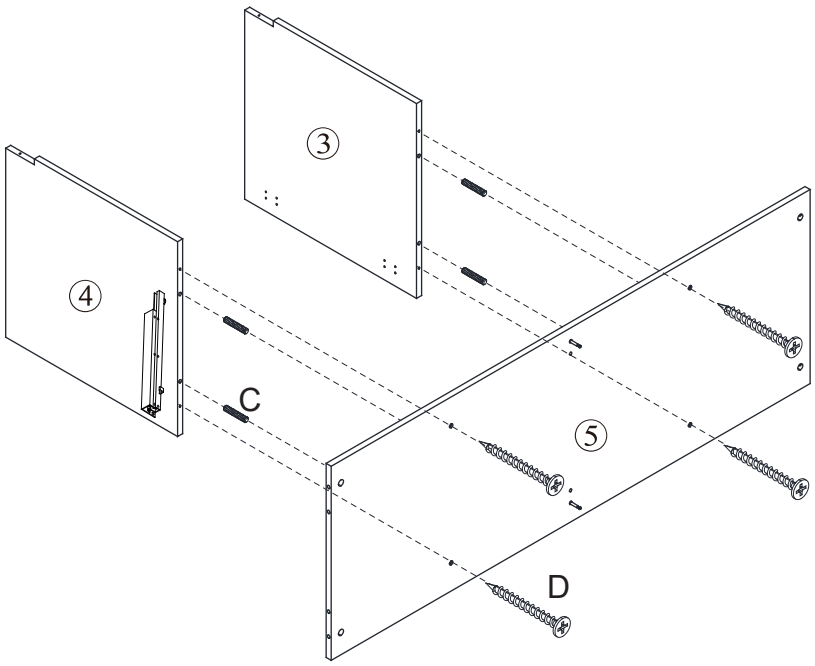


Φ8x30mm	Φ4x35mm
C x 4	D x 4


Step 4

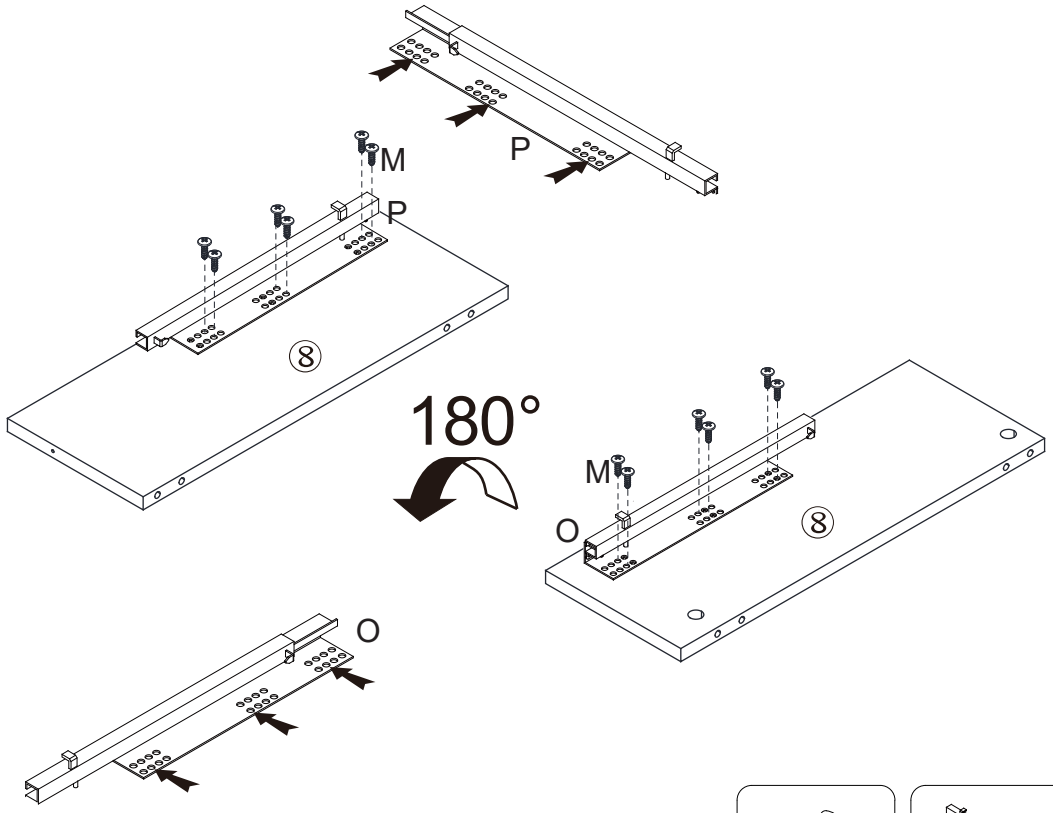

Φ4x14mm		
M x 12	O x 1	P x 1

Step 5

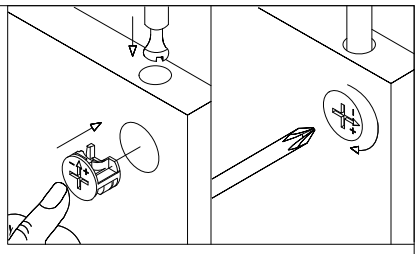

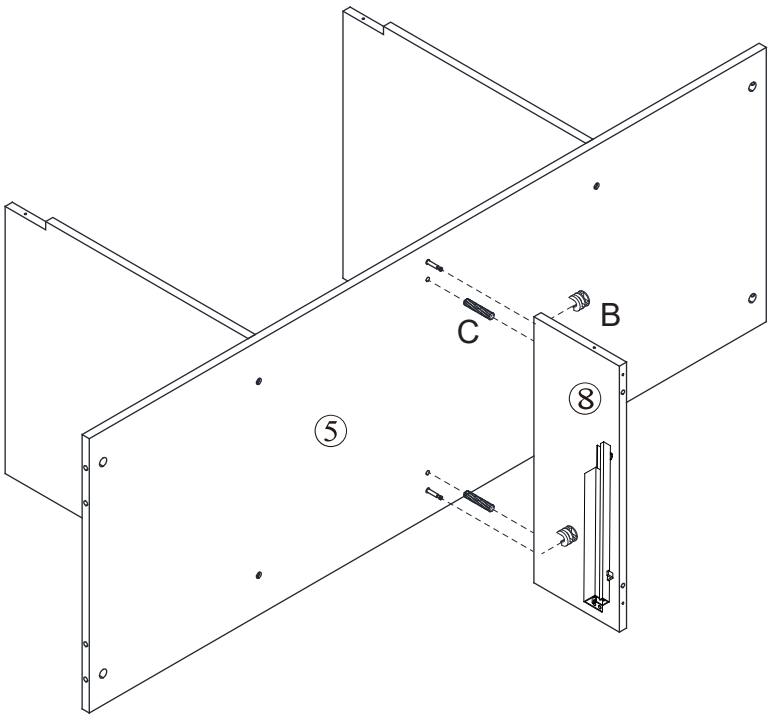





Φ8x30mm
C x 2



Φ15x10mm
B x 2

Step 6

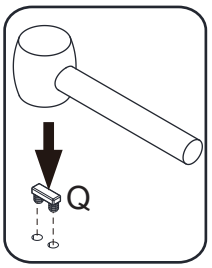

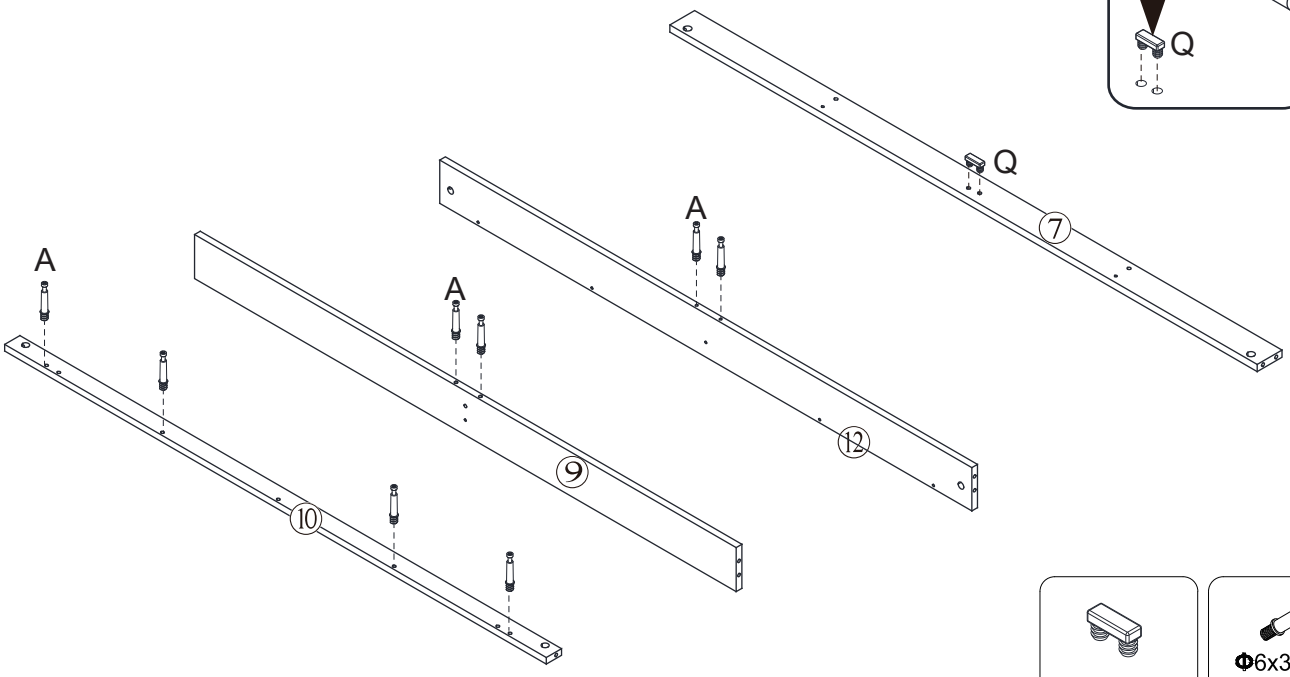



Q x 1



Φ6x35mm
A x 8

Step 7

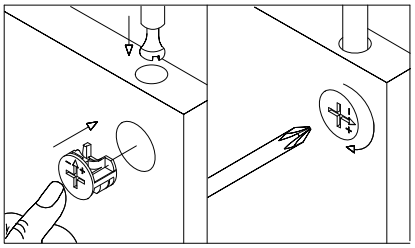

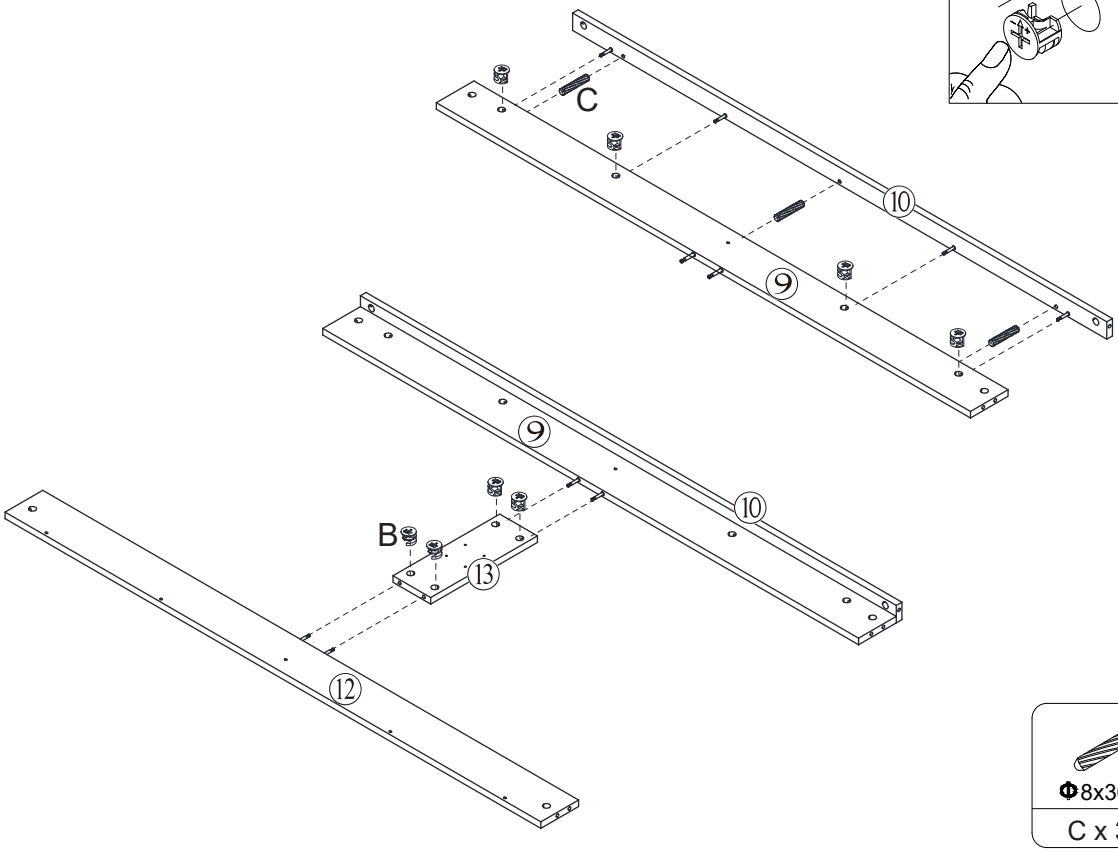

Φ8x30mm


C x 3



Φ15x10mm

B x 8

Step 8

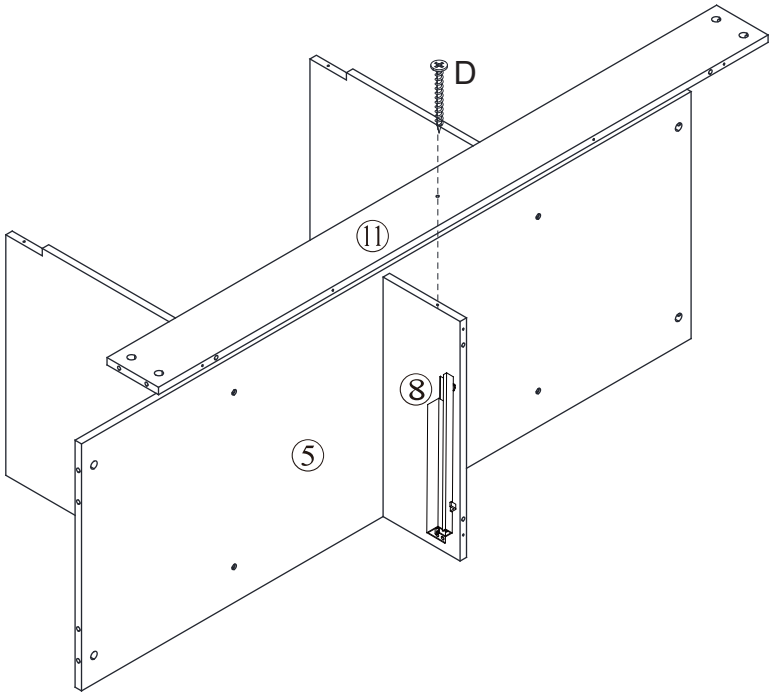




Φ4x35mm


D x 1


Step 9

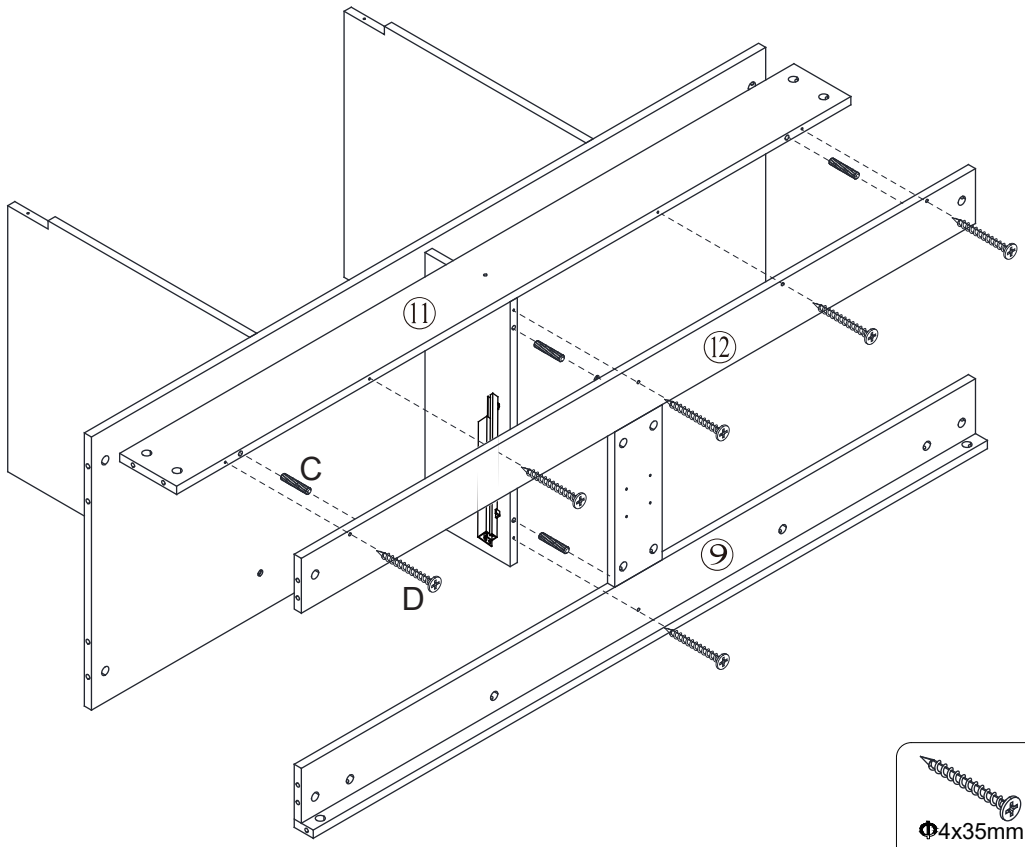

Φ4x35mm	Φ8x30mm
D x 6	C x 4


Step 10

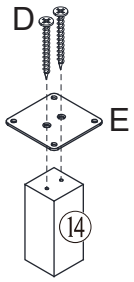

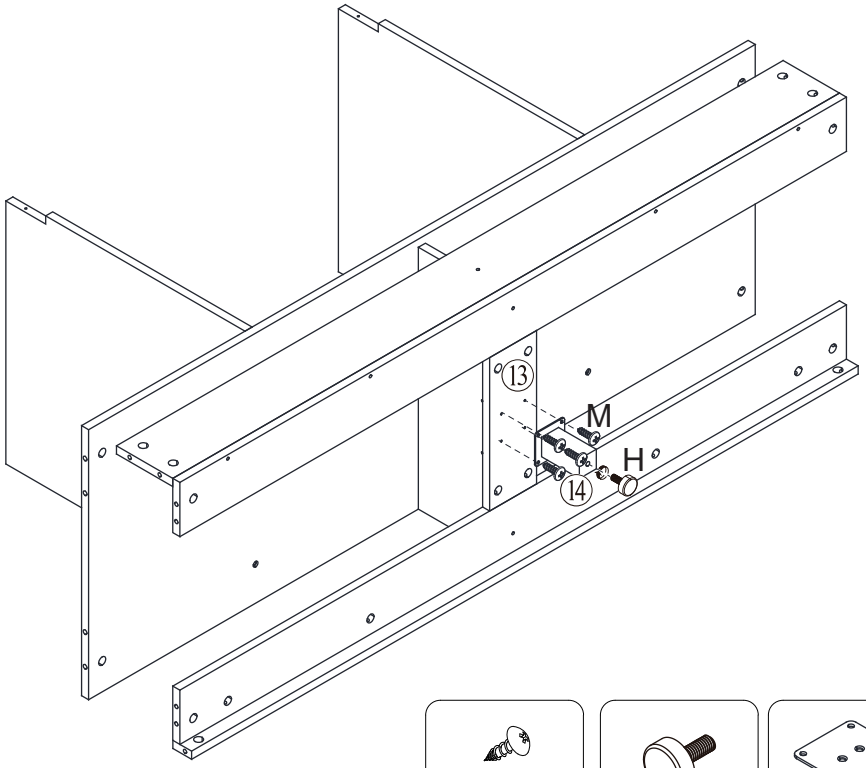


Φ4x14mm			Φ4x35mm
M x 4	H x 1	E x 1	D x 2


Step 11

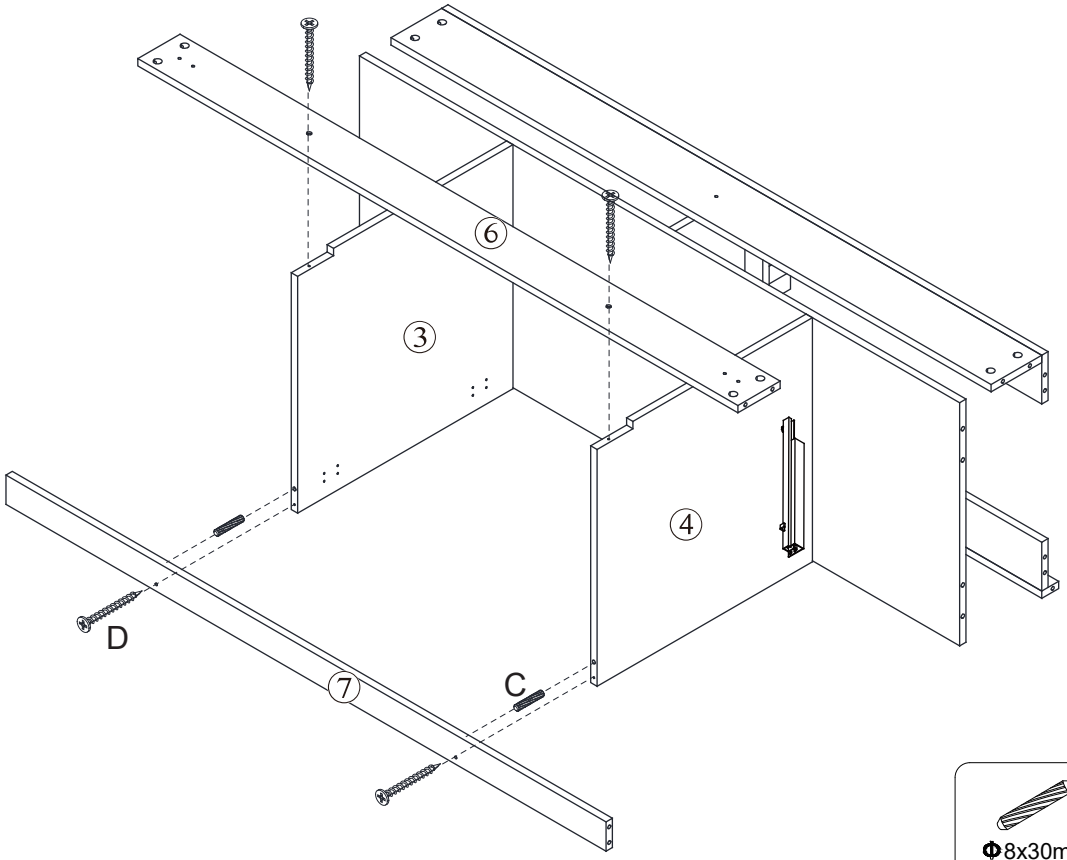

Φ8x30mm	Φ4x35mm
C x 2	D x 4


Step 12

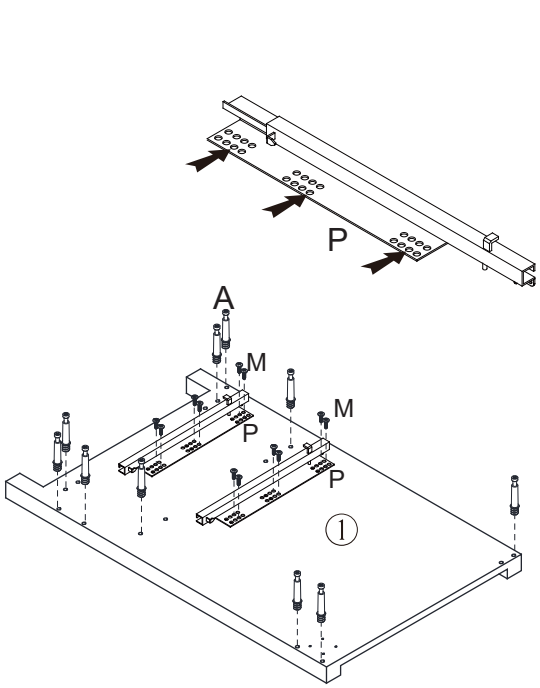


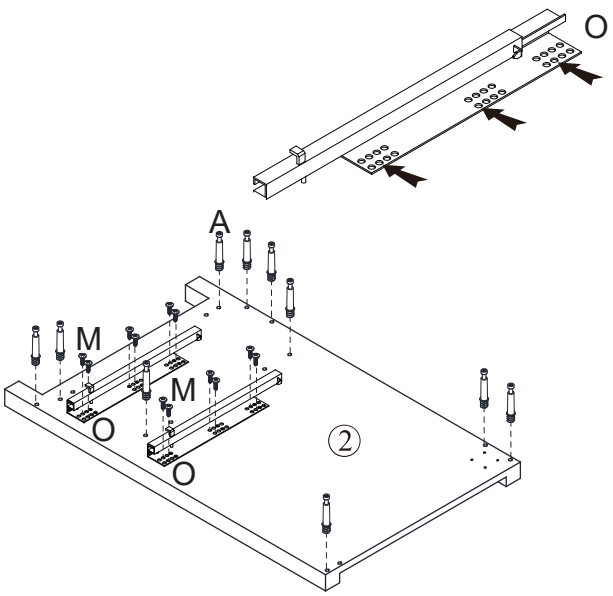

Φ6x35mm	Φ4x14mm		
A x 20	M x 24	O x 2	P x 2


Step 13

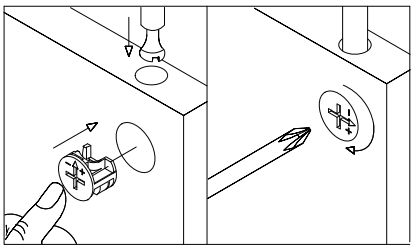


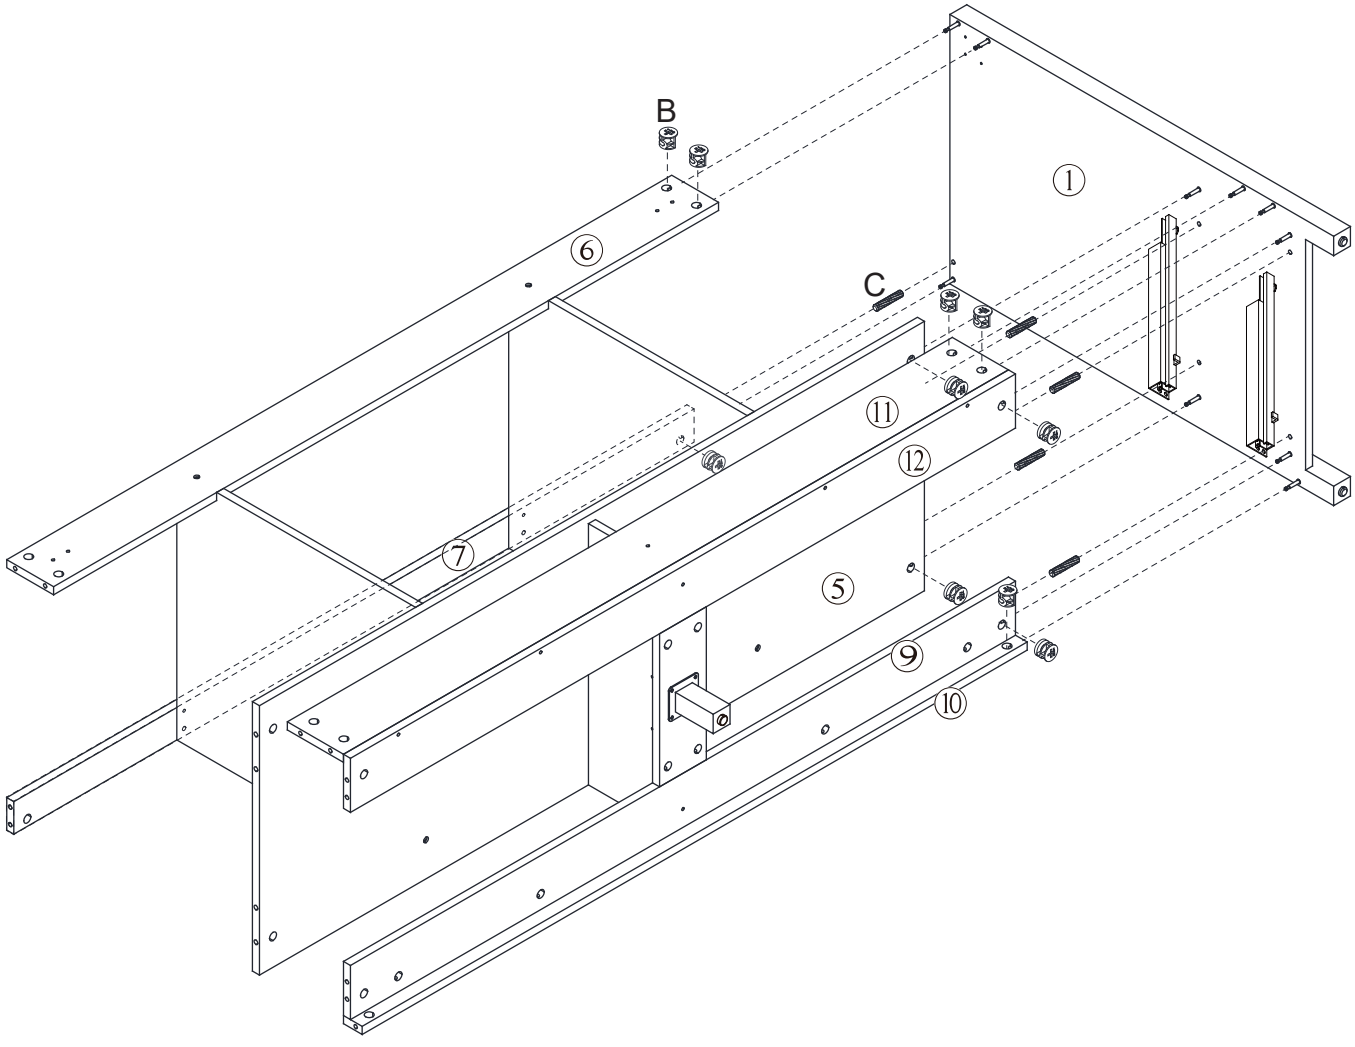

Φ8x30mm	Φ15x10mm
C x 5	B x 10


Step 14

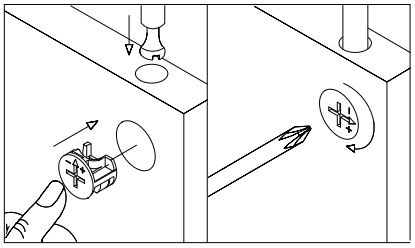


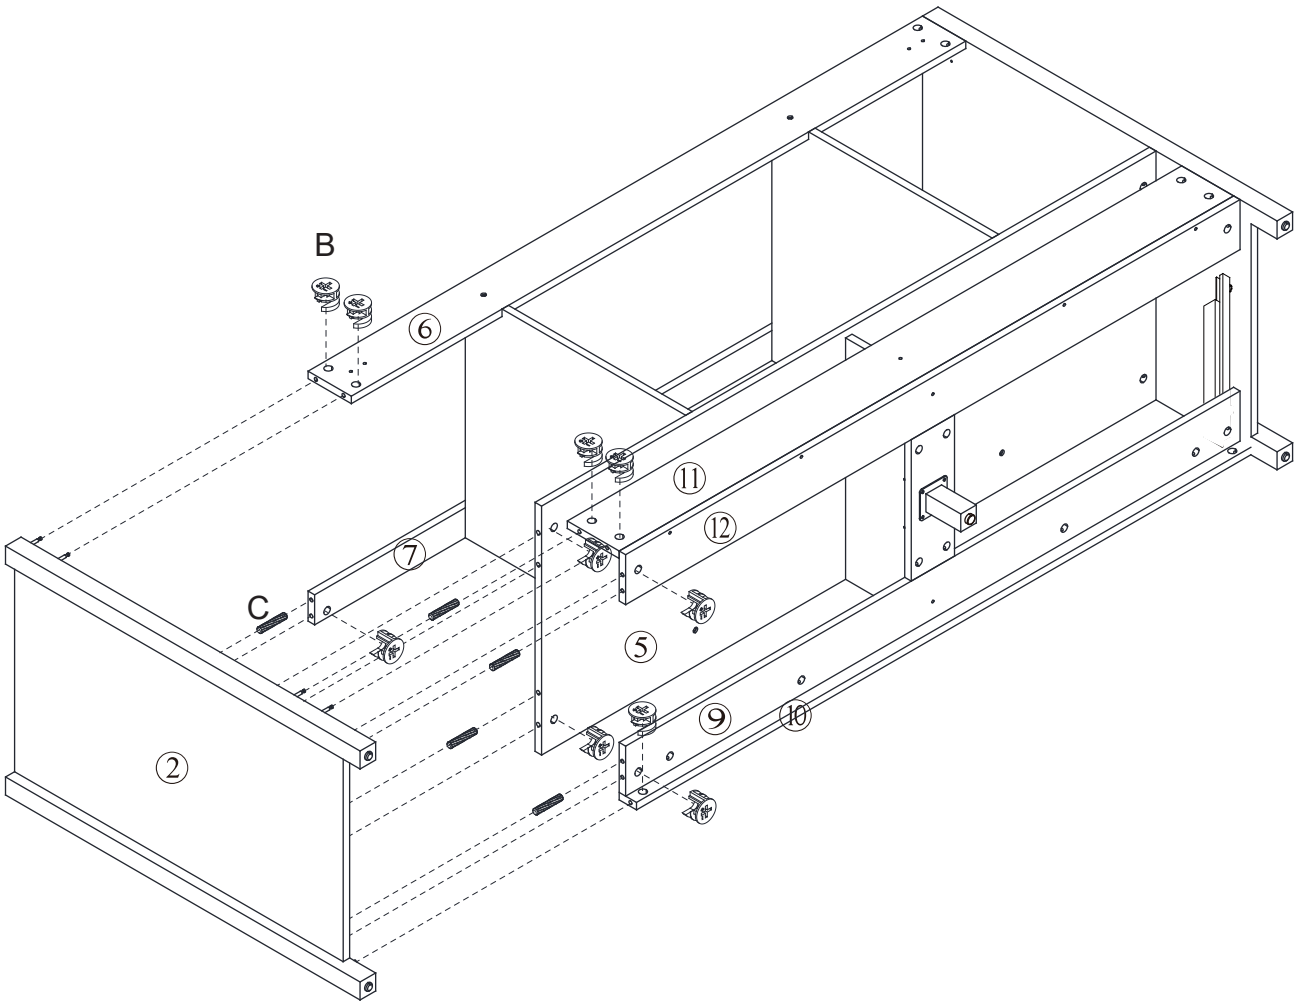


Φ8x30mm	Φ15x10mm
C x 5	B x 10

Step 15

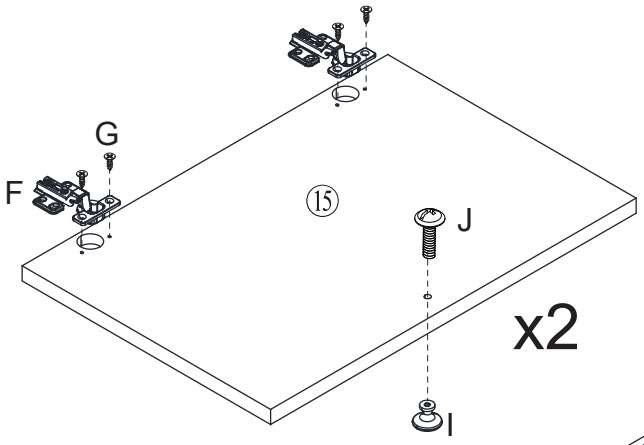

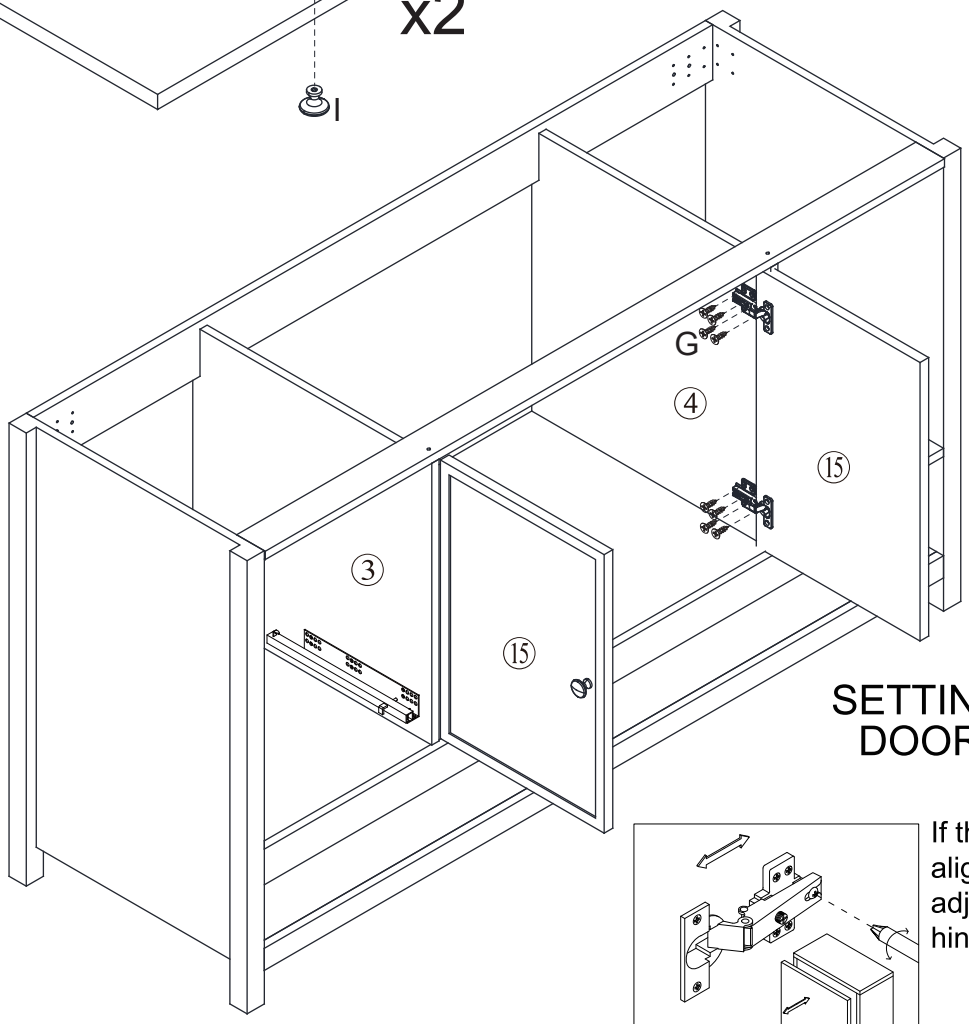

SETTINGS DOORS

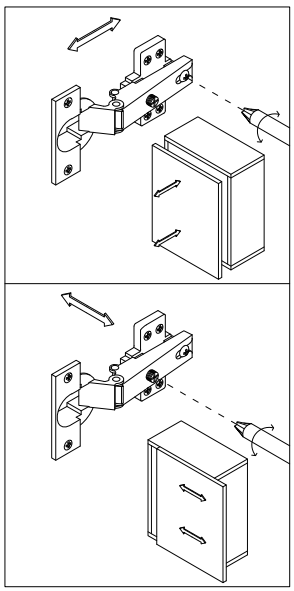



If the hinge holes are not aligned, you can try adjusting the front and rear hinges.


If the door gap is large,you can adjust the hinges left and right.


Φ4x14mm		M4x20mm	
G x 24	I x 2	J x 2	F x 4

Step 16

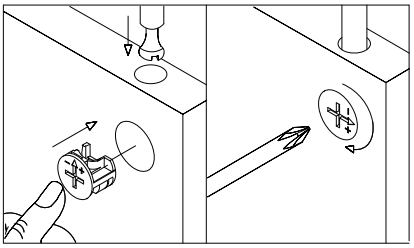

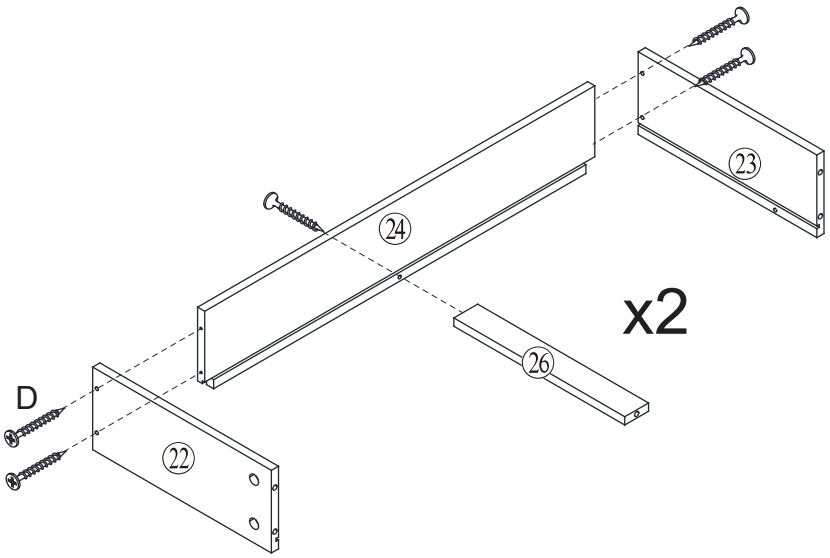


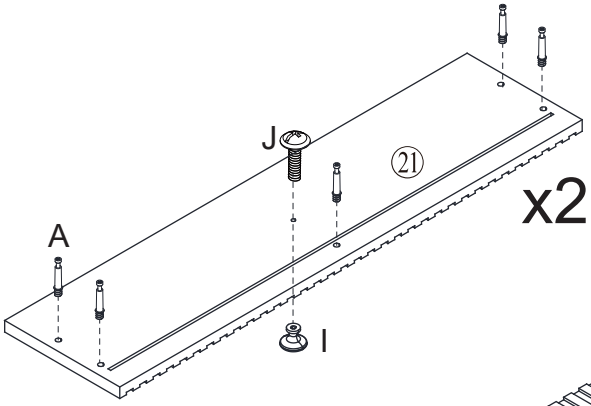

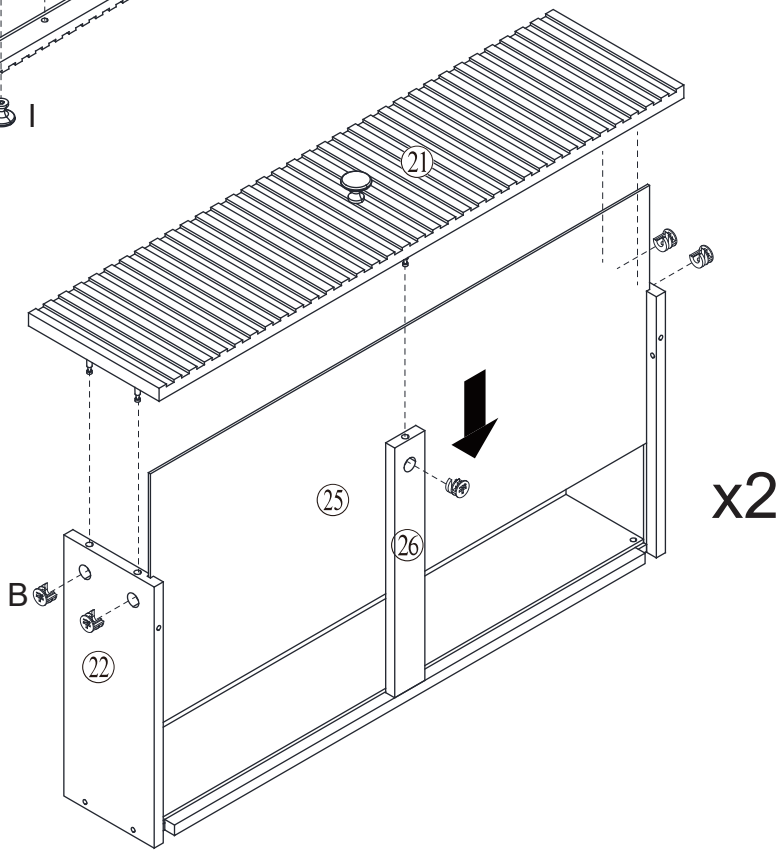


Φ6x35mm	Φ15x10mm	Φ4x35mm	M4x20mm	
A x 10	B x 10	D x 10	J x 2	I x 2

Step 17

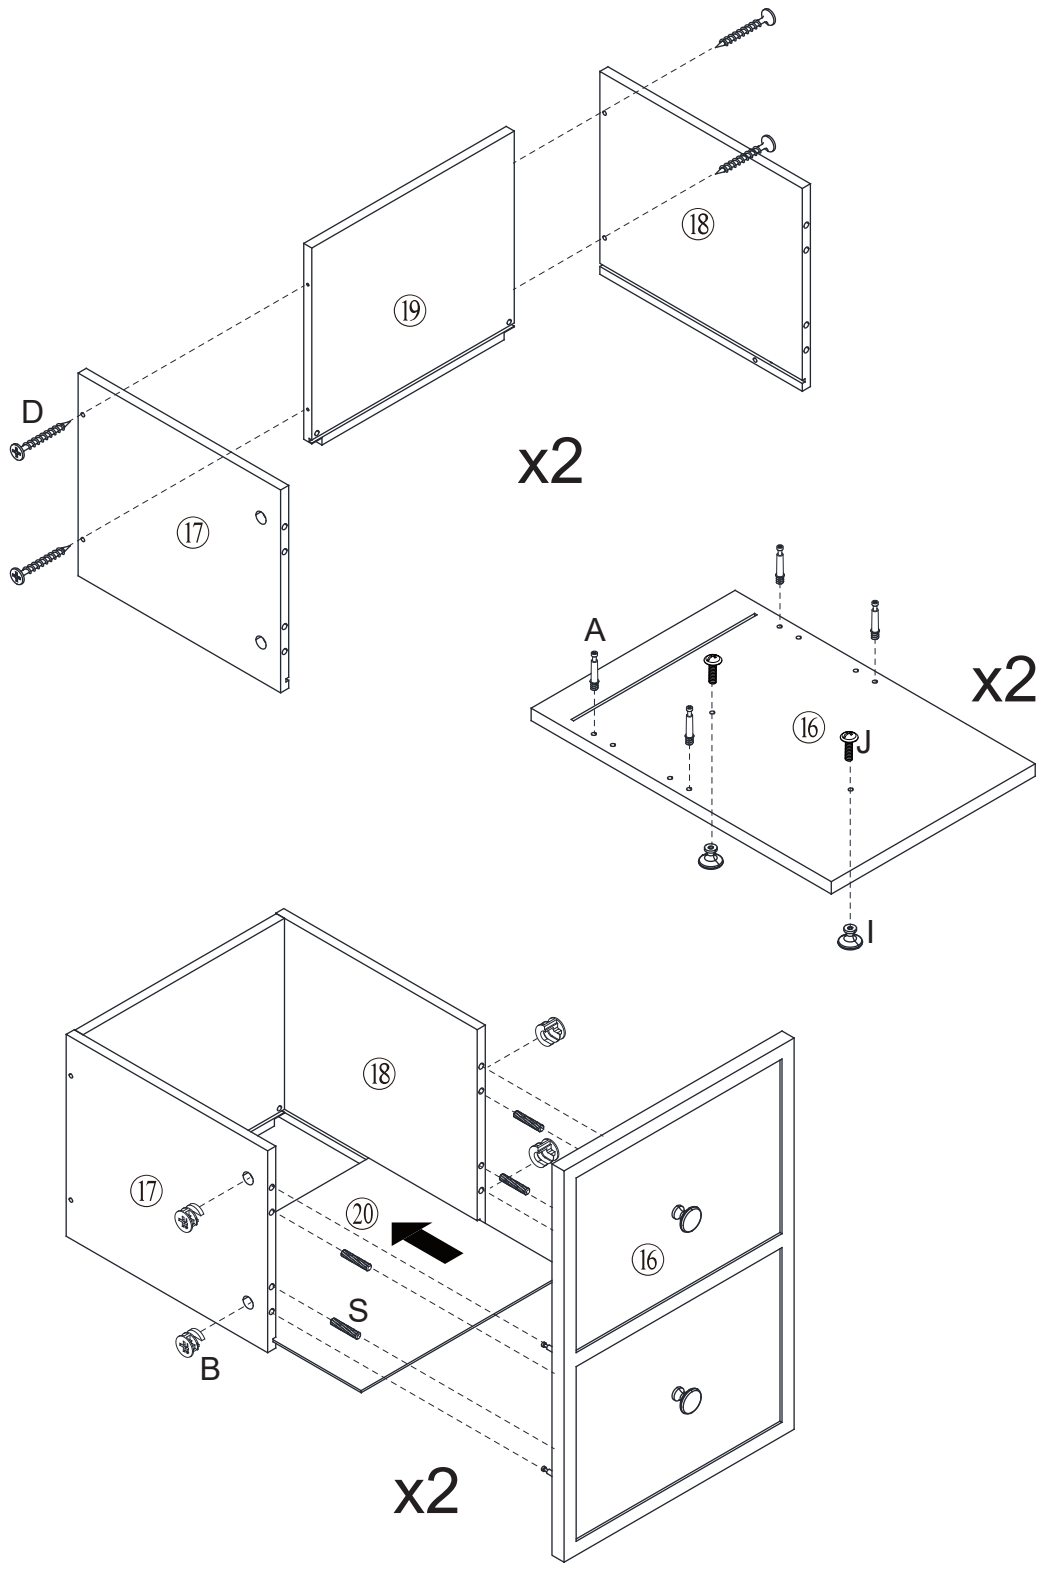


Φ6x30mm	Φ6x35mm	Φ15x10mm	Φ4x35mm	M4x20mm	
S x 8	A x 8	B x 8	D x 8	J x 4	I x 4


Step 18

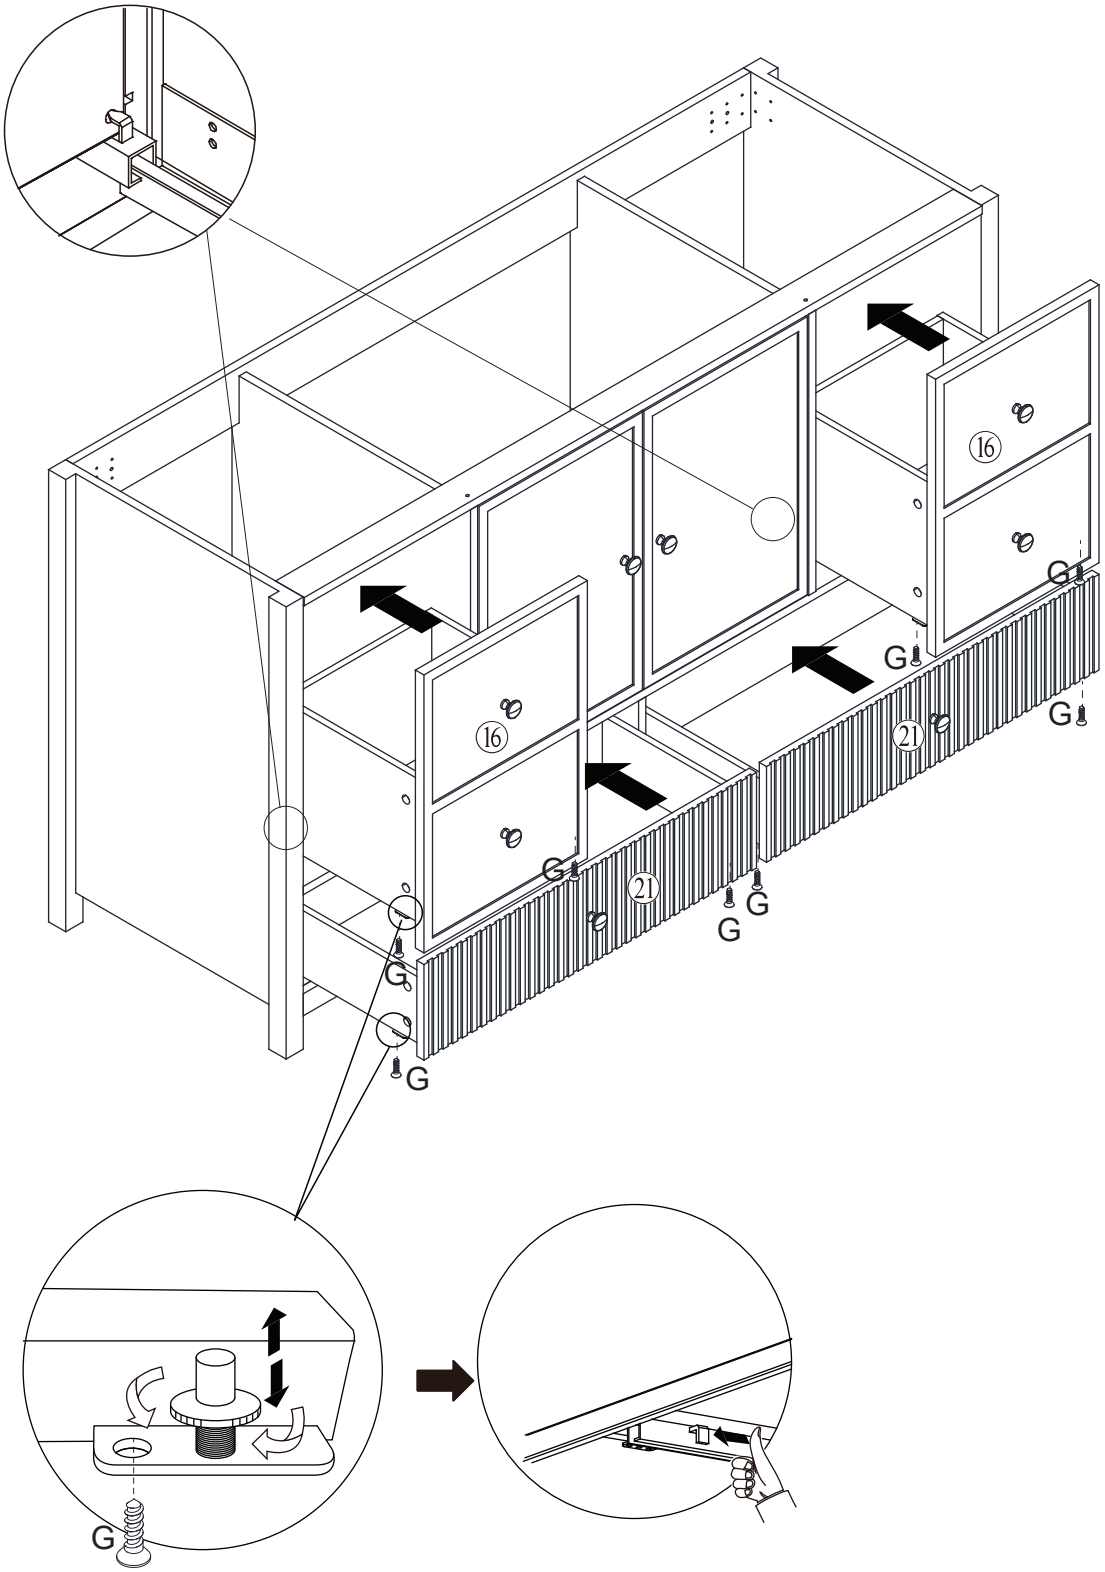



Step 19

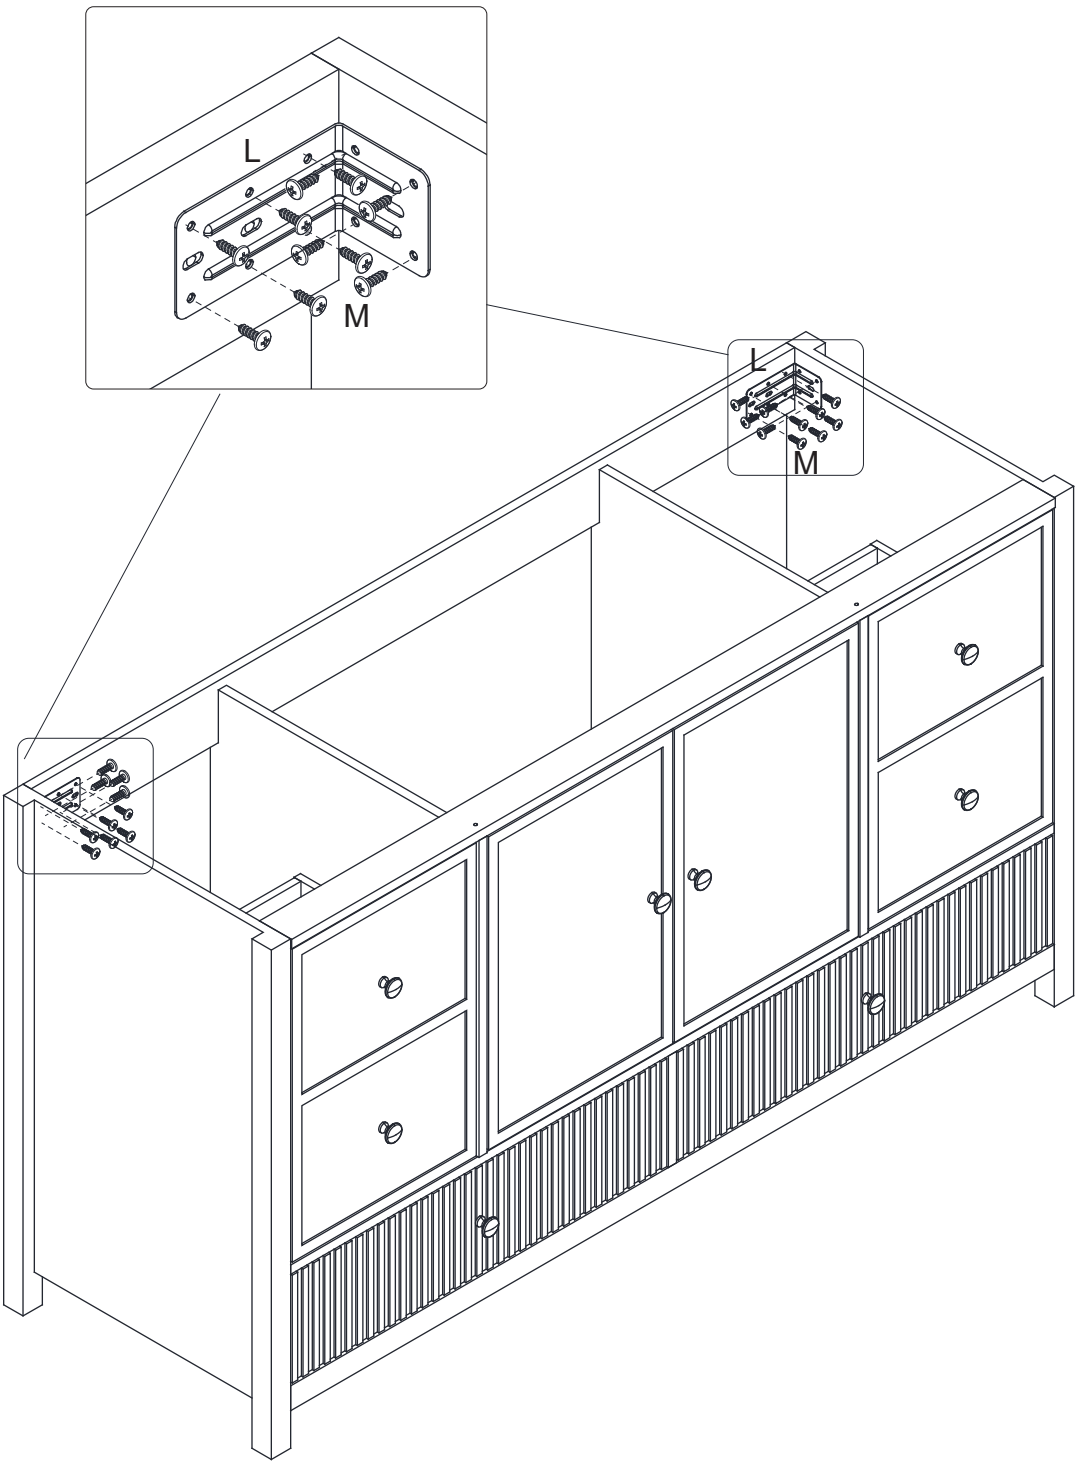




L x 2





Φ4x14mm

M x 20

Step 20

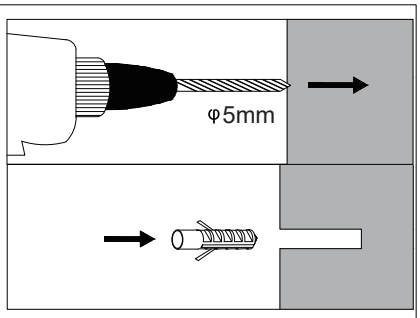


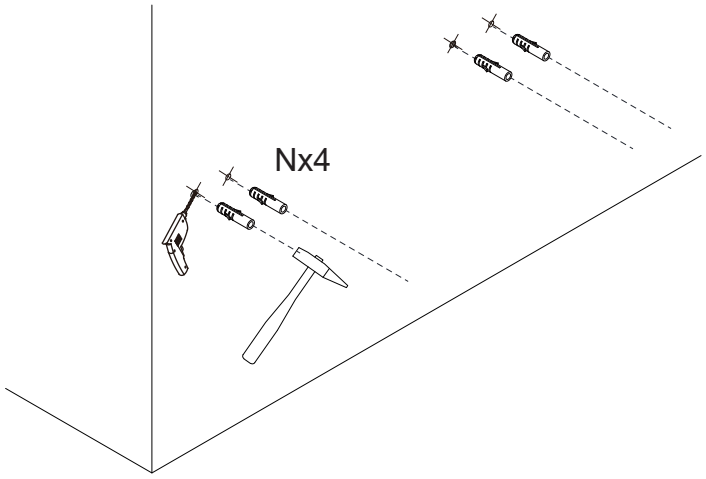

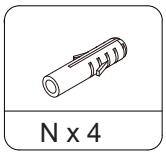

N x 4

Step 21

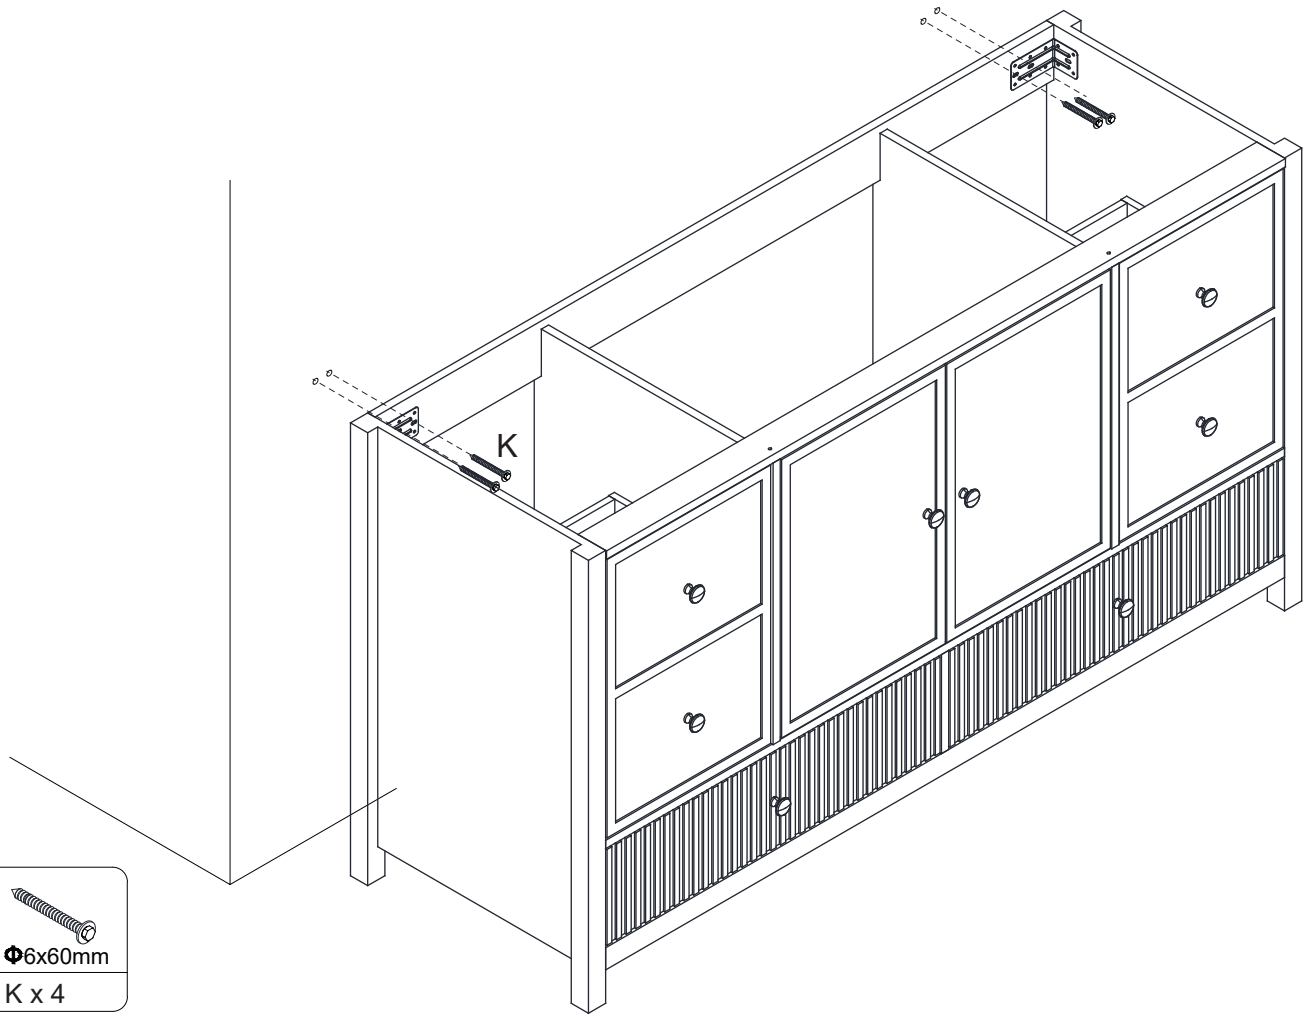

Φ6x60mm

K x 4

Step 22

