
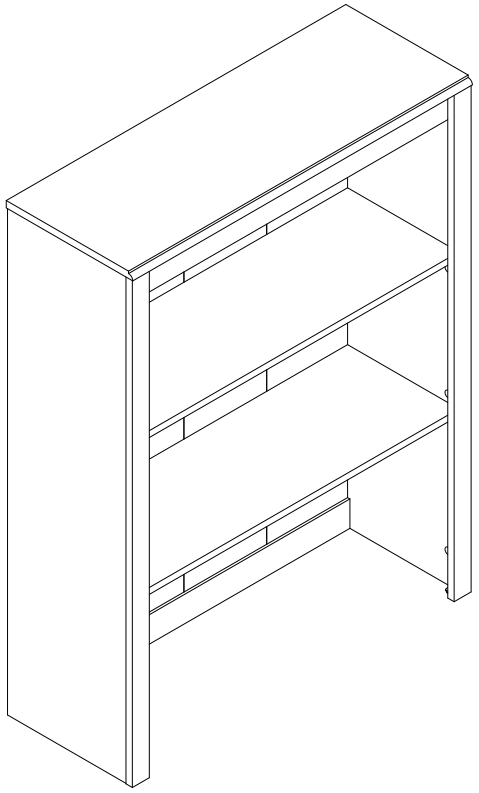



ASSEMBLY INSTRUCTIONS

IMPORTANT : please read this manual carefully before beginning assembly of this product.keep this manual for future reference.

WHAT'S IN THE BOX

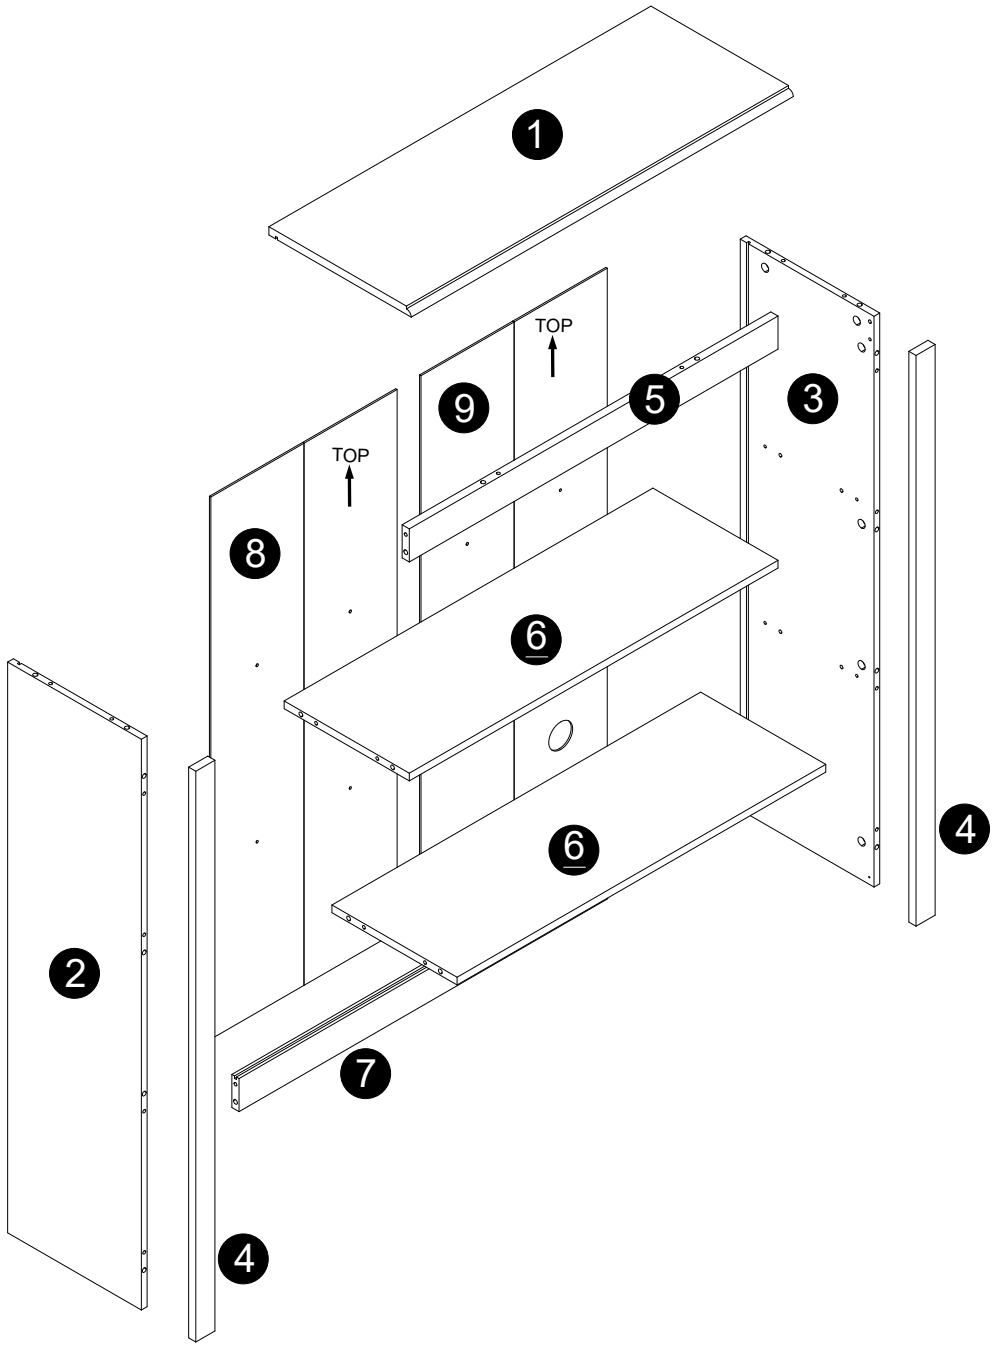

WHAT'S IN THE BOX



Wooden dowel
Ø6x30mm
A x 26




Cam bolt
Ø6x35mm
B x 26



Cam lock
Ø15x9mm
C x 26



Screw
Ø3.5*14
D x 8



Glue tube
E x 1



Plastic wedge
F x 10



Flat-head screw
Ø3x16mm
G x 10



L-bracket
H x 2



Plastic wedge
I x 2



Screw
Ø3.5x12mm
J x 8




Screw
Ø4*12
K x 2




Screw
Ø4*25
L x 2



Plastic strap
M x 2




Nut
N x 2

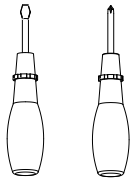


Tools Required
(Not included)

●The provided glue(E) is to secure wood dowels(A) in place .
When first inserting dowels, locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel .
Wipe away excess glue immediately.

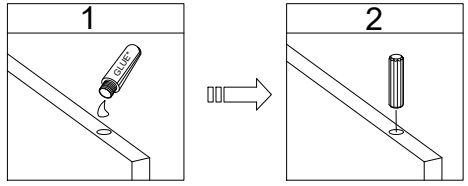


● In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together.
Wipe away excess glue immediately.

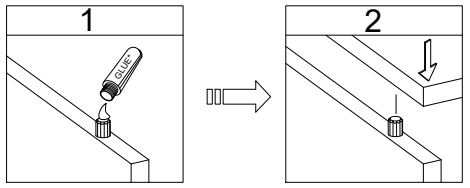




1

INSTALLATION STEPS

●Unpack the unit and confirm that you have all the hardware and required parts.
Assemble the unit on a carpeted floor or the empty carton to avoid any scratches.

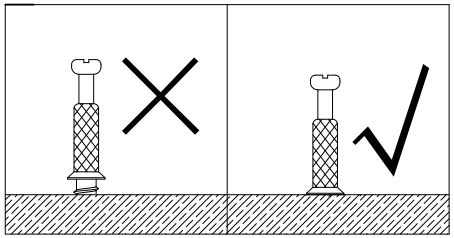

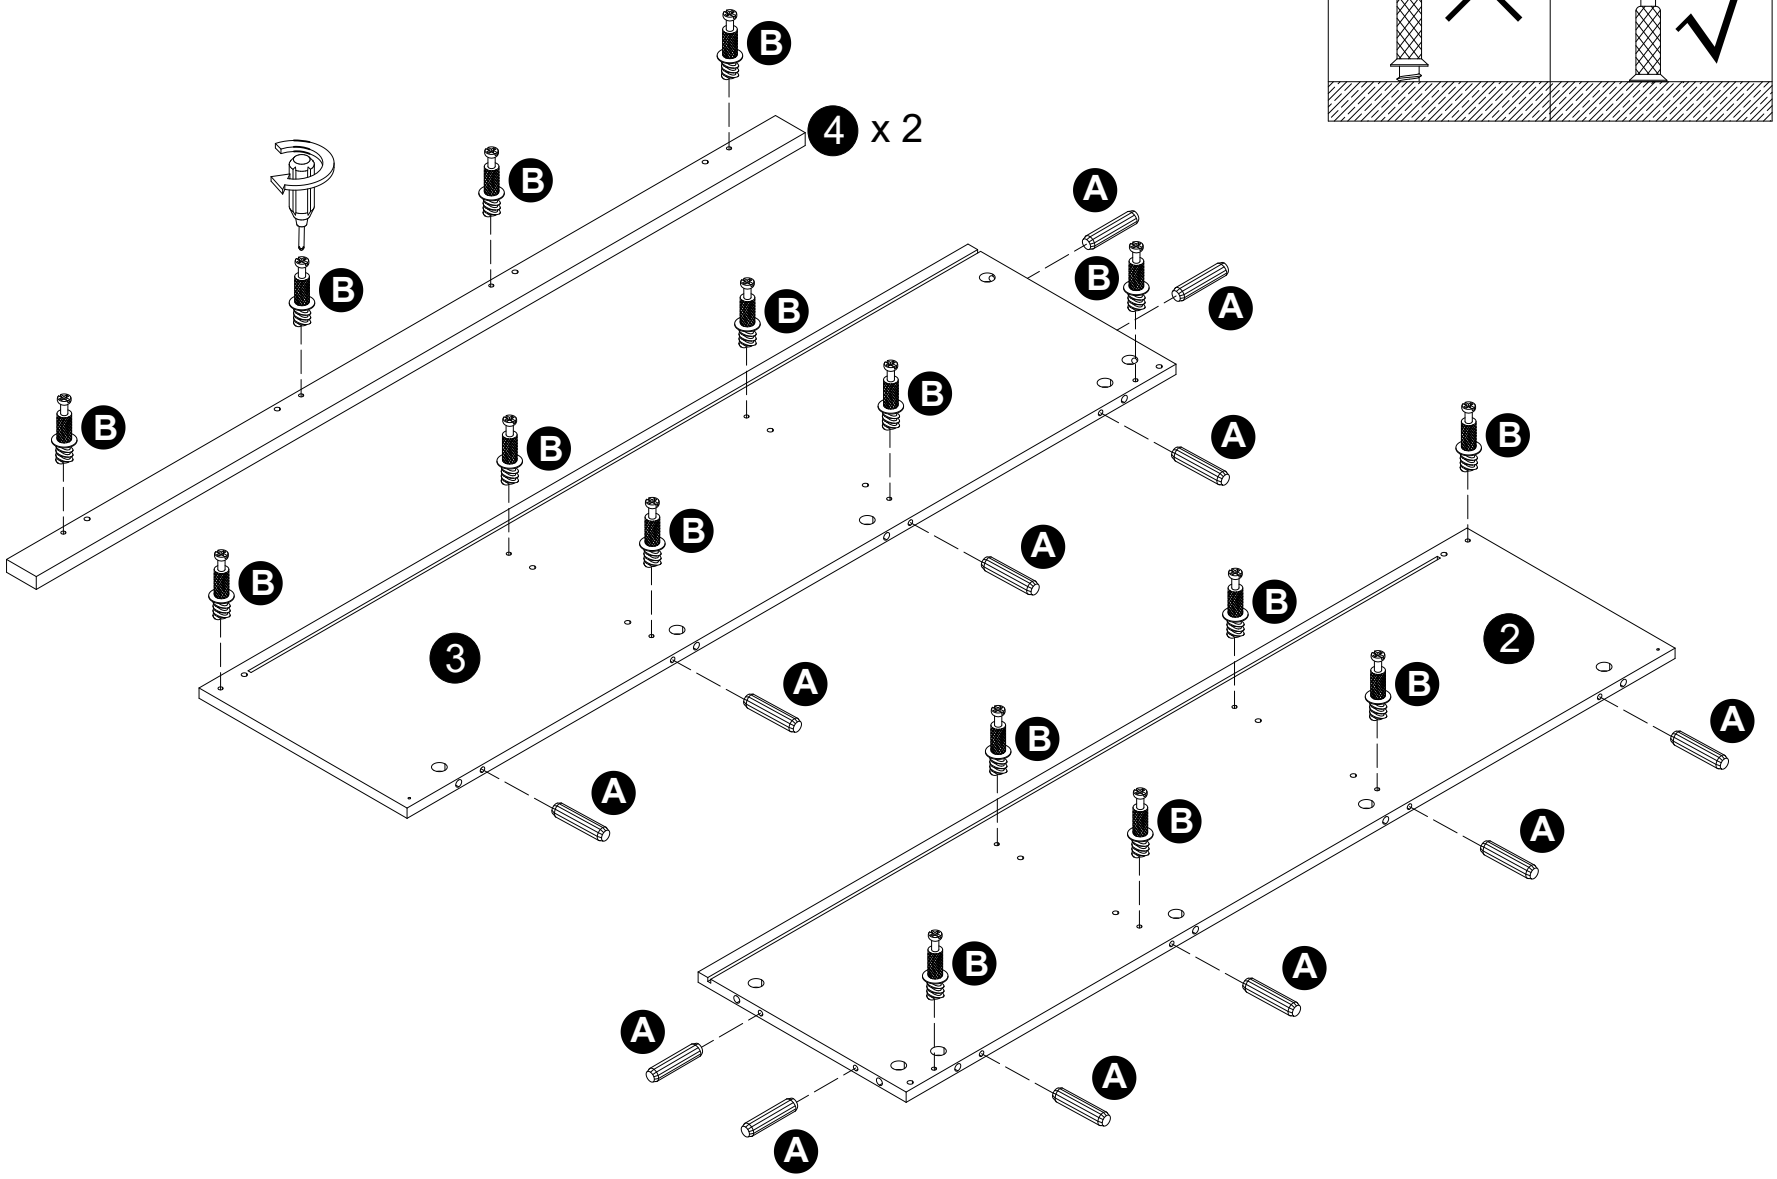



A x 12	E	B x 20
		


· Screw cam bolts (B) into panels (2,3,4).
· Insert dowels (A) into panels (2,3).

2

INSTALLATION STEPS

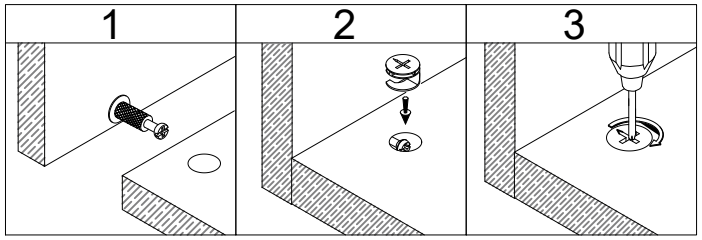

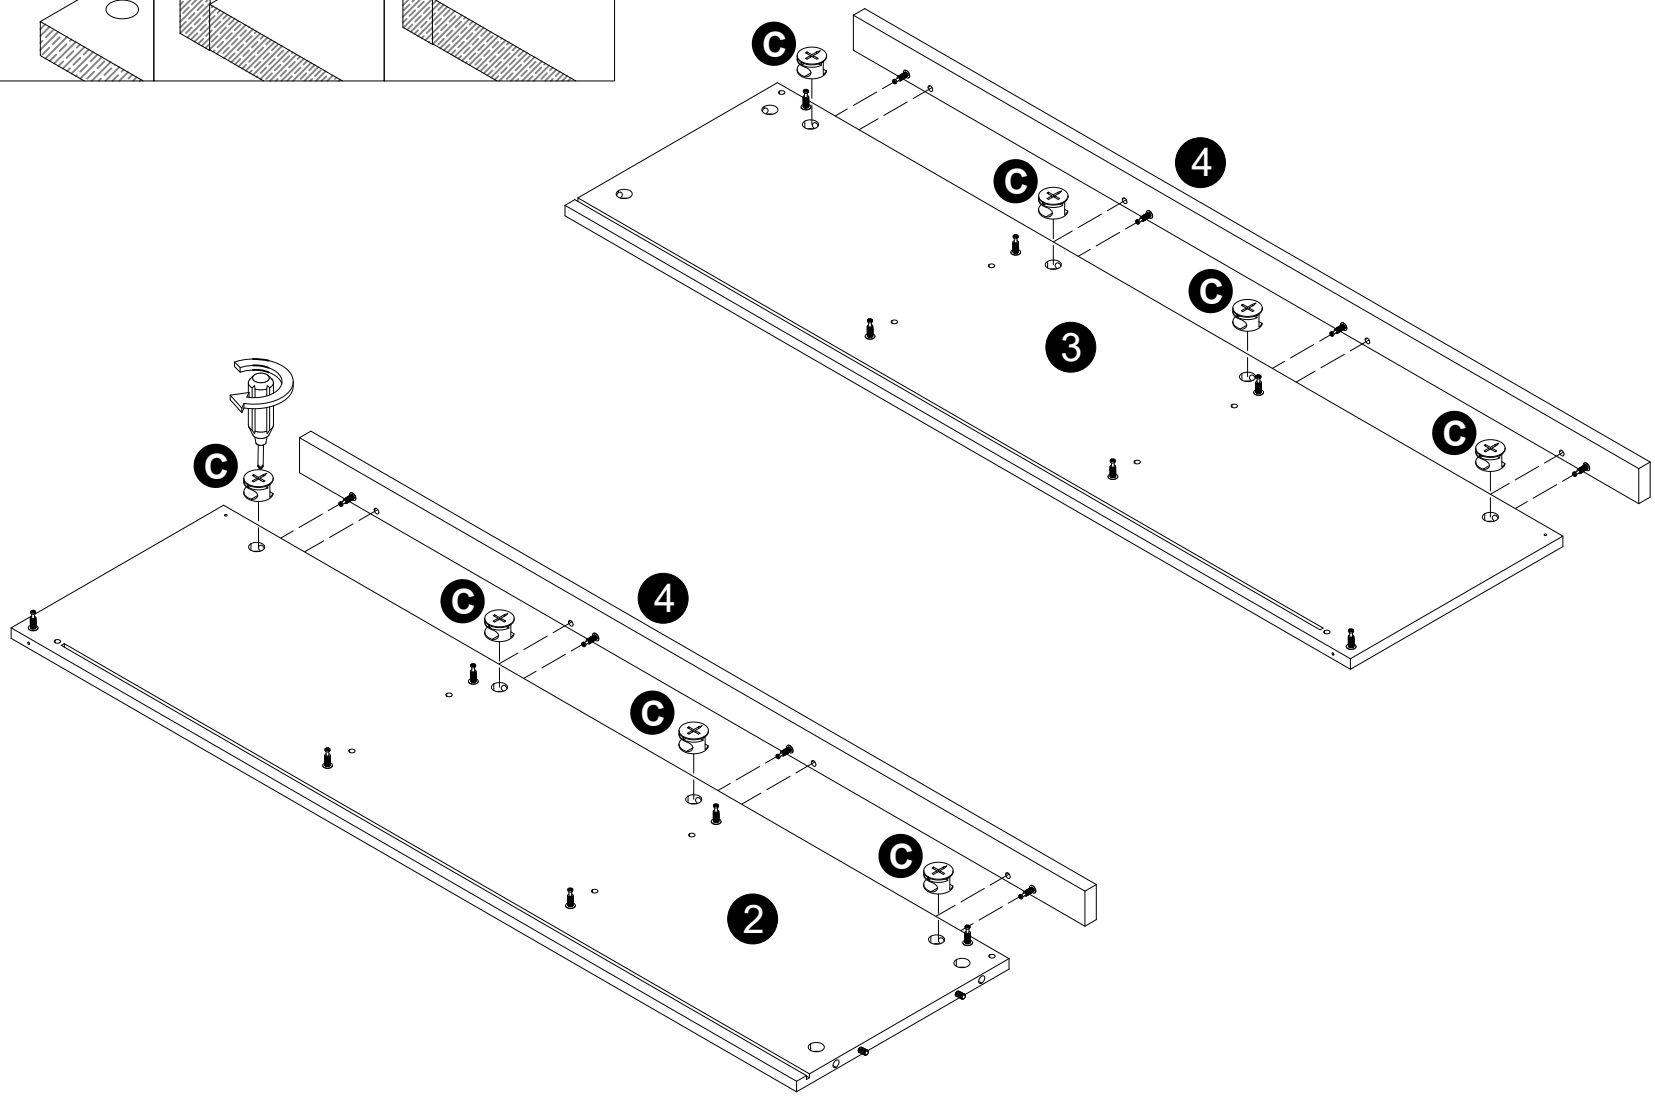



E	C x 8
	


· Attach panels (4) to panels (2,3).
· Insert and secure cam locks(C) to panels (2,3) to lock it.


3

INSTALLATION STEPS

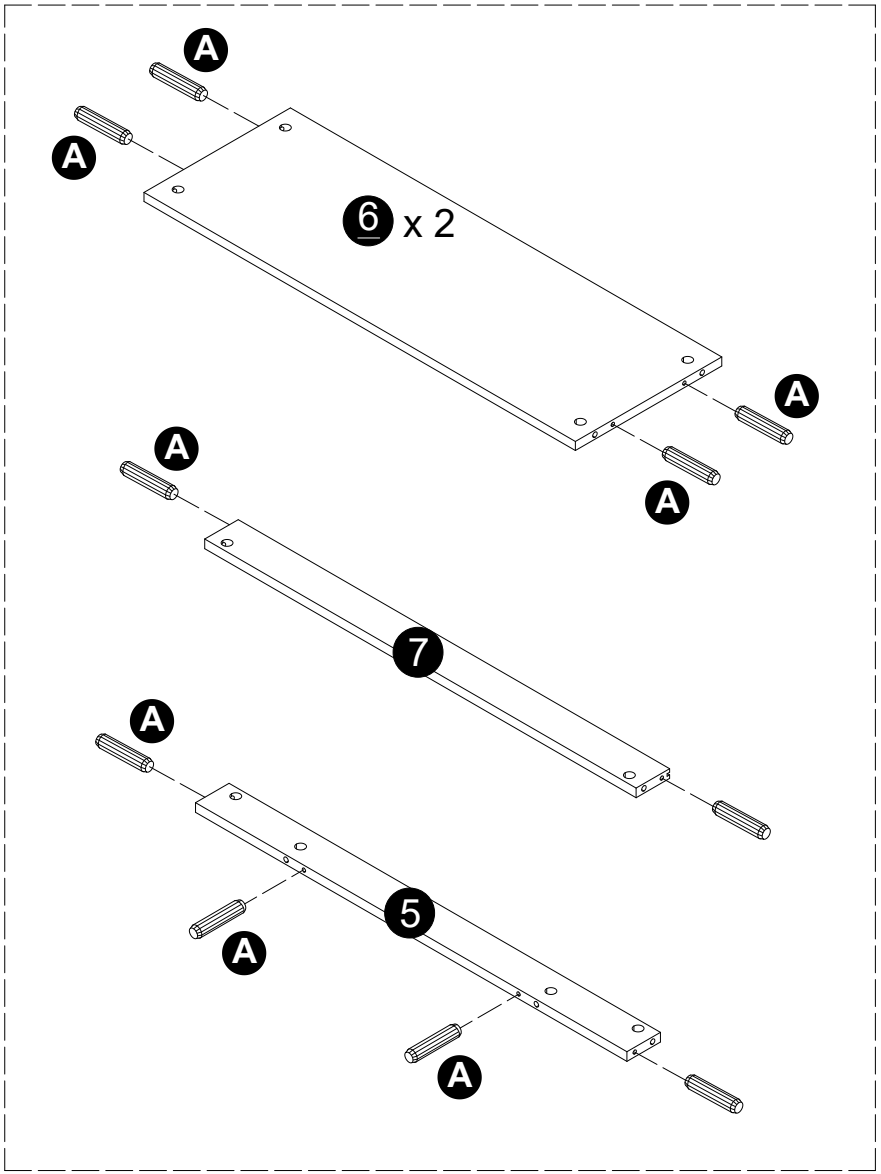

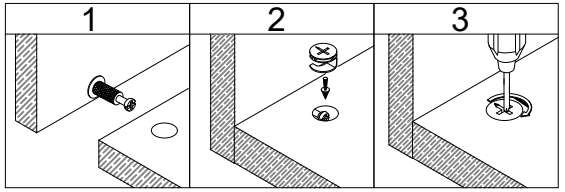

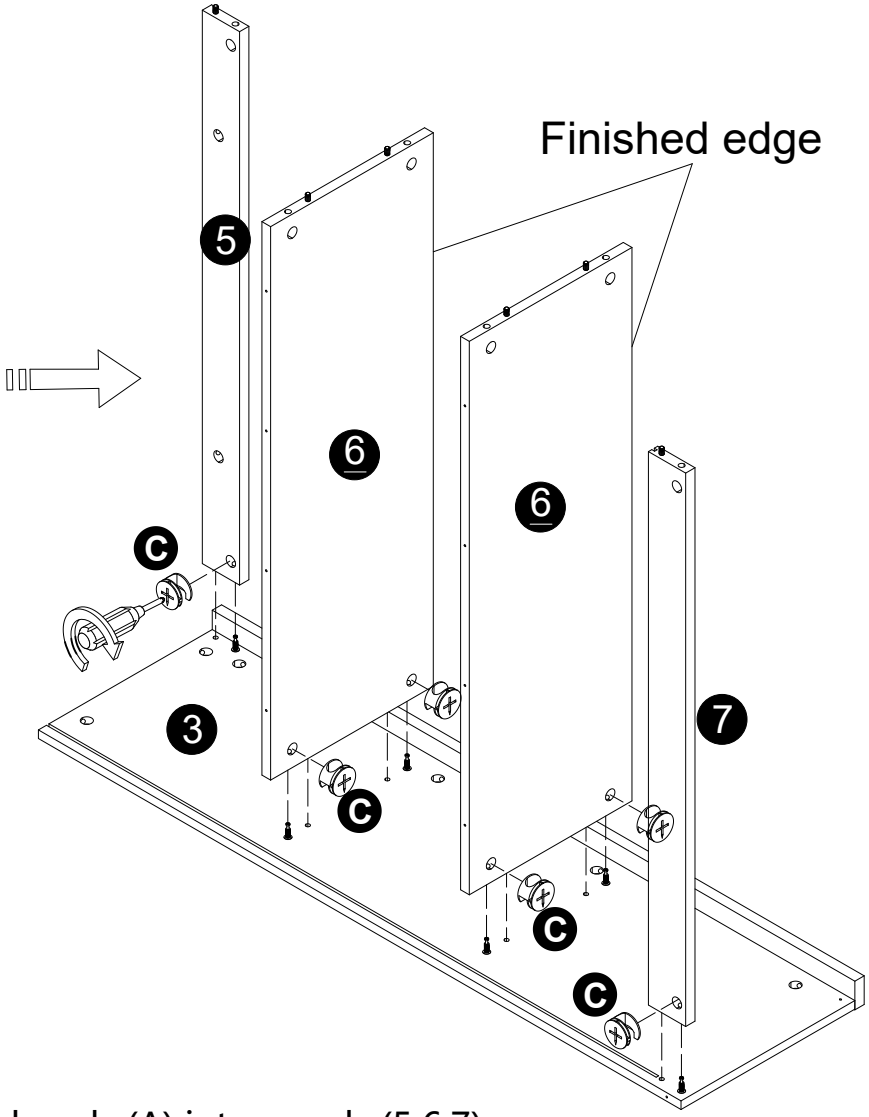


A x 14	E	C x 6
		


· Insert dowels (A) into panels (5,6,7).
· Attach panels (5,6,7) to panel (3).
· Insert and secure cam locks(C) to panels (5,6,7) to lock it.


4

INSTALLATION STEPS

2 Person Task

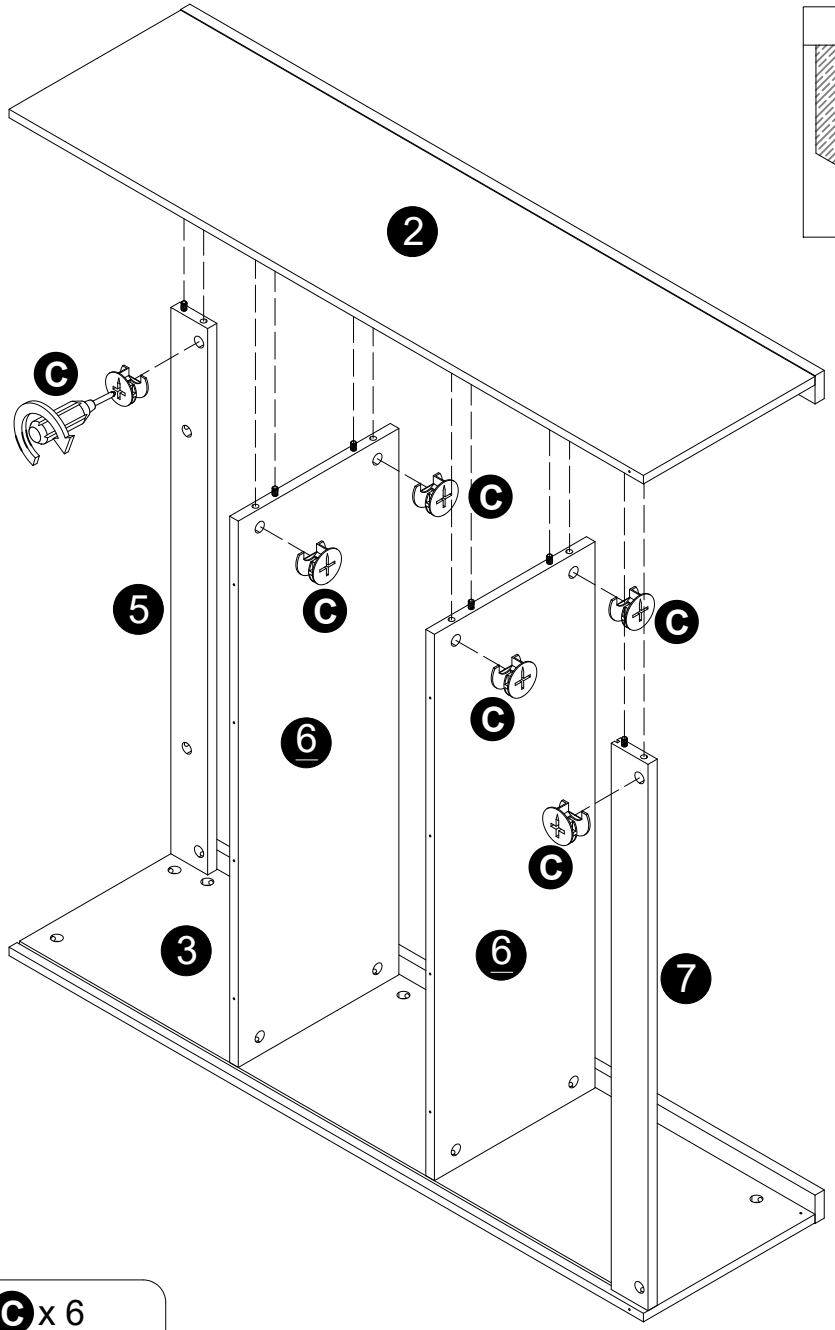

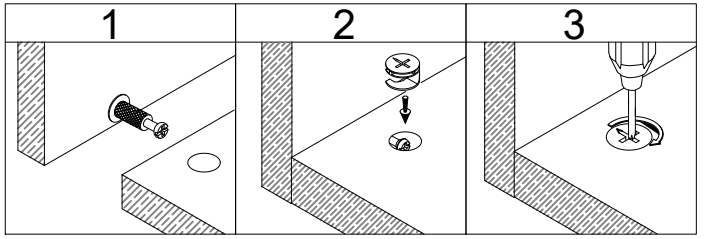


E	C x 6
	

· Attach panel (2) to panels (5,6,7).
· Insert and secure cam locks(C) to panels (5,6,7) to lock it.

5


INSTALLATION STEPS

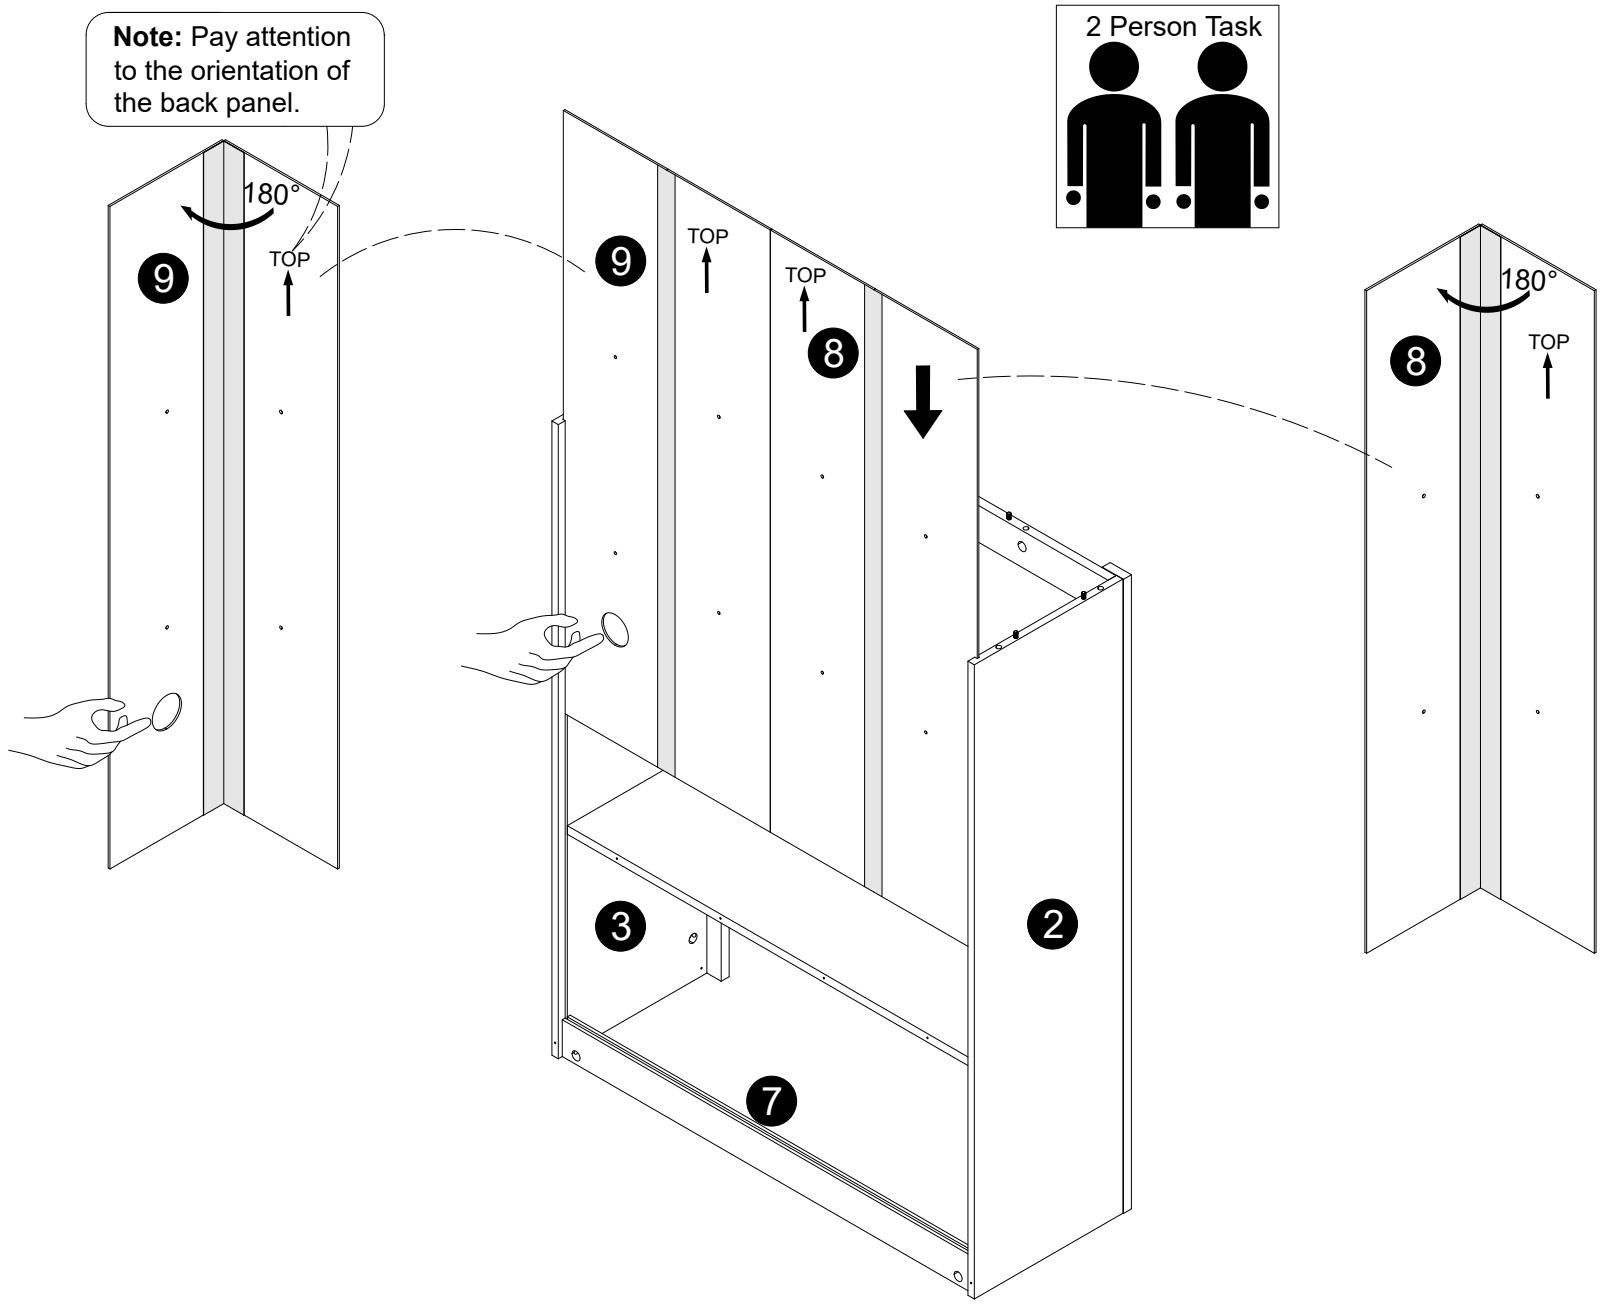



· Carefully slide parts (8,9) into place along the back of the assembly.



6

INSTALLATION STEPS

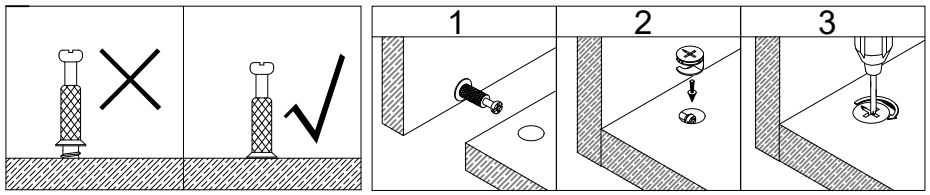

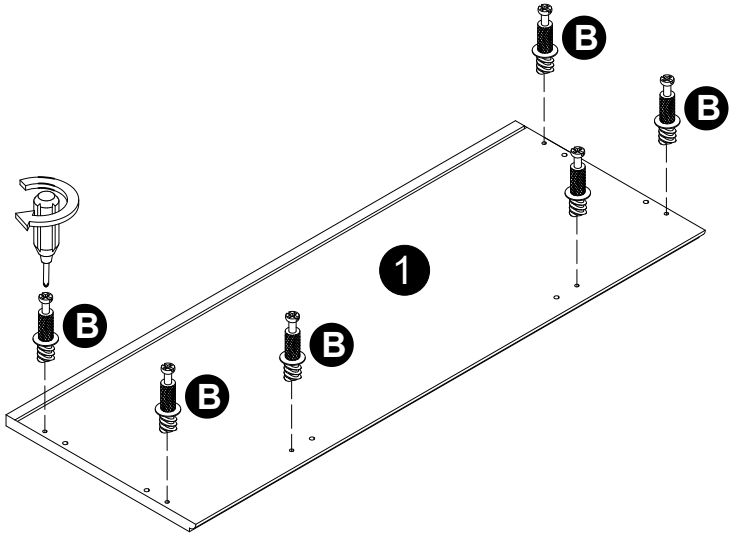

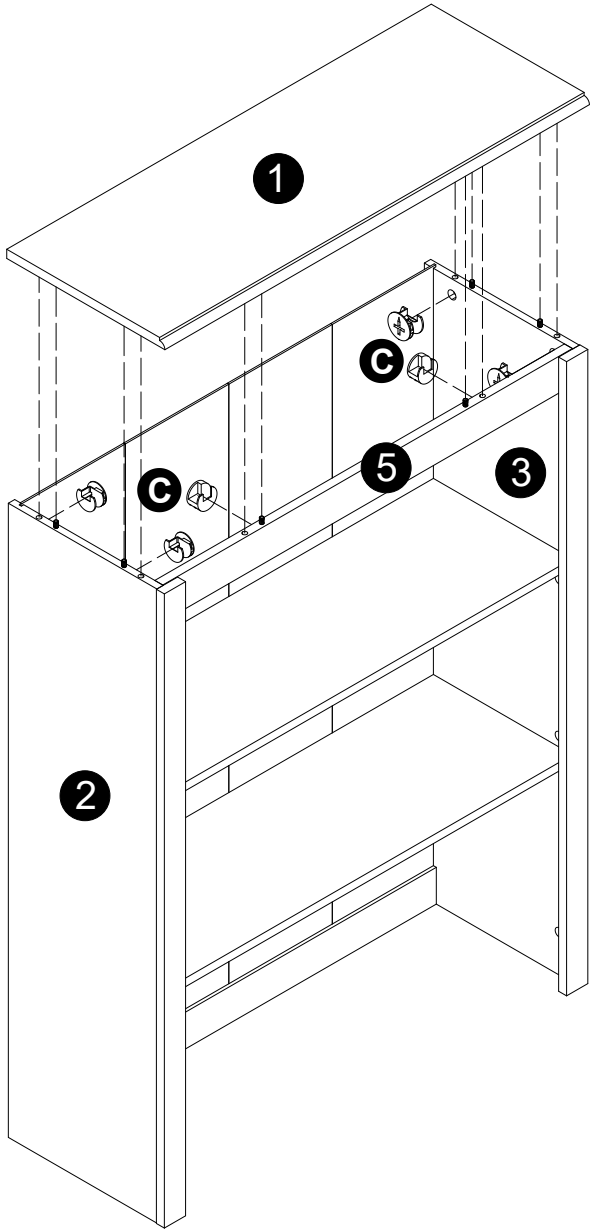


B x 6	E	C x 6
		

· Screw cam bolts (B) into panel (1).
· Attach panel (1) to panels (2,3,5).
· Insert and secure cam locks (C) to panels (2,3,5) to lock it.

7

INSTALLATION STEPS

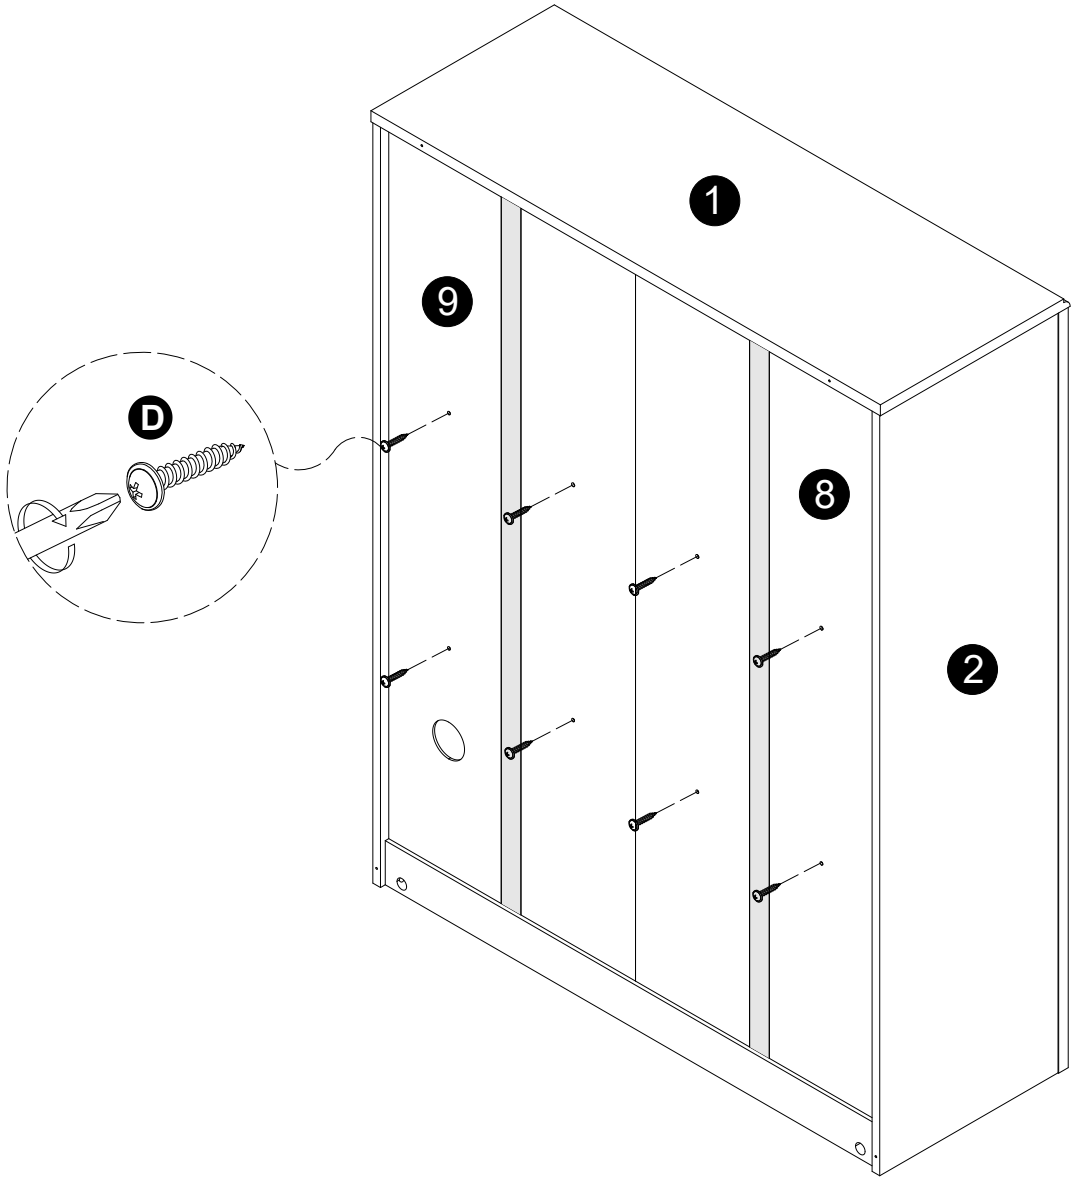

D x 8




· Attach screws (D) into panels (8,9)

8

INSTALLATION STEPS

NOTE: Ensure the cabinet body is stable, please make sure to lock the plastic wedge.

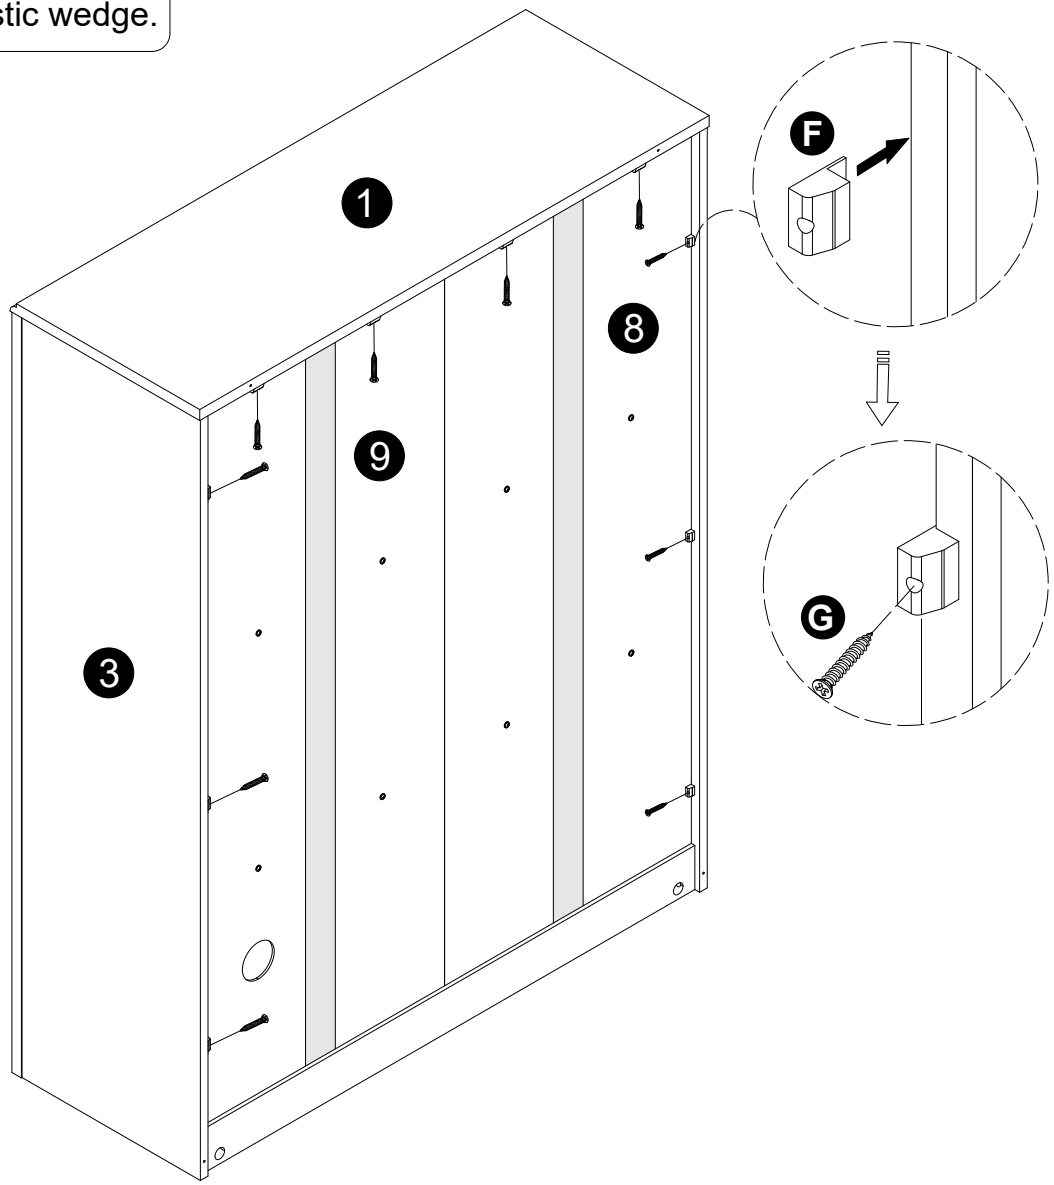


F x 10	G x 10
	

· Secure parts (F) with screws (G) as per diagram.

9

INSTALLATION STEPS

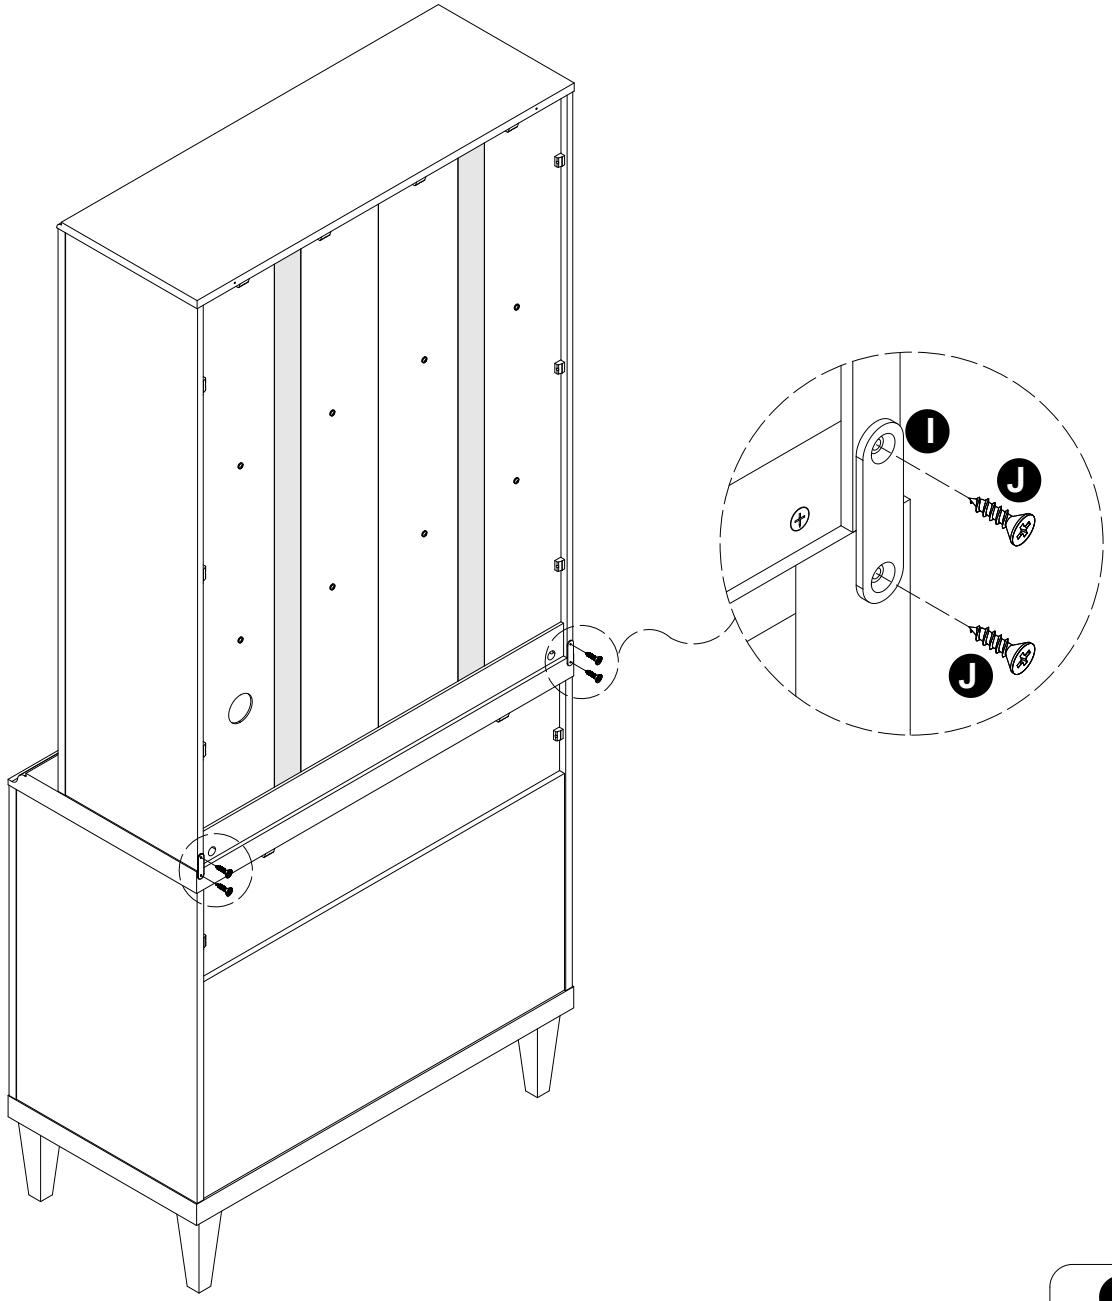


2 Person Task

· Secure parts (I) with screws (J) as per diagram.


I x 2	J x 4
	

10

INSTALLATION STEPS

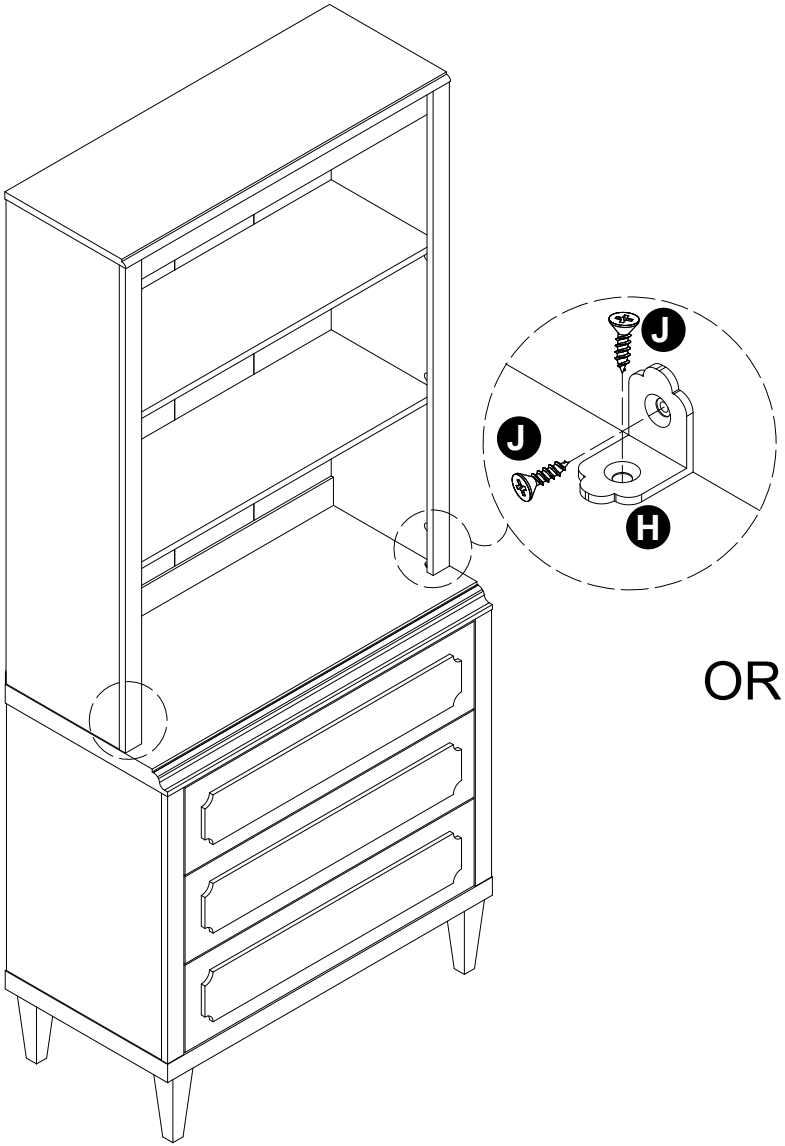

OR

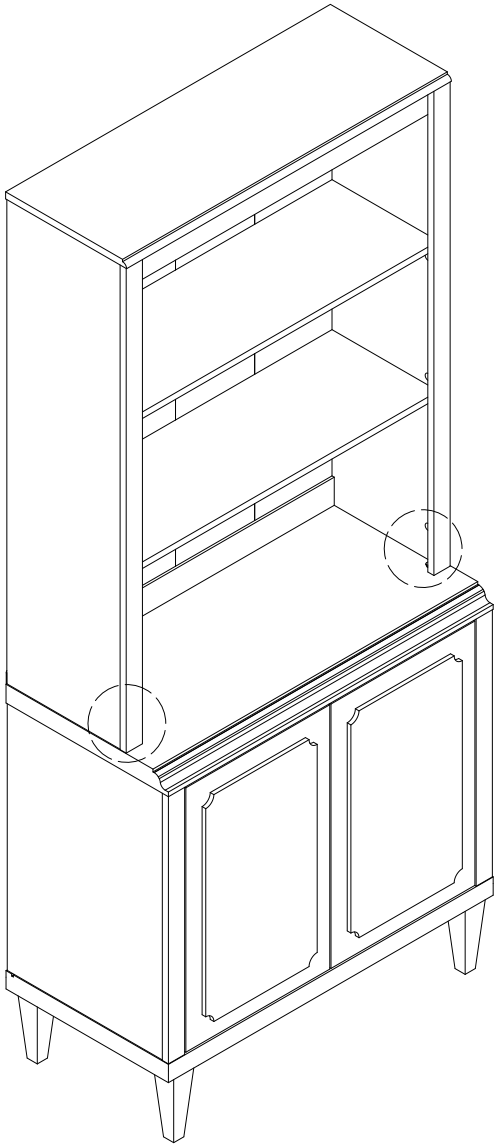


· Secure parts (H) with screws (J) as per diagram.

H x 2	J x 4
	


11

INSTALLATION STEPS


Step 1

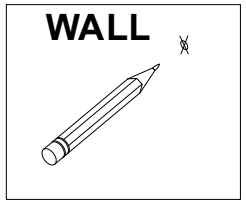


Step 2

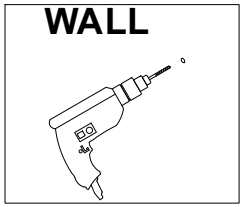


Step 3

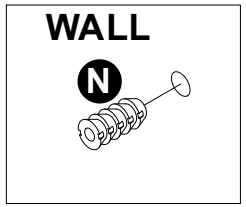

Step 4

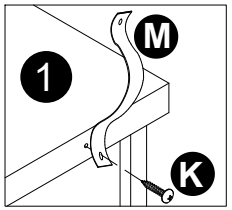

Step 5

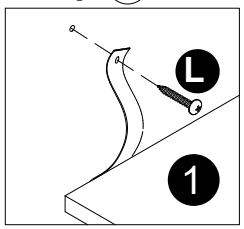

WARNING

Serious or fatal crushing injuries can occur from furniture tipover. To prevent tipover:

* Install tipover restraint provided
* place heaviest items in the lowest drawers
* Unless specifically designed to accomodate, do not set TV or other heavy objects on the top of this product
* Never allow children to climb or hang on drawers, door, or shelves.

Use of tipover restarints may only reduce, but not eliminate the risk of tipover

Tools required: Phillips screwdriver, Power Drill, 15/64” Drill Bit and Rubber Mallet.

