
Installation & Assembly

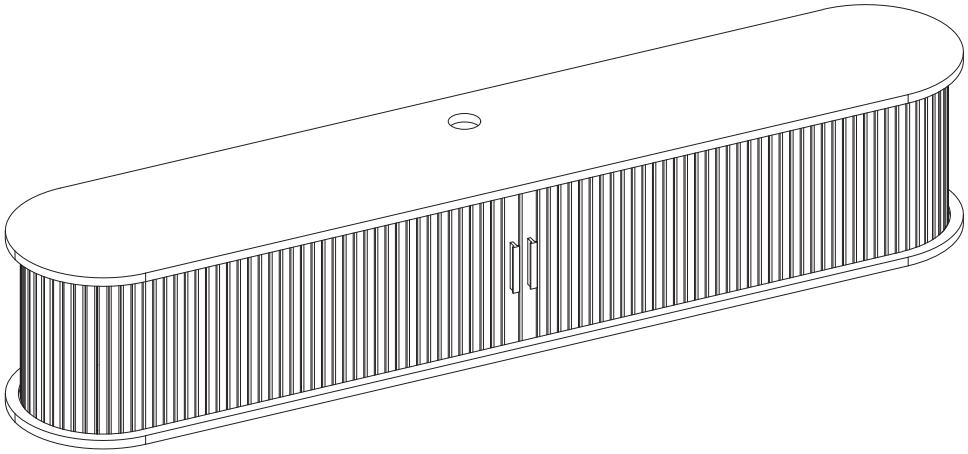


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

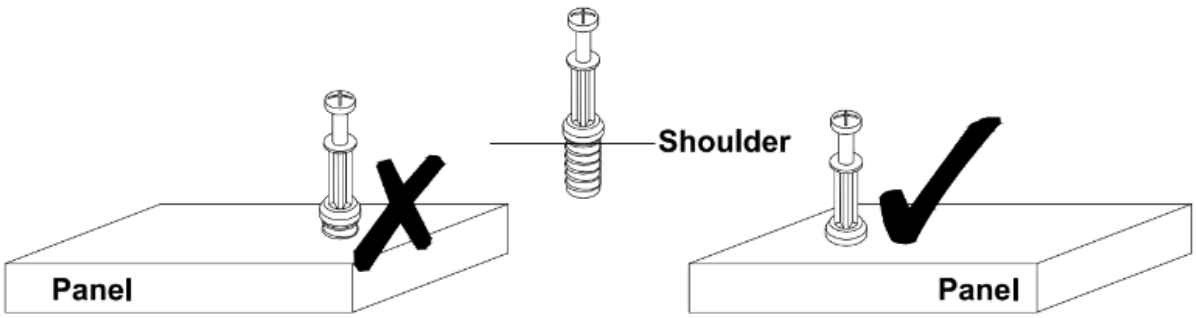

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

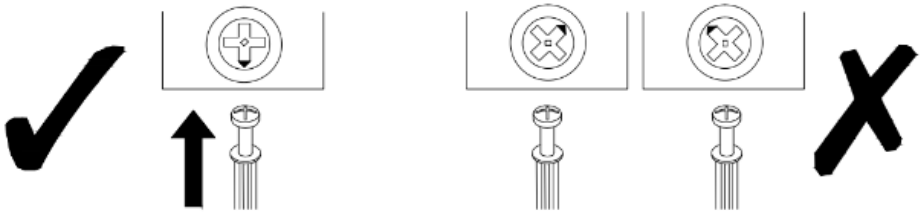

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT










Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

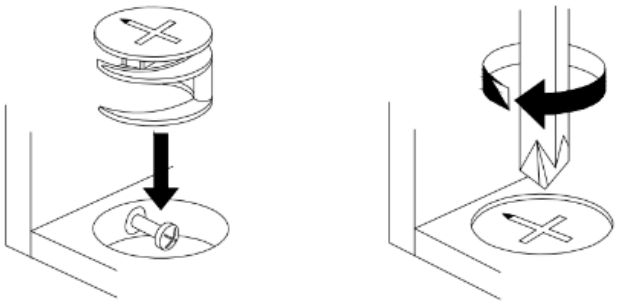


Turn cam lock clockwise to tighten.


Part List

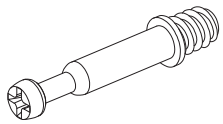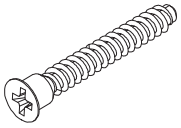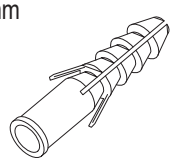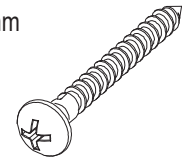
No. A Quantity: 14+1 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 14+1 PCS Cam ø15x9.5mm 	No. C Quantity: 14+1 PCS Sticker ø20mm 	No. D Quantity: 20+2 PCS Dowel ø6x30mm 
No. E Quantity: 24+2 PCS Screw ø5x48mm 	No. F Quantity: 2 PCS Handle 	No. G Quantity: 4+1 PCS Screw M4x10mm 	No. J Quantity: 8+1 PCS Bolt M6x25mm 
No. K Quantity: 1 PCS Hex Key 4mm 	No. L Quantity: 5 PCS Plastic Expansion ø8x40mm 	No. M Quantity: 5 PCS Screw ø4x55mm 	No. N Quantity: 1 PCS ø9.5x39mm 

Product structure

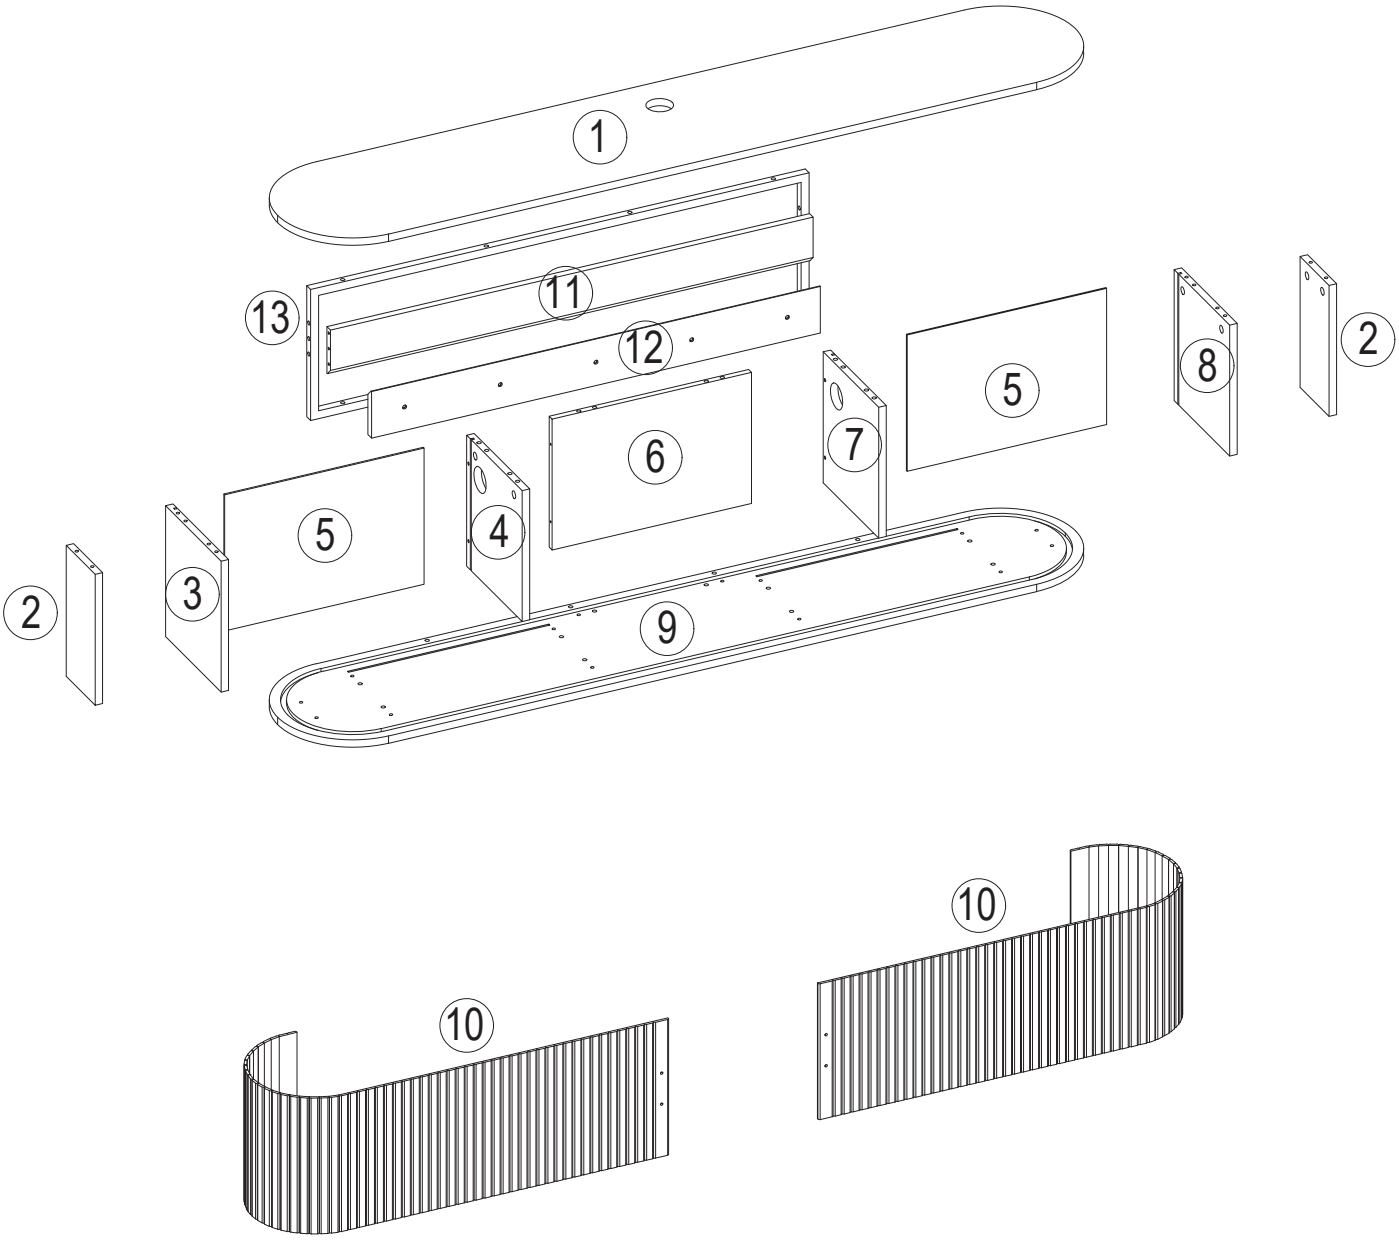


Step: 1

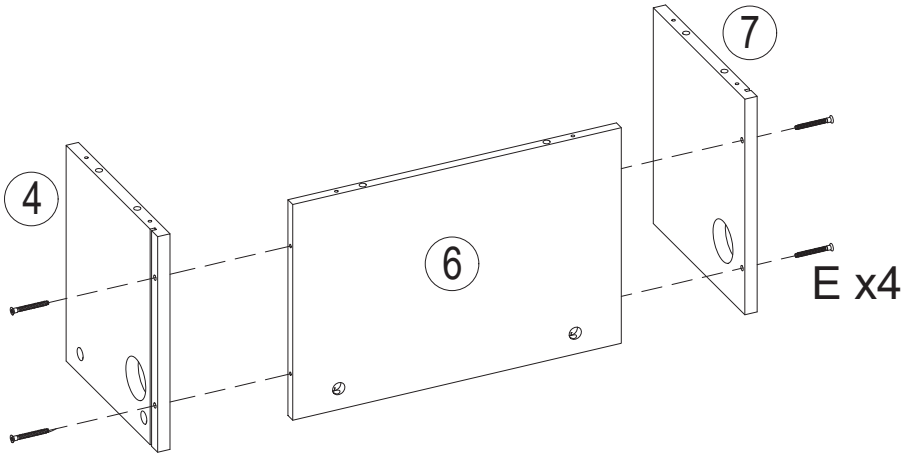


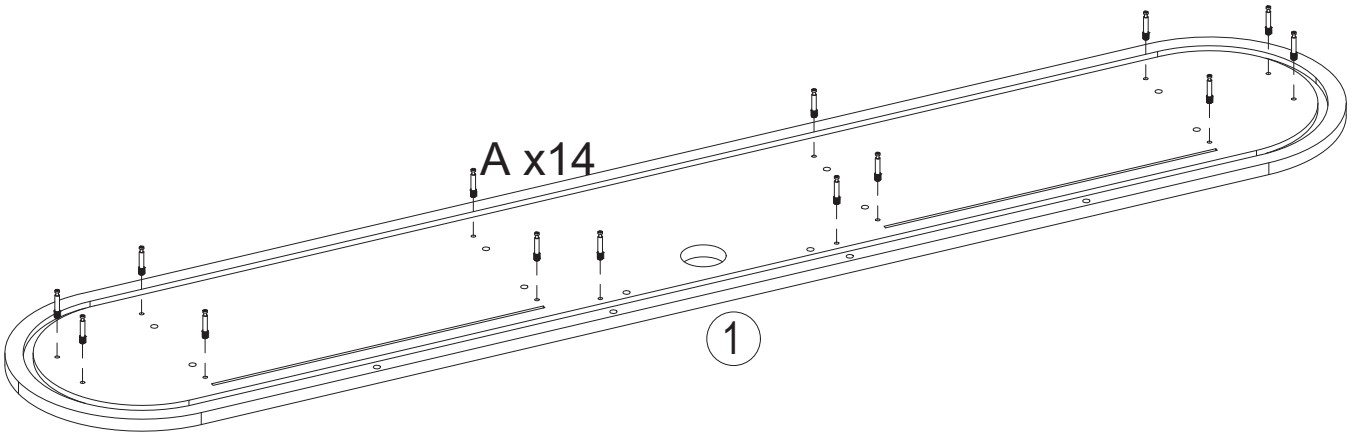


No. A
Quantity: 14 PCS
Cam Bolt
ø6x33.5mm

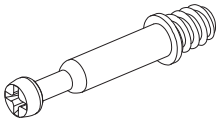


No. E
Quantity: 4 PCS
Screw
ø5x48mm

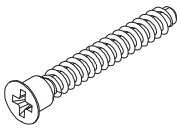


Step: 2

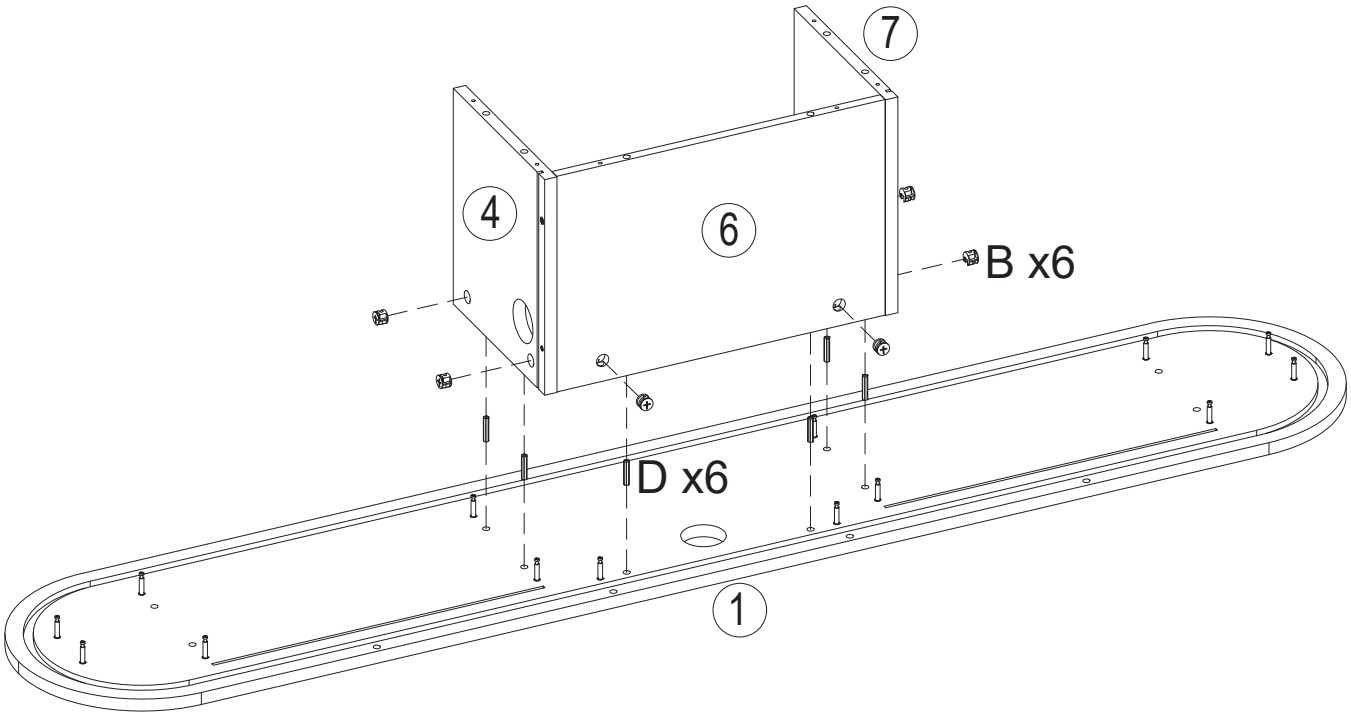


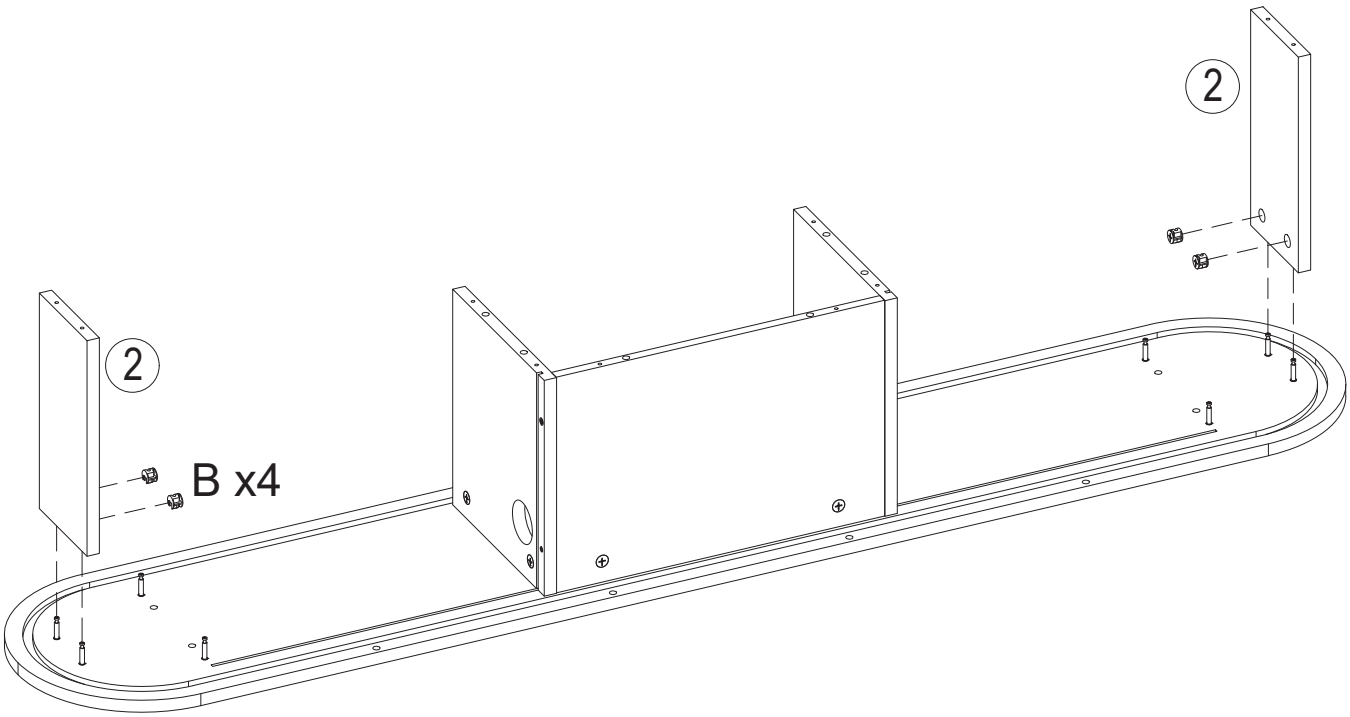


No. B
Quantity: 10 PCS
Cam
ø15x9.5mm




No. D
Quantity: 6 PCS
Dowel
ø6x30mm




Step: 3

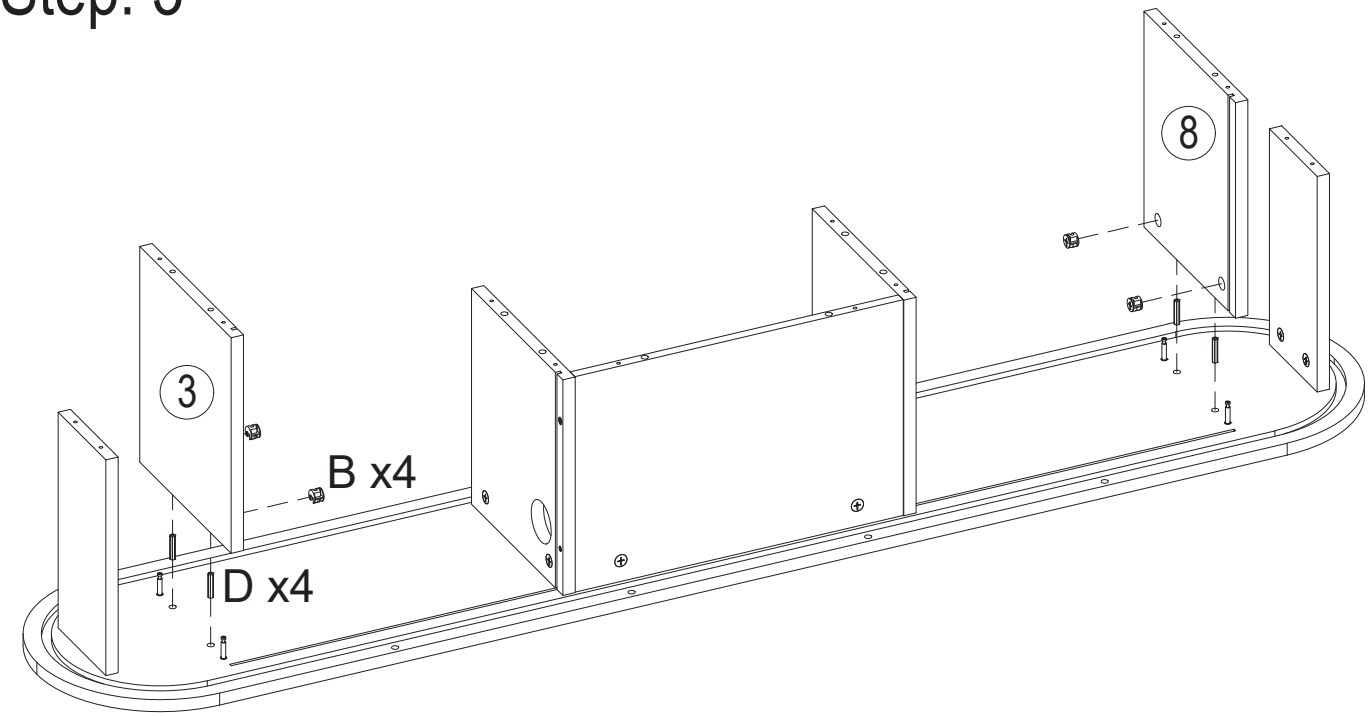


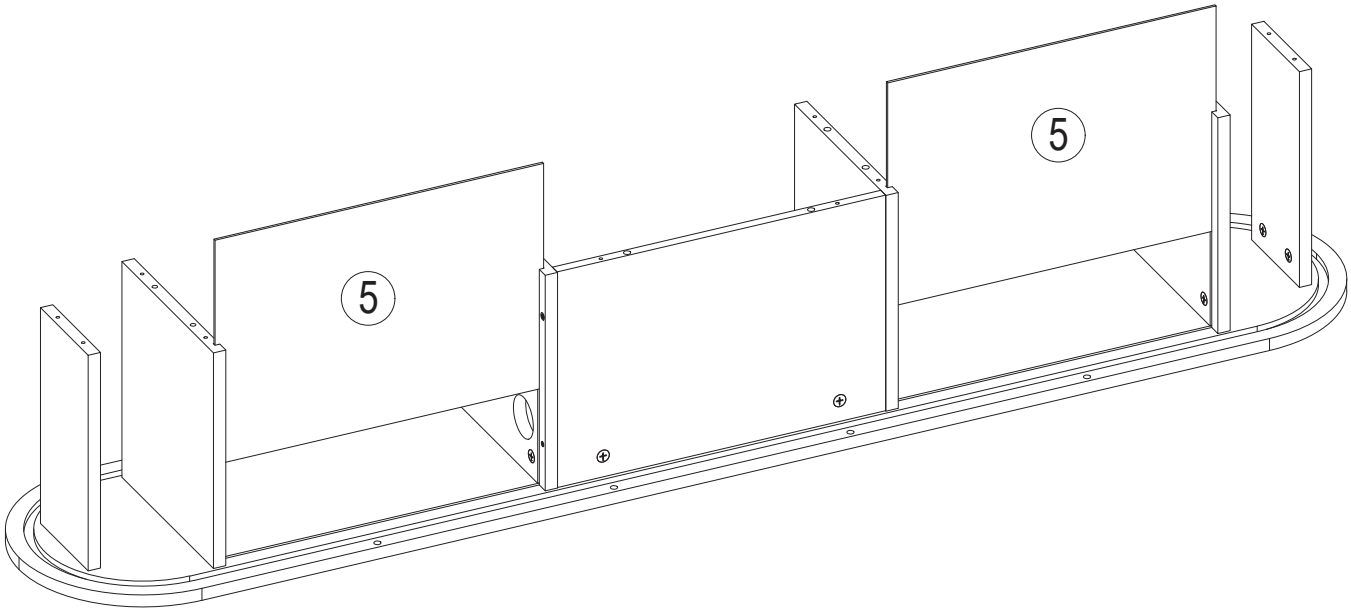


No. B
Quantity: 4 PCS
Cam
ø15x9.5mm




No. D
Quantity: 4 PCS
Dowel
ø6x30mm




Step: 4

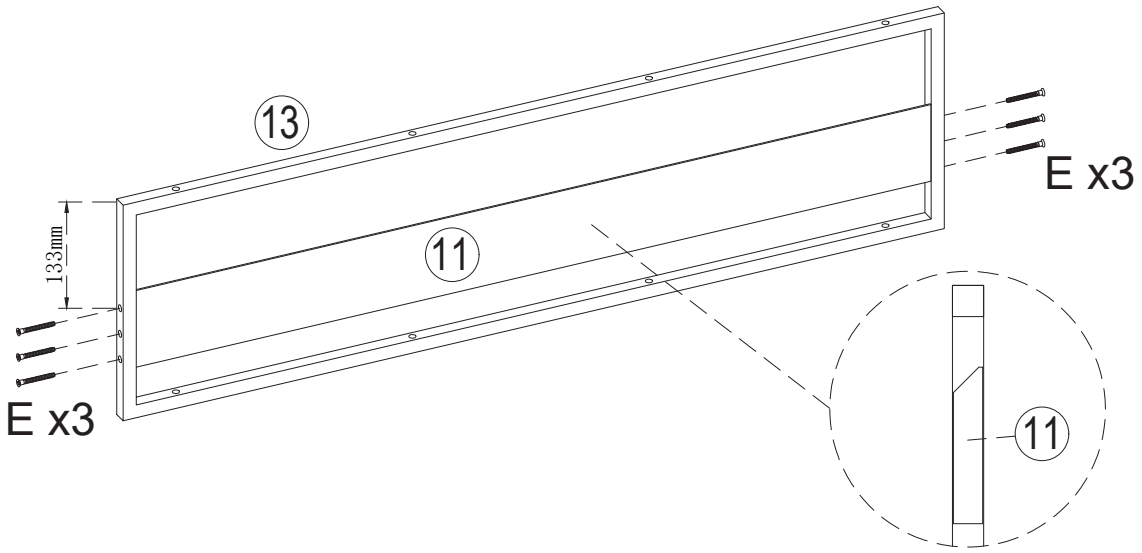


No. E
Quantity: 6 PCS
Screw
ø5x48mm

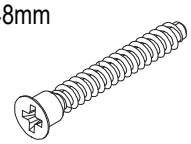

Step: 5

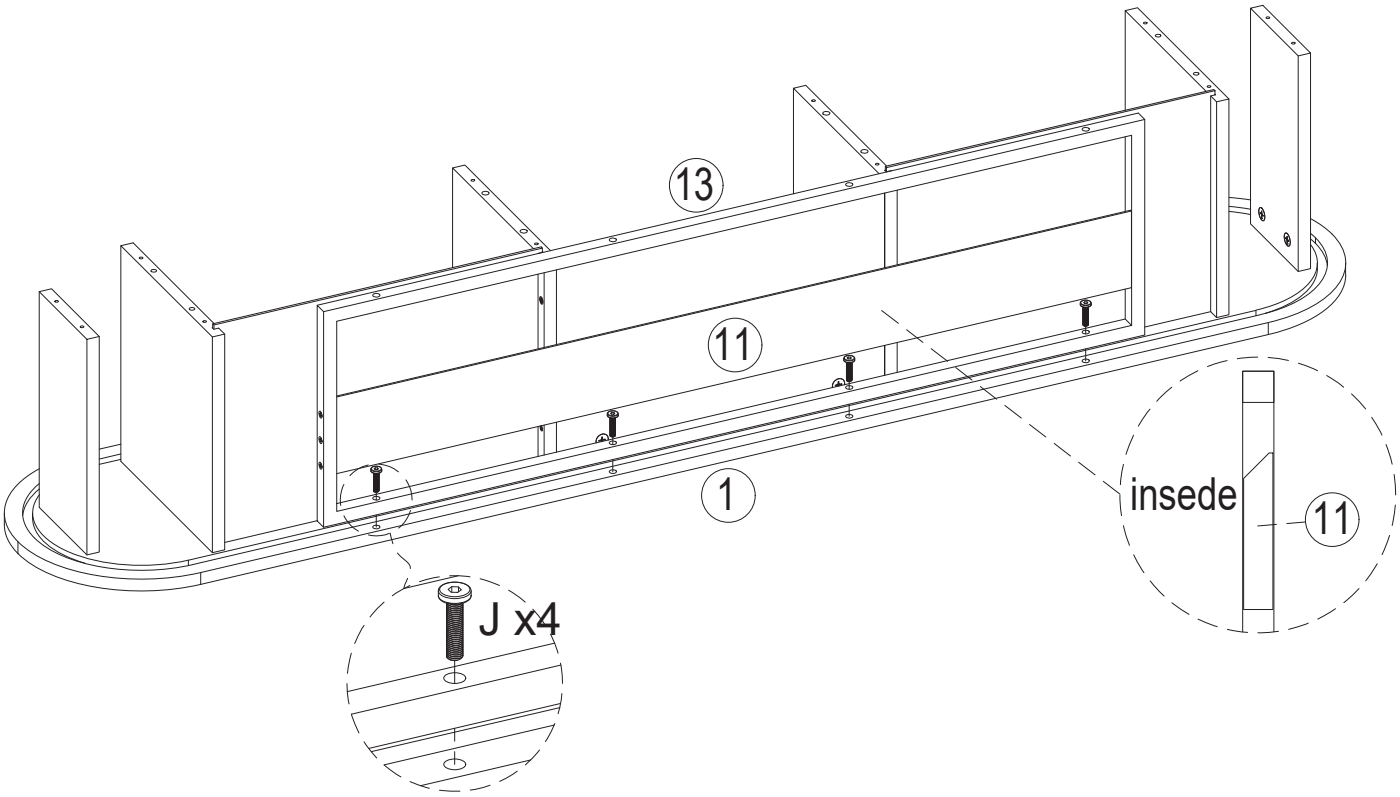


No. J
Quantity: 4 PCS
Bolt
M6x25mm




No. K
Quantity: 1 PCS
Hex Key
4mm



Step: 6

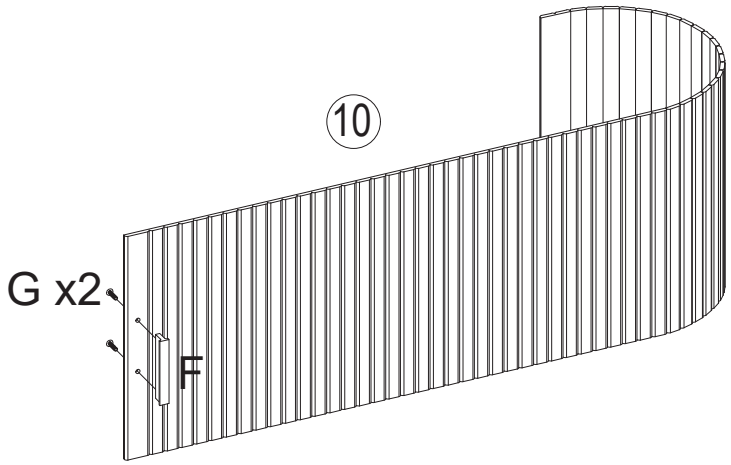


x2

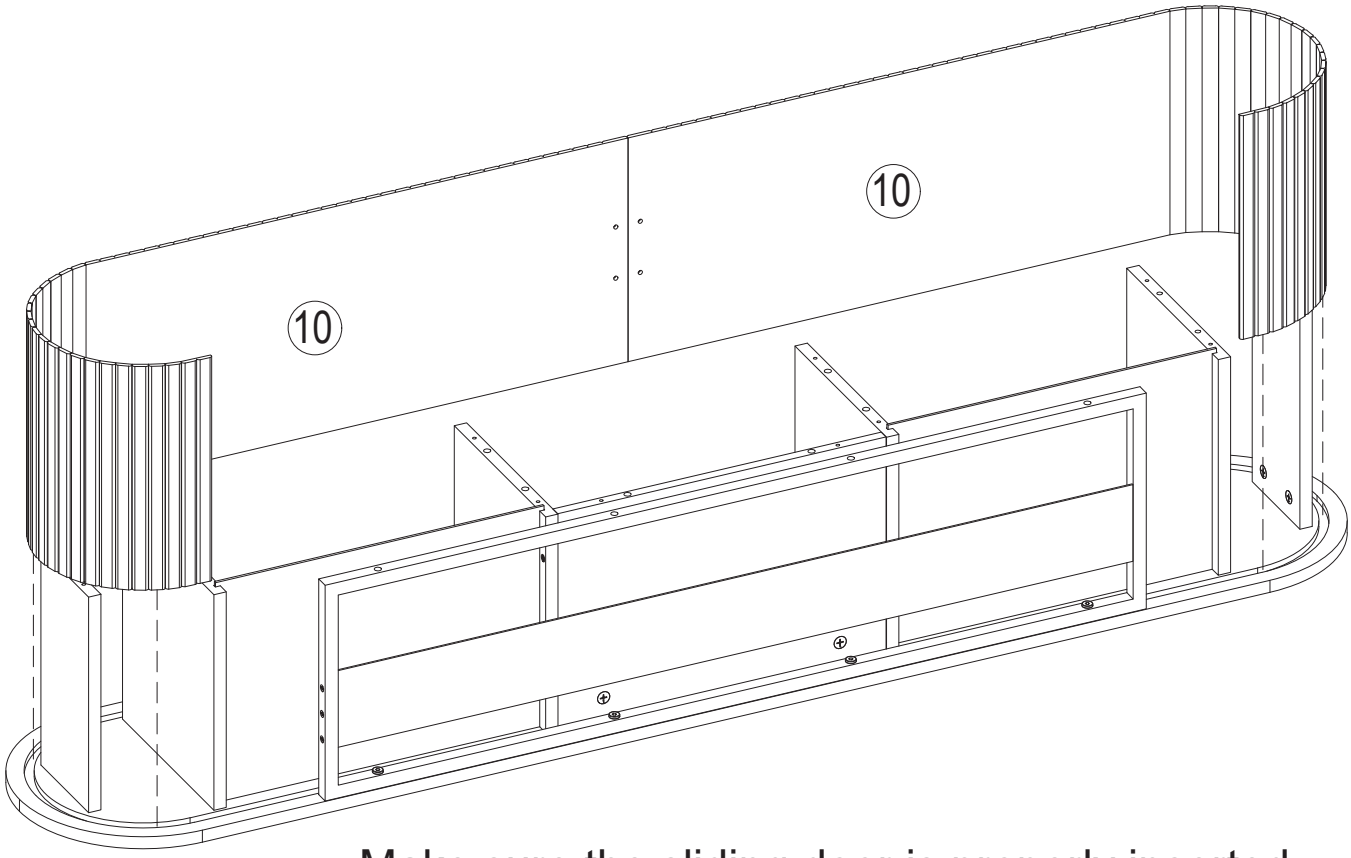


Make sure the sliding door is properly inserted into the groove to ensure smooth operation.


No. F
Quantity: 2 PCS
Handle




No. G
Quantity: 4 PCS
Screw
M4x10mm




Step: 7

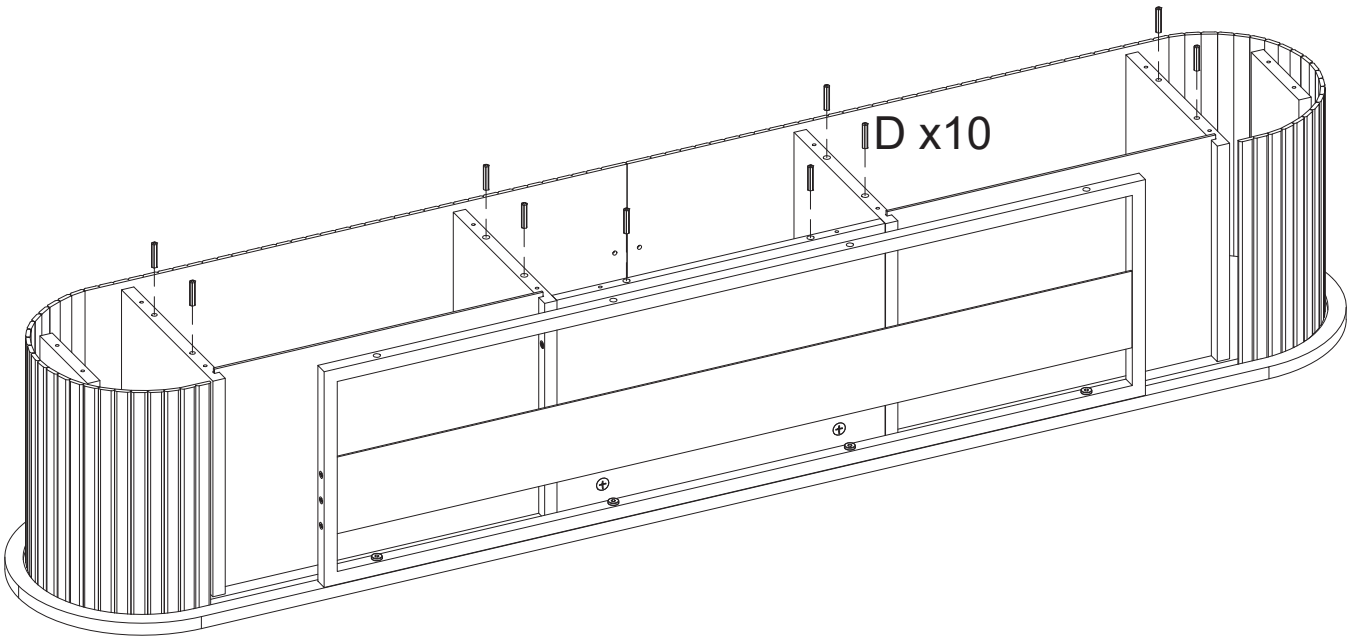


No. D
Quantity: 10 PCS
Dowel
ø6x30mm




Step: 8

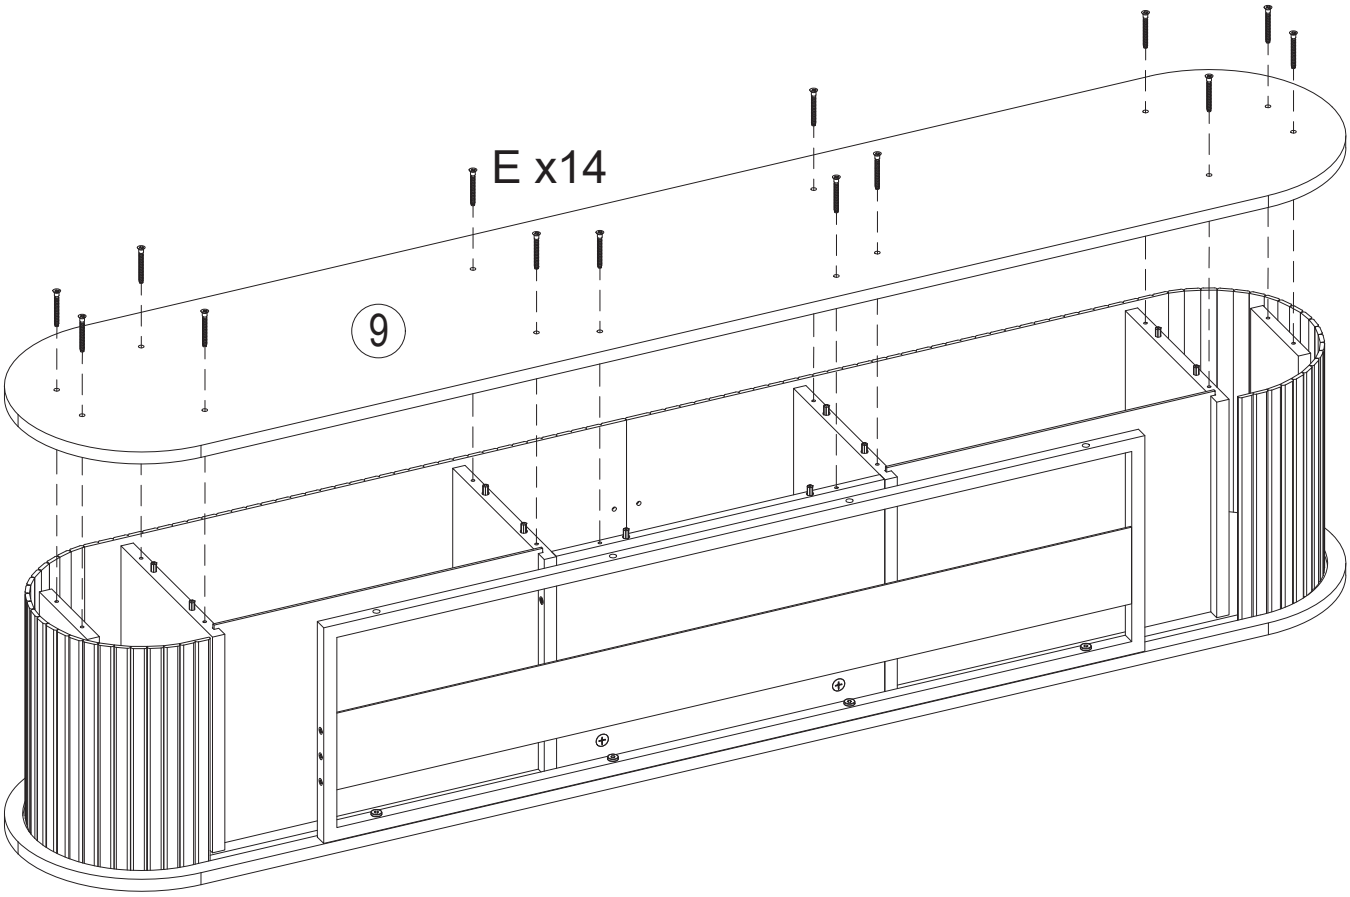


No. E
Quantity: 14 PCS
Screw
ø5x48mm

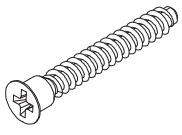

Step: 9

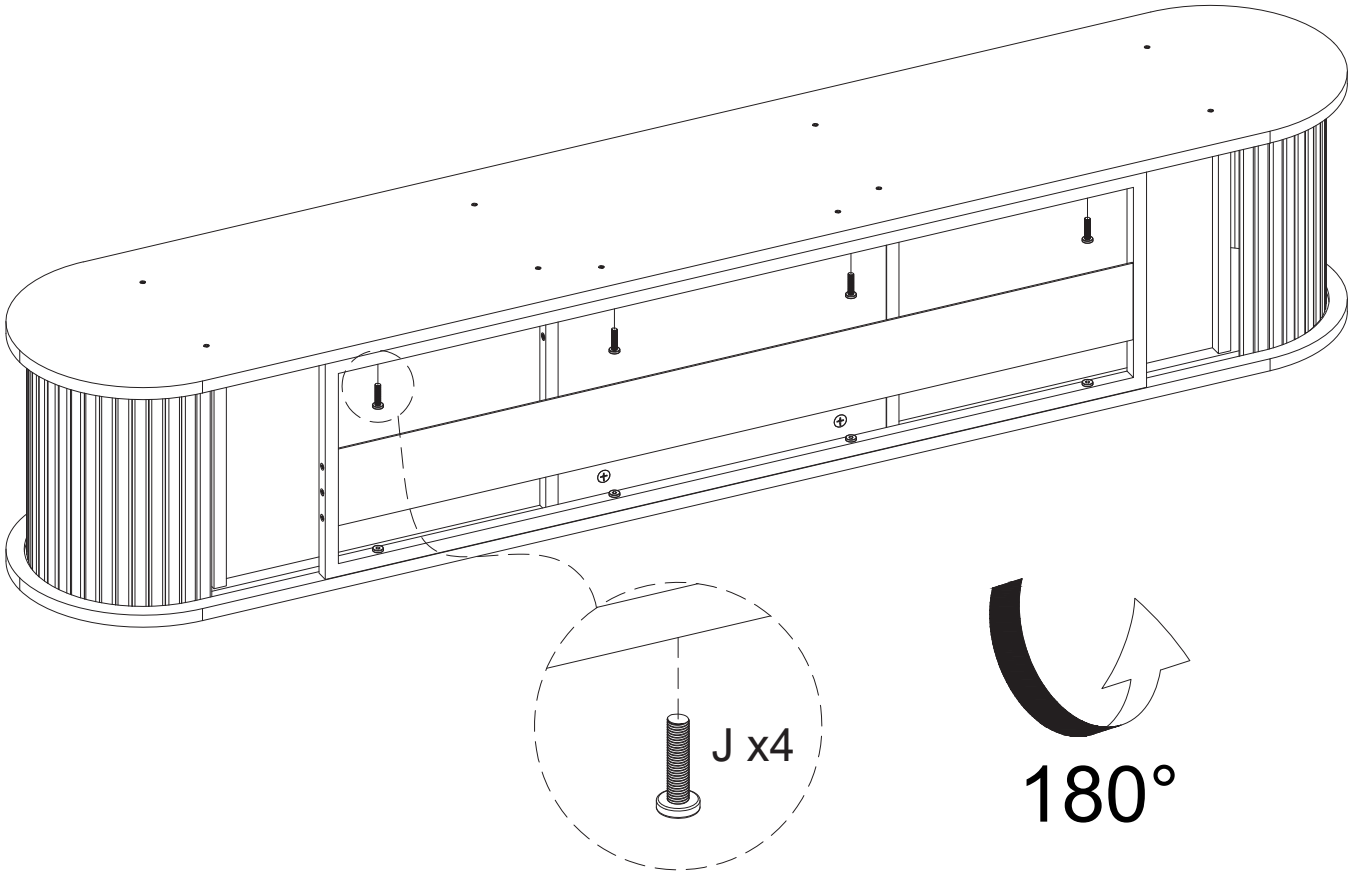


No. J
Quantity: 4 PCS
Bolt
M6x25mm




No. K
Quantity: 1 PCS
Hex Key
4mm




Step: 10

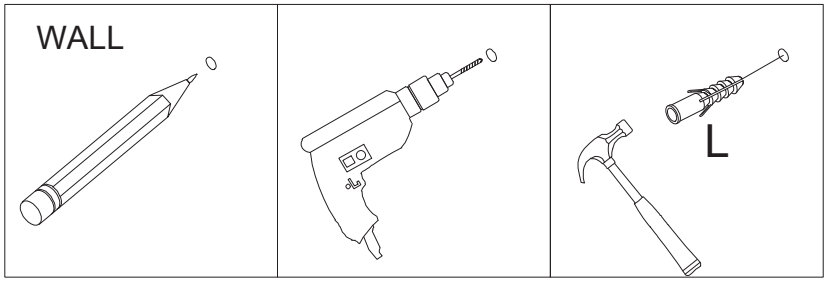


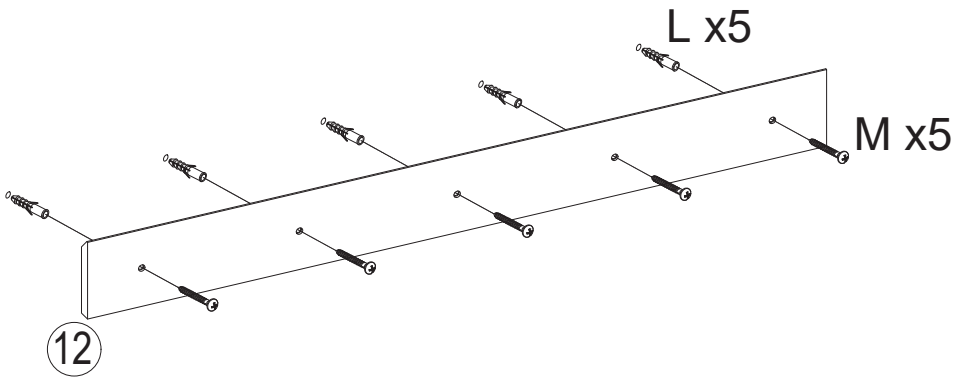

No. L
Quantity: 5 PCS
Plastic Expansion
ø8x40mm

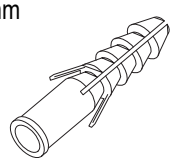


No. M
Quantity: 5 PCS
Screw
ø4x55mm

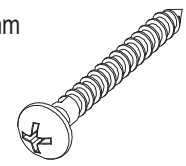

No. N
Quantity: 1 PCS
ø9.5x39mm



Step: 11

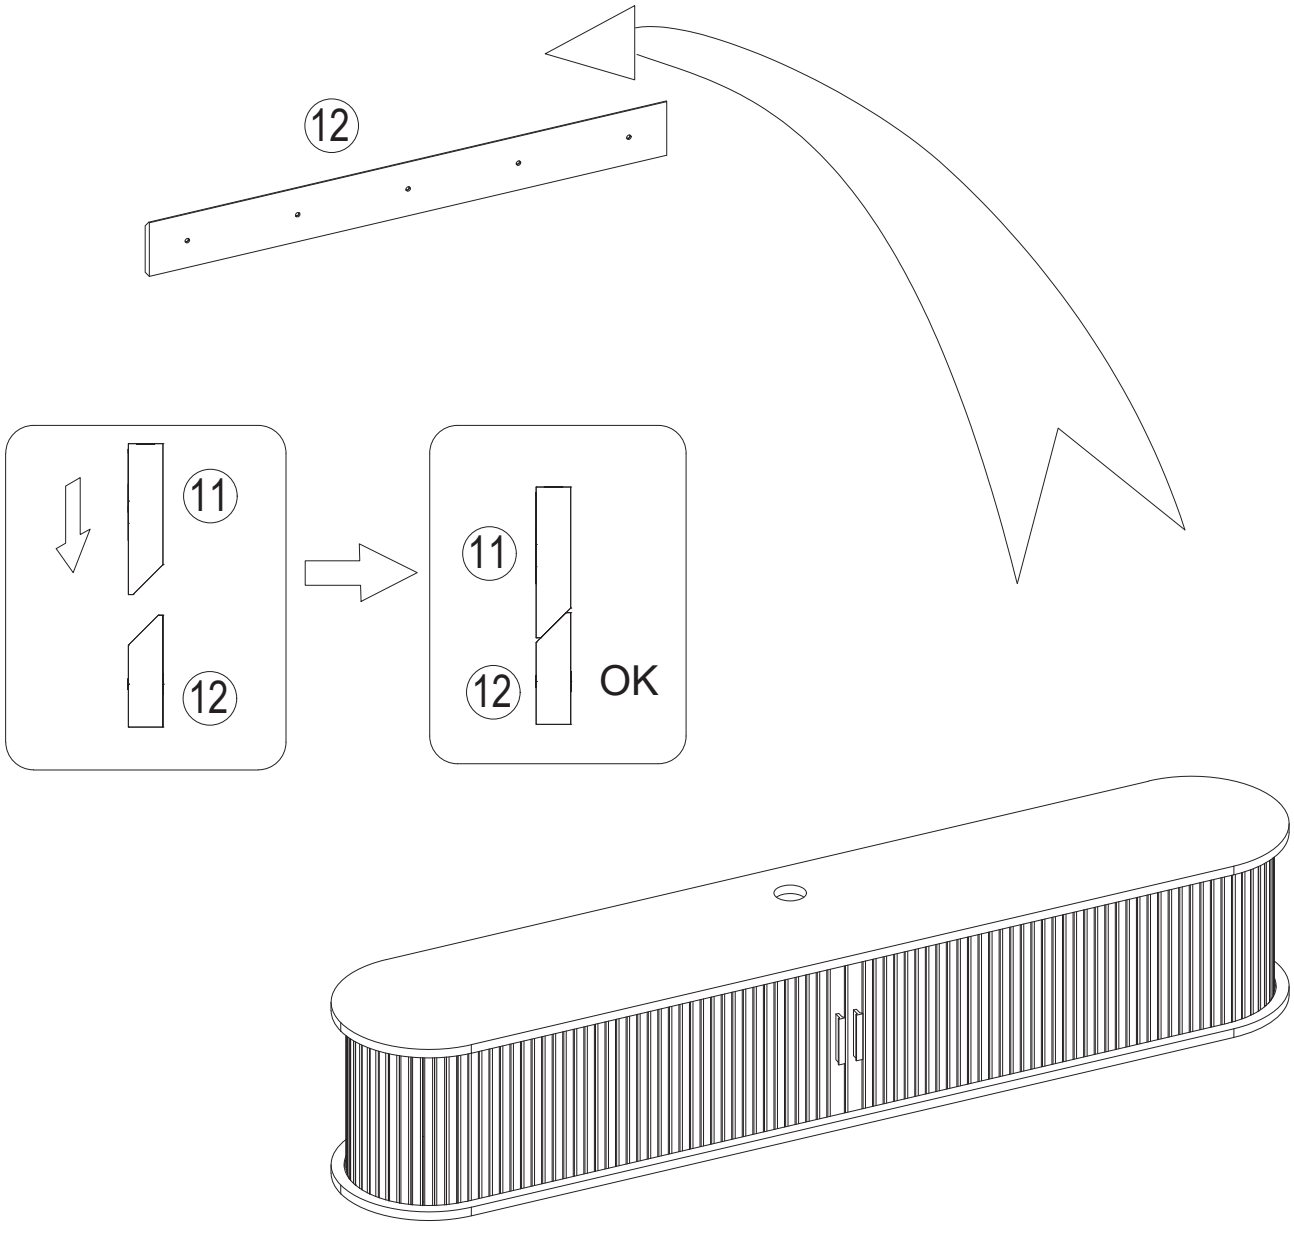

Step: 12

