

**MADISON** VINYL PICKET FENCE KIT 2-PACK (30"H X 56½"W)

**ASSEMBLY INSTRUCTIONS ZP19001** 




Approximate assembly time

Want to see a video on how to assemble this product? **Scan the QR code** 







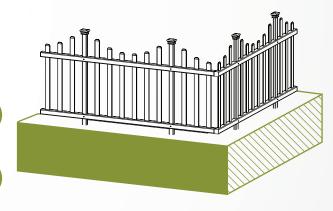

# **GENERAL** INFORMATION



#### **IMPORTANT**

- Check the inside of the larger pieces in your box for other materials packed inside.
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approximately 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

## MISSING OR DAMAGED PARTS?

#### VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

- parts.nychbrands.com
- **704-892-5222 / 877-234-6196**

Customer service agents are available to take calls weekdays from 8am- 5pm EST. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **ZP19001** and the specific part name which can be found on page 4. It is helpful if you can provide the batch lot which is a stamped number on the end of the box.

## NEED ASSEMBLY HELP?


If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, so please give us a call at 704-892-5222 / 877-234-6196.

# NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, you will need to initiate the return from the company you originally purchased from.


ASSEMBLY INSTRUCTIONS • ZP19001

## Detailed Product Dimensions & Specifications

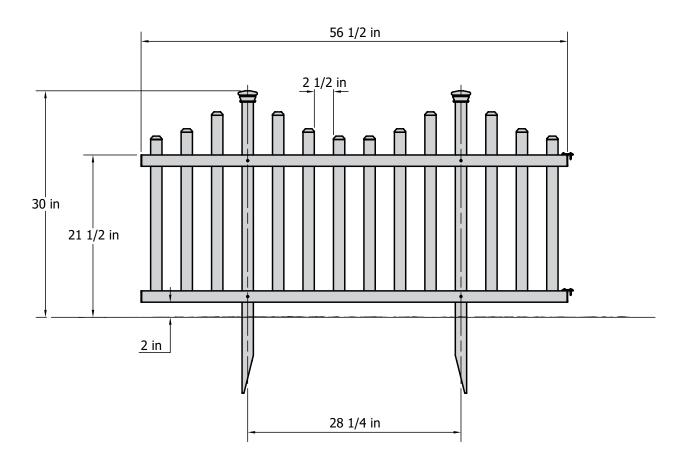

ZP19001 — ASSEMBLY INSTRUCTIONS

### **STEP 1: LAY OUT MATERIALS**

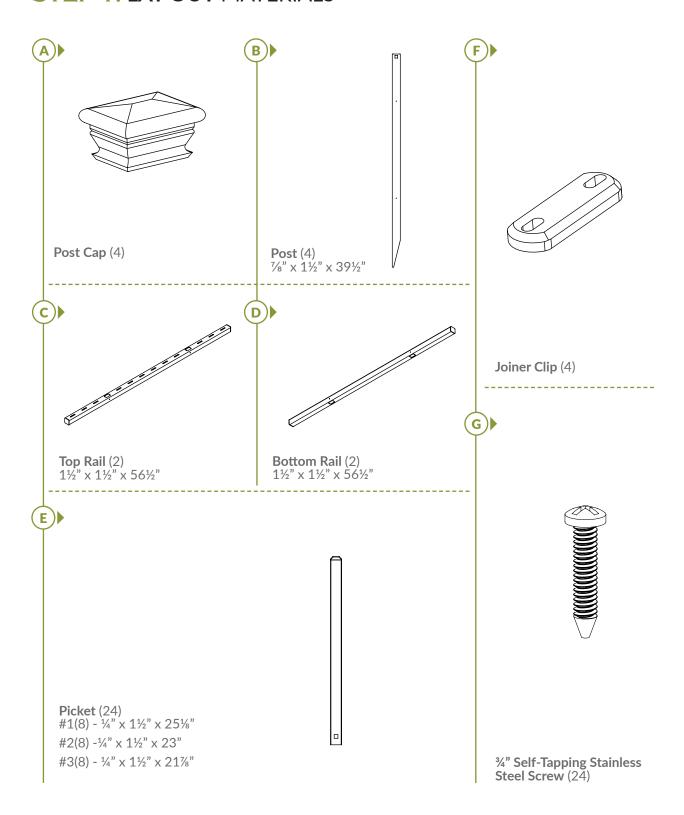


ASSEMBLY INSTRUCTIONS • ZP19001

### **STEP 2: ASSEMBLE FENCE FRAME**


#### **(STEP 2.1)**▶

Position the two rails as illustrated and slide two Posts (B) through the large holes in the Top (C) and Bottom (D) Rails until the pre-drilled holes in both rails are aligned with the pre-drilled holes in both posts.

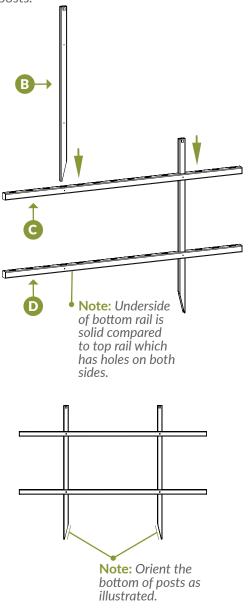

#### **(STEP 2.2)**▶

Secure the rails to the post with (8) 3/4" Self-Drilling Stainless Steel Screws (G) on both sides of the rails as illustrated.

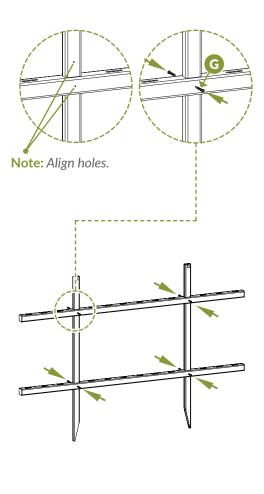


### **STEP 3: INSTALL PICKETS**




▶ Pickets (E) are identified 1, 2, and 3 to create a scallop pattern as illustrated. Slide each one down through the top rail and into the bottom rail.

Note: The tabs on the bottom of the pickets are intended to go into the bottom rail to lock the picket into place. To remove a picket, gently insert a butter knife into the bottom rail as shown, and slowly pull up the picket.

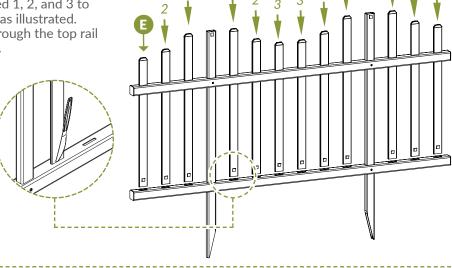


### **STEP 4: INSTALL FENCE INTO THE GROUND**

#### **STEP 4.1**)

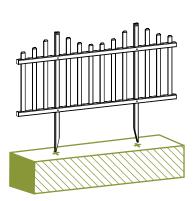

▶ Move the fence to its destination, and identify the location of the posts.

#### STEP 4.2)

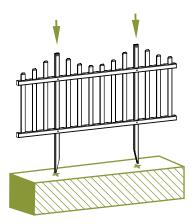


Attempt to push the product into the ground as illustrated.

**ASSEMBLY** INSTRUCTIONS ● **ZP19001** 

#### **STEP 4.3**

▶ Optional in hard ground: If your ground is too hard, or you have more than 3 or 4 panels to install, please consider these options:
1. Use a 1¾" diameter auger bit (commonly used for planting tulips) as illustrated (\$15-\$20 on Amazon.com).
2. Drill a hole about 12" to 16" deep at the desired location, and fill the holes with water as illustrated.
3. Push the fence posts into the holes.

**3.** Push the fence posts into the holes.

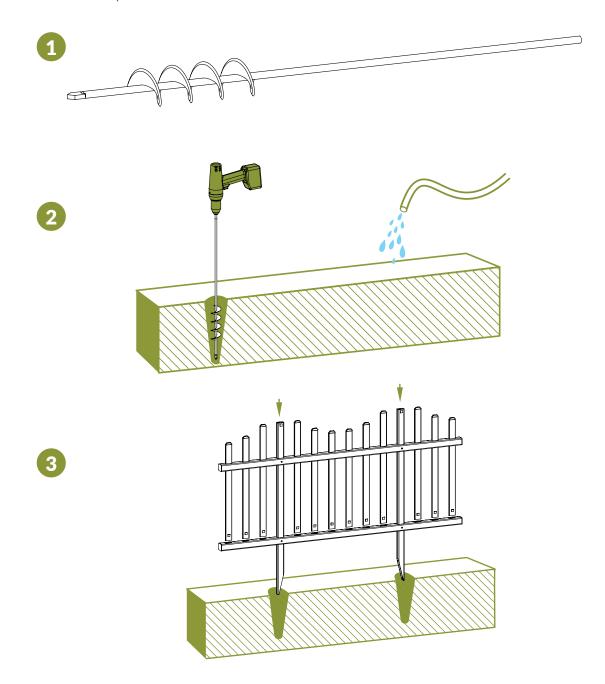



#### (STEP 4.4)

- **1:** Loosen top 4" of the ground with a claw hammer as illustrated.
- 2: Add water to loosen soil.
- **3:** (Recommended) Use a block of wood to protect the top of the post and gently hammer each post into the ground.





Level the assembled unit, and compact dirt around the base of each post.

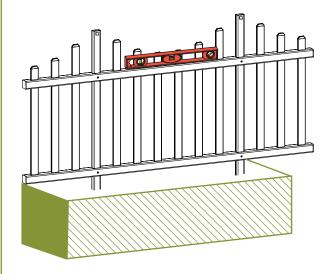

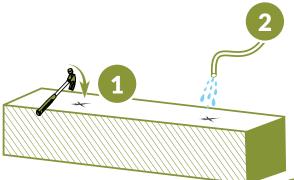

### **(STEP 4.6)**▶

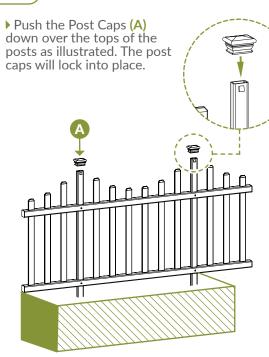

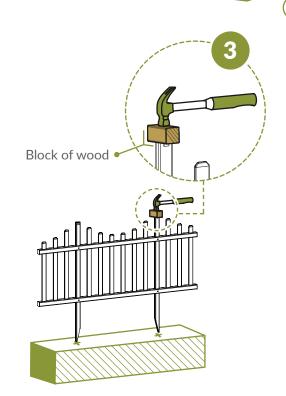

ASSEMBLY INSTRUCTIONS • ZP19001

### **STEP 5: FASTEN JOINER CLIPS**

#### SILI S. IASILIA SONALIA CEN S

Fasten Joiner Clips (F) by screwing them into place on the top of the rail and the bottom of the rail as illustrated. Screws are self-drilling.

#### **STEP 5.2**

