

RAYNE 

RAYNE 



You may contact us with any questions by e-mail at:

[**ORDERS@RAYNEMIRRORS.COM**](mailto:ORDERS@RAYNEMIRRORS.COM)

WINONA, MISSOURI

(573)325-1344

WINONA, MISSOURI

(573)325-1344


YOUR HARDWARE KIT

WILL CONTAIN

2 X SET SCREWS



4 X LAG BOLTS

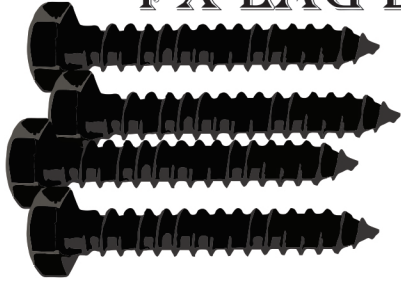

4 X MACHINE SCREWS



4 X HOLLOW WALL ANCHORS



TOOLS


- * LEVEL
- * STUD FINDER
- * PENCIL
- * TAPE MEASURE
- * 7/16" WRENCH
- * DRILL



INSERT THE ANCHOR AND TIGHTEN THE SET SCREW WITH A #2 PHILLIPS UNTIL YOU FEEL IT BECOME SNUG. BE CAREFUL NOT TO OVER TIGHTEN. BACK OUT 1/8".

YOU MAY USE A COMBINATION OF ANY 2 INCLUDED FASTENERS, HOWEVER LAG BOLT DIRECTLY INTO STUD IS THE PREFERRED METHOD.

- DRAW LEVEL LINE
- DECIDE & MARK CORBEL LOCATION
- CUT OUT TEMPLATE AND APPLY TO THE WALL AT DESIRED CORBEL LOCATION
- MARK FASTENER LOCATION* (POKE THROUGH THE TEMPLATE)
- INSTALL REQUIRED FASTENER FOR YOUR APPLICATION INTO THE WALL
- YOU WILL NEED TO LEAVE APPROX. 1/8" OF THREAD EXPOSED
- MOUNT CORBELS, IF NEED ADJUST FASTENER DEPTH
- PEEL FILM FROM TAPE
- INSTALL SHELF INTO DESIRED LOCATION
- HOLDING PRESSURE DOWNWARDS ON SHELF, INSTALL SUPPLIED SCREWS WITH DRILL OR SCREWDRIVER

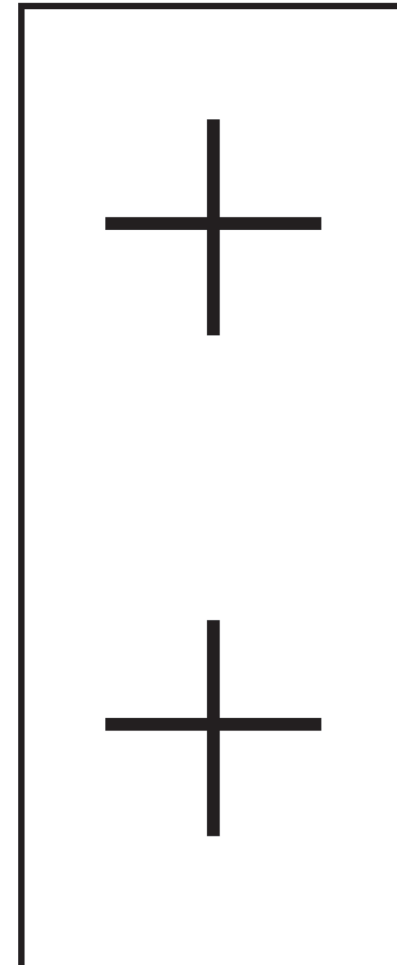

TEMPLATE