


YB816-914#

Bathroom cabinet

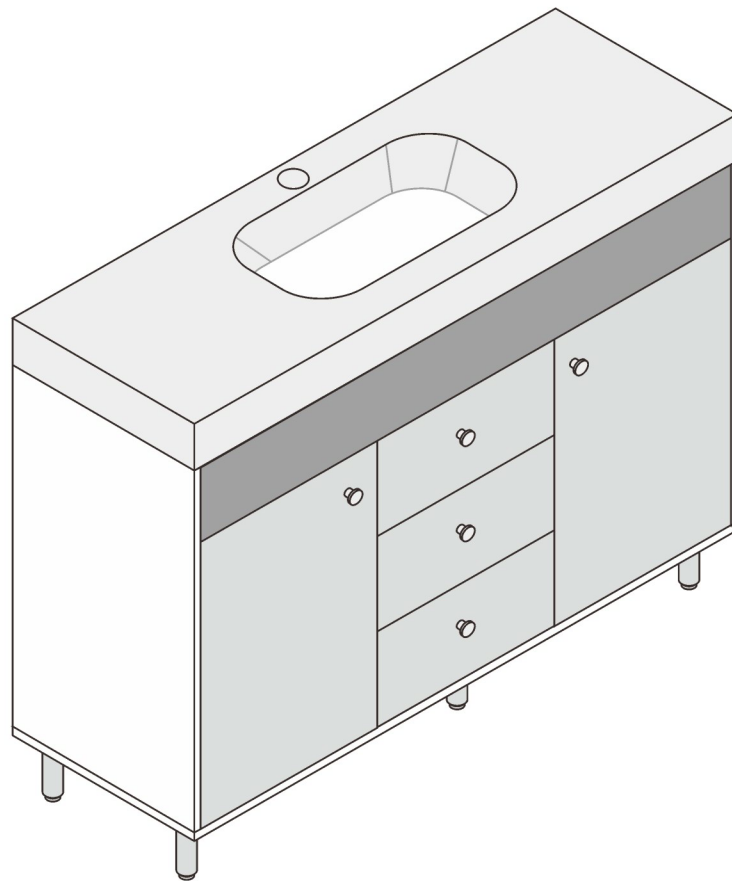


2 Persons


L906*W455*H563MM

Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

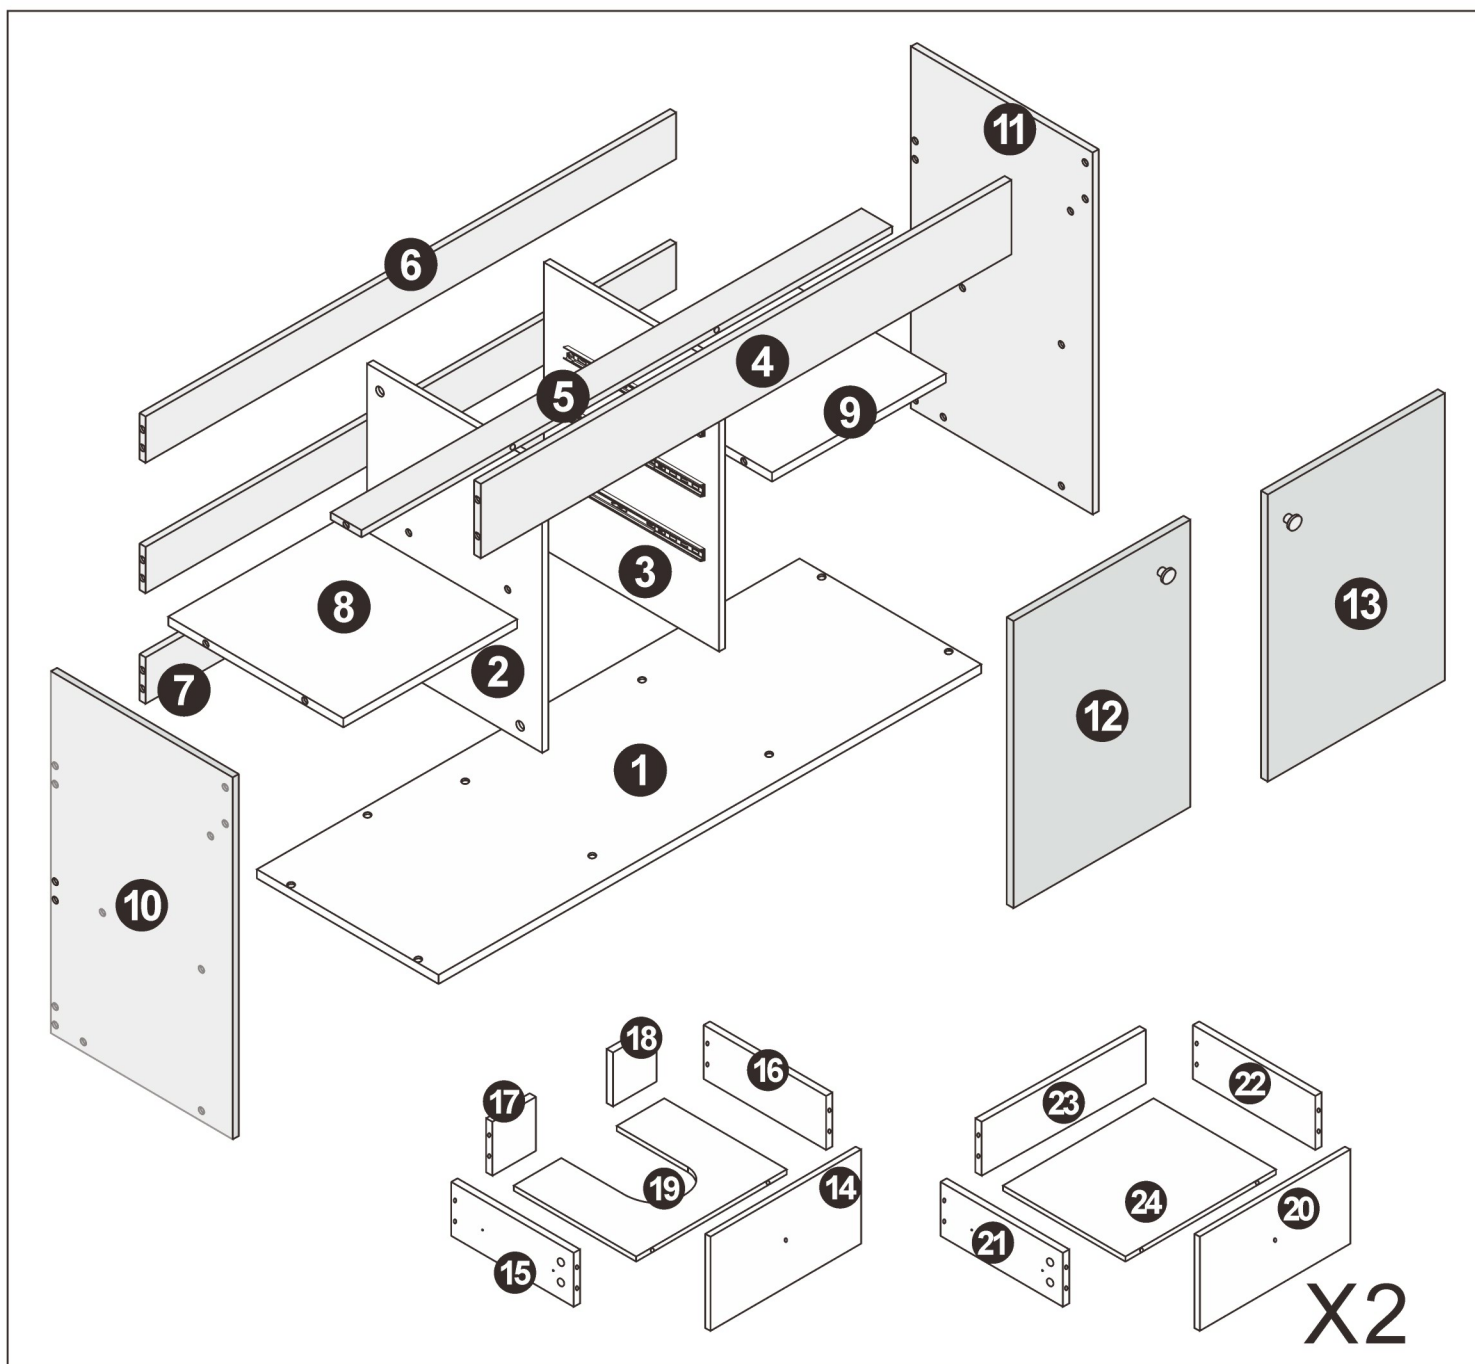


Disassembly and installation of accessories

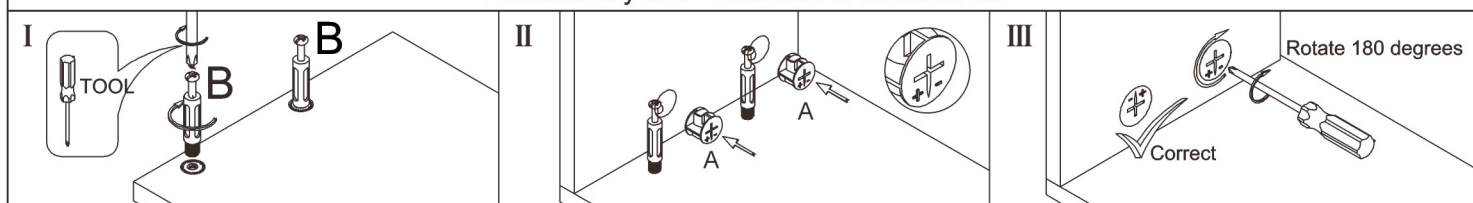

A 62PCS  15*10mm	B 62PCS  6*28mm	C 99PCS  3.5*14mm	D 30PCS  3.5*35mm	E 5PCS  4*20	F 5PCS  Handles	G 4PCS  Sponge Mat	H 4PCS  Big bend
I 2PCS  Expansion screw	J 2PCS  Corner code	K 3PCS  Three-section Rail	L 5PCS  Hardware Feet				

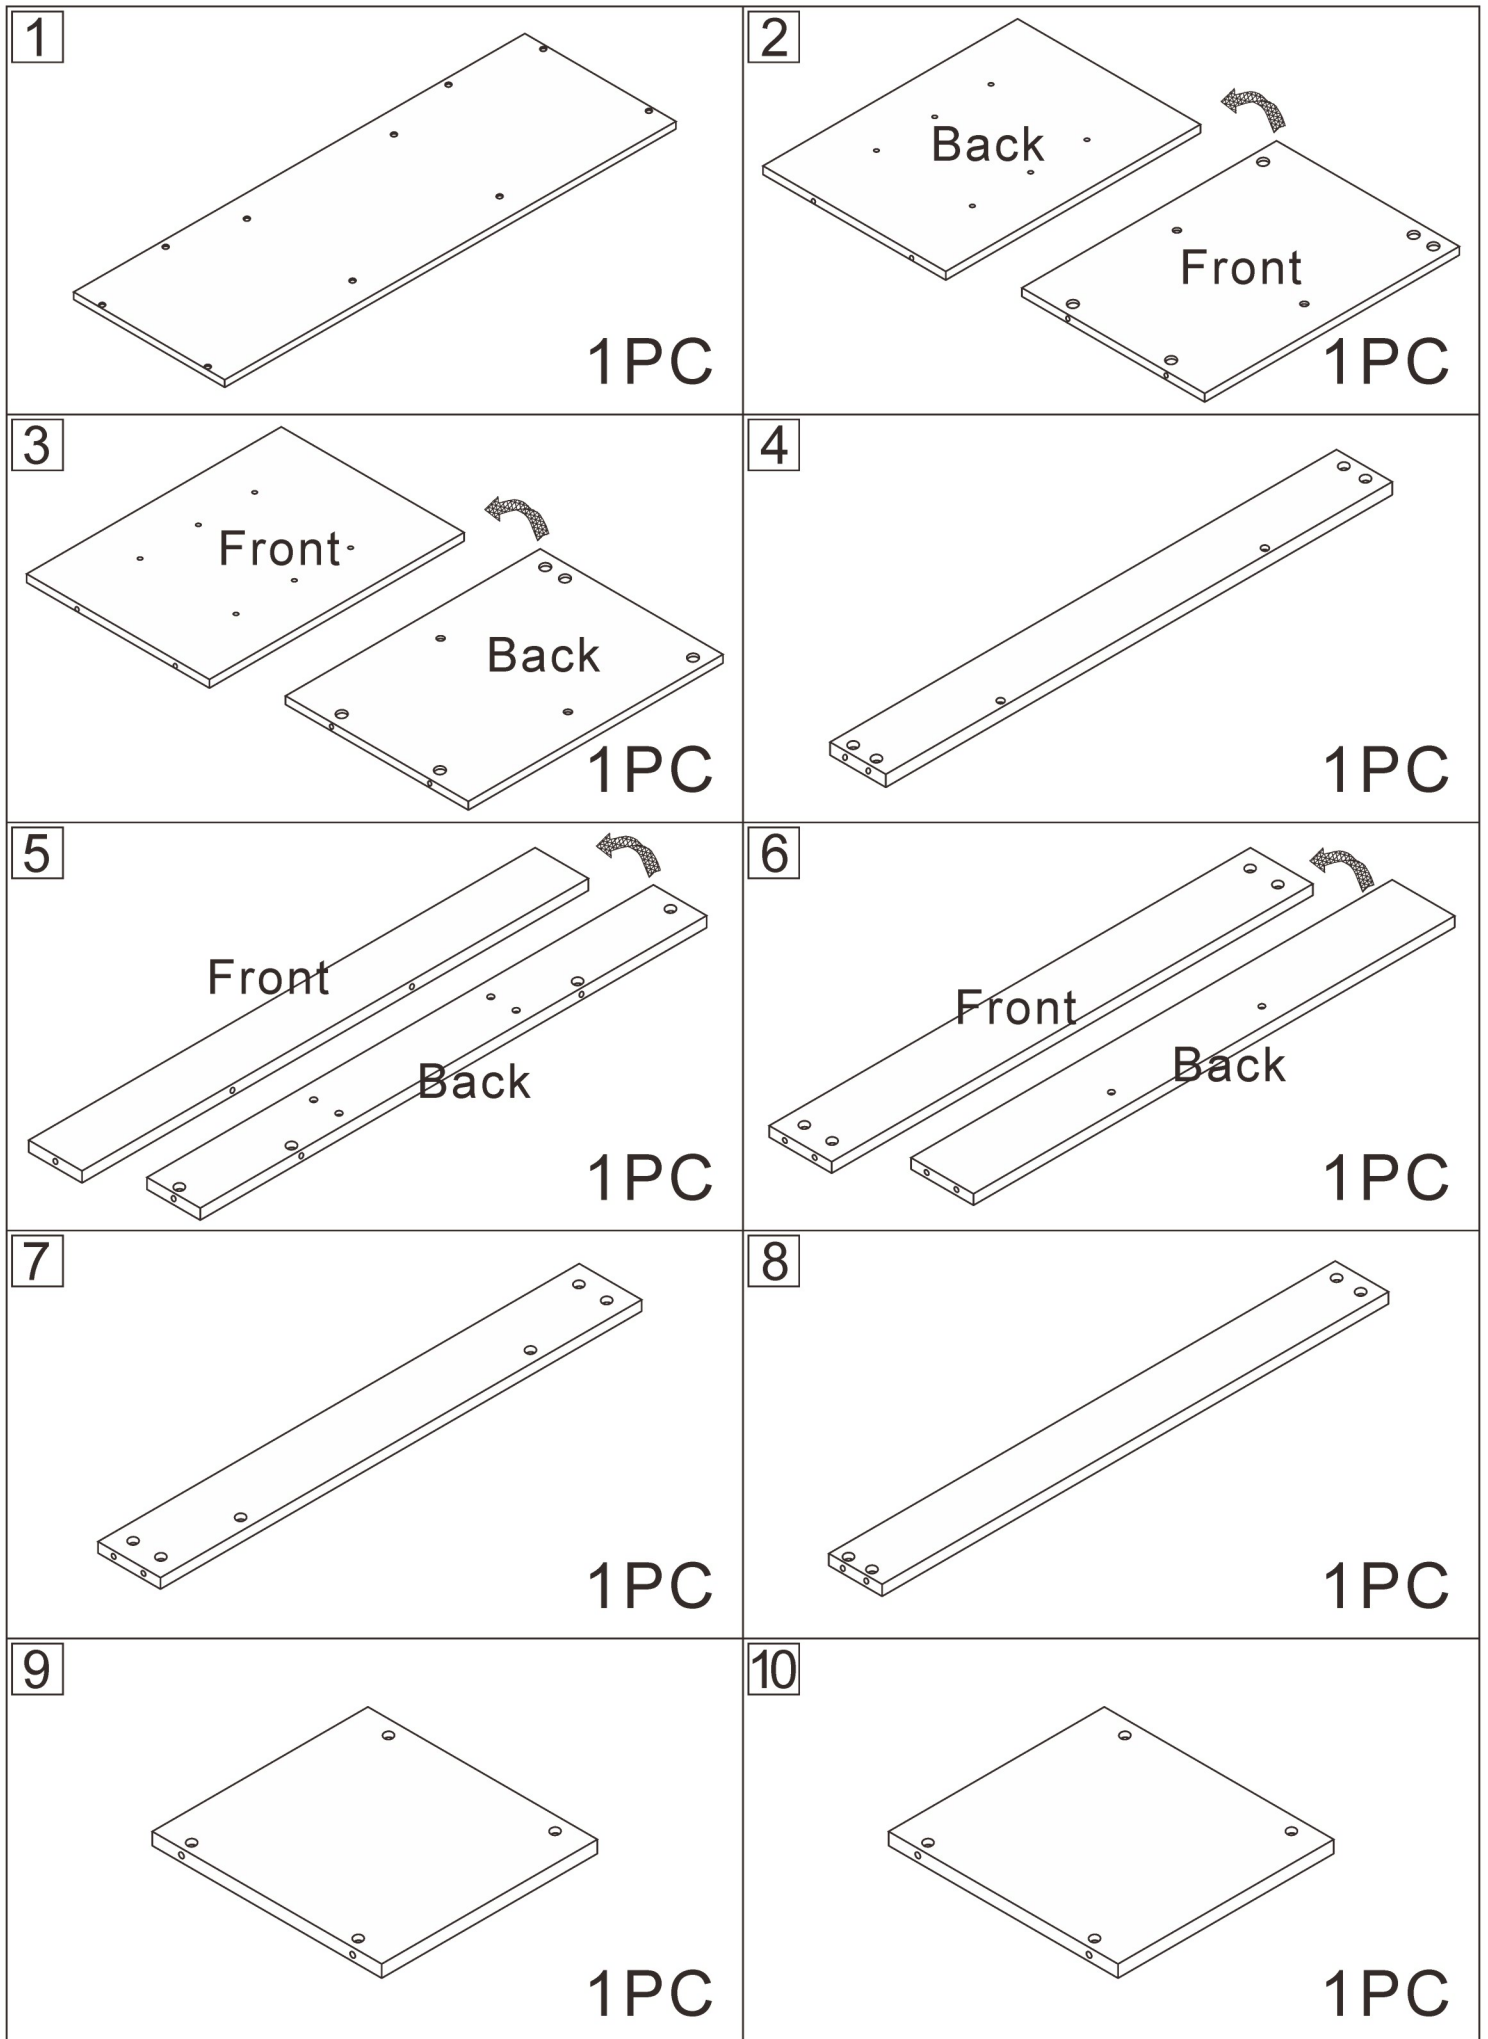


11

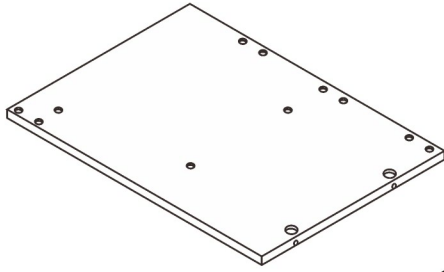


1PC

12

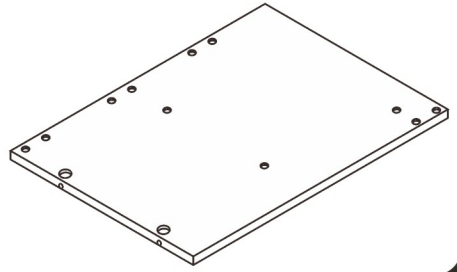


1PC

13

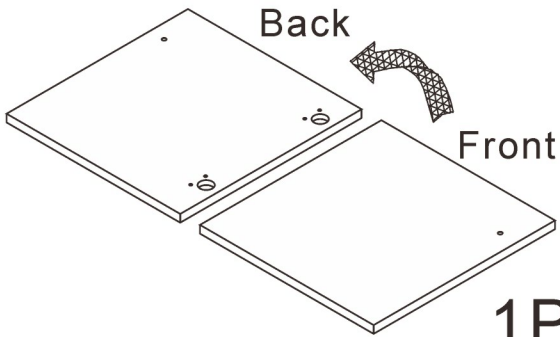


1PC

14

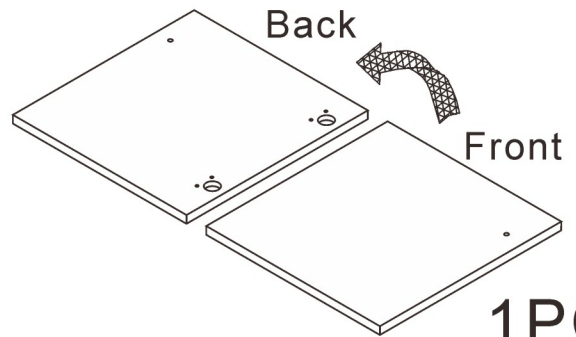


1PC

15

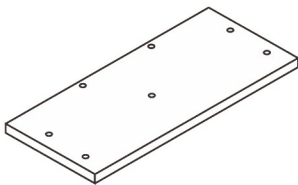


1PC

16

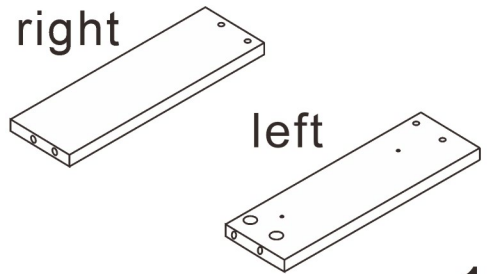


1PC

17

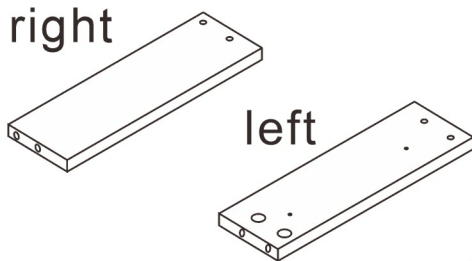


1PC

18




1PC

19




1PC

20

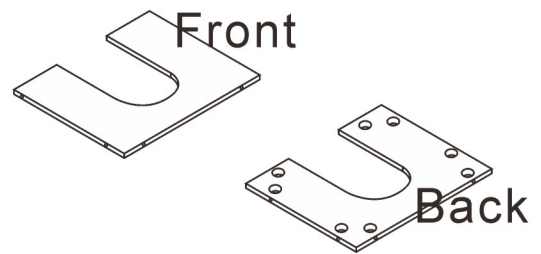


1PC

21

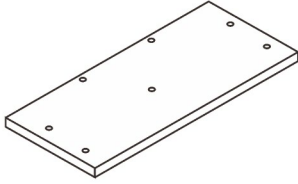


2PCS

22

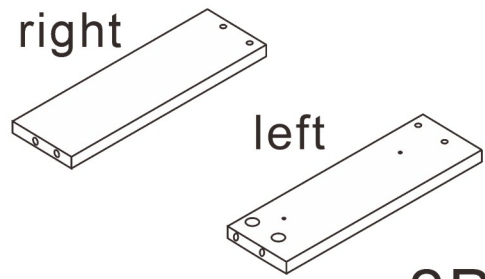


2PCS

23

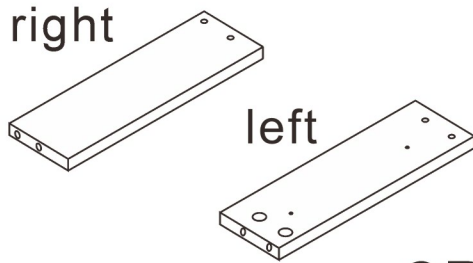


2PCS

24

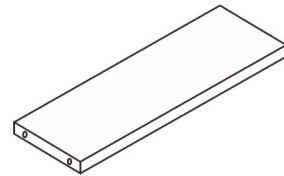


2PCS

25

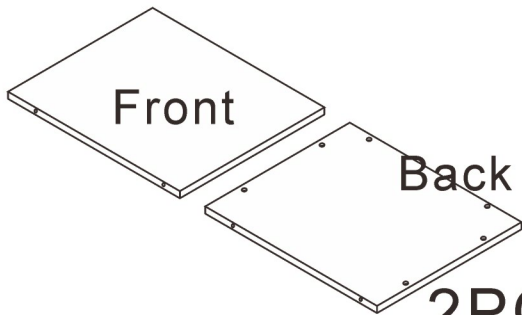


2PCS

1

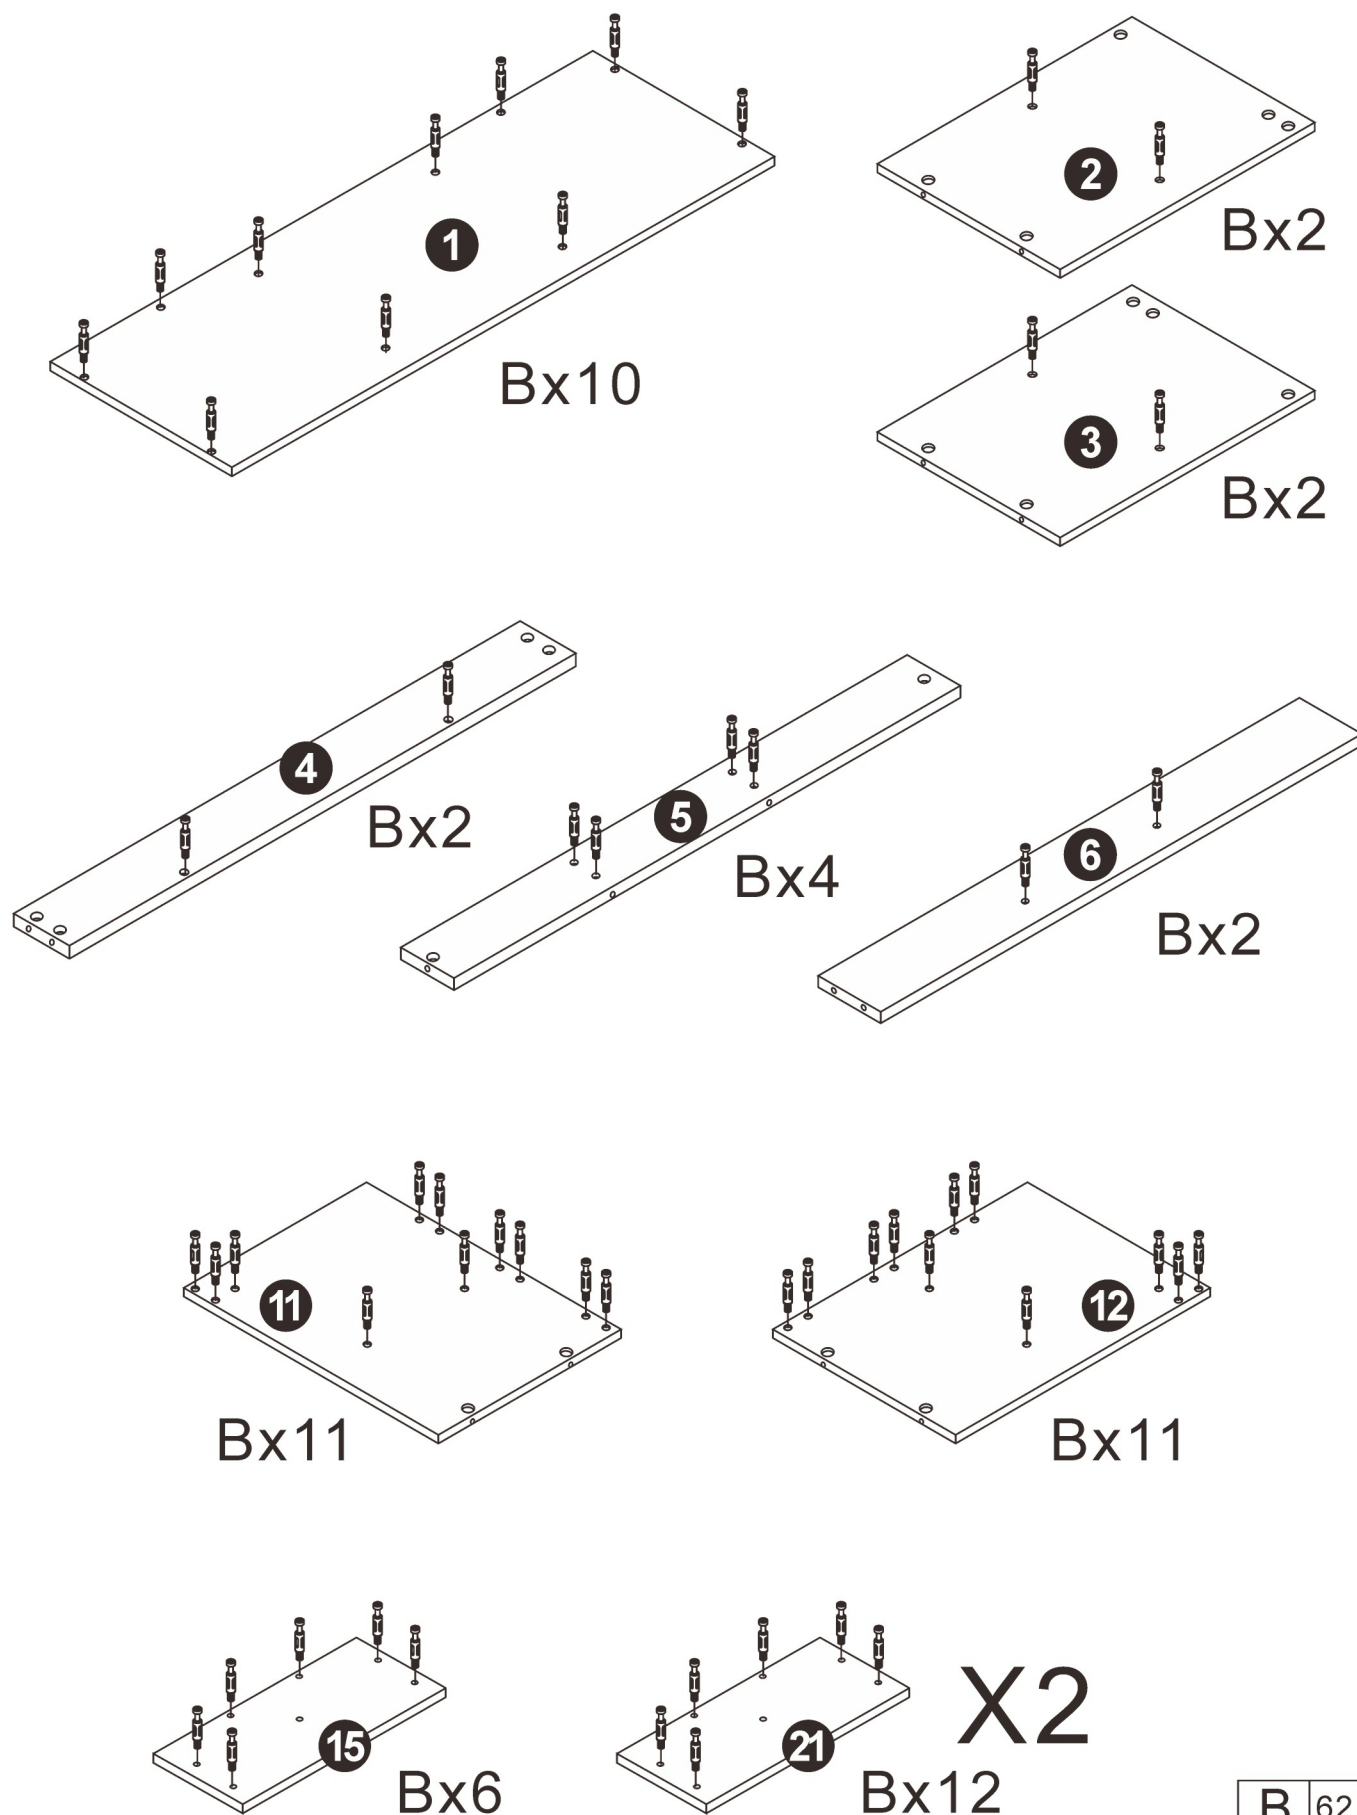


B	62PCS
	
6*28mm	

2

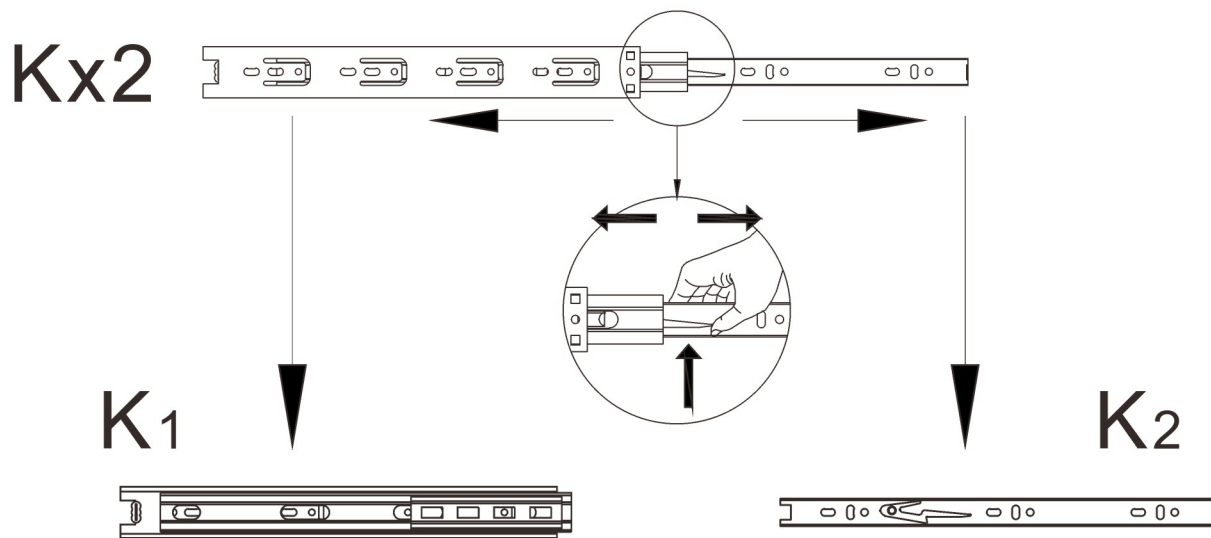

K ₁	2PCS
Three-section Rail	


3

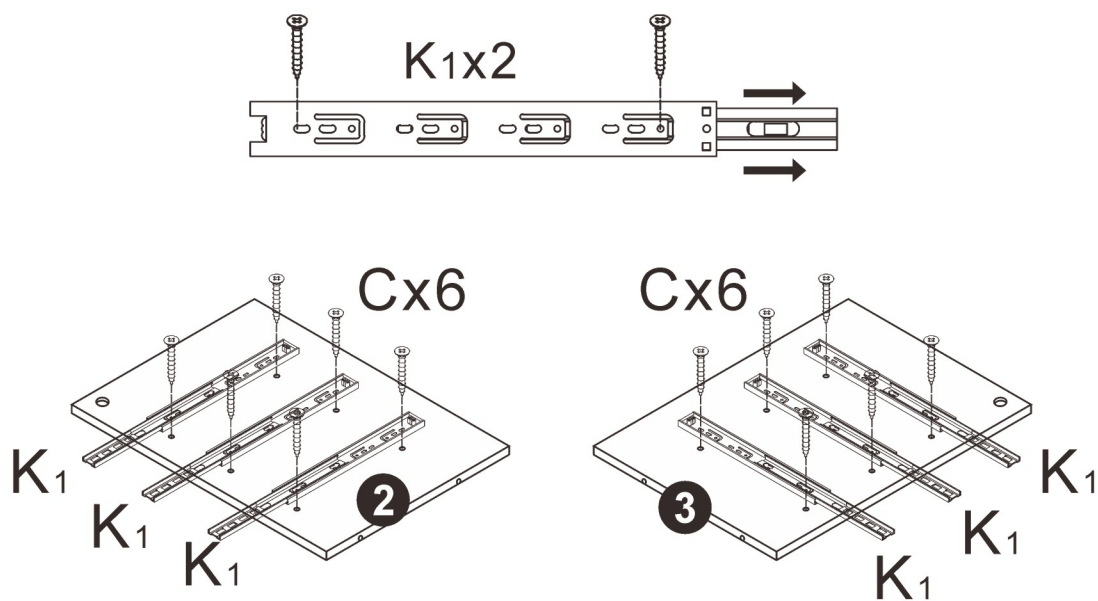

C	12PCS
3.5*14mm	


K ₁	3PCS
12 inch Three-section Rail	

4

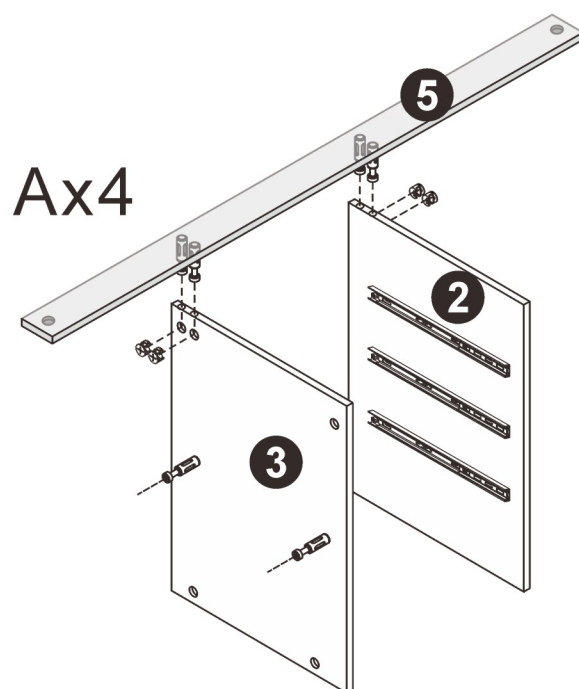


A	4PCS
	
15*10mm	

5

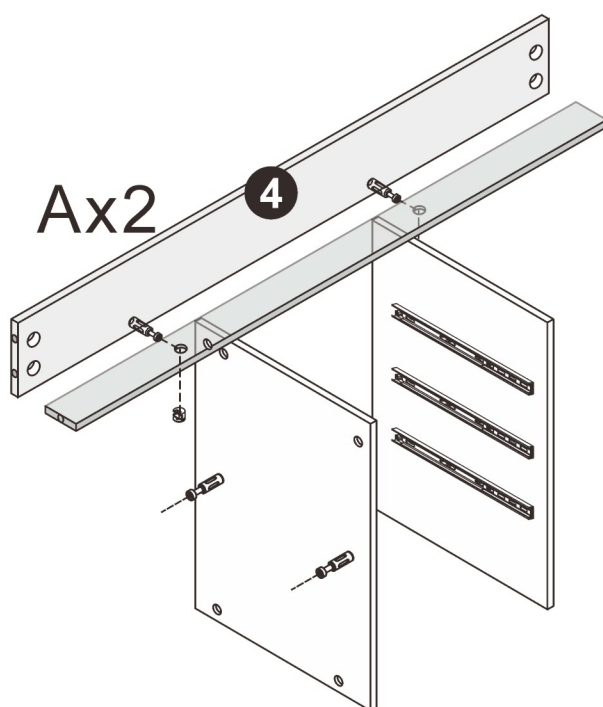

A	2PCS
	
15*10mm	

6

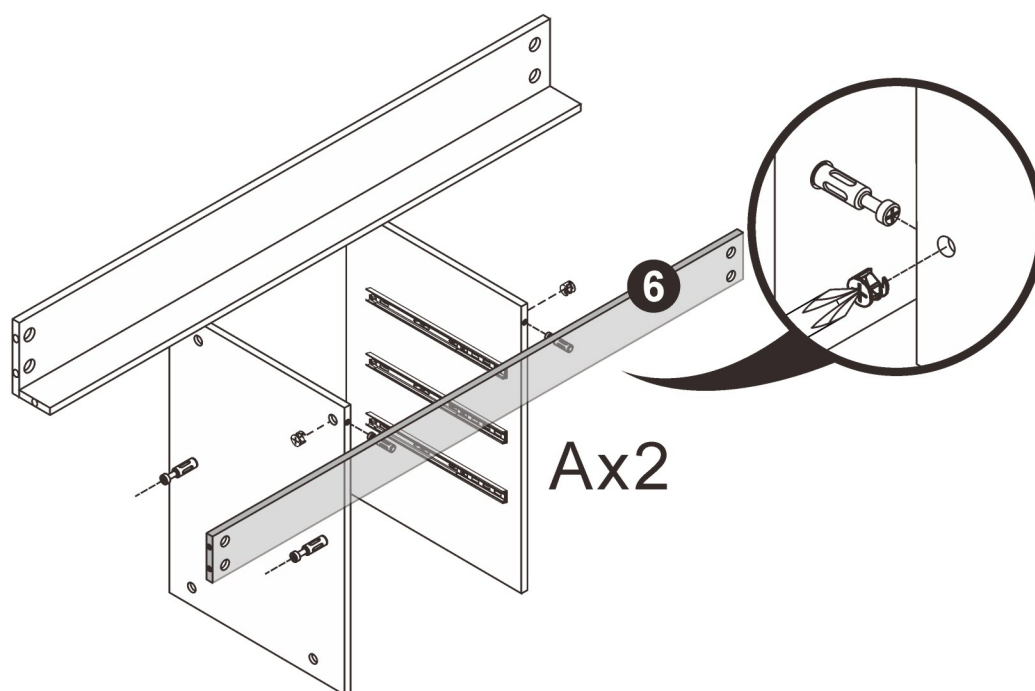


Ax2

A 2PCS



15*10mm

7

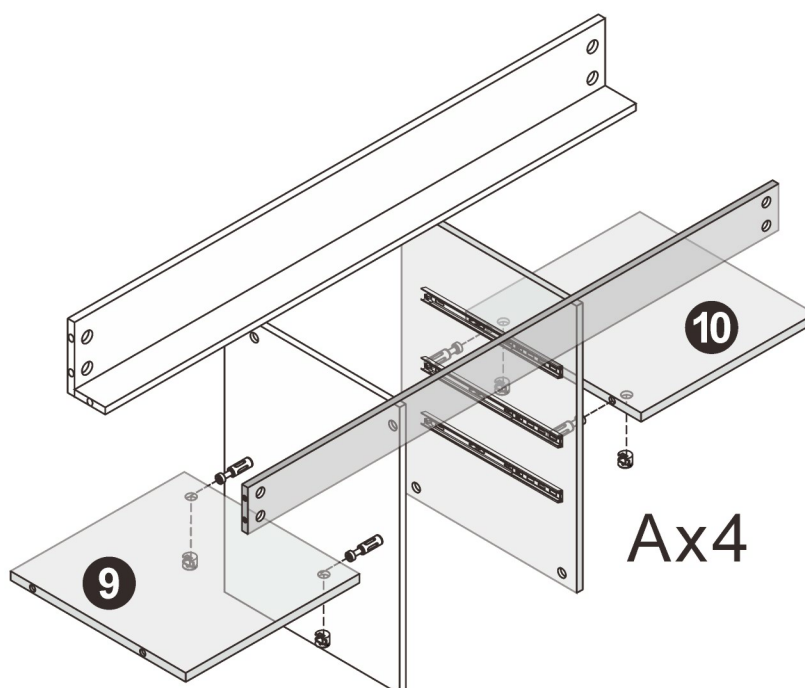


Ax4

A 4PCS




15*10mm

6

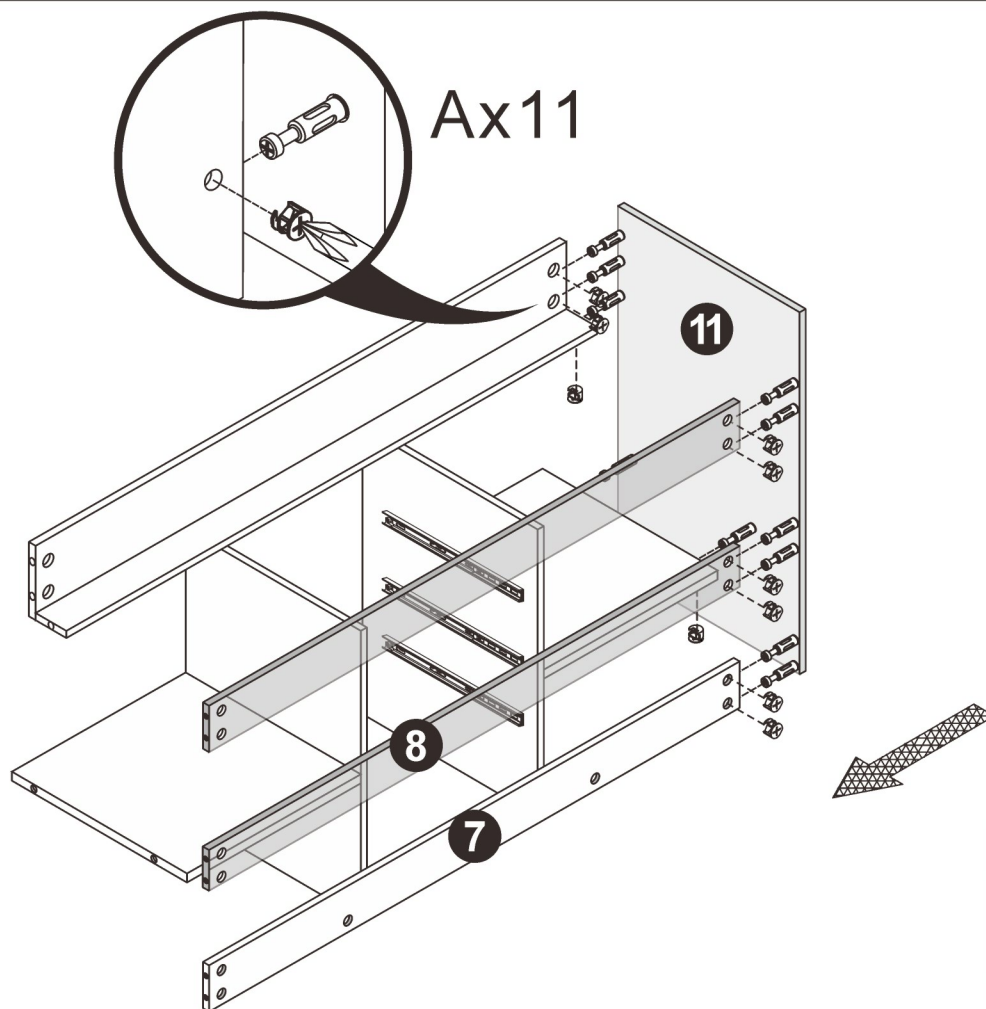


A	11PCS
	
15*10mm	

7

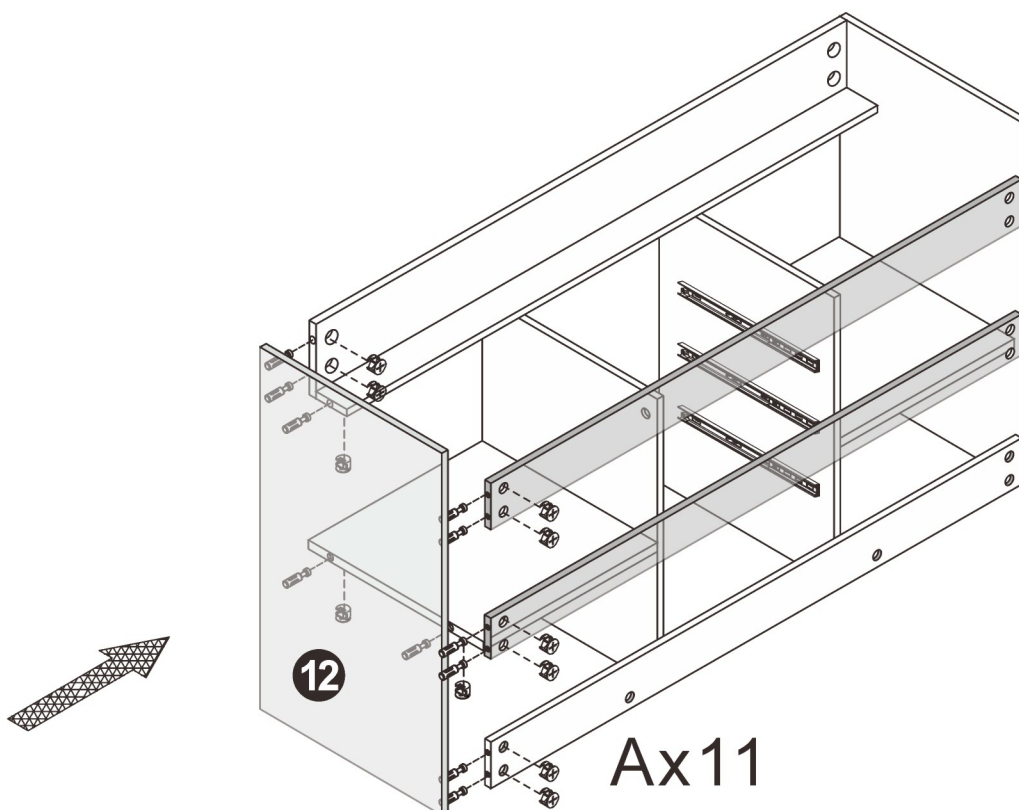


A	11PCS
	
15*10mm	

6

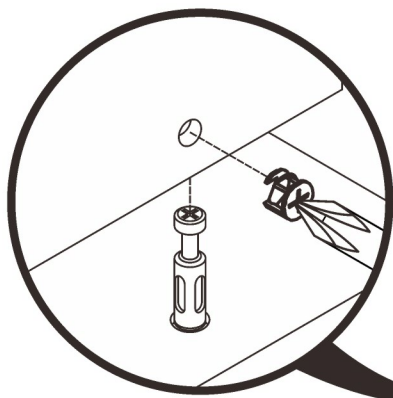

Ax10

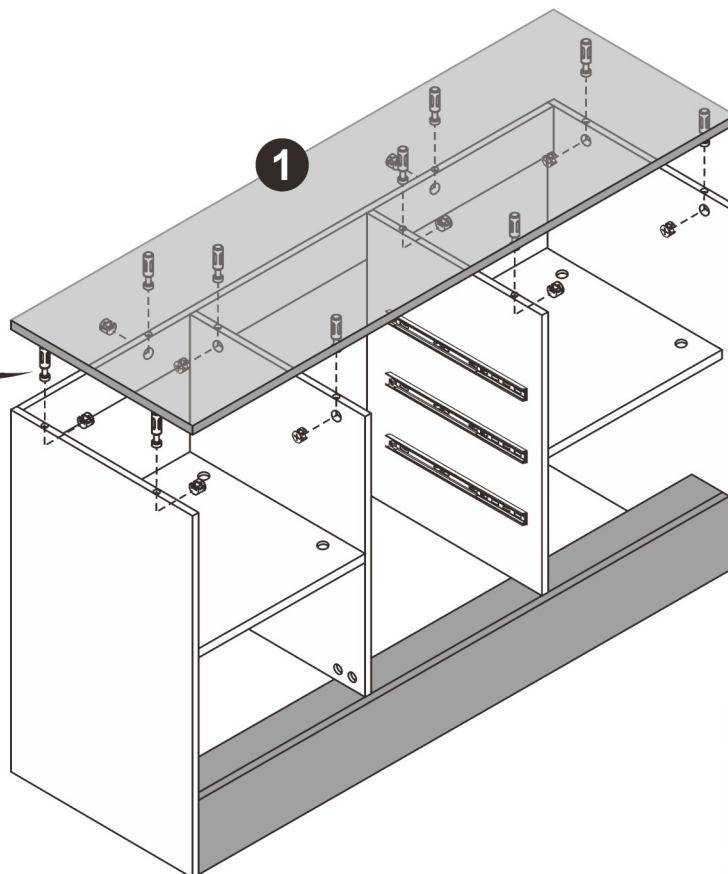


A 10PCS



15*10mm

7

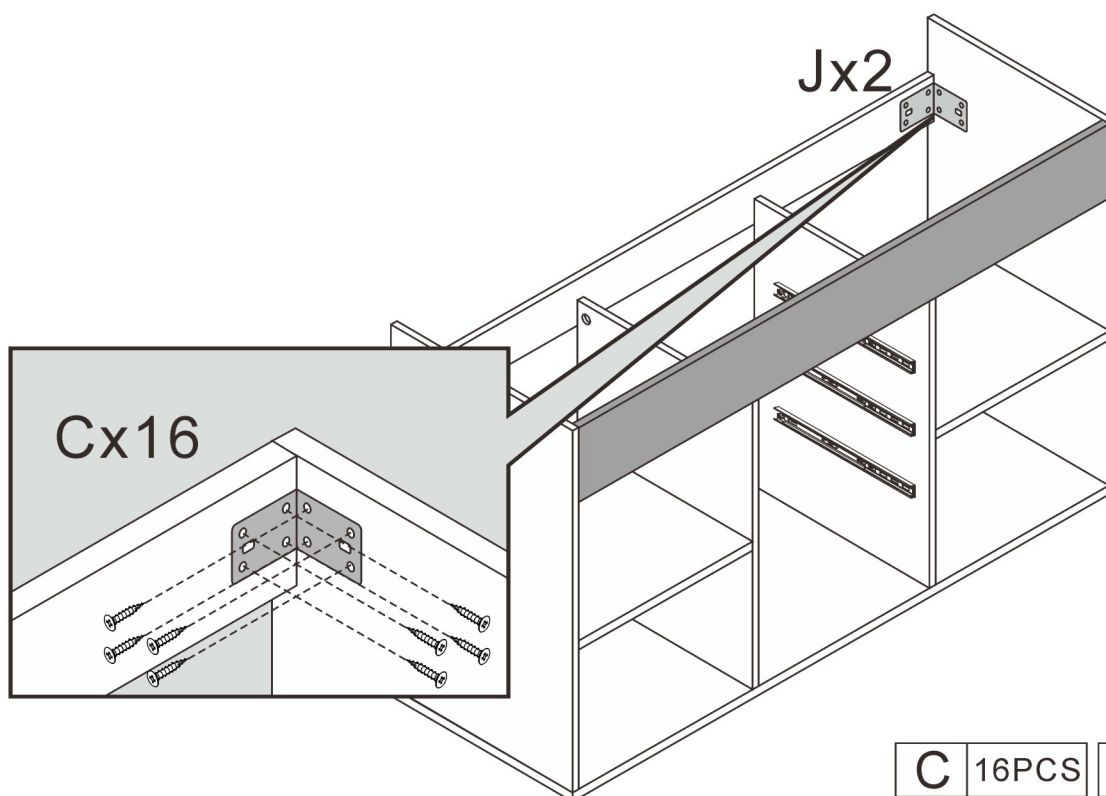

Cx16

Jx2

C 16PCS



3.5*14mm


J 2PCS




Corner code


10

Hx4
Cx4

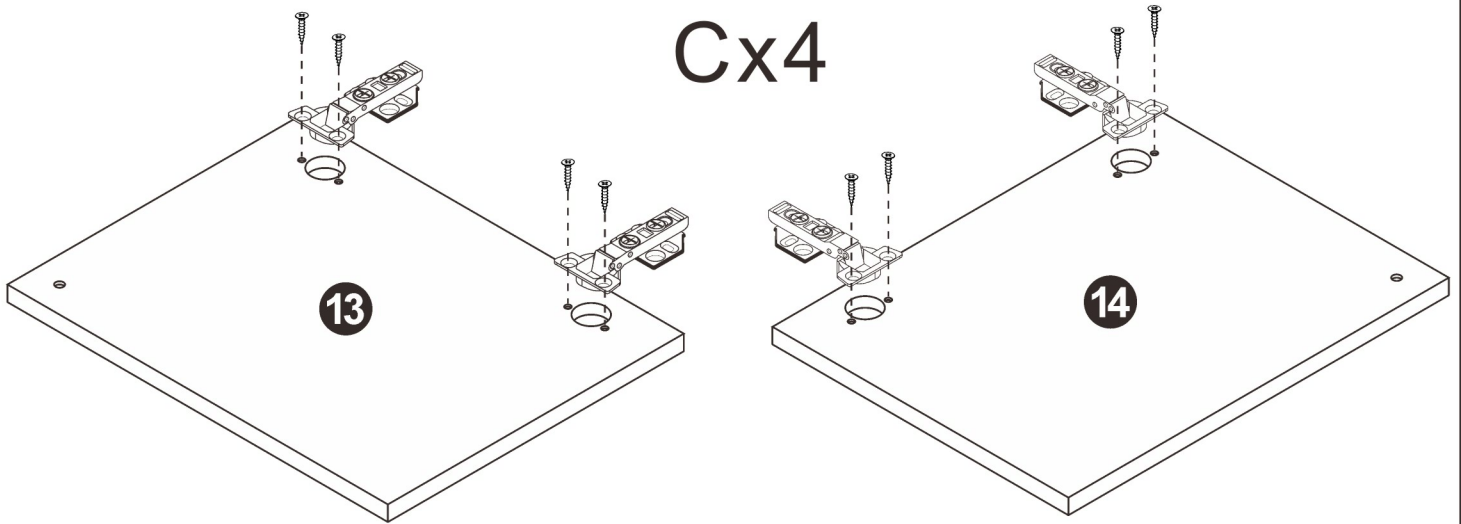

C	8PCS	H	4PCS
			
3.5*14mm		Big bend	

11

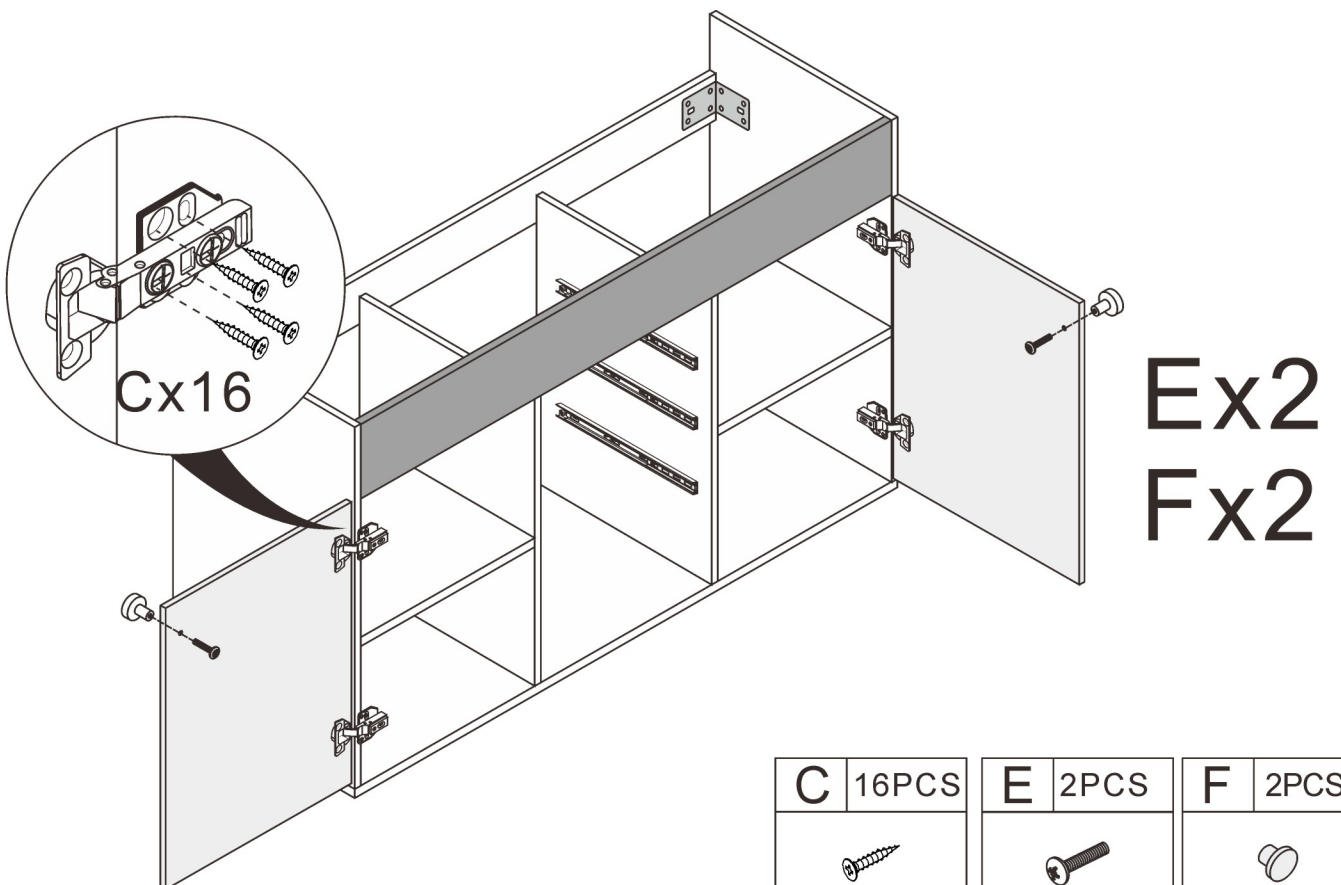



C	16PCS	E	2PCS	F	2PCS
					
3.5*14mm		4*20		Handles	

SPECIAL TIPS FOR DOOR ALIGNMENT


CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS

CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES





- A. Lateral adjustment (Moving door left-right) by screw adjusting
 Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
 Réglage latéral (porte mobile gauche-droite) par réglage à vis

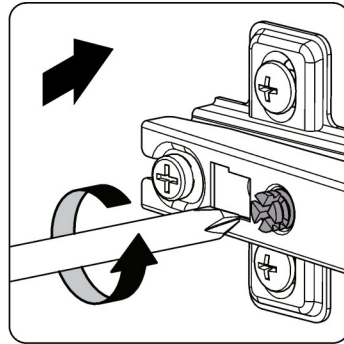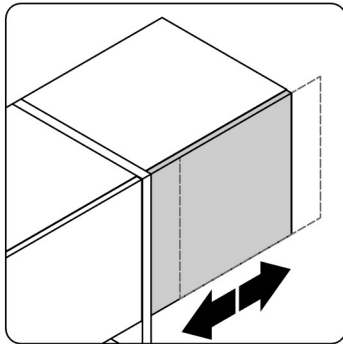





OR

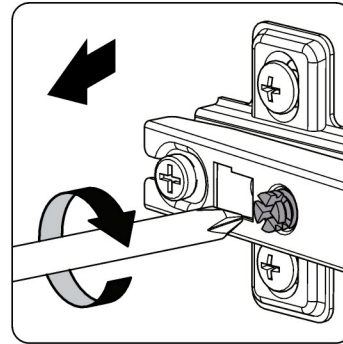


- B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
 Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
 Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

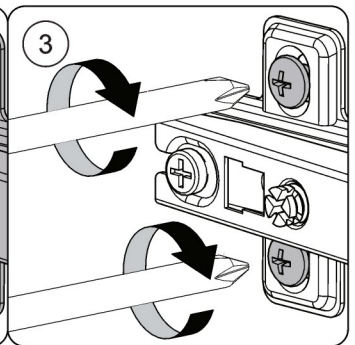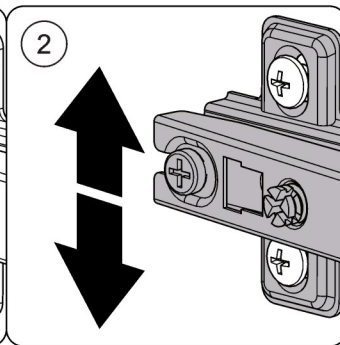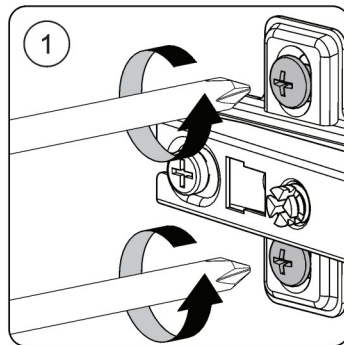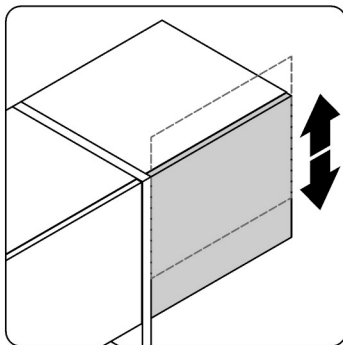

- C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
 Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
 Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

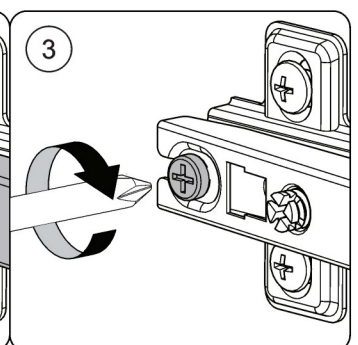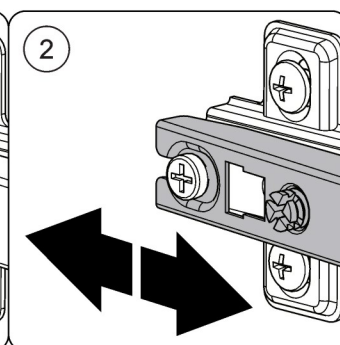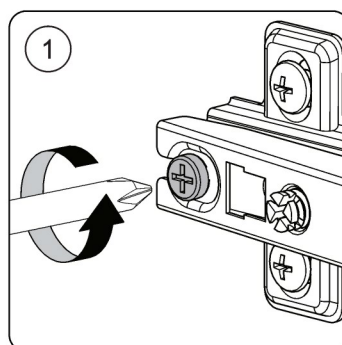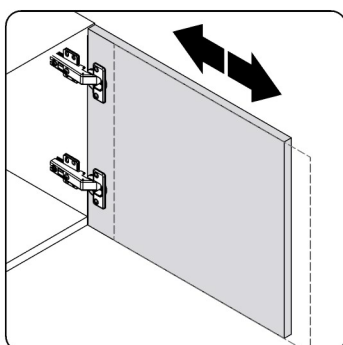


14

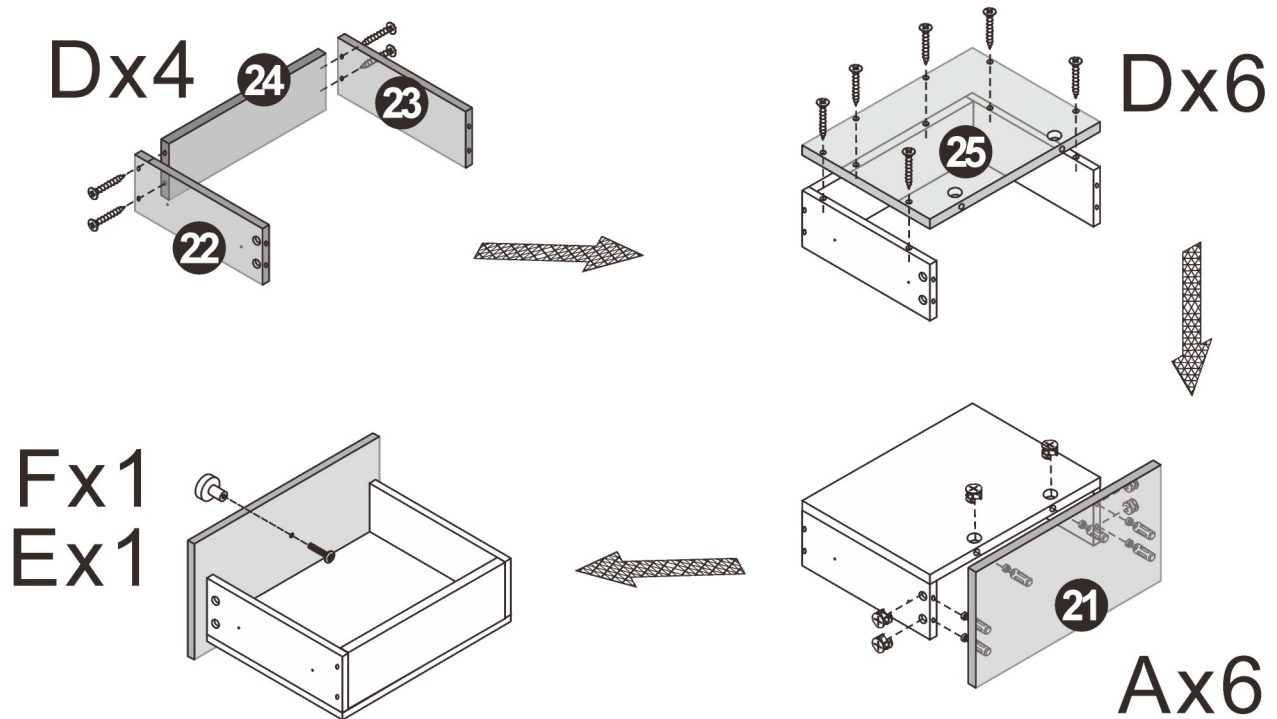

X2



A	12PCS	D	20PCS	E	2PCS	F	2PCS
							
15*10mm		3.5*35mm		4*20		Handles	

15

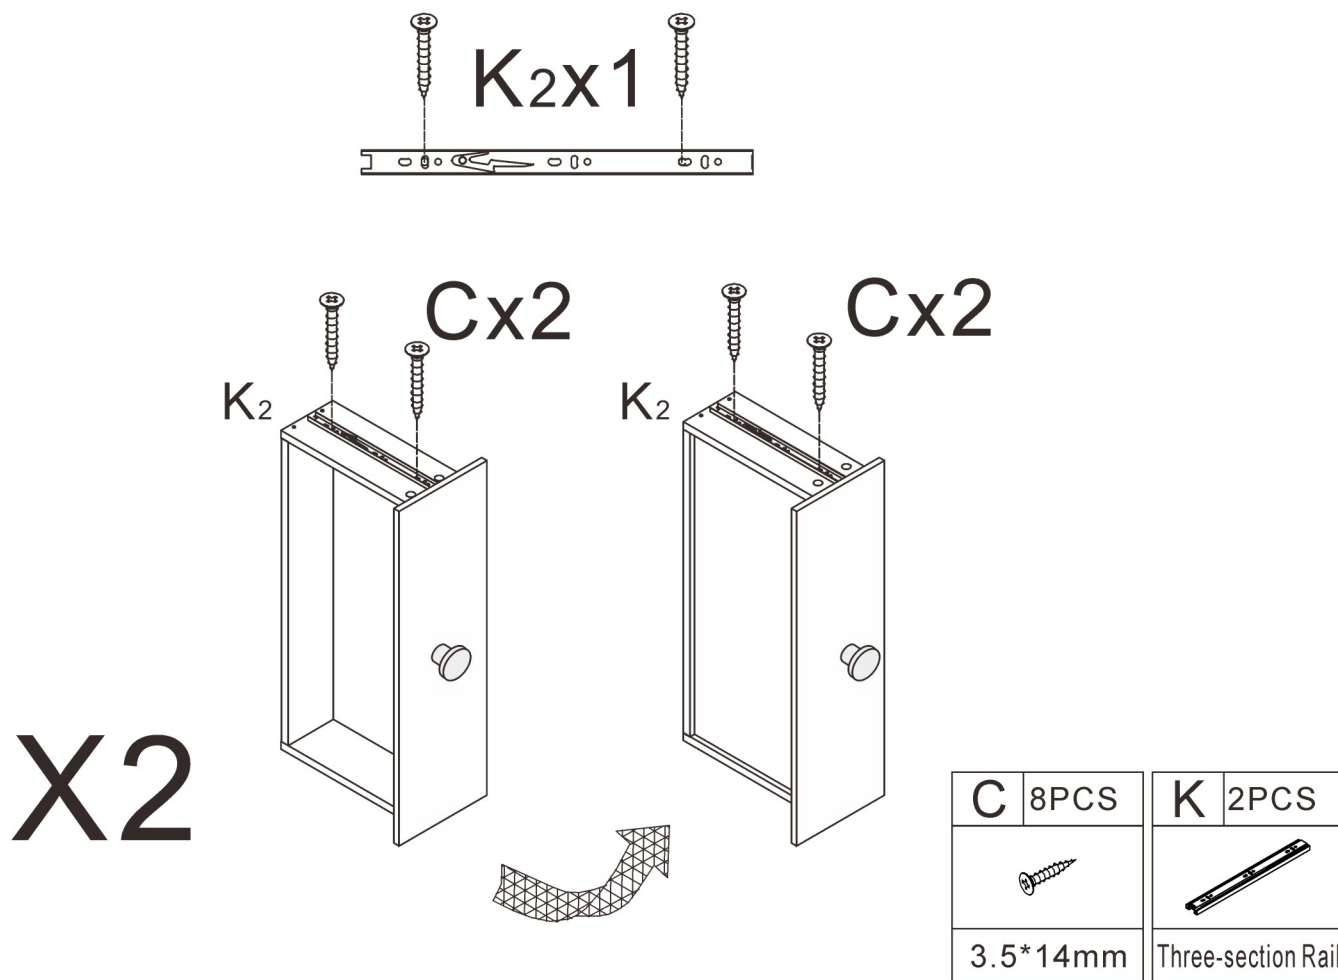

C	8PCS	K	2PCS
			
3.5*14mm		Three-section Rail	



Dx4

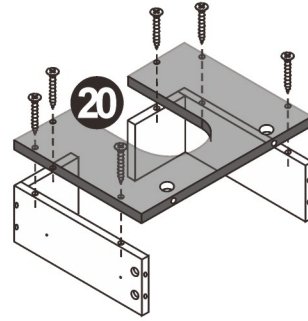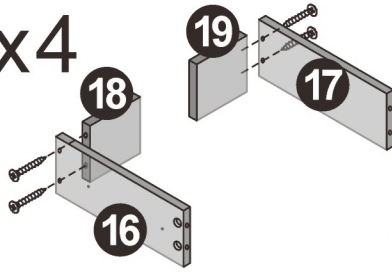




Dx6



Ex1
Fx1

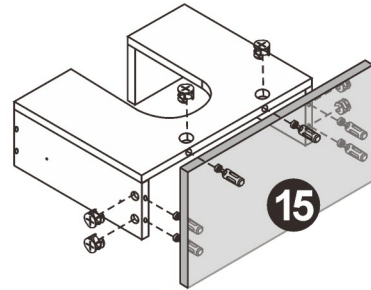
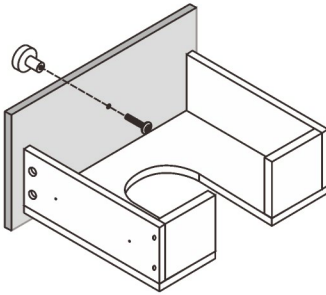


Ax6

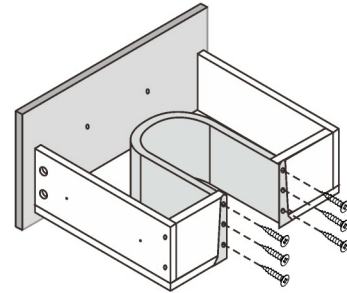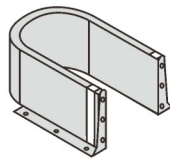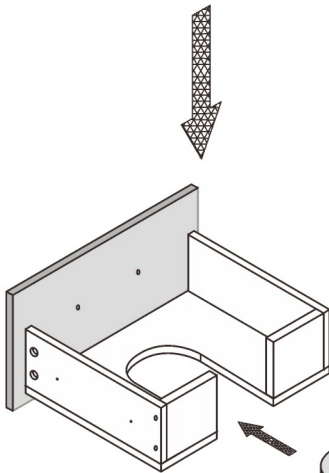

Cx6


Kx2
Cx4

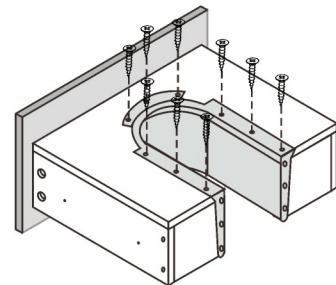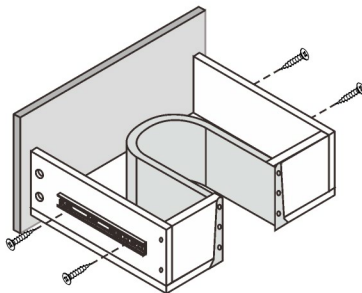

Cx9

A 6PCS	C 19PCS	D 10PCS	E 1PCS	F 1PCS	K 2PCS
					
15*10mm	3.5*14mm	3.5*35mm	4*20	Handles	Three-section Rail


17

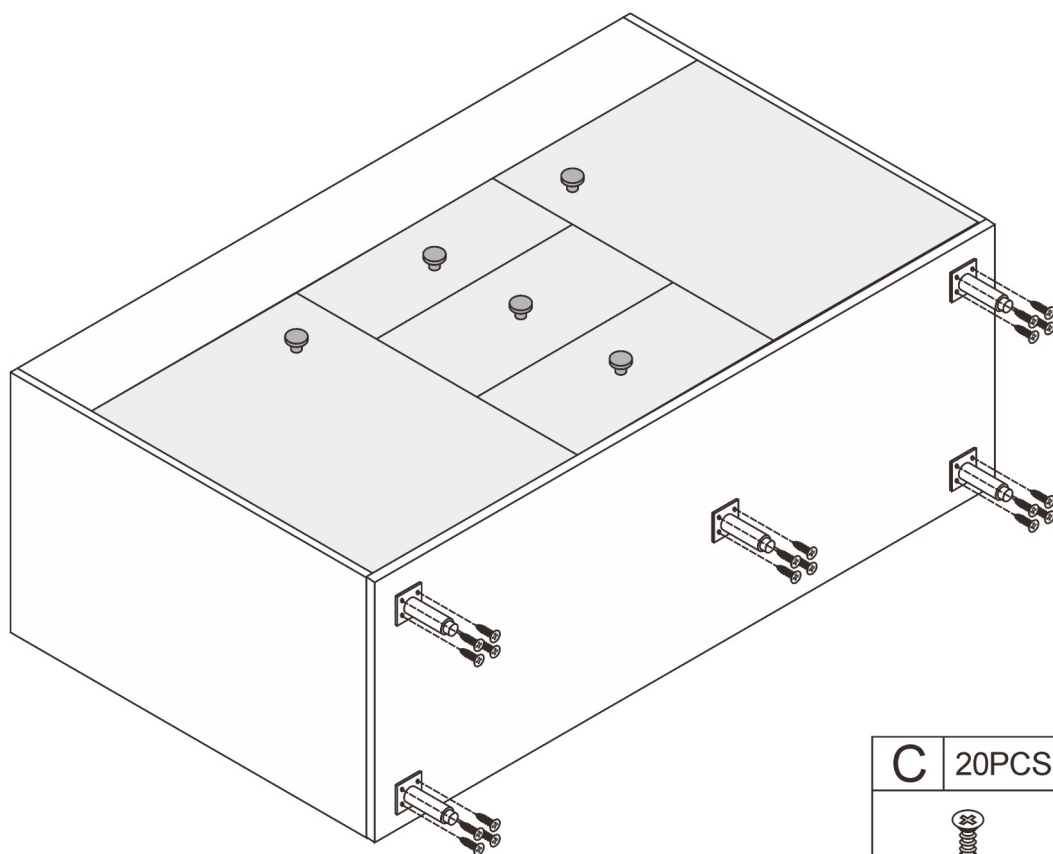


Cx20
Lx5

C	20PCS	L	5PCS
			
3.5*14mm		Hardware Feet	


18


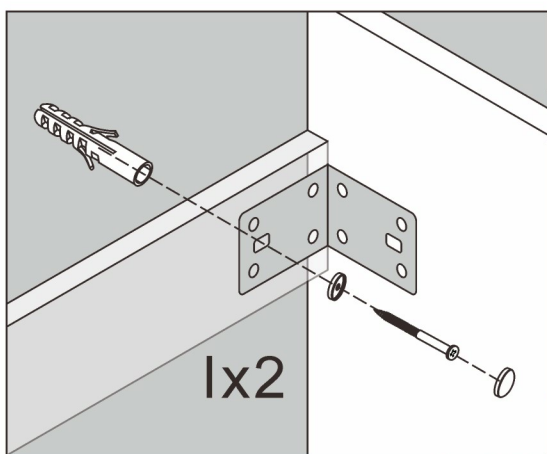


Ix2

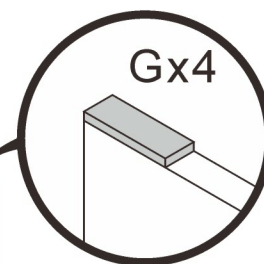


Gx4

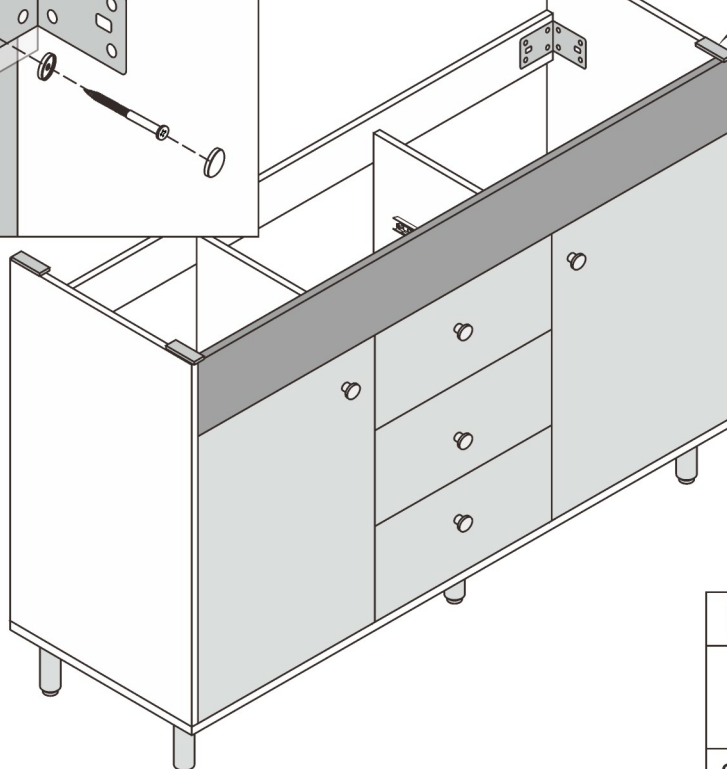


G	4PCS	I	2PCS
			
Sponge Mat		Expansion screw	

17

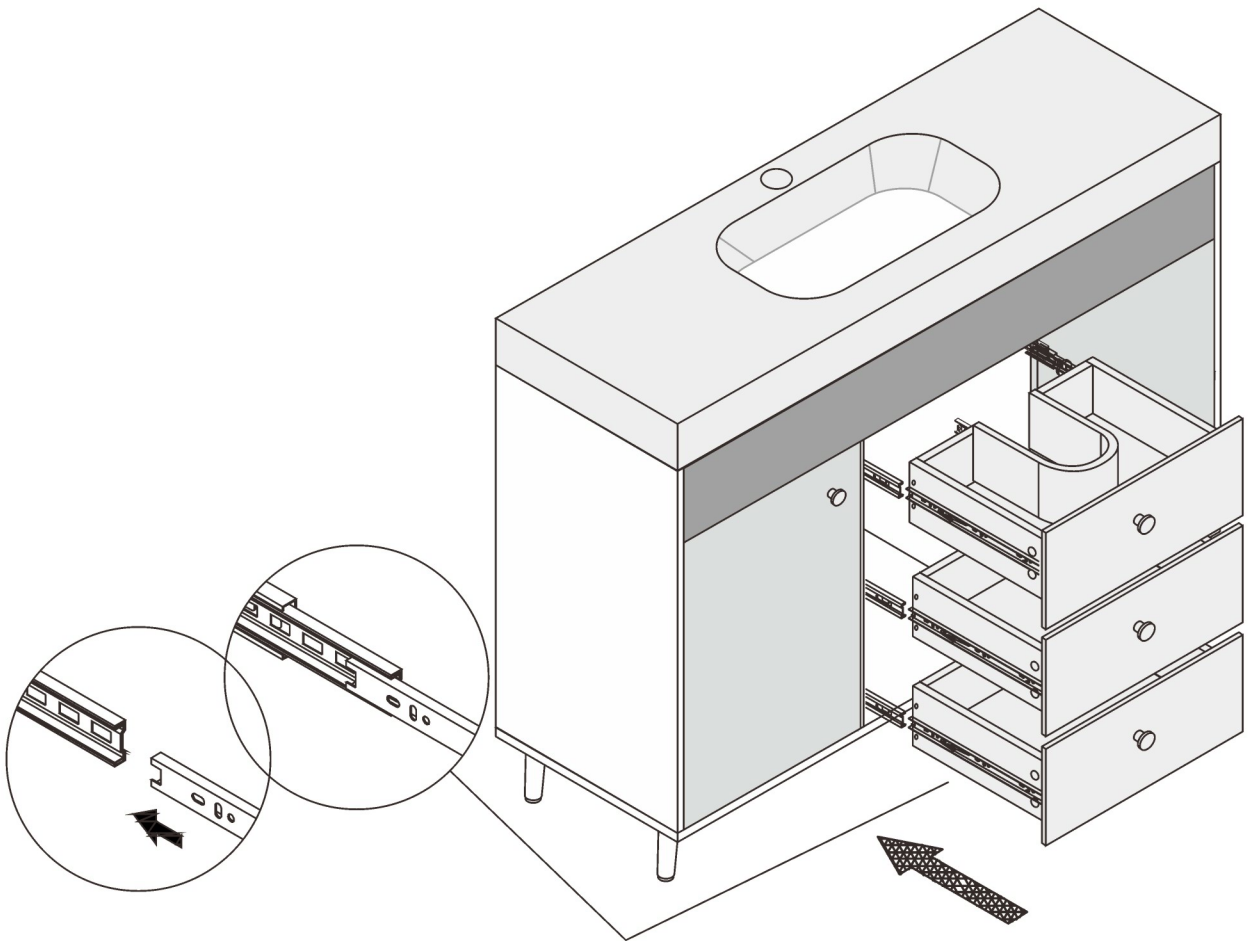

18

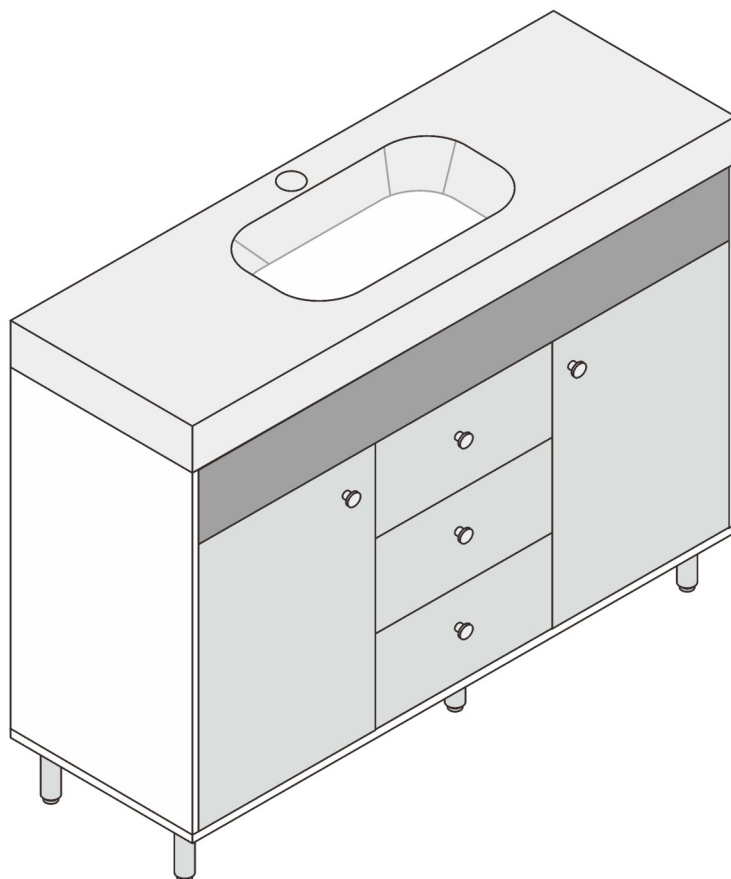

OK