



L-Shaped Desk with Hutch

ASSEMBLY INSTRUCTION

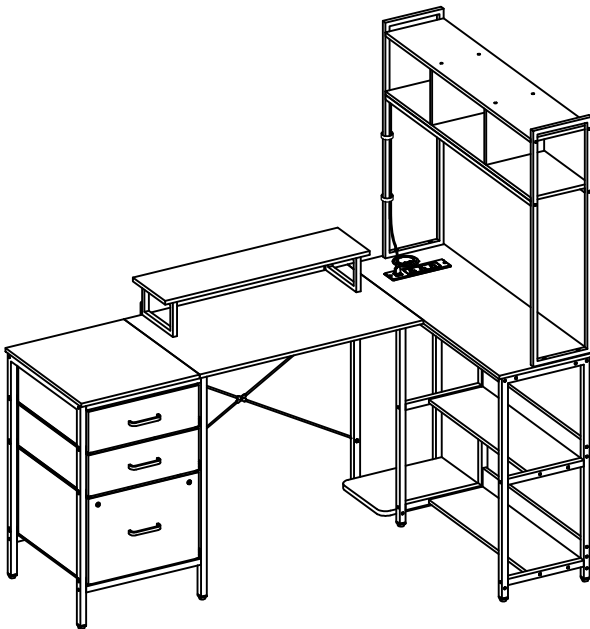

Option A

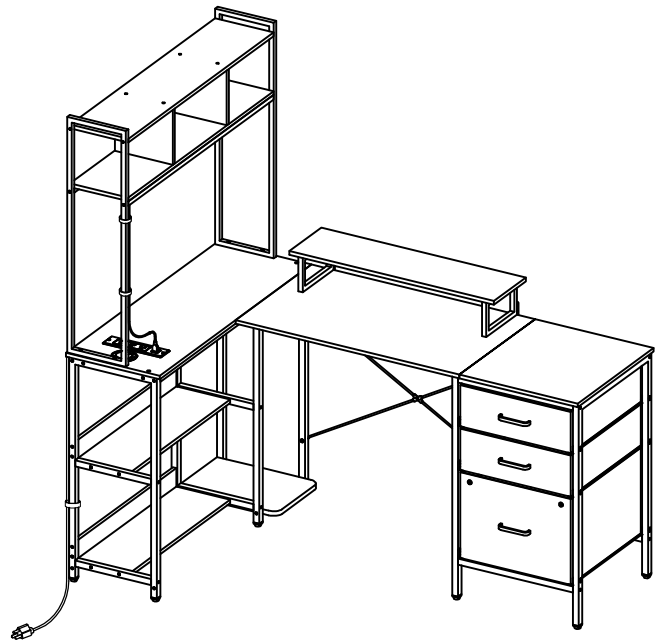

Option B

(Note:Two people are recommended to install, which will greatly improve your installation efficiency.)


Thank you for purchasing our products.

As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please feel free to contact us the first time,We will provide you with a 100% satisfactory solution.


TIPS:

1. Please read this instruction manual carefully, follow it step by step and pay attention to the notes, you will assemble it quickly, safely and correctly.
2. Two people are recommended to install,which will greatly improve your installation efficiency.
3. Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing

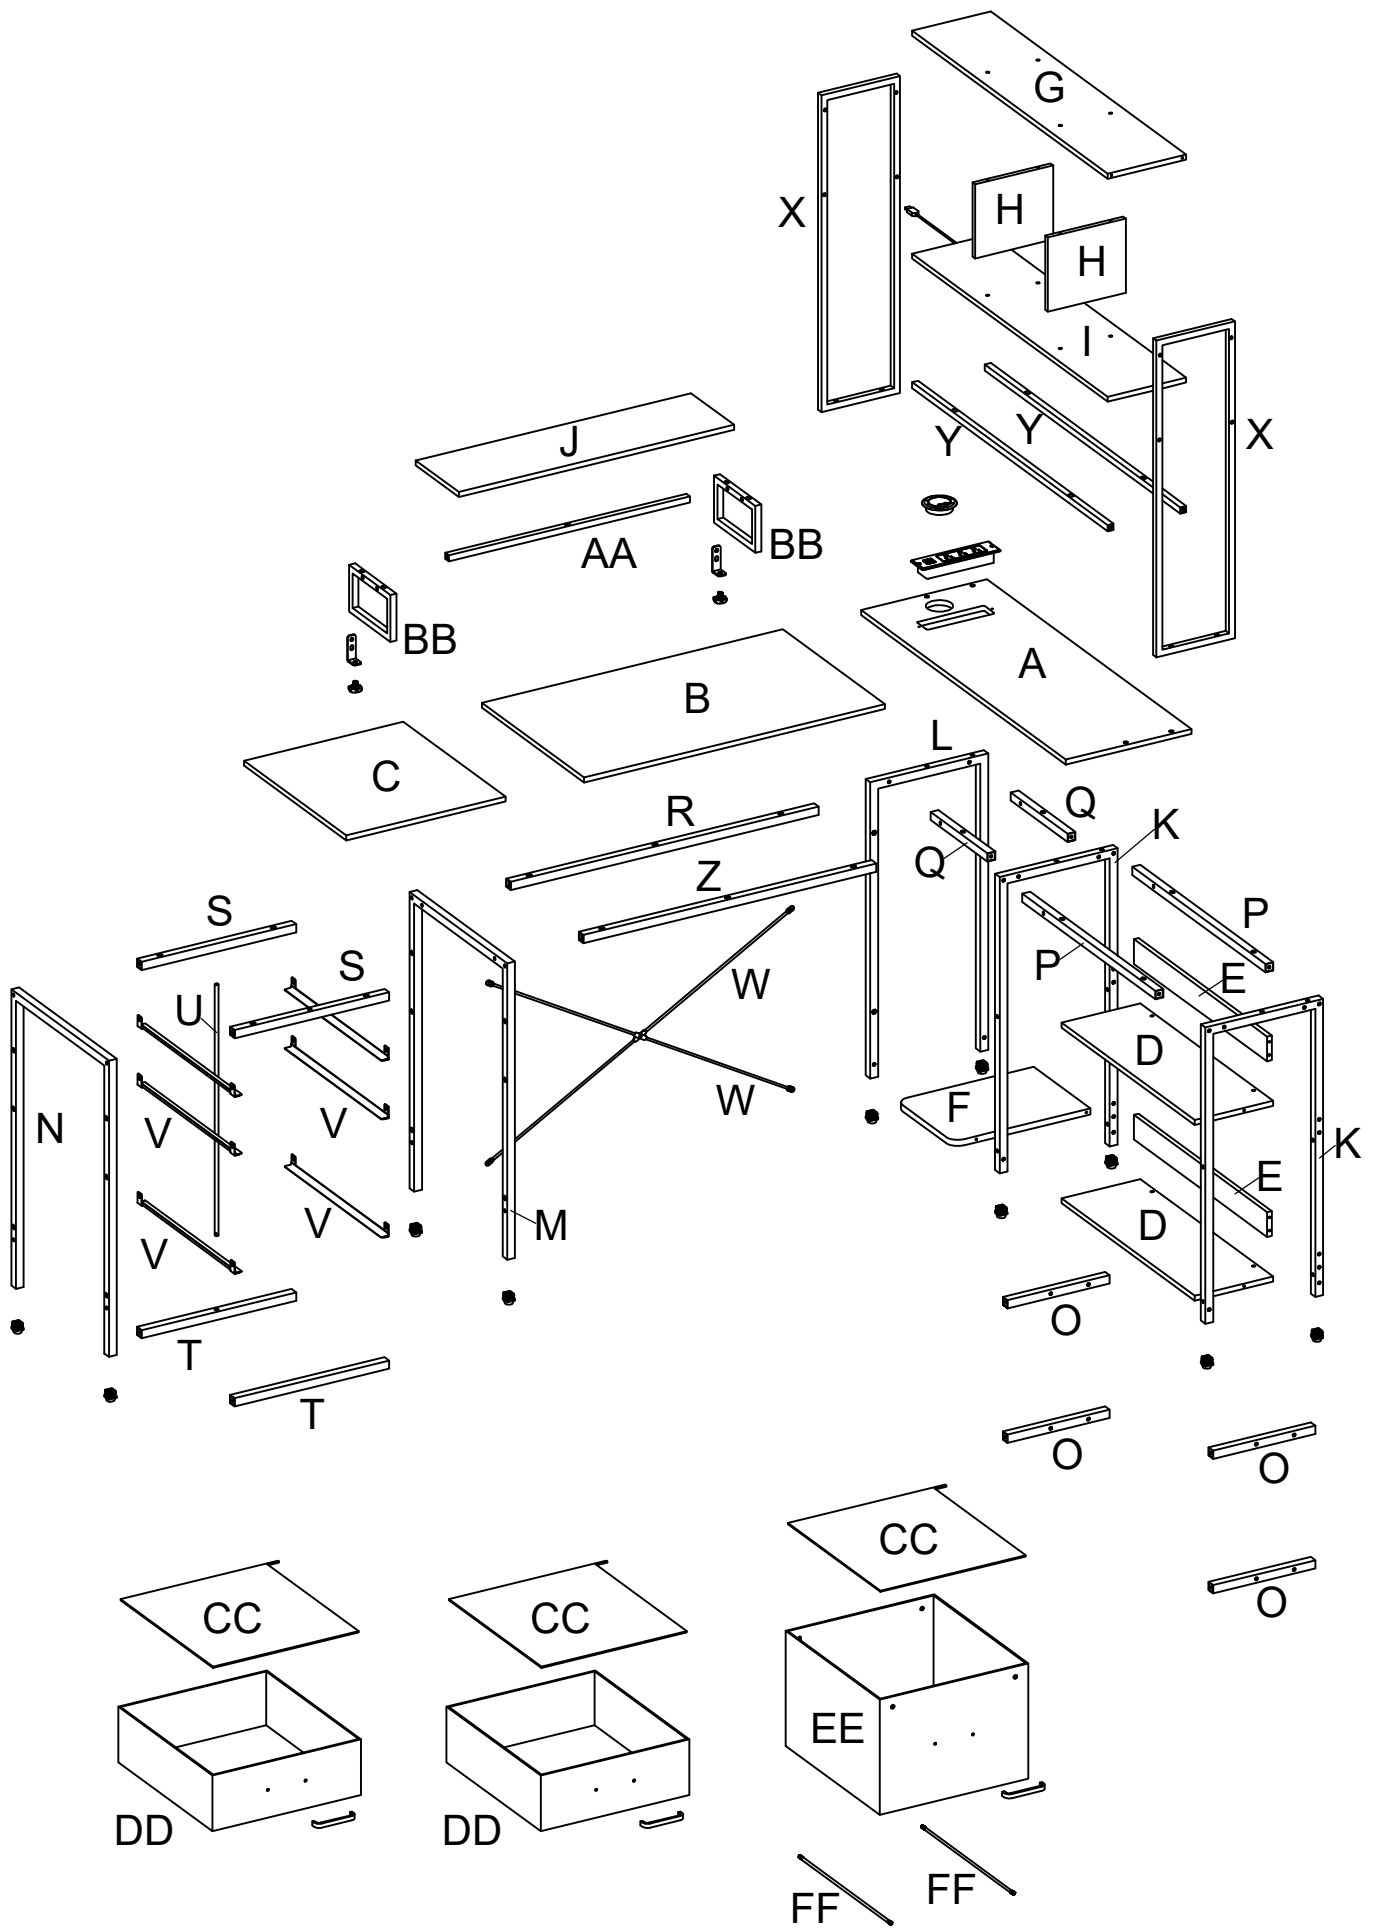


PART LIST A


A x 1pc




B x 1pc

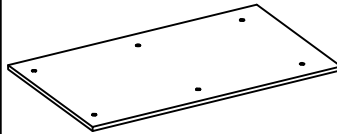


C x 1pc




D x 2pcs

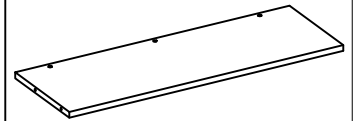


E x 2pcs




F x 1pc




G x 1pc




H x 2pcs




I x 1pc




J x 1pc




K x 2pcs




L x 1pc




M x 1pc

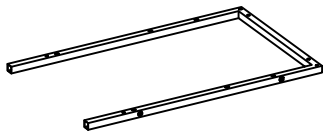

N x 1pc

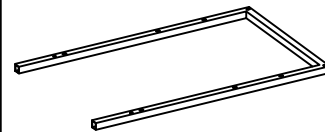


O x 4pcs




P x 2pcs




Q x 2pcs




R x 1pc

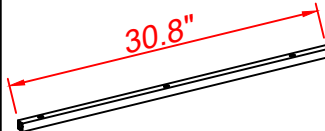

S x 2pcs



T x 2pcs



U x 1pc



L610

V x 6pcs



L427

W x 2pcs



Ø5x880


X x 2pcs



Y x 2pcs




Z x 1pc

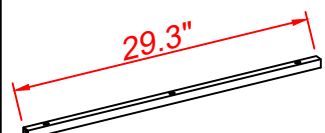


AA x 1pc




BB x 2pcs



CC x 3pcs




DD x 2pcs

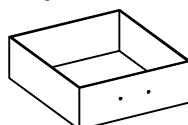


378x413x135

EE x 1pc

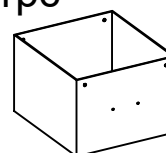





















378x413x280

FF x 2pcs




L400



HARDWARE LIST

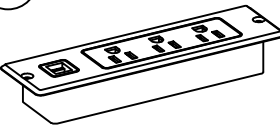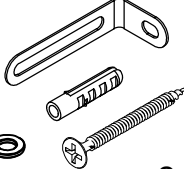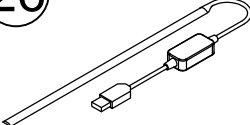①  M6x3534 pcs	②  M6x2716 pcs	③  M6x125 pcs	
④  M61 pc	⑤  M6x1412 pcs	⑥  M6x158 pcs	
⑦  M6x229 pcs	⑧  M6x164 pcs	⑨  M6x404 pcs	
⑩  M5x4524 pcs	⑪  M6x4014 pcs	⑫  14 pcs	⑬  M3x1211 pcs
⑭  1 pc	⑮  Ø601 pc	⑯  20x20xM610 pcs	⑰  3 pcs
⑱  M4x66 pcs	⑲  2 pcs	⑳  M8x122 pcs	㉑  3 pcs
㉒  M4x402 pcs	㉓  RF Remote Control1 pc	㉔  M42 pcs	㉕  1 pc
㉖  60cm1 pc	㉗  2 pcs	㉘  5 pcs	

LED Strip Installation

Tear off the tape of the LED strip, stick the LED strip roughly in the center of the bottom of shelf panel (I). (Between the eight holes).
Fix the LED strip with plastic clips.
Note: Do not cover the lamp beads.


- | | | |
|----|---|----|
| 13 |  | x9 |
| 26 |  | x1 |
| 27 |  | x2 |
| 28 |  | x5 |

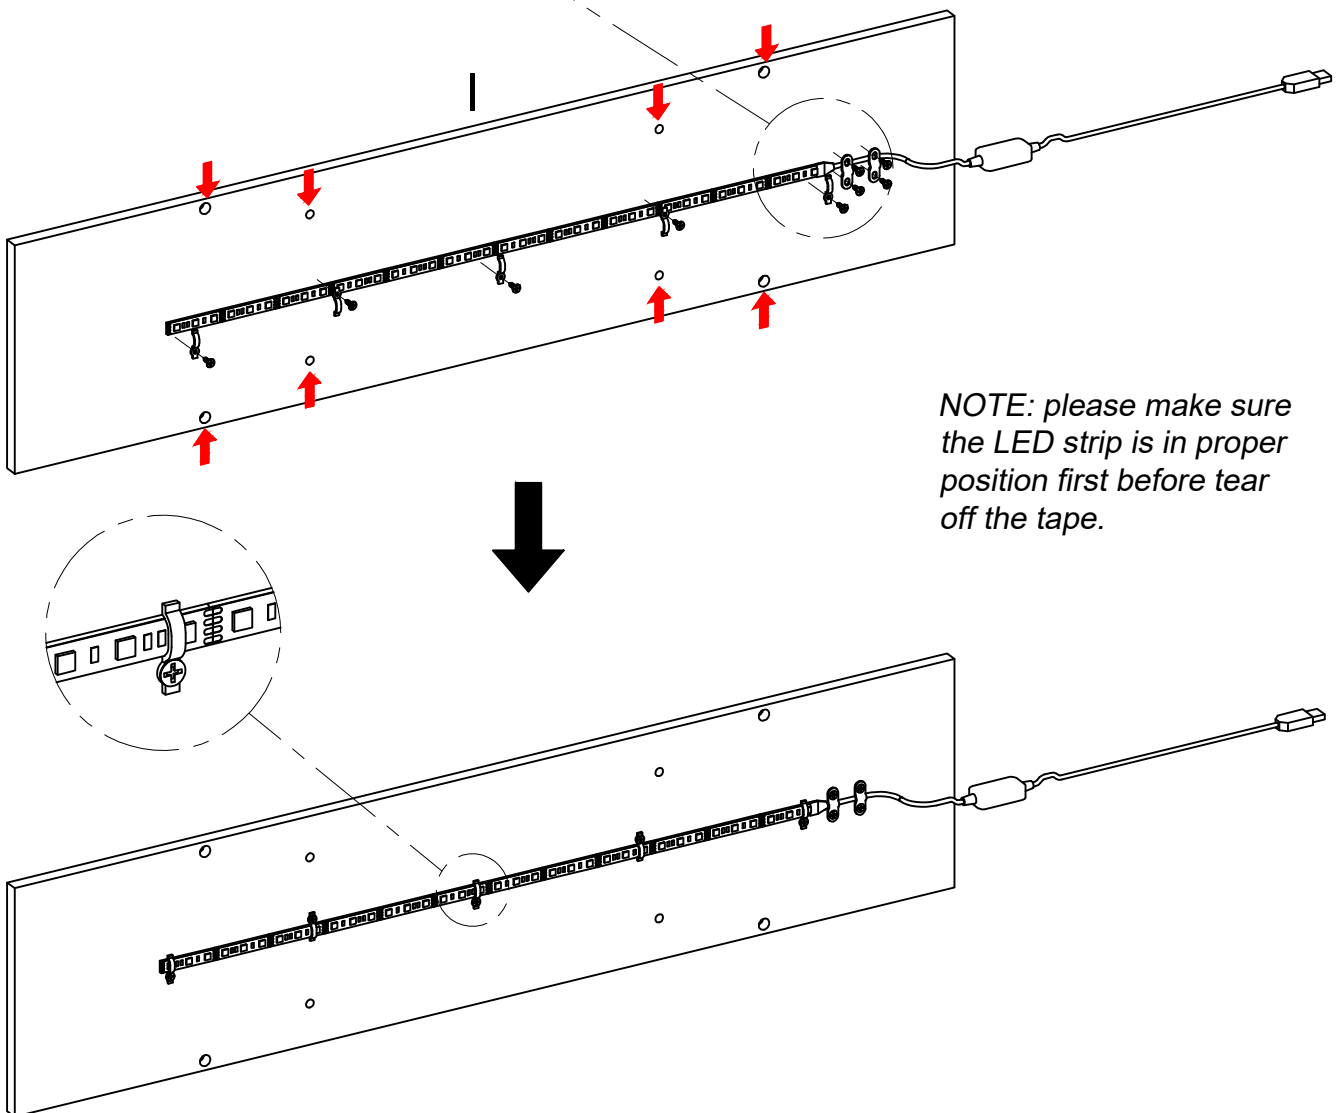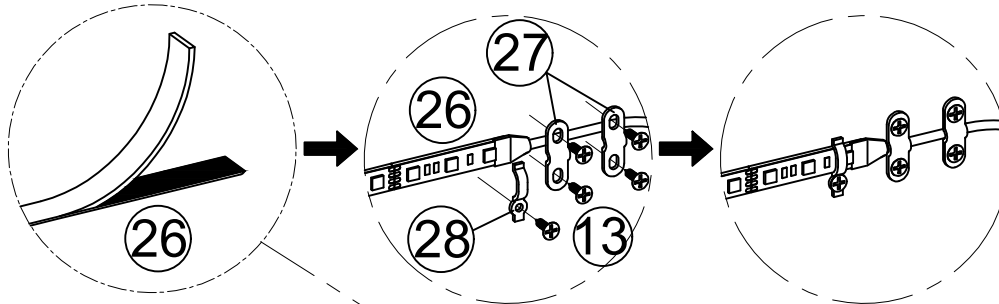




NOTE: please make sure the LED strip is in proper position first before tear off the tape.

Option A



STEP 1

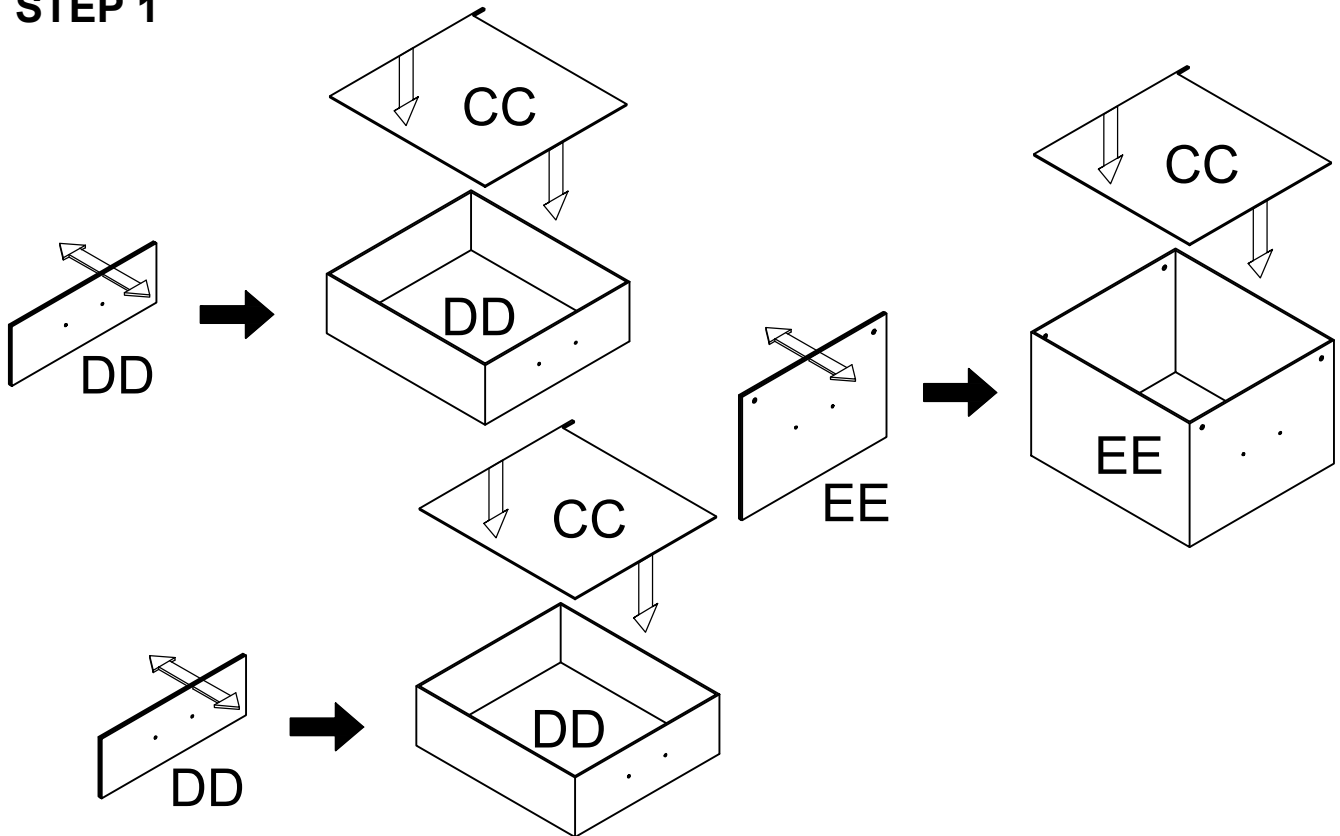



STEP 2

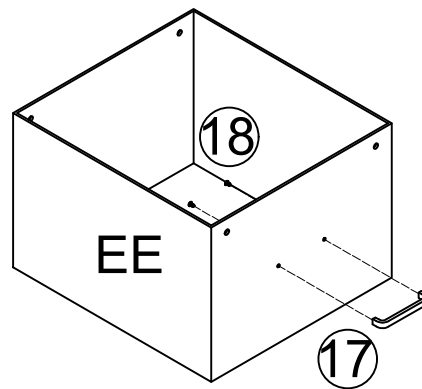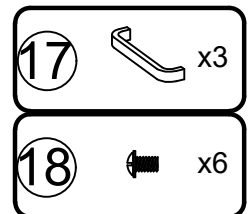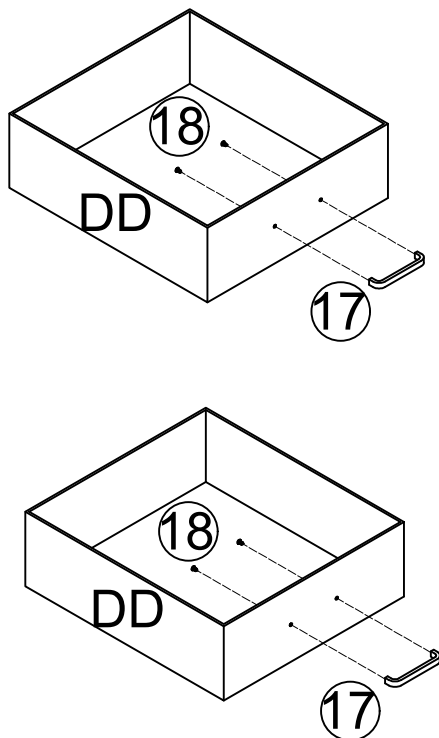

STEP 3

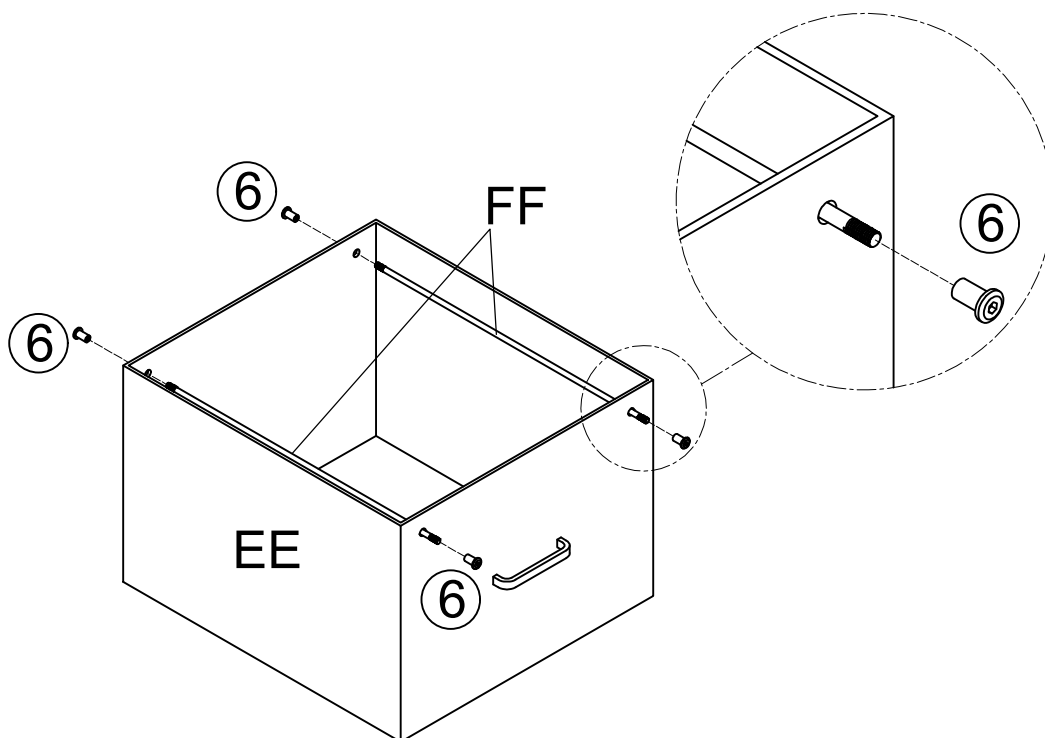


STEP 4

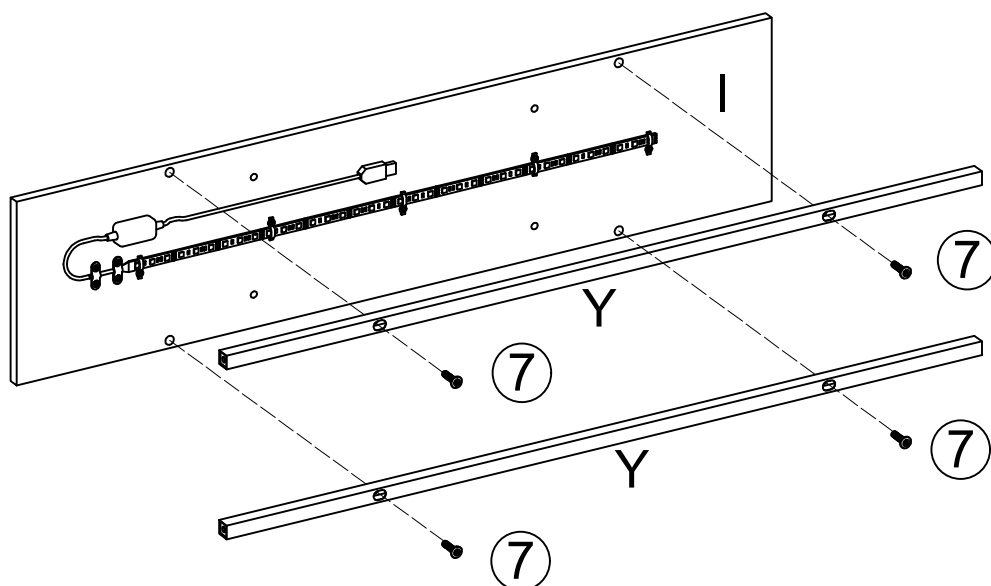

STEP 5


11  x8

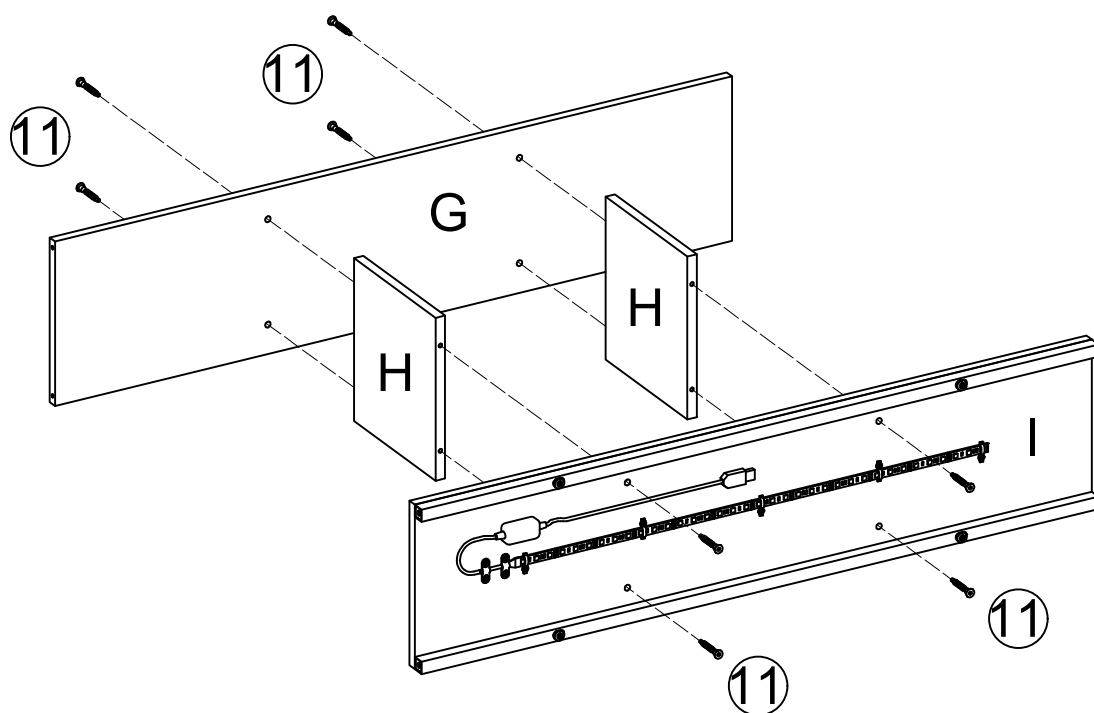



STEP 6

1  x4



10  x4

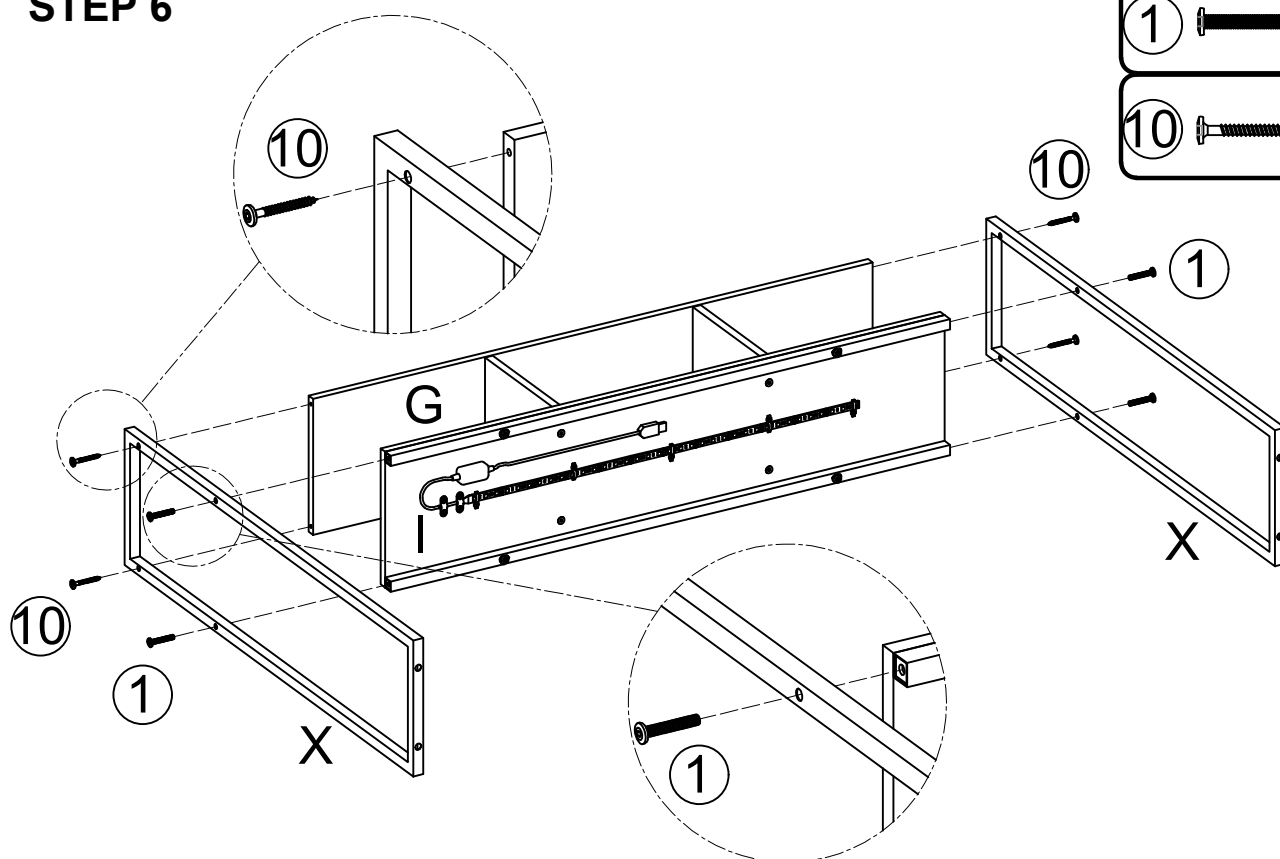



STEP 7

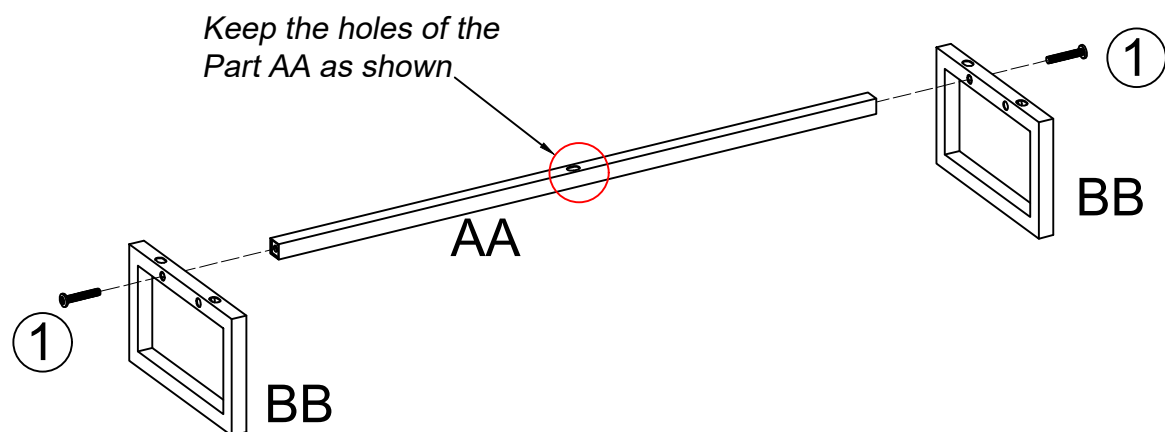

STEP 8

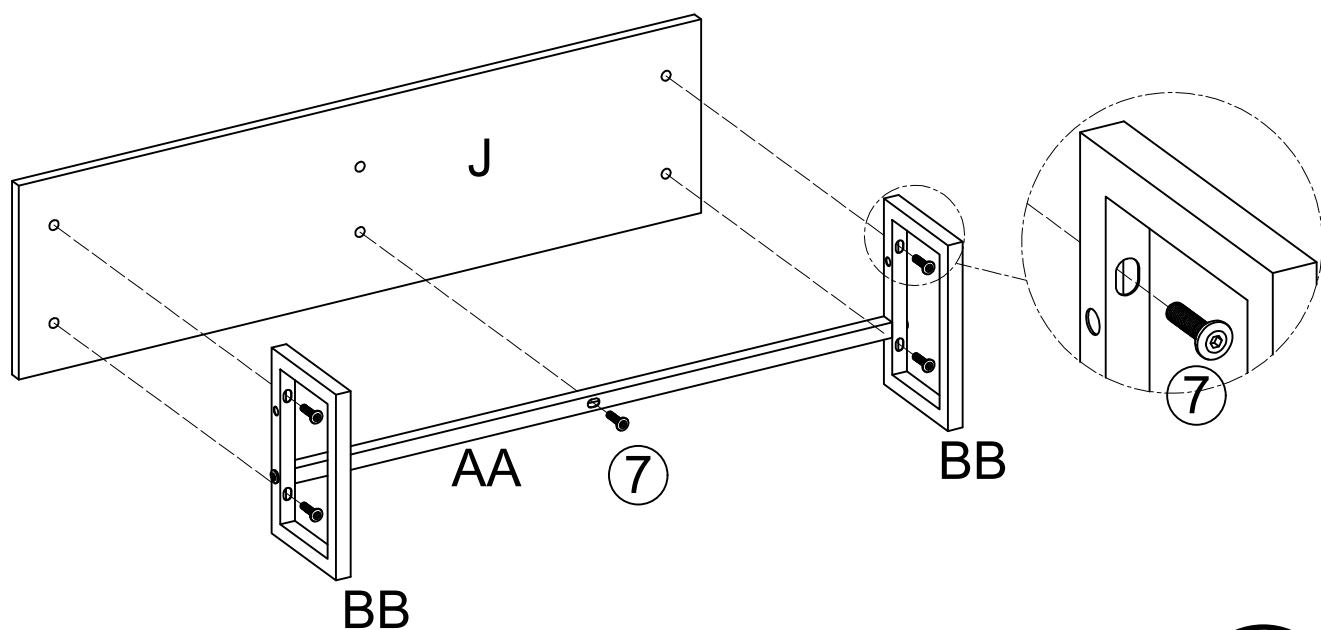


STEP 9

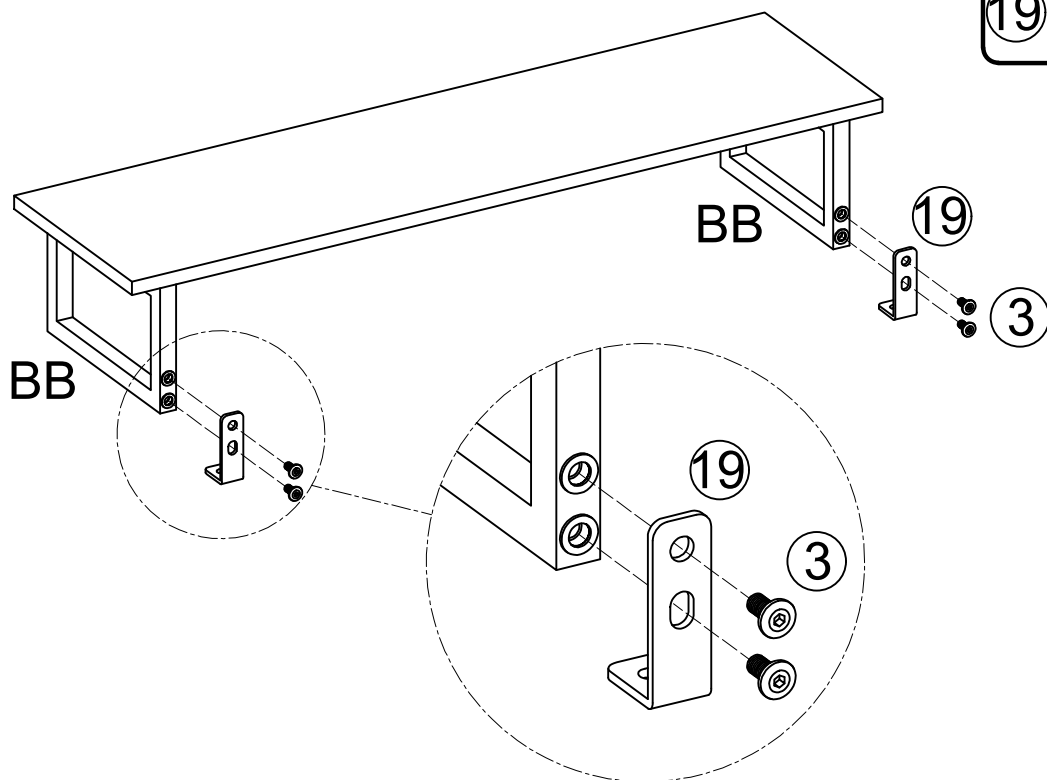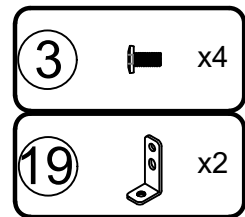

STEP 10





Please use a hammer or solid tools (not included) to knock the footpads into the frame.

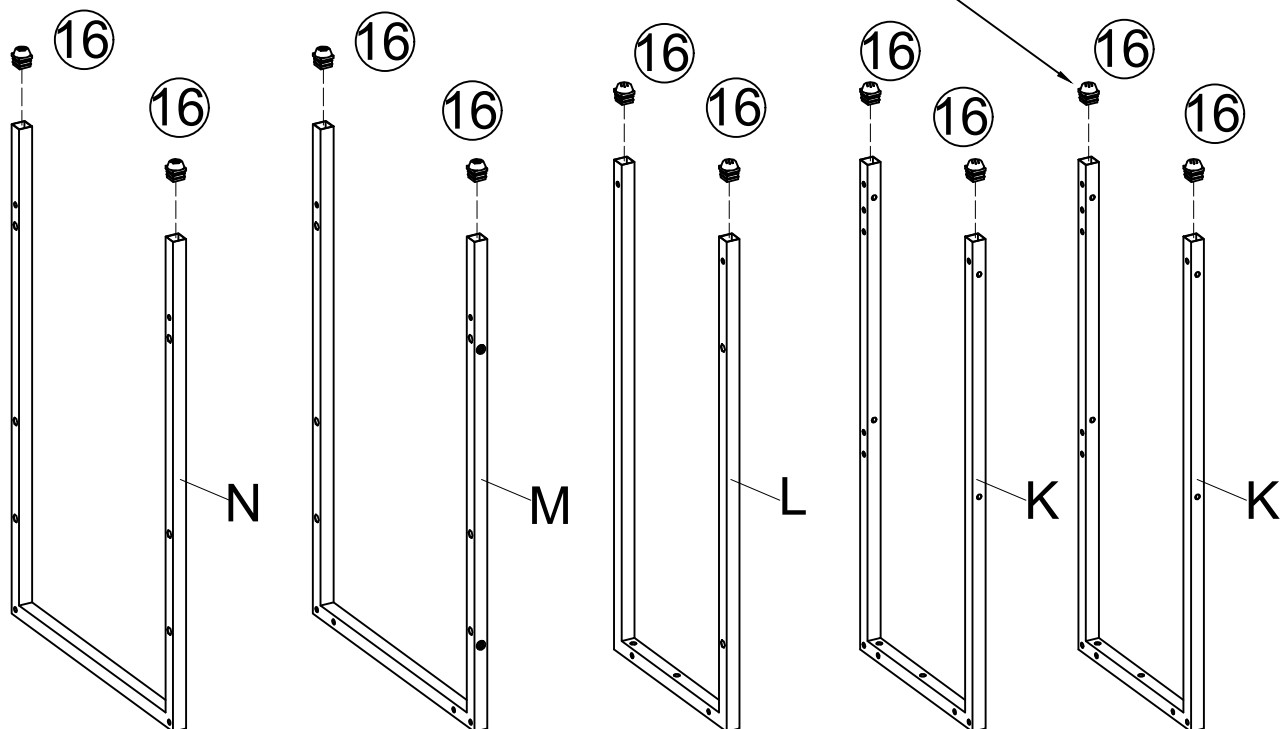

STEP 11



Keep the holes of the Part O
toward this direction as shown

①  x8

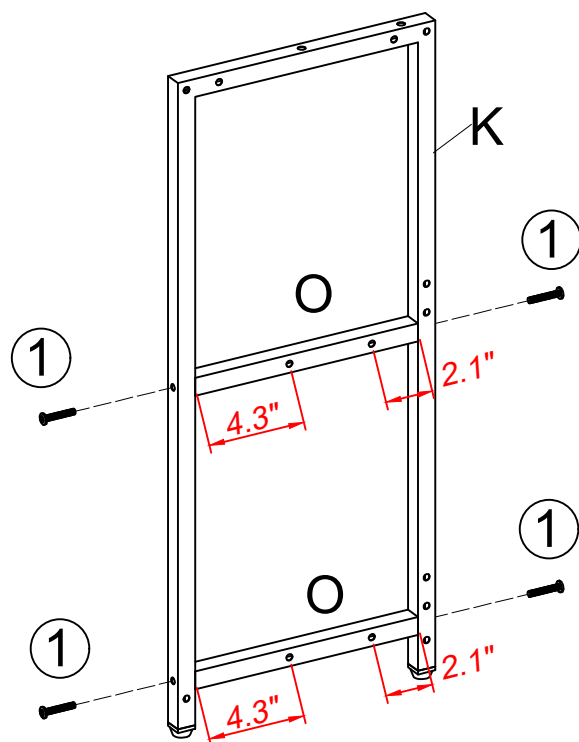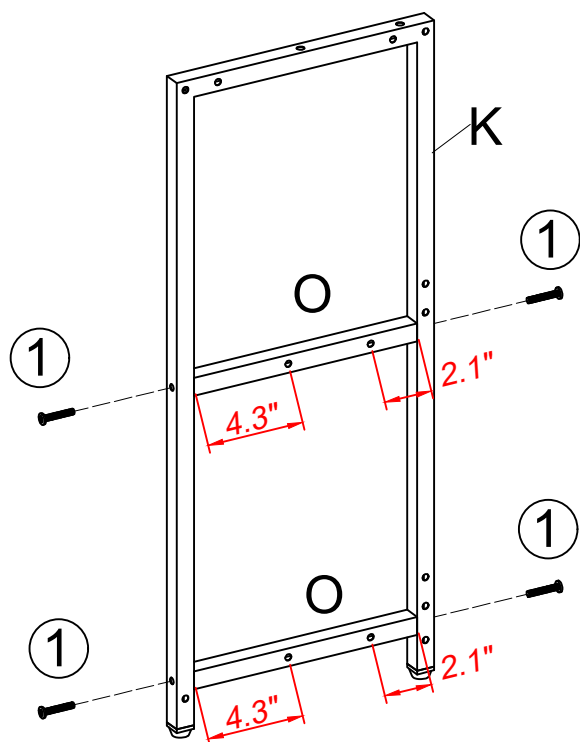


STEP 12


⑪  x6

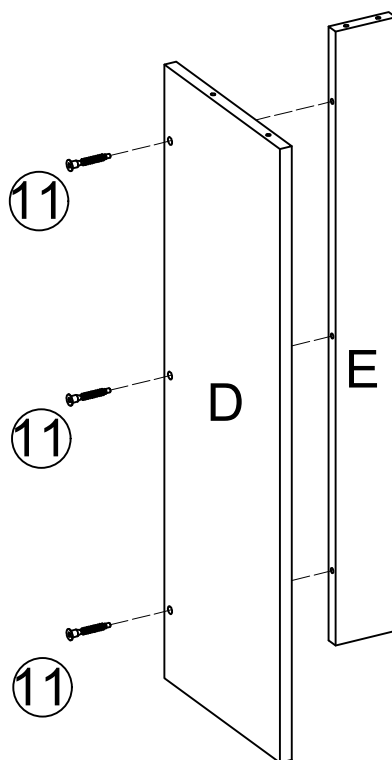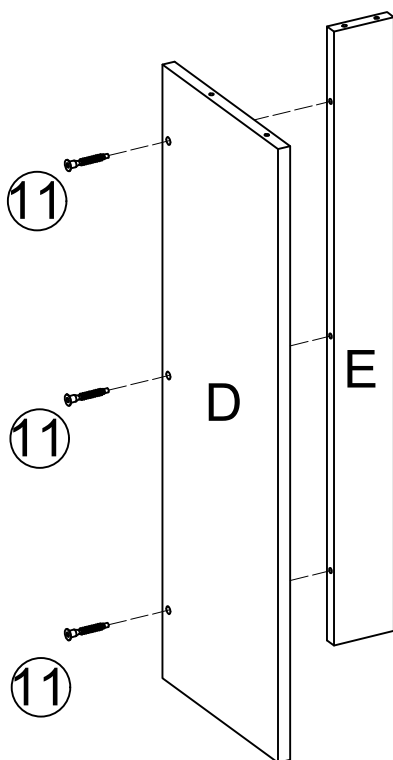

STEP 13


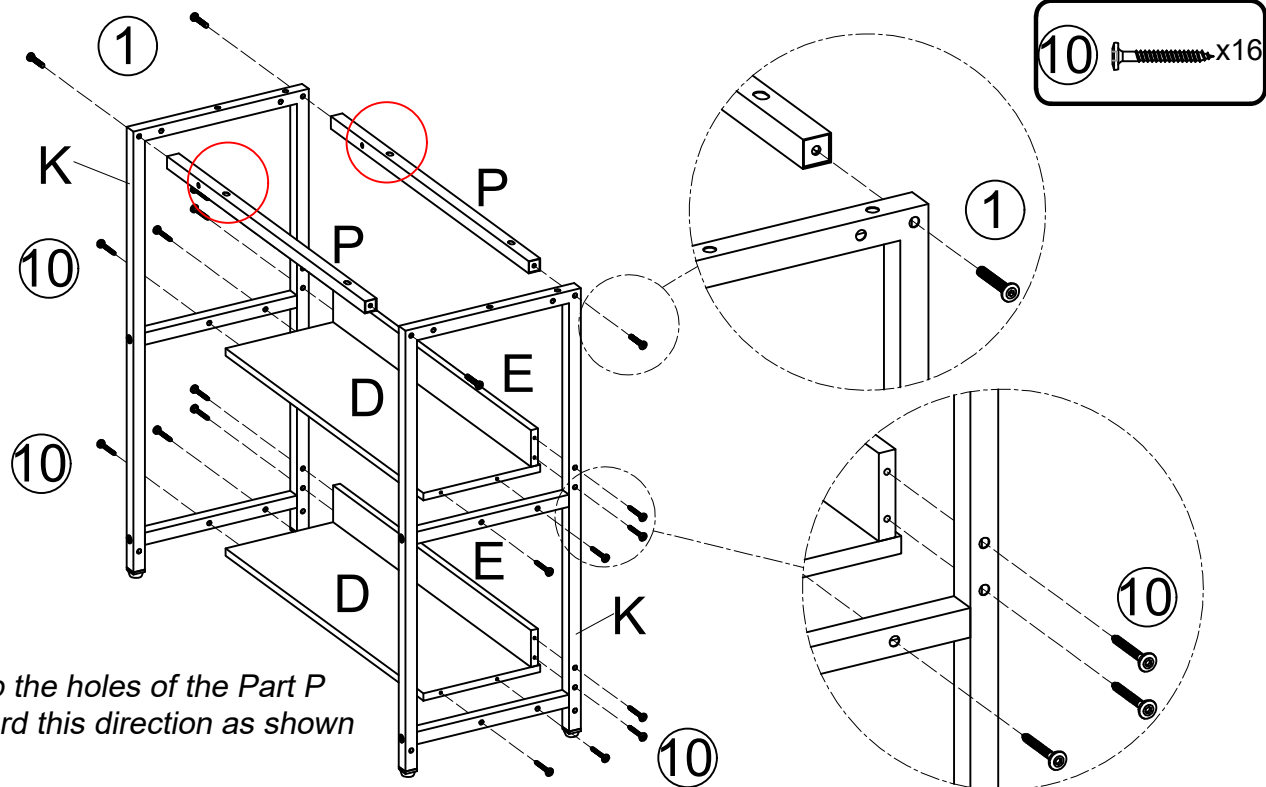


STEP 14



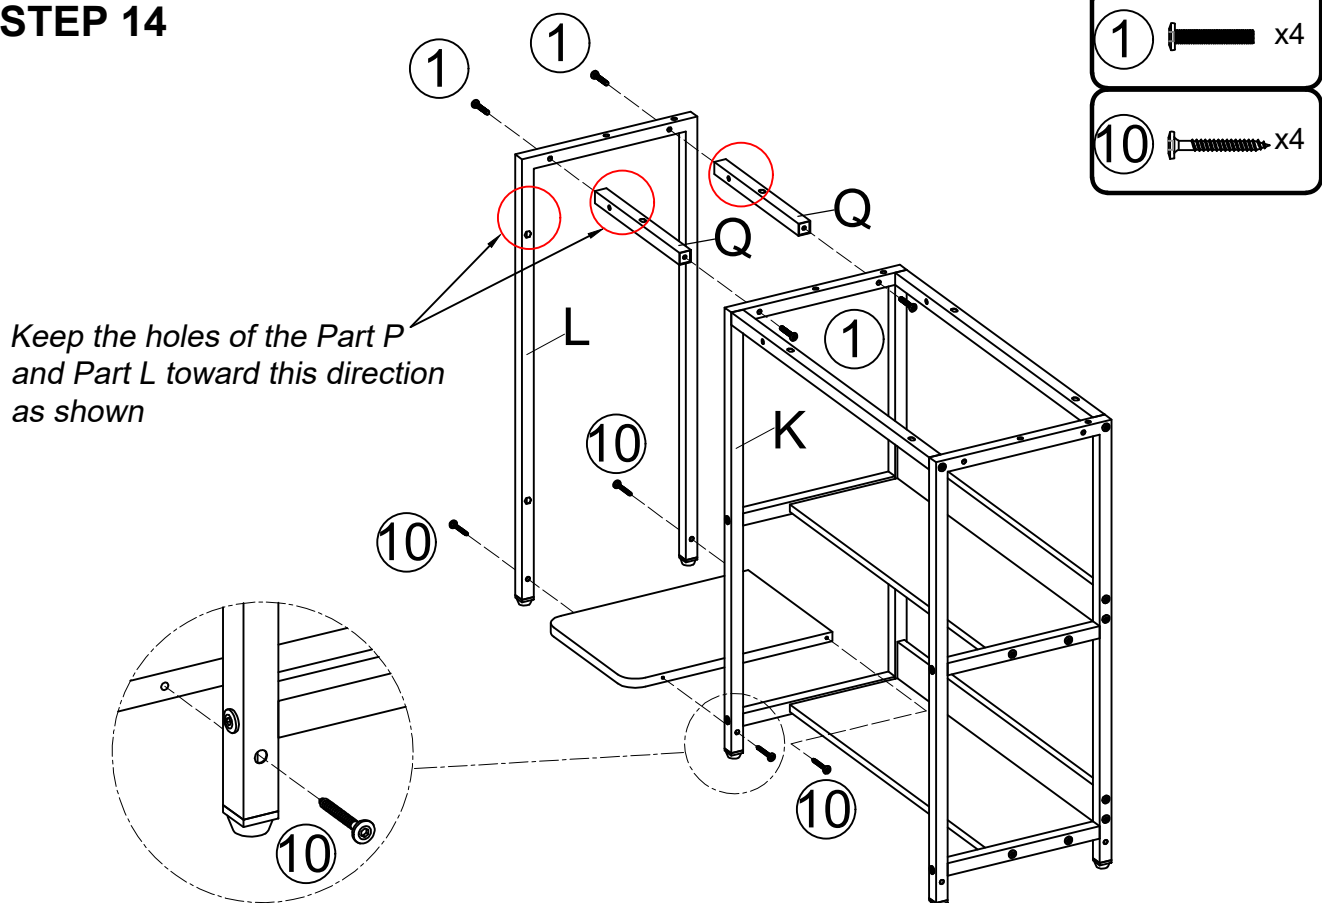


STEP 15

Keep the holes of the Part M and Part S toward this direction as shown

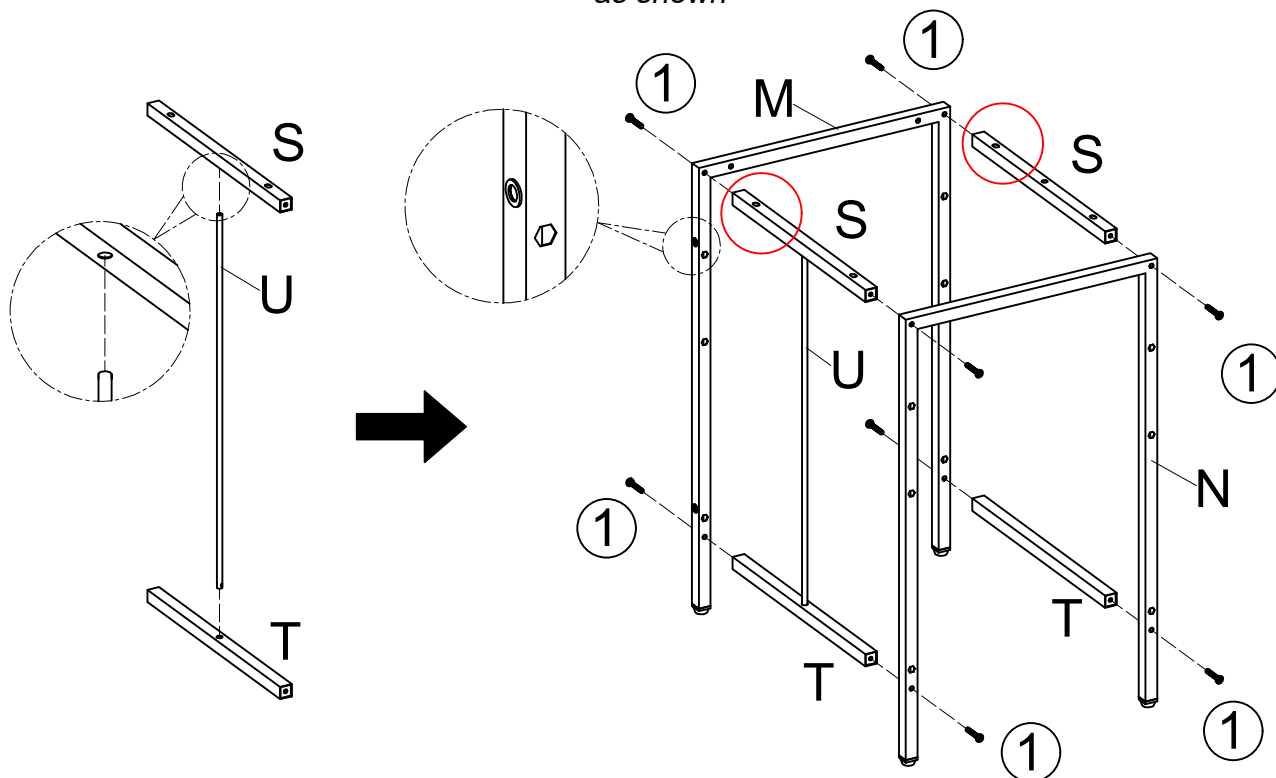



STEP 16

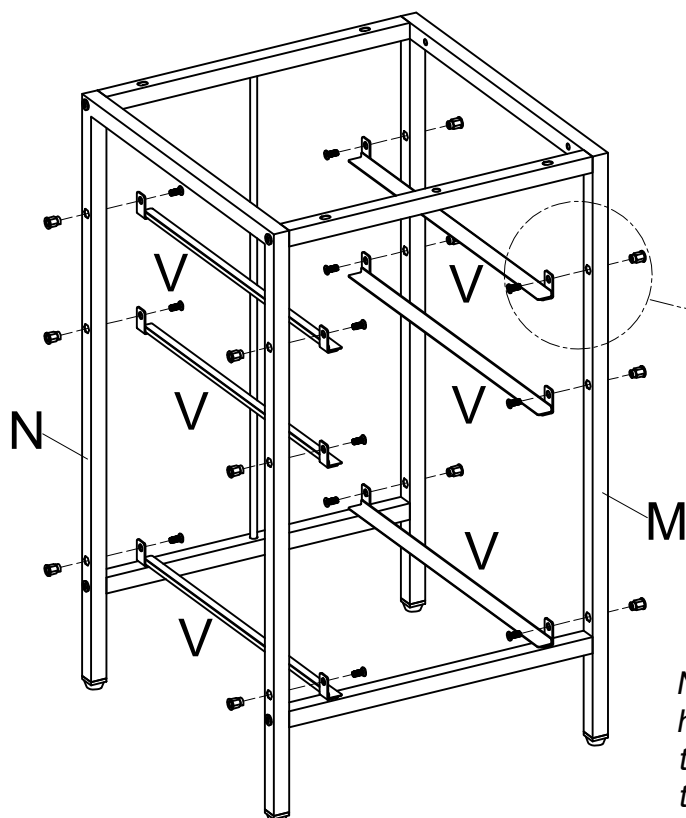



Note: Please insert a hex nut into the hole from outside and use the fingers to hold it, then fix the screws from the inner side.

STEP 17

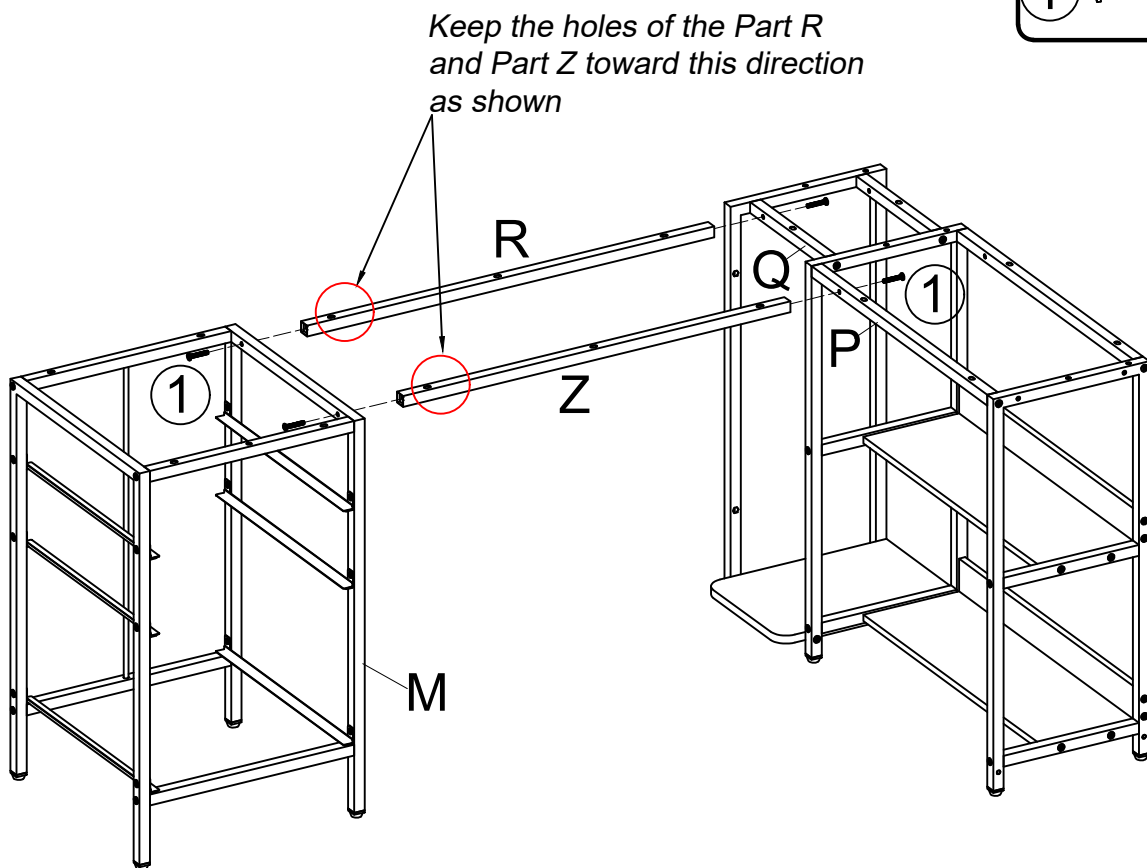


STEP 18

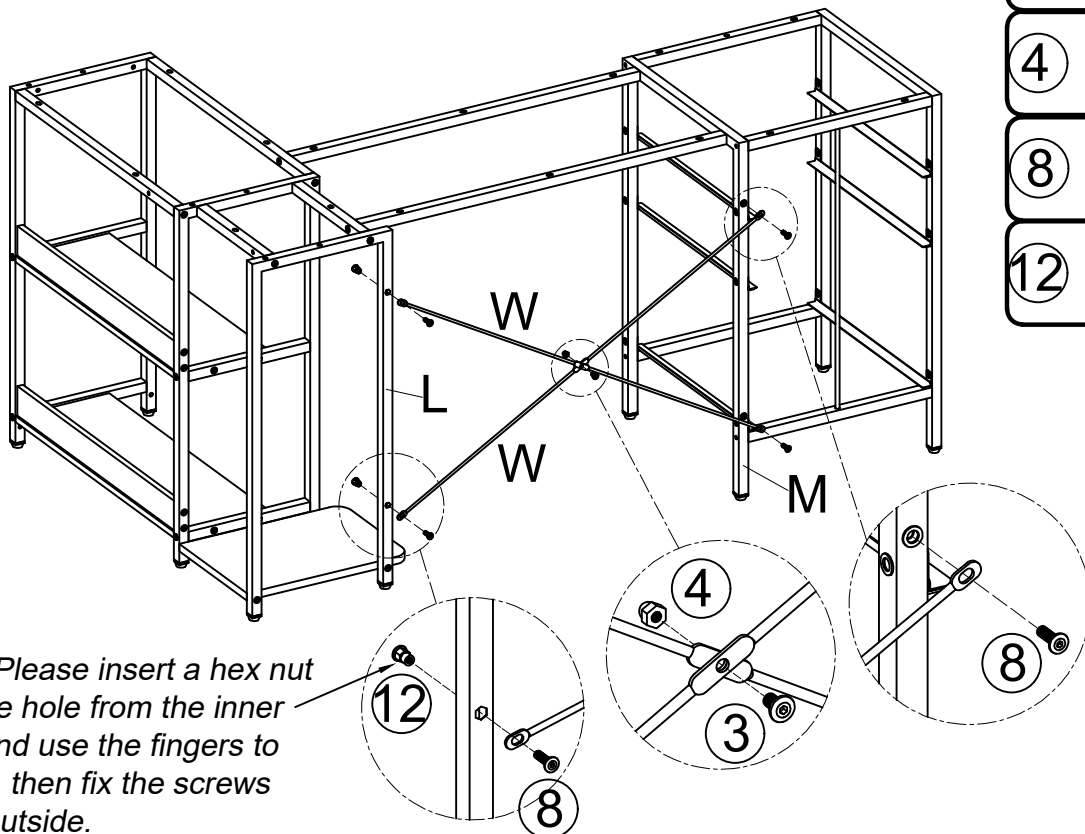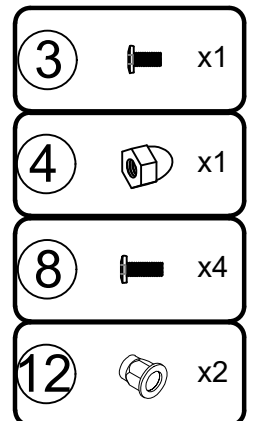

STEP 19

Note: Before tightening the screws, push the 3 wood boards tightly to make the table top closer, otherwise it may cause large gaps.

②  x16

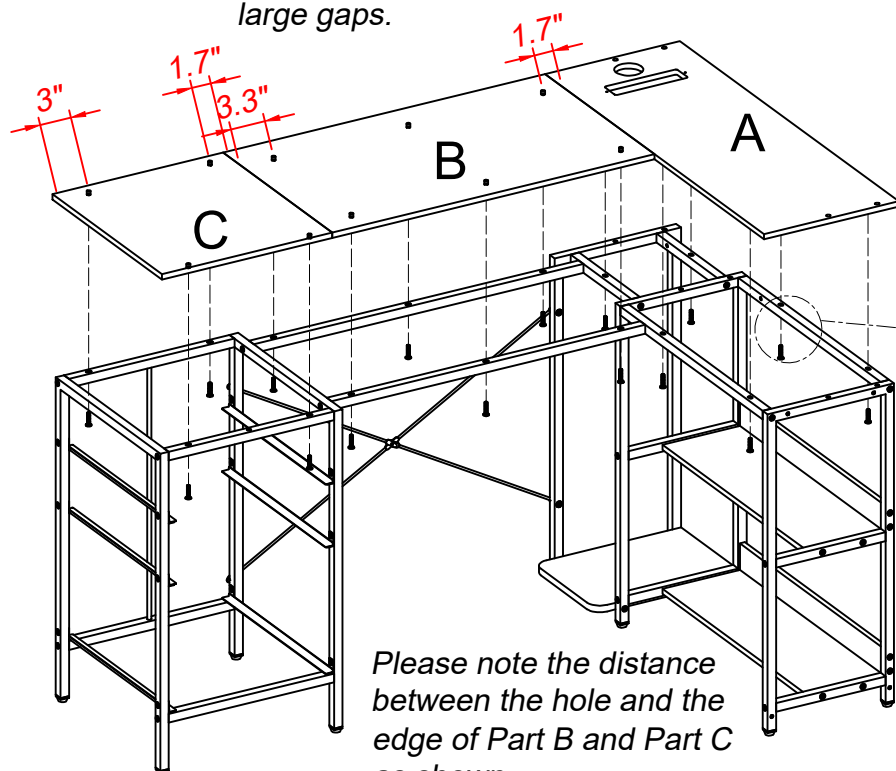


Please note the distance between the hole and the edge of Part B and Part C as shown.

The holes of the support bar have flexible space. Don't fully tighten the screws until aligning all of the top panels.




STEP 20

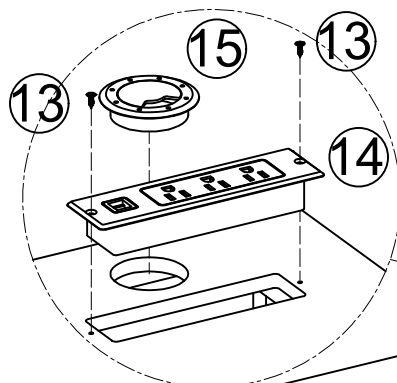


13  x2

14  x1



15  x1

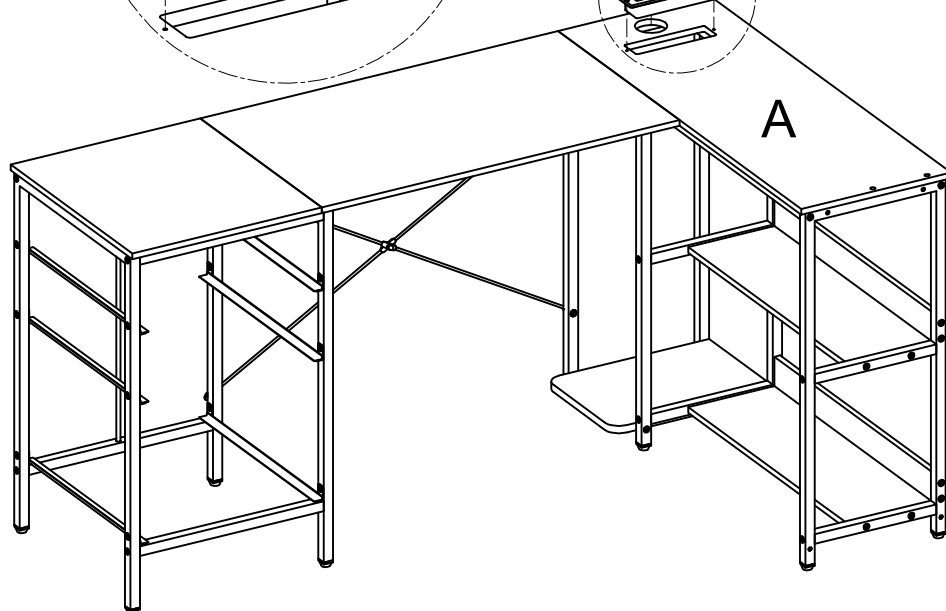

STEP 21


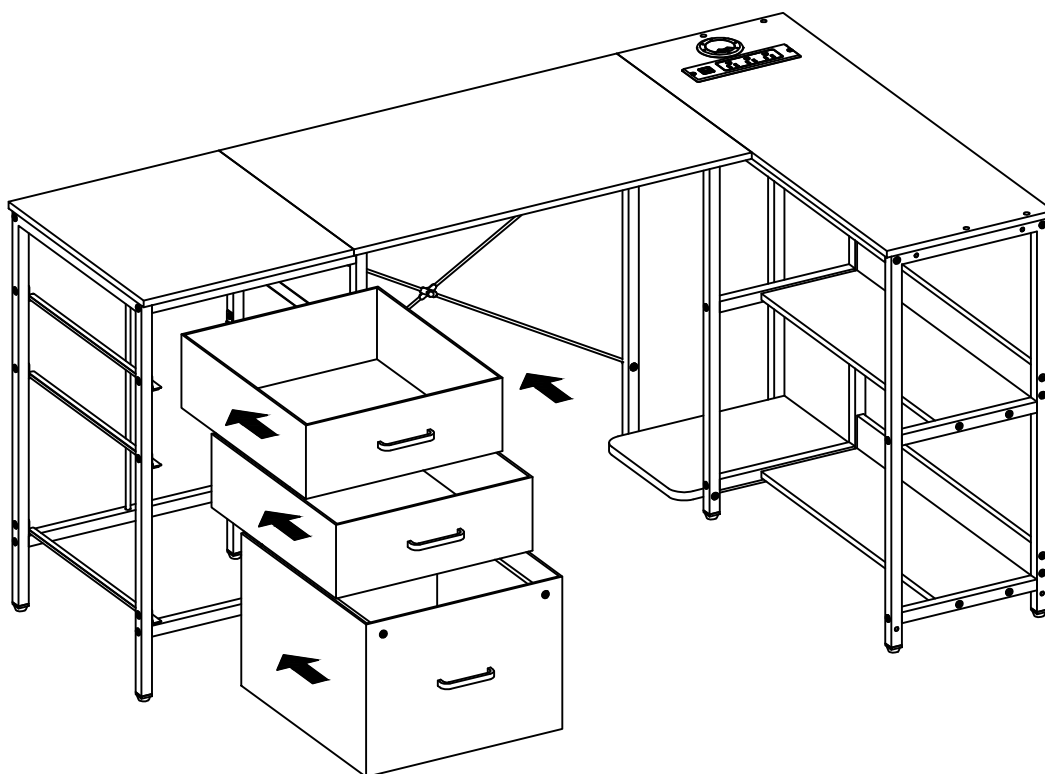


STEP 22

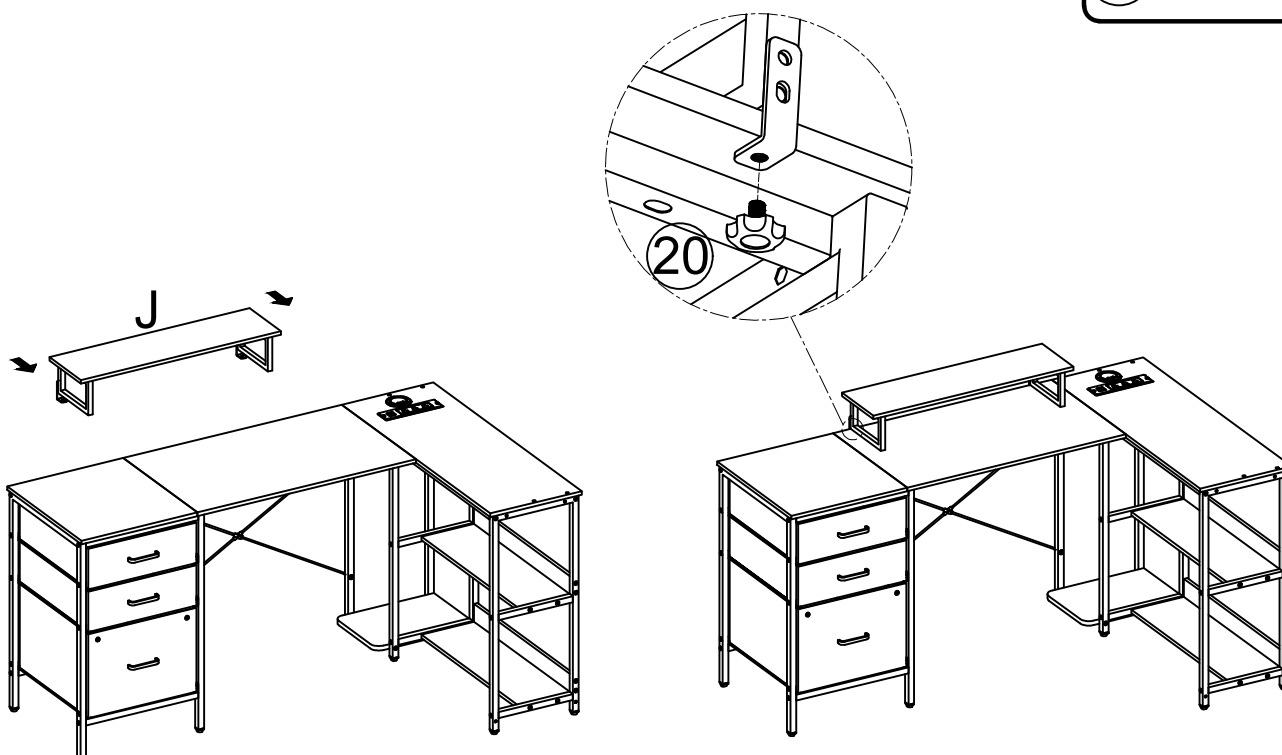

STEP 23

*We recommend 2
person to assemble*

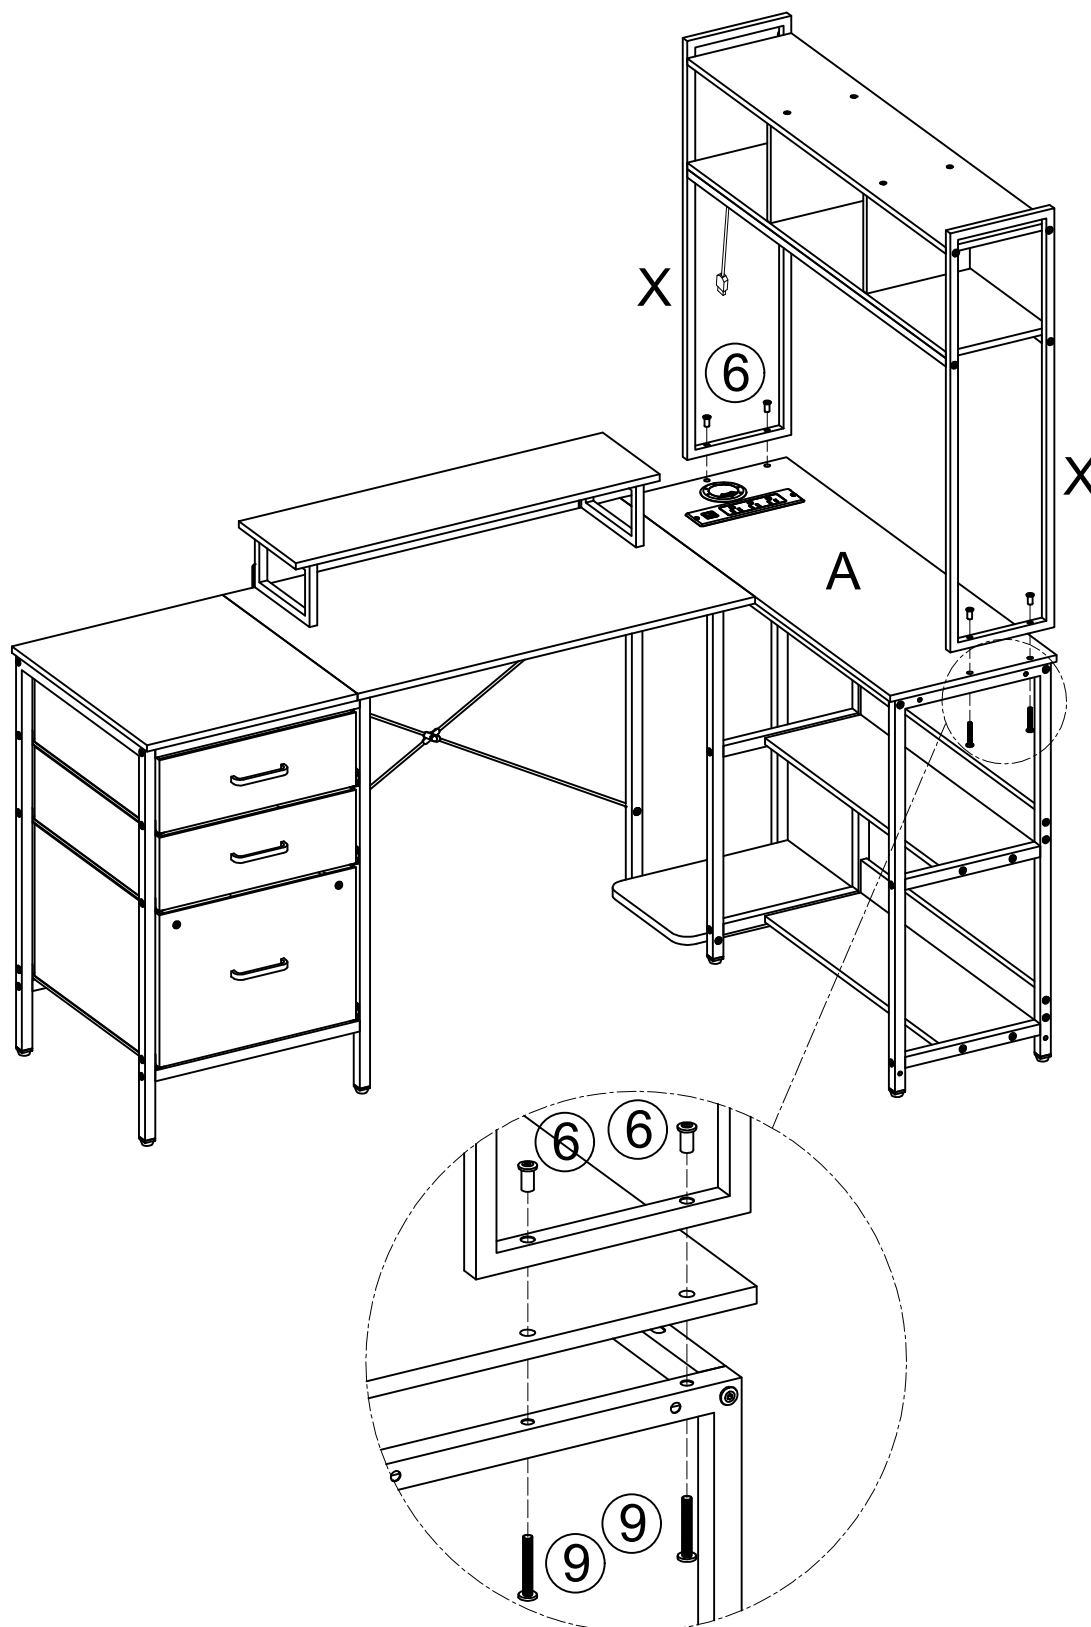



STEP 24


TIPPING RESTRAINT HARDWARE

Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

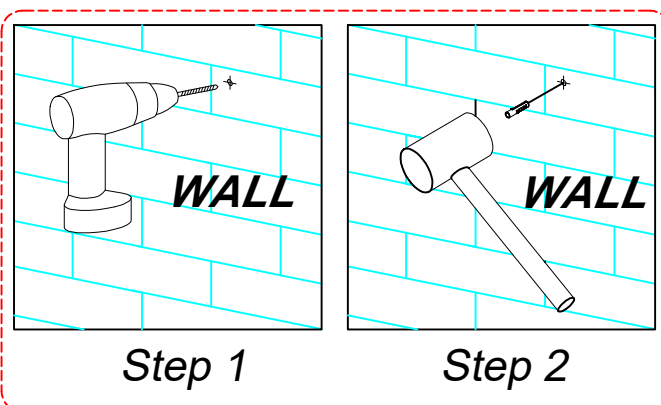

Hook-and-loop fastener can wrap the wires, making your desk look neater

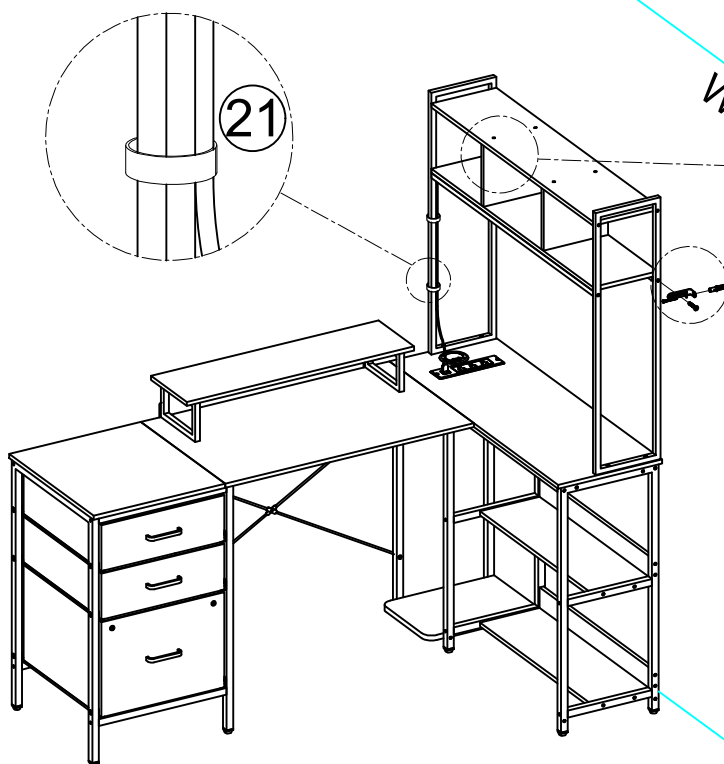

Tipping Restraint Hardware


Please unscrew one Part ① screw first, then install Part ②.

Option B

STEP 13


Please follow the step 1 to step 12 to install.

- 1**  x4
- 10**  x16

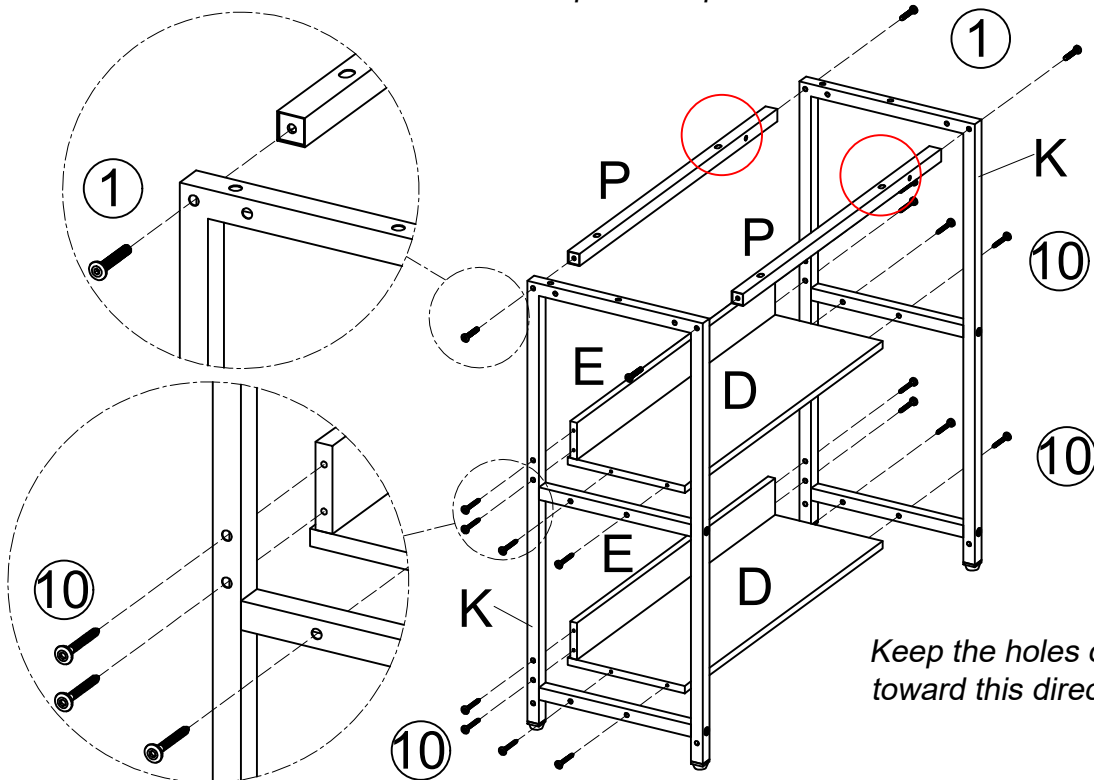


STEP 14

- 1**  x4
- 10**  x4


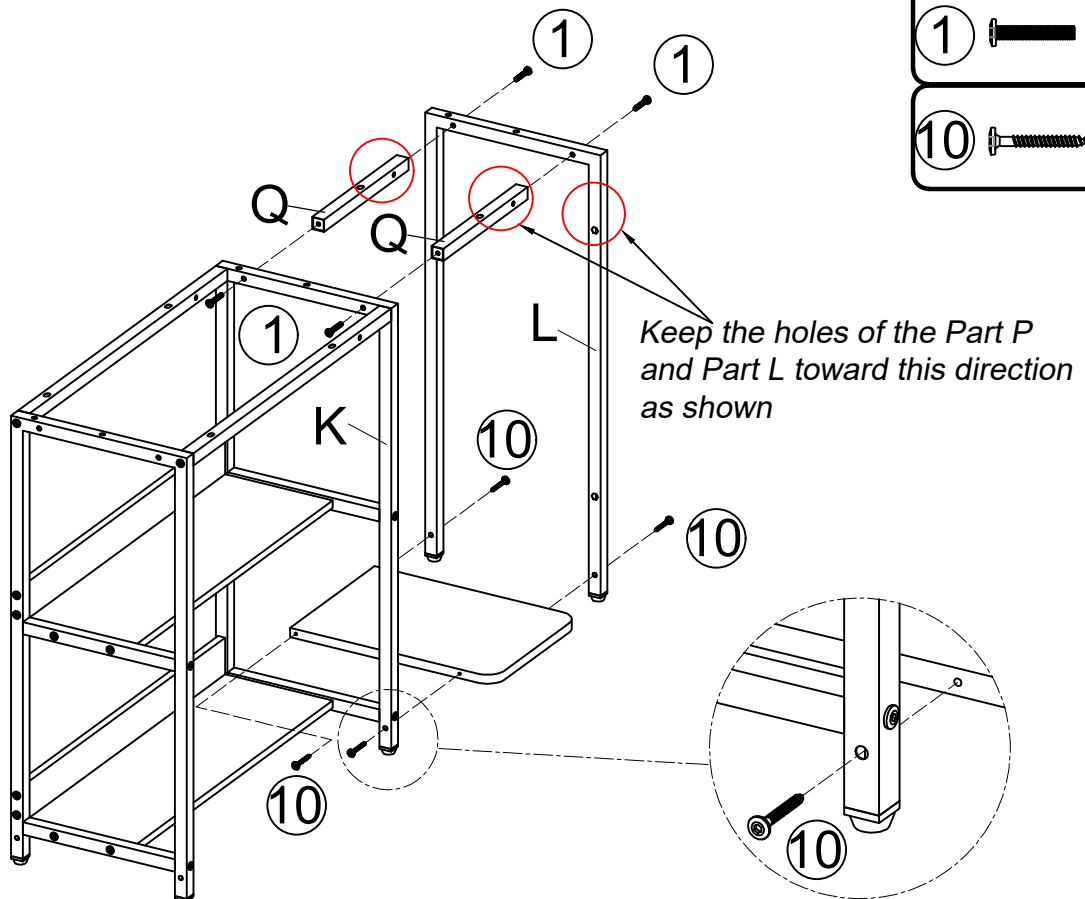


STEP 15

Keep the holes of the Part M and Part S toward this direction as shown

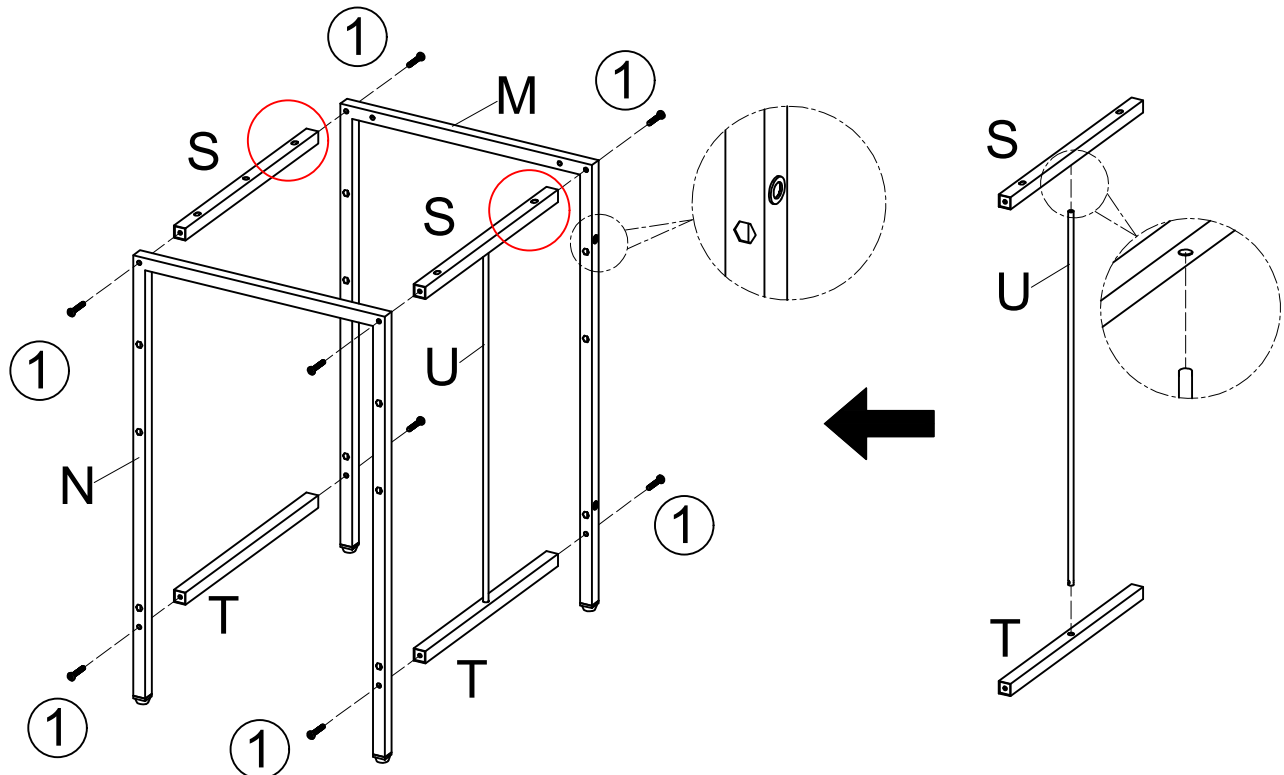


STEP 16

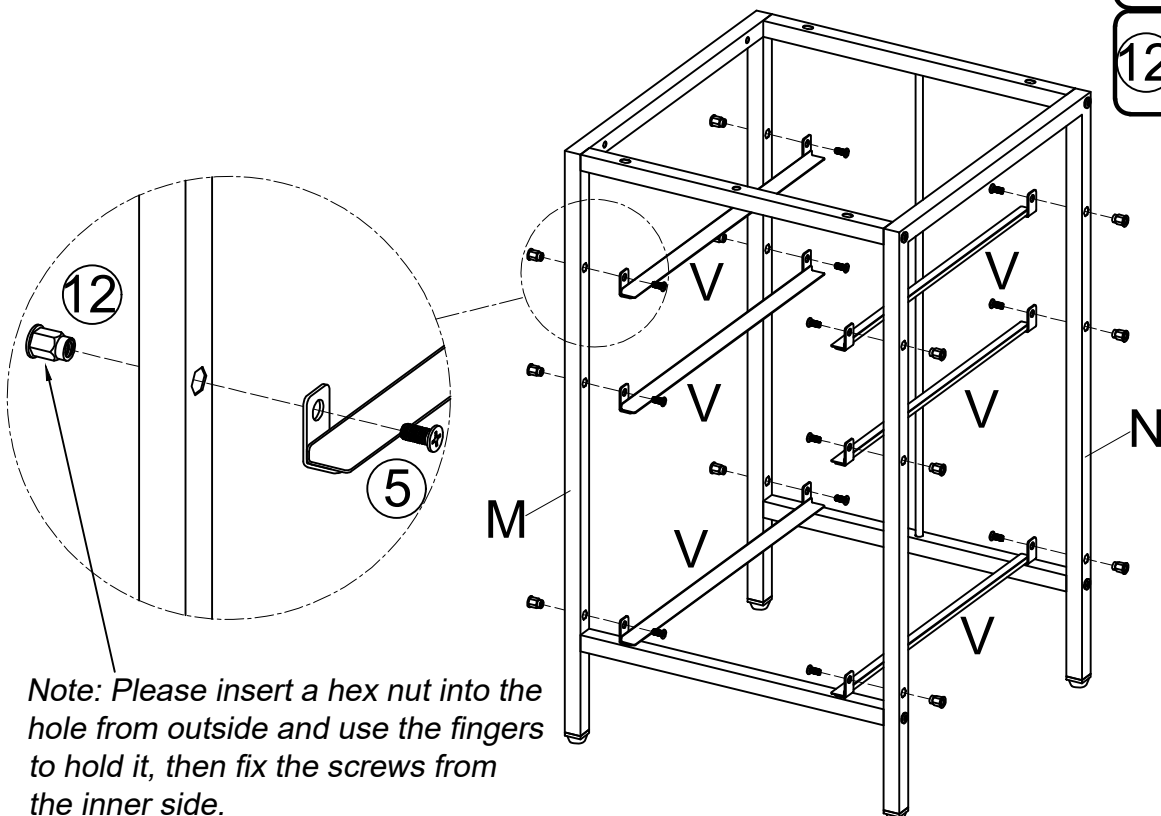

STEP 17


① — x4

Keep the holes of the Part R and Part Z toward this direction as shown

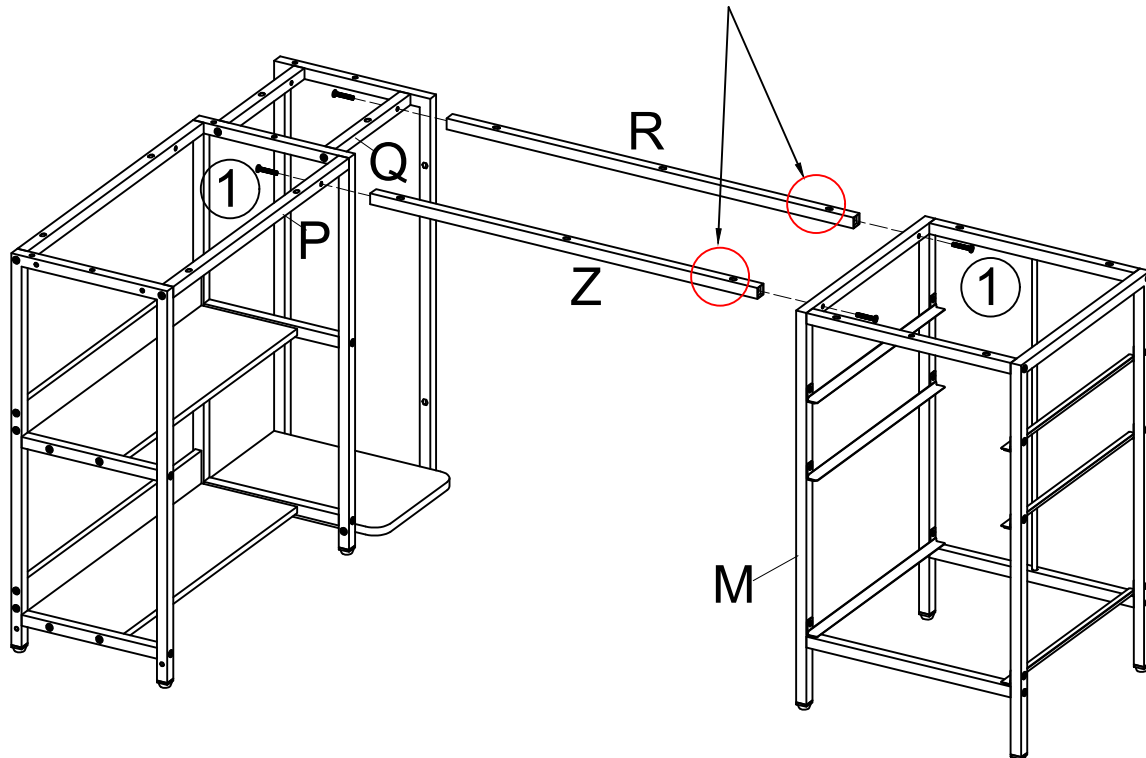

STEP 18

③ — x1
④ — x1
⑧ — x4
⑫ — x2

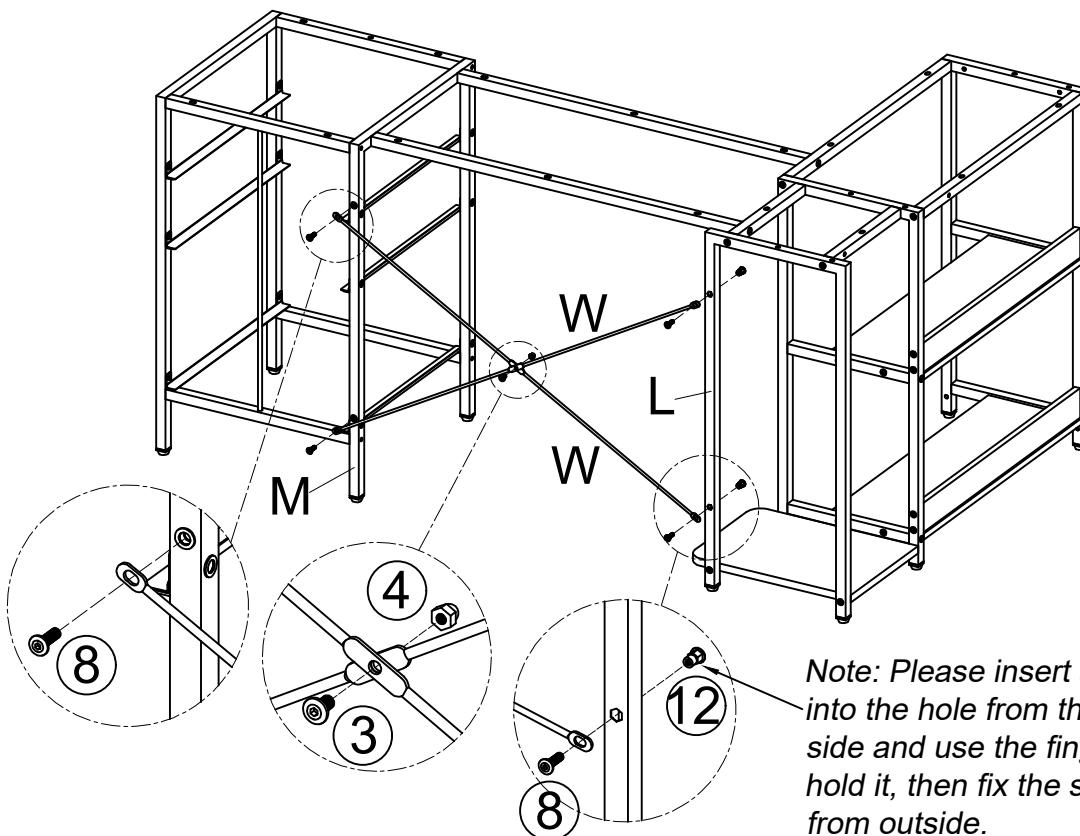


Note: Please insert a hex nut into the hole from the inner side and use the fingers to hold it, then fix the screws from outside.


STEP 19

Note: Before tightening the screws, push the 3 wood boards tightly to make the table top closer, otherwise it may cause large gaps.

②  x16

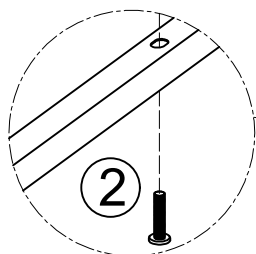

The holes of the support bar have flexible space. Don't fully tighten the screws until aligning all of the top panels.

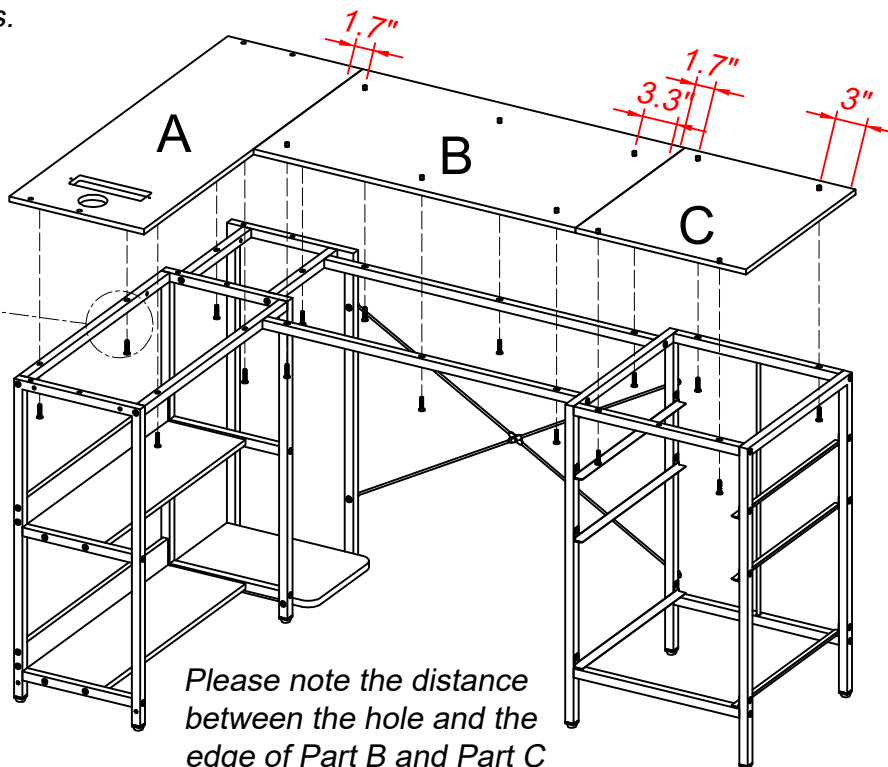


Please note the distance between the hole and the edge of Part B and Part C as shown.

STEP 20


⑬  x2

⑭  x1



⑮  x1

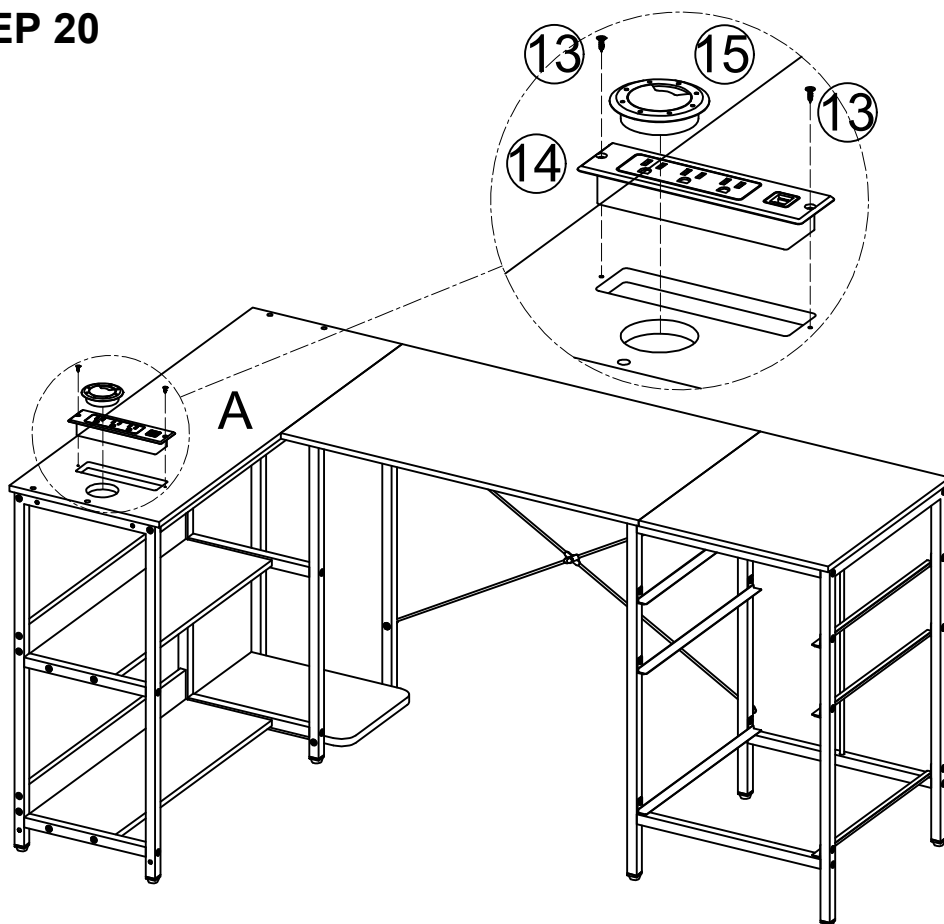

STEP 21


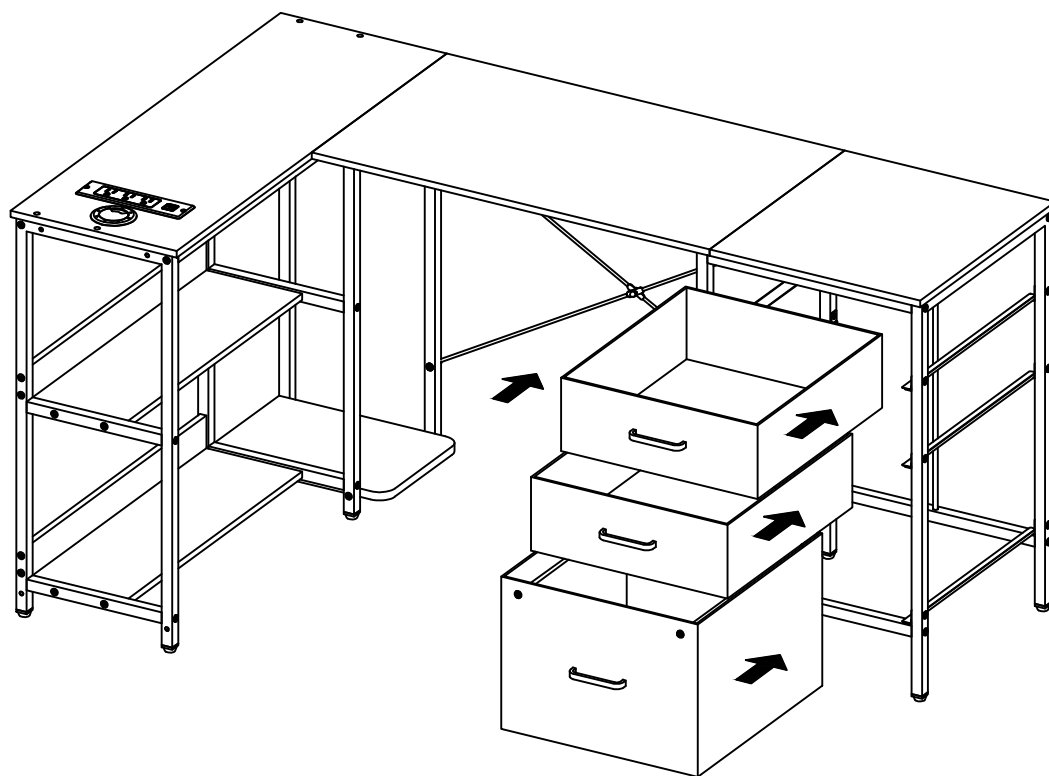


STEP 22

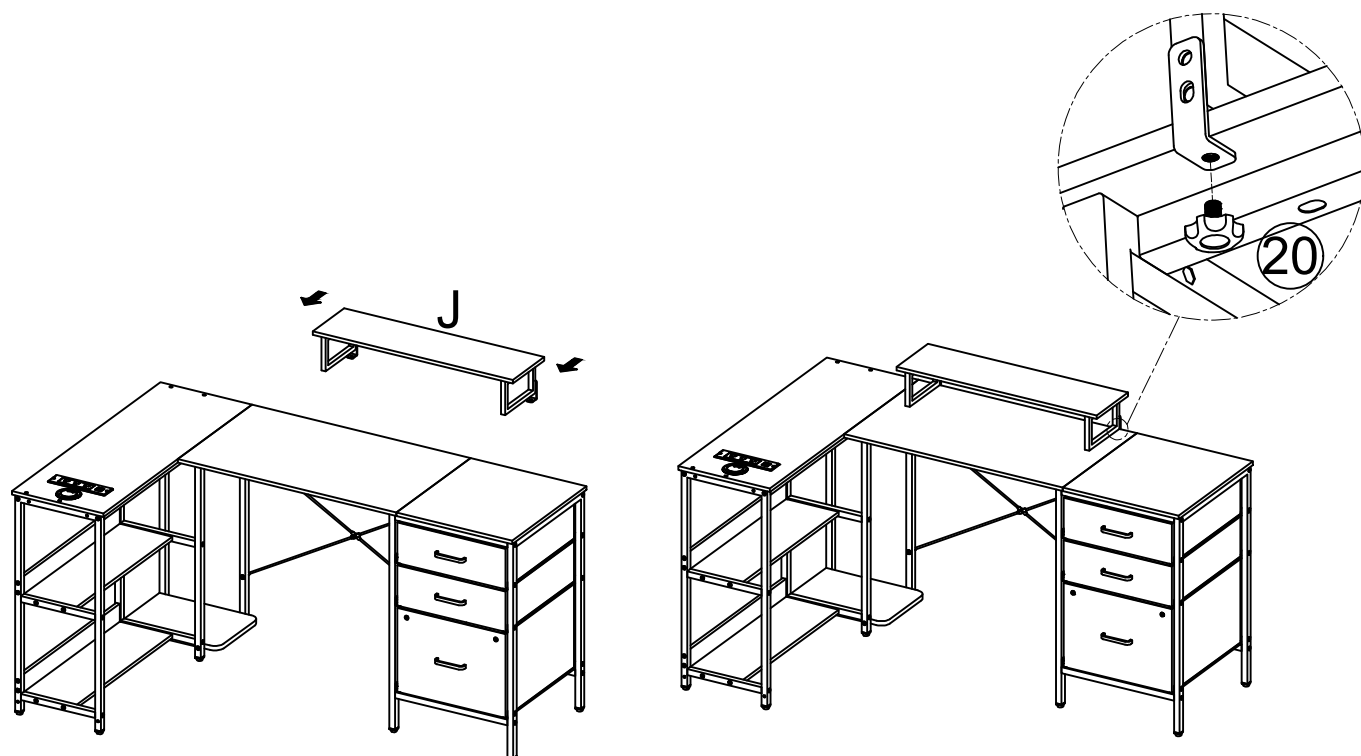

STEP 23

*We recommend 2
person to assemble*

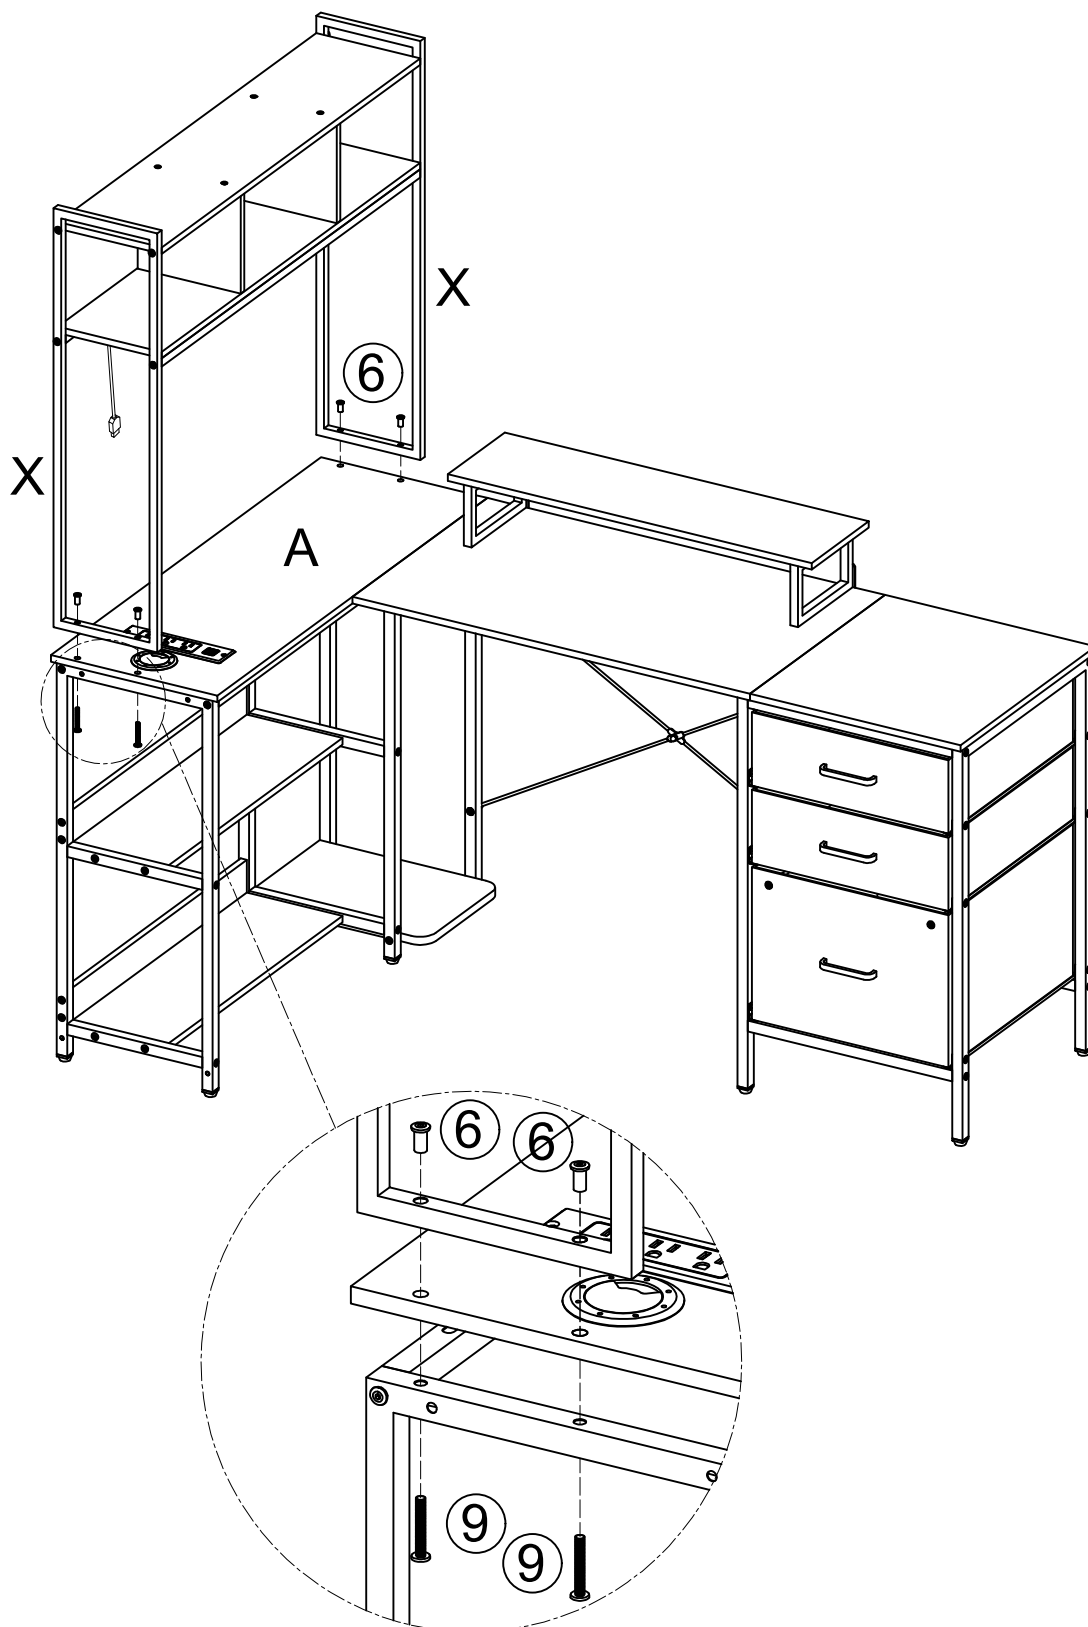

STEP 24

TIPPING RESTRAINT HARDWARE

Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

