








Barber Chair

OWNER'S MANUAL

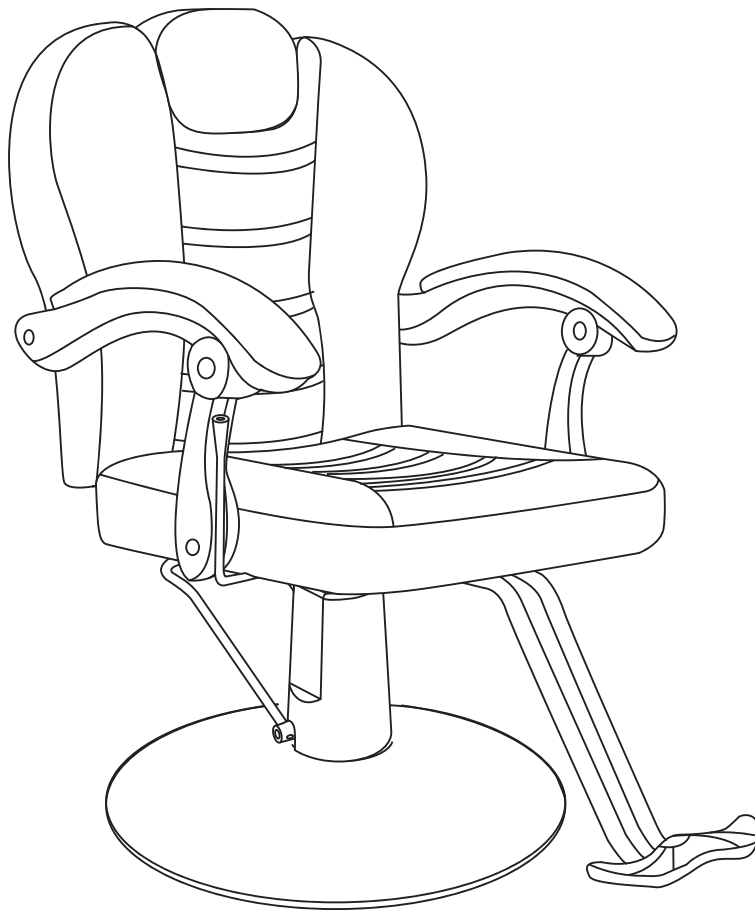

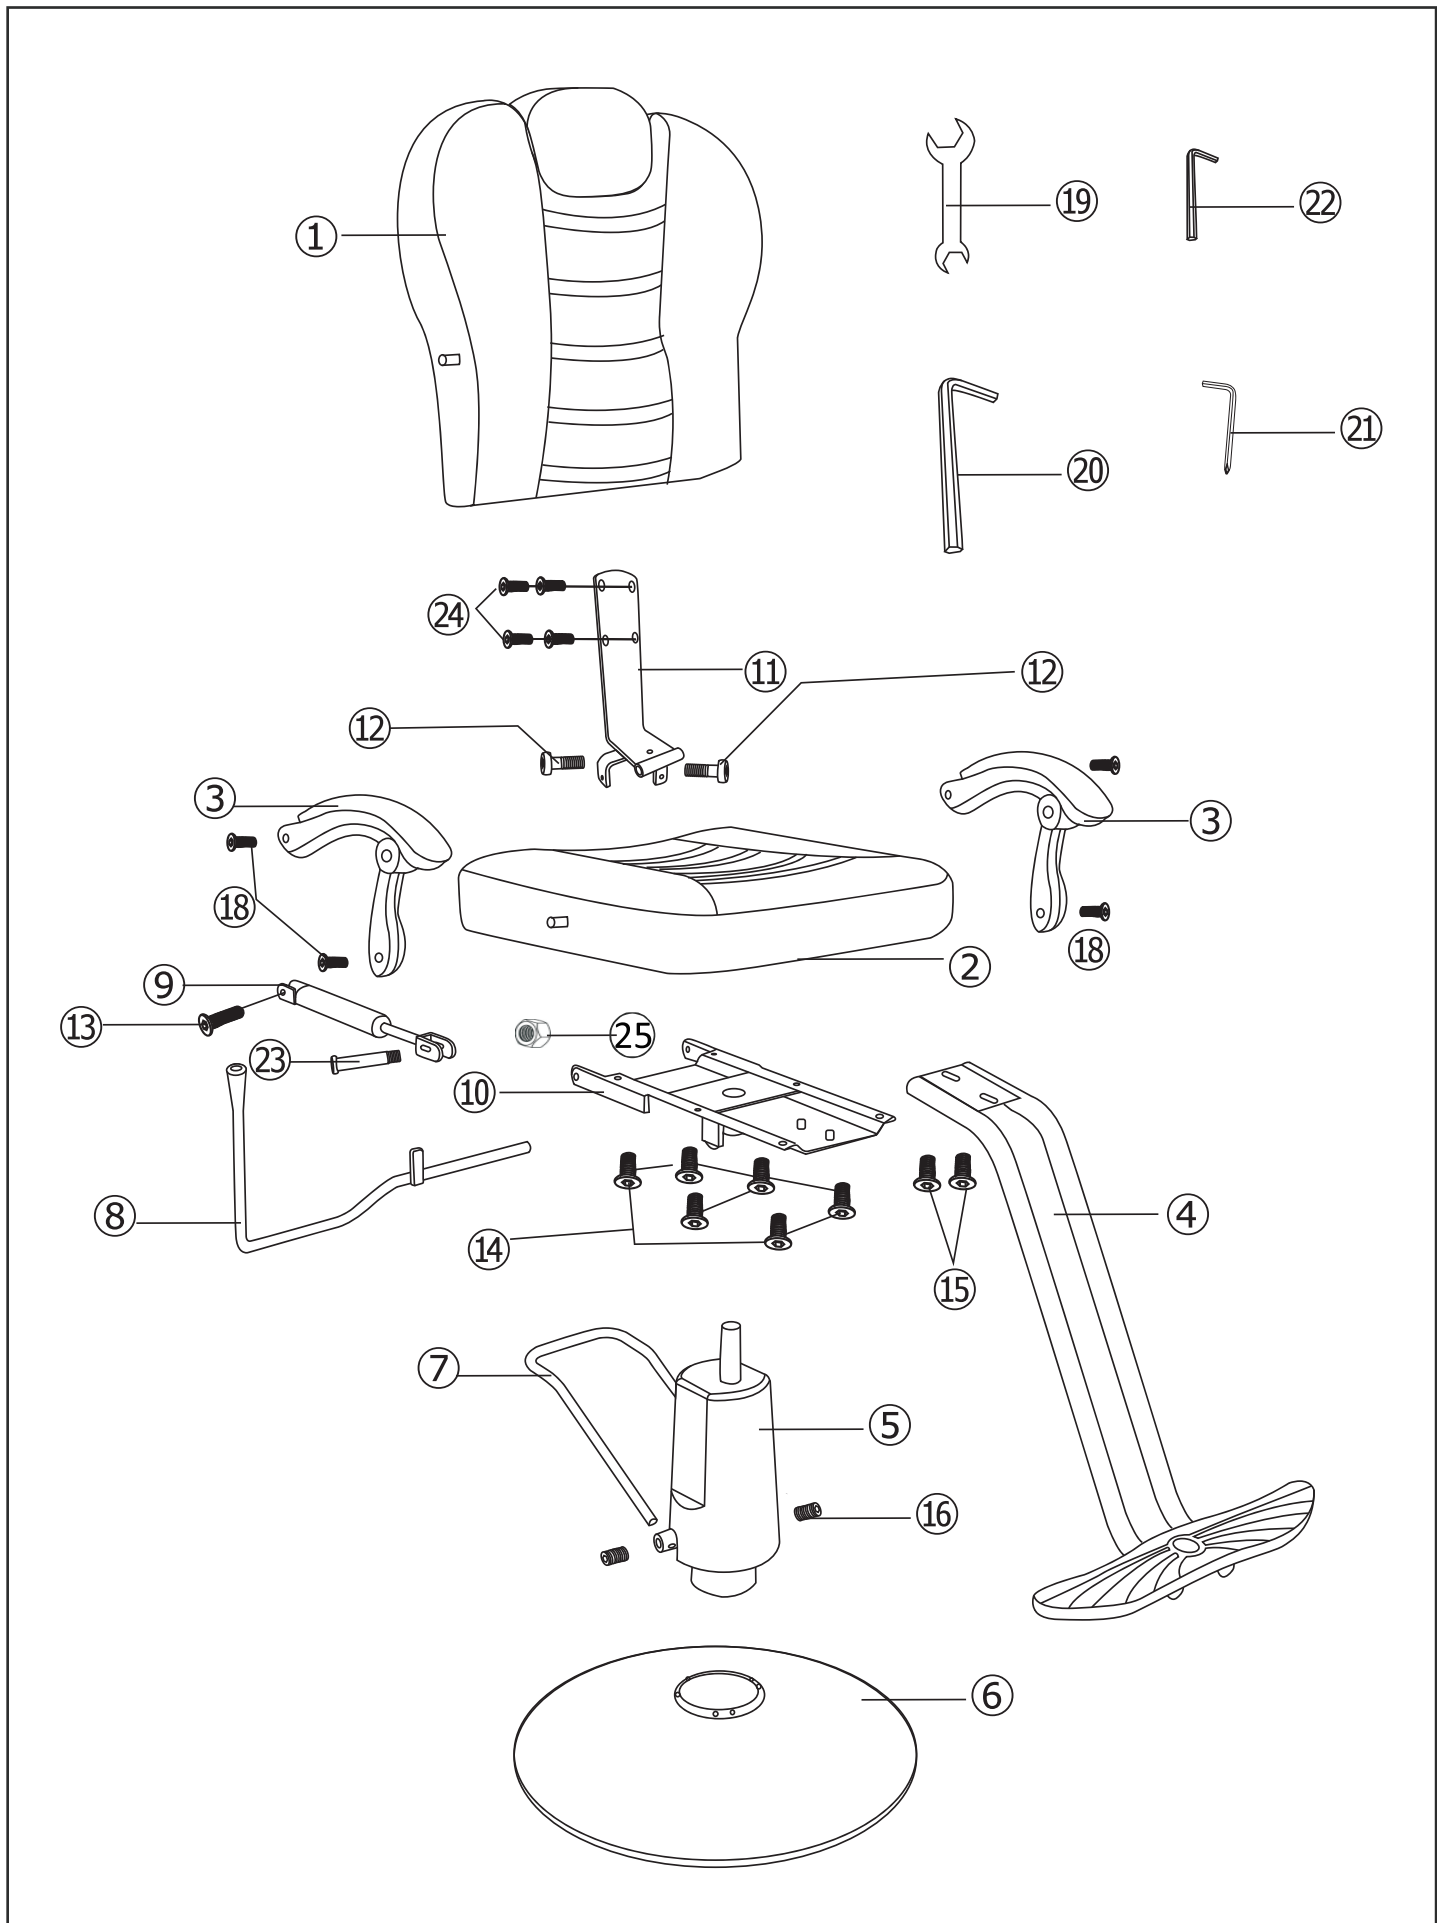

Parts

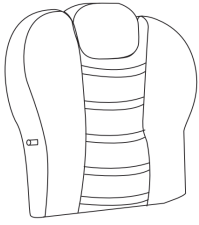Code	Image	Parts Name	Qty(Pcs)	Code	Image	Parts Name	Qty(Pcs)
1		Backrest	1	2		Seat	1
3		Armrest	1 Couple	4		Footrest	1
5		Oil Pump	1	6		Base	1
7		Foot Pump Rod	1	8		Reclining Handle	1
9		Reclining Aerobar	1	10		Tray	1
11		J-bar	1	12		Hex Screw M10*20	2
13		Hex Screw M8*30	1	14		Hex Screw M8*20	6
15		Hex Screw M8*16	2	16		Lock Nut M8	2
17		Hex Nut M6	4	18		Hex Screw M8*40	4
23		Hex Screw M10*30	1	24		Hex Screw M8*25	4
				25		Hex Nut M8	2

Some screws and nuts are pre-installed on the components and can be removed and used during installation


Tools

Code	Image	Tools Name	Qty(Pcs)
19		Wrench	1
20		Allen Key	1
21		Allen Key	1
22		Allen Key	1

Installation Diagram


Step One:

Open the box and take out the Oil Pump ⑤, unscrew the four Hex Nuts M6 ⑰ from the bottom of the Oil Pump ⑤ for later use

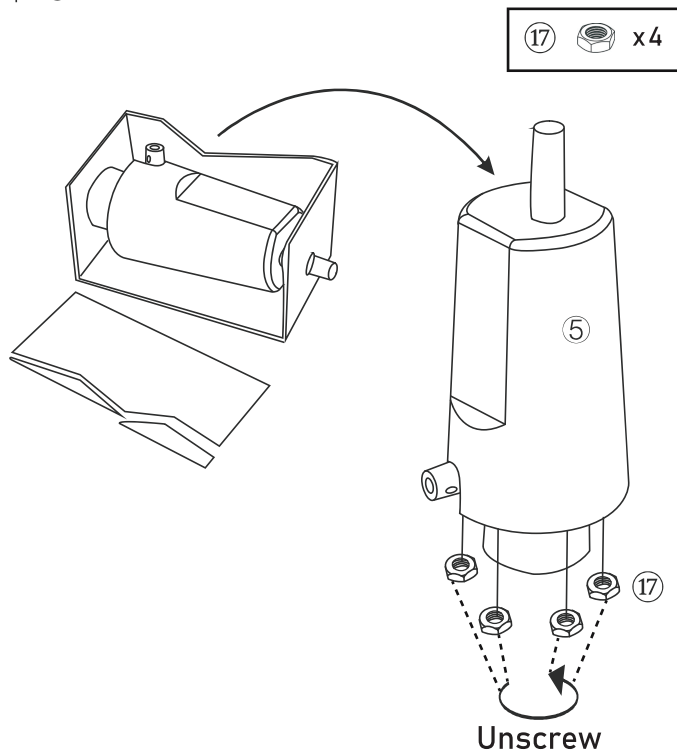


Step Two:

Install the Base ⑥ to the bottom of the Oil Pump ⑤ and tighten the four Hex Nuts M6 ⑰.

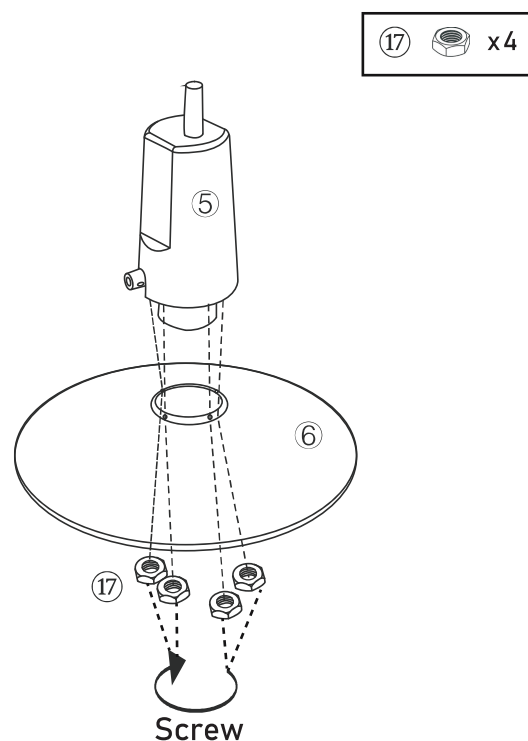


Step Three:

Loosen the two Lock Nuts M8 ⑰, insert the Foot Pump Rod ⑦ to the Oil Pump ⑤.

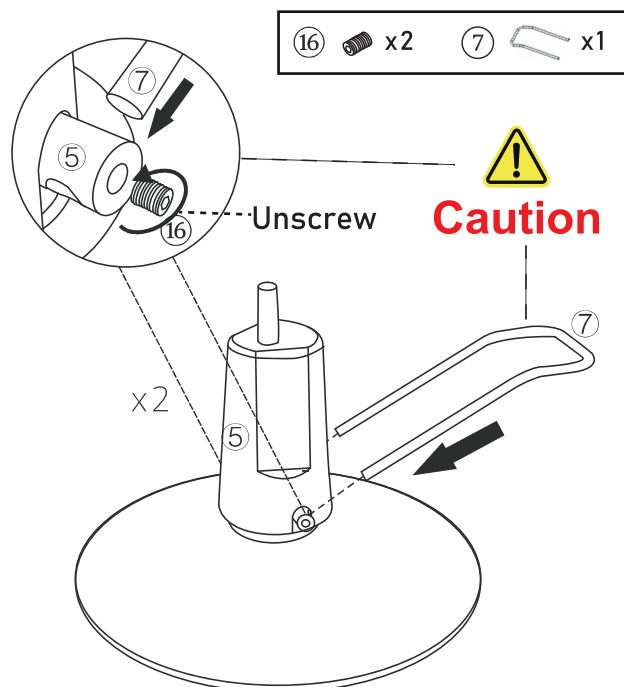


Step Four:

Tighten the two Lock Nuts M8 ⑰ to fix the Foot Pump Rod ⑦.

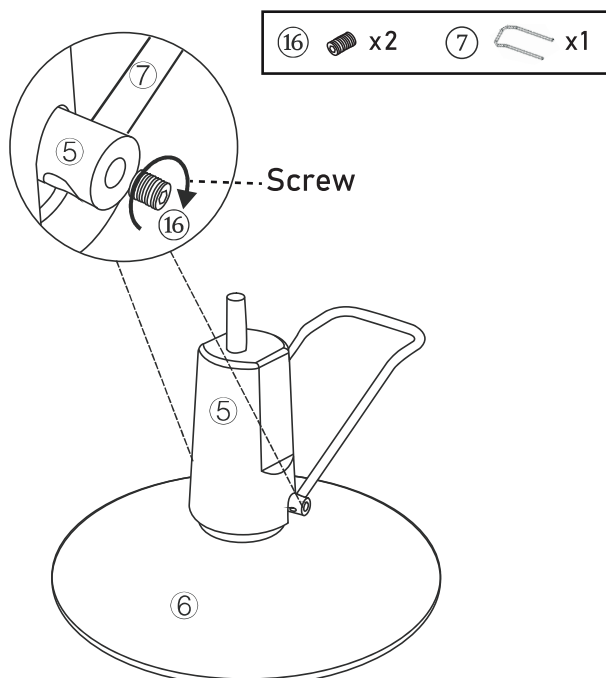


Step Five:

Unscrew the two Hex Screws M8*20 (14) from the back of the Seat (3) to release the Tray (10) for later use.

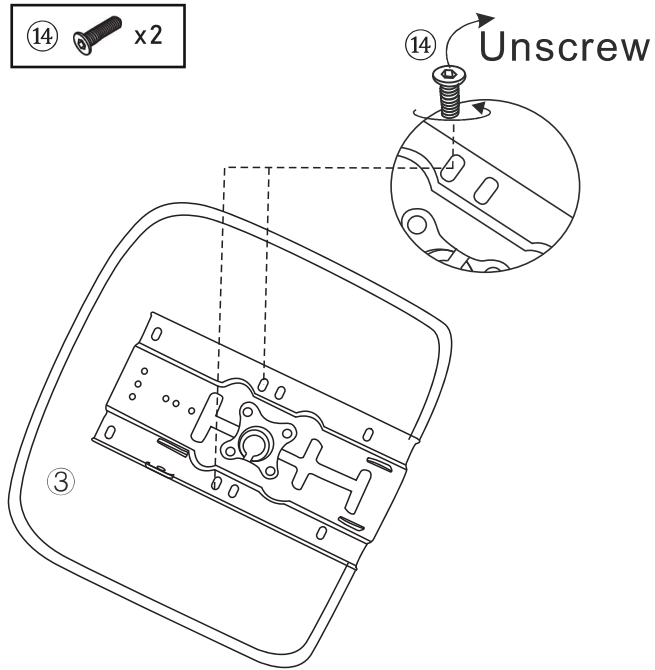


Step Six:

Tighten six Hex Screws M8*20 (14) and secure the Tray (10) with these screws to the back of the Seat (3).

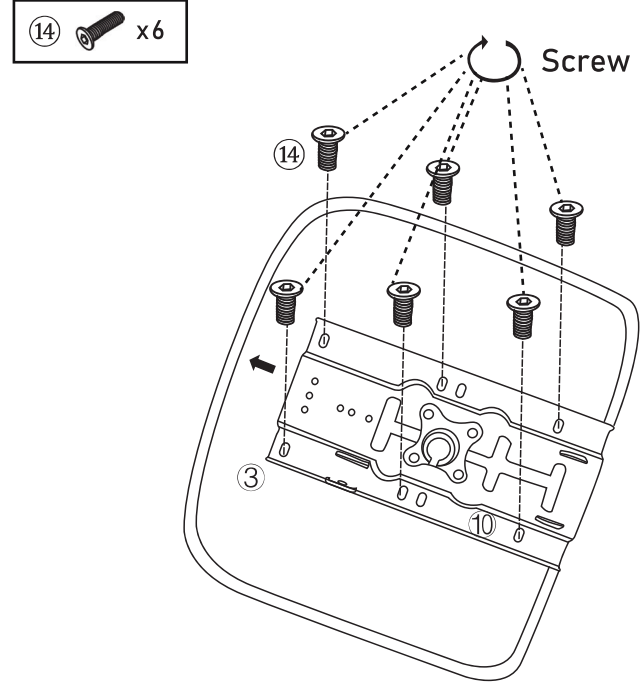


Step Seven:

Connect the J-bar (11) to Tray (10) with two Hex Screws M8*25 (12)

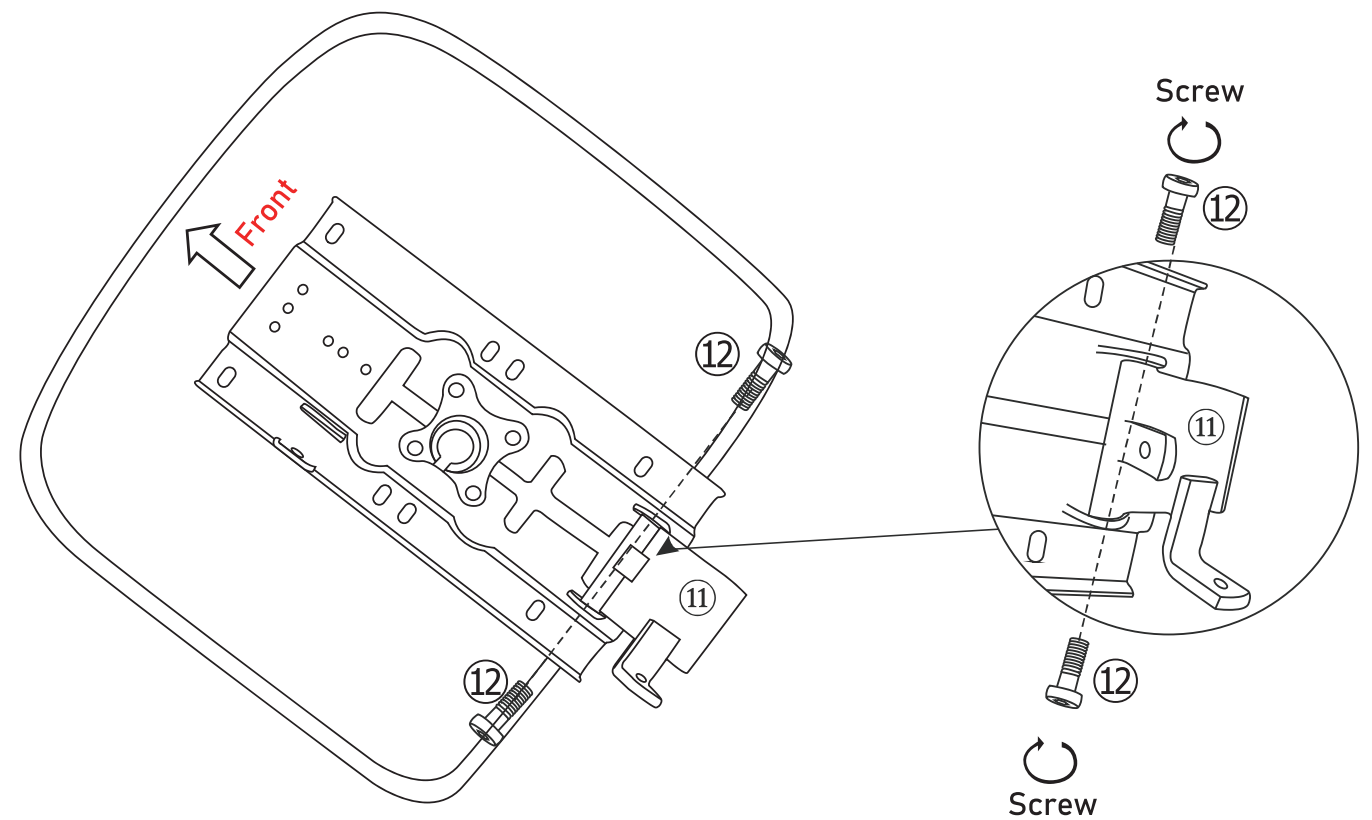


Step Eight:

Before insert the reclining handle ⑧ and reclining aerobar ⑨, please make you find below two parts. Part A on the Tray ⑩, part B on the J-bar ⑪.



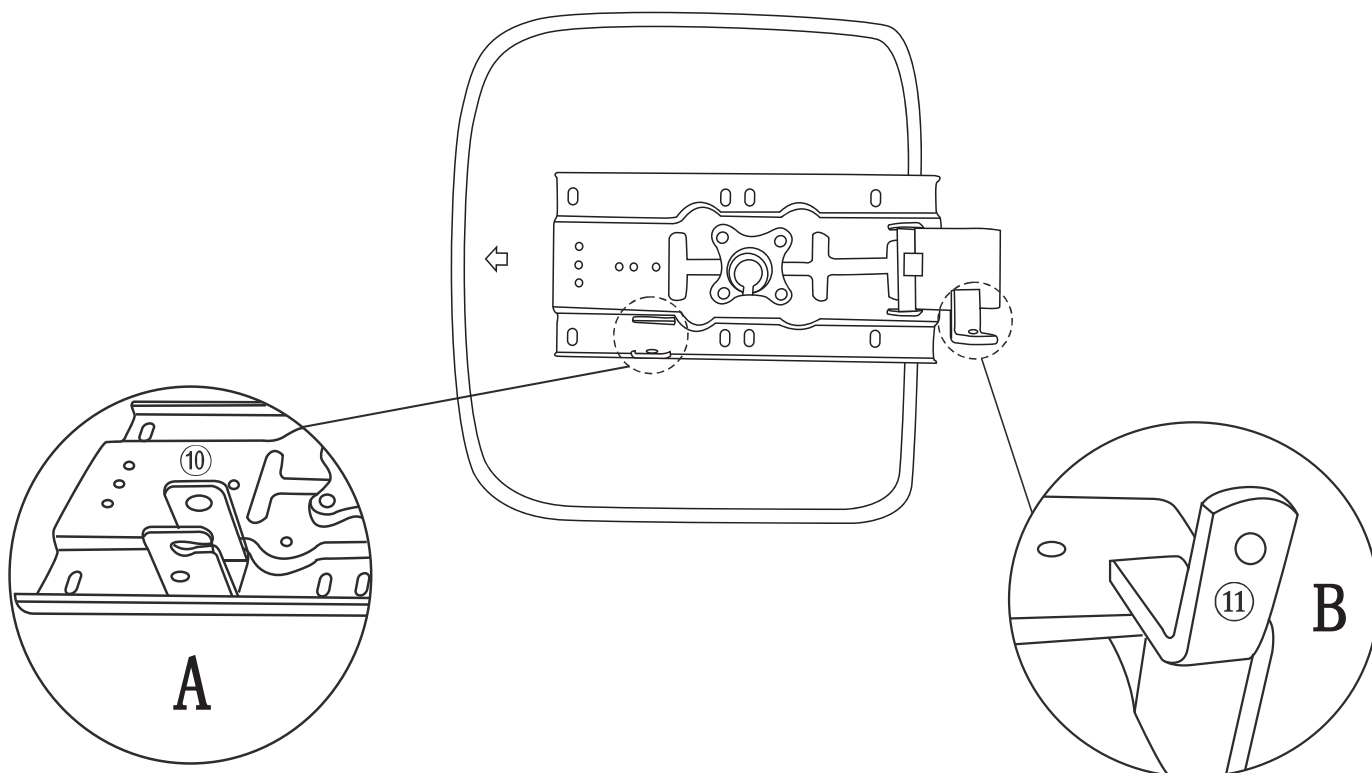


Step Nine:

1. Insert the Reclining Handle ⑧ through the upper holes of Part A
2. Make sure the hook on the Reclining Handle ⑧ is vertical as the image shows.


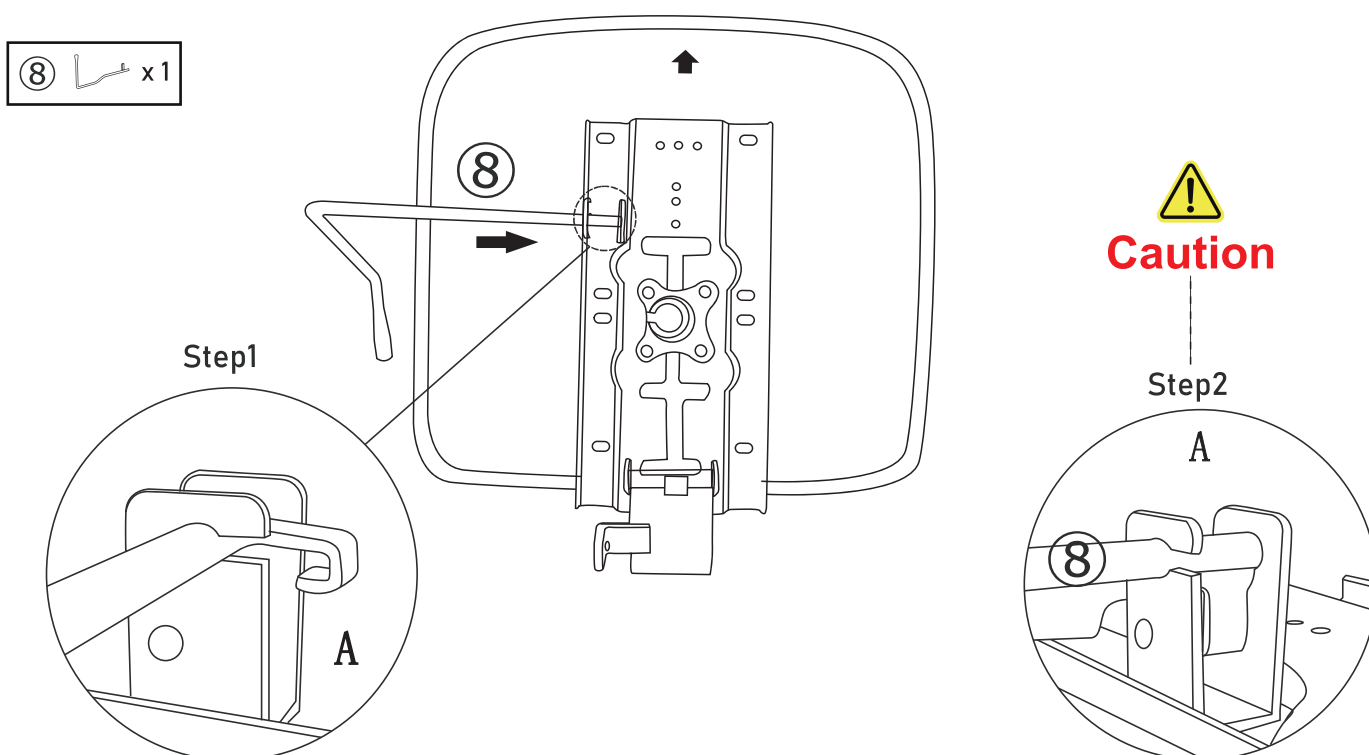


Step Ten:

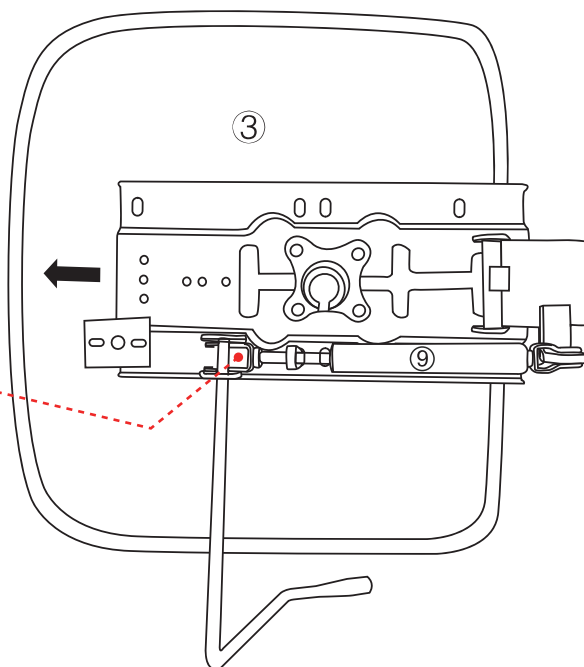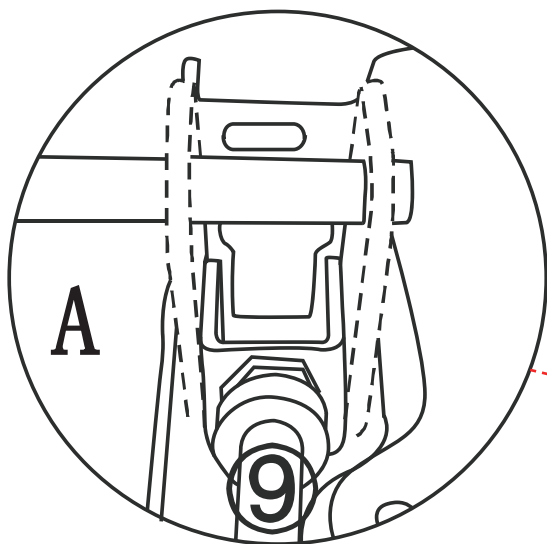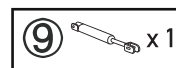

Step1:

Insert the Reclining Aerobar ⑨ on Part A

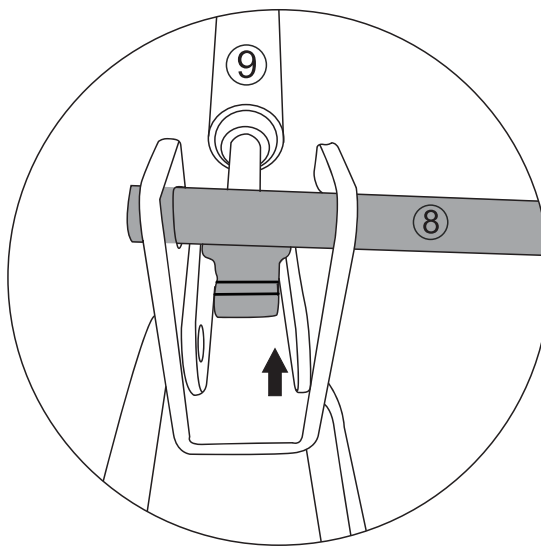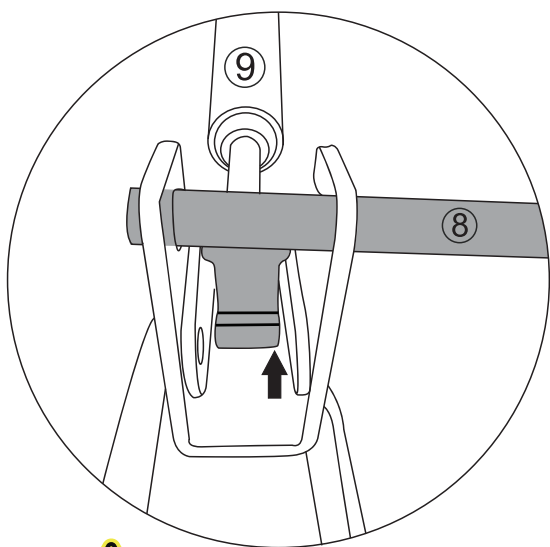


Caution

Step2:

Turn Part ⑧ backward to the position shown in the picture

Step Ten:

⑨ x1

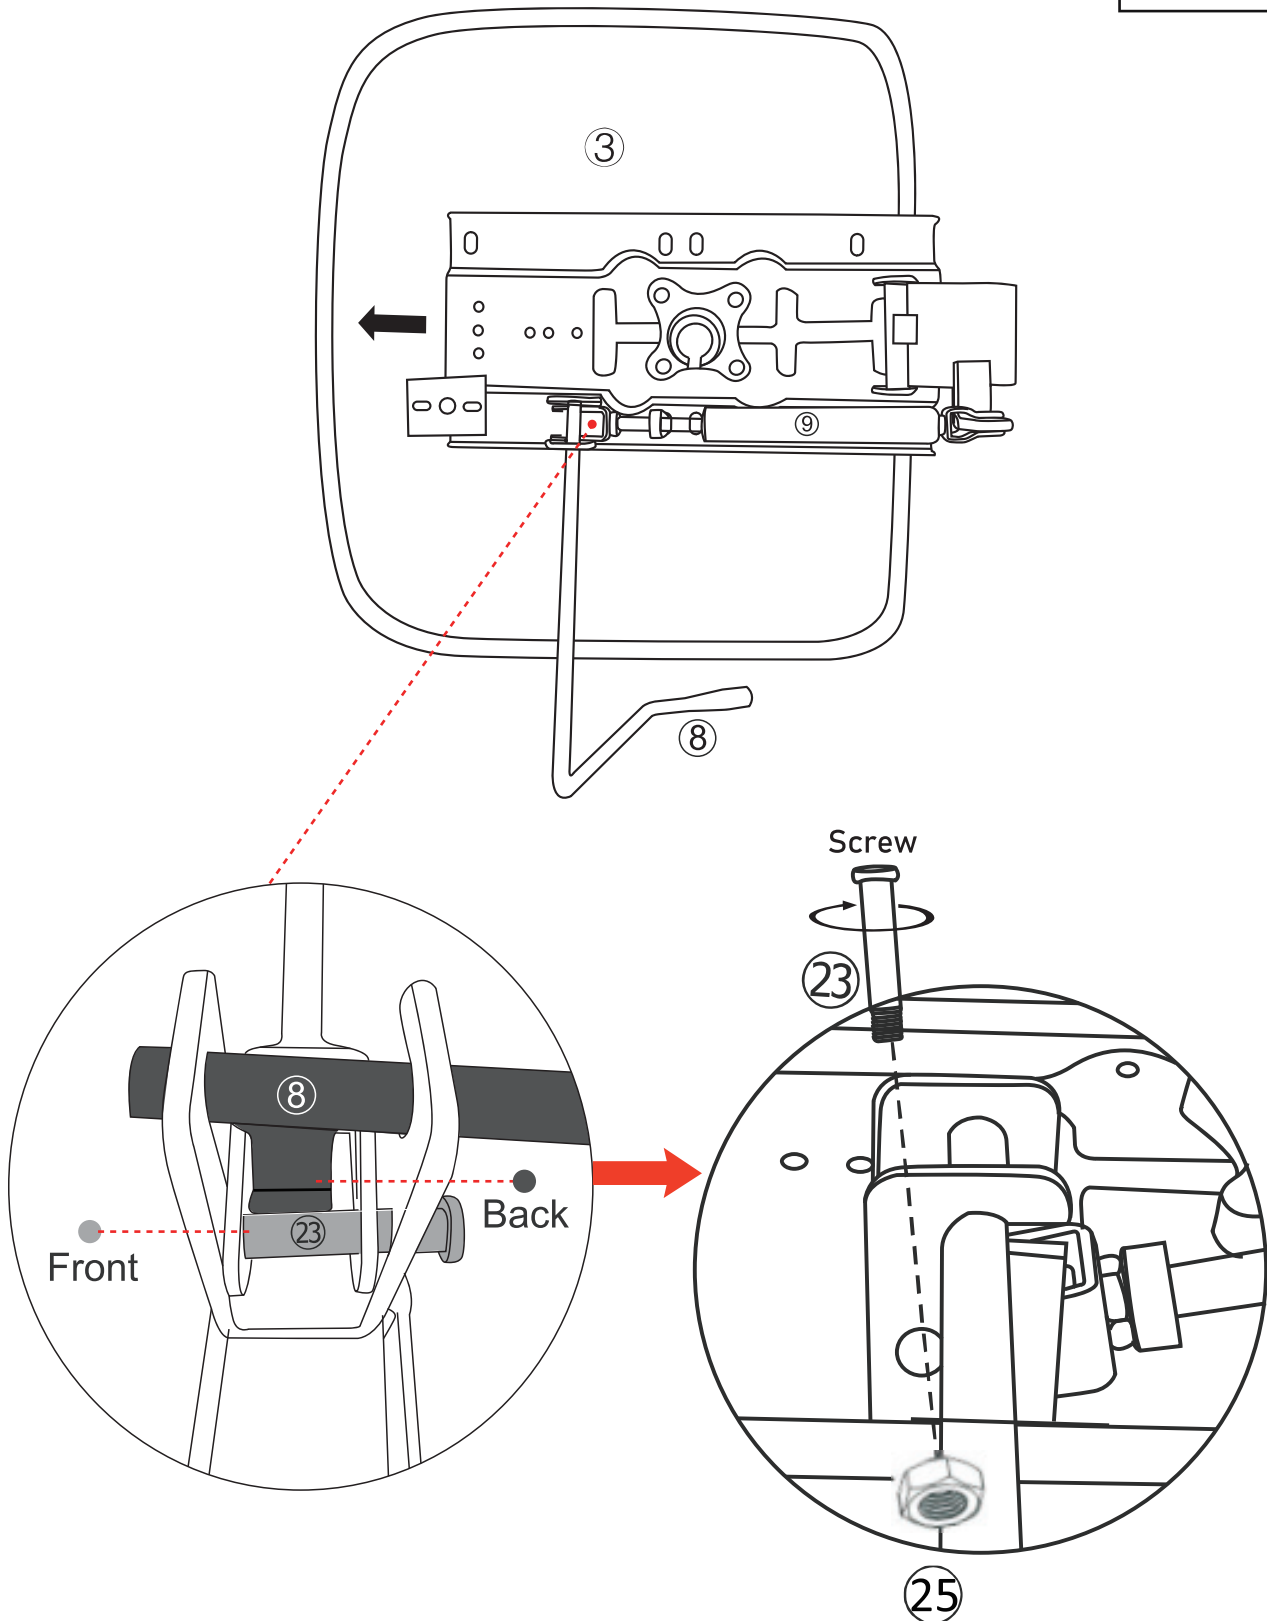


Step3:

Install the Reclining Aerobar ⑨ and secure the Reclining Aerobar ⑨ with Hex Screws M10*30 ②③ and Hex Nuts M8 ②⑤ through the bottom hole of Part A.



Step Eleven:

1. Use Hex screw (13) and Hex Nuts (25) to connect the bottom of reclining aerobar with Part B. If the hole can't match, please adjust the position of J-Bar (11).

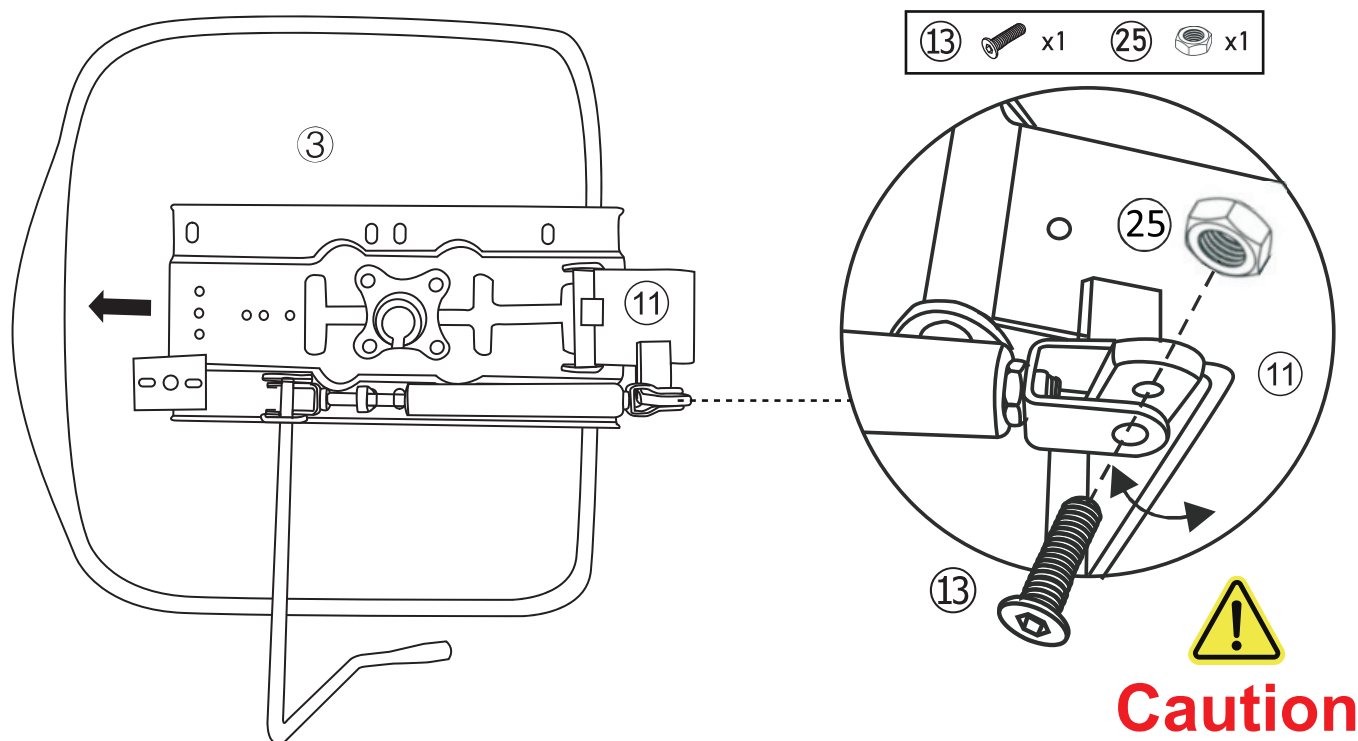

Step Twelve:

Secure the Footrest (4) with two Hex Screws M8*16 (15) to the Tray (10) at the back of the Seat

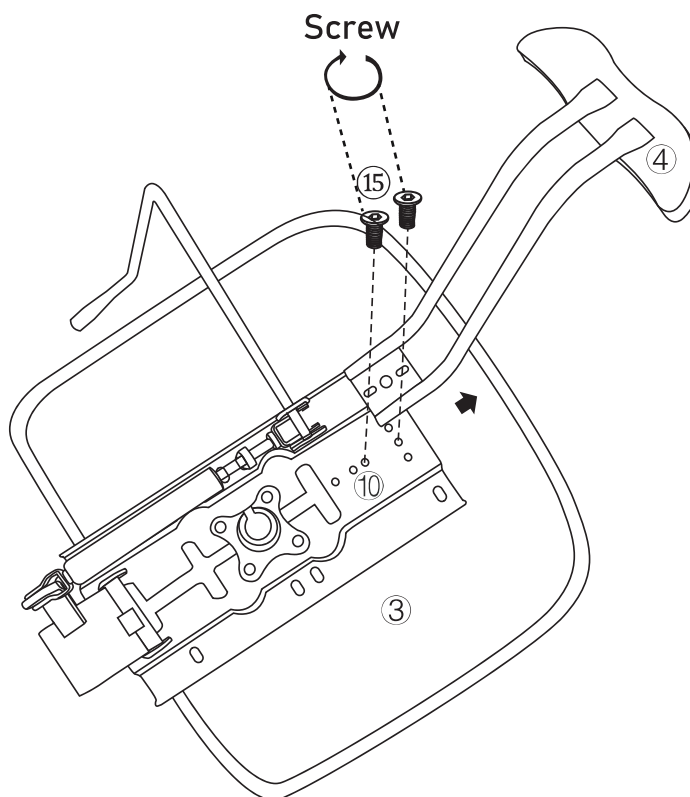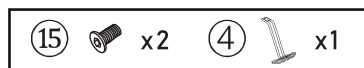


Step Thirteen :


Attach the assembled seat to the pump, use Hex screws 24 to connect J-bar 11 with back 2

②④ x4 ② x1

Step1

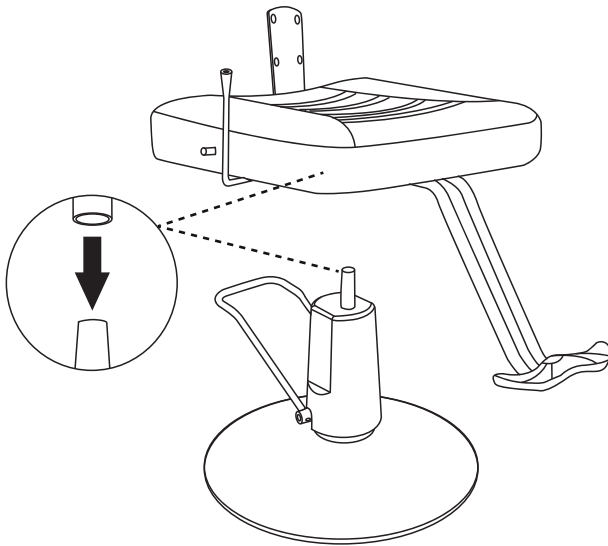


Step2

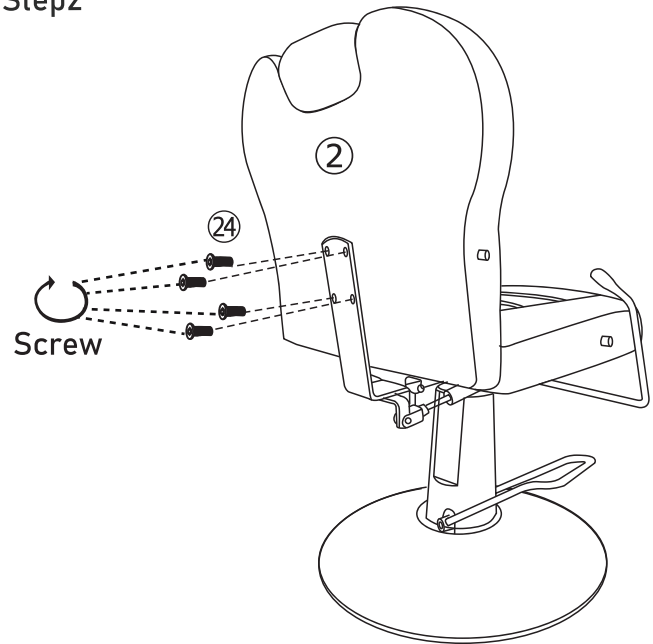


Step Fourteen : Use Screw (18) to attach arms to seat and back


⑱ x4 ③ x2

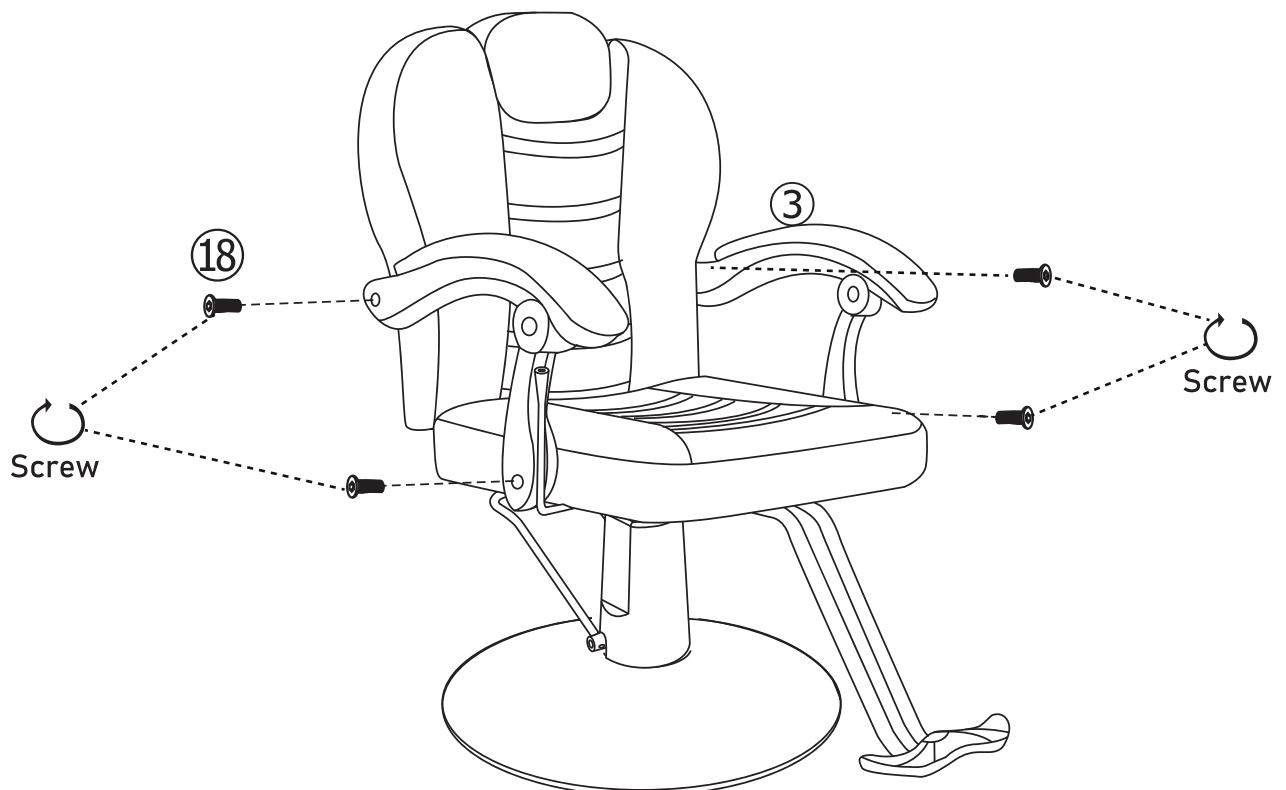

Instruction for use

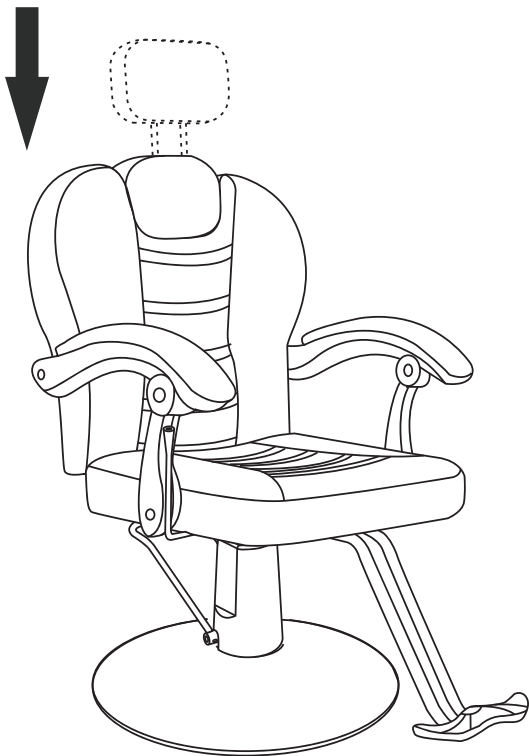

The height of the headrest: The height of the headrest can be adjusted by pulling and pushing up and down the headrest.

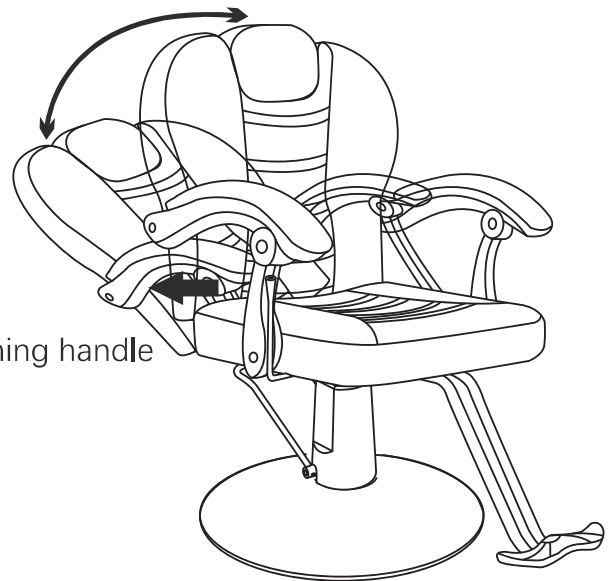

Reclining handle


Reclining the backrest: Sit on the chair and pull the handle on the right side of the seat back without letting go, while leaning back hard while the backrest is down. Release the handle at the desired angle and fix the backrest angle.

Backrest rebound upright: Return to the body upright, pull the handle on the right side of the seat back again, and the seat back rebounds and stands upright.



Caution

Seat up: Foot down on the pump lever 5-10 cm, and repeat. Don't step too deep!

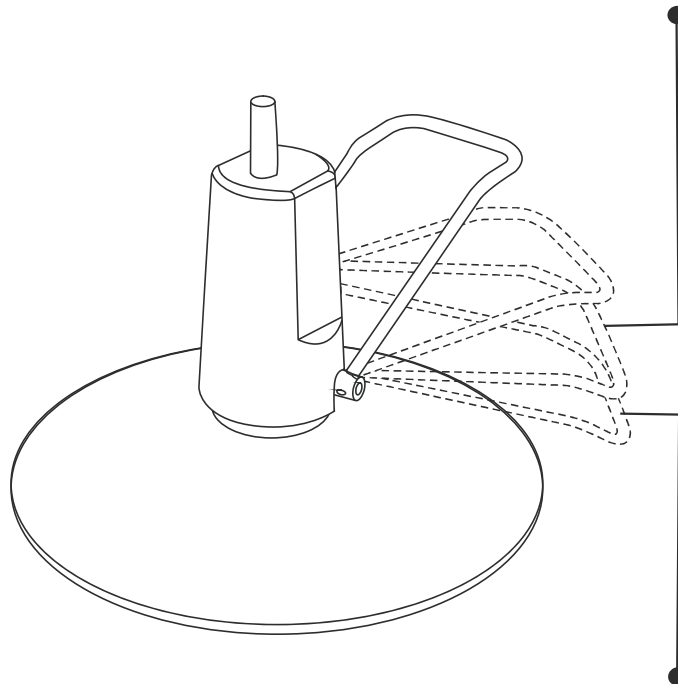

Seat down: Downhill the pump lever and hold still to lower the seat.