


ASSEMBLY INSTRUCTIONS





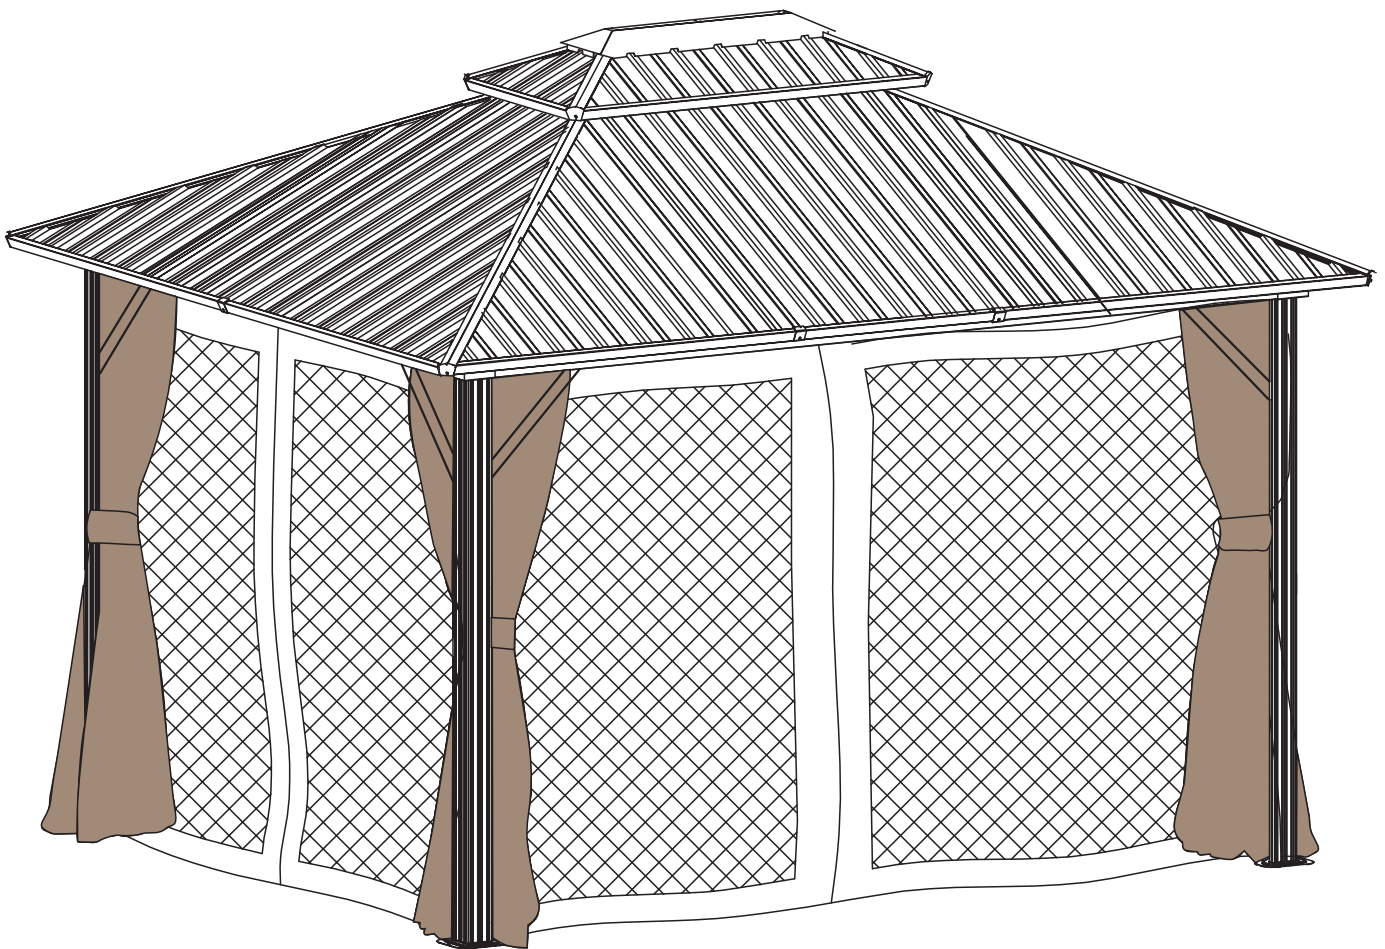






12X16 FT DOUBLE ROOF HARD TOP GAZEBO
















ASSEMBLY INSTRUCTIONS
















1. Two or more people are required for assembly.
2. A ladder and electric drill may be necessary.
3. Do not erect the structure in heavy winds or inclement weather.
4. Do not leave up this unit for extended periods of time, as it is not a permanent structure or designed to withstand sustained wind or rain. It is a temporary, portable shelter that shields you from sunlight and rain. The screens also block flying insects.
5. Do not use candles, matches, or any open flames near the tent.
6. To better align the screws for practical situations, do not fully tighten screws initially.
7. Professional installation is highly recommended.

Item no.	Reference Image	Qty.
A		X4
B		X2
B1		X2
C		X2
C1		X2
D		X6
E		X4
F		X4
F1		X4














ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
G		X6
G1		X2
G2		X2
G3		X2
G4		X2
G5		X2
G6		X2
G7		X2
G8		X2
G9		X2
G10		X2
H		X4
H1		X4
H2		X2
H3		X2














ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
J1		X4
J2		X4
K		X1
K1		X1
L		X4
M1		X10
M2		X8
M3		X6
M4		X4
M5		X96
M6		X4
M7		X2
M8		X4








ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
M9		X4
N1		X2
N2		X2
N3		X2
N4		X2
N5		X2
N6		X2
N7		X2
N8		X2
O1		X2
O2		X2
O3		X2
O4		X2

ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
05		X2
06		X2
P		X4
Q		X96
I		X4
R		X72
R1		X20
S	 M6X47mm	X14
T	 M6X25mm	X82
U	 M6X25mm	X1
U1	 M6X30mm	X4
V	 M6X15mm	X148
W	 M6X50mm	X10

ASSEMBLY INSTRUCTIONS

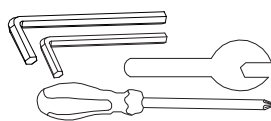Item no.	Reference Image	Qty.
(X)	 M6X10mm	X32
(X1)	 M6X42mm	X8
(Y)	 M5X12mm	X64
	 Curtain	X1
	 Netting	X1
	 Assembly tools	X1
	 Tent peg	X12


ASSEMBLY INSTRUCTIONS

1

X4





Ⓐ 4pcs



Ⓕ 4pcs



Ⓥ 12pcs

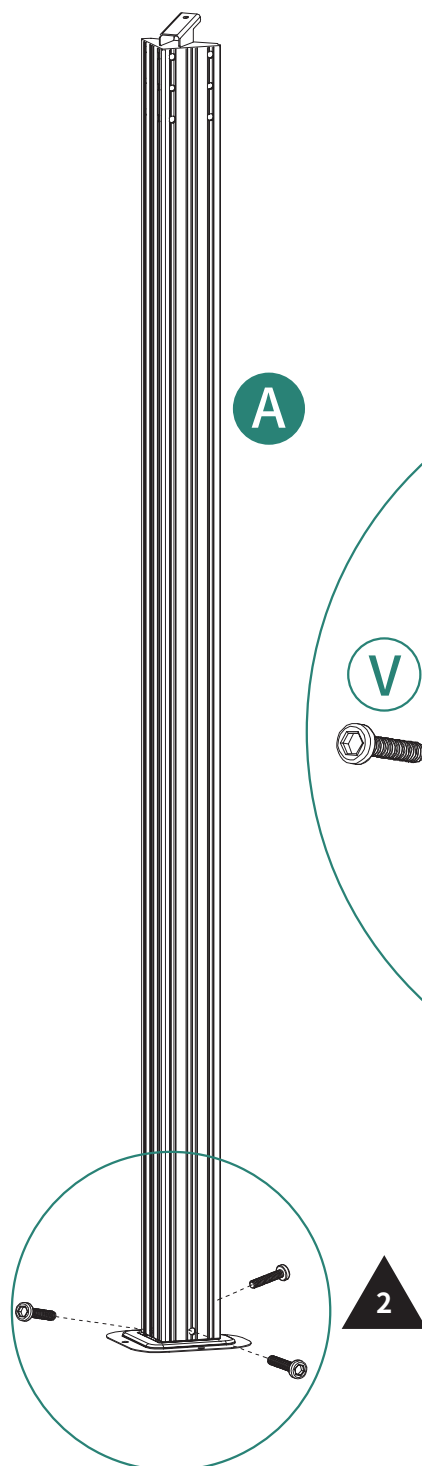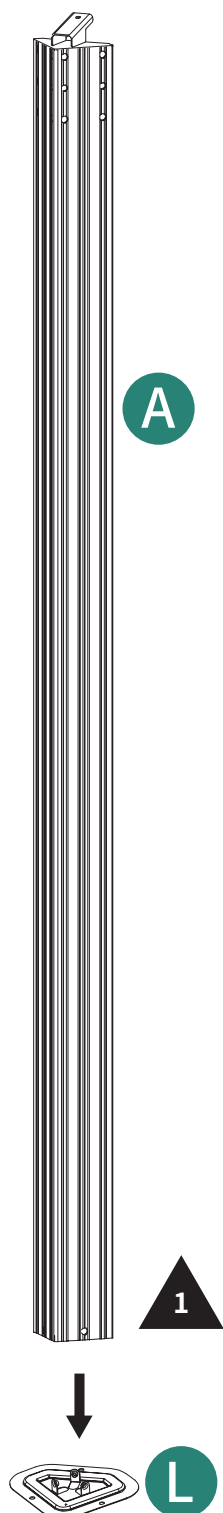

ASSEMBLY INSTRUCTIONS

2

X2







Ⓑ 2pcs

Ⓑ1 2pcs

Ⓒ 2pcs

Ⓒ1 2pcs

ⓧ 32pcs

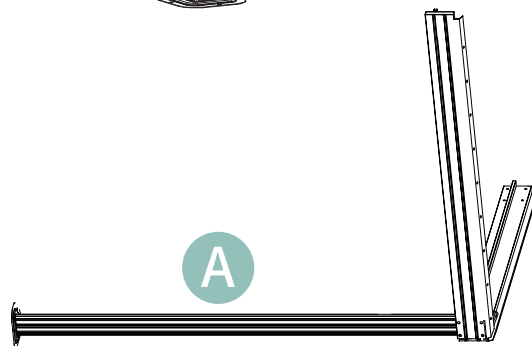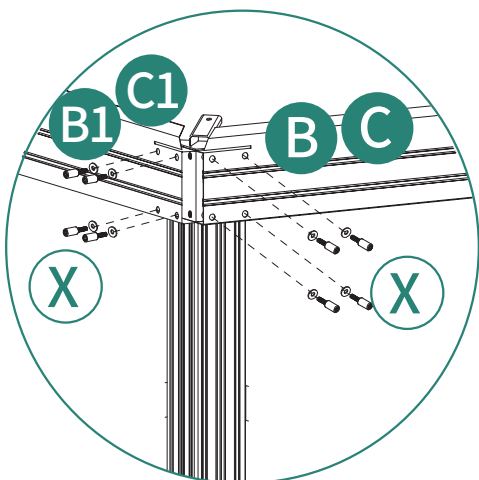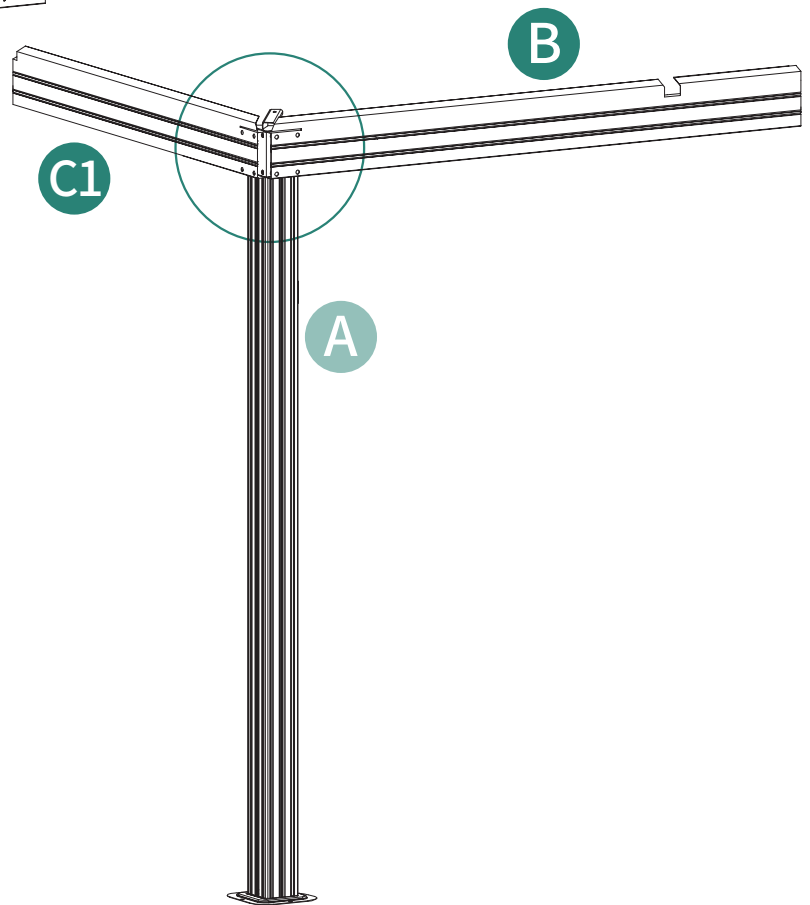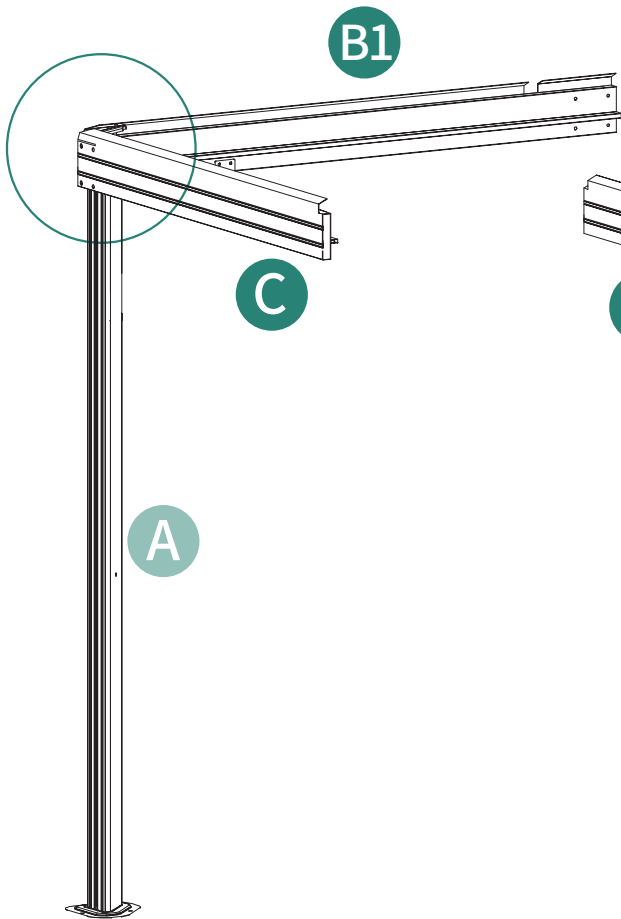

You can put Part A down


ASSEMBLY INSTRUCTIONS

3

X2






Ⓡ4pcs



Ⓡ14pcs




Ⓢ32pcs

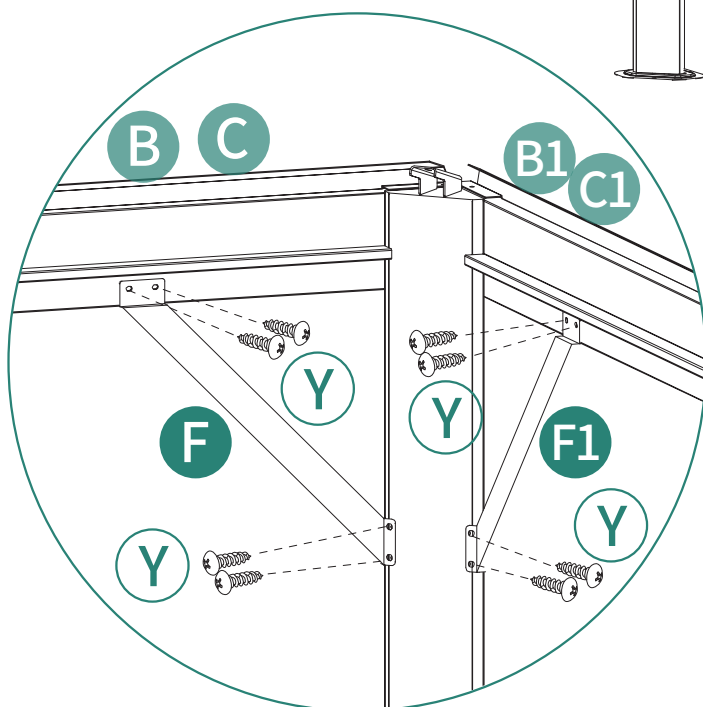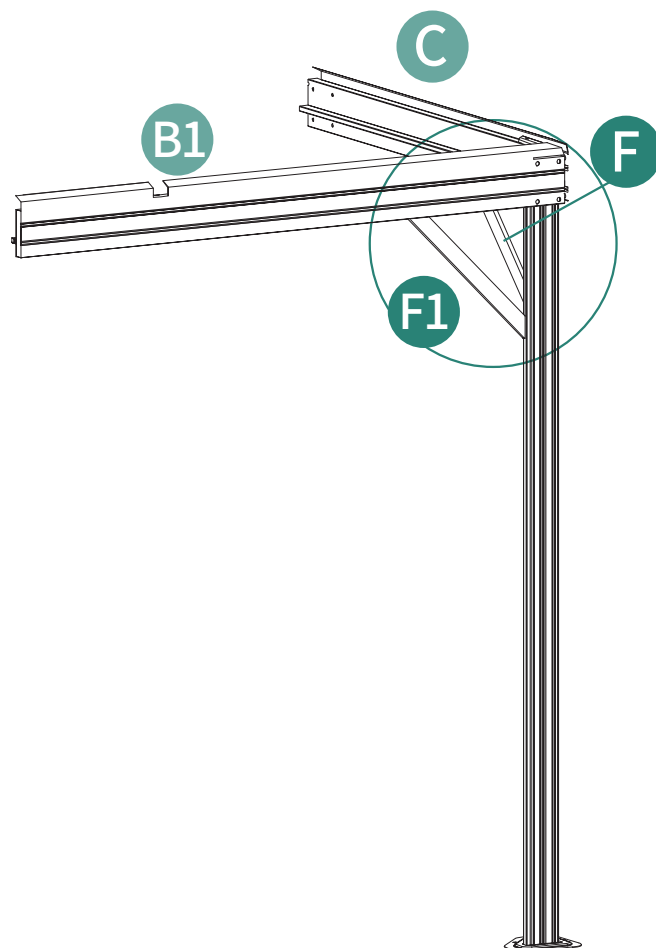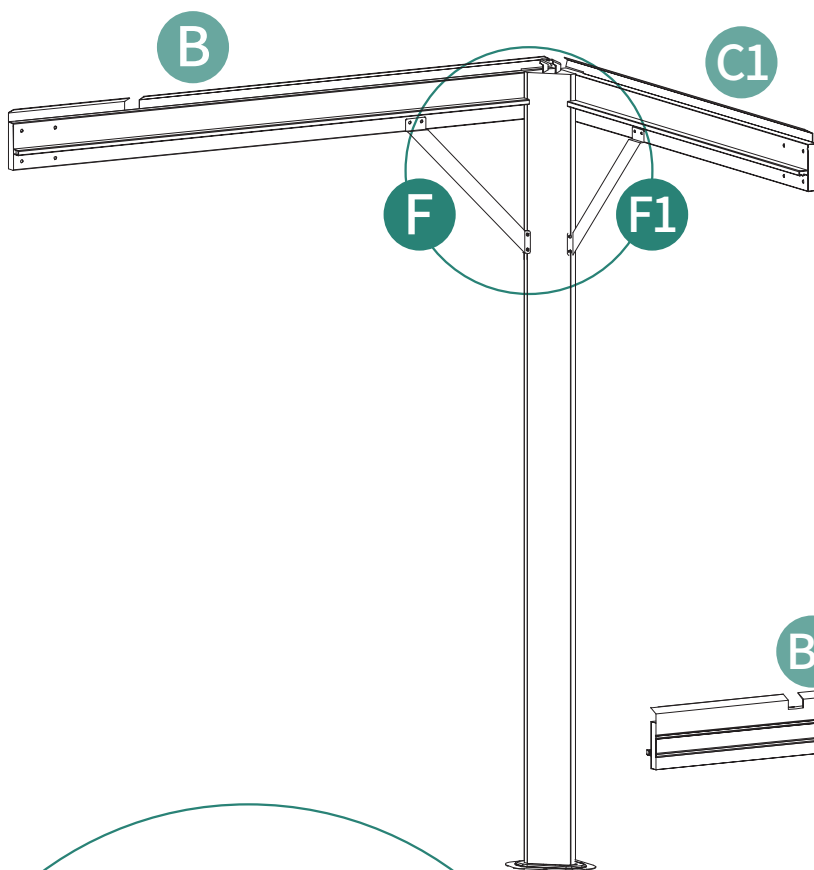

ASSEMBLY INSTRUCTIONS

4

X2

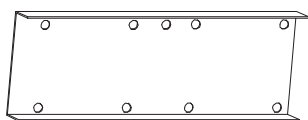


Ⓟ4pcs



Ⓥ16pcs

When connecting B and B1 via P, and connecting C and C1 via P, make sure that 3 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.

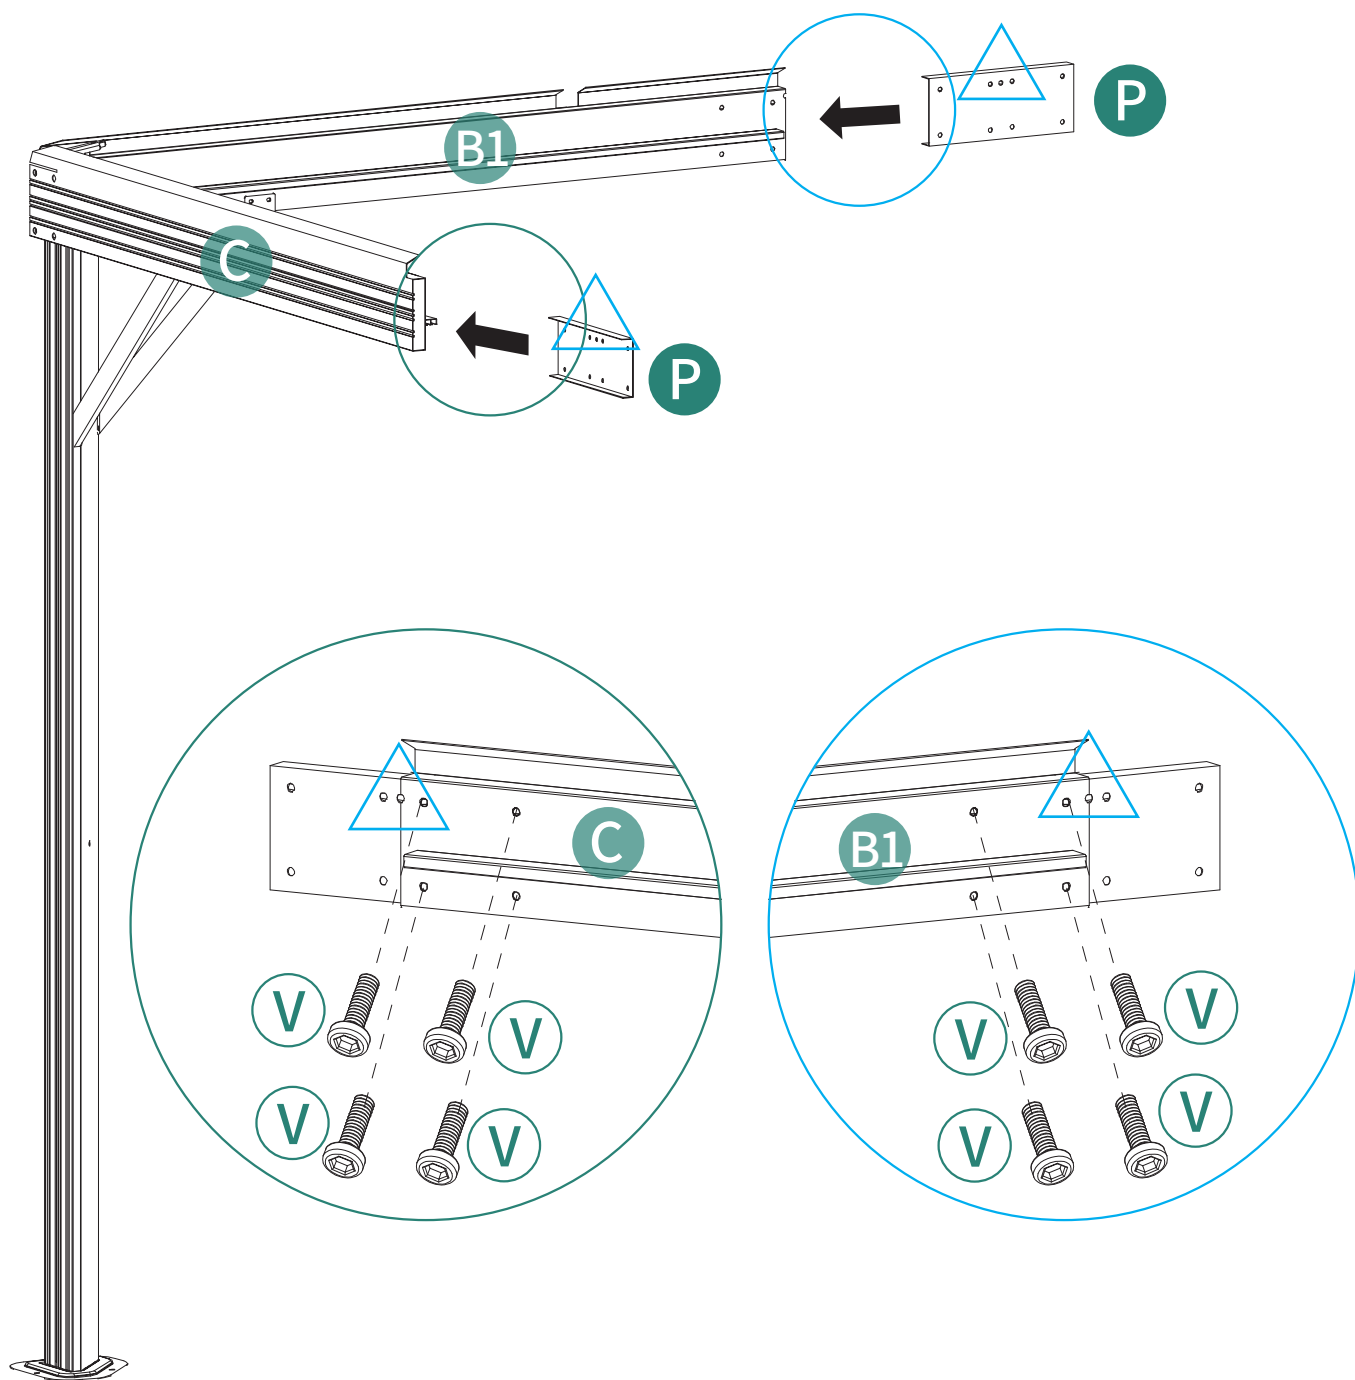


ASSEMBLY INSTRUCTIONS

5

X2



Ⓥ8pcs

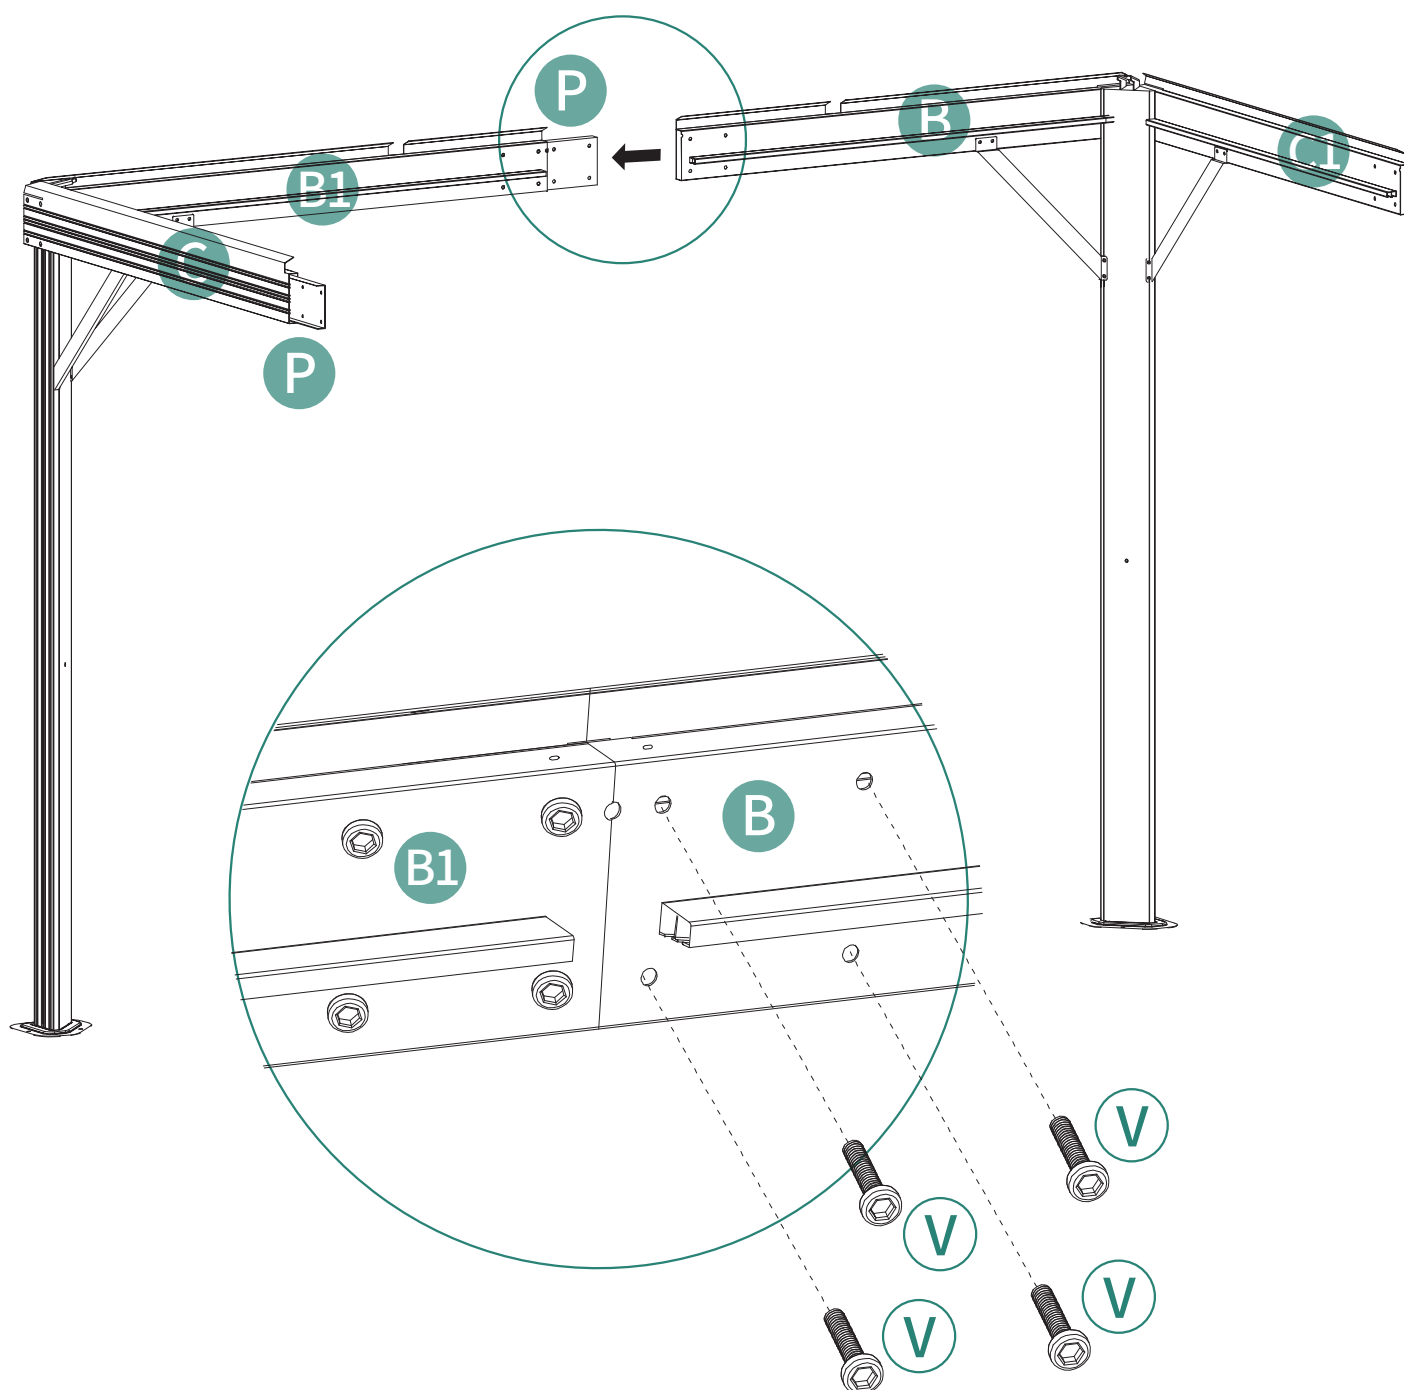


ASSEMBLY INSTRUCTIONS

6




Ⓥ8pcs

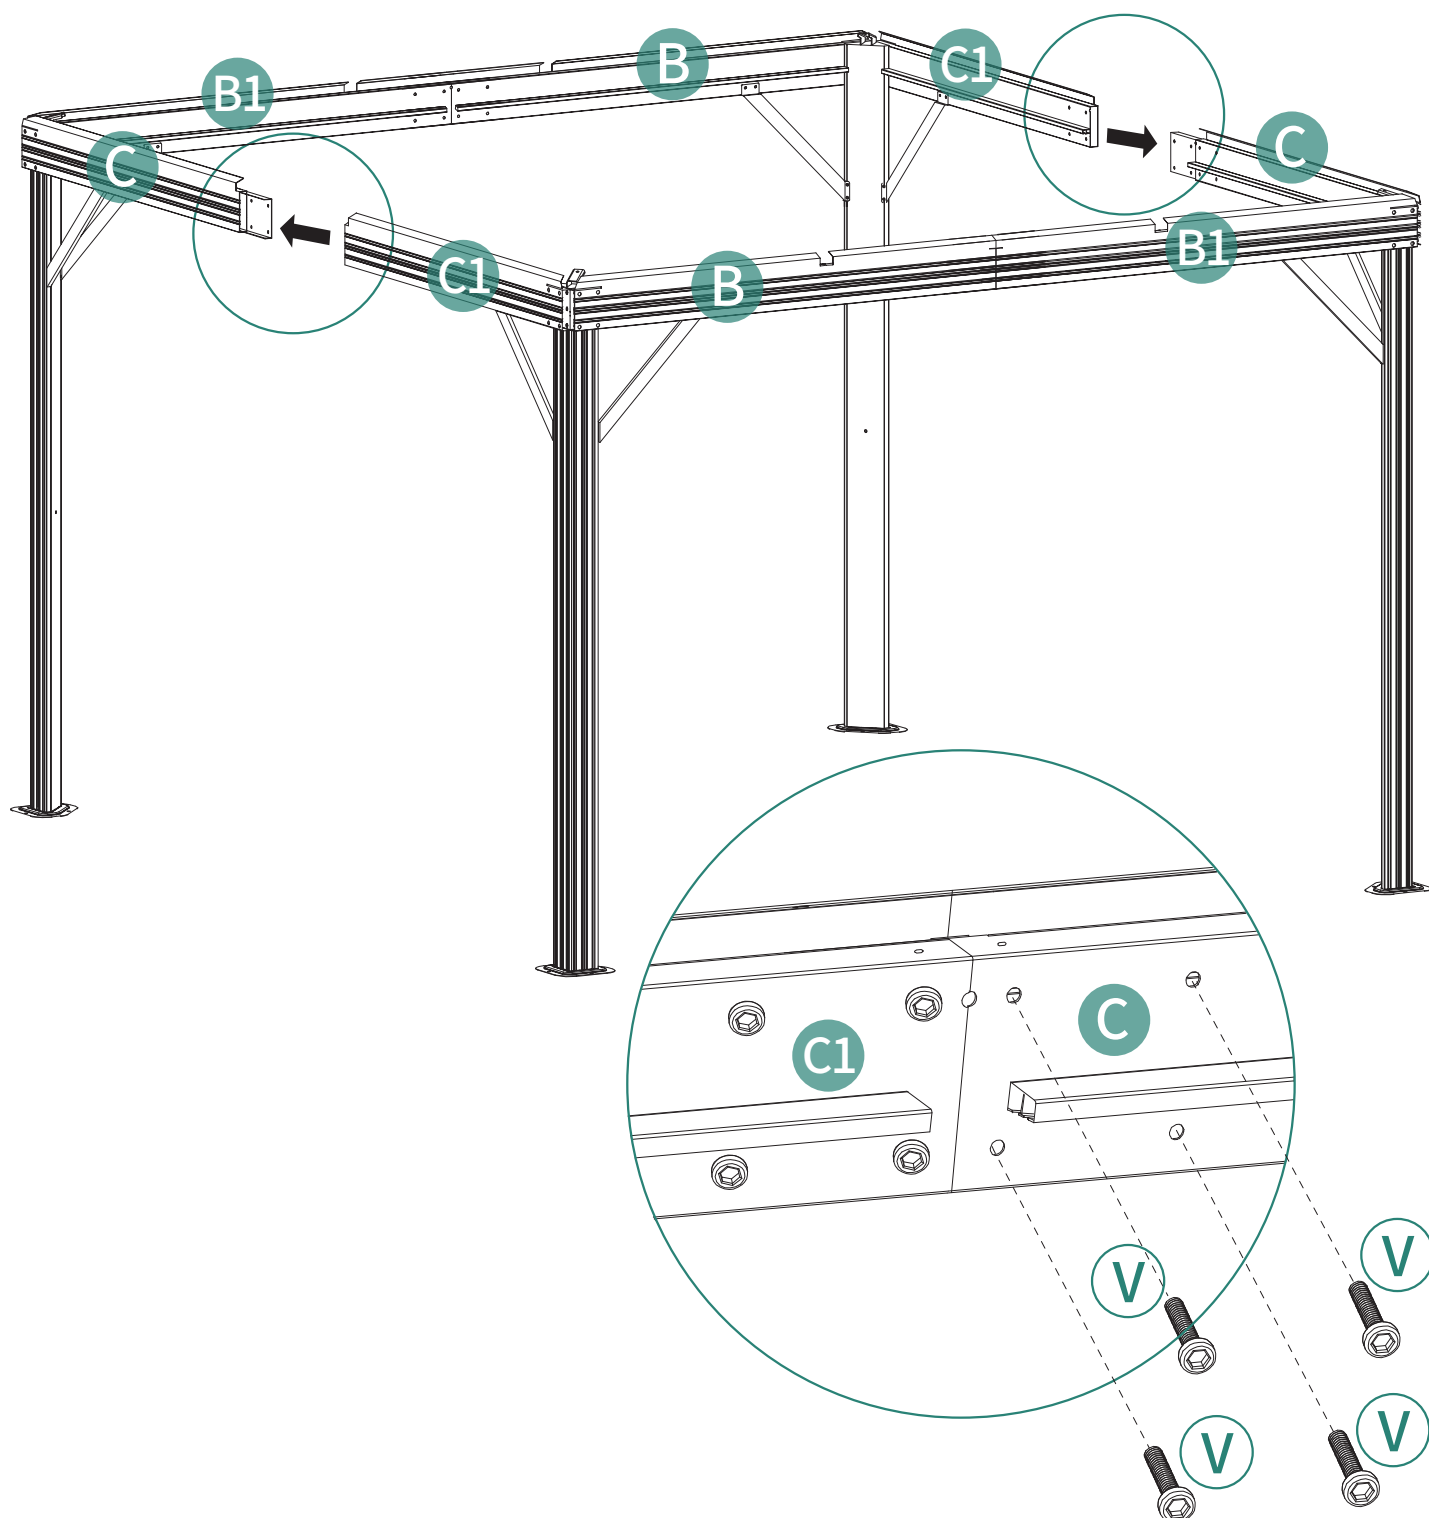

ASSEMBLY INSTRUCTIONS




7

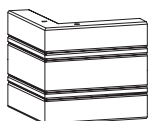

ⓐ4pcs




Ⓨ16pcs

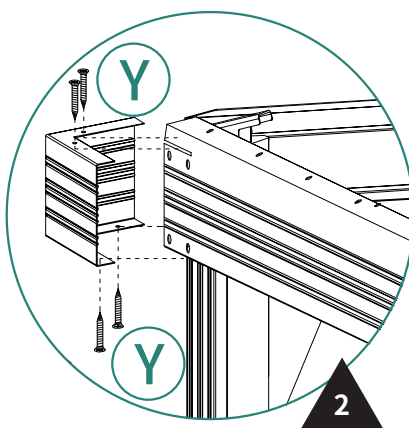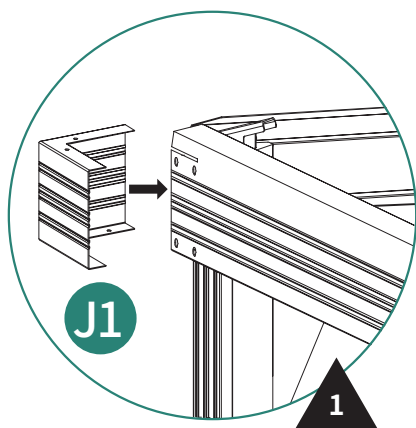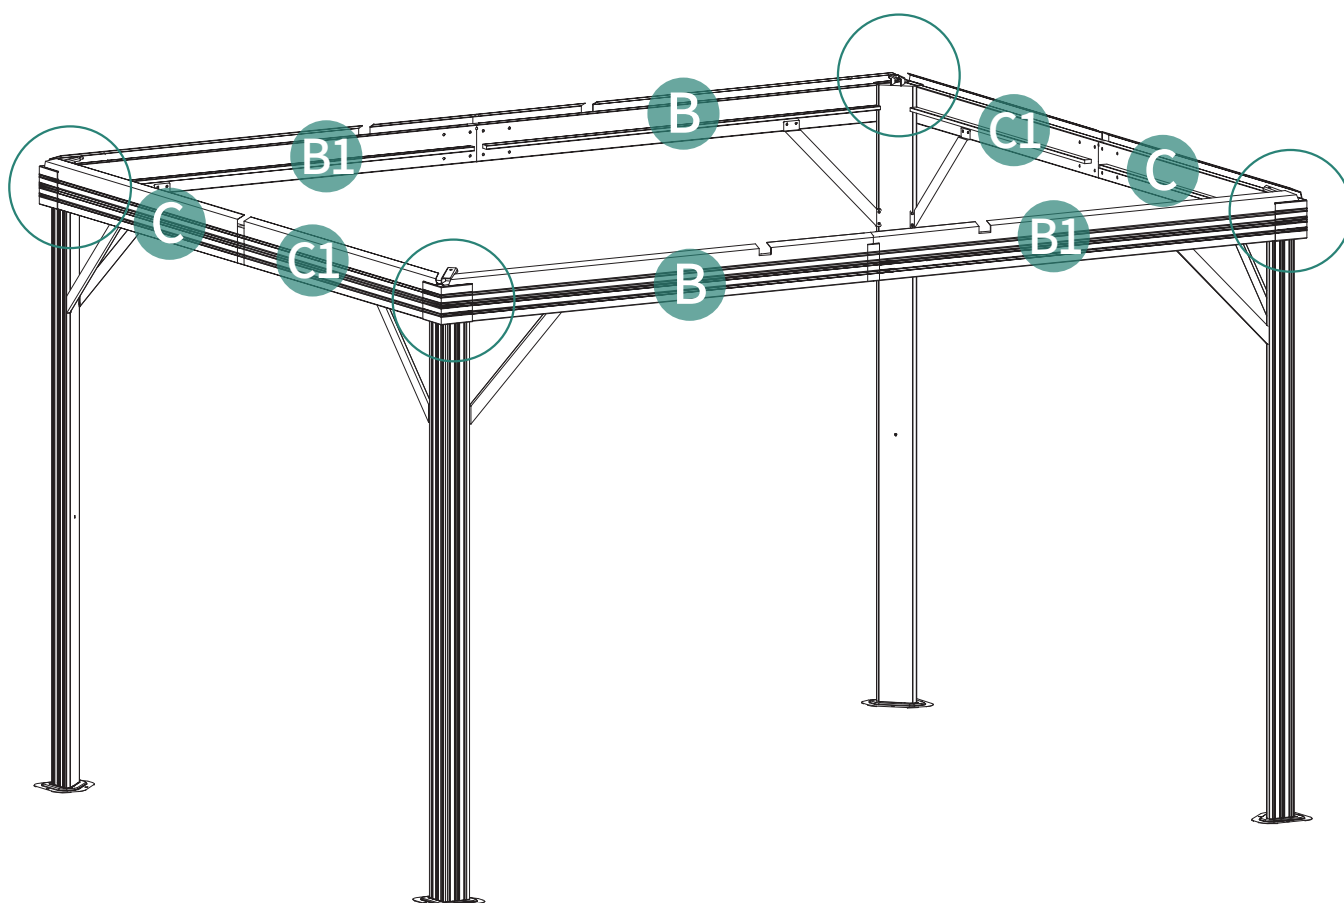




ASSEMBLY INSTRUCTIONS

8




Q96pcs

When sliding 7 x hook Q onto each rail of parts B and B1, they should face inward. The same for sliding 5 x hook Q on rails of parts C and C1.

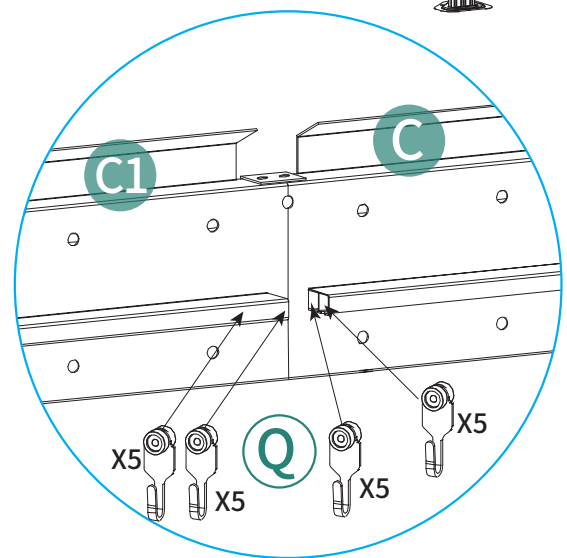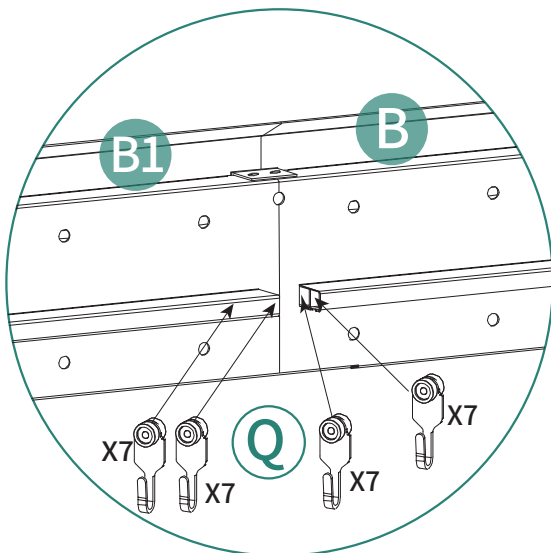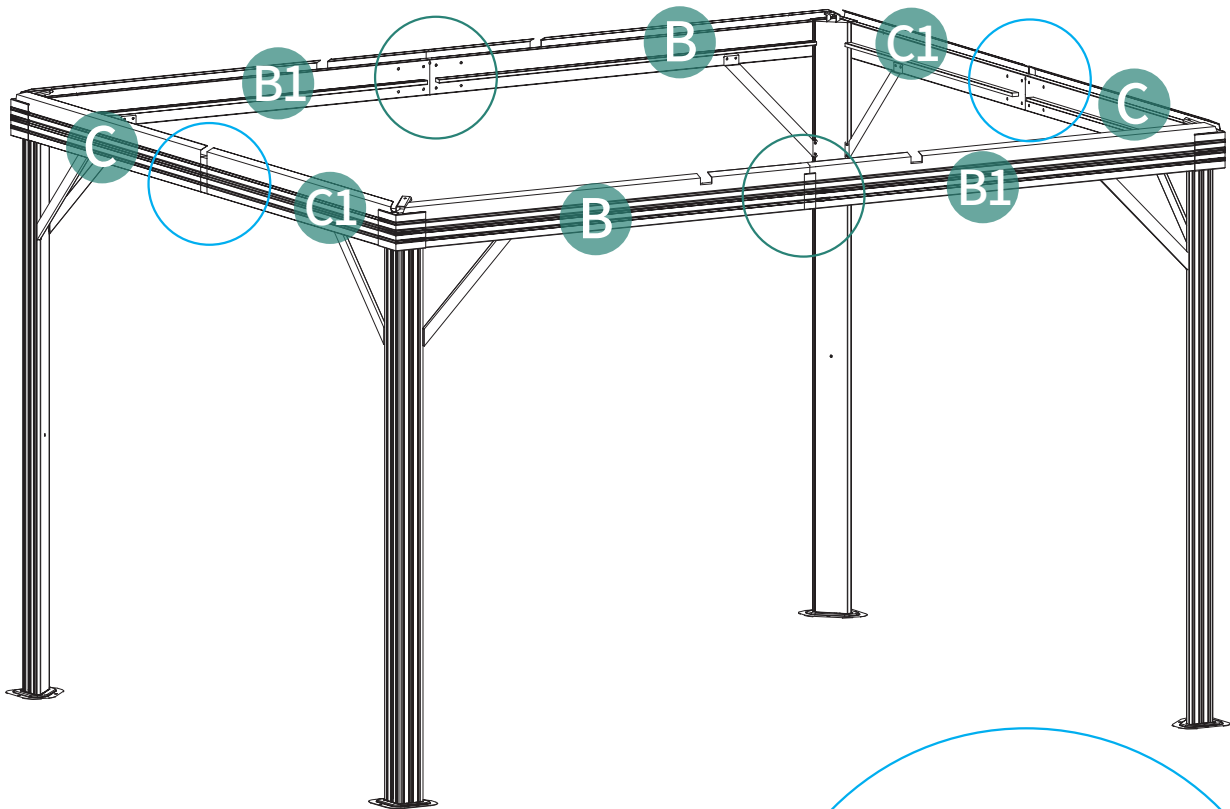


ASSEMBLY INSTRUCTIONS

9





ⓐ4pcs




Ⓜ4pcs




Ⓨ16pcs

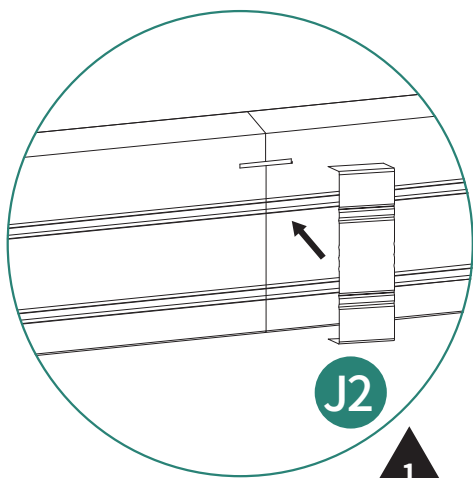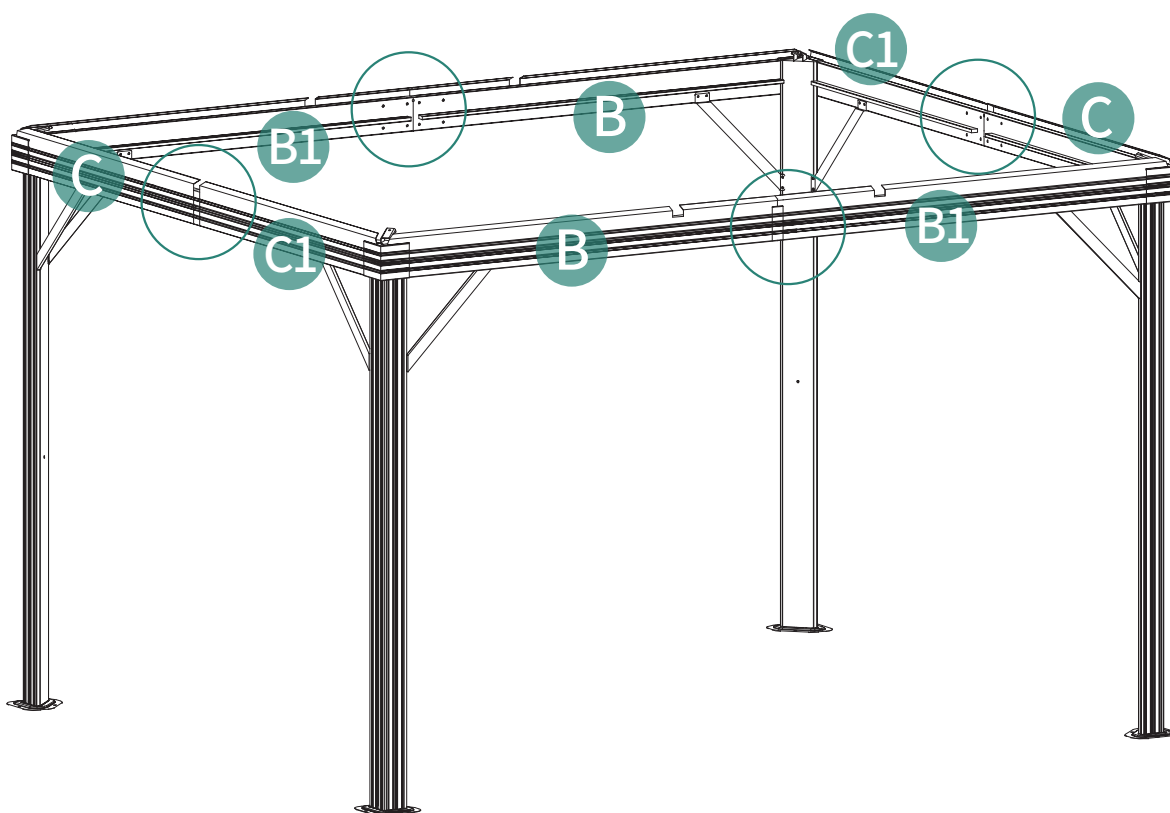

1

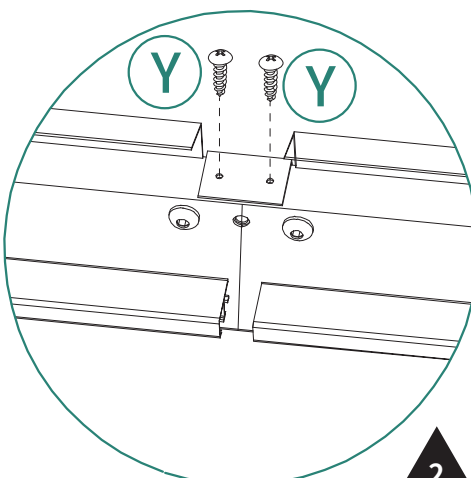

2

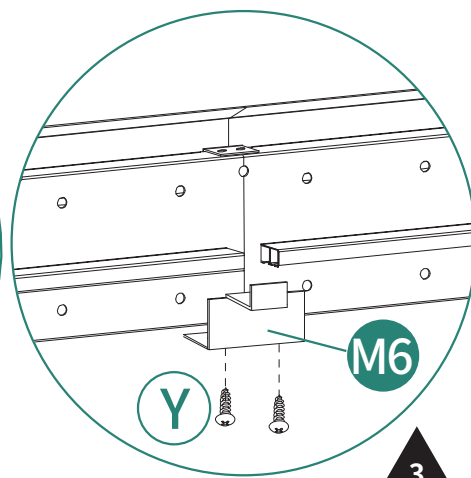


3

ASSEMBLY INSTRUCTIONS

10





ⓓ6pcs



Ⓚ11pc



Ⓥ12pcs

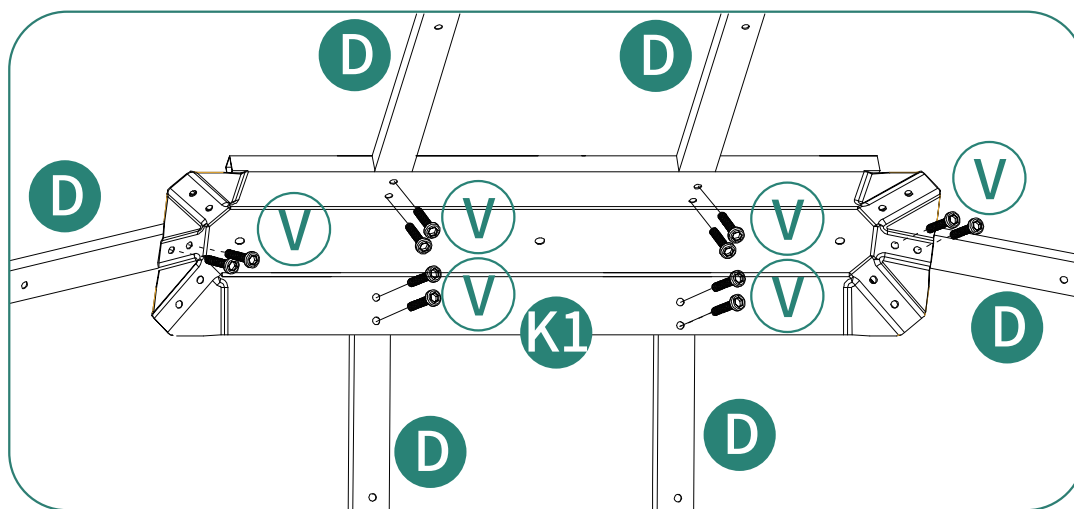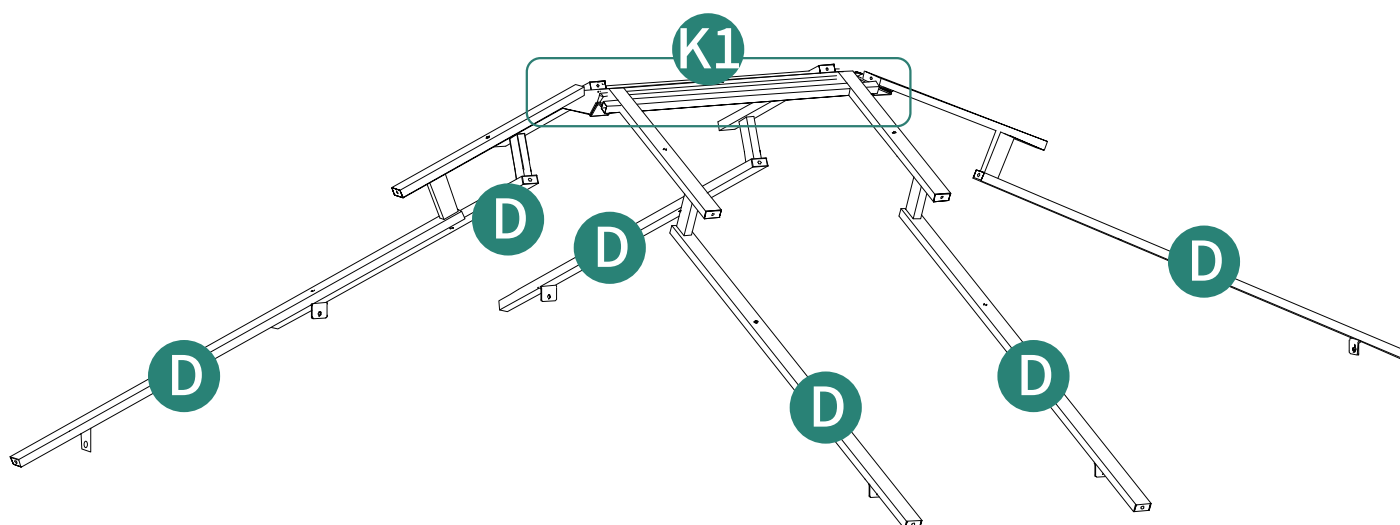


ASSEMBLY INSTRUCTIONS

11



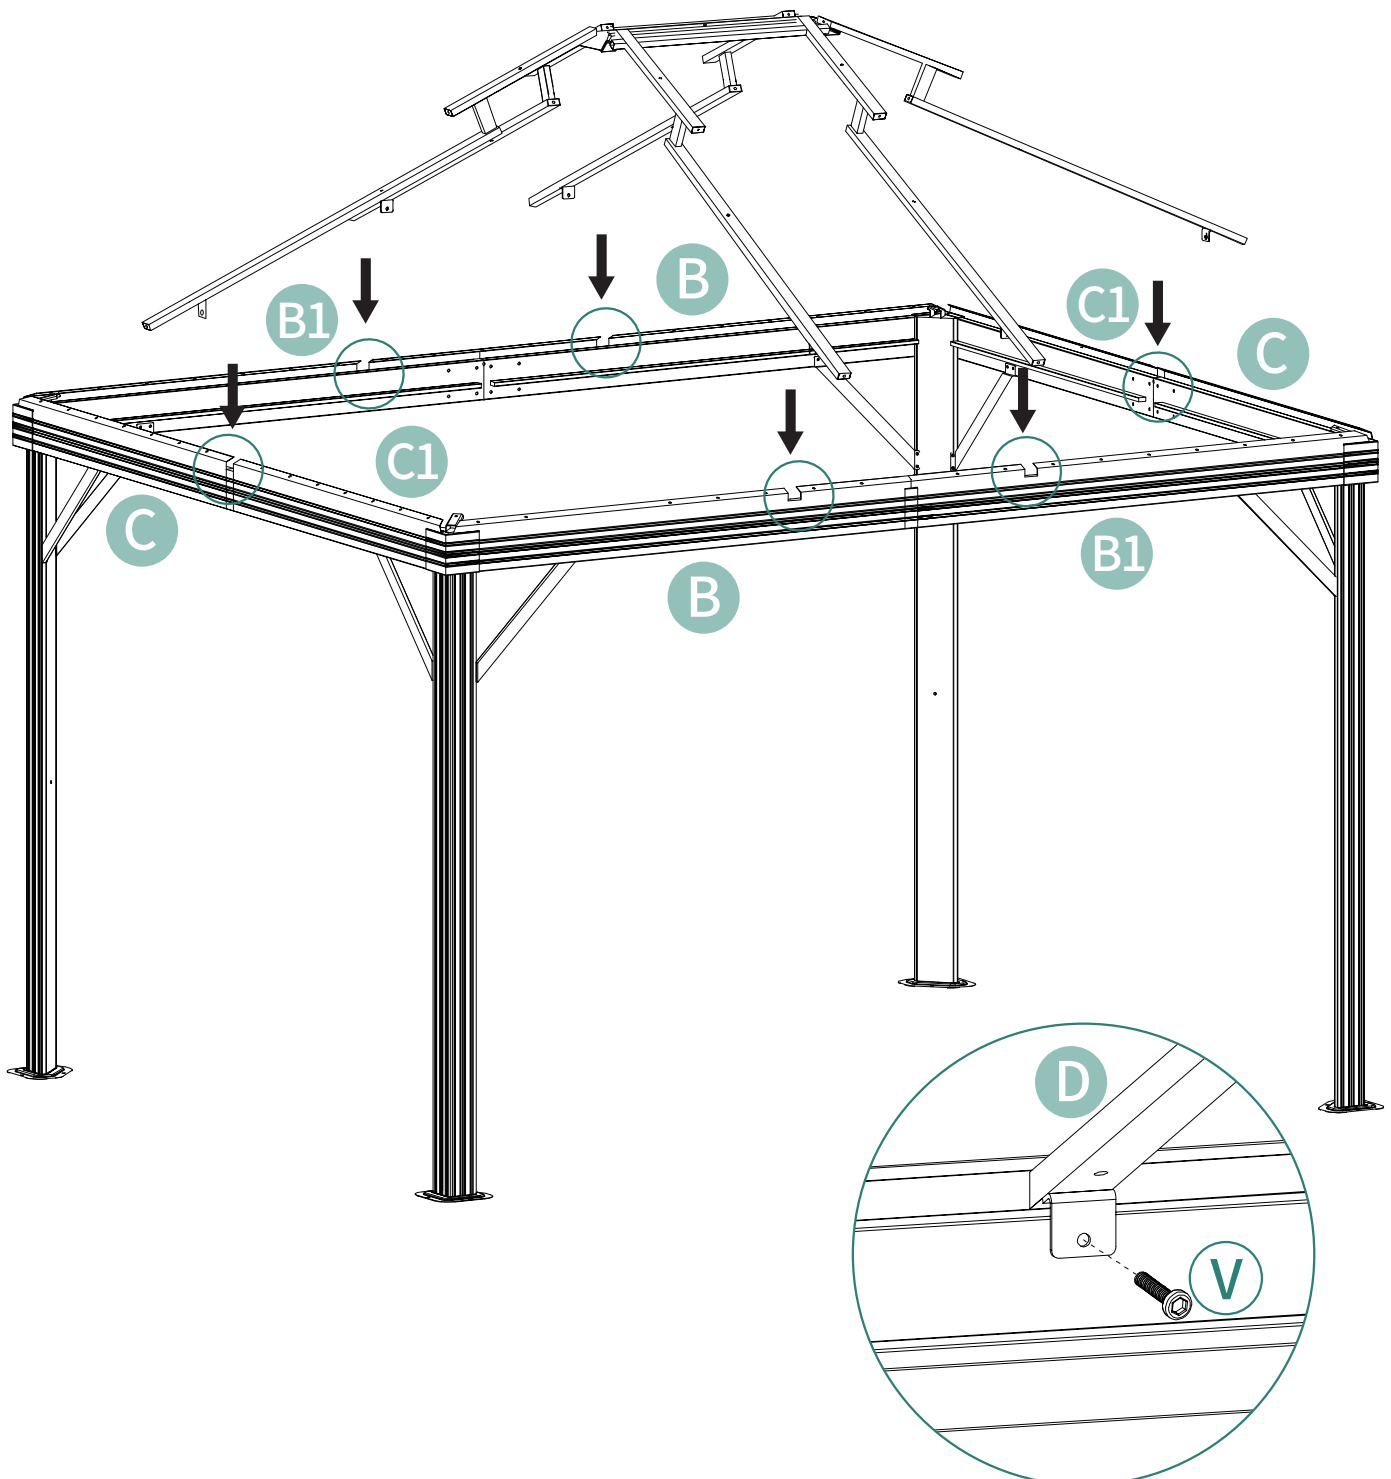

Ⓥ6pcs





ASSEMBLY INSTRUCTIONS




12


Ⓔ 4pcs


Ⓘ 4pcs


Ⓜ9 4pcs


Ⓥ 16pcs

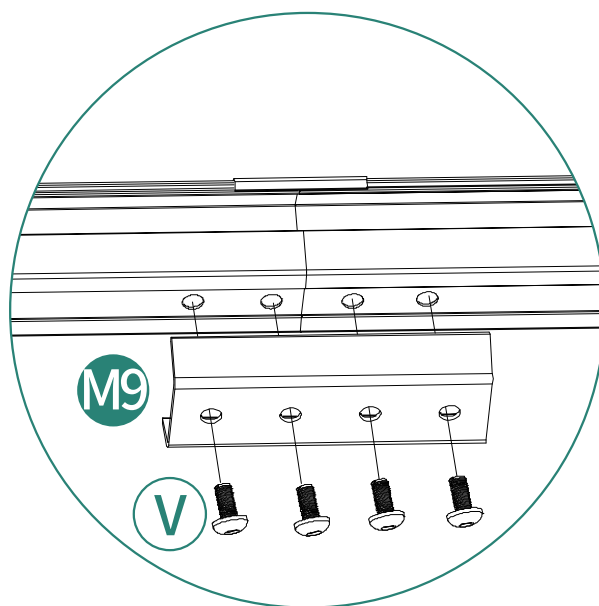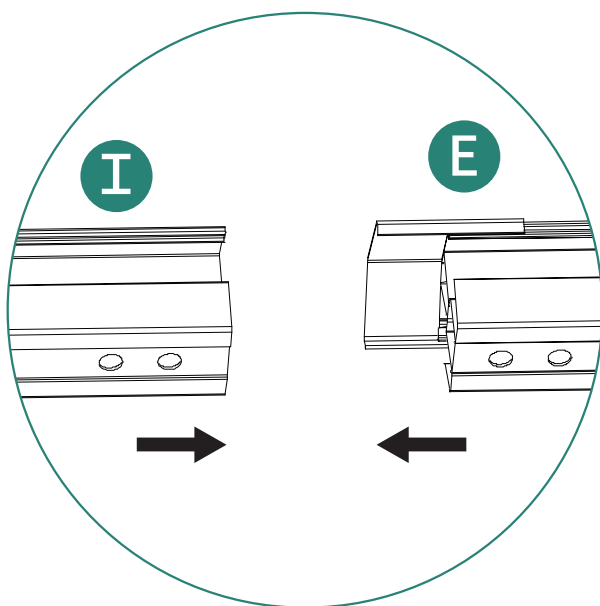
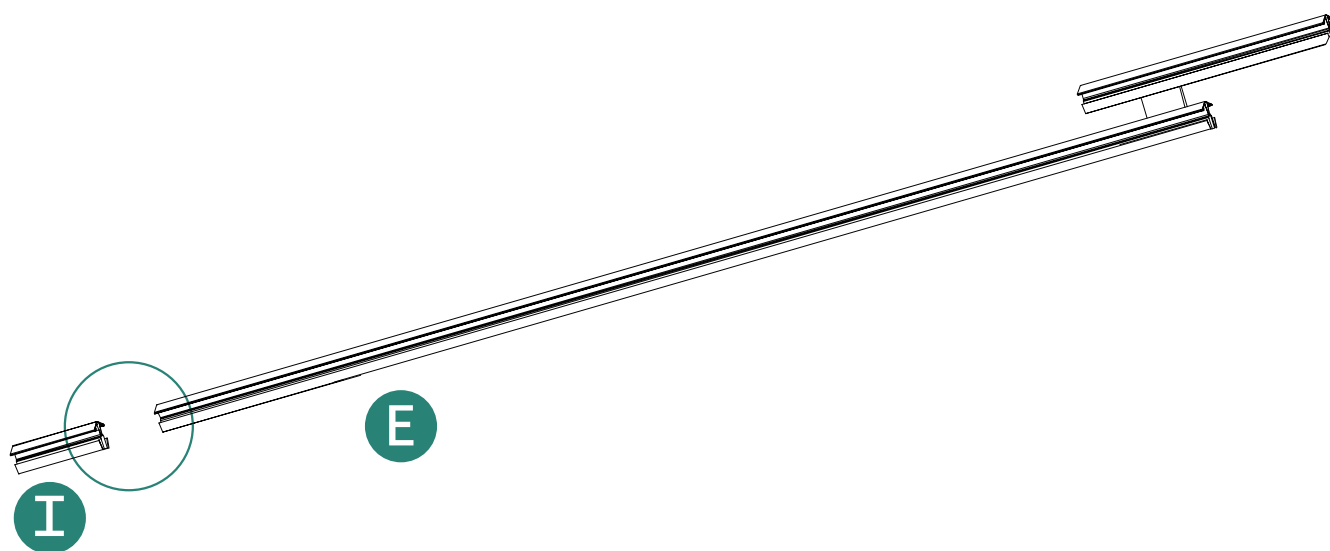


ASSEMBLY INSTRUCTIONS


13



Ⓥ12pcs


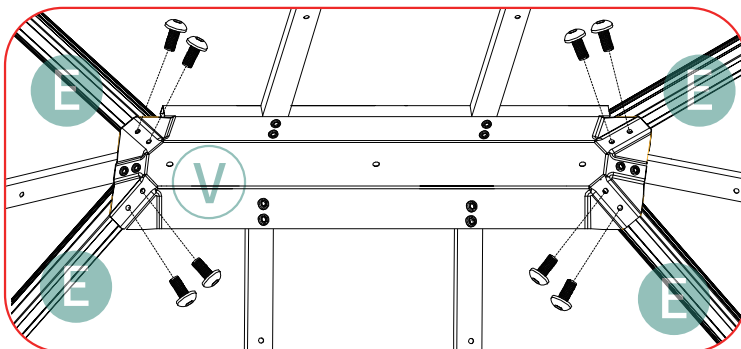
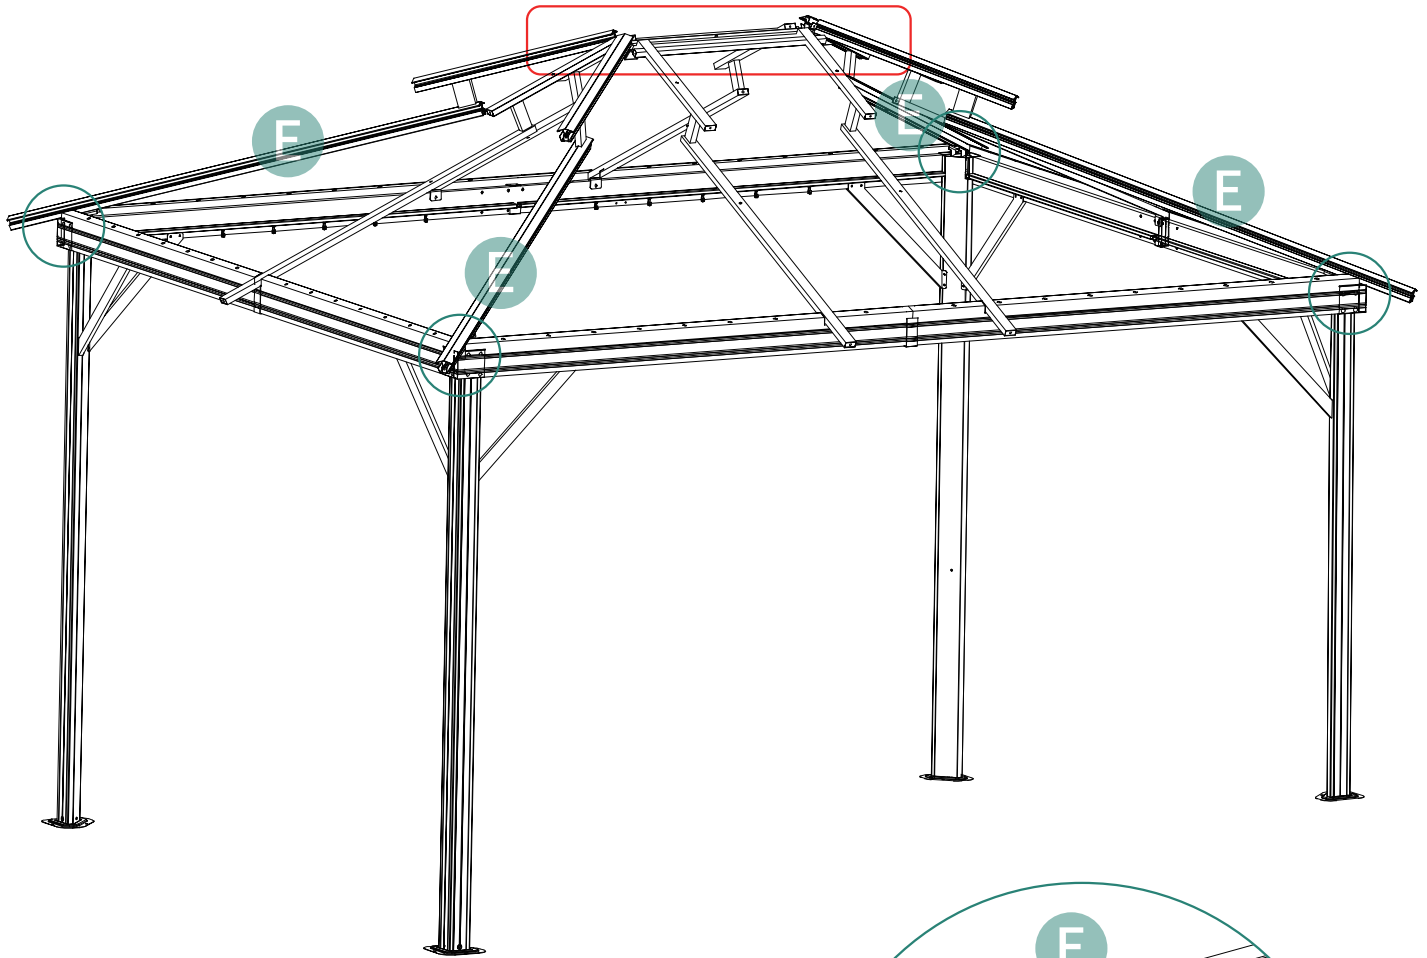


It's view from the bottom inside gazebo.

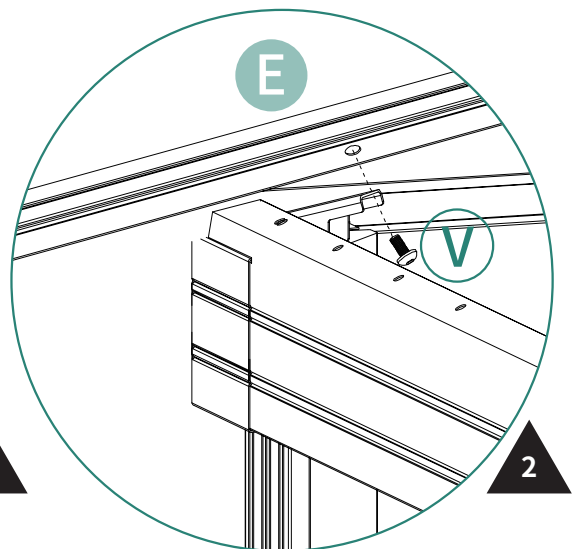

ASSEMBLY INSTRUCTIONS

14



H3 2pcs




M8 4pcs

V 8pcs

X1 2pcs

W 4pcs

Insert part X1's screw but do not fix its nut until step 17. Same for part W.

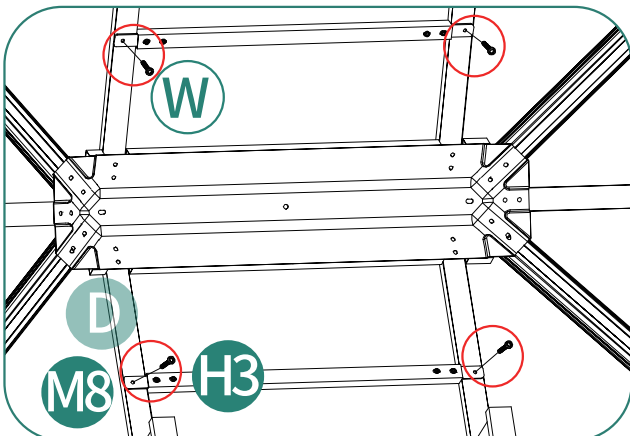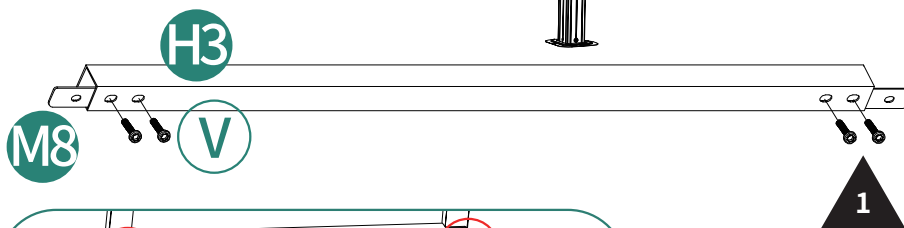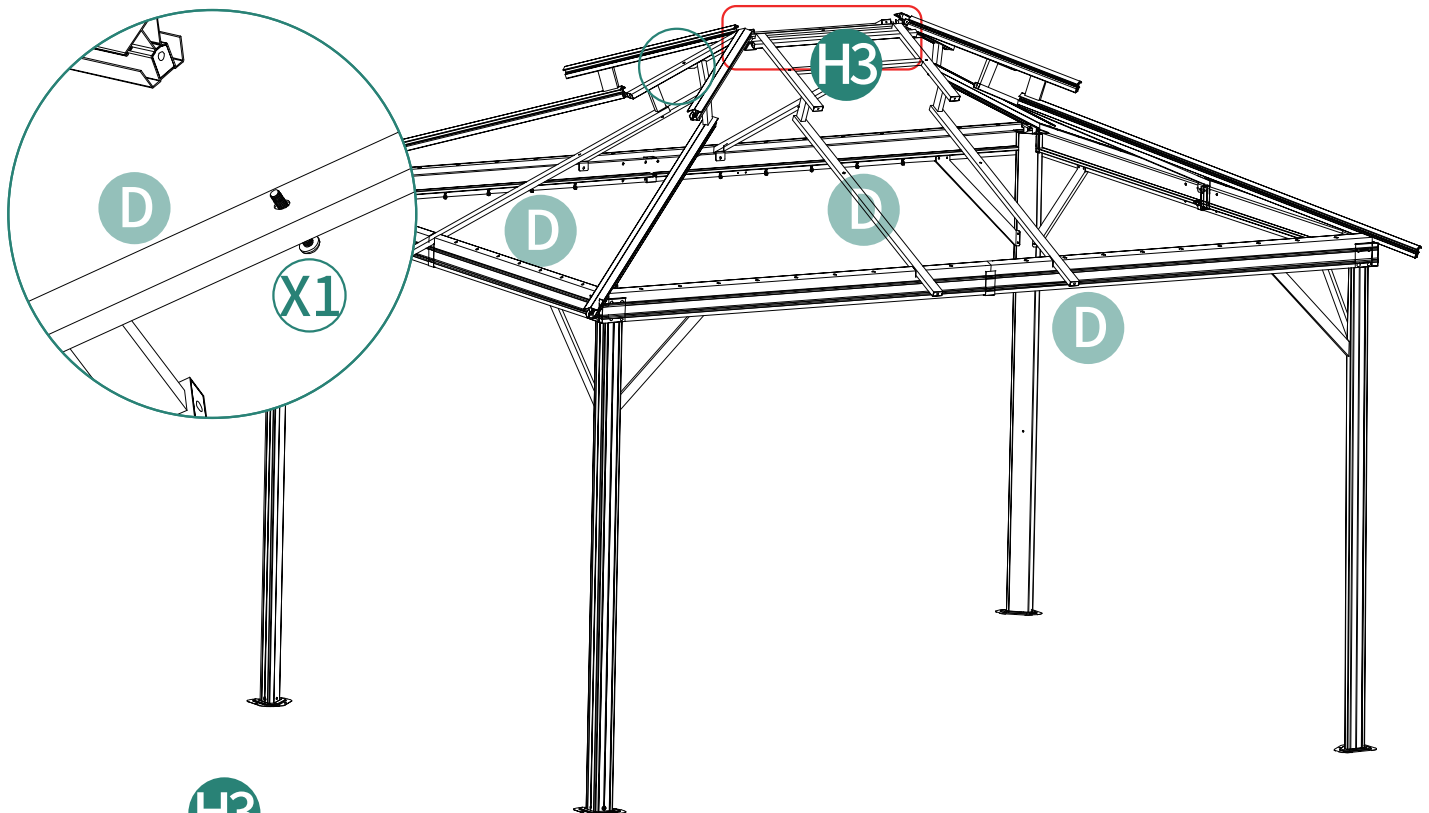



It's view from the bottom inside gazebo.

ASSEMBLY INSTRUCTIONS

15



Ⓚ1pc Ⓜ72pcs Ⓤ1pc


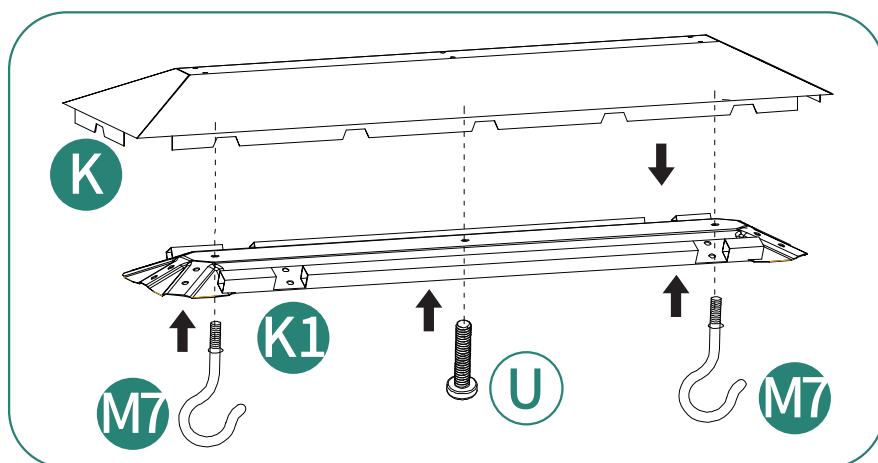
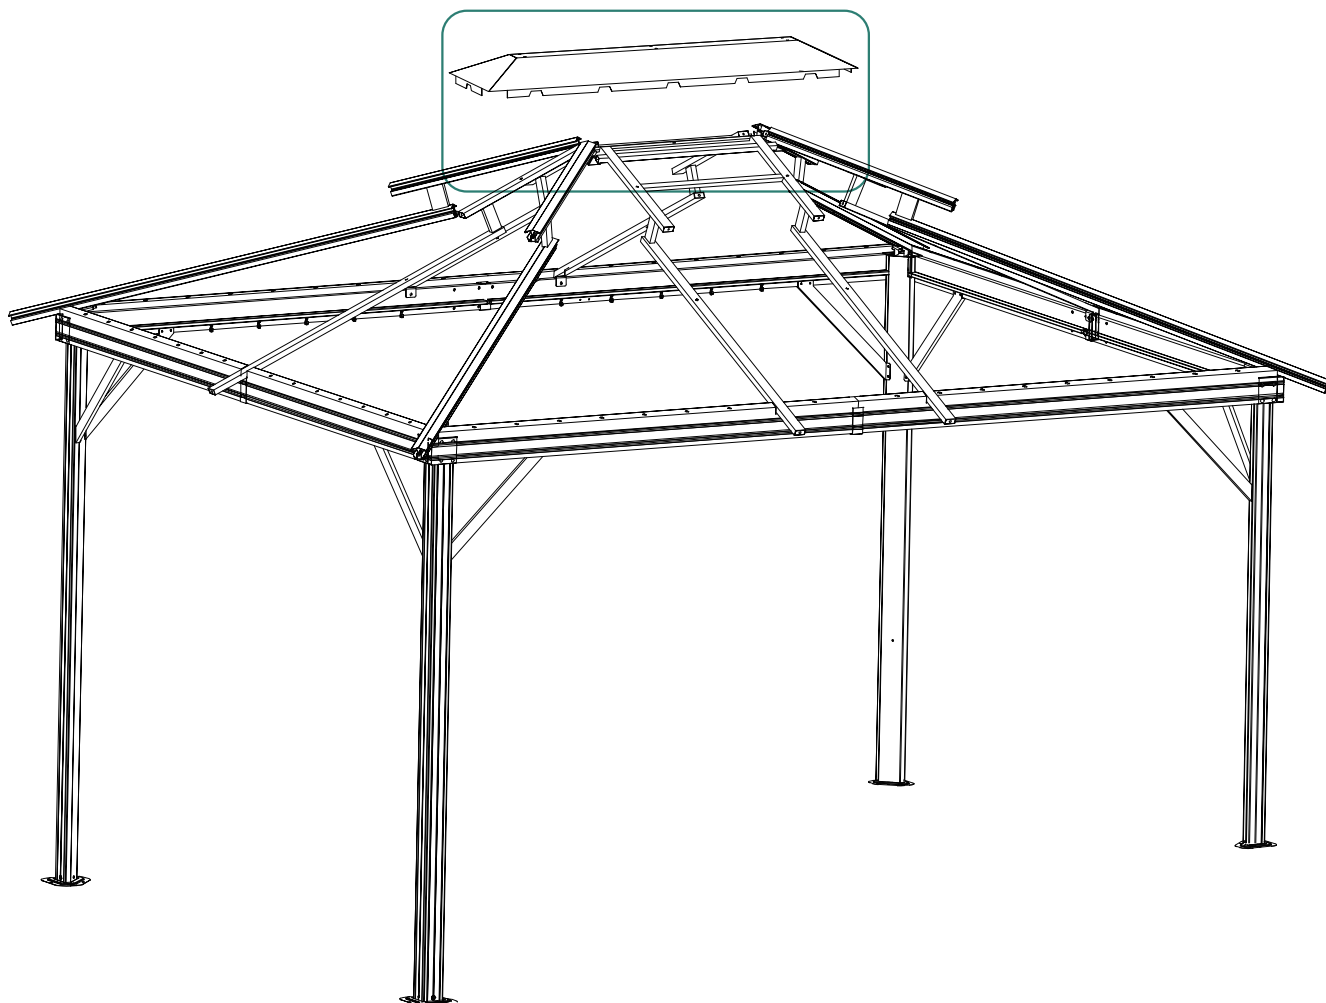


ASSEMBLY INSTRUCTIONS

16



Attach R1 and R by lightly tapping with a screwdriver.

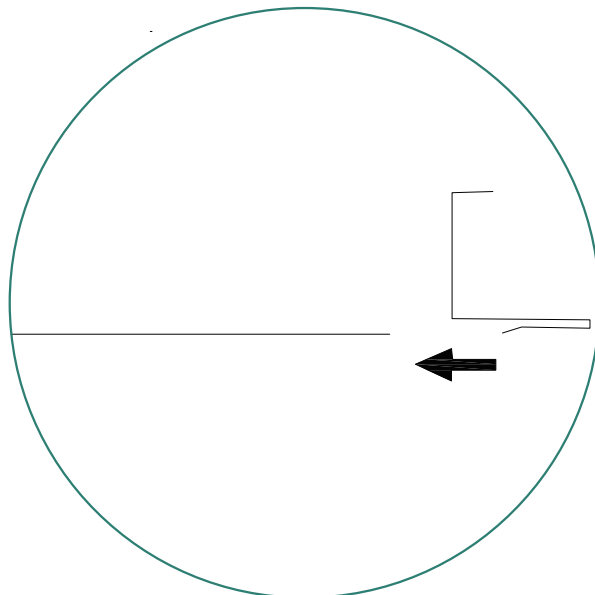
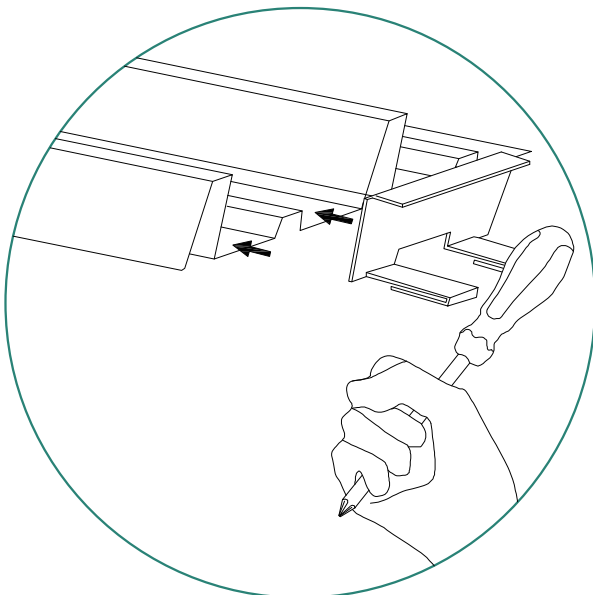
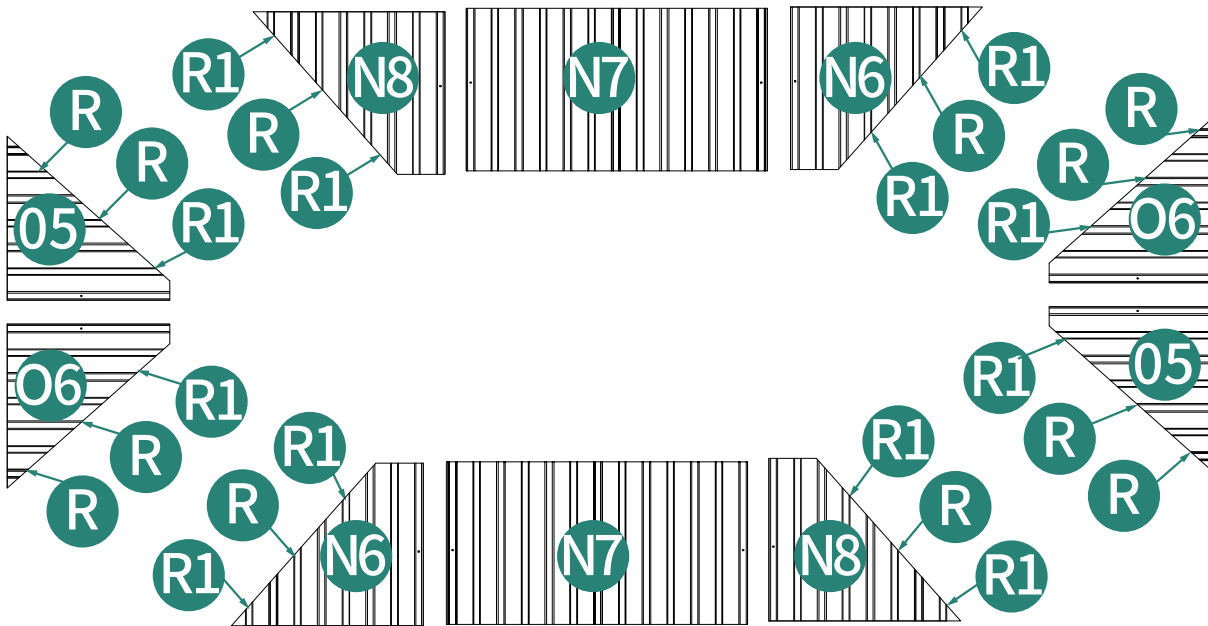


ASSEMBLY INSTRUCTIONS



17



Ⓜ4pcs ⓧ12pcs

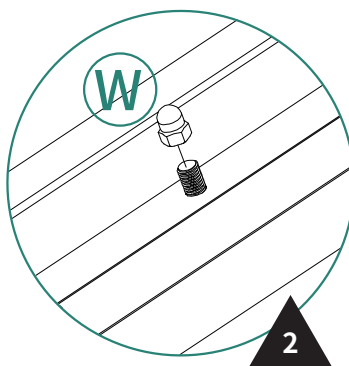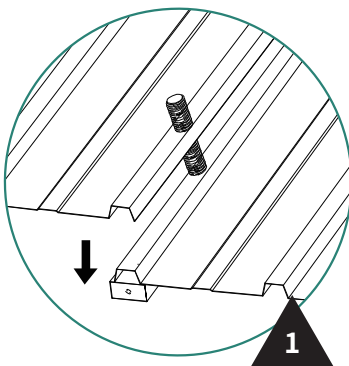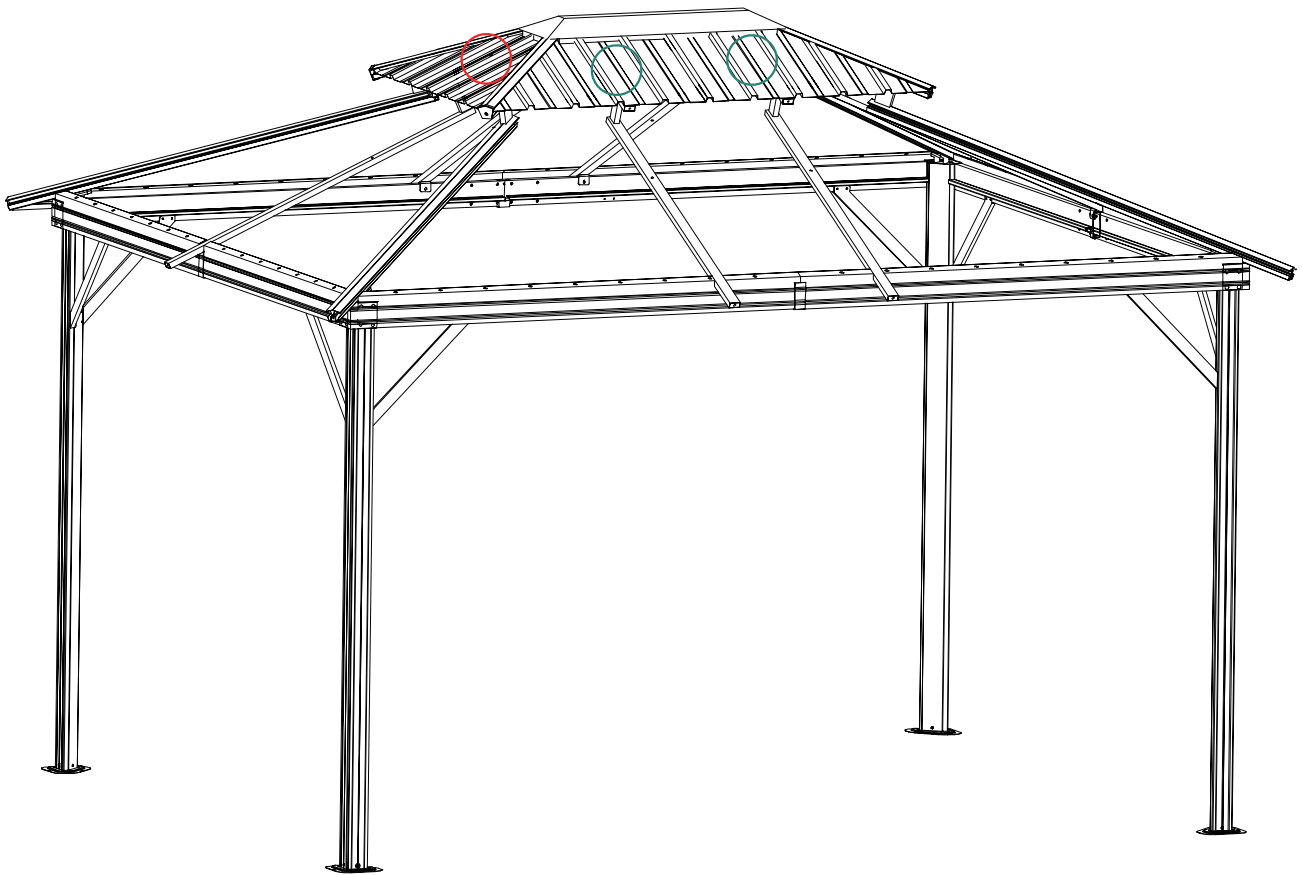

Tighten part W's nut.

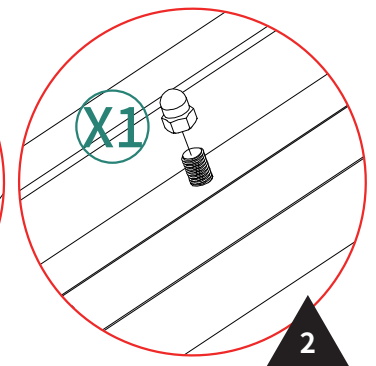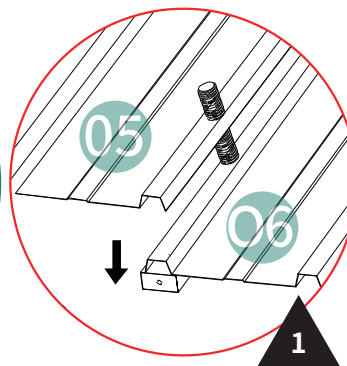

Tighten part X1's nut.

ASSEMBLY INSTRUCTIONS

18















 G2pcs G52pcs G62pcs G72pcs M14pcs M24pcs V10pcs

Do not tighten screw V before parts G5, G6, and G7 are snapped onto part M2.

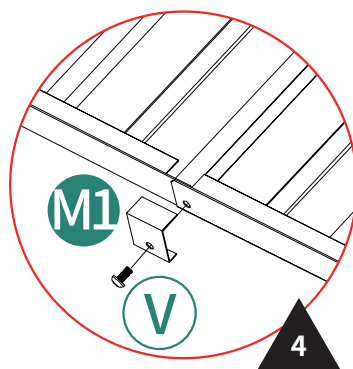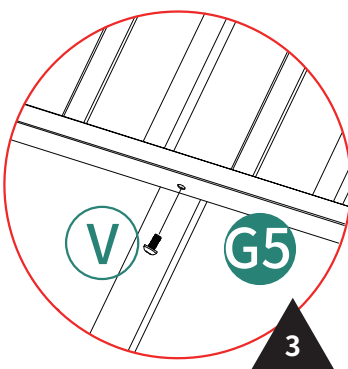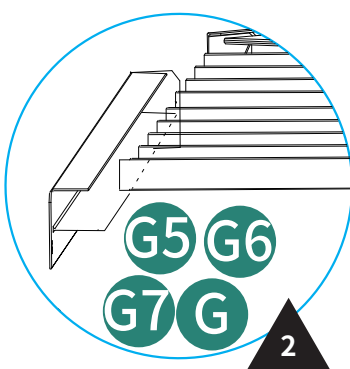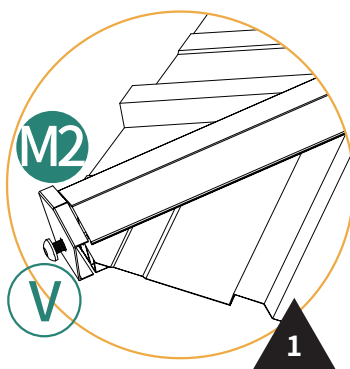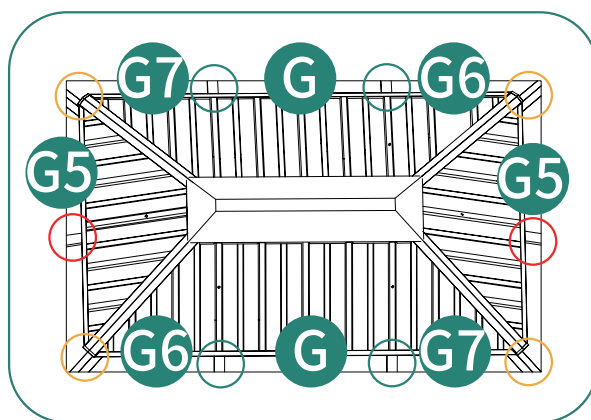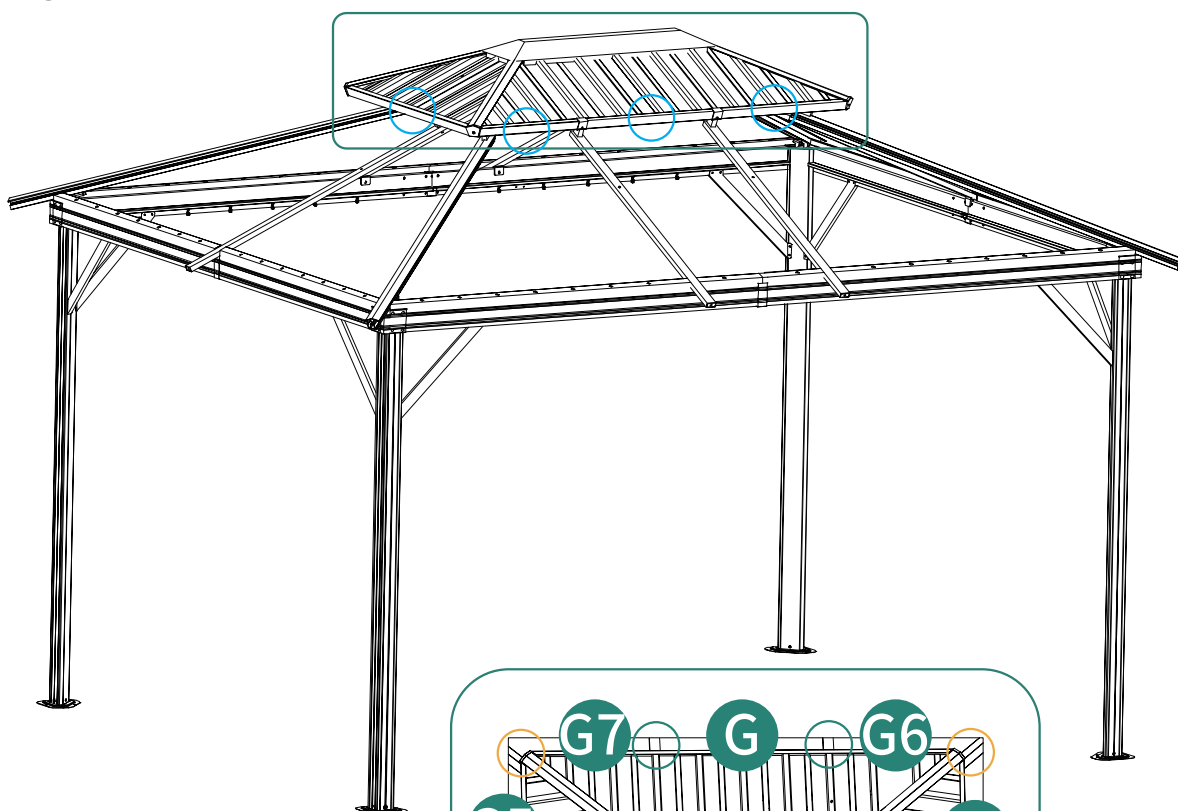




ASSEMBLY INSTRUCTIONS

19

X2

    
(H)4pcs (H1)4pcs (H2)2pcs (M3)6pcs (V)12pcs

When connecting parts H1 and H2, H&H via parts M3 and V, make sure the ends marked by triangles are in the same direction to ensure smooth installation.


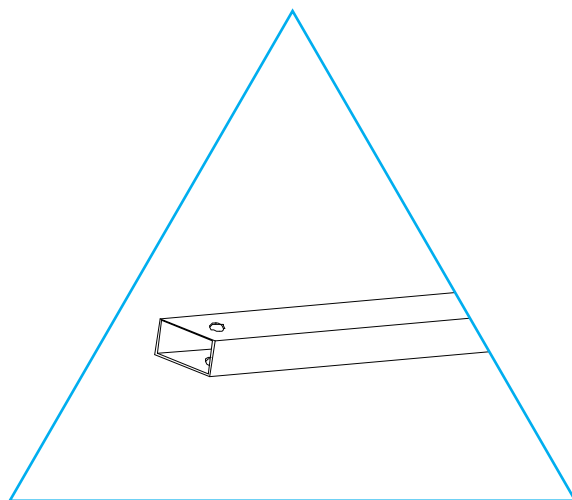
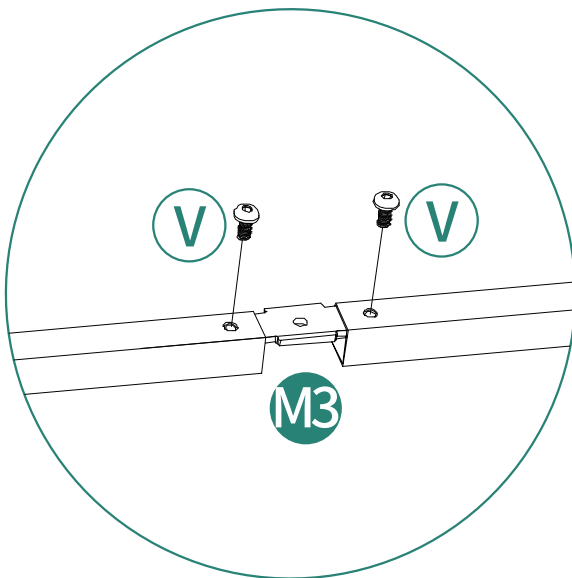
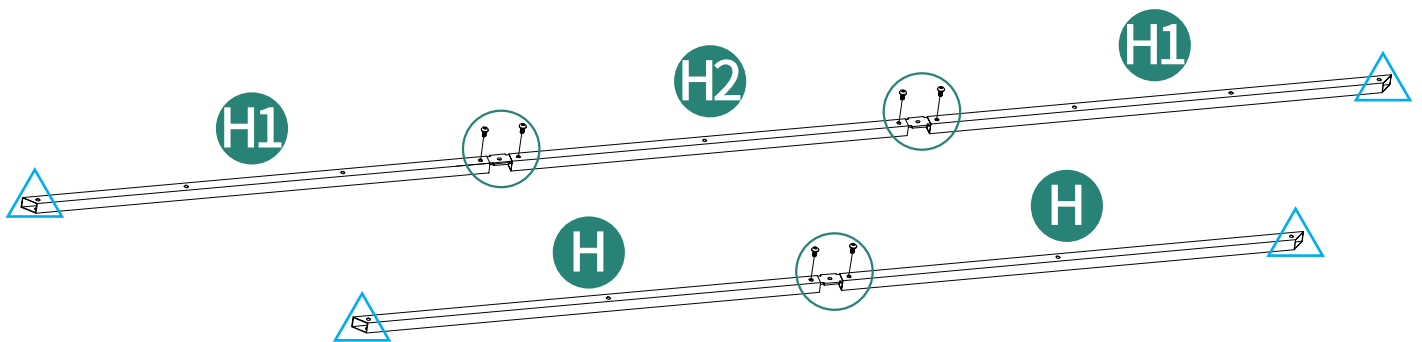


ASSEMBLY INSTRUCTIONS

20




Insert part W's screw and leave its nut unfixed until steps 22 and 24.

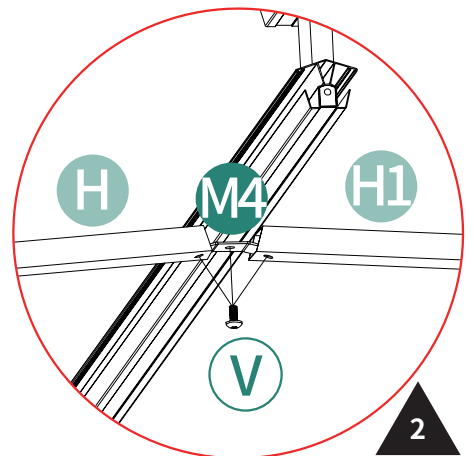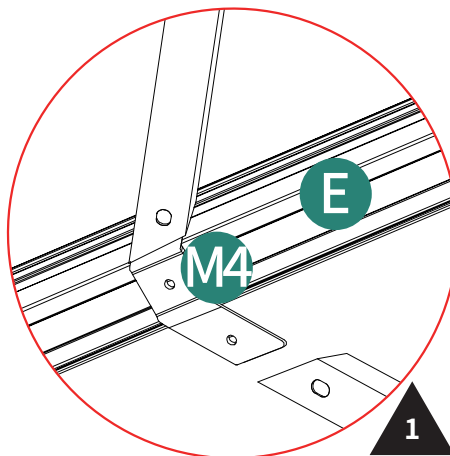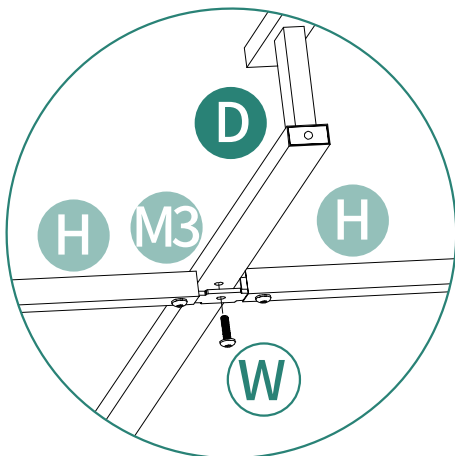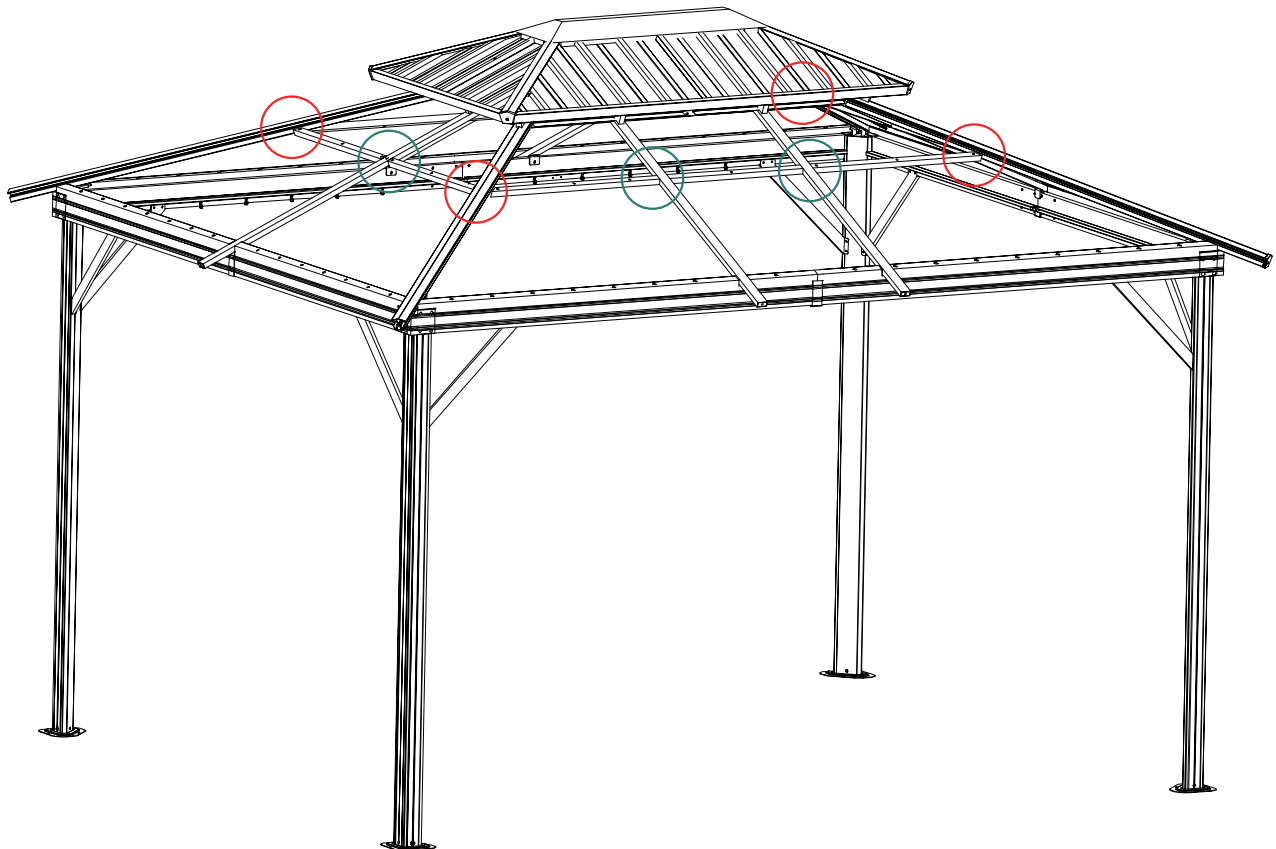


ASSEMBLY INSTRUCTIONS

21

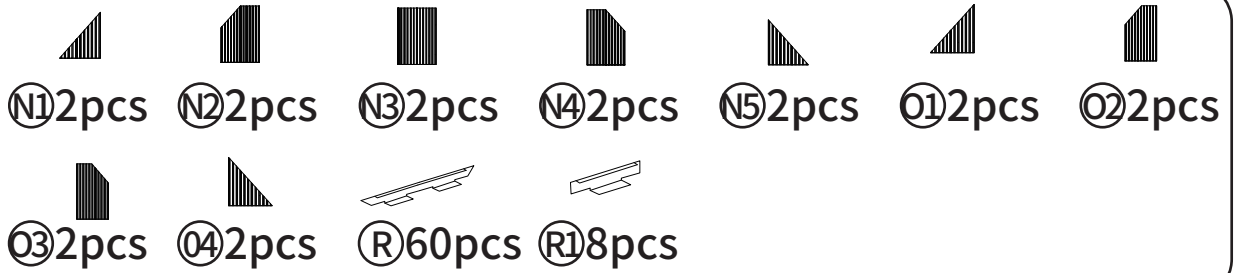

Refer to step 16 when assembling parts R and R1.

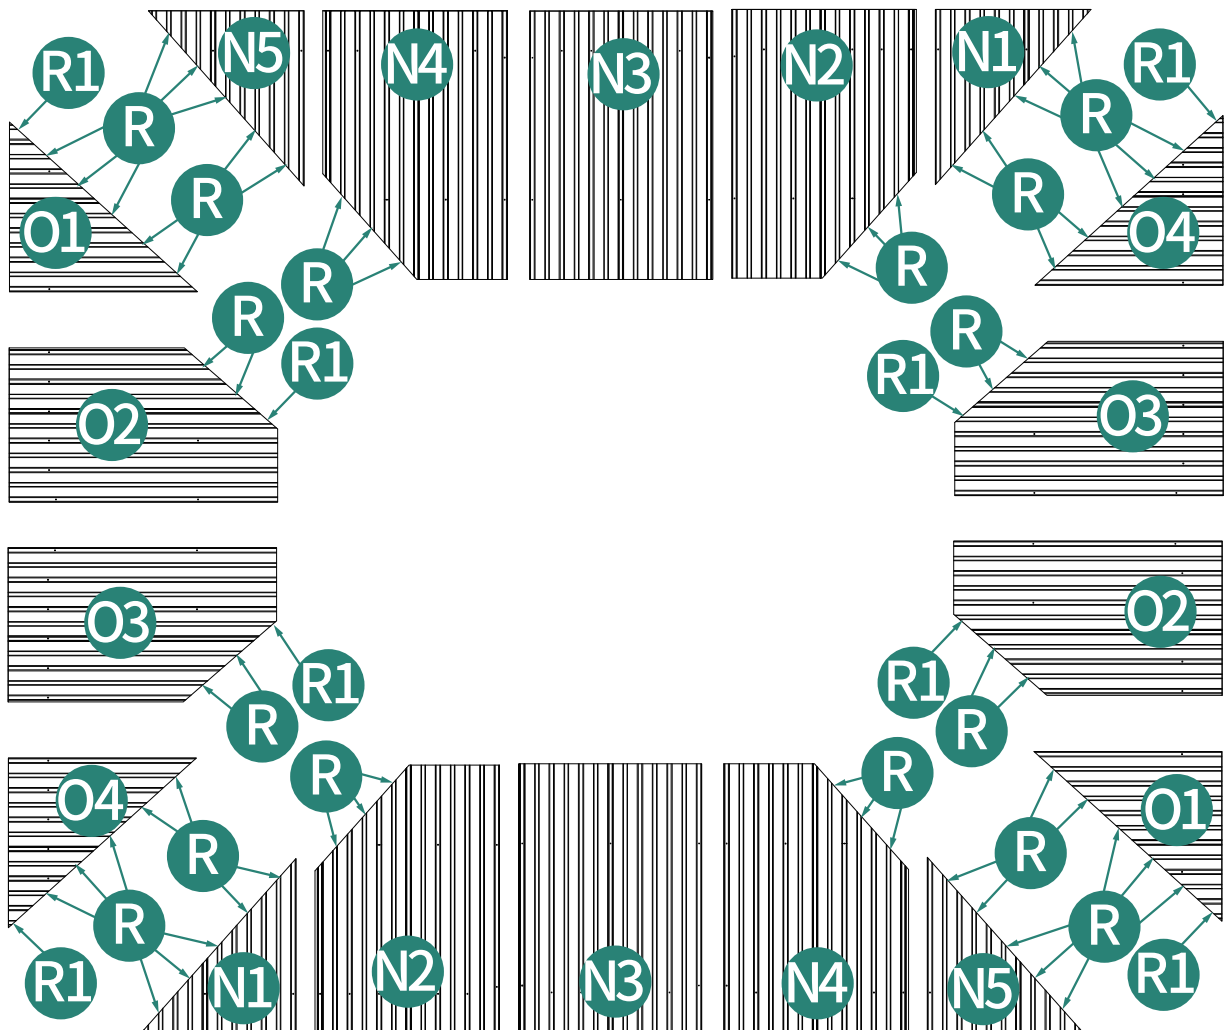

ASSEMBLY INSTRUCTIONS







22

X2




M5 40pcs S 10pcs T 30pcs W 4pcs X1 4pcs


Do not tighten the screws before completing step 22. After step 22, and screws are tightened, install part W's nut.

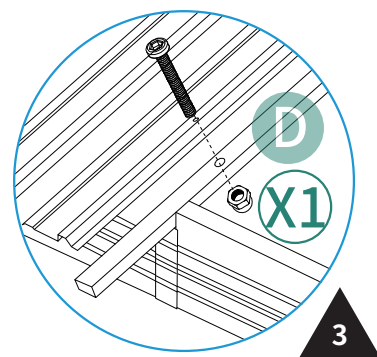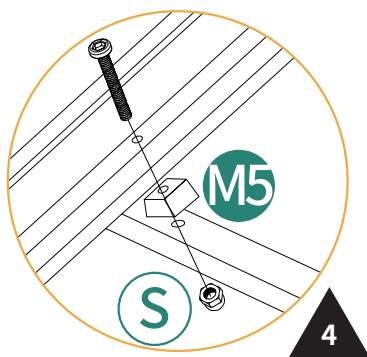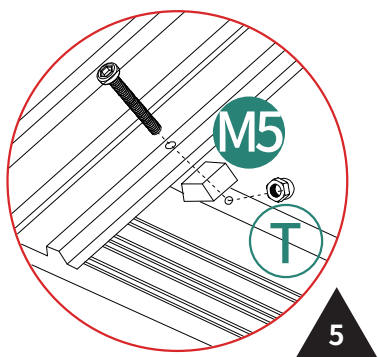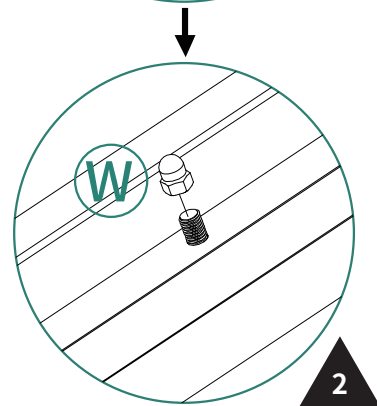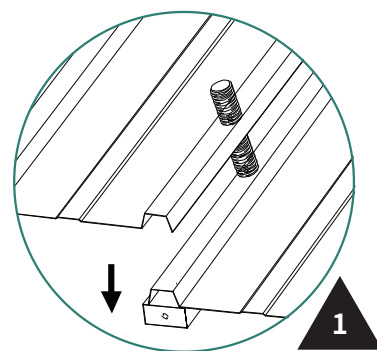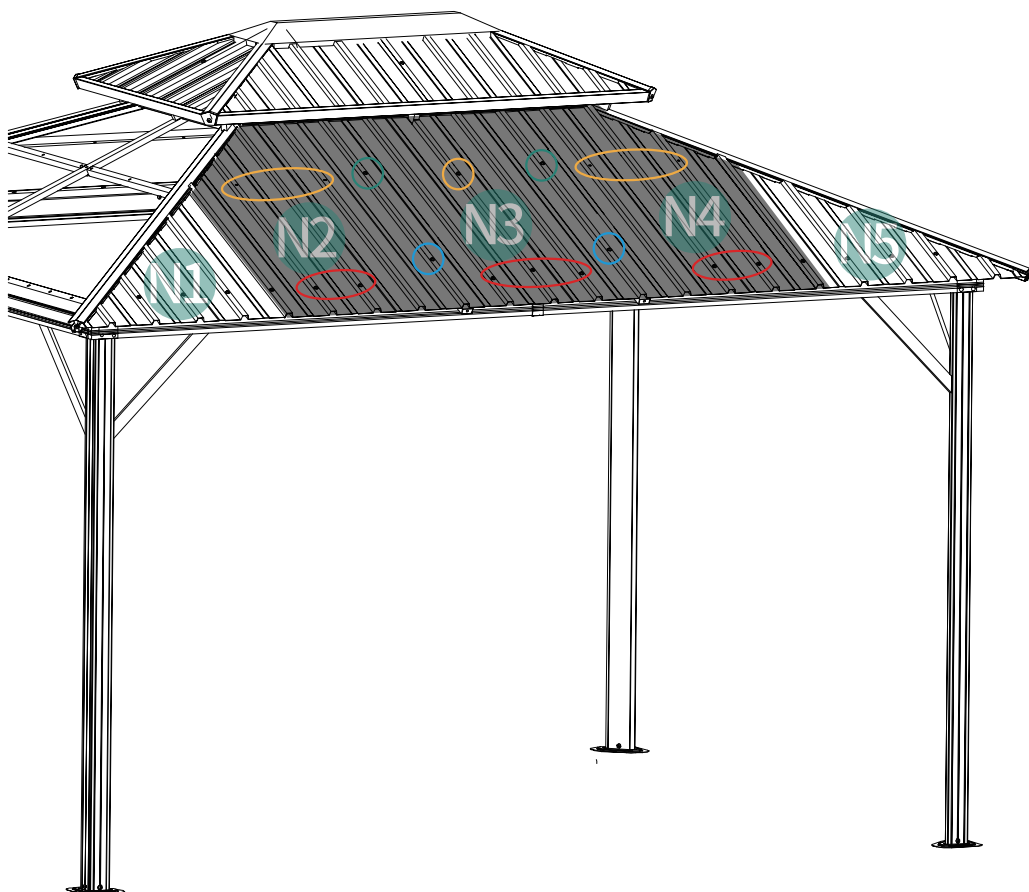

ASSEMBLY INSTRUCTIONS

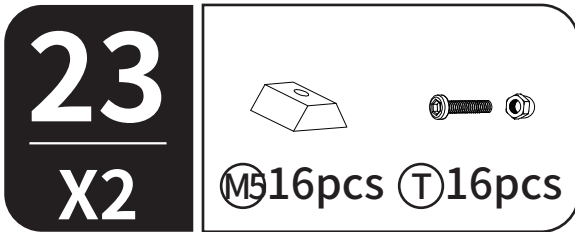

Do not tighten the screws before completing step 23.

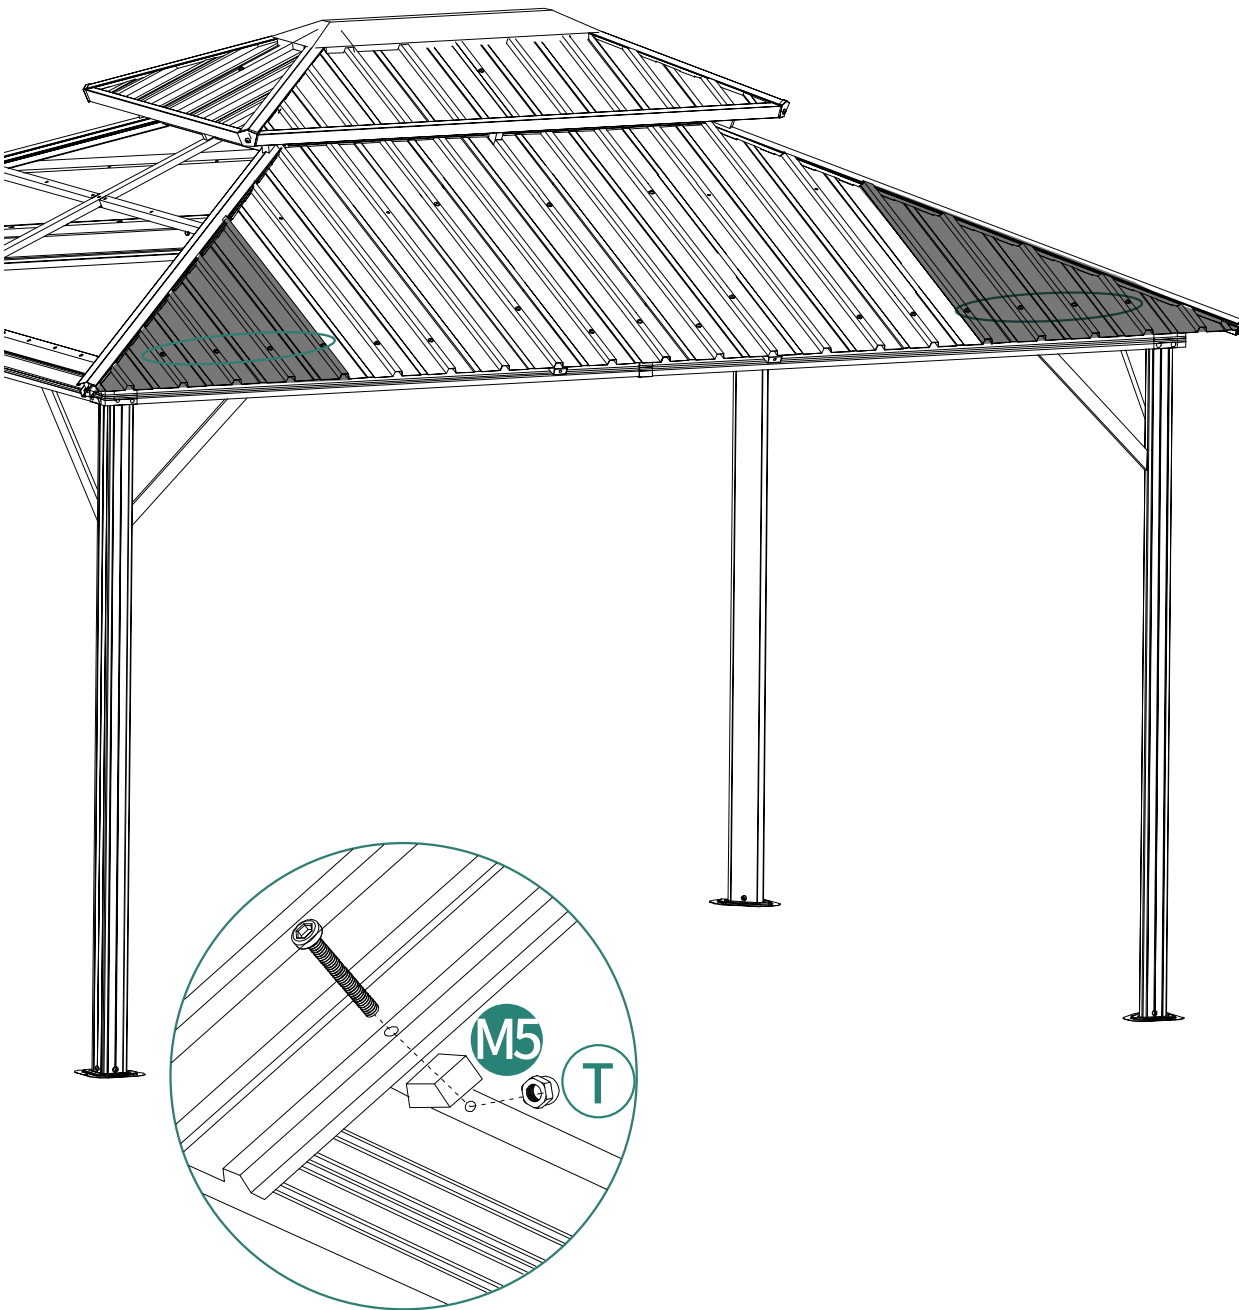






ASSEMBLY INSTRUCTIONS

X2




Ⓜ520pcs Ⓢ4pcs Ⓣ16pcs Ⓦ2pcs ⓧ12pcs


Do not tighten the screws before completing step 24. After step 24 and screws are tightened, install part W's nut.

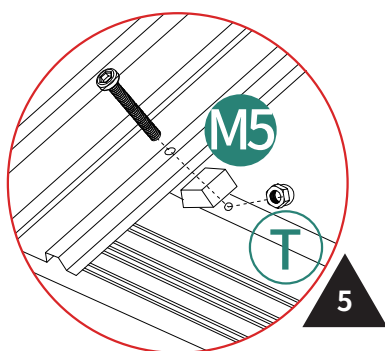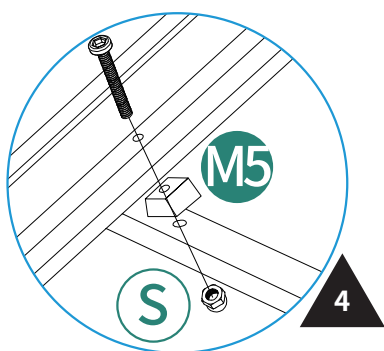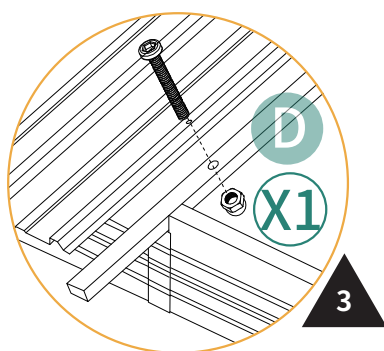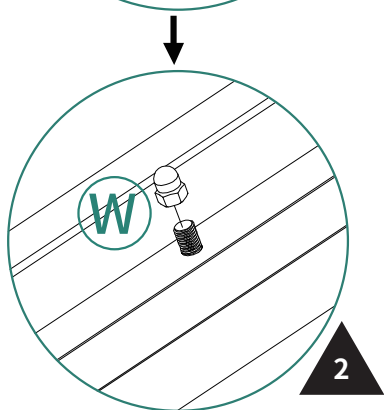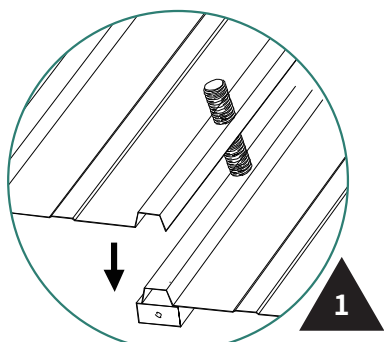

ASSEMBLY INSTRUCTIONS

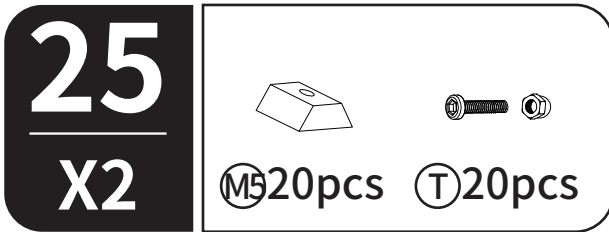

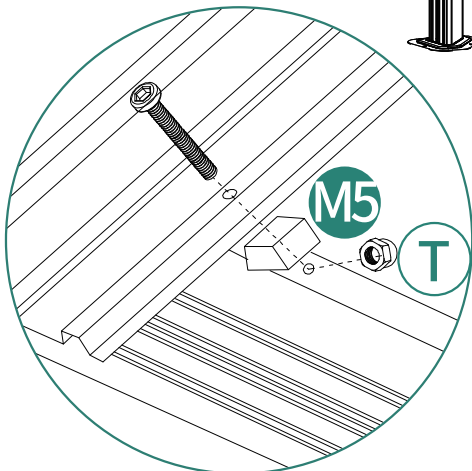


Do not tighten the screws before completing step 25.








ASSEMBLY INSTRUCTIONS

26

 G 2pcs G1 2pcs G2 2pcs G3 2pcs G4 2pcs M1 6pcs M2 4pcs V 10pcs


Do not stighten the screws before completing step 26.

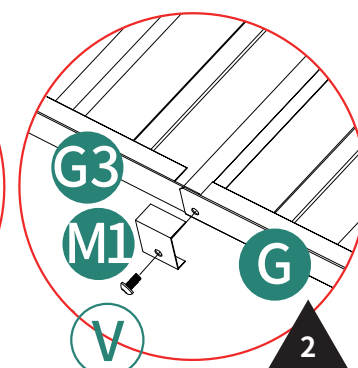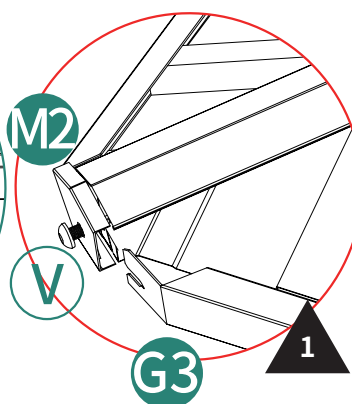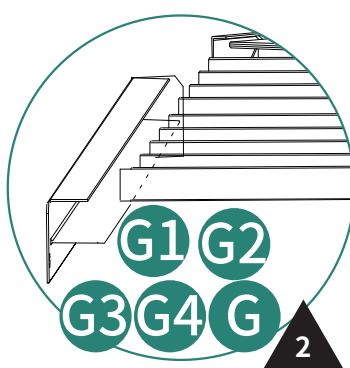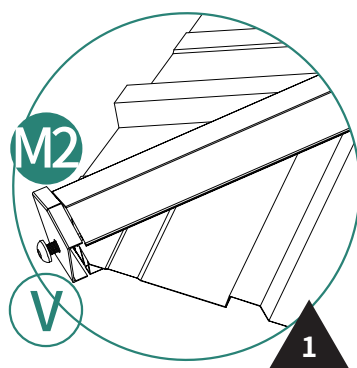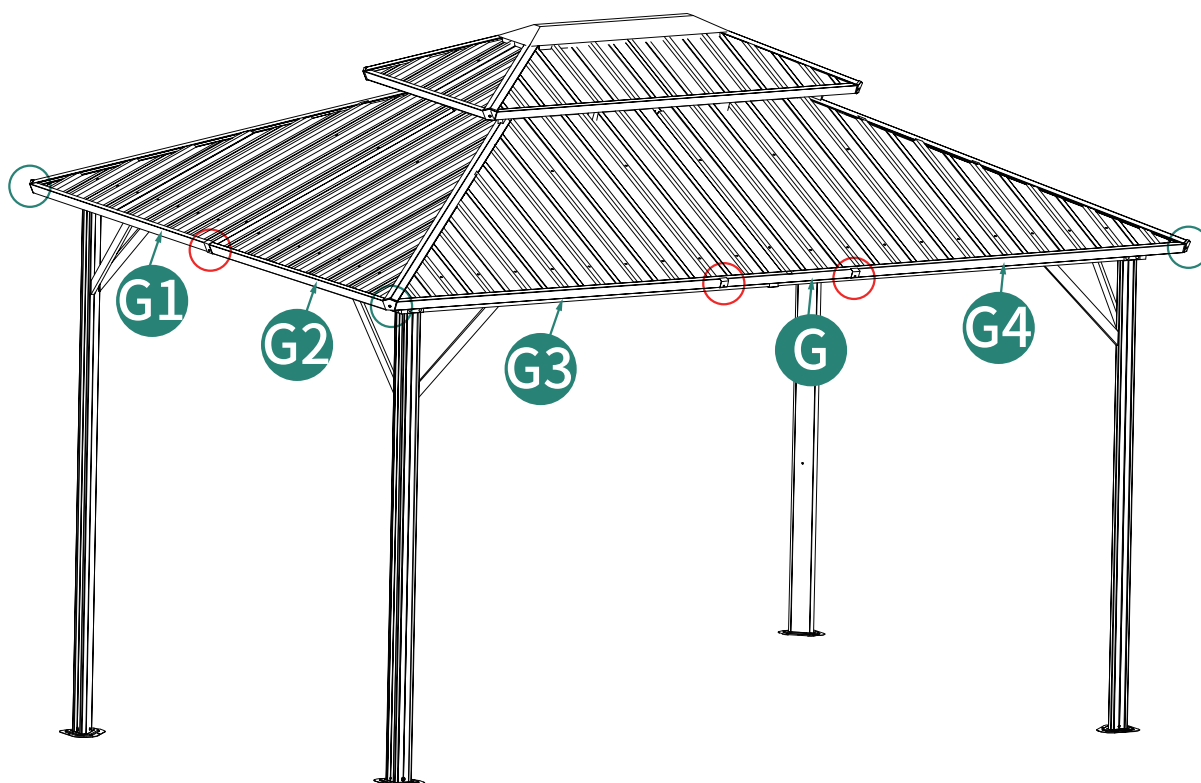

27




Do not tighten the screw U1 before completing step 27.
install G9 and G10, then tighten U1 and V.

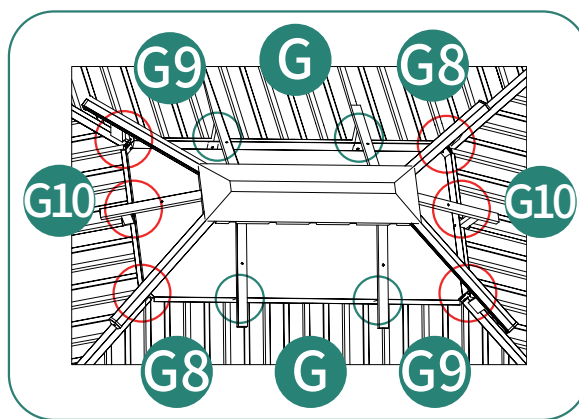

ASSEMBLY INSTRUCTIONS


28

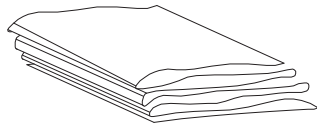



Curtain

1pc


Untie and unzip the curtains, then divide it into 4 parts.

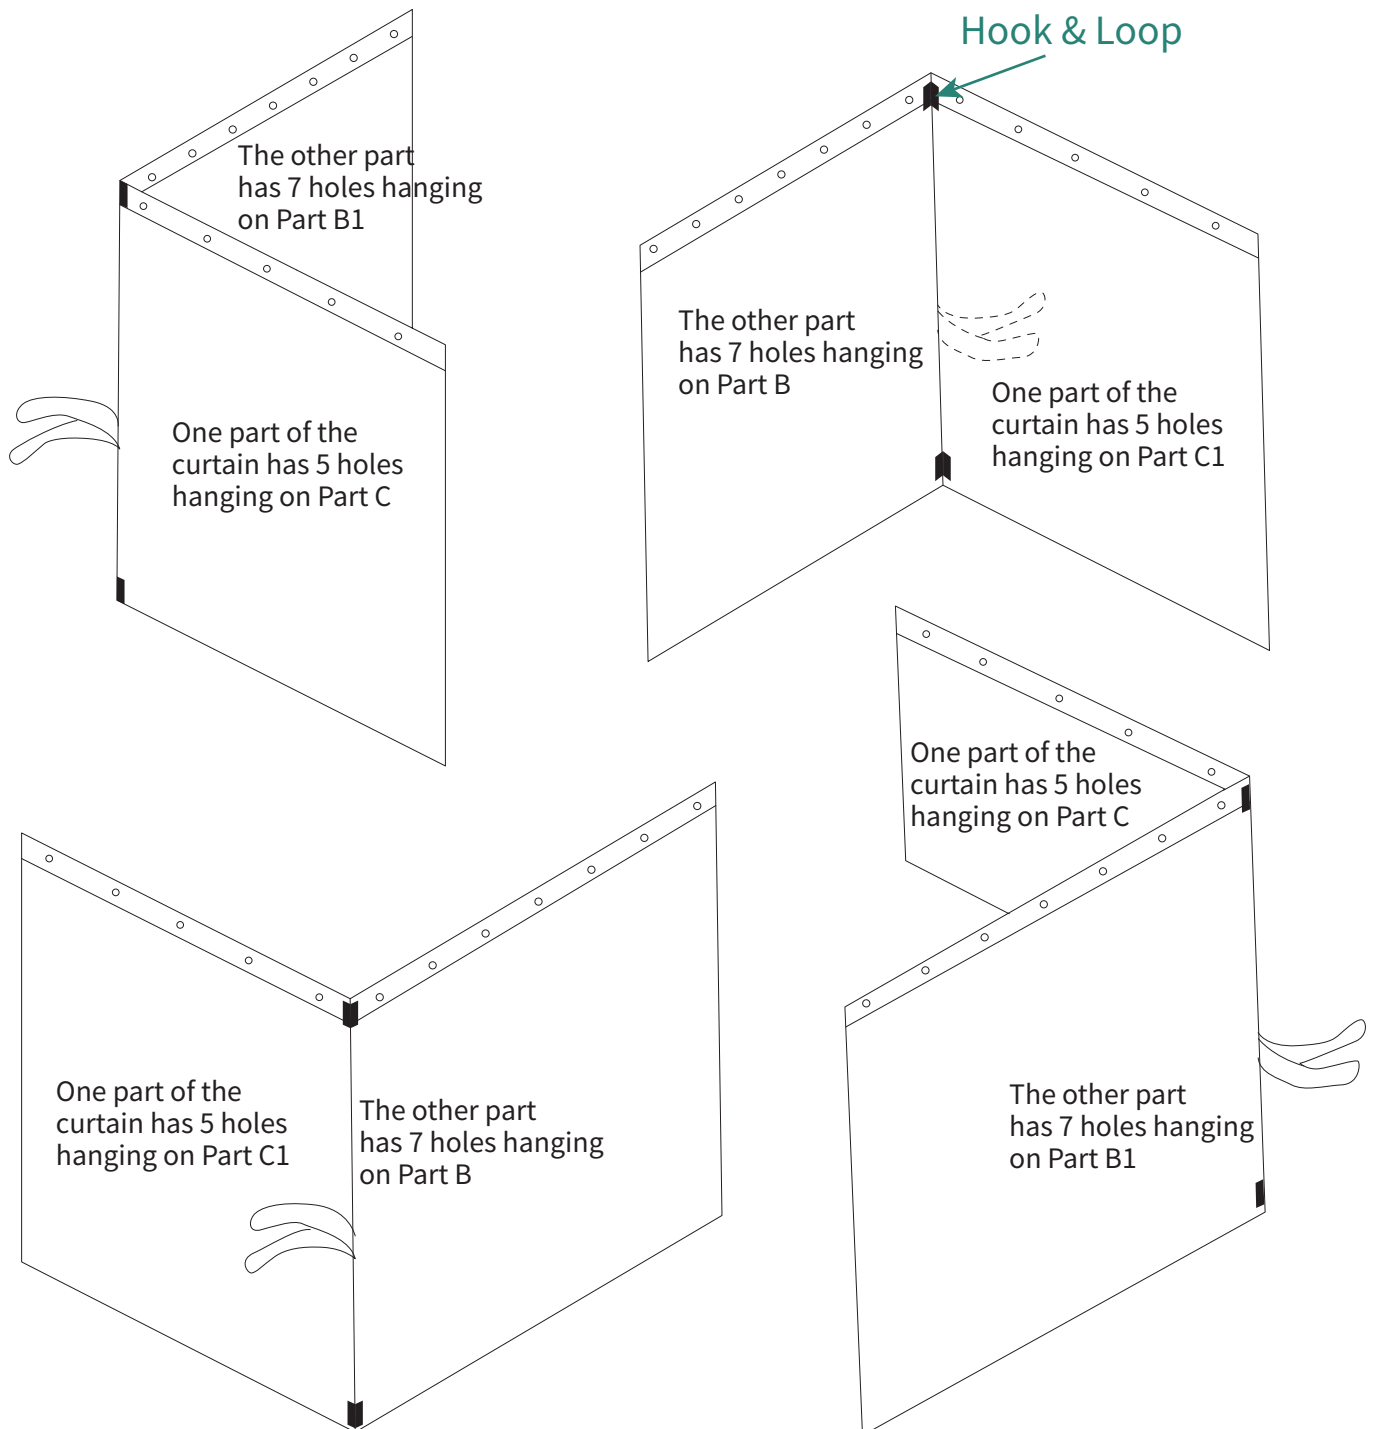


29

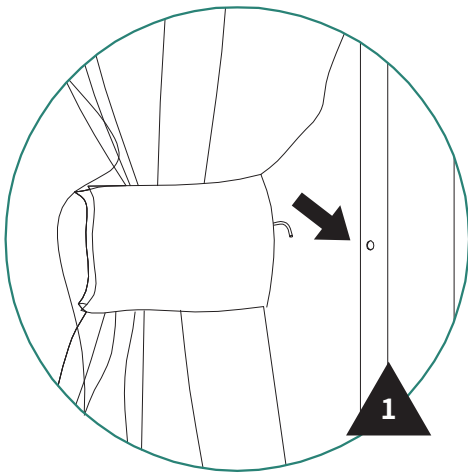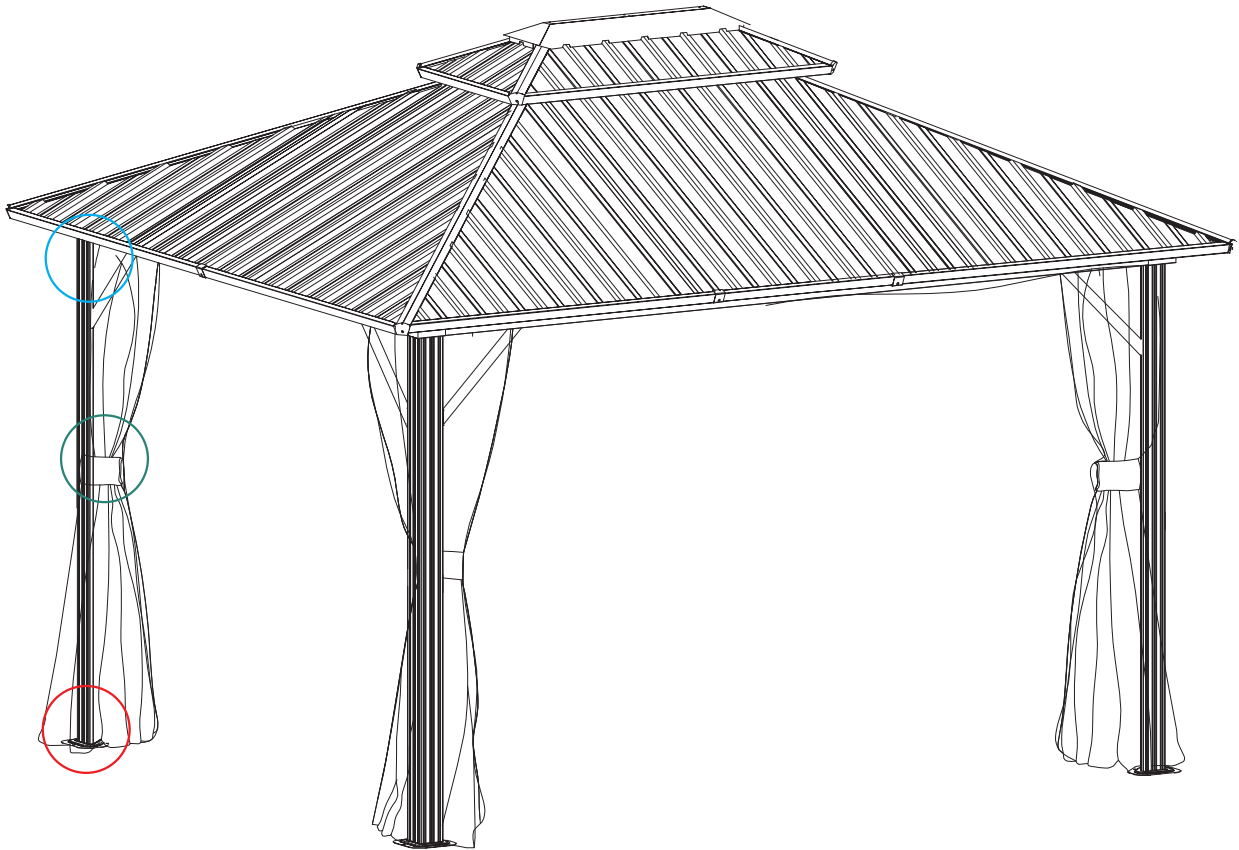

Hang the hook attached to the curtain on Part A

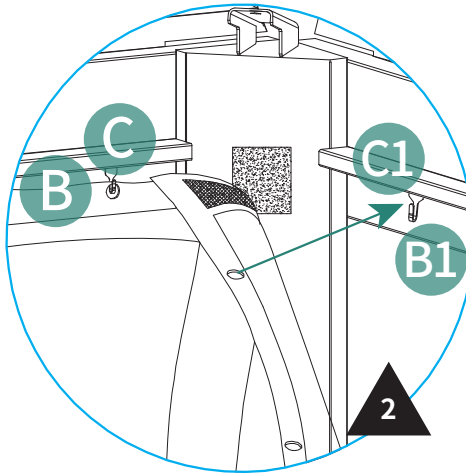


Attach the curtain's hook & loop to part A and attach tie-back after completing installation

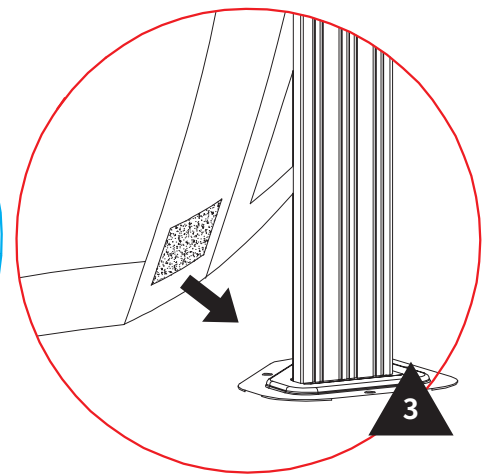

ASSEMBLY INSTRUCTIONS


30

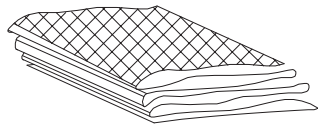




1pc

Netting

Untie and unzip the netting, then divide it into 4 parts.

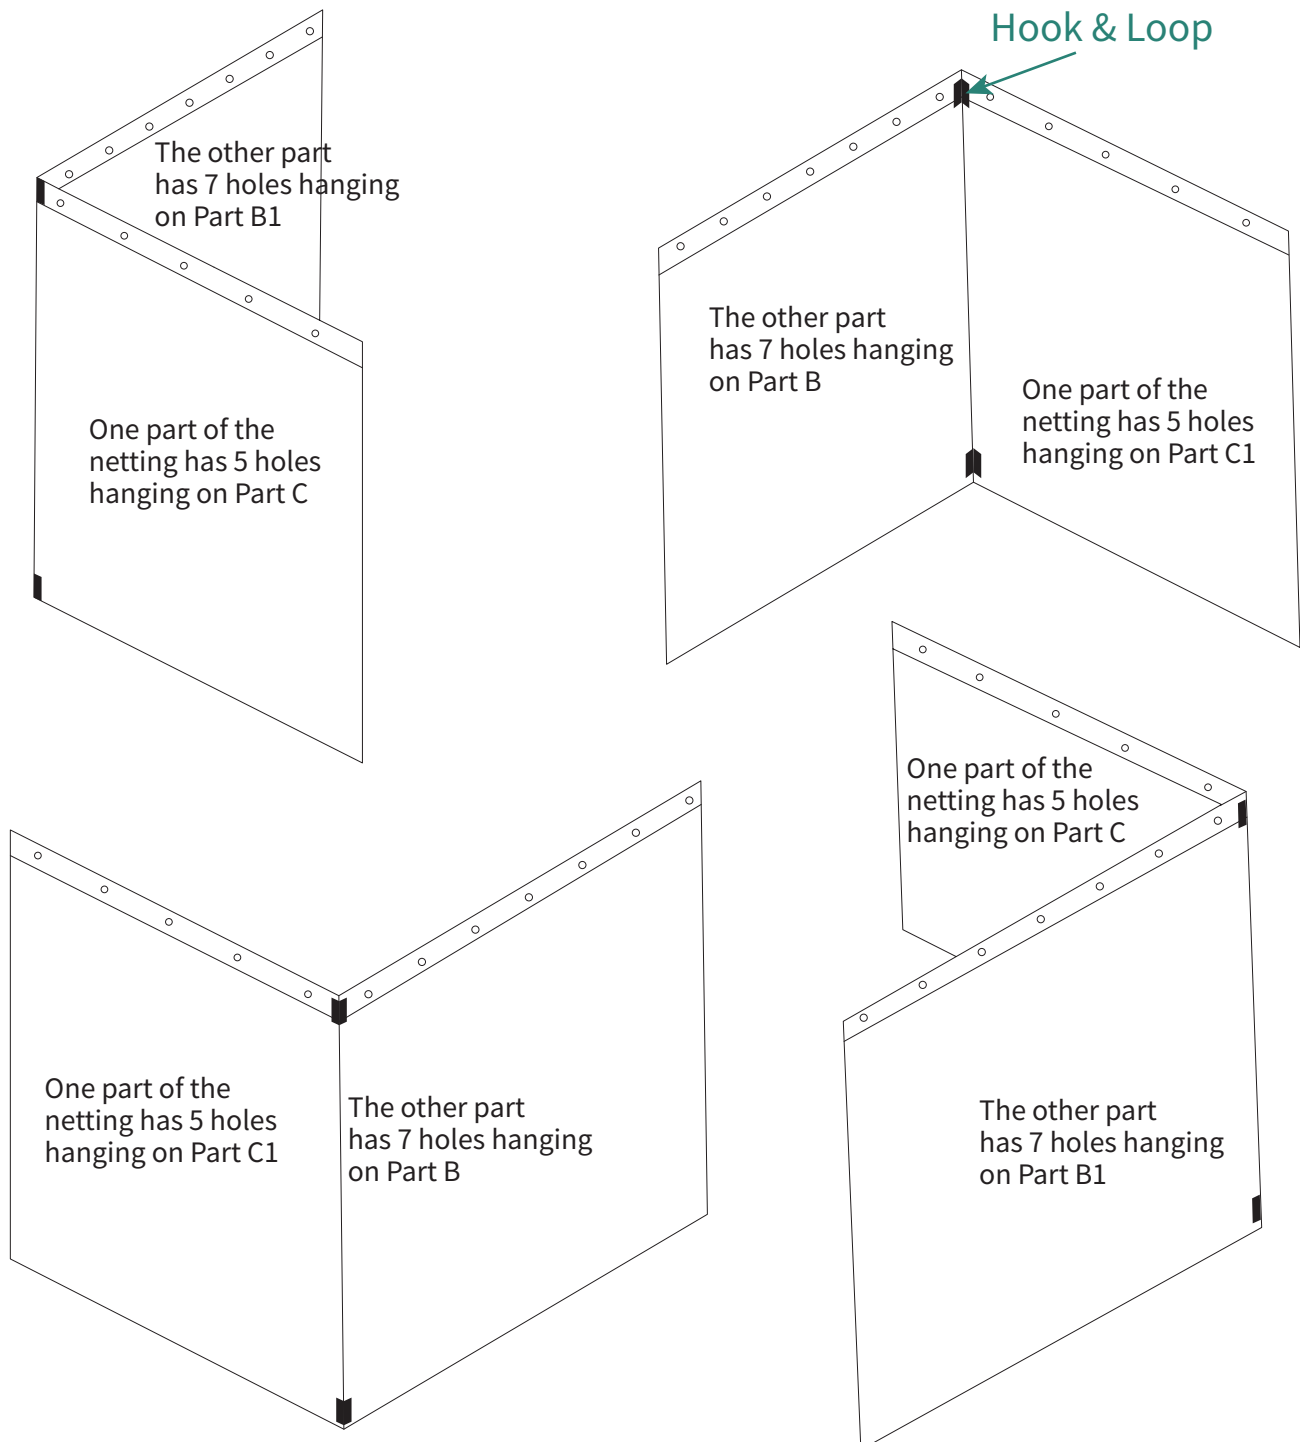

31

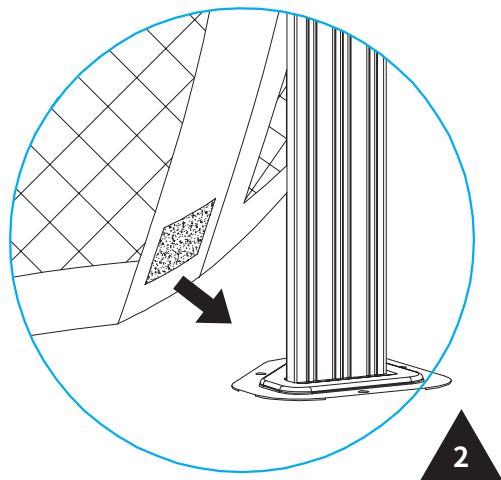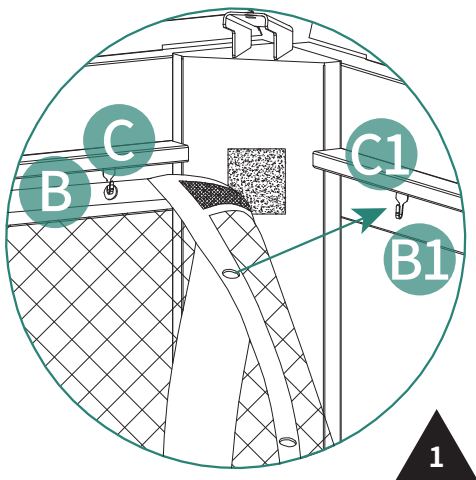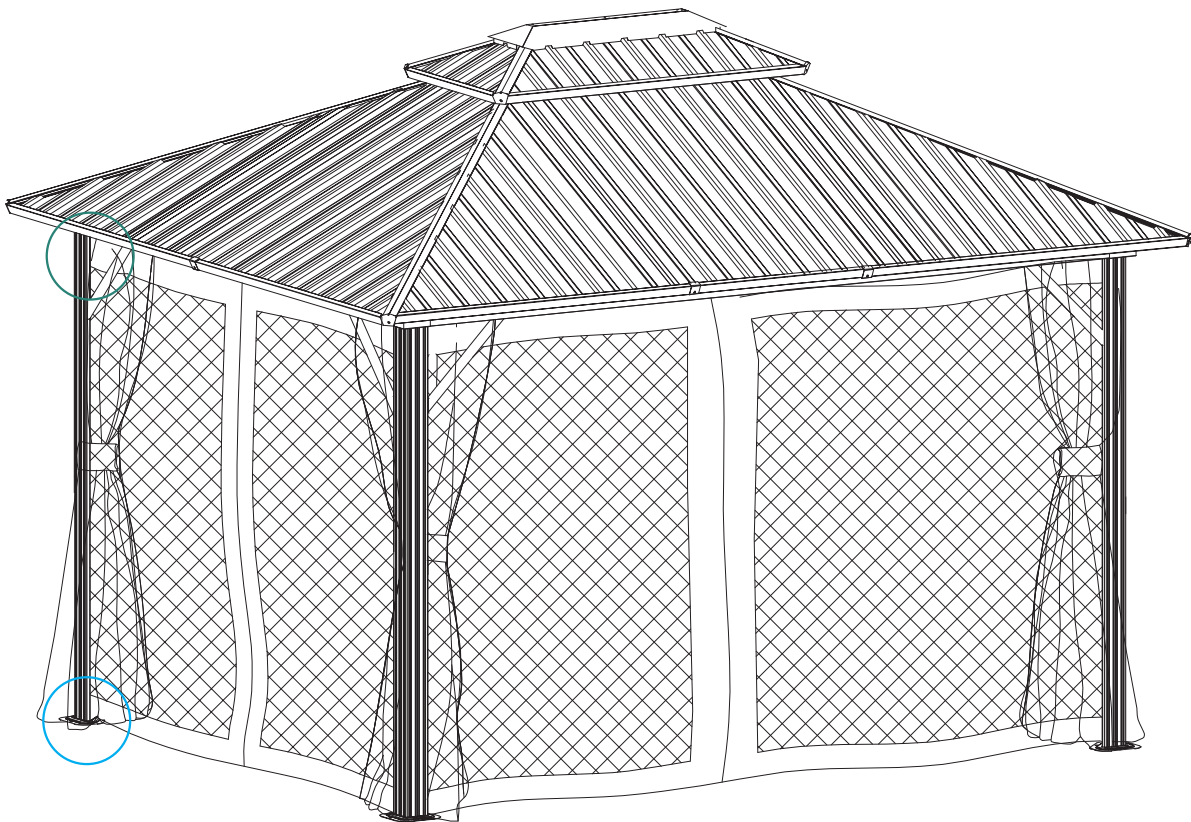

Attach the netting's hook & loop to the curtain after completing installation.



ASSEMBLY INSTRUCTIONS

32



12pcs

Tent peg

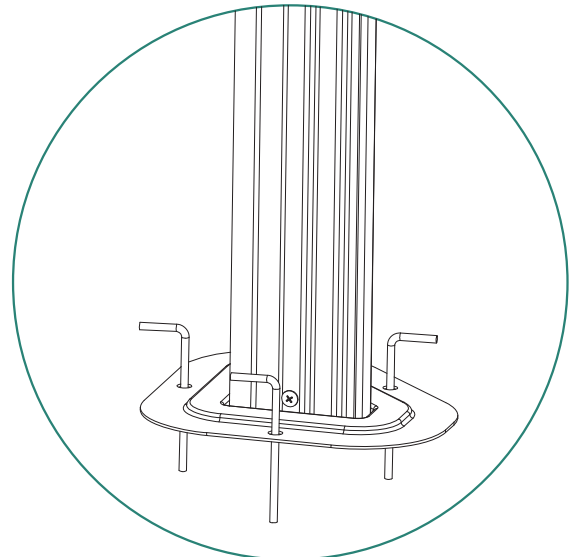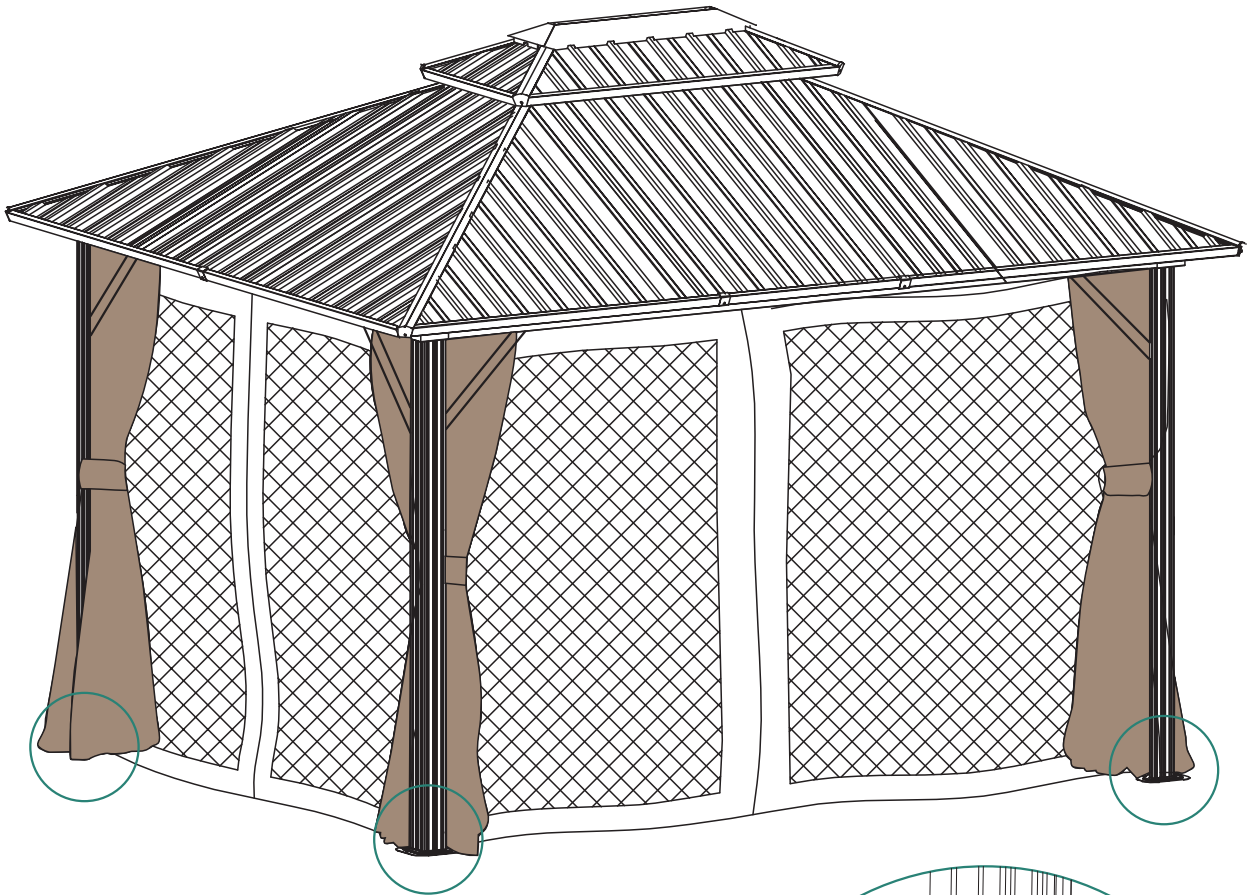

Installation Completed

Firmly fixed to the ground