
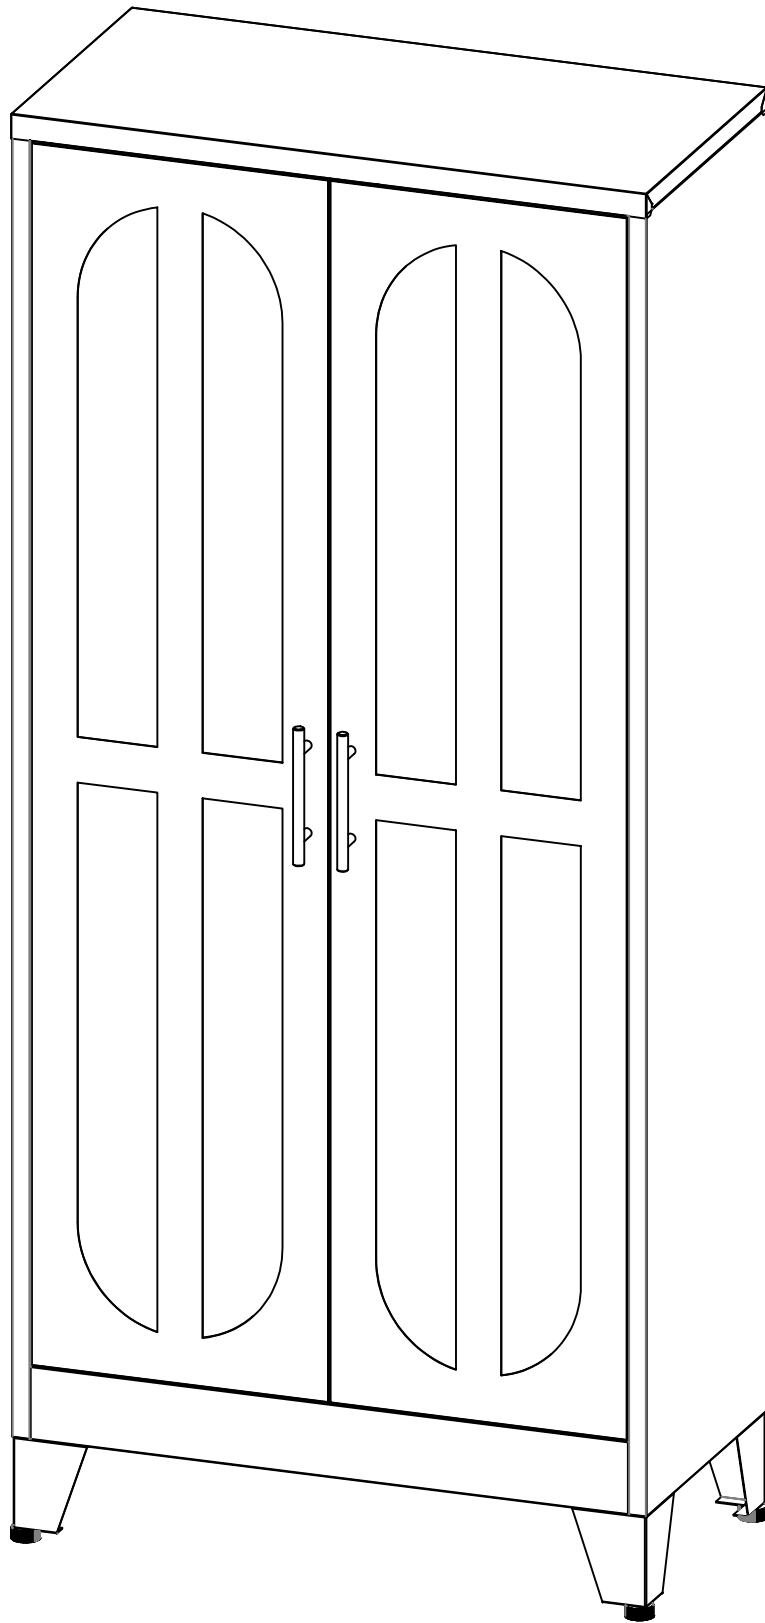

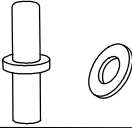












Important!

Thank you for your purchase. Please open it carefully.
If you encounter any problems, please contact us.





PARTS LIST		LISTE DES PIÈCES				LISTA DE PIEZAS			
Nom Nombre		Part Piece Pieza	Qty Qte	Spare	Name Nom Nombre		Part Piece Pieza	Qty Qte	Spare
A	Left Back Panel		1		Y	Standing leg		4	
B	Right Back Panel		1		N	Adjustable foot		4	
C	Left Side panel		1		O	Shelf Support		12	2
D	Right Side panel		1		P	Shelf fastening Buckle		12	2
E	Kick Plate		1		Q	Door Pivot Pin Shim\		2	
F	Bottom Panel		1		R	Haft		2	
G	Top Panel		1		S	magnet		4	
H	Shelves		3		U	Wall set screw		2	
I	Left Door		1		Z	Acrylic sheet Buckle		40	2
J	Right Door		1		X	Acrylic sheet		4	
K	13/32"Screw		4						
L	13/32"Screw		36	2					

1

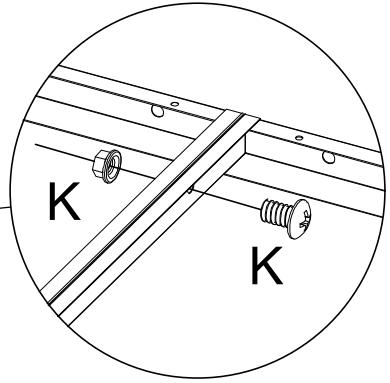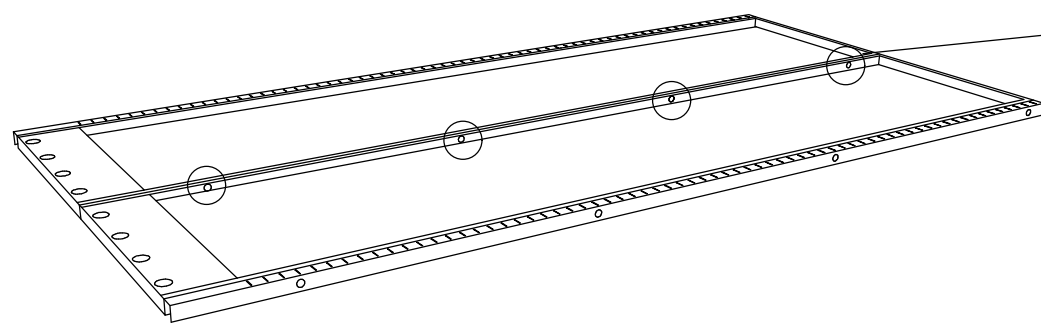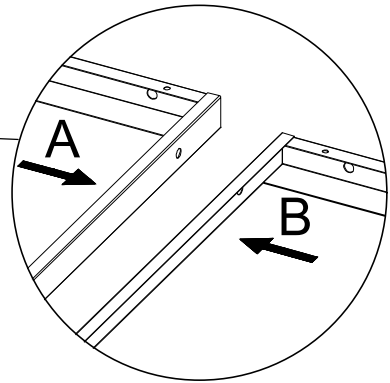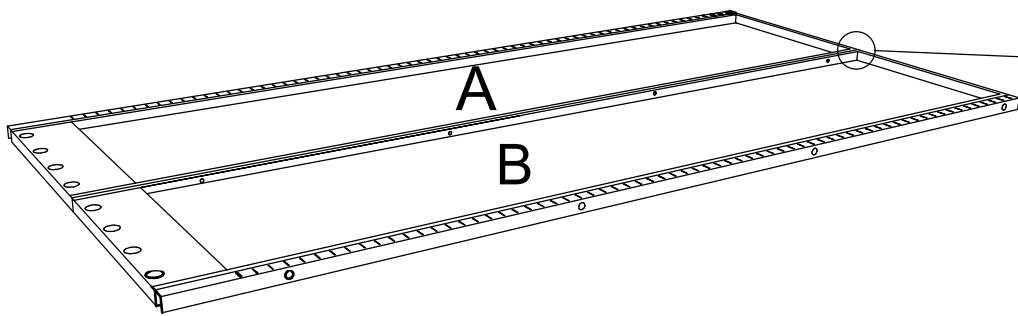


 K×4

2

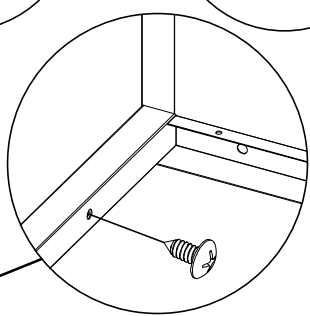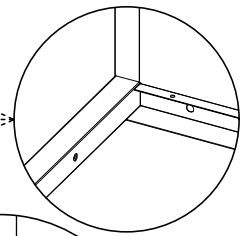
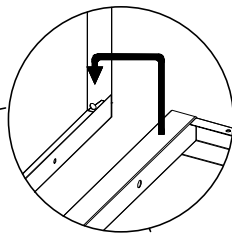
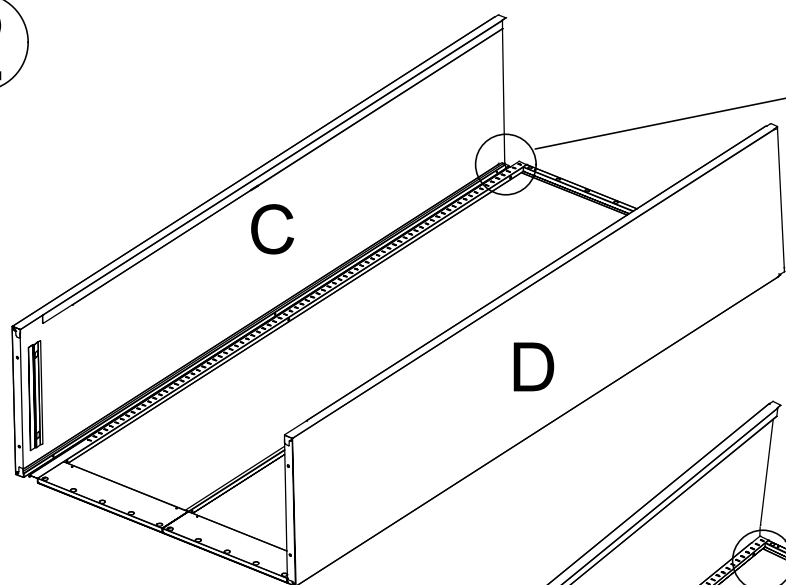


 L

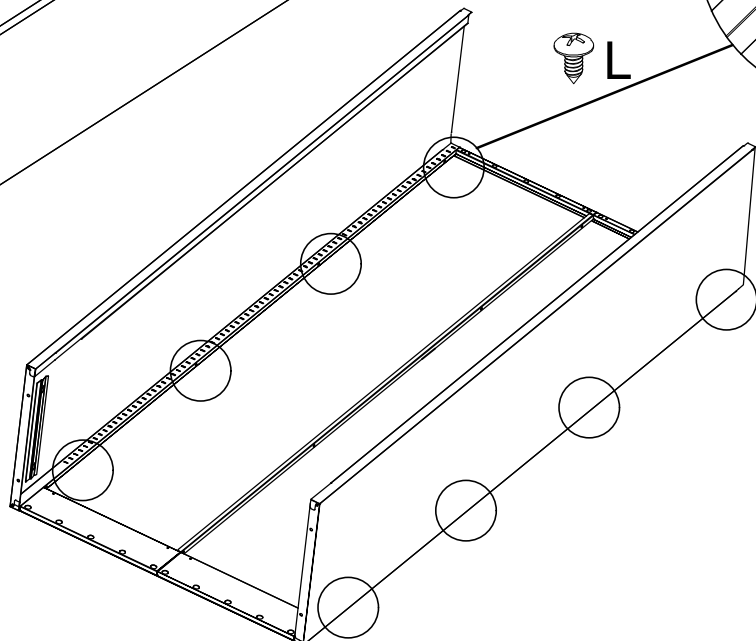


 L×8

3

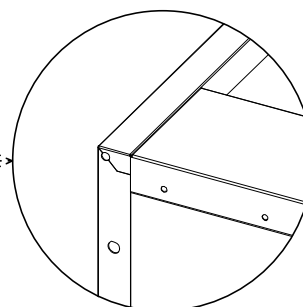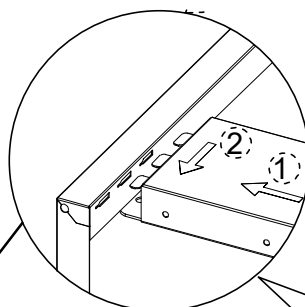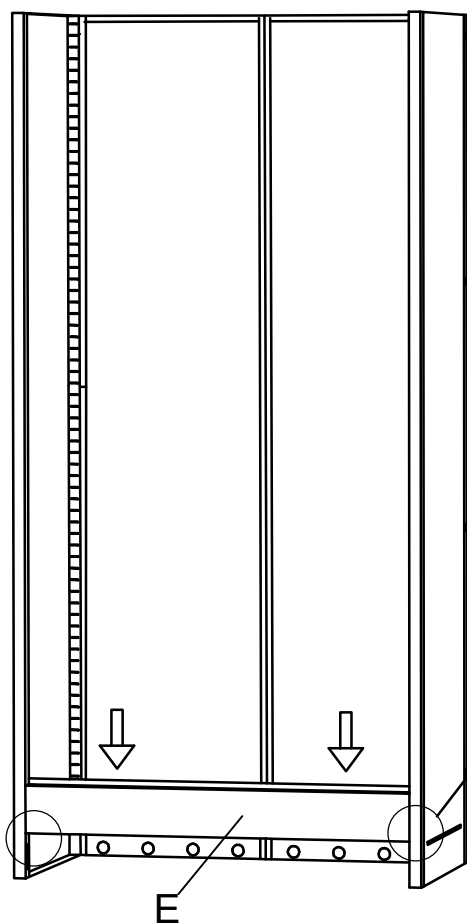


Snap the three buckles on either side of Part E into the three holes in both side panels and then push it down so that it snaps into the bottom of the cabinet.




4

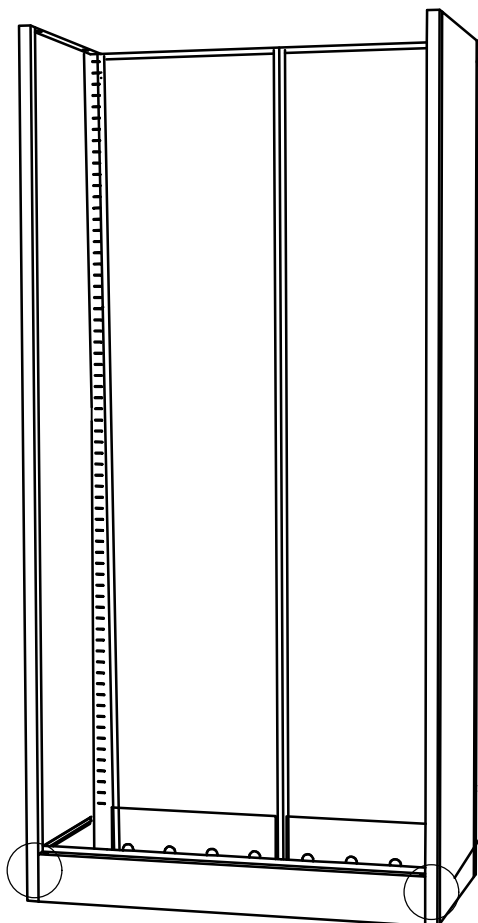

Fix them with screws from back side

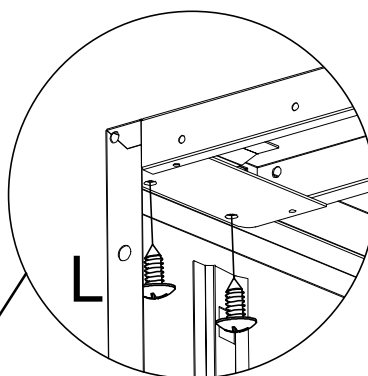


5

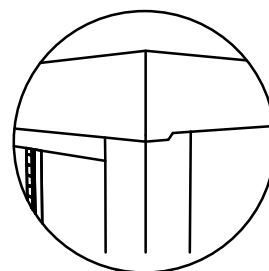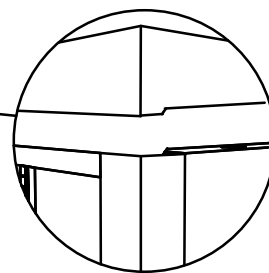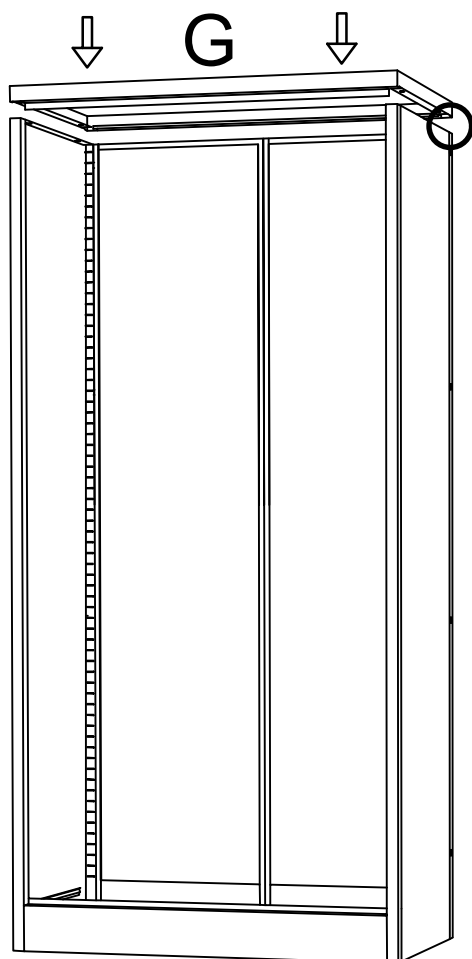


The four corners of the top need to include the four corners of the side panels


6

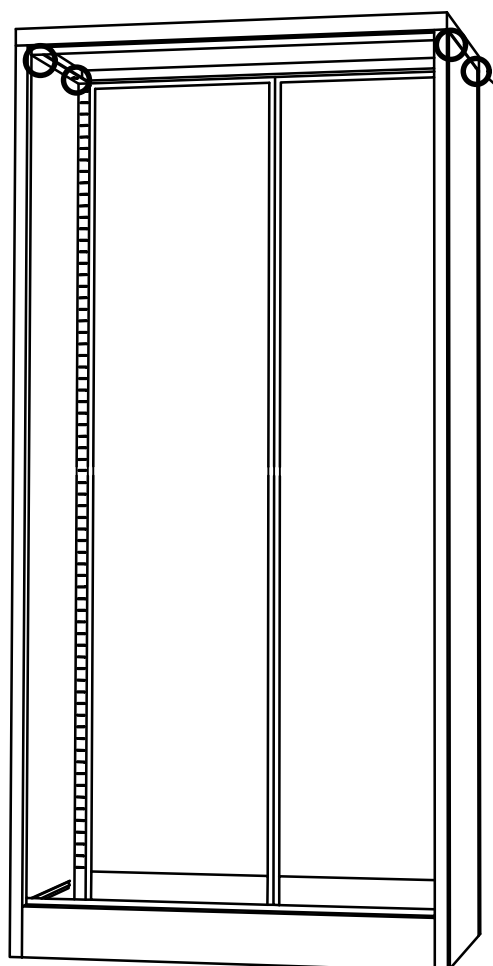


Fix the top panel with screws from inside

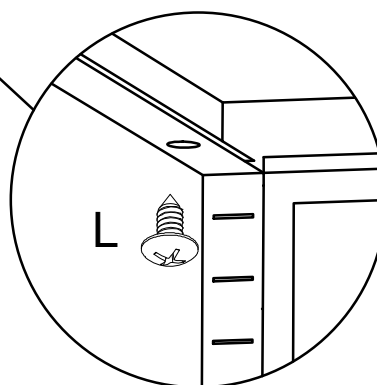


7

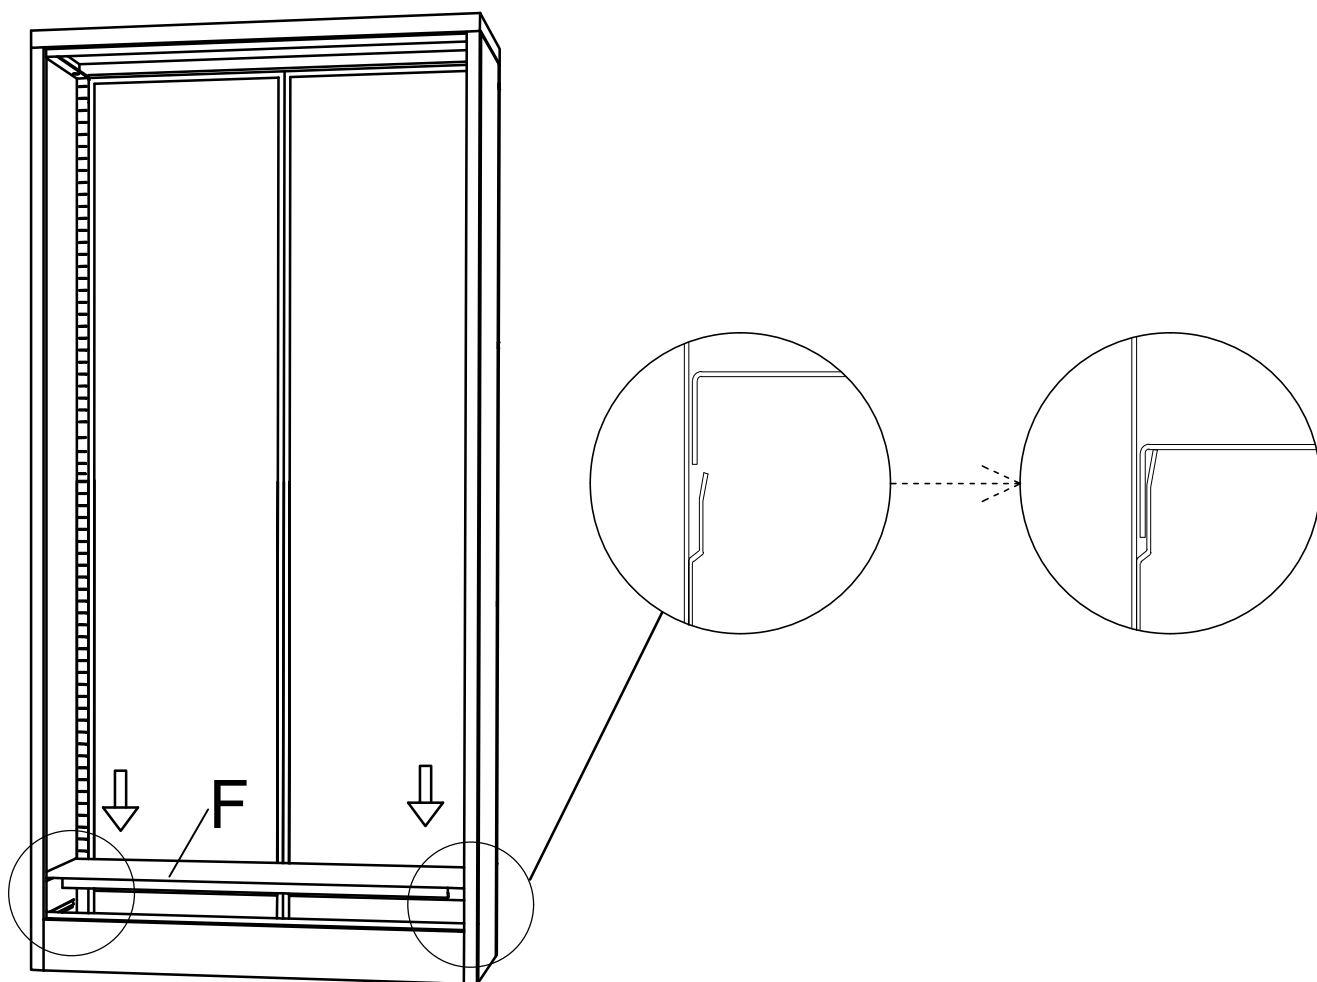



8

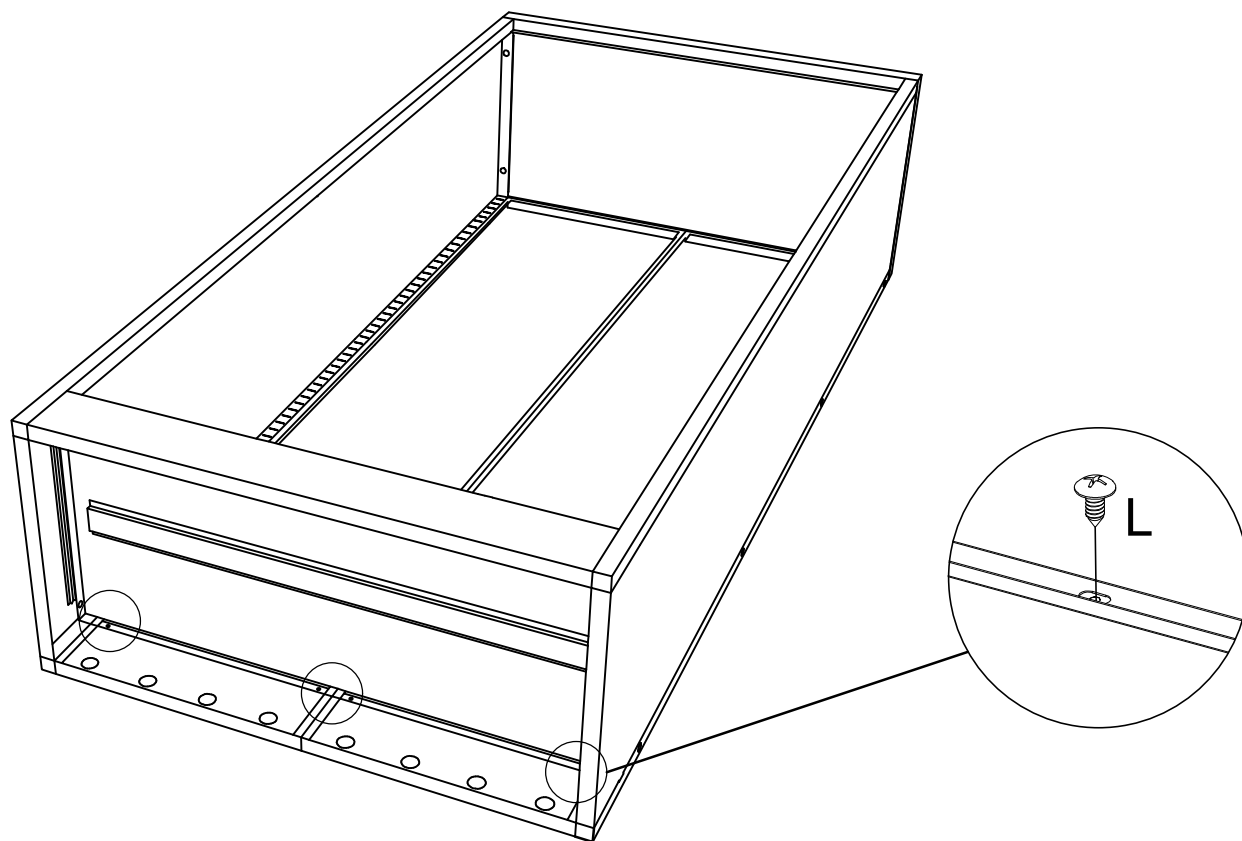

9

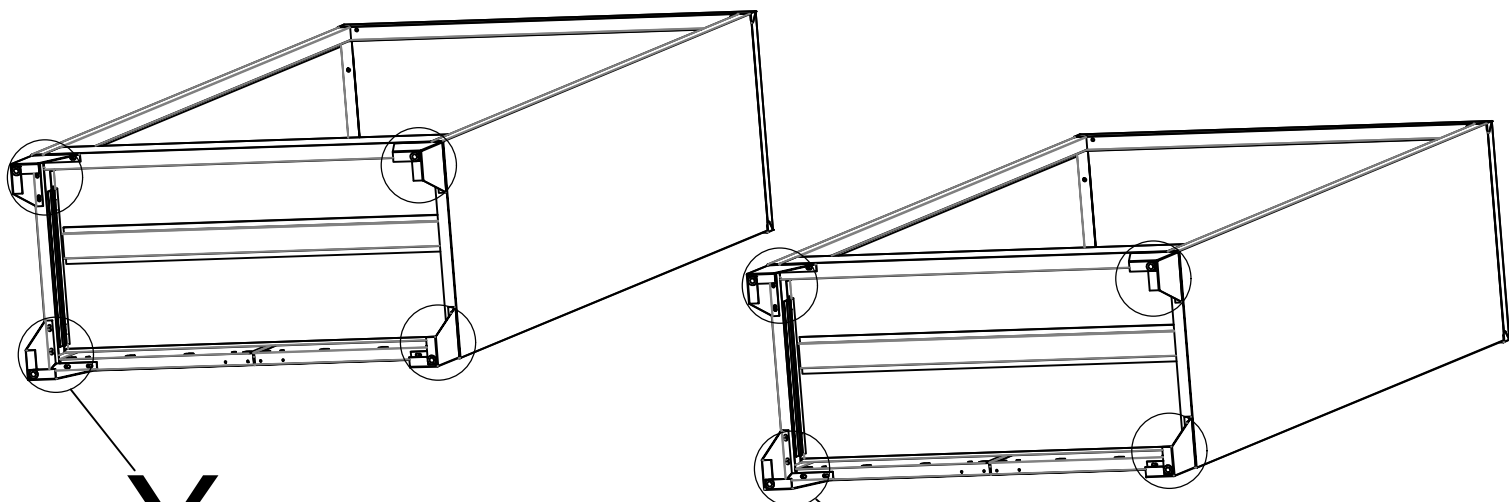


Y

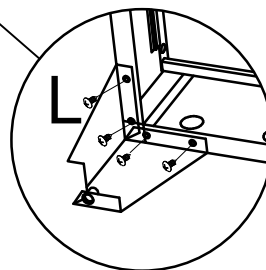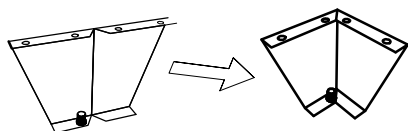



If you think it looks better without the standing legs, you can choose to skip this step (9) and the next step (10)

 L×16

10




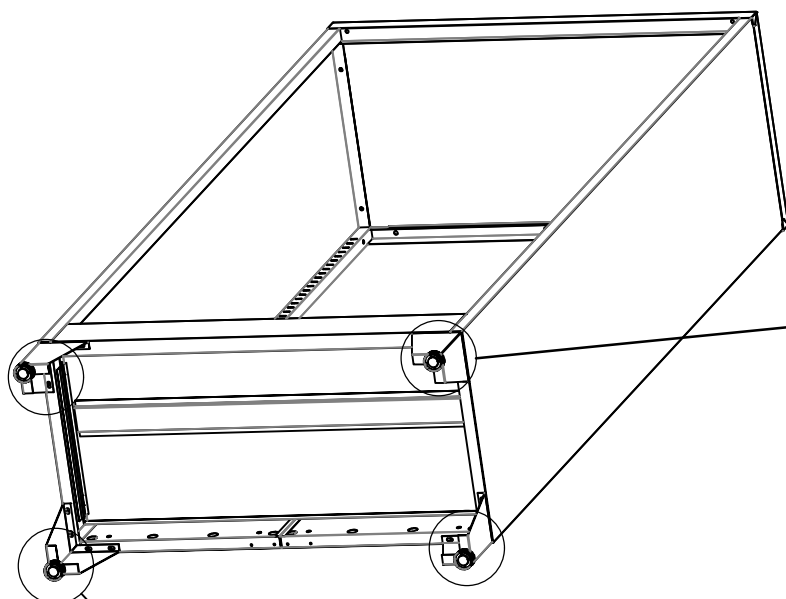


N

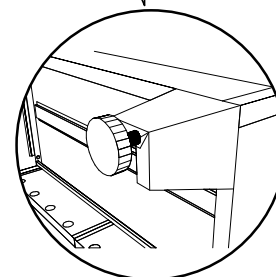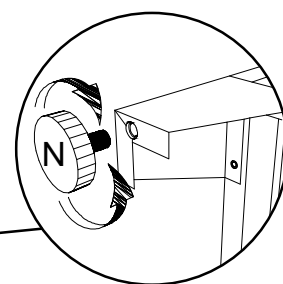




 N×4

11

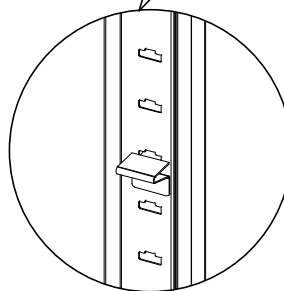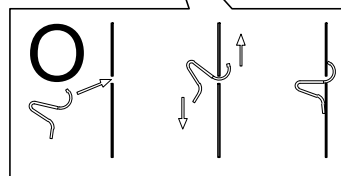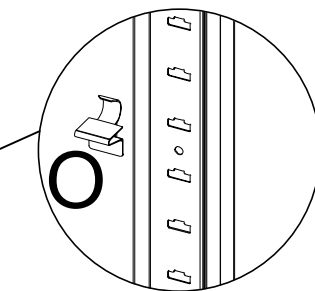
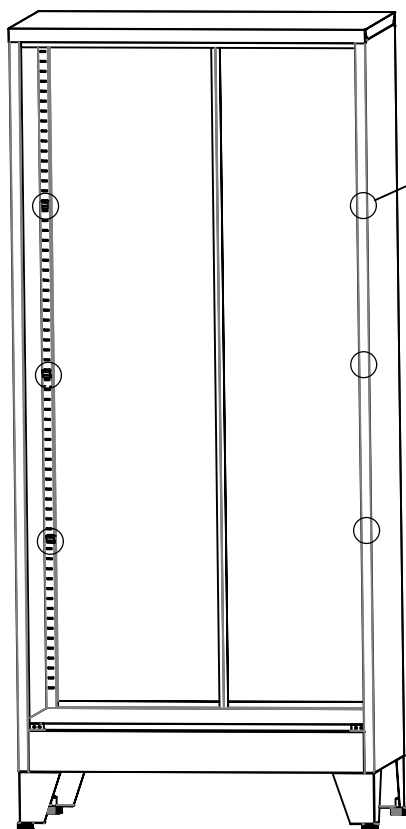


O×12


12

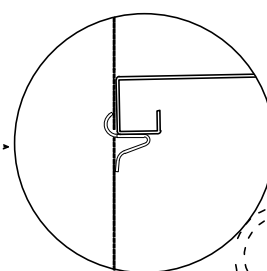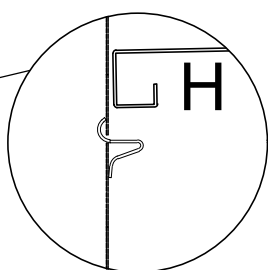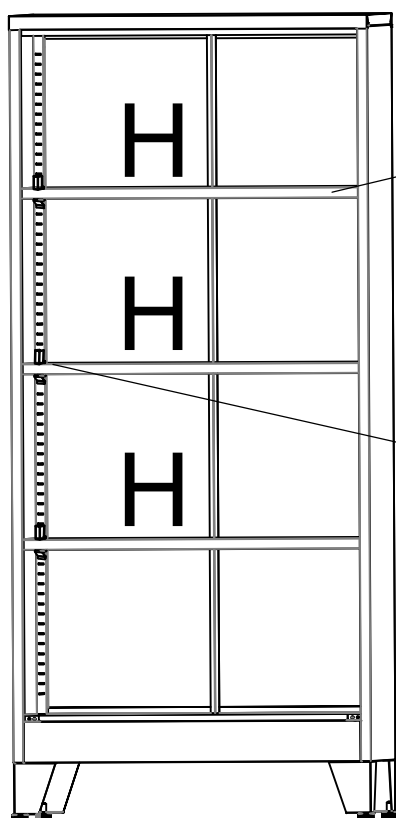

1

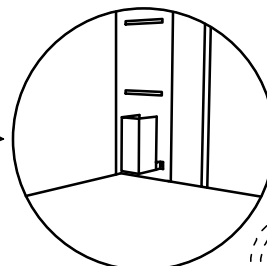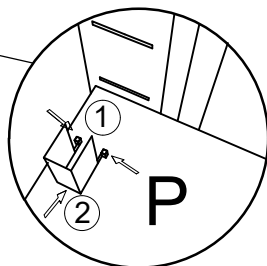


2



PX12

13



Please tear off the protective film on both sides of the X part before putting it in

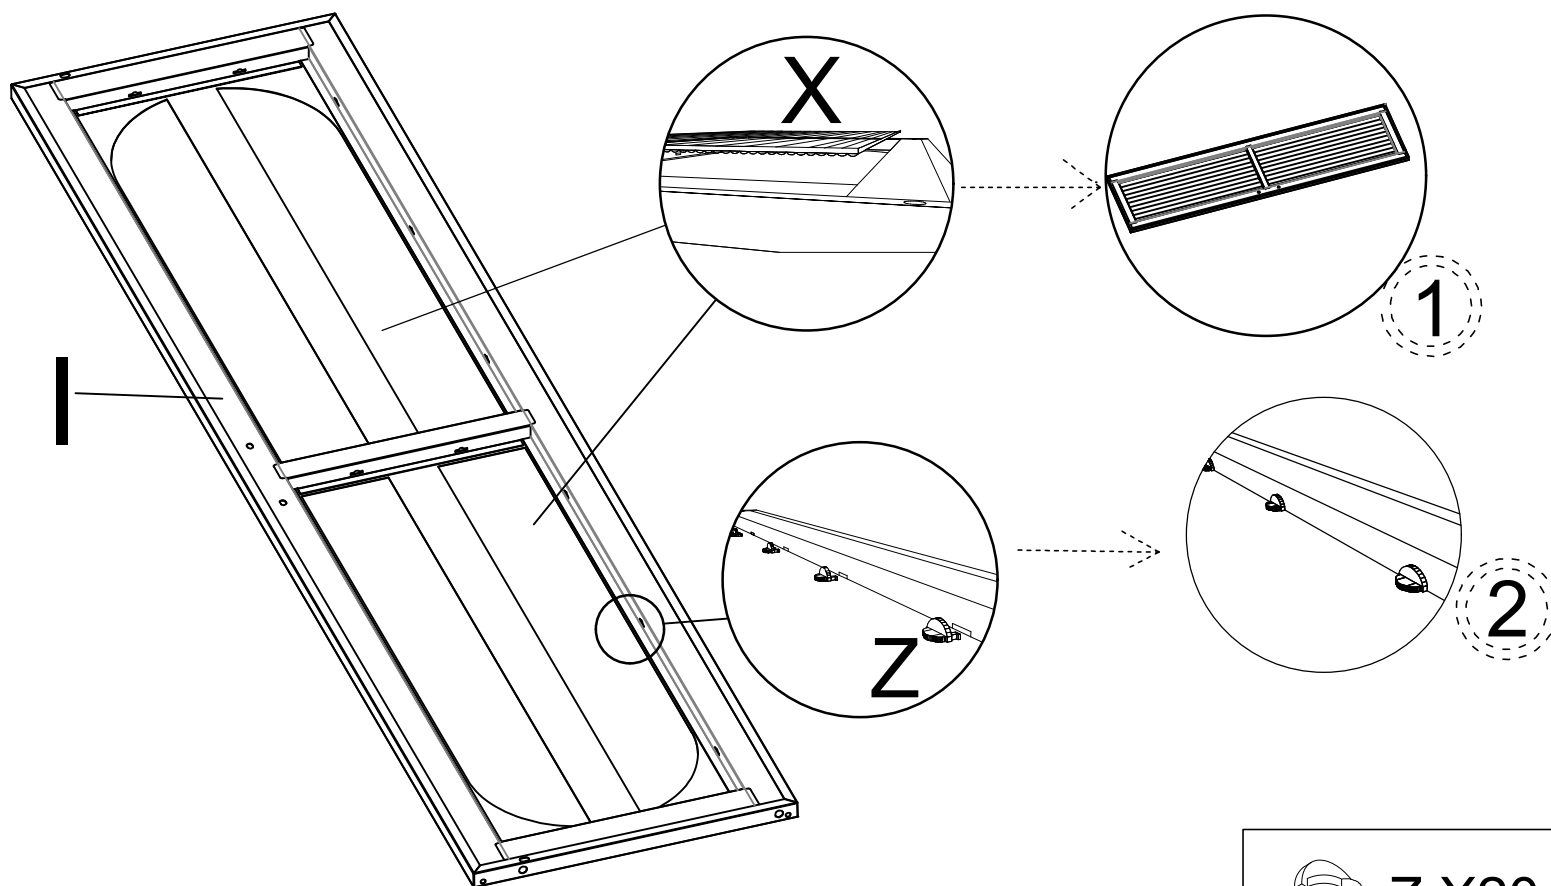


Z X20

Repeat steps 13 and 14 to install the J board

14

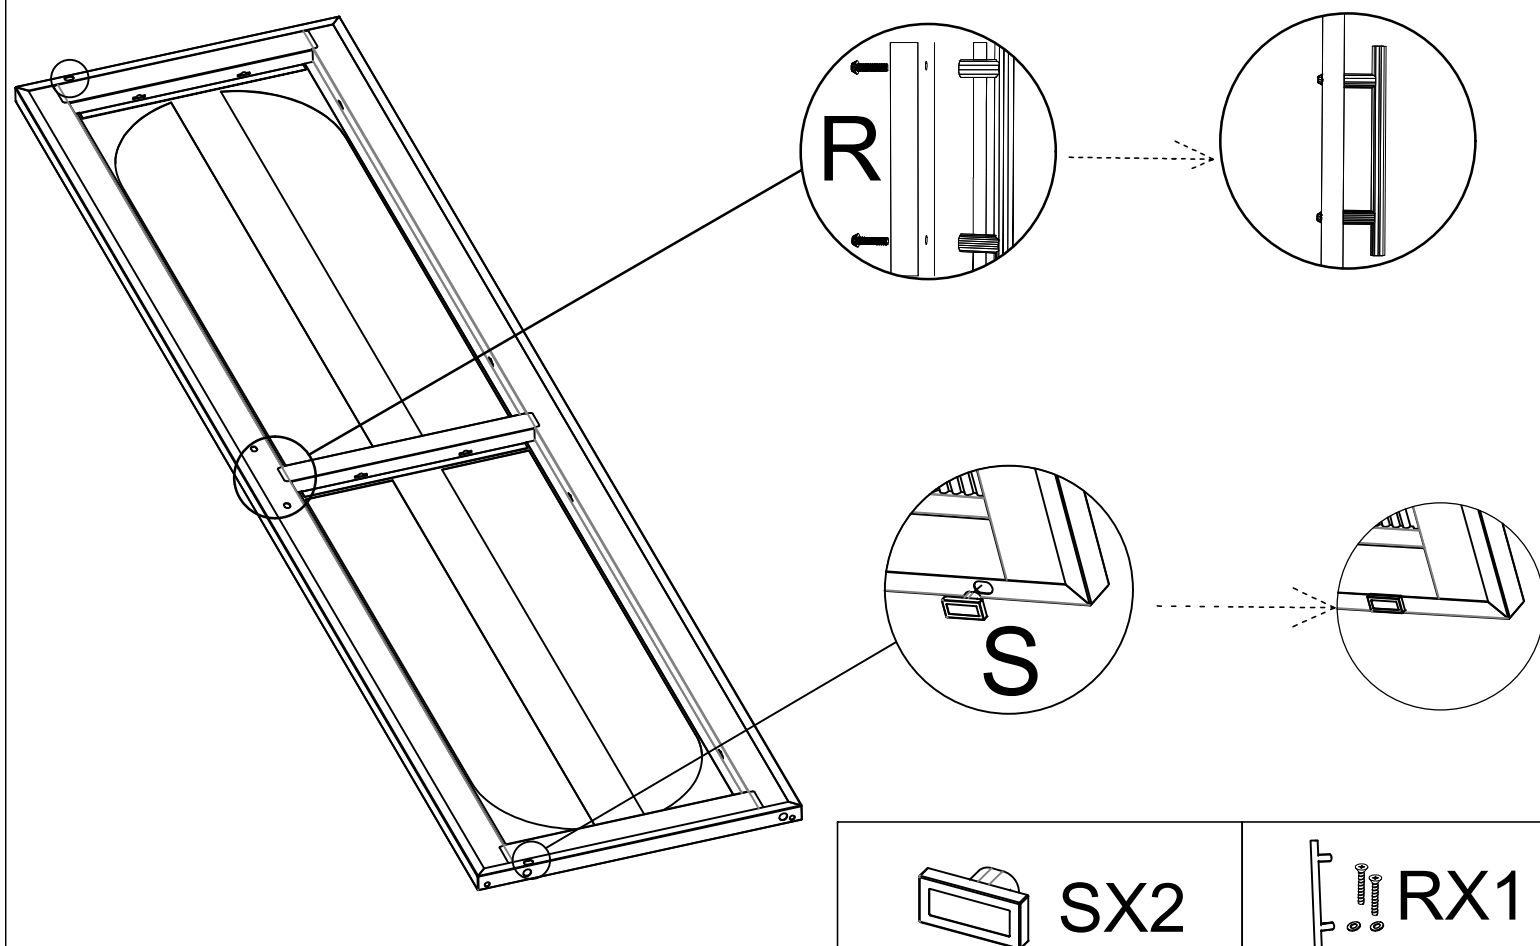


SX2




RX1

15


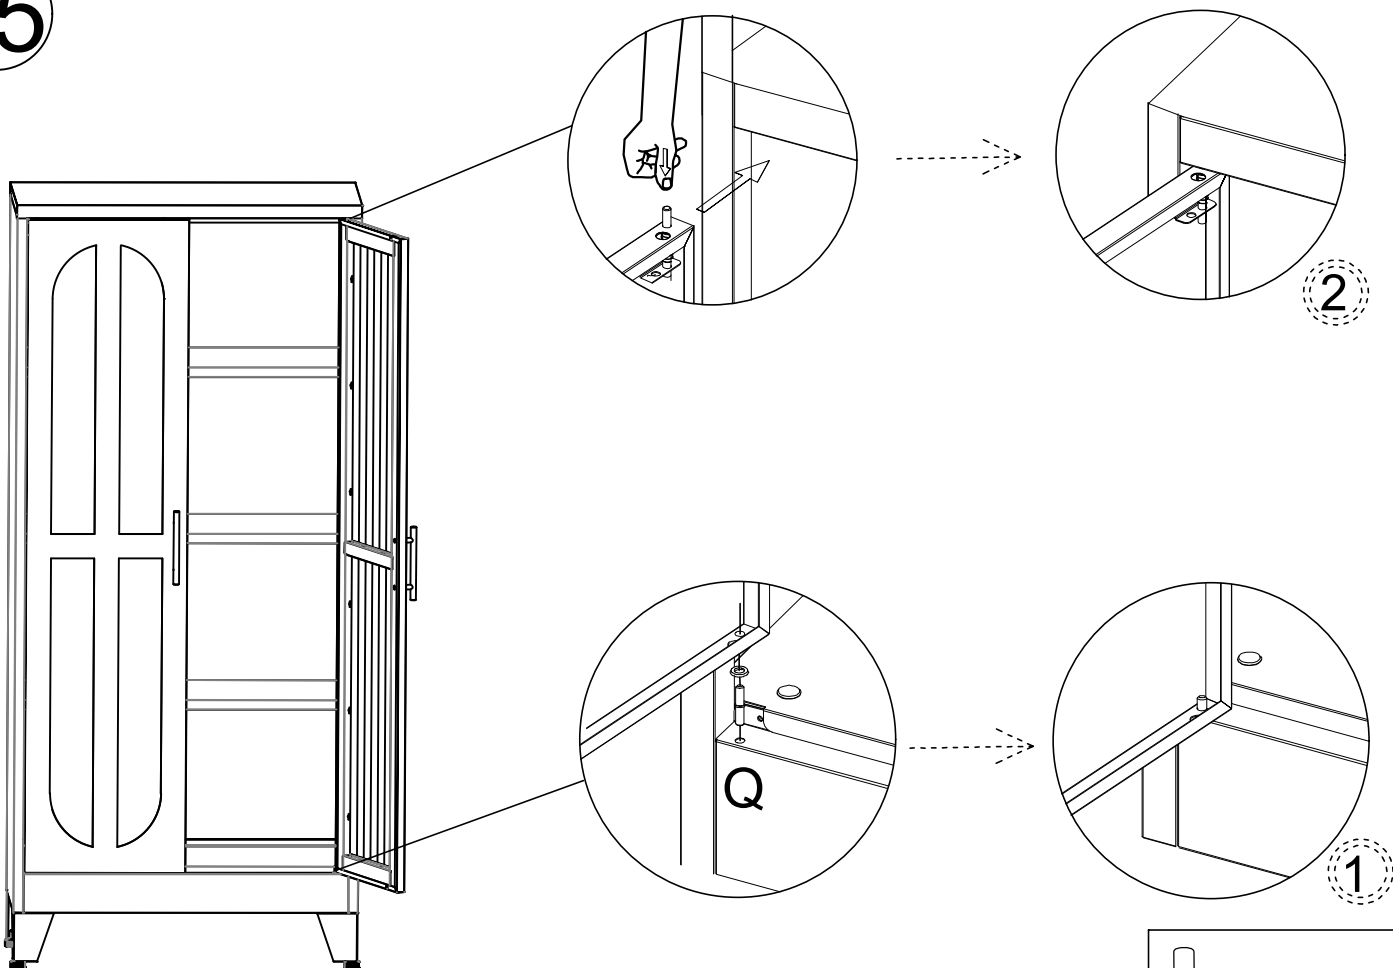


Follow this step to install other door panels



16

The cabinet can be fixed to the wall as needed.

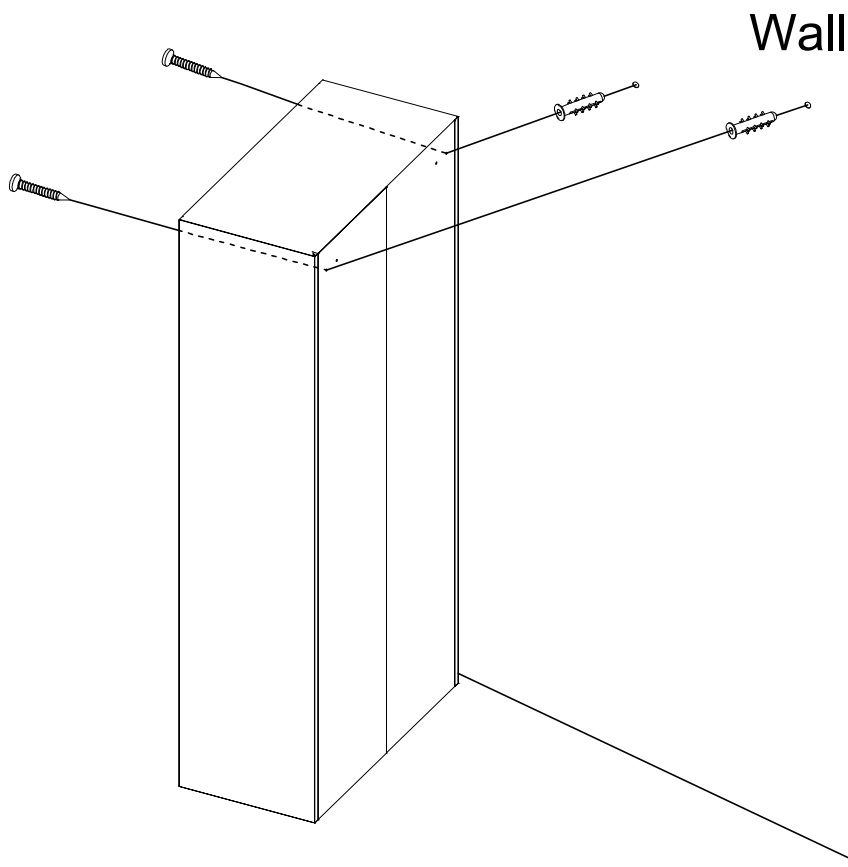

extra screws as spares