


ASSEMBLY INSTRUCTIONS

SKU:ARB-Q

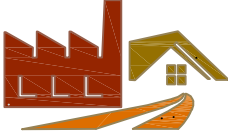

Factory2Home

FROM OUR FACTORY TO YOUR HOME
14800 Almeda School Road,
Houston, TX 77047
sales@factory2home.net



Description	:	ARVION QUEEN BED	
Product Dimension	:	64.1"Wx84.8"Lx42"H	
Cube Size	:	86.6"x21.3"x6.3"	
			NW : 88 LBS
			GW : 96.8 LBS

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment.


Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present.

If hardware is missing or you have difficulty assembling this product, please contact us at sales@factory2home.net.

IMPORTANT NOTE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT TIGHTEN all screws and bolts until product is completely assembled.
- Keep all hardware parts out of reach of children.

Estimated time for assembly	People recommended for assembly	Tools Needed	Use power tools with caution
 Allow 60 minutes.	 2 People Build Make it a team effort! Grab a friend for quicker, easier assembly.	 Grab a Phillips head screwdriver to conquer this assembly.	 Use power tools with caution.

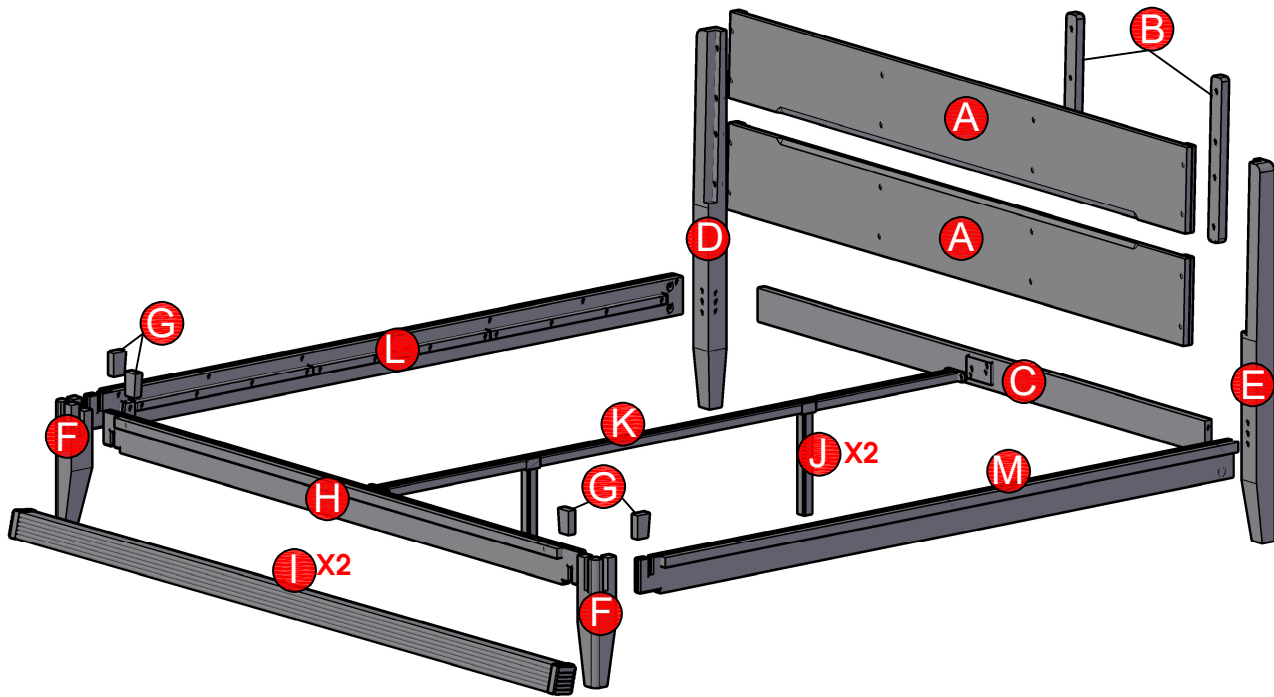


PART LIST

- When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts.

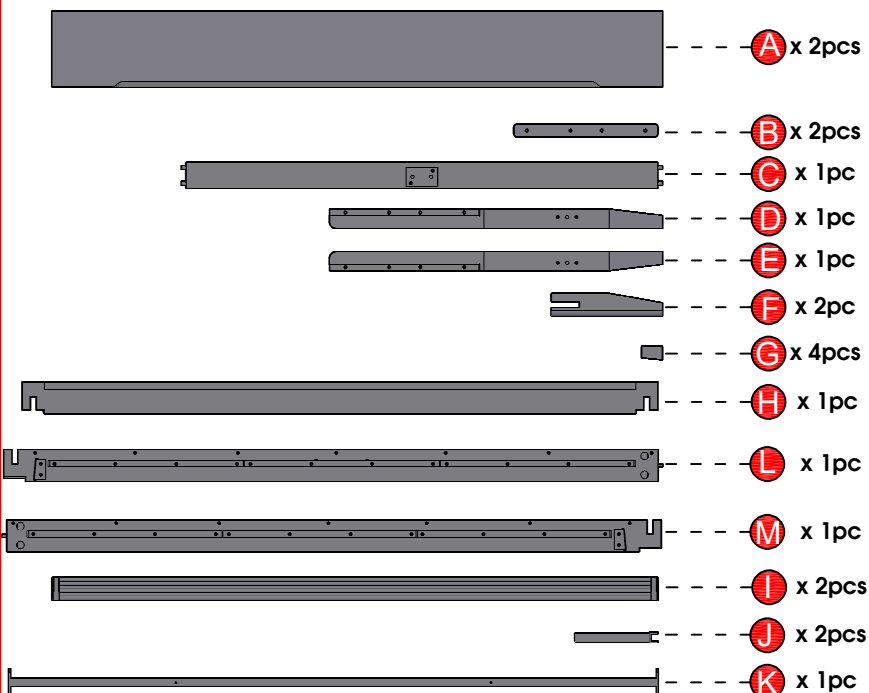


HARDWARE LIST

- When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

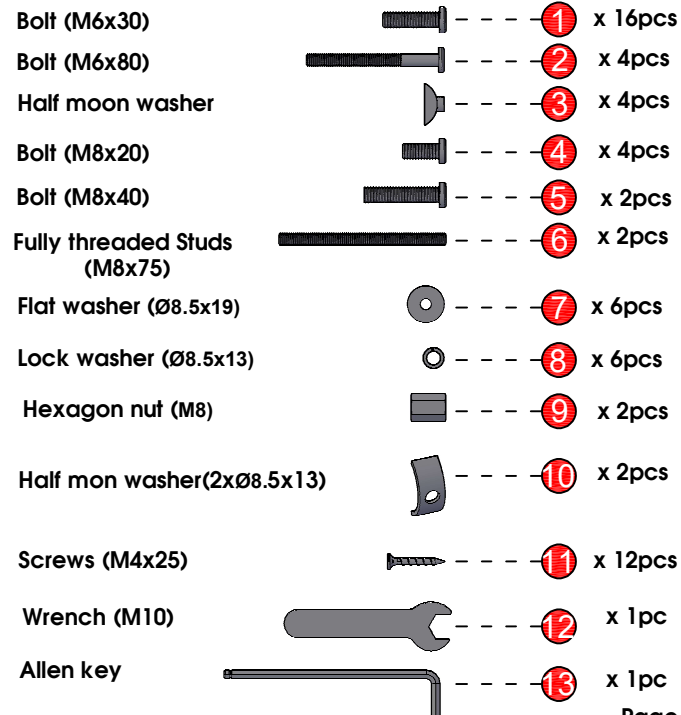


STEP 1

- Attach Fully threaded studs (6) to Headboard legs (E) & (D).
- Attach Headboard Legs (E) & (D) to Headboard stretcher (C) using Hexagon nut (9) and Half moon washer (10).
- Tighten with Wrench (12).
- Attach Headboard panels (A) to the Headboard legs (E)&(D) using Bolts (1).
- Attach Support (B) to the Headboard panels (A) using Bolts (1).
- Tighten with Allen key (13).

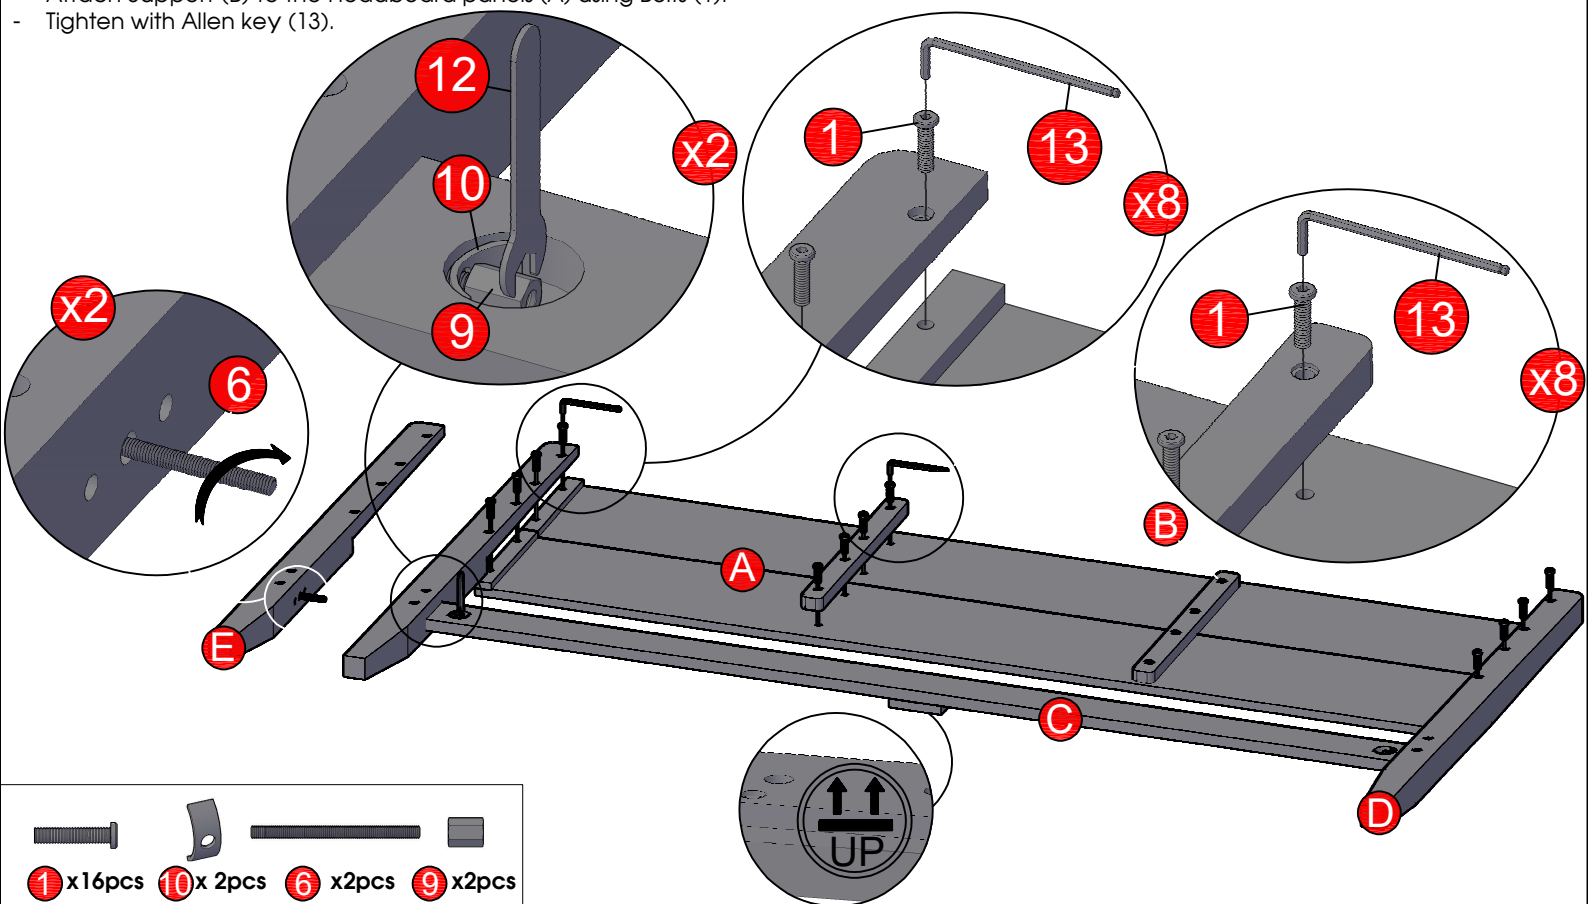


STEP 2

- Find some blocks or anything you have available to prop up Side Rails (L) & (M) while attaching them to the Headboard.
- Attach Side rails (L) & (M) to the Headboard leg (From step 1) using Bolts (2) and Half moon washer (3).
- Tighten with Allen key (13).

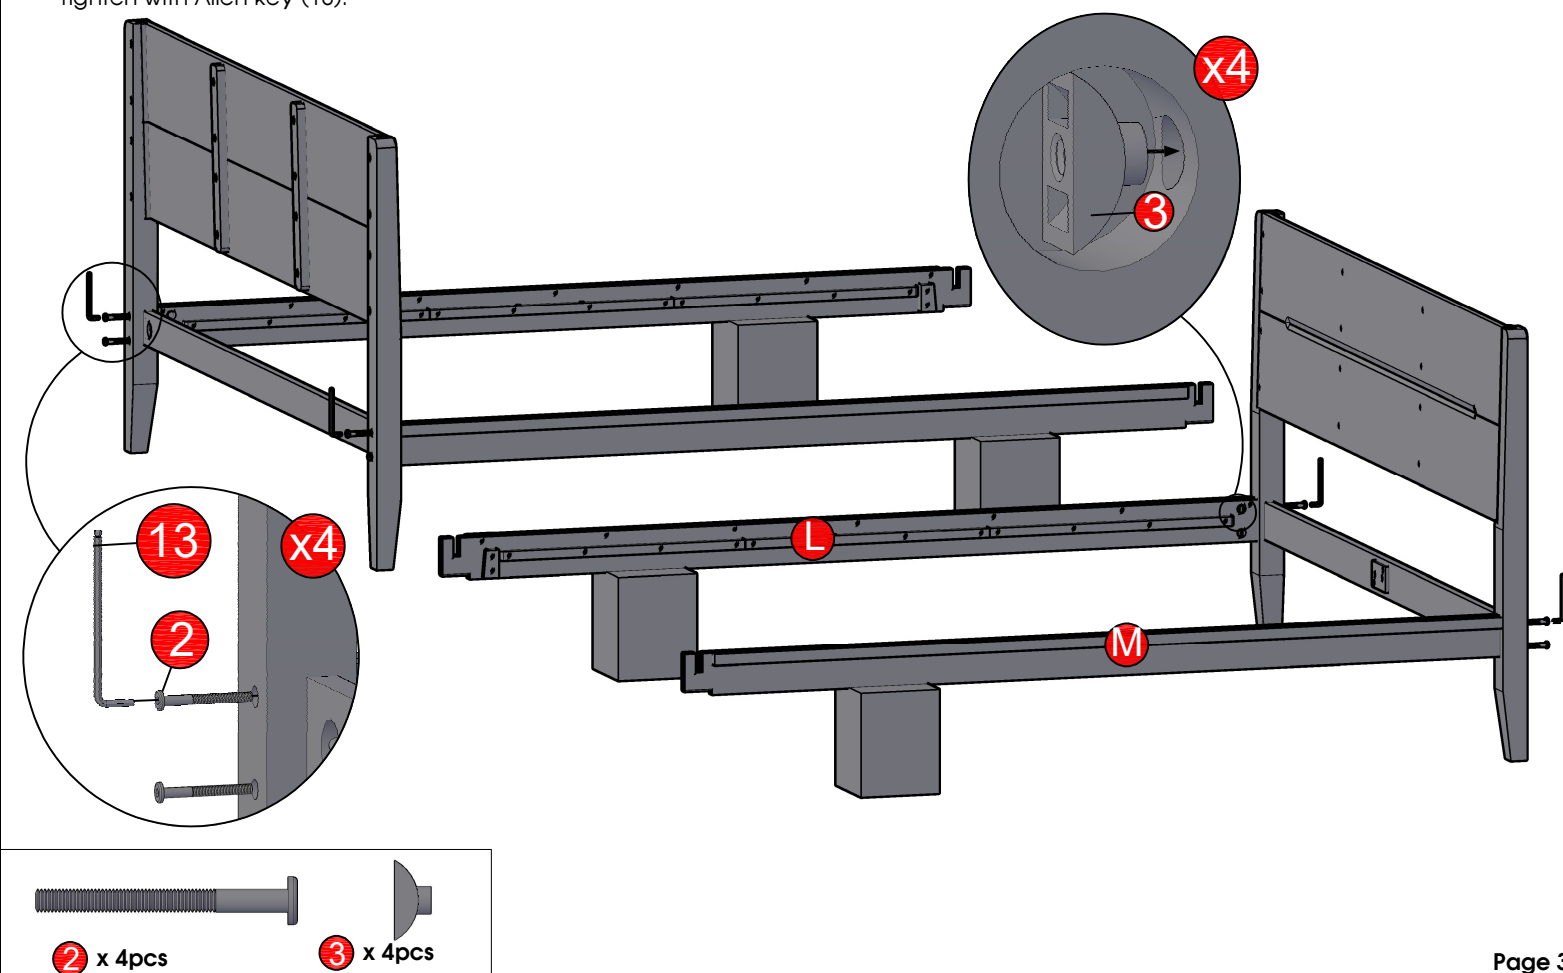


STEP 3

- Attach Footboard legs (F) to the Side rails (from step 2).
- Attach Footboard panel (H) to Footboard legs (F).
- Attach Wood wedge (G) to Side rails and Footboard panel.

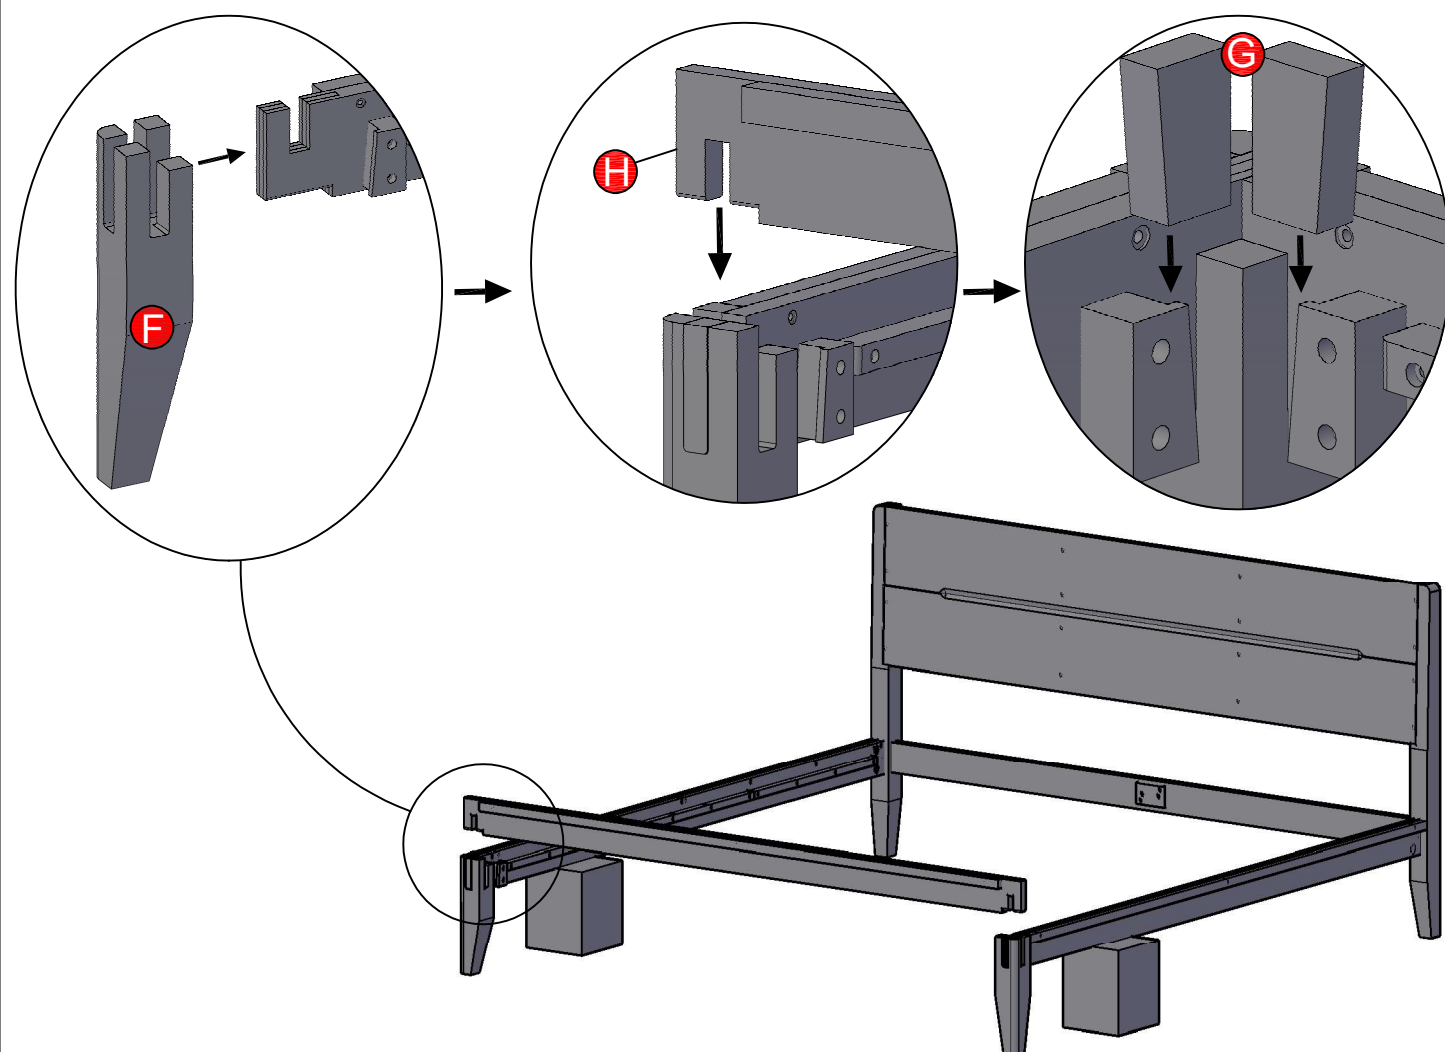


STEP 4

- Attach Support legs (J) to Centre rail (K) using Bolts (5), Flat washers (7) and Lock washers (8).
- Tighten with Allen Key (13).

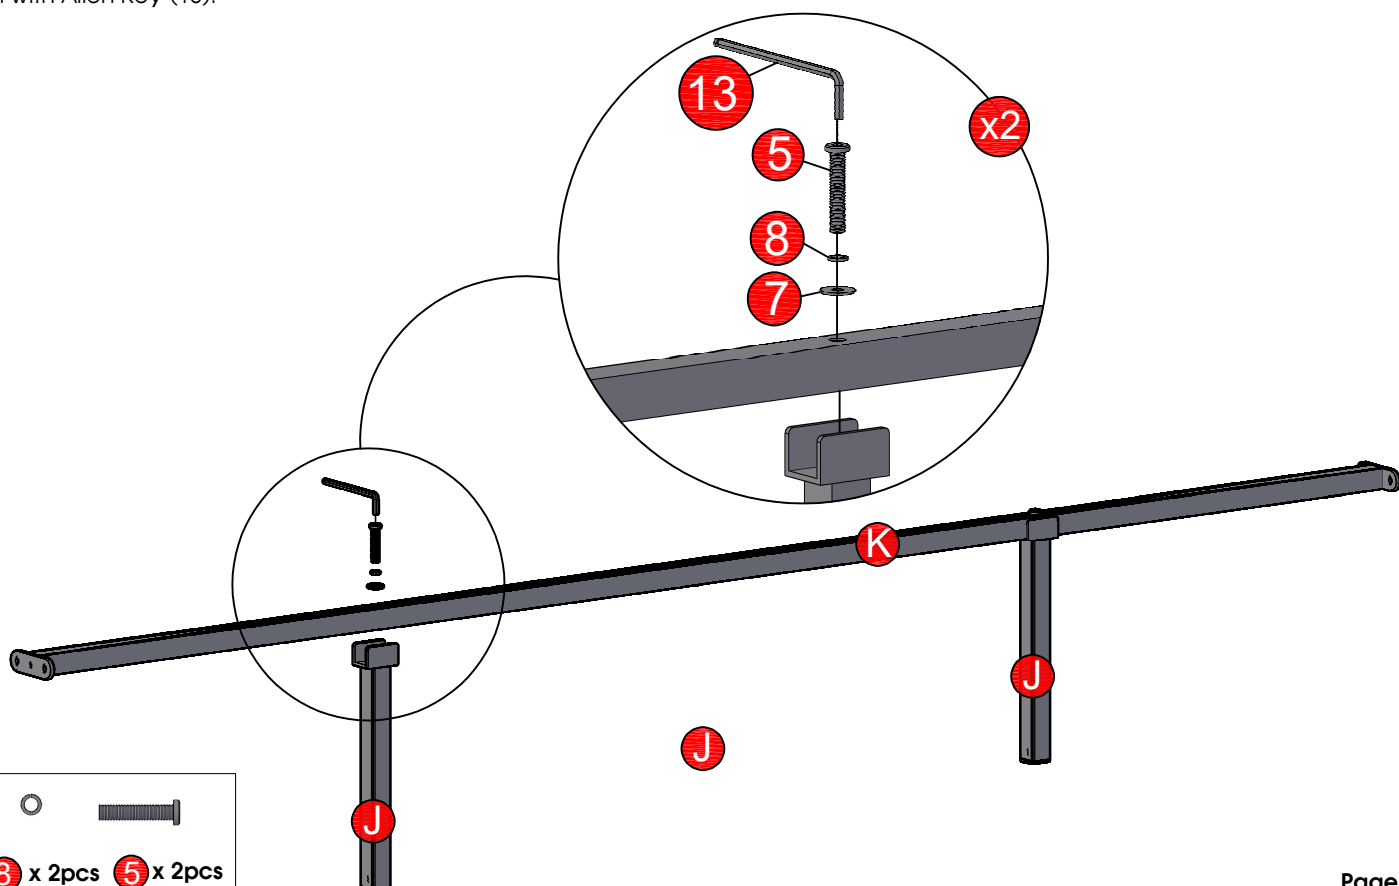

STEP 5

- Attach Centre rail (From step 4) to the Headboard and Footboard using Bolts (4), Flat washers (7) and Lock washers (8).
- Tighten with Allen Key (13).

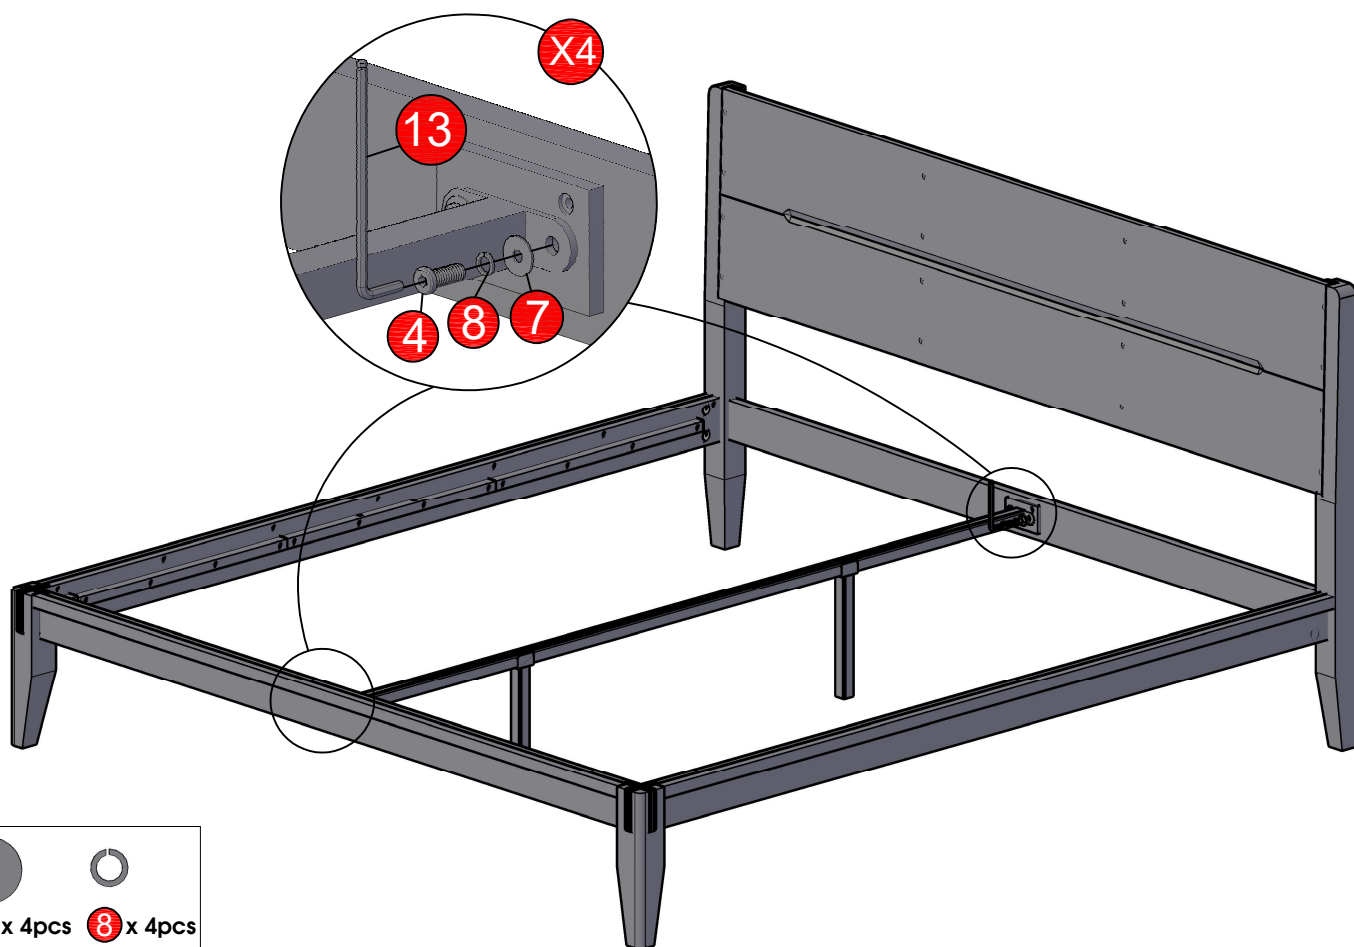

STEP 6

- Secure Slats (1) on bed frame with Screws (11), and complete the assembly.

