



Product manual

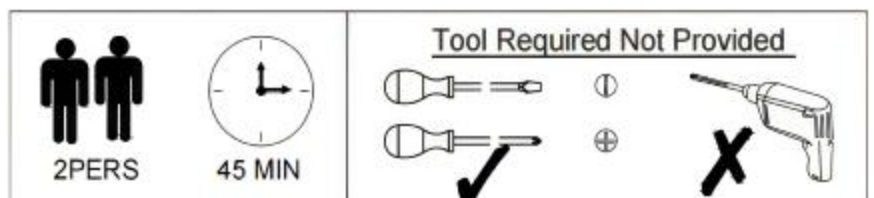

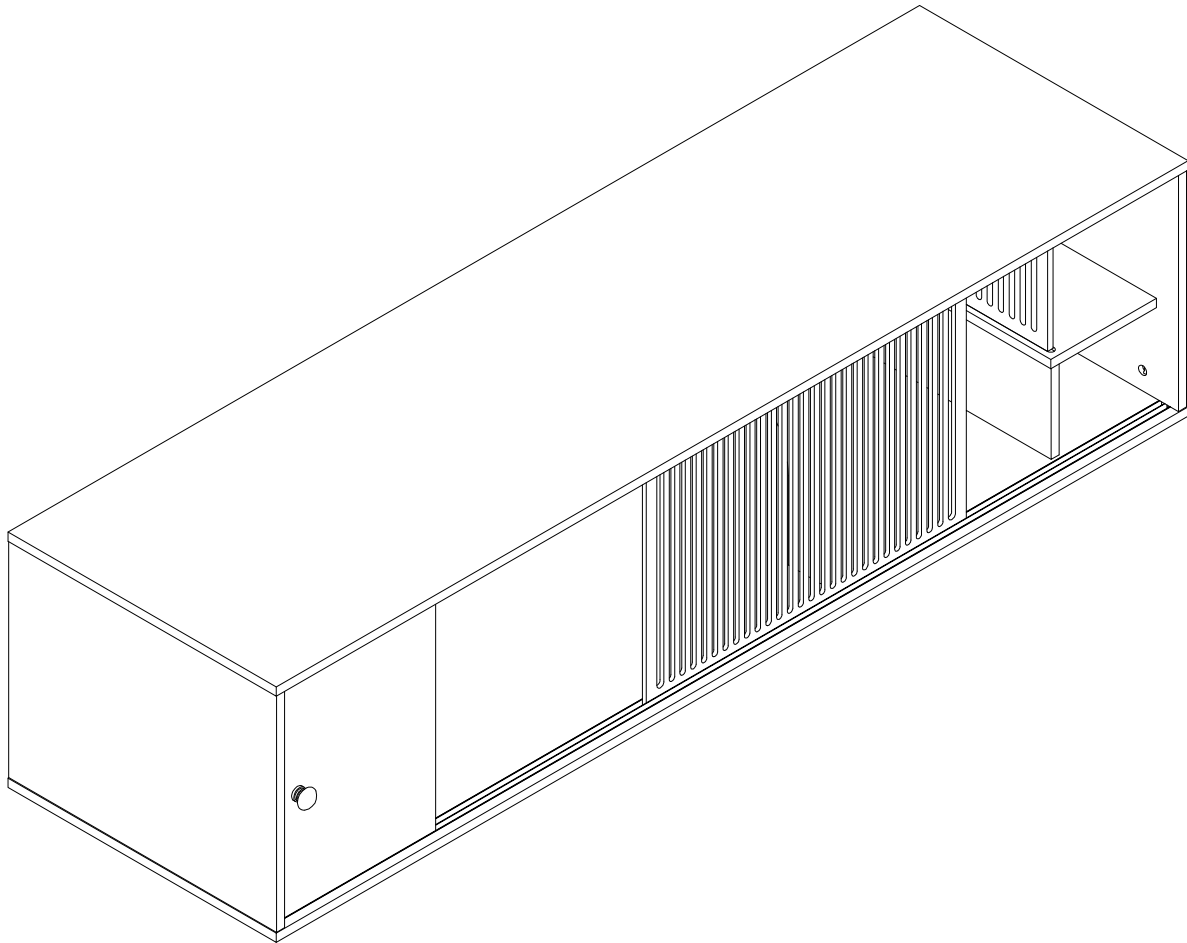

Warning: Please read these instructions fully before starting assembly. Check you have all the components and tools listed on pages. Keep the instructions for later reference. Parts of the assembly will be easier with 2 people. Seek professional assistance if necessary.


Warning: Please place all parts on a flat surface. Place a soft blanket or similar underneath to protect against scratches or stains. Avoid dragging or sliding components across the floor.

Warning: Regularly check all fittings and fastenings to ensure they are secure and to prevent accidents. If any parts are missing, broken, damaged, or worn, discontinue use of the product until repairs have been made using factory authorized parts.












Warning: Do not allow children to climb on the furniture as this may result in tipping and serious personal injury. Assemble the furniture away from the reach of children.

Warning: Do not place furniture close to fire sources or high-temperature objects to avoid the risk of fire. Do not place furniture in damp environments to prevent material damage.








Warning: Clean furniture with a damp cloth or alcohol, avoid using cleaning agents containing corrosive chemicals.

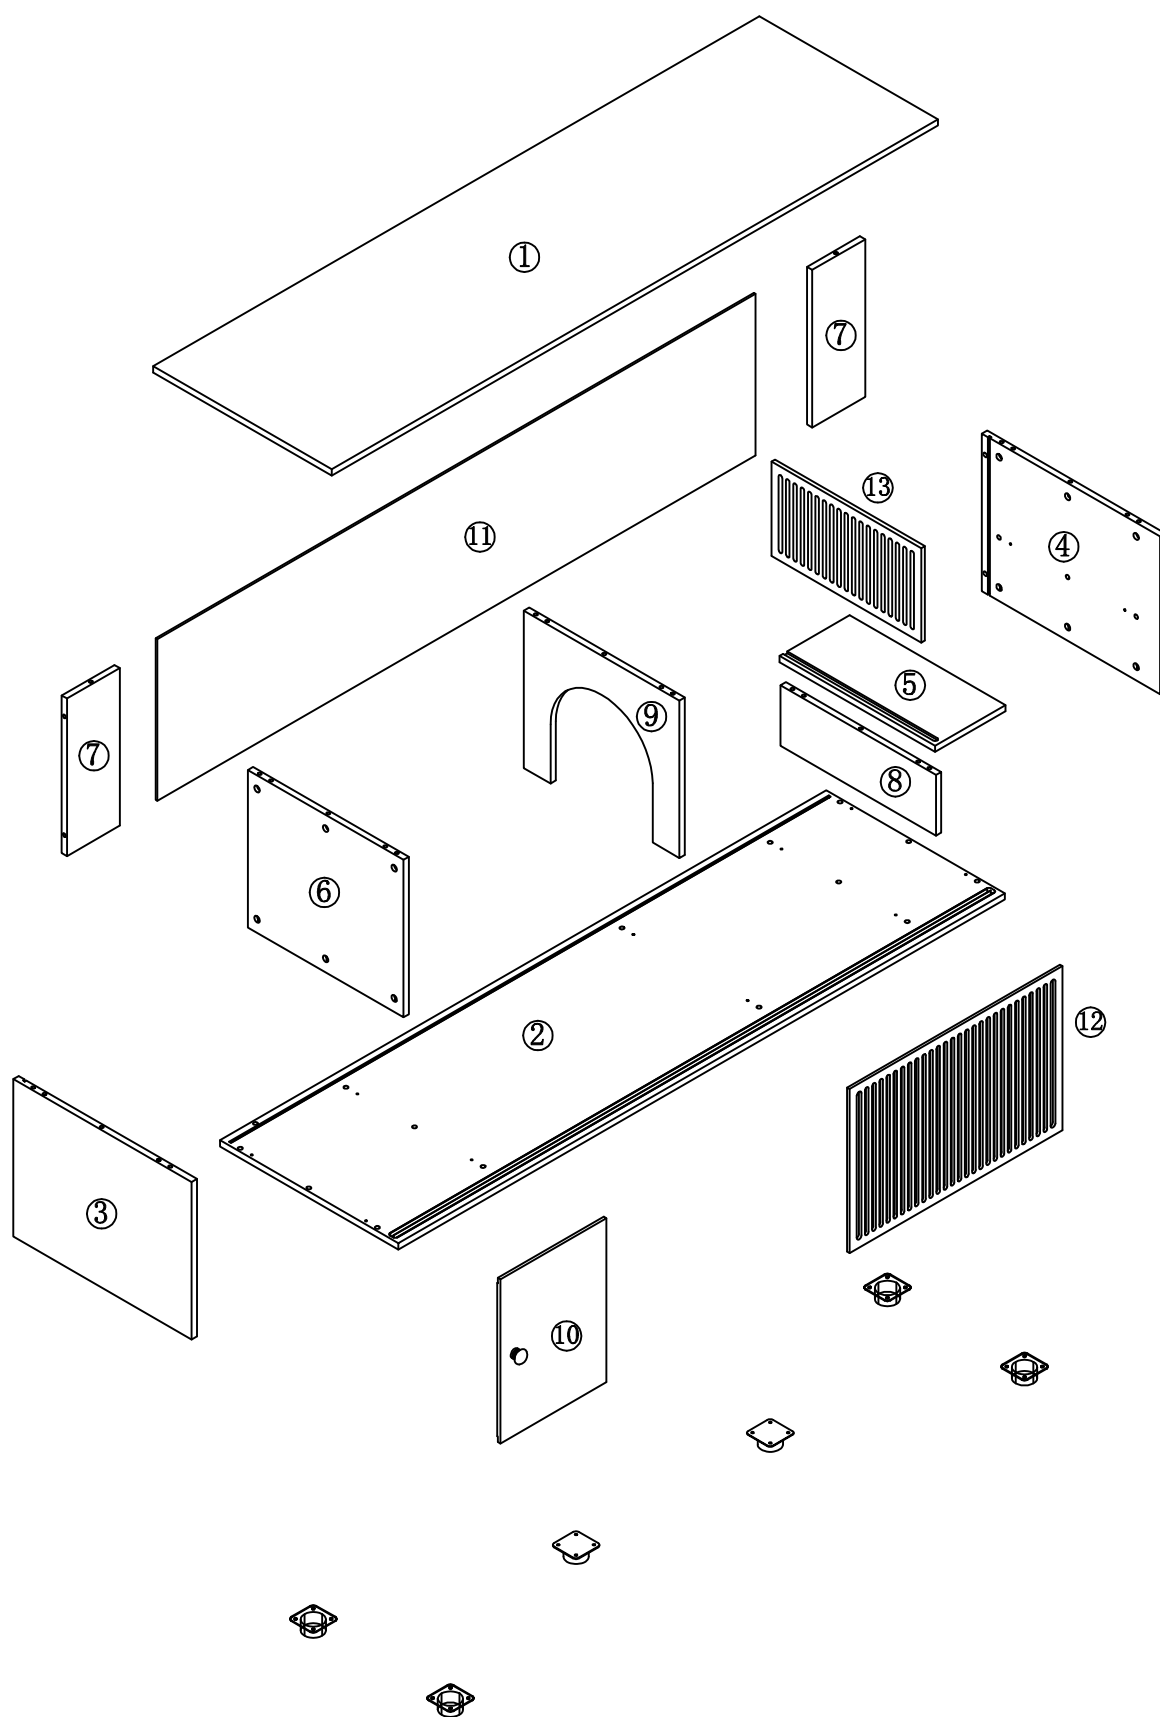


Parts List

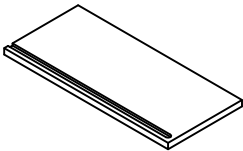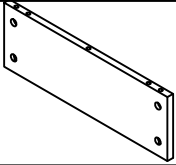			
① x1pc	② x1pc	③ x1pc	④ x1pc
			
⑤ x1pc	⑥ x1pc	⑦ x2pcs	⑧ x1pc
			
⑨ x1pc	⑩ x1pc	⑪ x1pc	⑫ x1pc
			
⑬ x1pc			


Hardware List

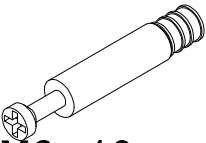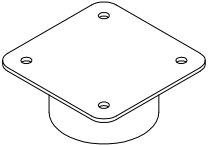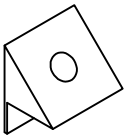 M6*40mm	 ø15*12mm	 ø6*30mm	 M3. 5*14mm	 ø4*12mm
Ⓐ x40pcs	Ⓑ x40pcs	Ⓒ x22pcs	Ⓓ x30pcs	Ⓔ x1pc
				
Ⓕ x1pc	Ⓖ x6pcs	Ⓗ x6pcs	Ⓘ x40pcs	Ⓙ x1pc

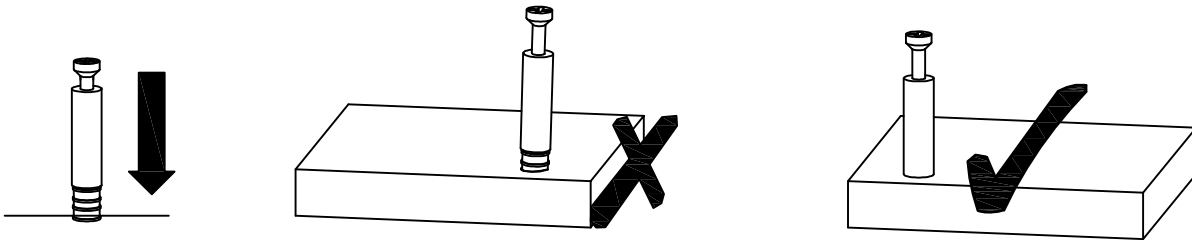

NOTE-1:

QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten

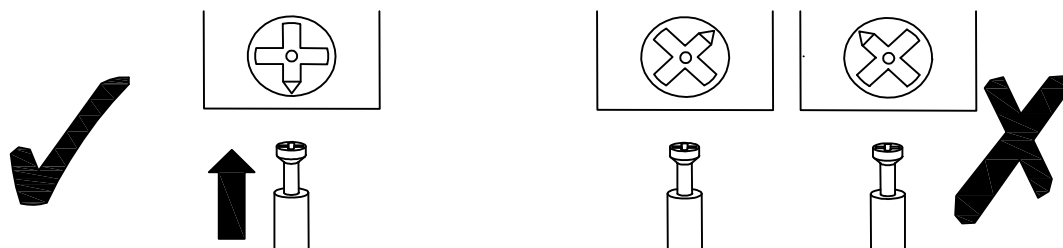


NOTE-2:


CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

NOTE-3:


Quickfit head should be in the centre of the cam lock when the two panels are joined.
Camlock should be inserted before quickfit.

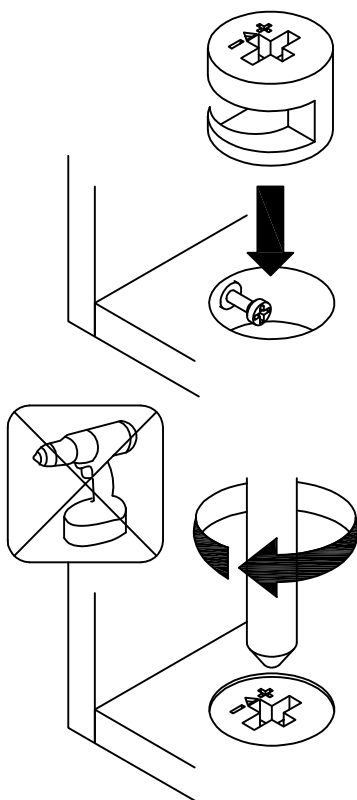


Step 1

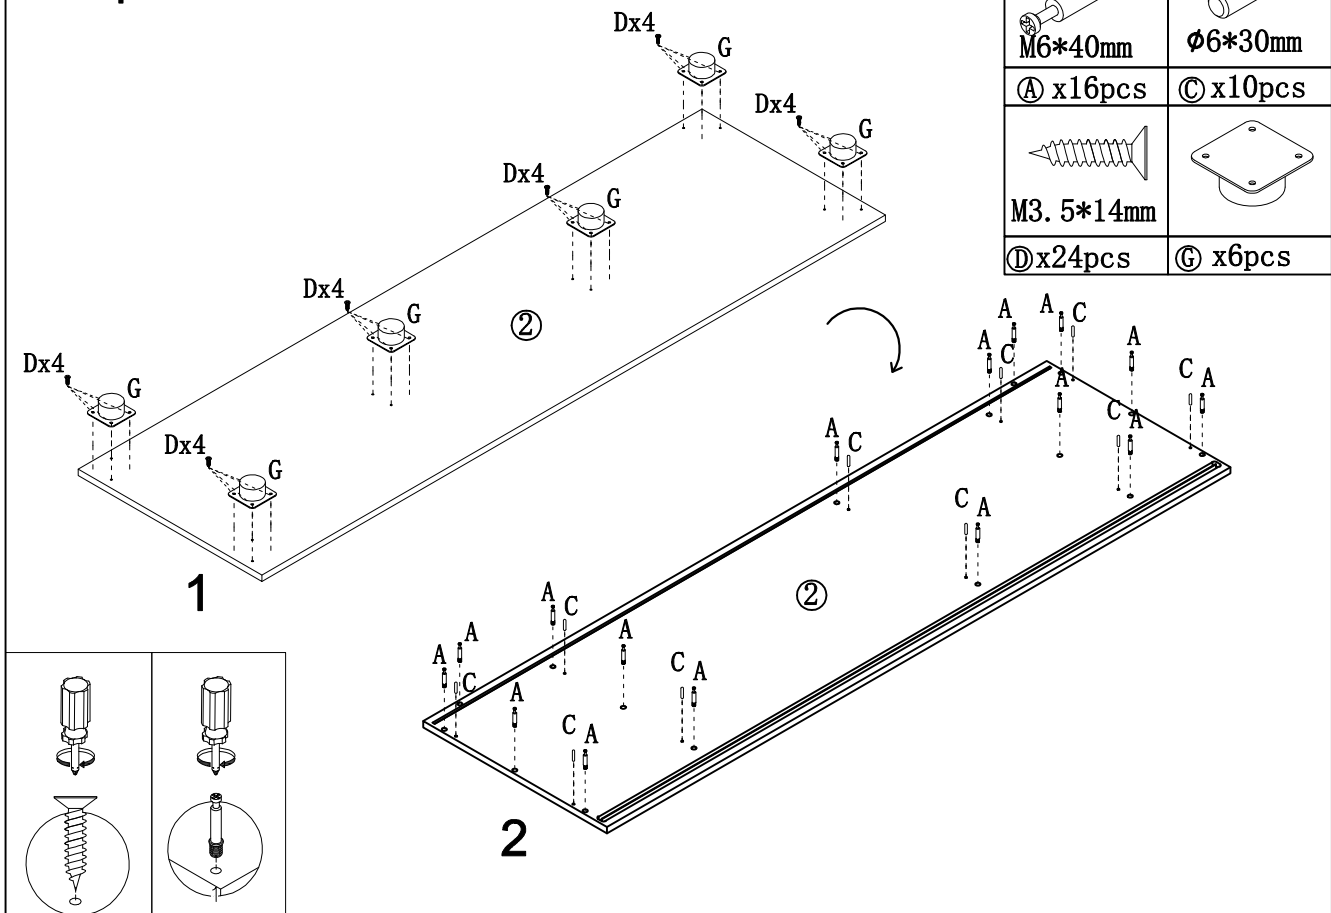



Step 2

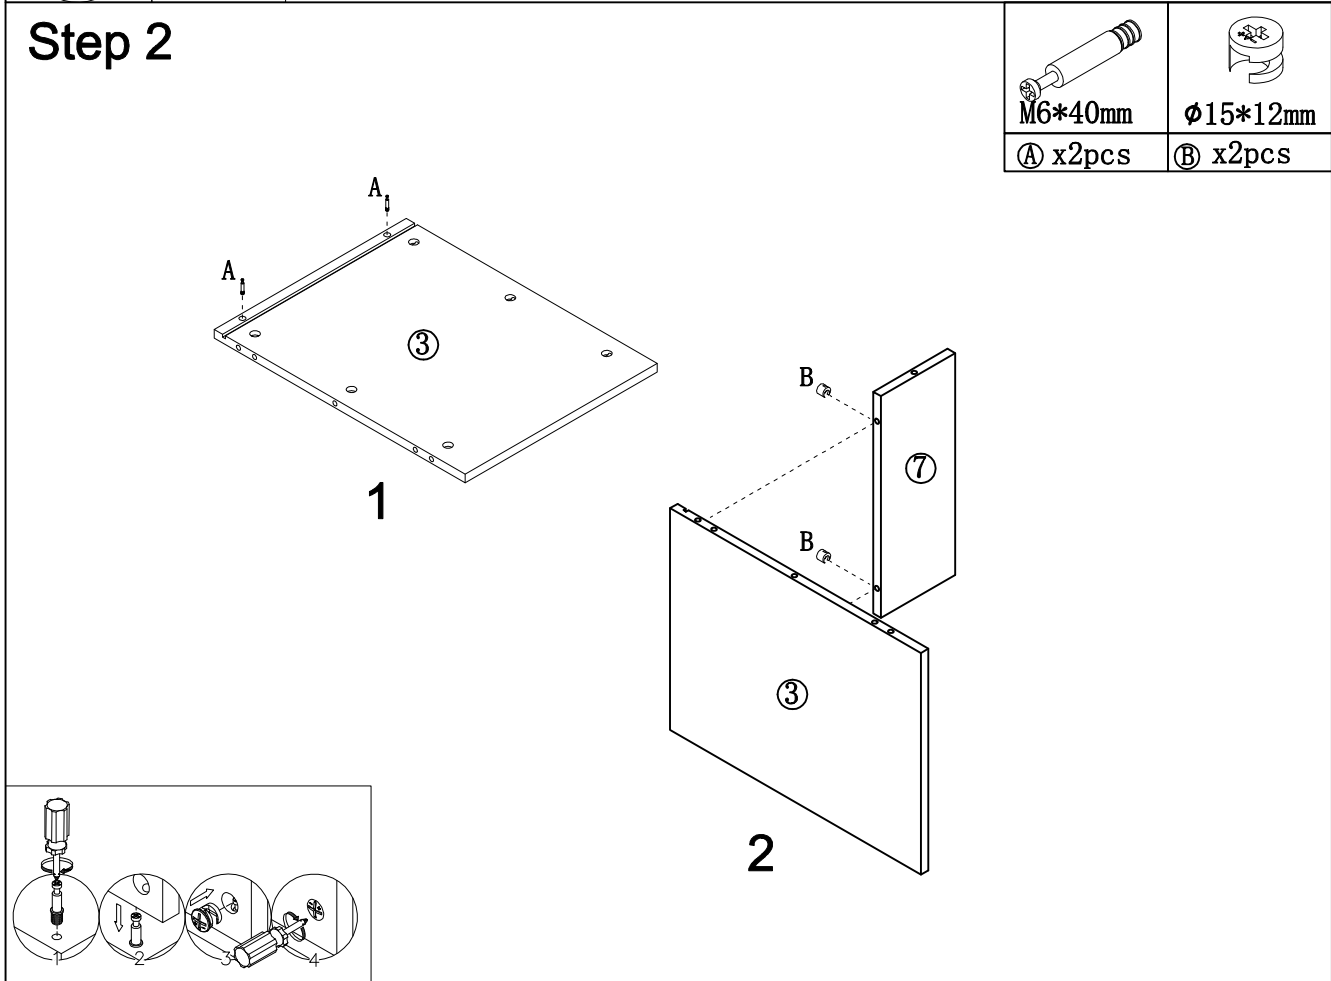


Step 1


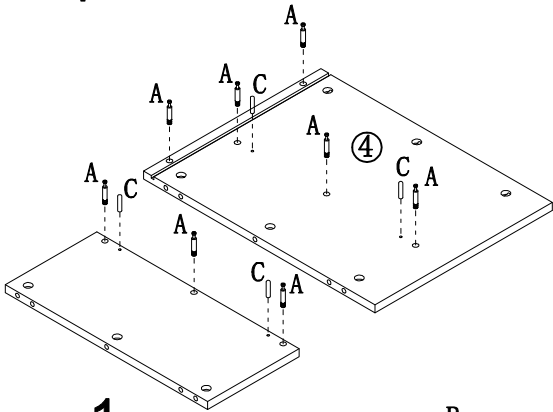


1


 M6*40mm	 ø15*12mm	 ø6*30mm
Ⓐ x8pcs	Ⓑ x5pcs	Ⓒ x4pcs

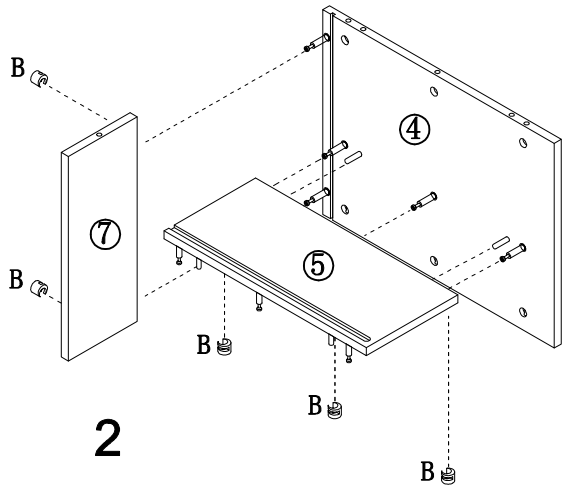

2

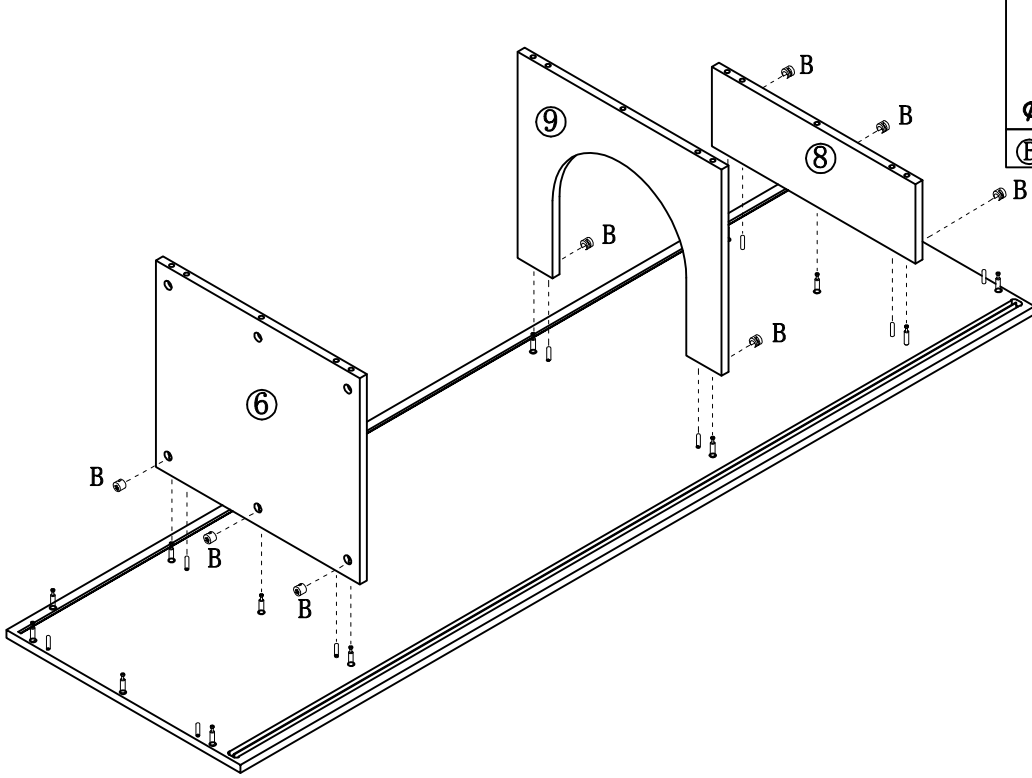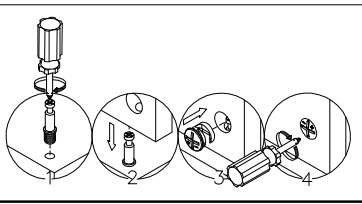



 ø15*12mm
Ⓑ x8pcs

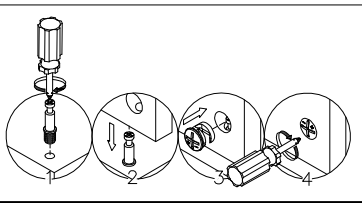



Ø15*12mm

ⓑ x11pcs

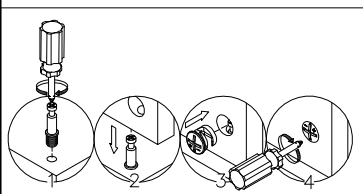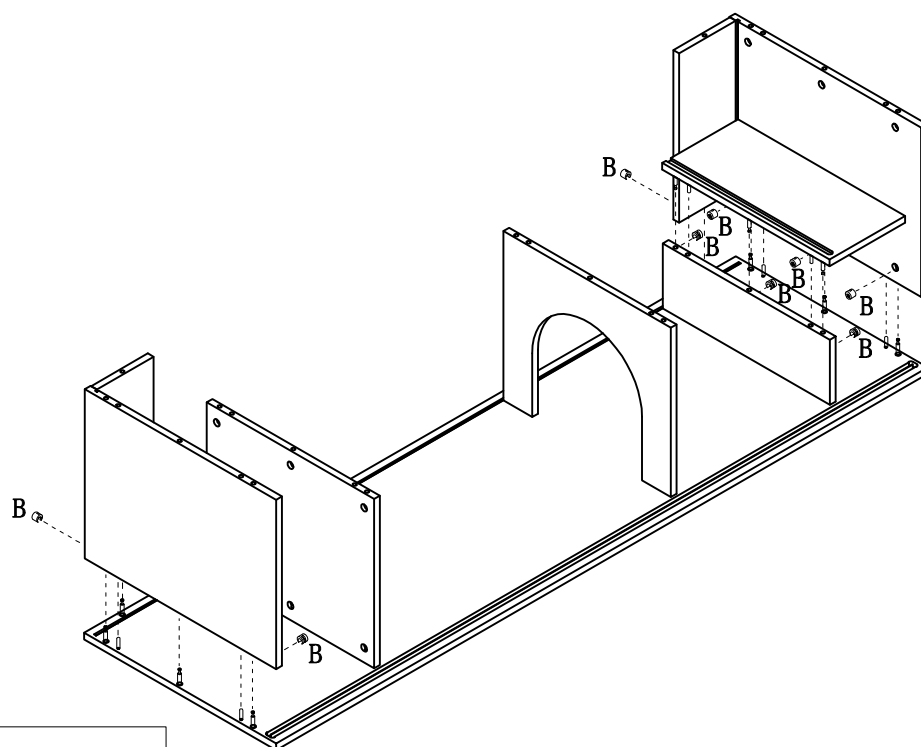

Step 2






Ø4*12mm


ⓔ x1pc





ⓕ x1pc

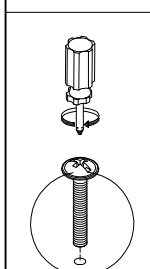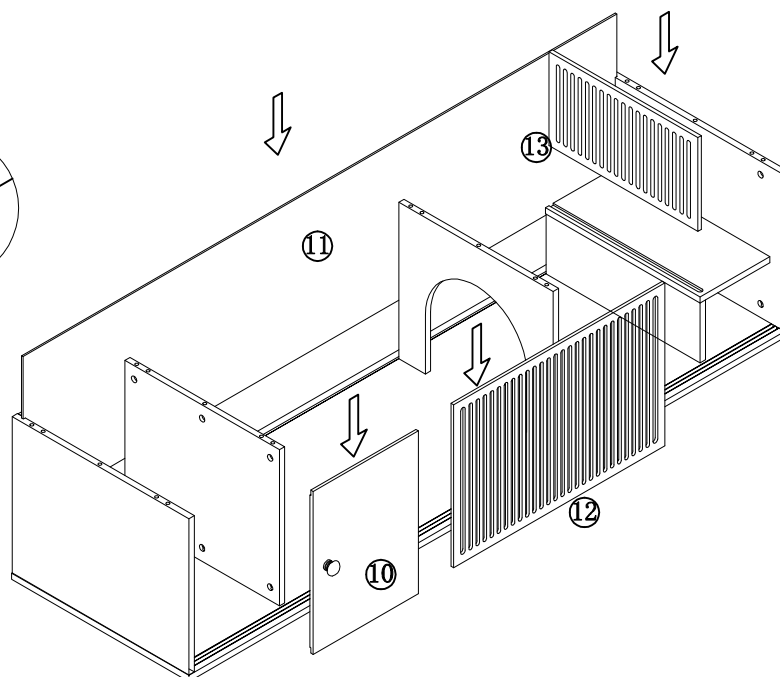
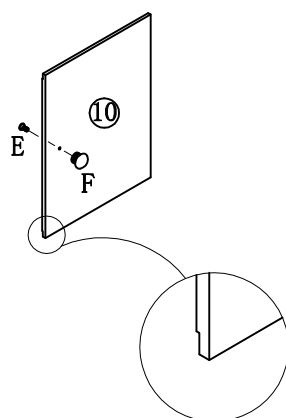


Step 1


	
M6*40mm	φ6*30mm
Ⓐ x14pcs	Ⓒ x8pcs



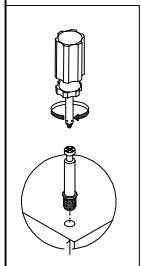
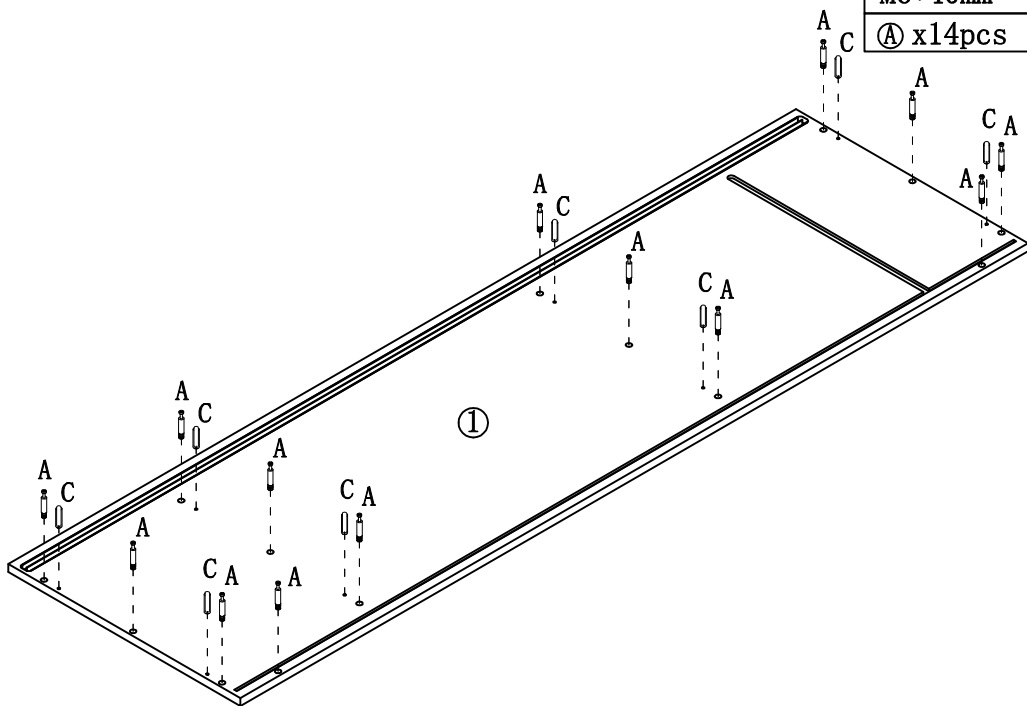



φ15*12mm
Ⓑ x14pcs

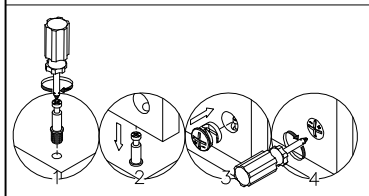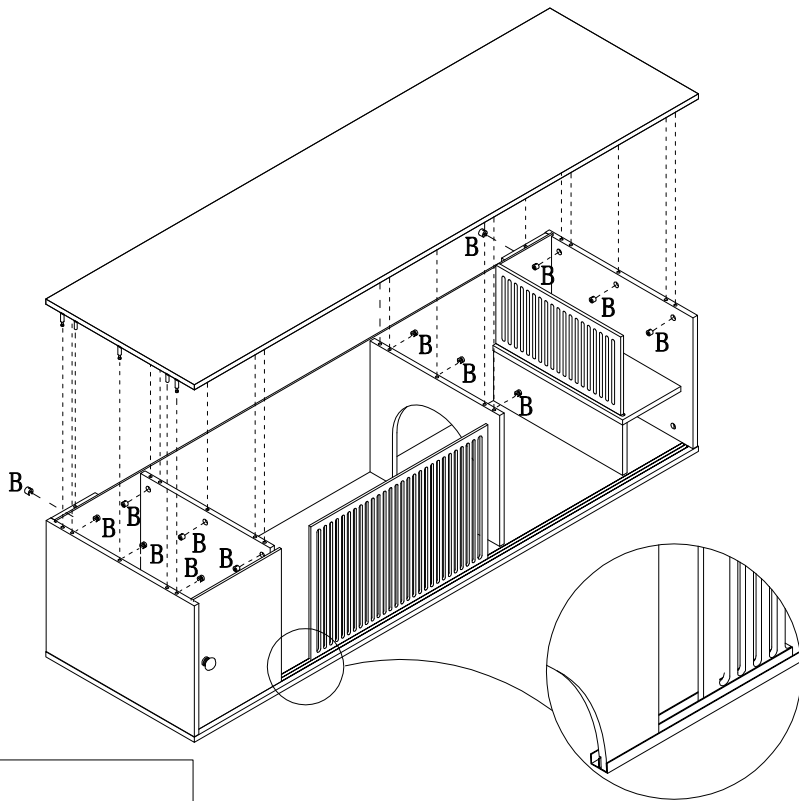


Step 1

	
M3. 5*14mm	
① x6pcs	② x6pcs

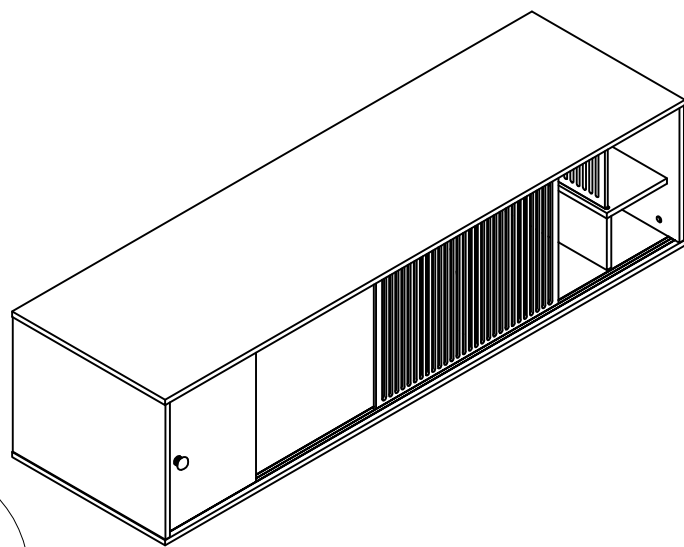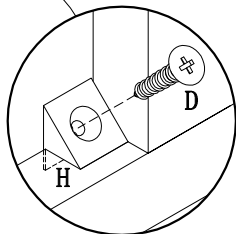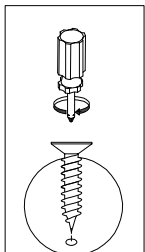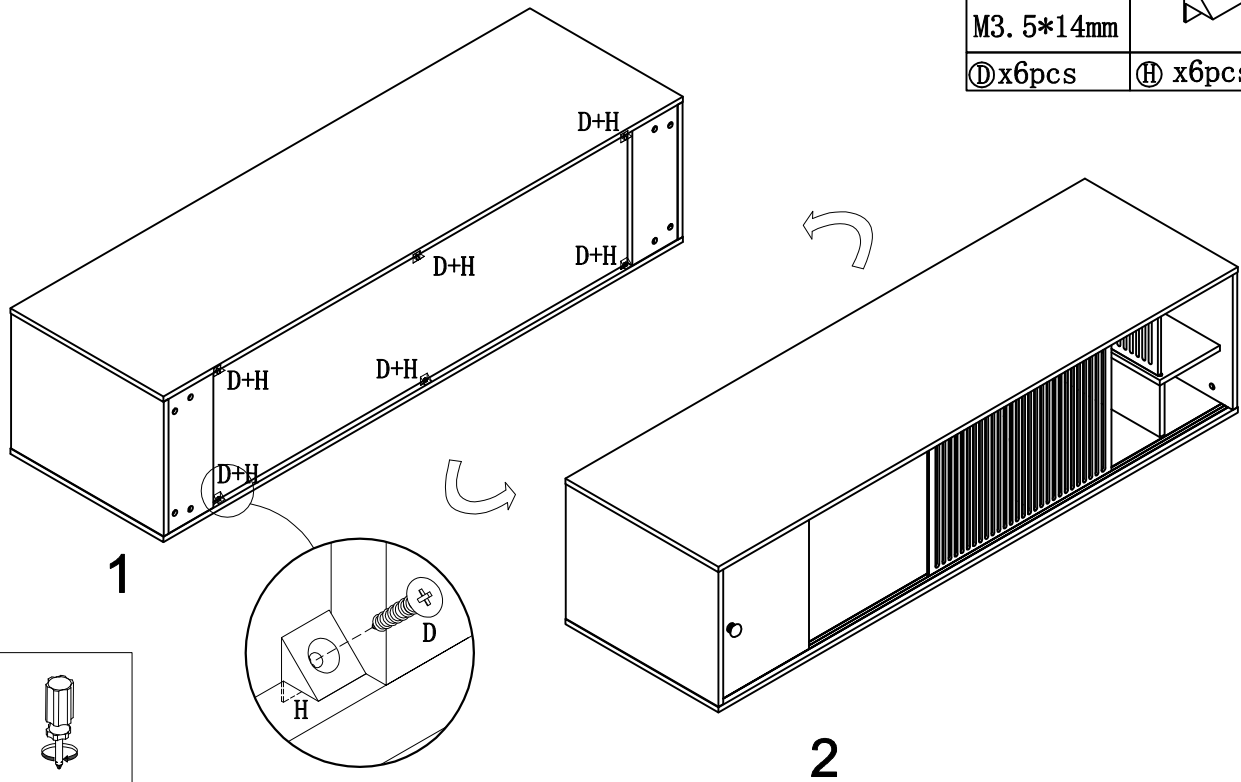


① x40pcs

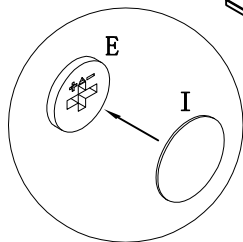

After installing the product, stick the number I on the perforated position