
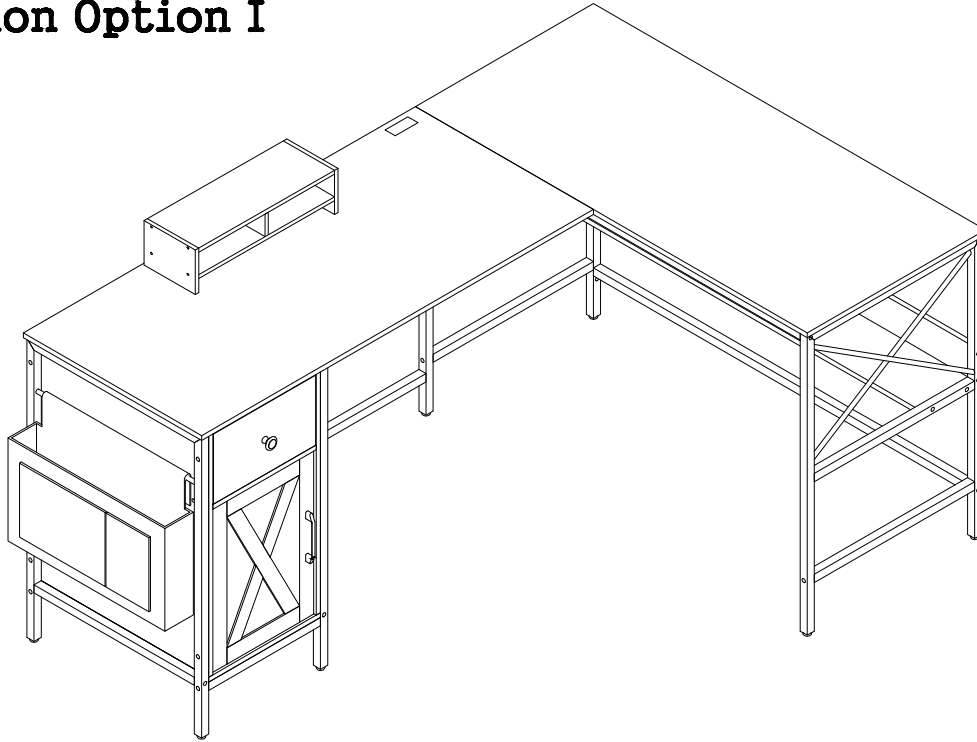


# Computer Desk

## Installation Option I


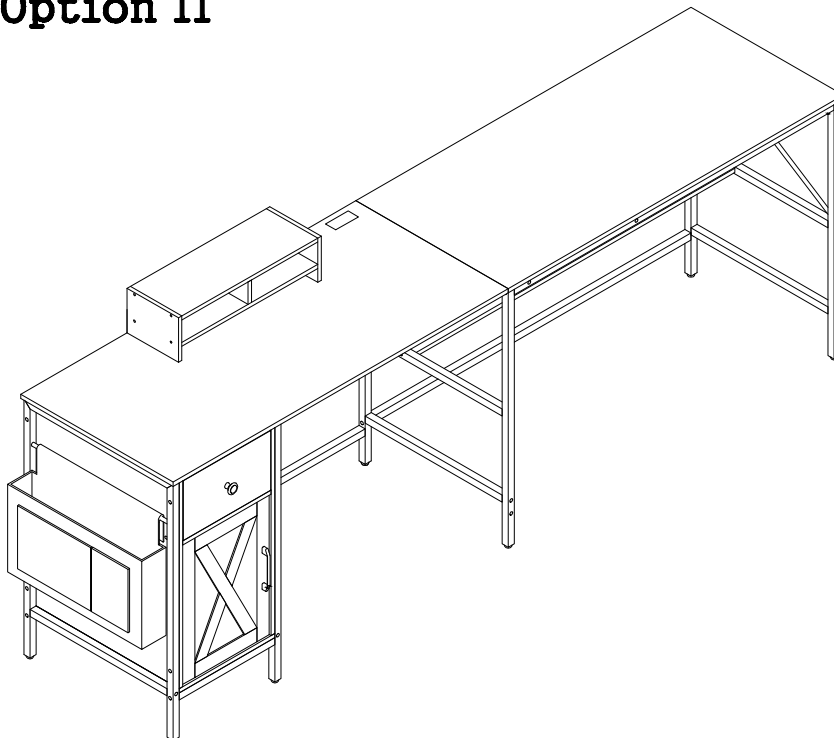


## Installation Option II















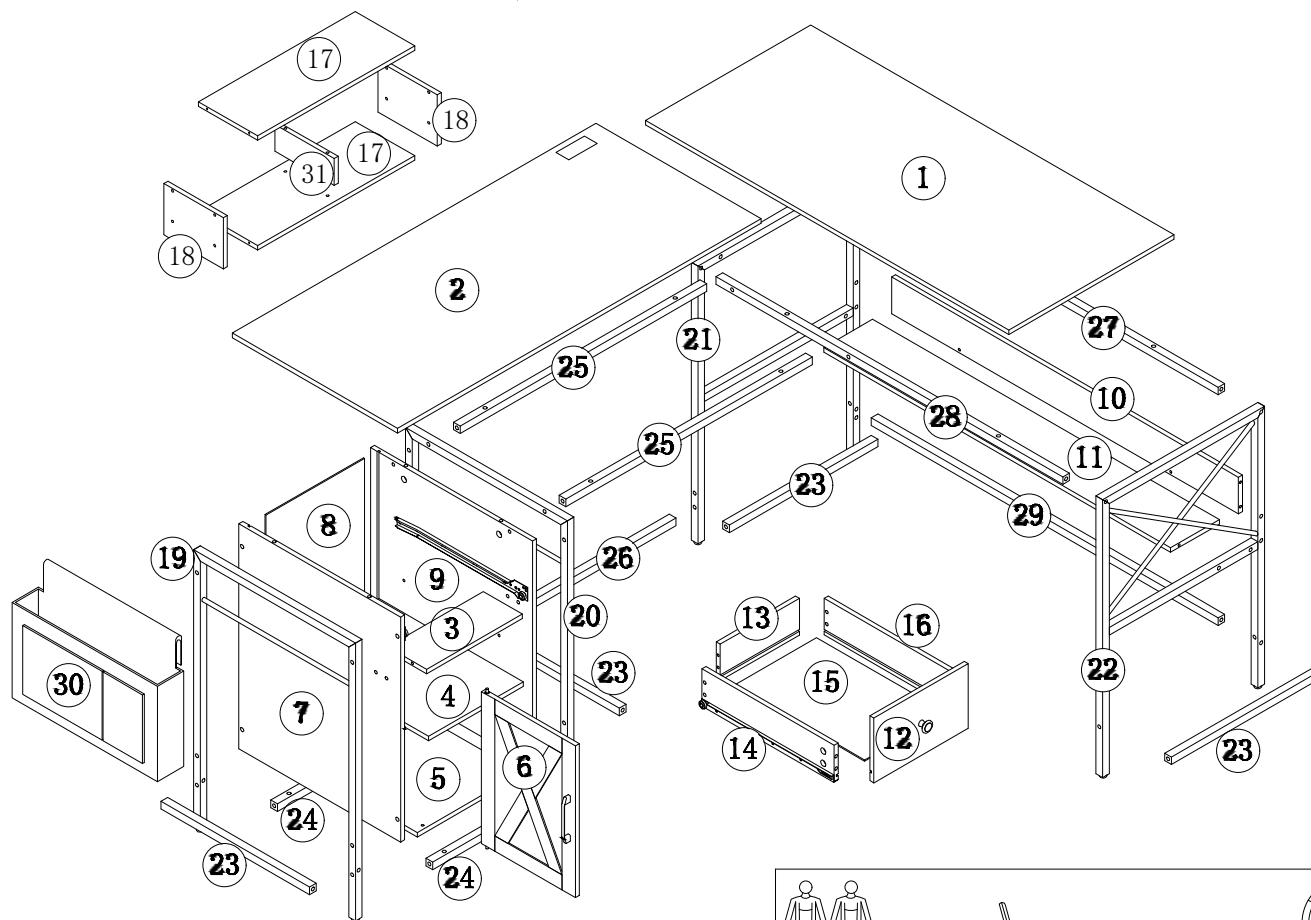







# ASSEMBLY INSTRUCTION
















**CAUTION:**When tightening the screws,tighten sequentially.  
Do not tighten any screws fully and then towards the next one.  
When every part is OK, then tighten all the screws.



















If you have any questions, please contact us  
Service Email:sedetahelp@gmail.com

<b>A</b> M6x25mm  X20+1	<b>B</b> M6x40mm  X24+1	<b>C</b>  X1	<b>D</b> ST5*40mm  X26+1	<b>E</b> M6*40mm  X 8 +1
<b>F</b> ST3.5*12mm  X10	<b>G</b> 6*30mm  X8	<b>H</b> M8  X8	<b>I</b> M4*16mm  X1	<b>J</b> M4*18mm  X2
			 X1	 X1
				X1
<b>K</b> M6  X6	<b>L</b> ST3*12mm  X4	<b>M</b> 16"  X1	<b>N</b> 16"  X1	<b>O</b> 16"  X1
	 X1		<b>P</b> 16"  X1	<b>Q</b>  X1


# ASSEMBLY INSTRUCTION
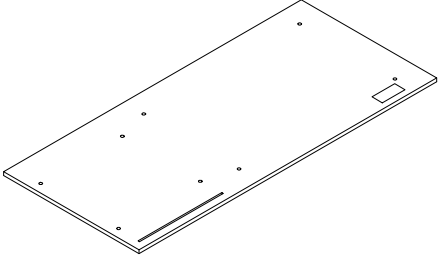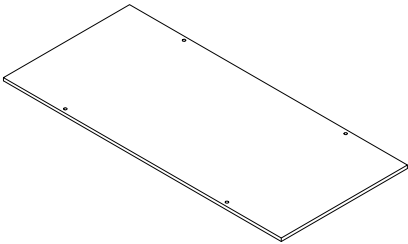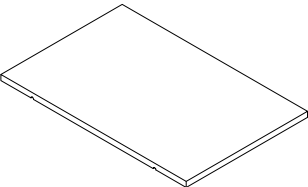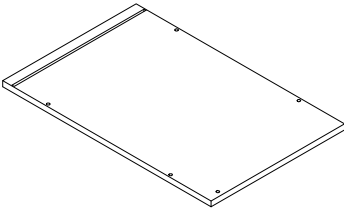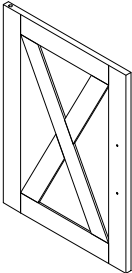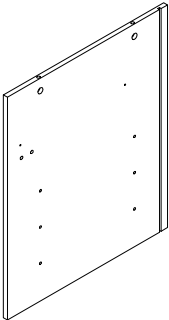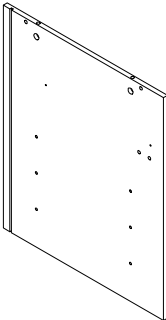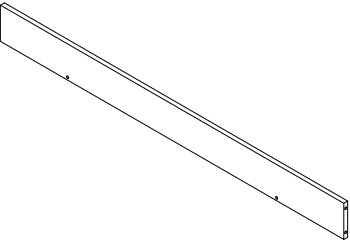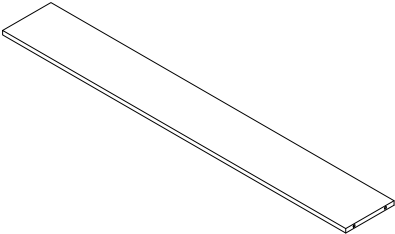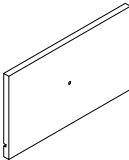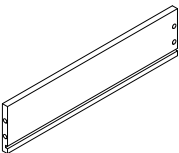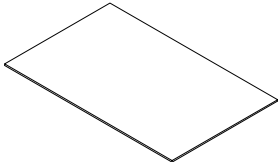
<p>1</p>  <p>X1</p>	<p>2</p>  <p>X1</p>	<p>3</p>  <p>X1</p>
<p>4</p>  <p>X1</p>	<p>5</p>  <p>X1</p>	<p>6</p>  <p>X1</p>
<p>7</p>  <p>X1</p>	<p>8</p>  <p>X1</p>	<p>9</p>  <p>X1</p>
<p>10</p>  <p>X1</p>	<p>11</p>  <p>X1</p>	<p>12</p>  <p>X1</p>
<p>13</p>  <p>X1</p>	<p>14</p>  <p>X1</p>	<p>15</p>  <p>X1</p>


# ASSEMBLY INSTRUCTION
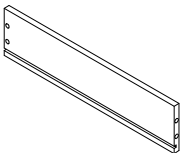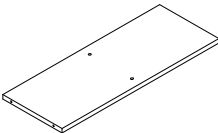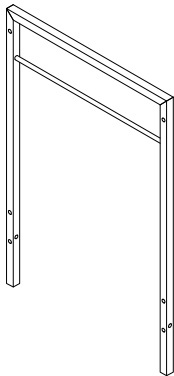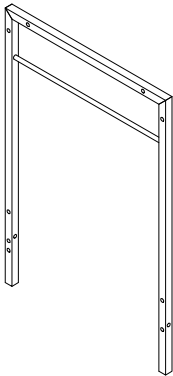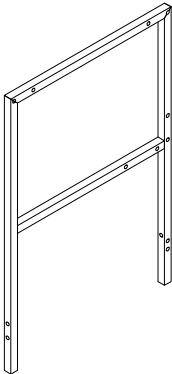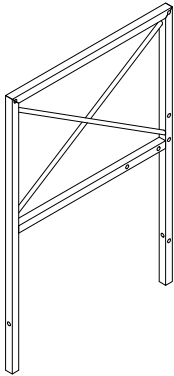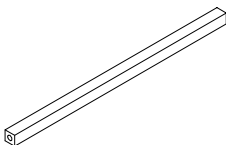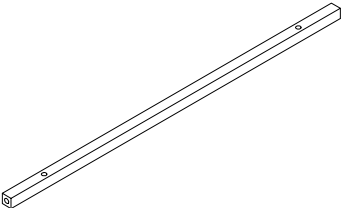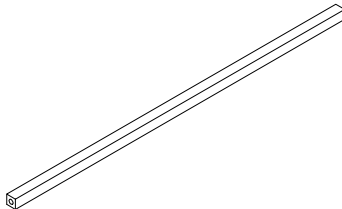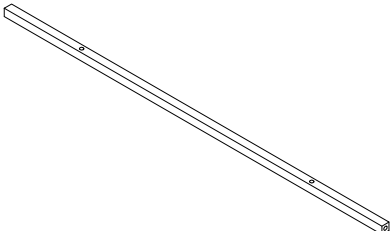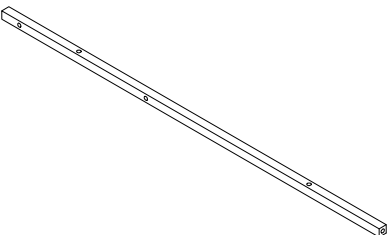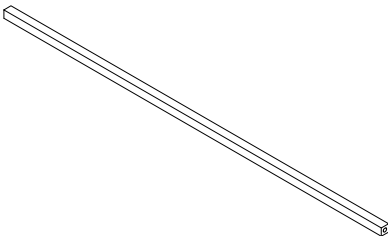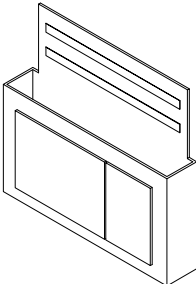
<div>16</div> <div></div> <div>X1</div>	<div>17</div> <div></div> <div>X2</div>	<div>18</div> <div></div> <div>X2</div>	
<div>19</div> <div></div> <div>X1</div>	<div>20</div> <div></div> <div>X1</div>	<div>21</div> <div></div> <div>X1</div>	
<div>22</div> <div></div> <div>X1</div>	<div>23</div> <div></div> <div>X4</div>	<div>24</div> <div></div> <div>X2</div>	
<div>25</div> <div></div> <div>X2</div>	<div>26</div> <div></div> <div>X1</div>	<div>27</div> <div></div> <div>X1</div>	
<div>28</div> <div></div> <div>X1</div>	<div>29</div> <div></div> <div>X1</div>	<div>30</div> <div></div> <div>X1</div>	<div>31</div> <div></div> <div>X1</div>


## 1.Matters needing attention

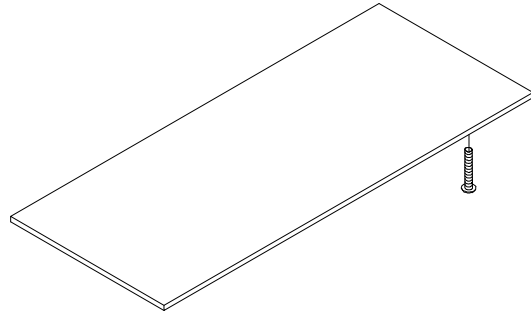

Be sure to use the proper screws to avoid damaging the parts

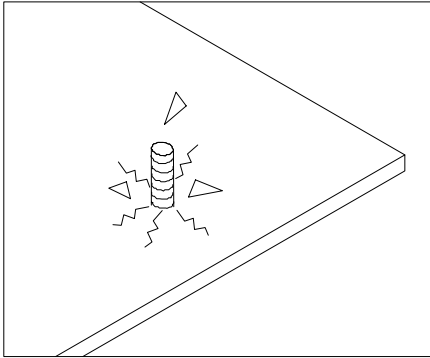


Wrong screws can cause the plank to crack

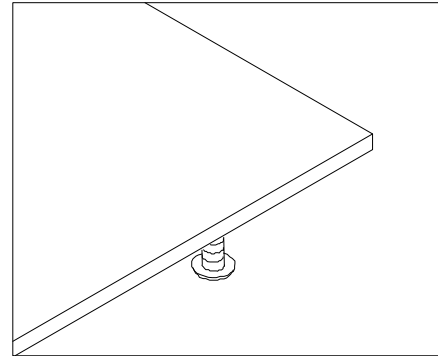


The right screw is the right size

## 2.Matters needing attention

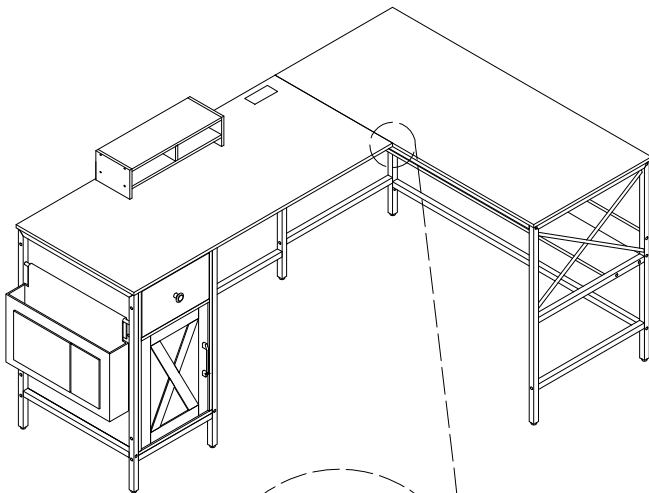

perfect

state 1


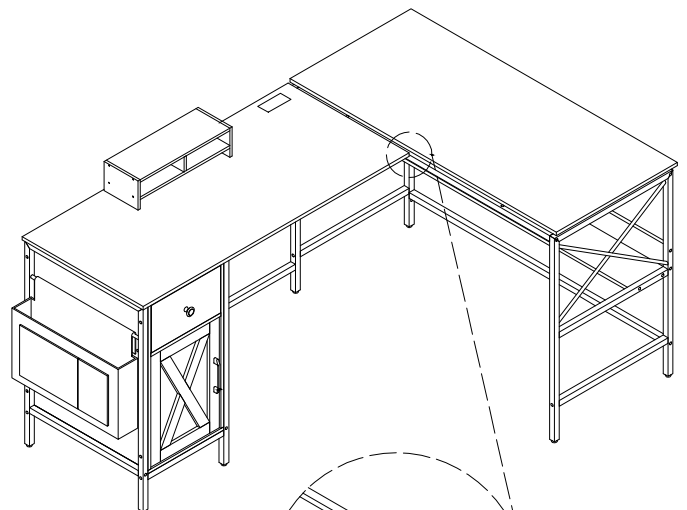


Flawed



state 2

If you encounter "state 2" during the installation process, please loosen the corresponding screws of each part in time, adjust slowly, and then slowly tighten all the screws after the adjustment is completed.

## STEP 1

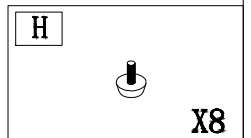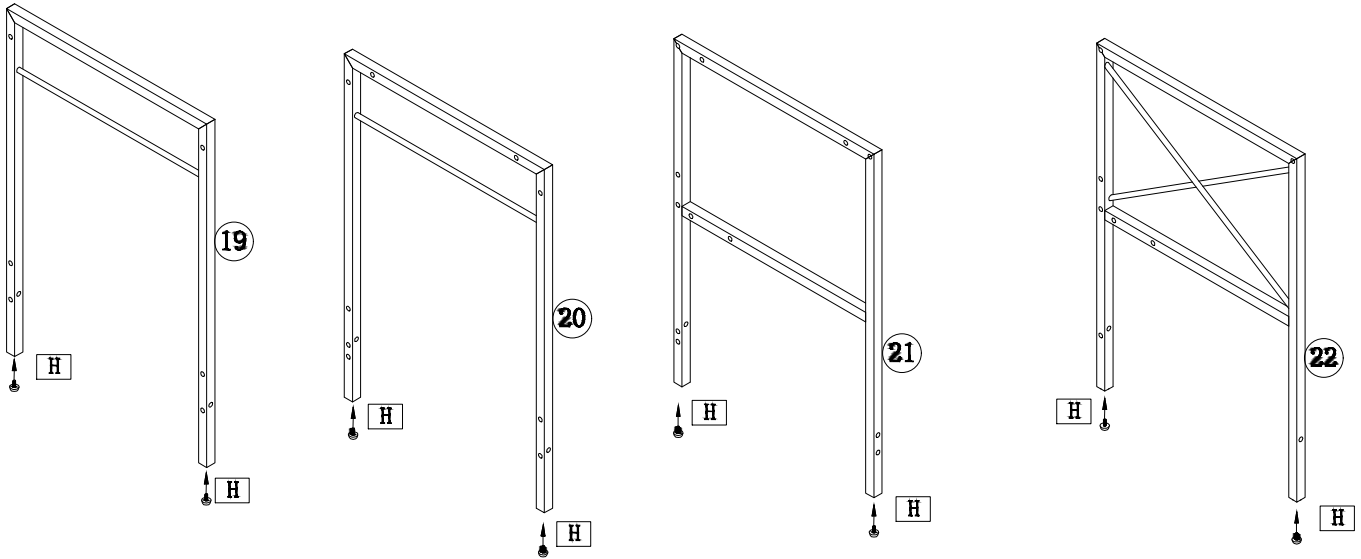


## STEP 2

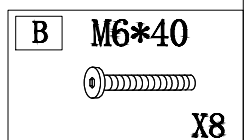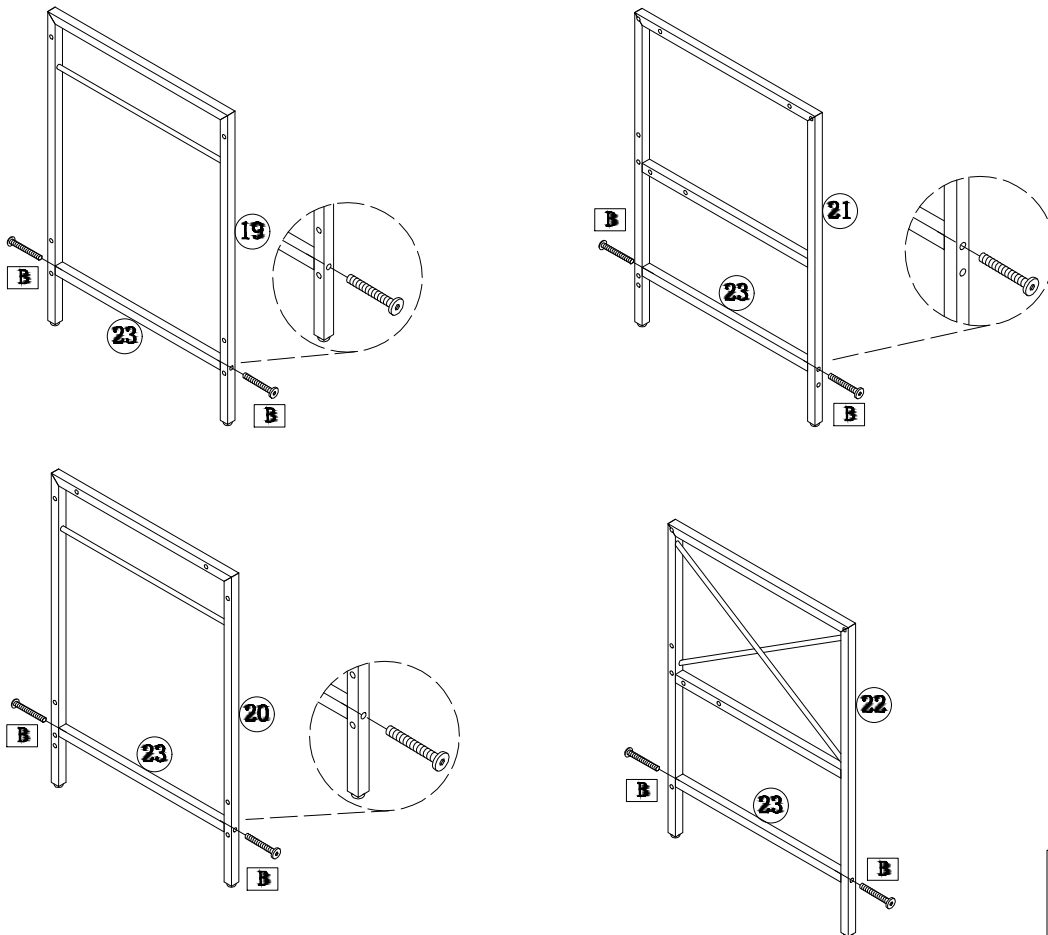


# ASSEMBLY INSTRUCTION

## STEP 3

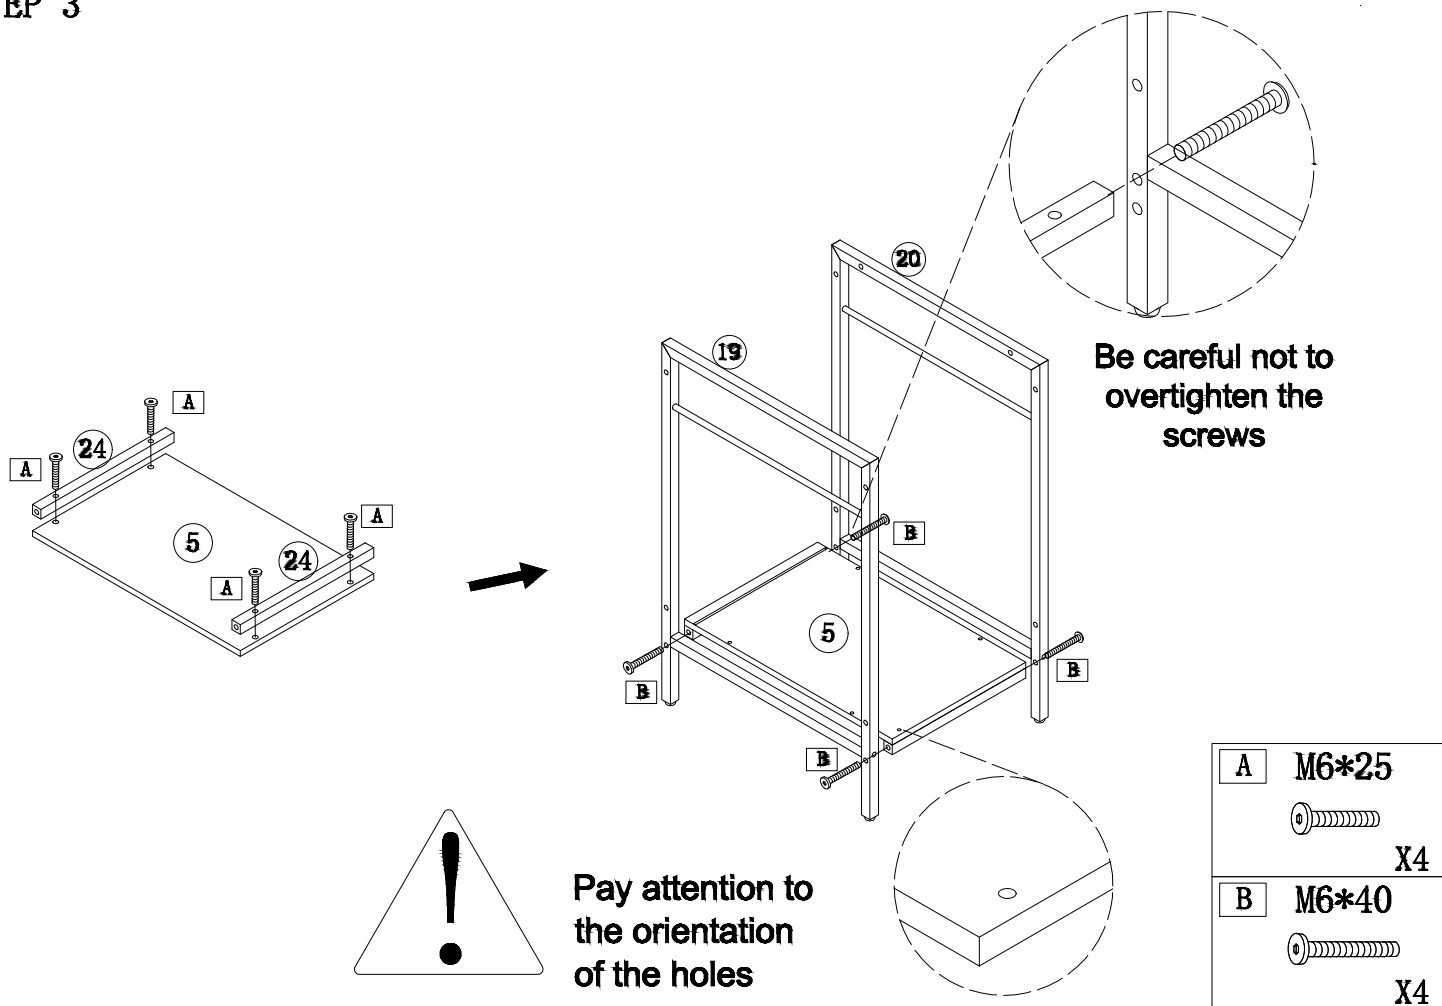


## STEP 4

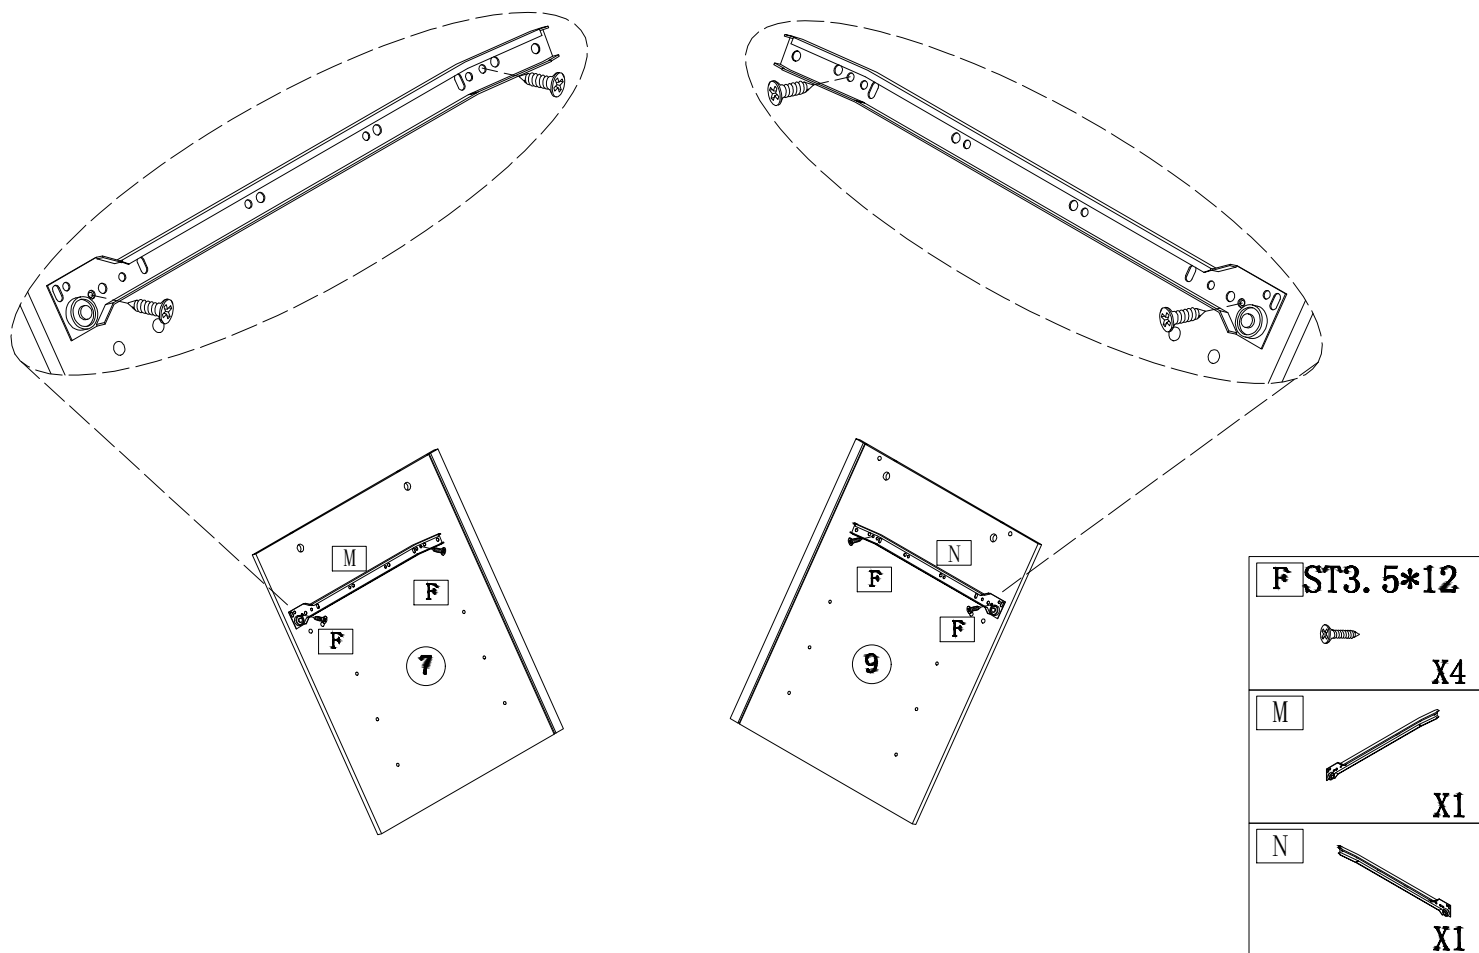


# ASSEMBLY INSTRUCTION

## STEP 5

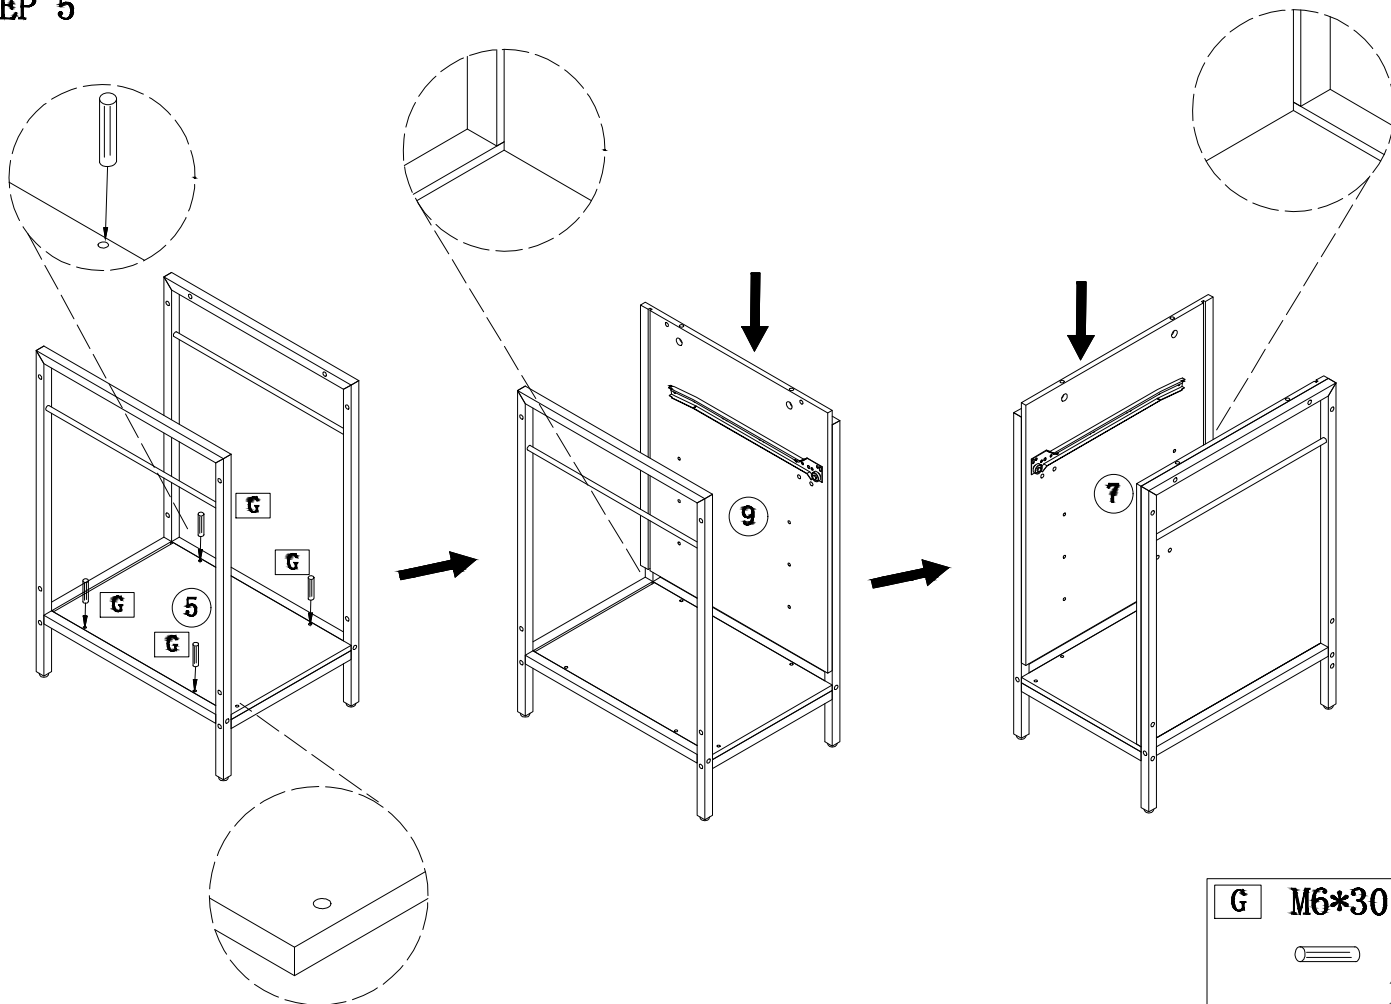

## STEP 6




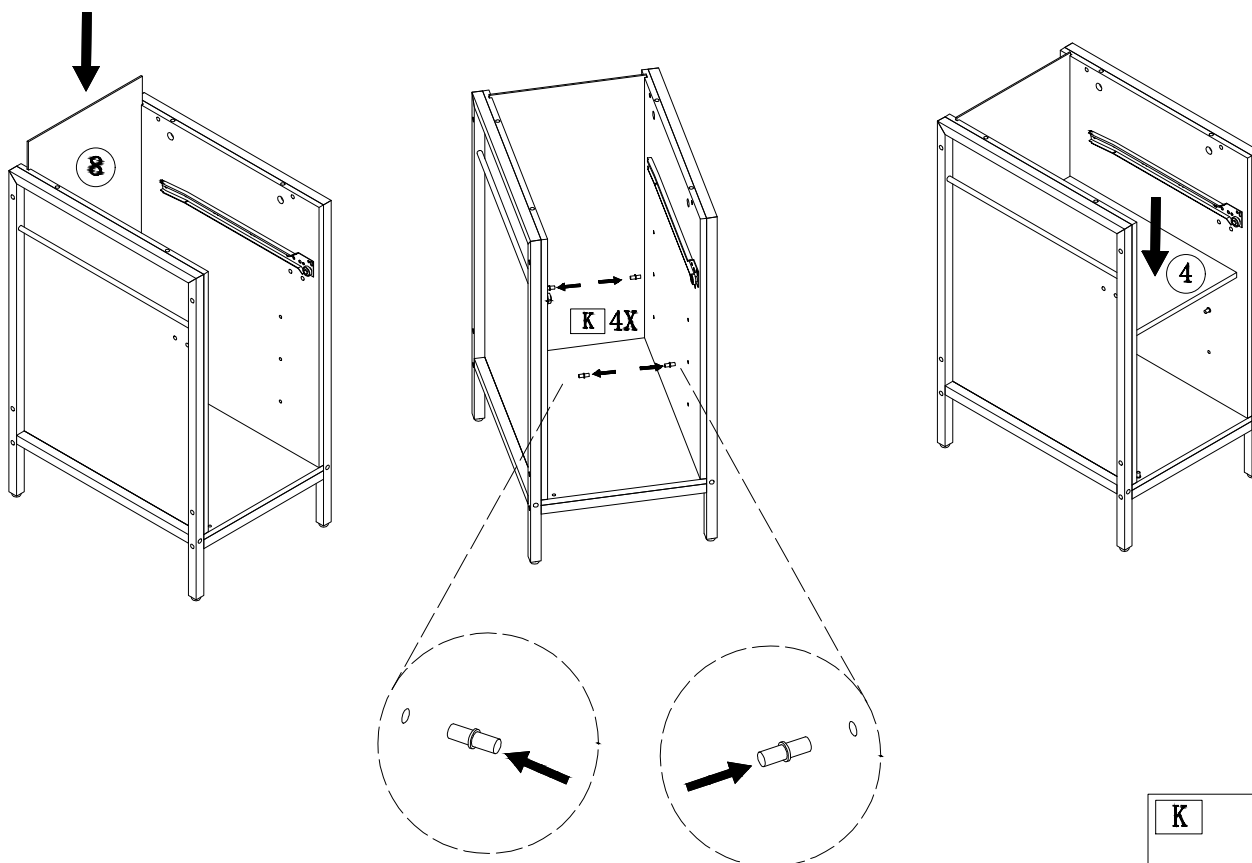




# ASSEMBLY INSTRUCTION




## STEP 7

We need to divide  
accessory L into two.

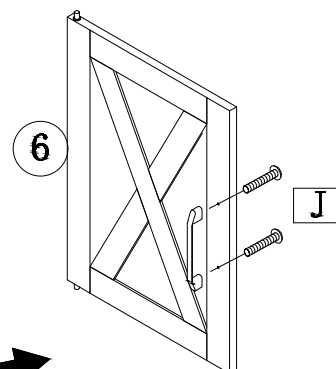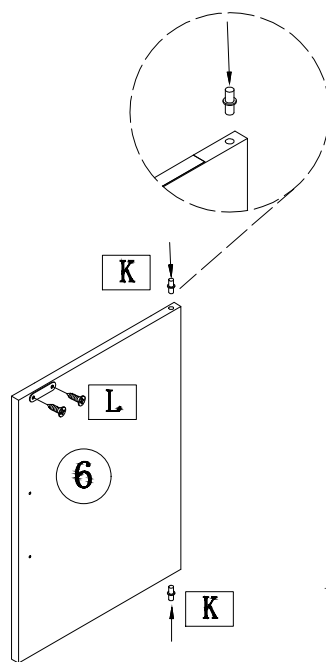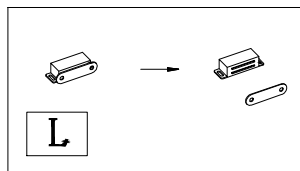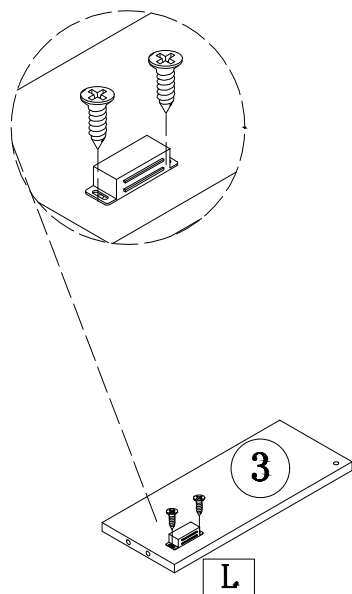

K	J M4*18
	X1
X2	L ST3*12
	X4


## STEP 8

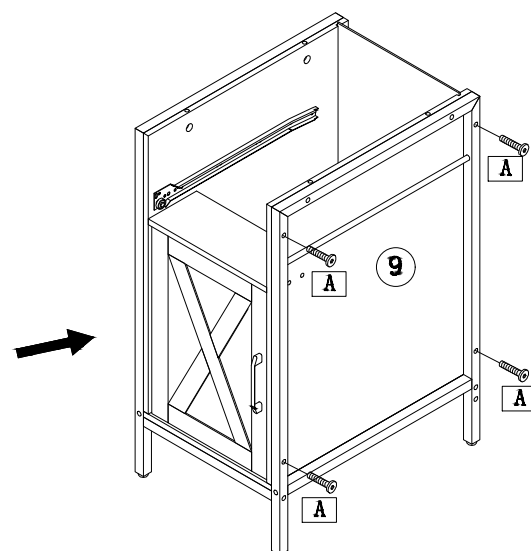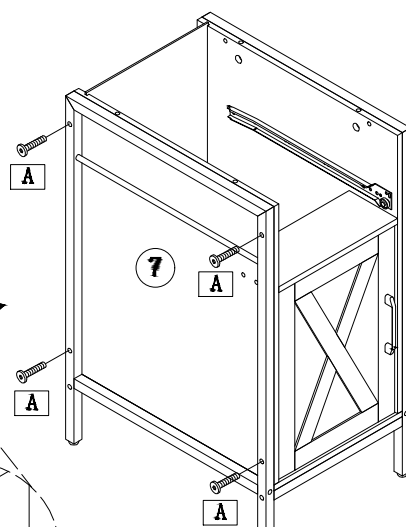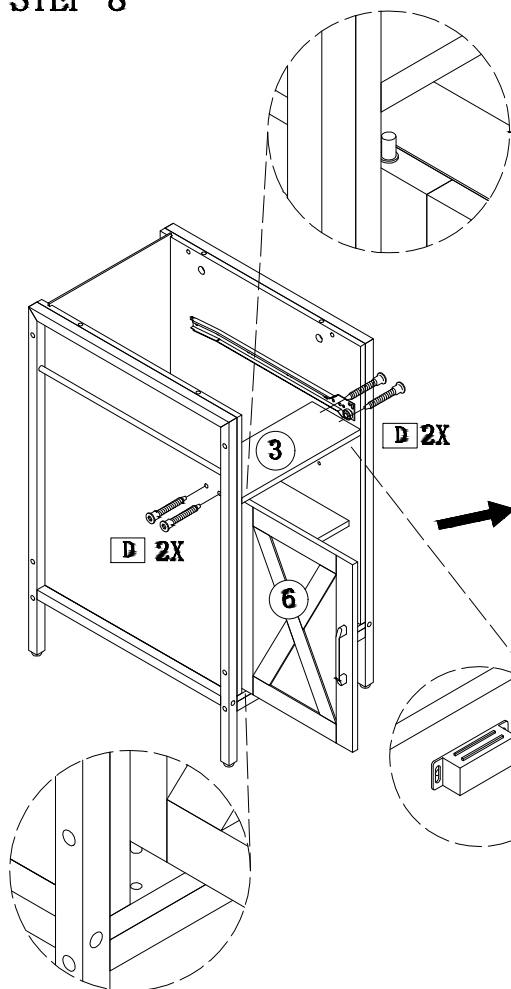


A	M6*25
	X8
D	ST5*40
	X4

# ASSEMBLY INSTRUCTION

## STEP 9

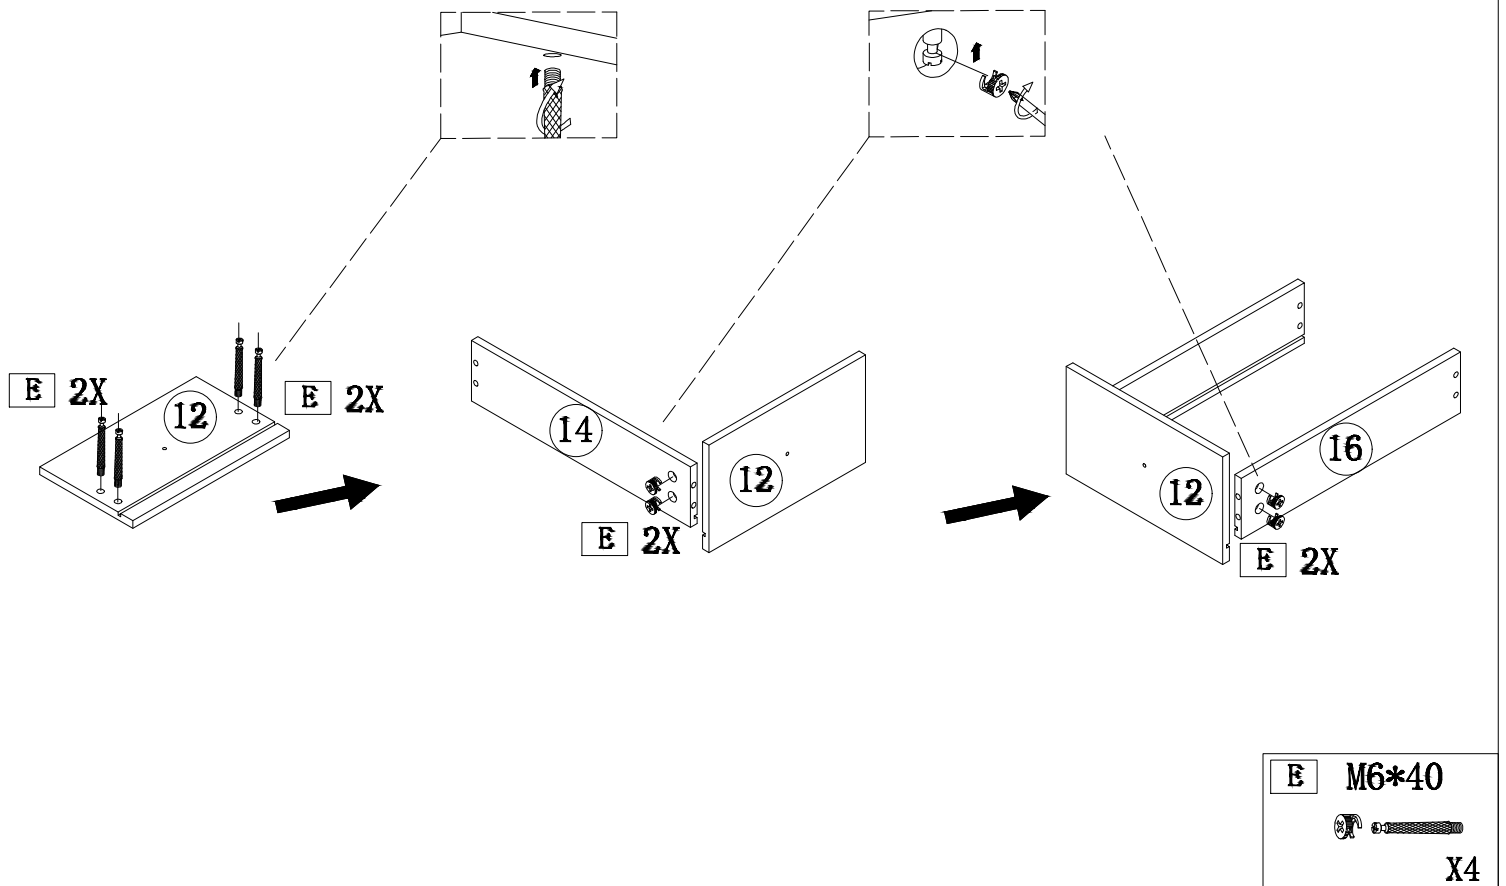


## STEP 10

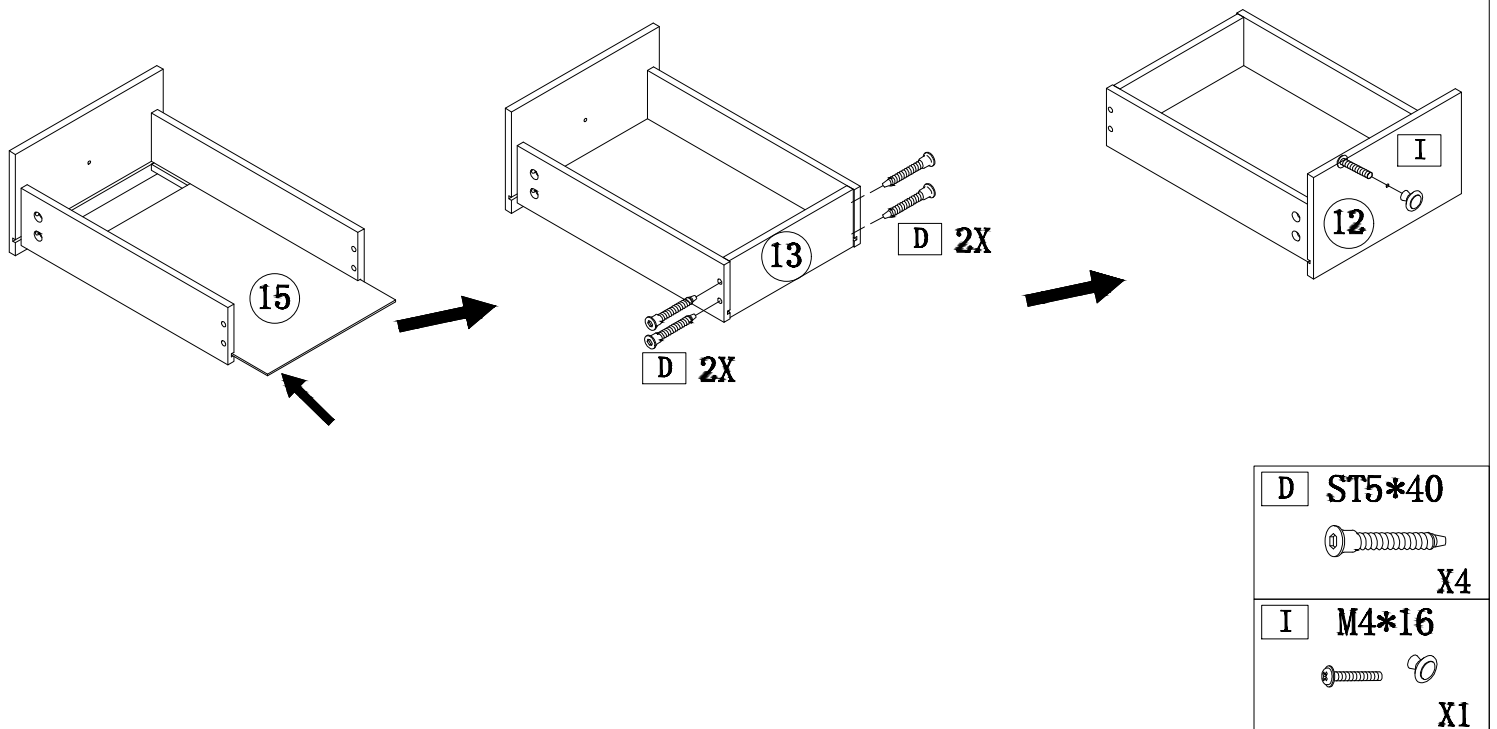

# ASSEMBLY INSTRUCTION

## STEP 11

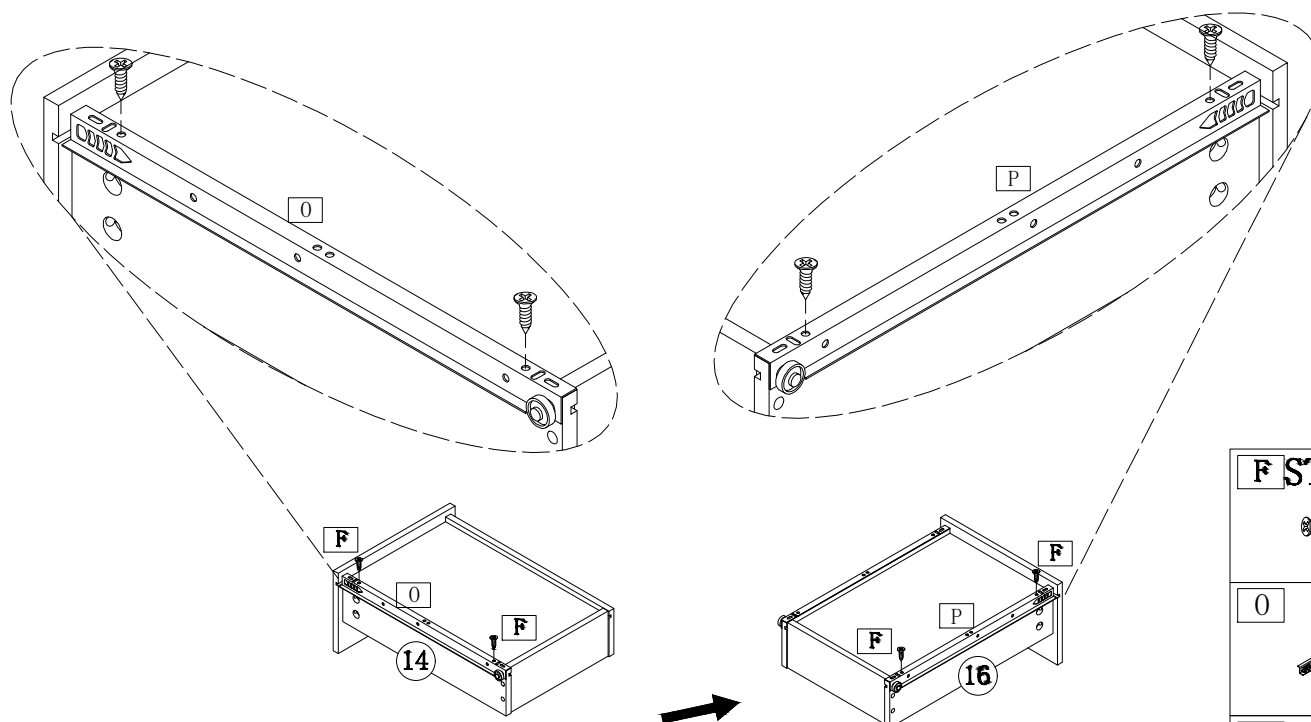

**F** ST3.5\*12



X4

**O**




X1

**P**




X1


## STEP 12

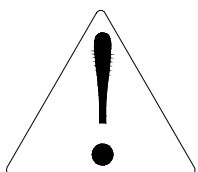

Pay attention to  
the orientation  
of the holes

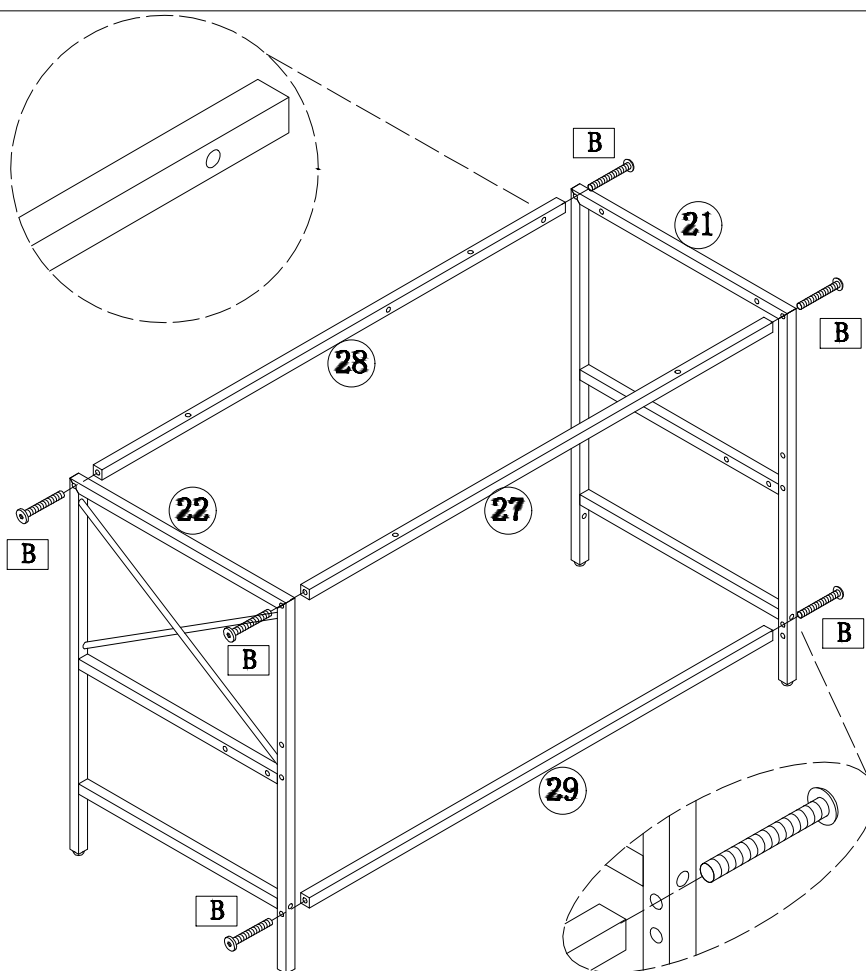


**B** M6\*40




X6

# ASSEMBLY INSTRUCTION

## STEP 13


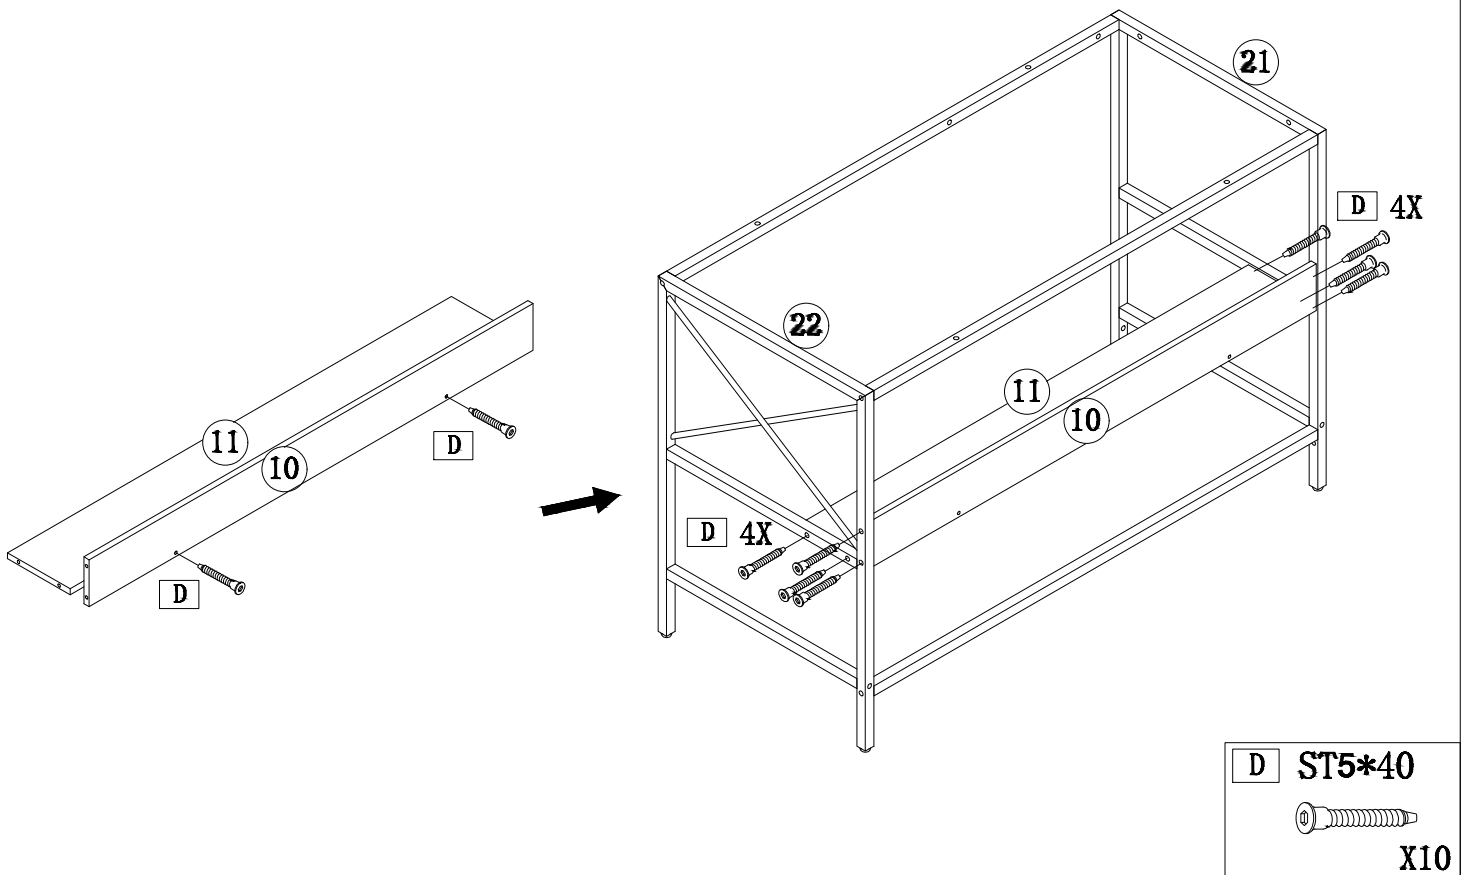


## STEP 14

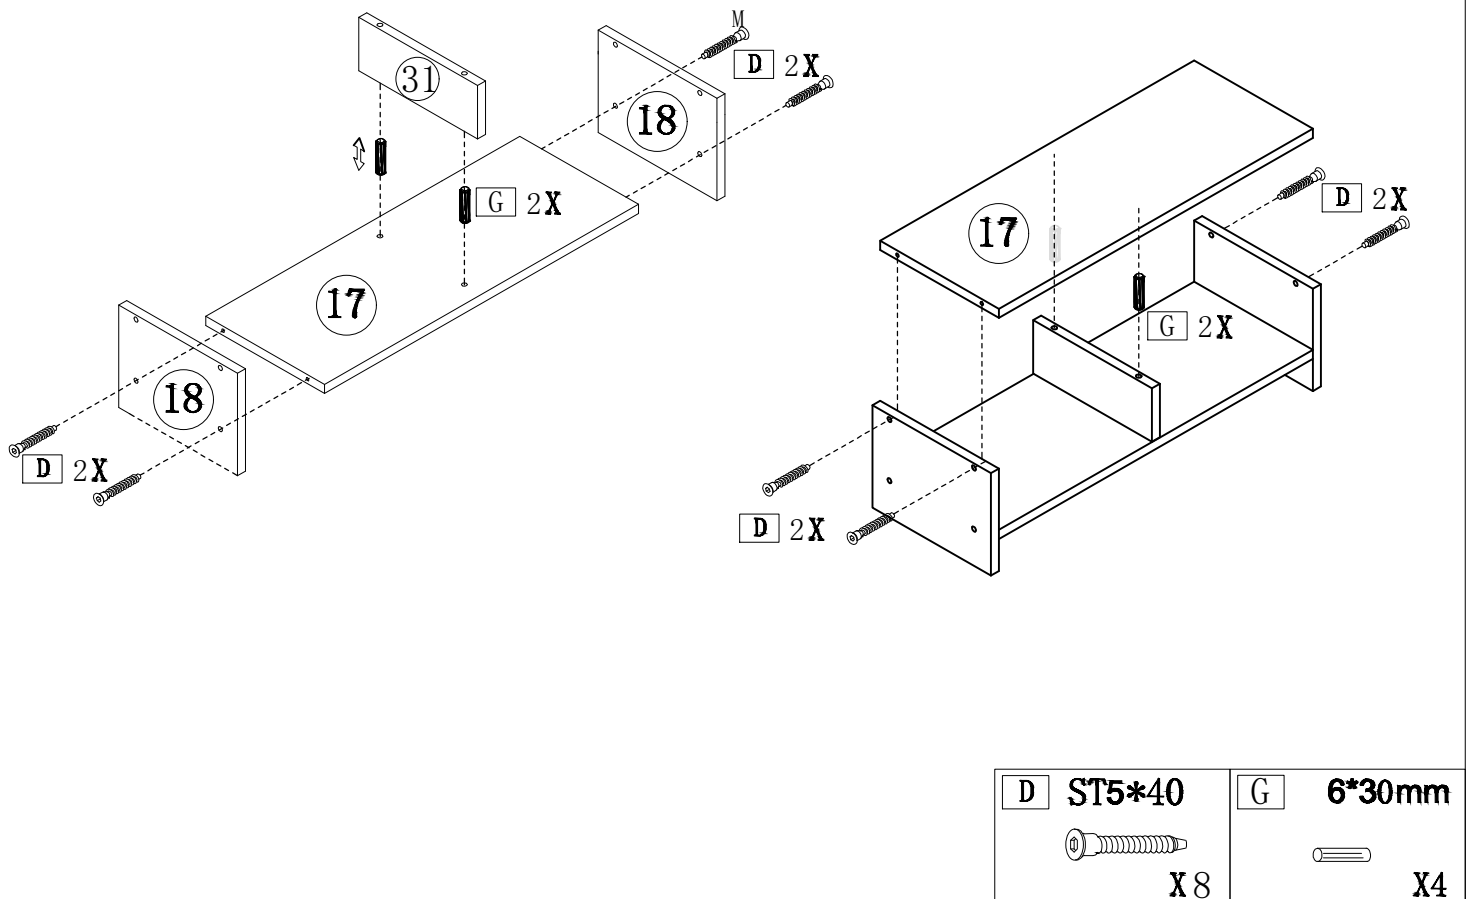


# ASSEMBLY INSTRUCTION

## STEP 15-1

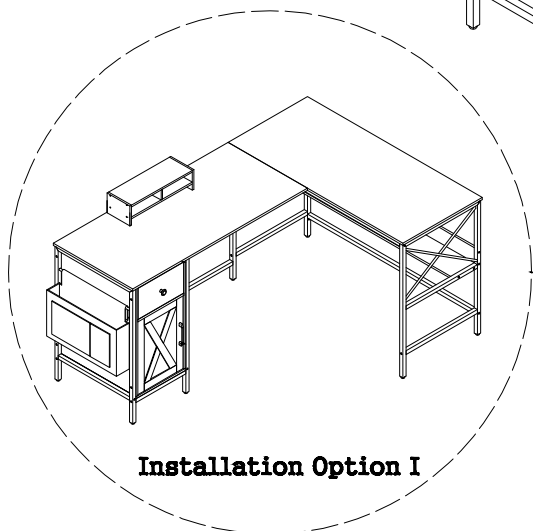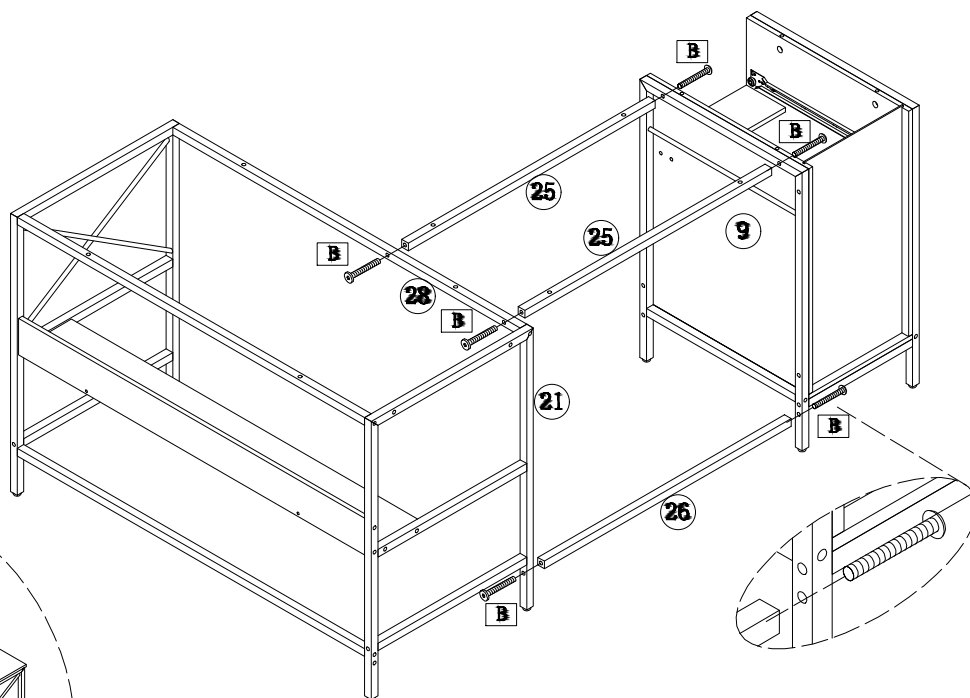


Installation Option I

B M6\*40




X6

## STEP 16-1

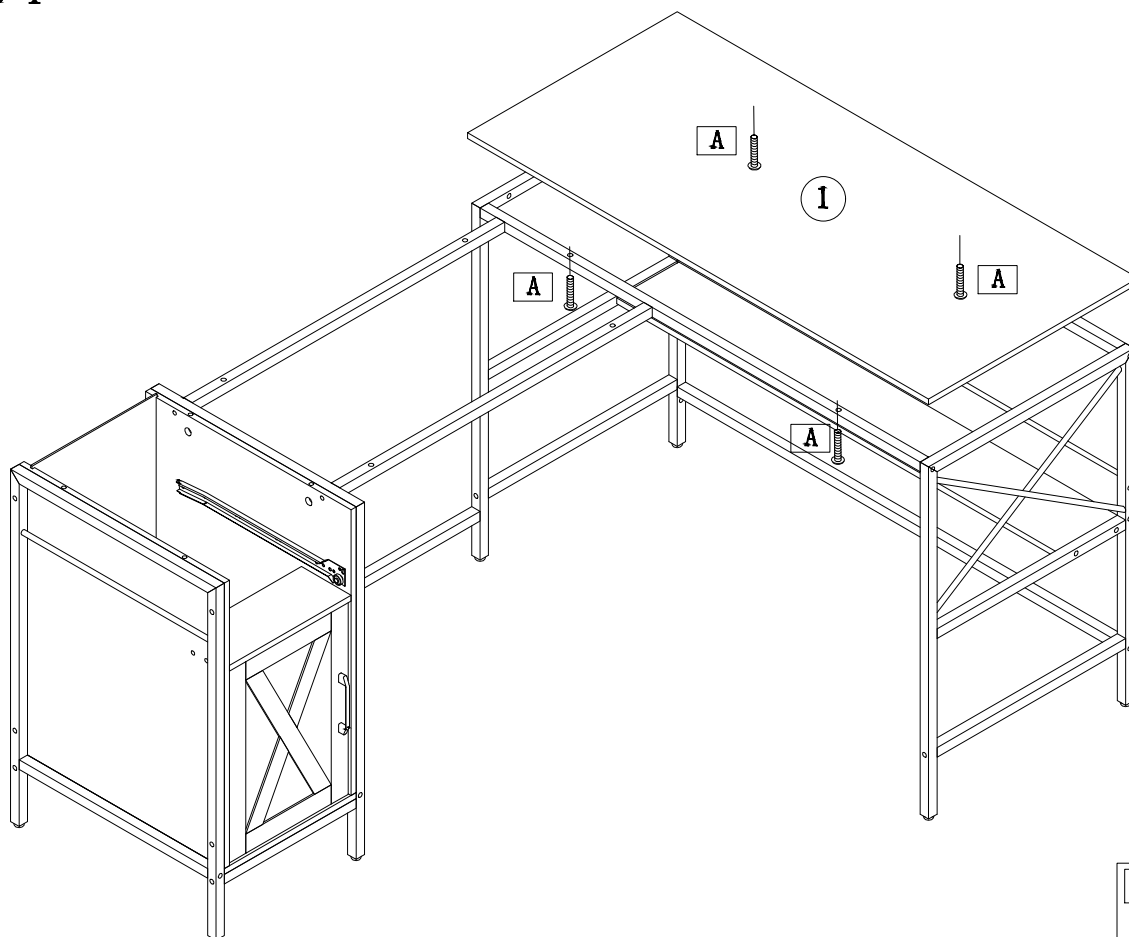


A M6\*25




X4

# ASSEMBLY INSTRUCTION

## STEP 17-1


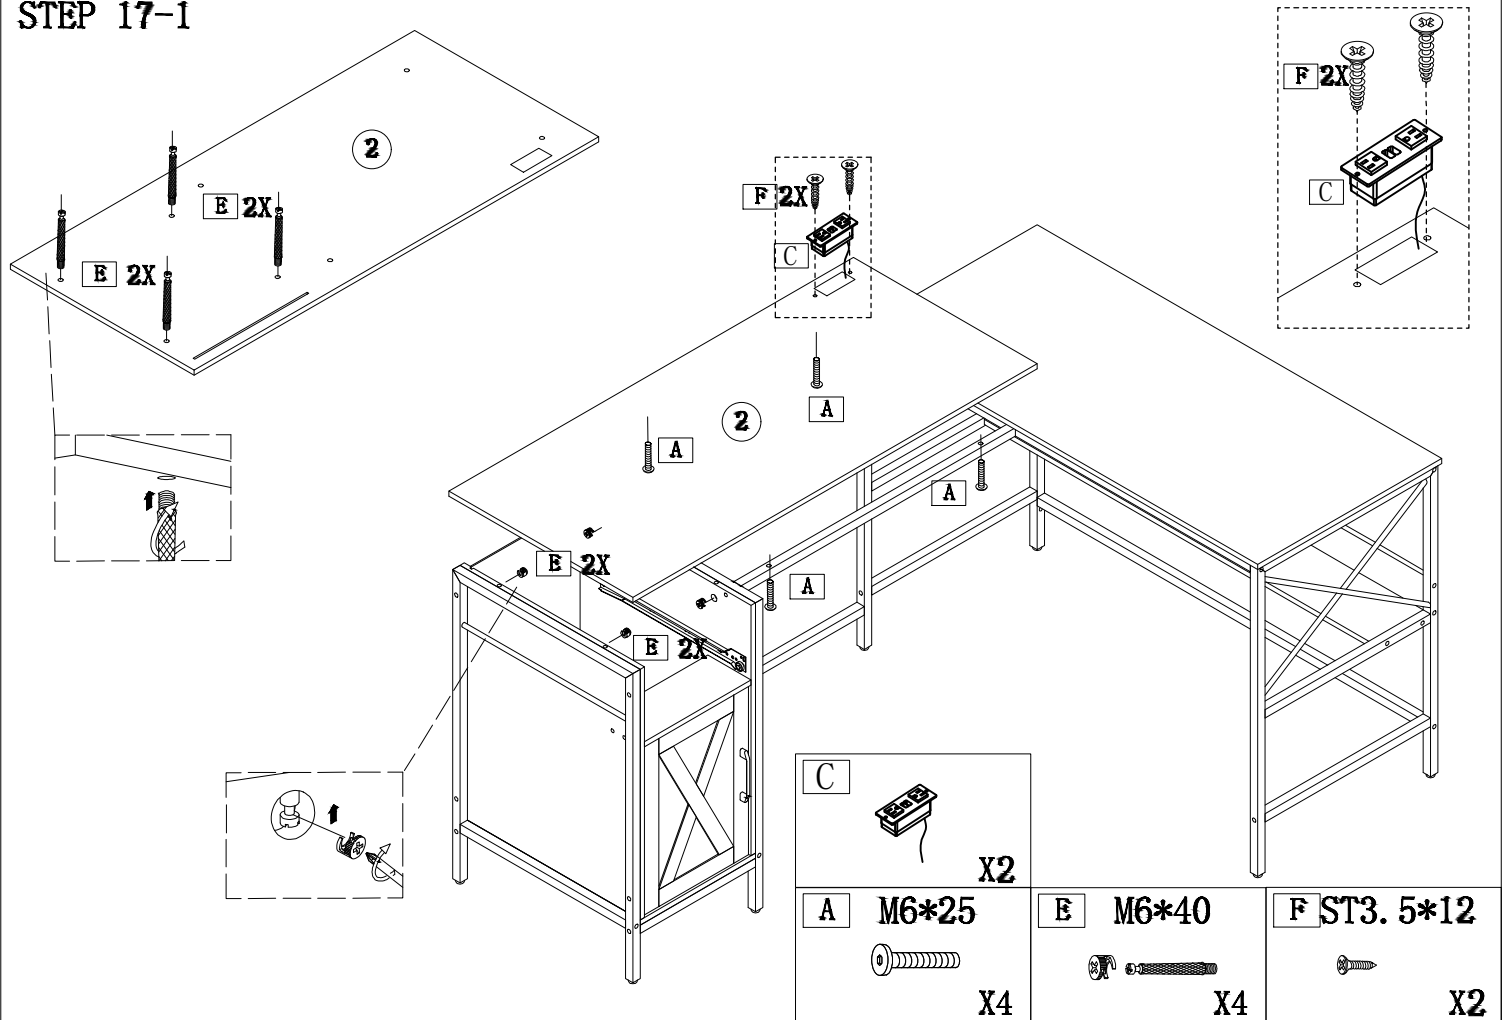



## STEP 18-1

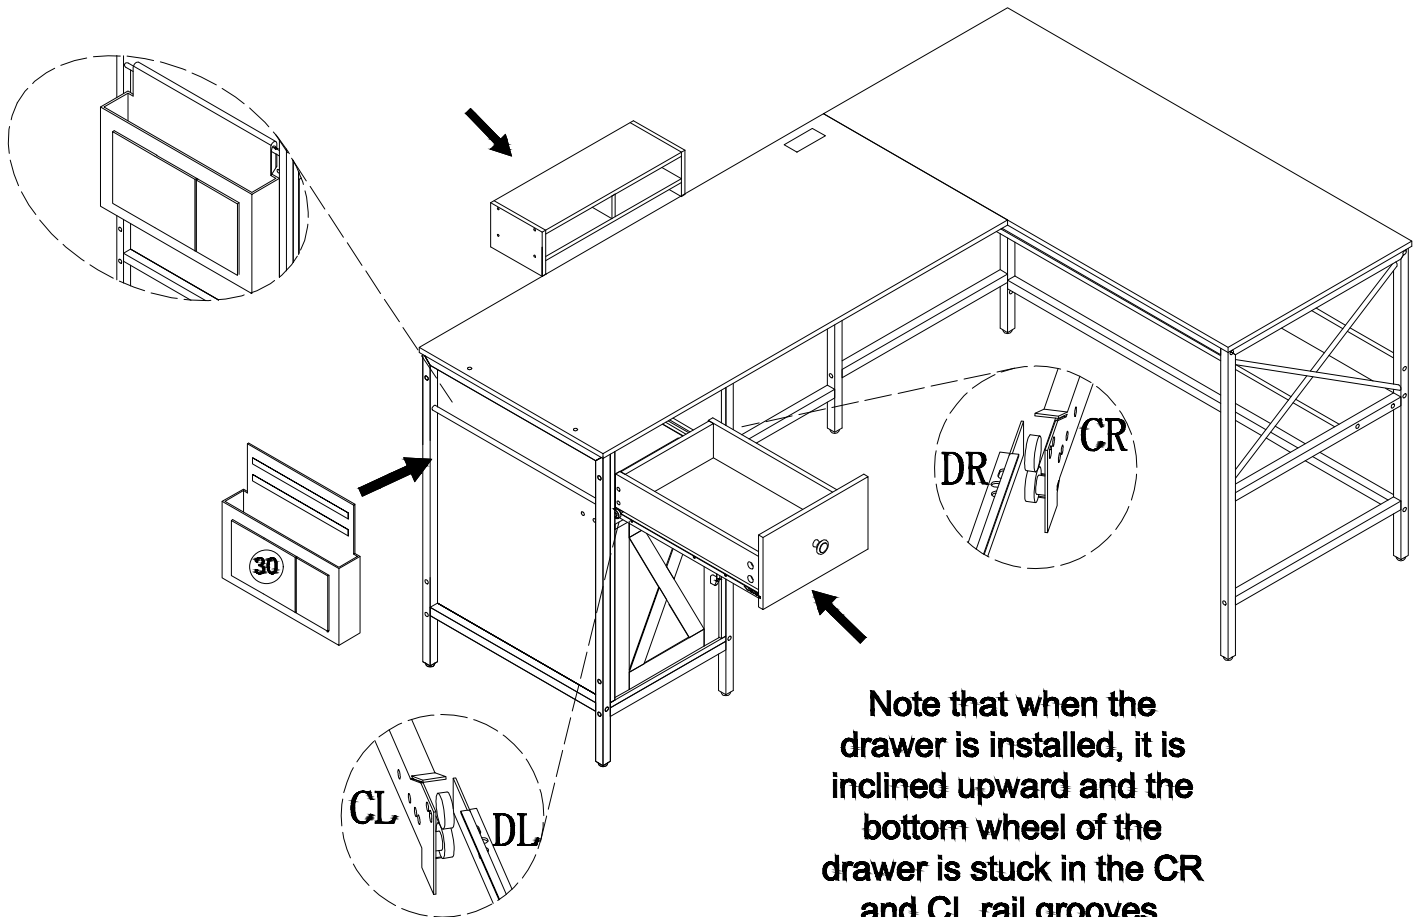


# ASSEMBLY INSTRUCTION


## STEP 15-2

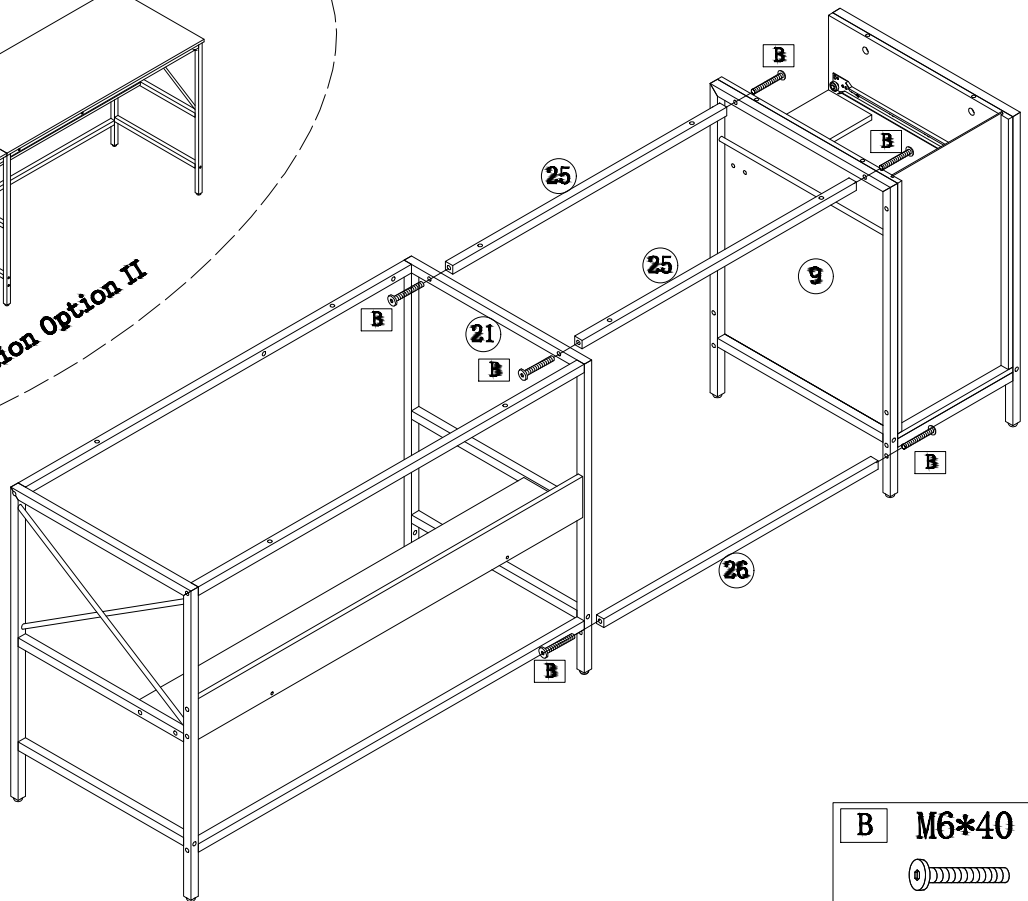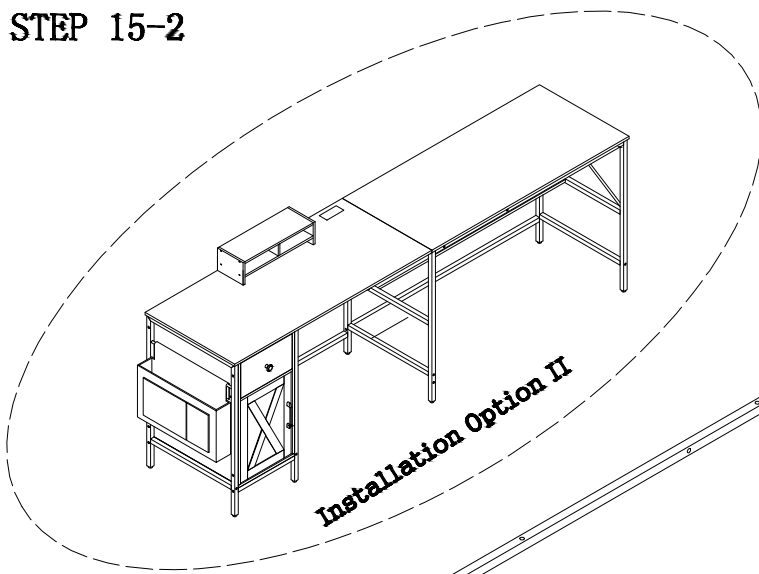

**B** M6\*40  
  
 X6


## STEP 16-2

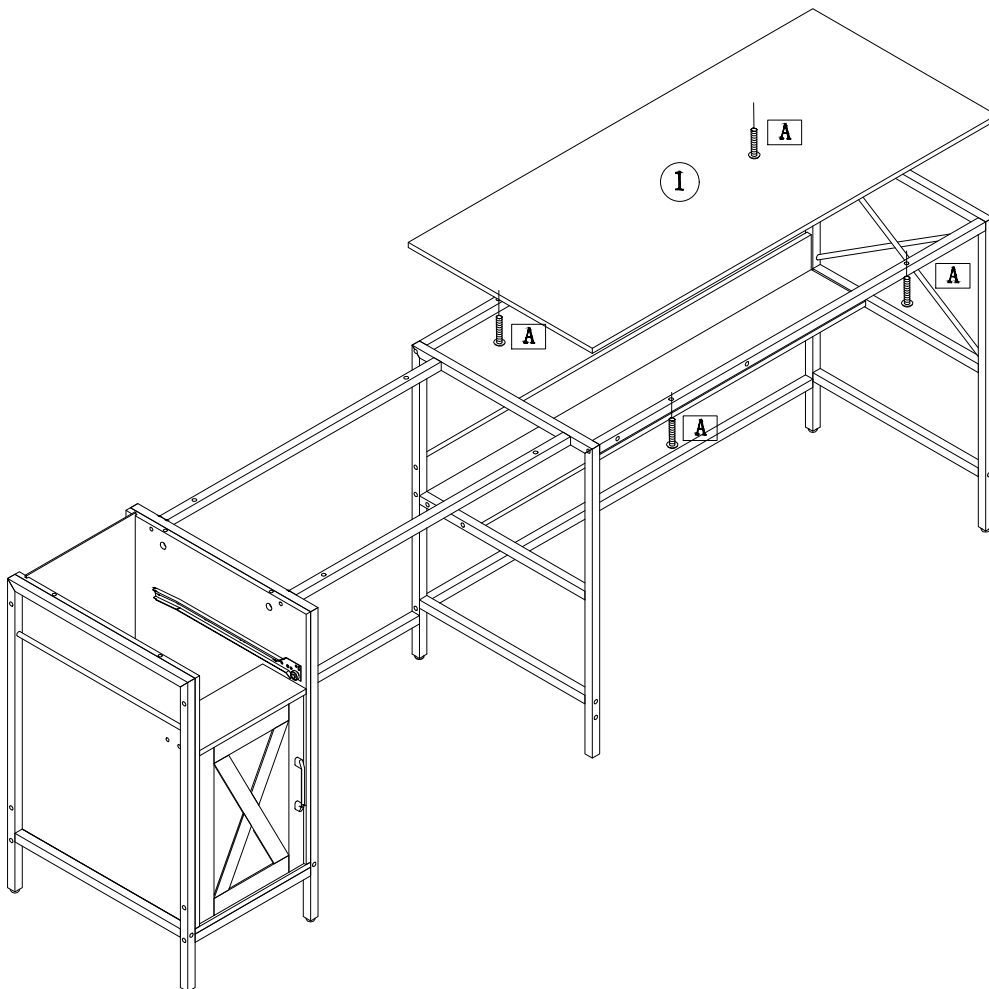

**A** M6\*25  
  
 X4

# ASSEMBLY INSTRUCTION

## STEP 17-2

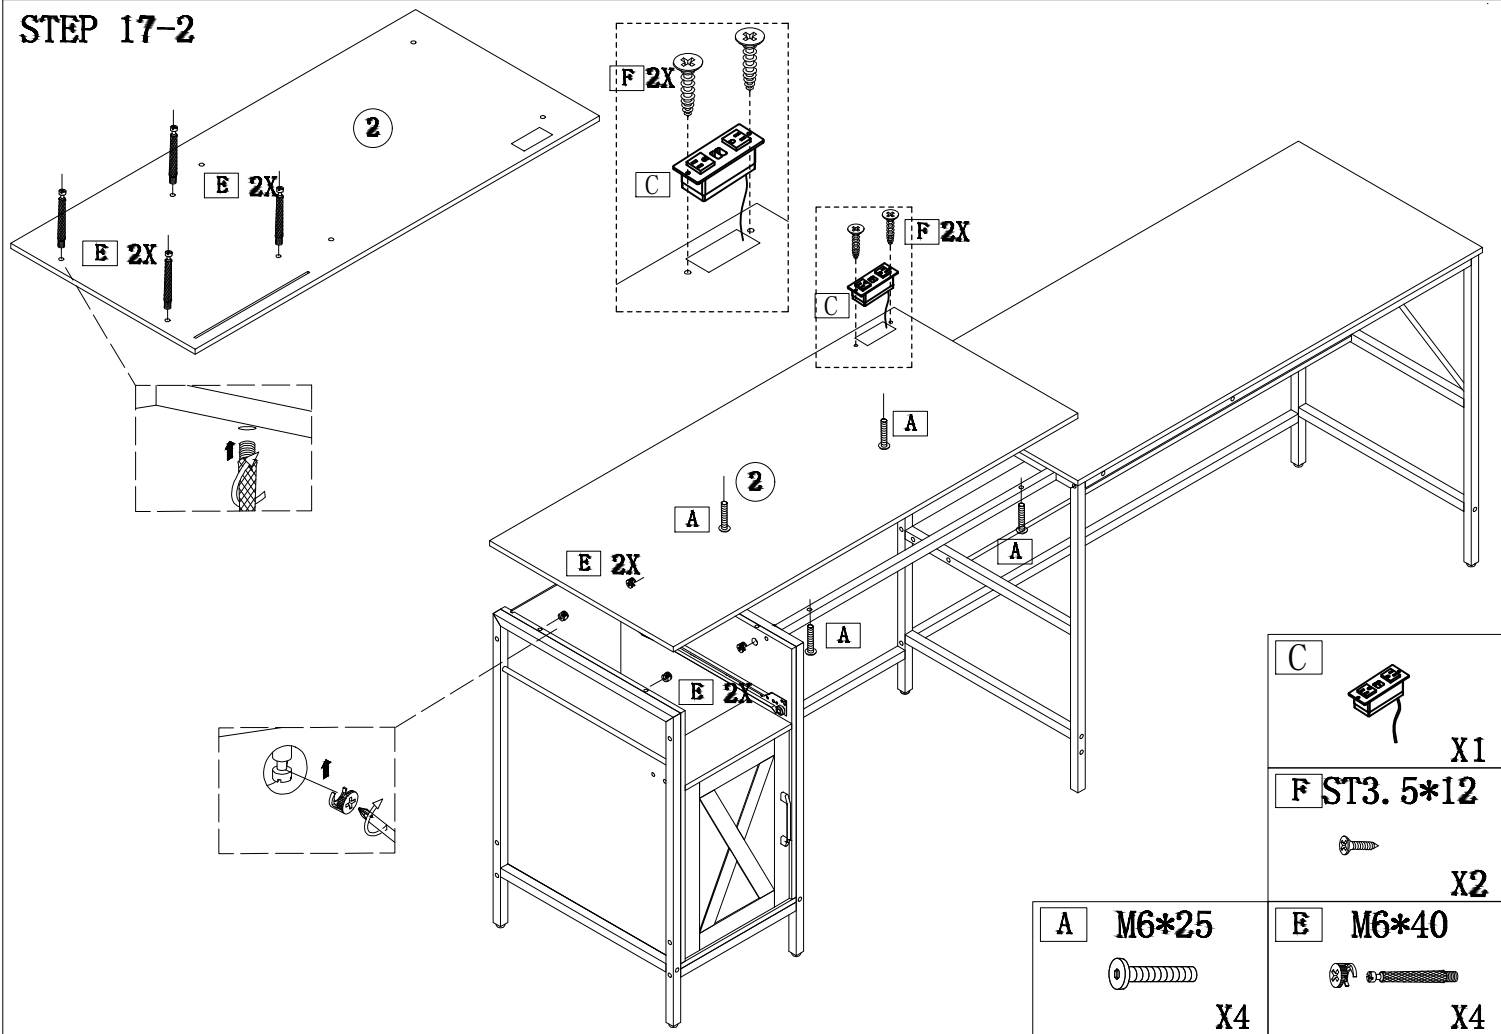

## STEP 18-2

