


# Assembly Instructions

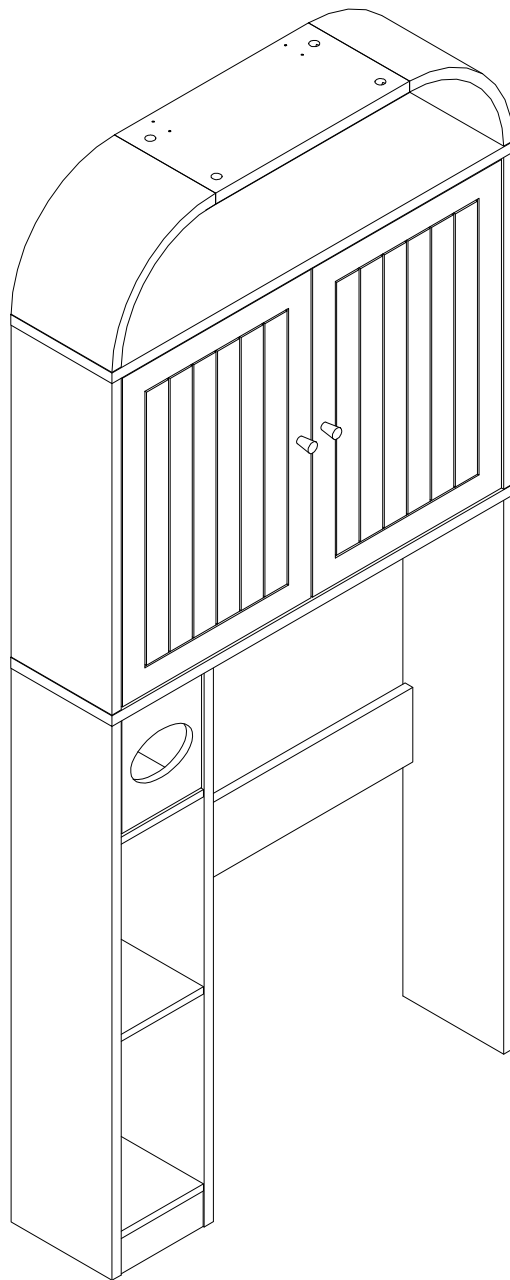


# Before Assembly

## Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

## QUICKFIT

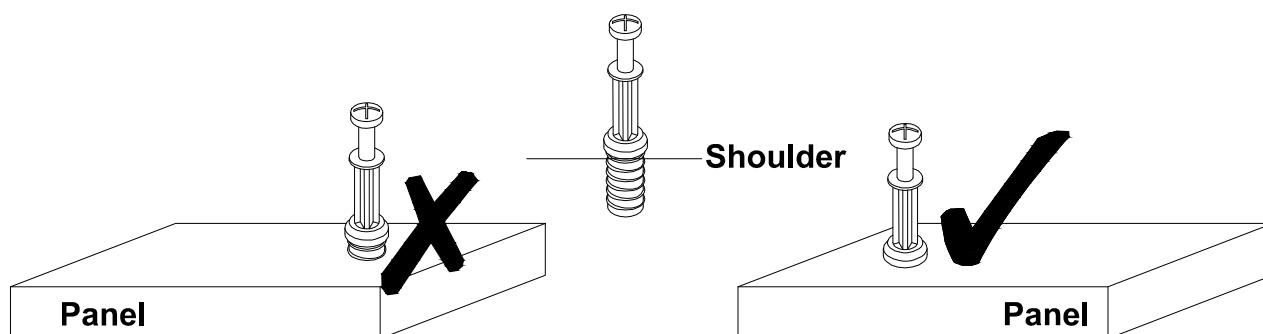

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


## CAM LOCK

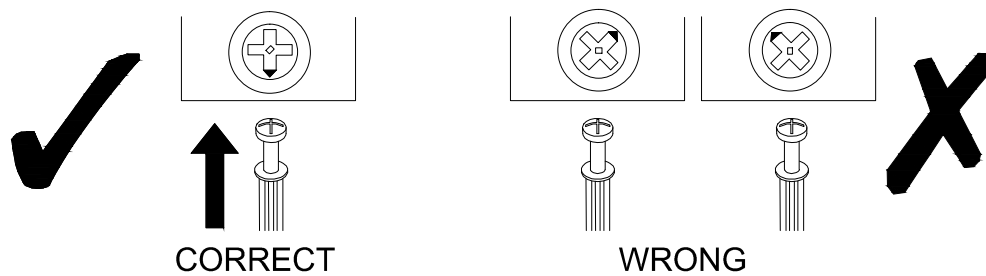

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT


Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.









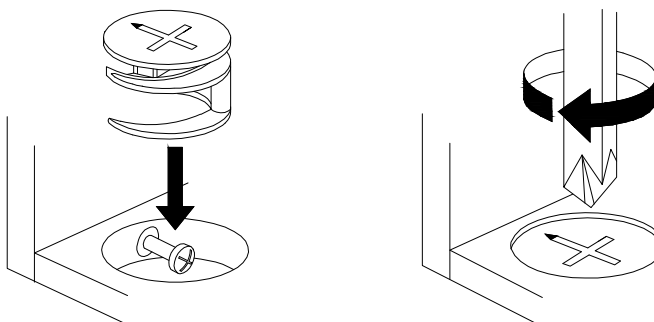


Turn cam lock clockwise to tighten.


# Product structure

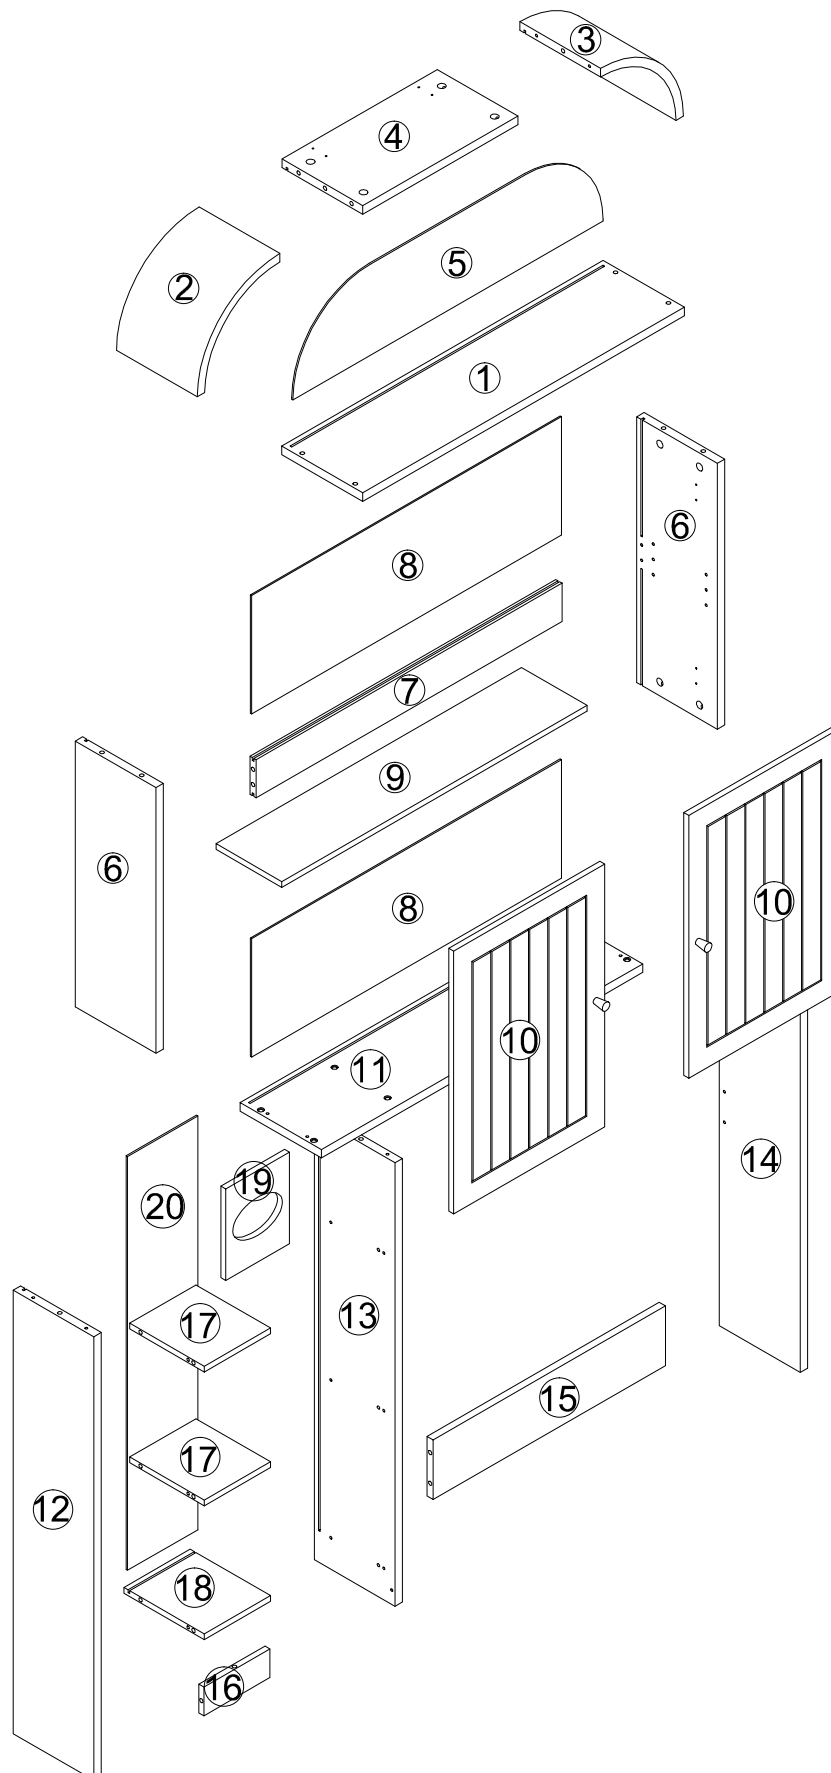

# Part List

|                                                                                                                                                      |                                                                                                                                                   |                                                                                                                                                  |                                                                                                                                              |
|------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>No. A</b><br>Quantity:34 Pcs<br>Cam Lock Dowel<br>8*28mm<br>     | <b>No. B</b><br>Quantity:34 Pcs<br>Cam<br>φ15<br>                | <b>No. C</b><br>Quantity:34 Pcs<br>Sticker<br>Ø20<br>          | <b>No. D</b><br>Quantity:6 Pcs<br>Dowel<br>8*30mm<br>     |
| <b>No. E</b><br>Quantity:4 Pcs<br>Large curved door hinge<br>       | <b>No. F</b><br>Quantity:18 Pcs<br>Screw<br>M3.5*12mm<br>        | <b>No. G</b><br>Quantity:26 Pcs<br>Screw<br>M3.5*14mm<br>      | <b>No. H</b><br>Quantity:2 Pcs<br>Hinge<br>41*18*15mm<br> |
| <b>No. I</b><br>Quantity:6 Pcs<br>Foot Pad<br>Ø15<br>             | <b>No. J</b><br>Quantity:4 Pcs<br>Shelf Support<br>M5*15mm<br> | <b>No. K</b><br>Quantity:2 Pcs<br>Handle<br>                 | <b>No. L</b><br>Quantity:2 Pcs<br>Screw<br>M4*18mm<br>  |
| <b>No. M</b><br>Quantity:10 Pcs<br>Screw<br>M6*40mm<br>           | <b>No. N</b><br>Quantity:1 Pc<br>Allen Key<br>4#<br>           | <b>No. O</b><br>Quantity:3 Sets<br>Magnetic Door Catcher<br> | <b>No. P</b><br>Quantity:18 Sets<br>Plastic Wedge<br>   |
| <b>No. Q</b><br>Quantity:2 Sets<br>Hardware anti-falling belt<br> | <b>No. R</b><br>Quantity:6 Pcs<br>Dowel<br>6*30mm<br>          |                                                                                                                                                  |                                                                                                                                              |


# STEP 1

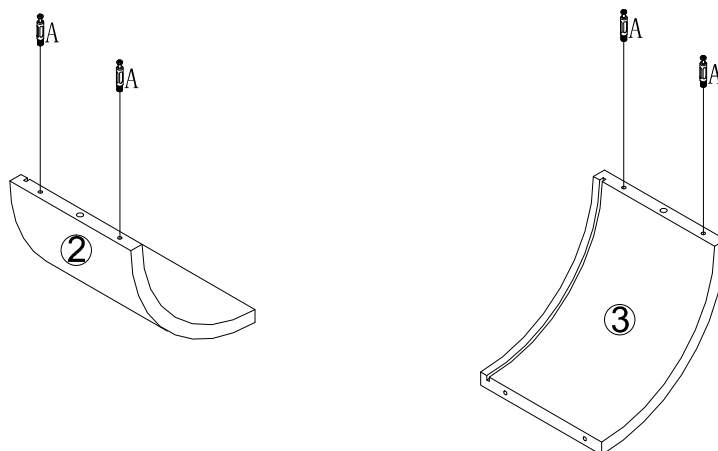

No. A  
Quantity: 4 Pcs  
8\*28 mm



# STEP 2

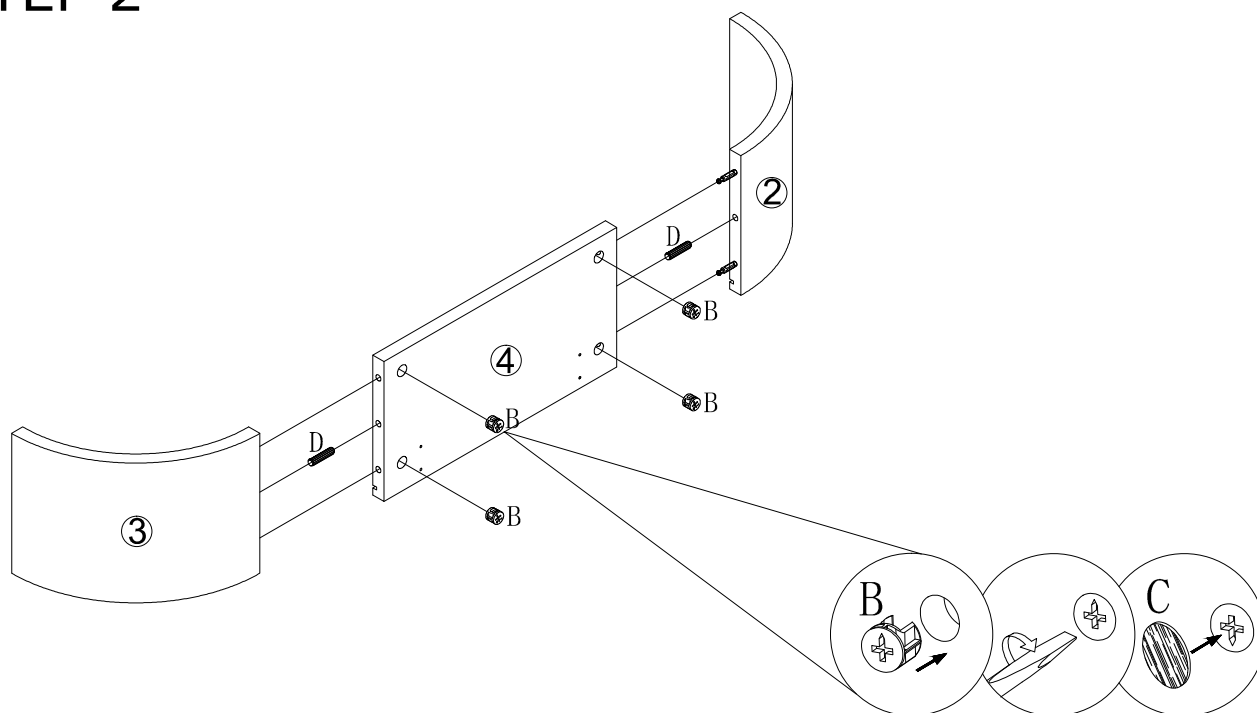


No. B  
Quantity: 4 Pcs  
Ø15




No. C  
Quantity: 4 Pcs  
Ø20




No. D  
Quantity: 2 Pcs  
8\*30mm



## STEP 3

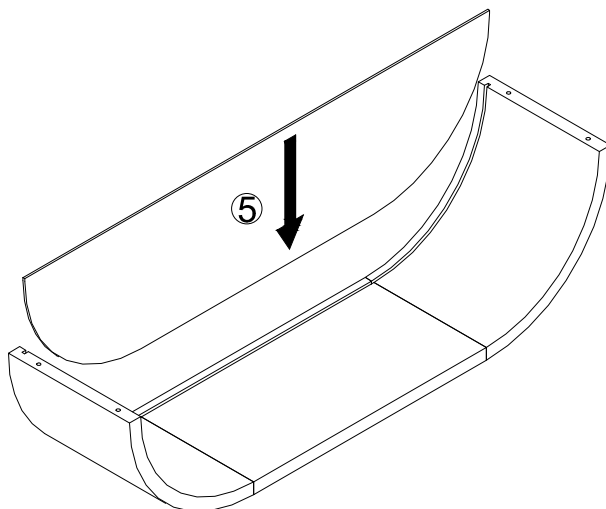


## STEP 4

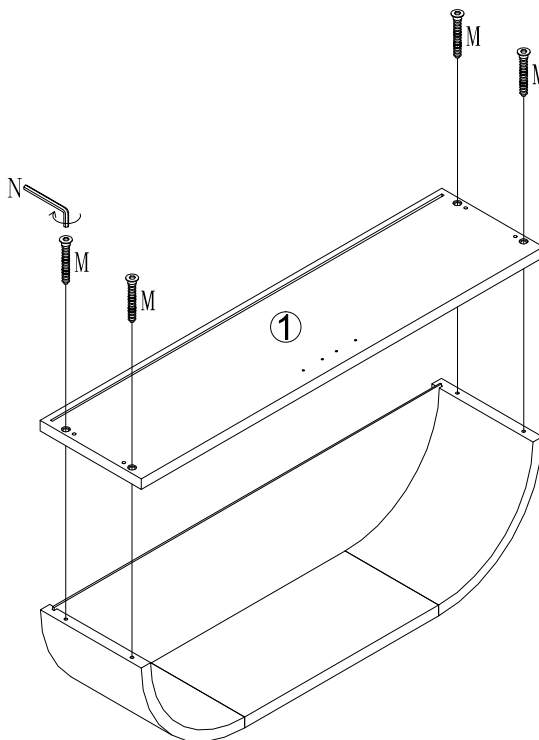

No. M  
Quantity: 4 Pcs  
M6\*40mm




No. N  
Quantity: 1 Pc  
4#



## STEP 5



No. A  
Quantity: 8 Pcs  
8\*28 mm



No. G  
Quantity: 4 Pcs  
M3.5\*14mm



No. O  
Quantity: 2 Pcs

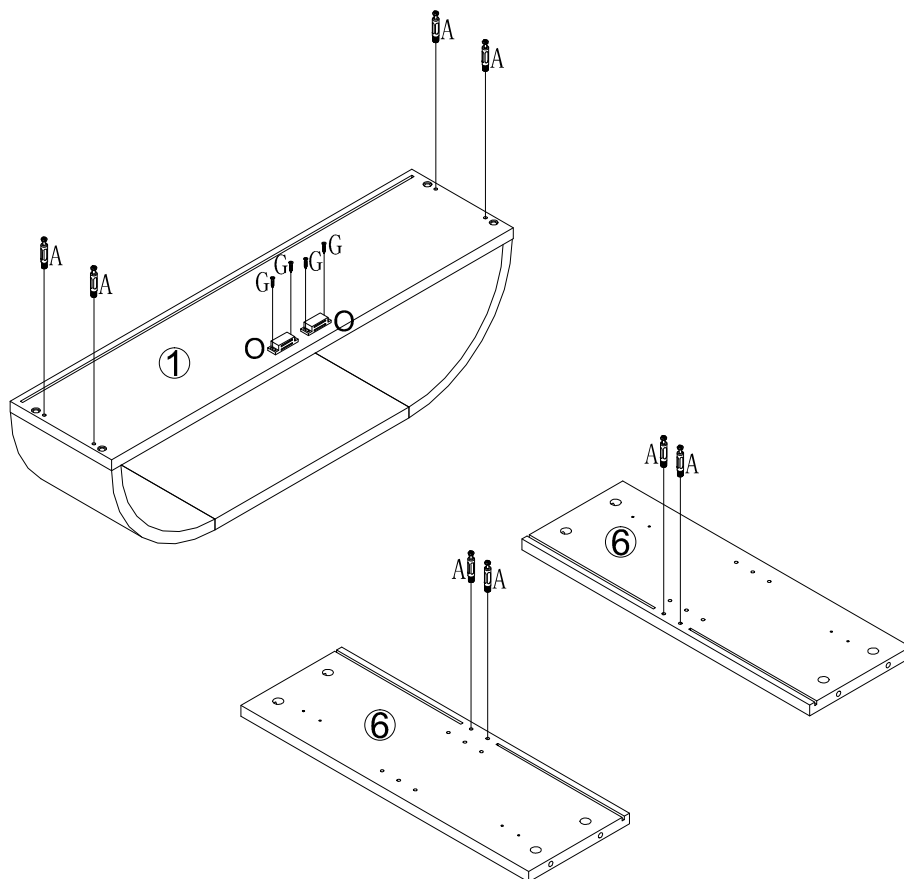


## STEP 6

No. B  
Quantity: 2 Pcs  
Ø15



No. C  
Quantity: 2 Pcs  
Ø20

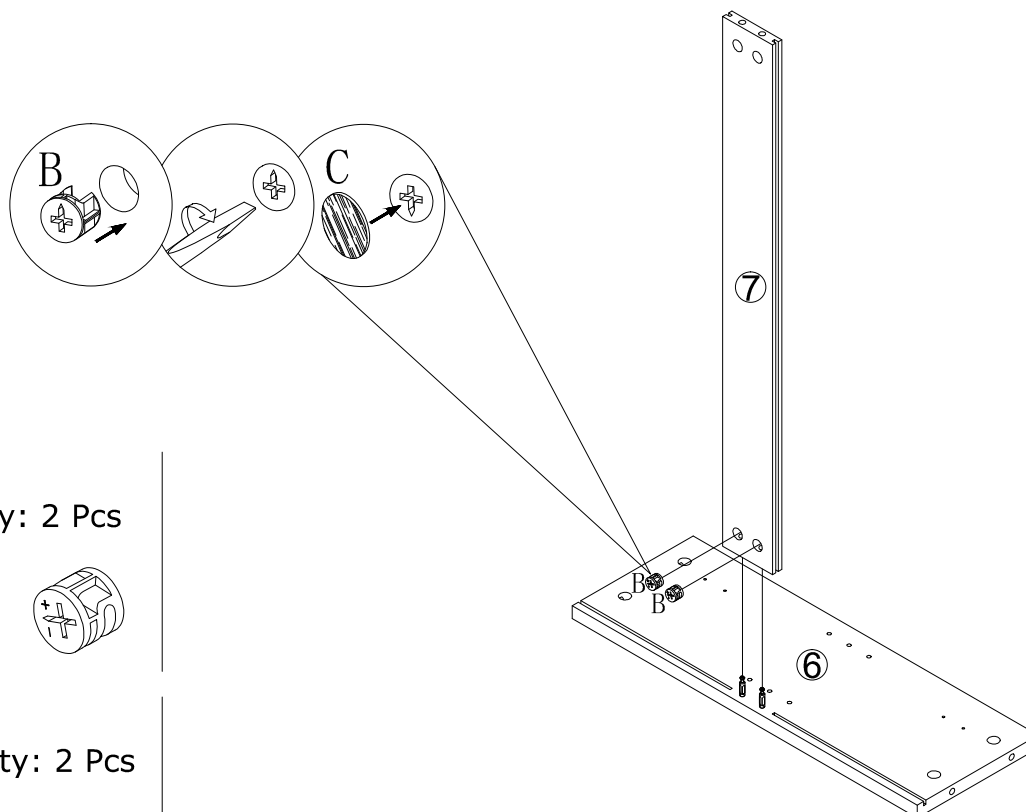


## STEP 7


No. B  
Quantity: 2 Pcs  
Ø15



No. C  
Quantity: 2 Pcs  
Ø20

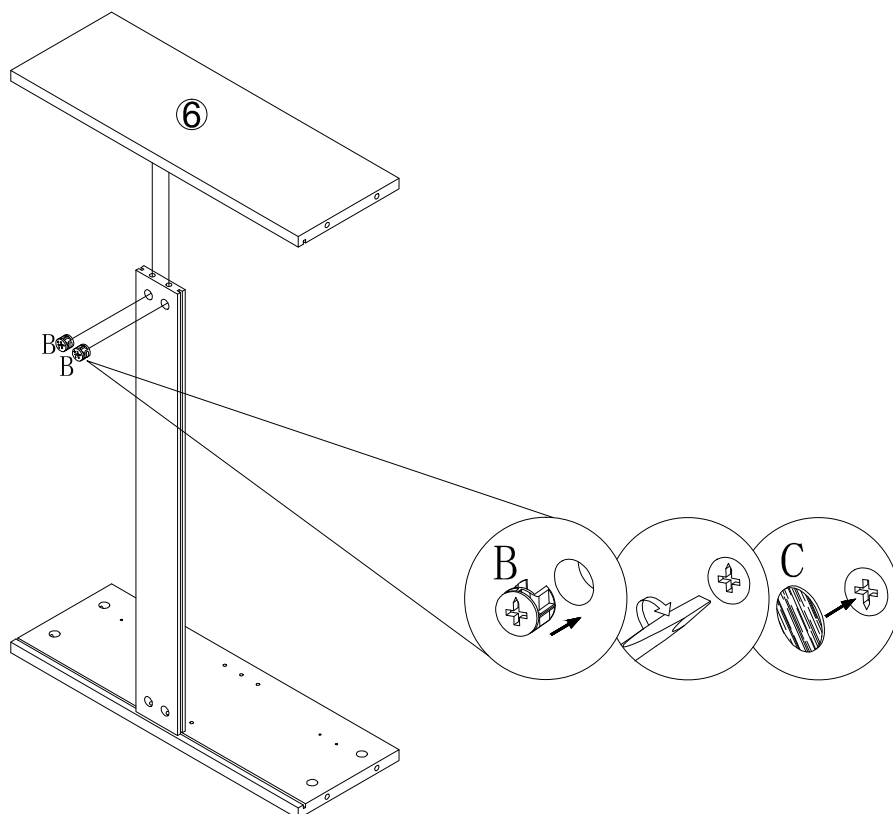

## STEP 8

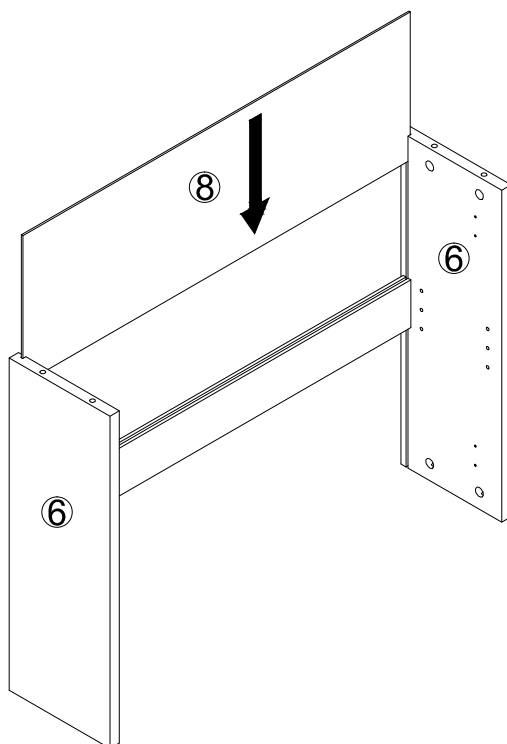


## STEP 9



No. B  
Quantity: 4 Pcs  
Ø15



No. C  
Quantity: 4 Pcs  
Ø20

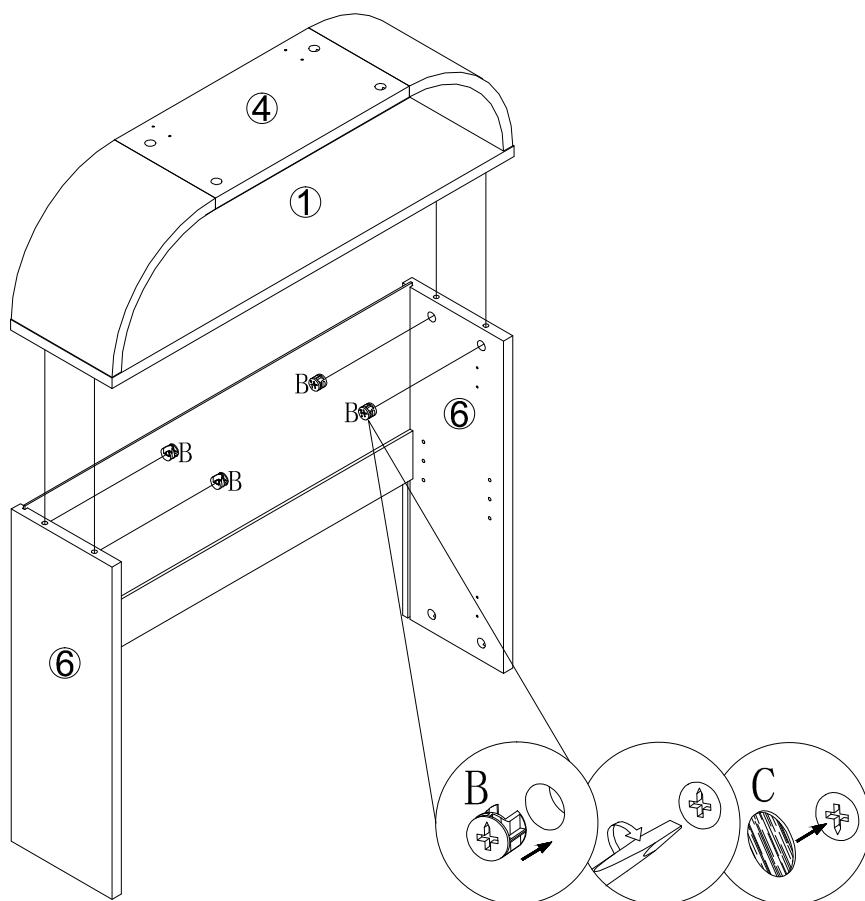


## STEP 10

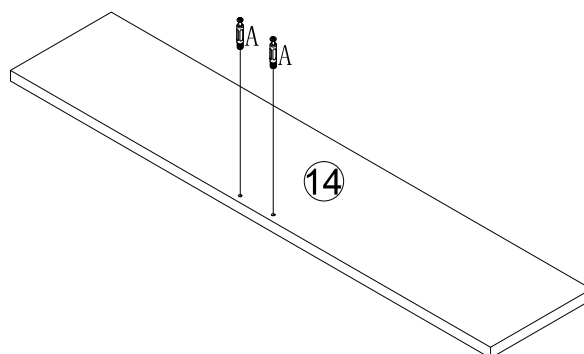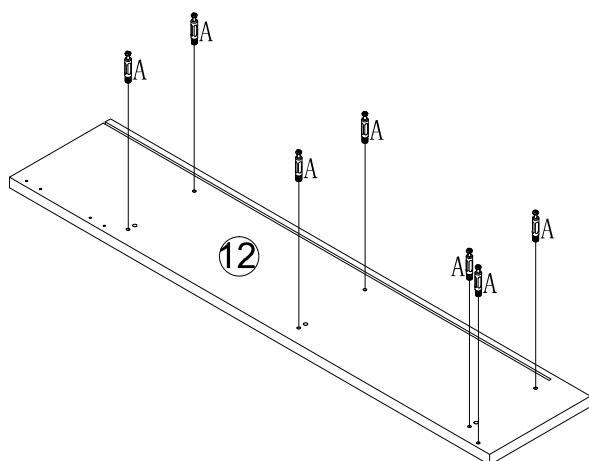

No. A  
Quantity: 9 Pcs  
8\*28 mm




## STEP 11

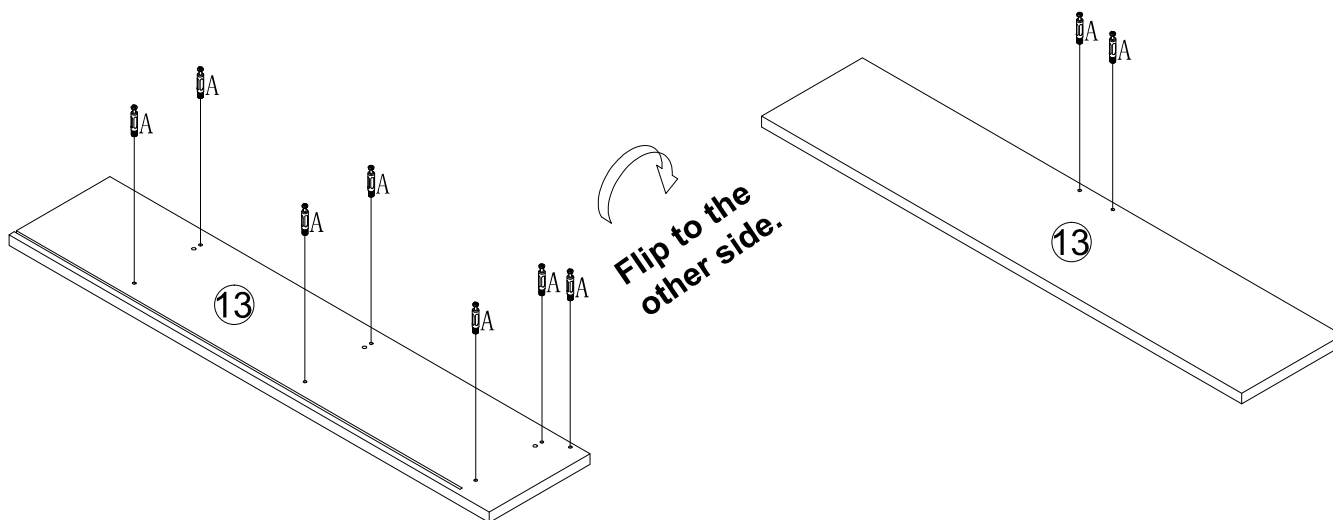


No. A  
Quantity: 9 Pcs  
8\*28 mm



## STEP 12

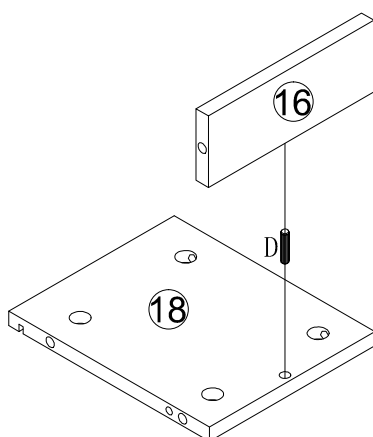

No. D  
Quantity: 1 Pcs  
8\*30mm



## STEP 13



No. B  
Quantity: 7 Pcs  
Ø15



No. C  
Quantity: 7 Pcs  
Ø20



No. R  
Quantity: 3 Pcs  
6\*30mm

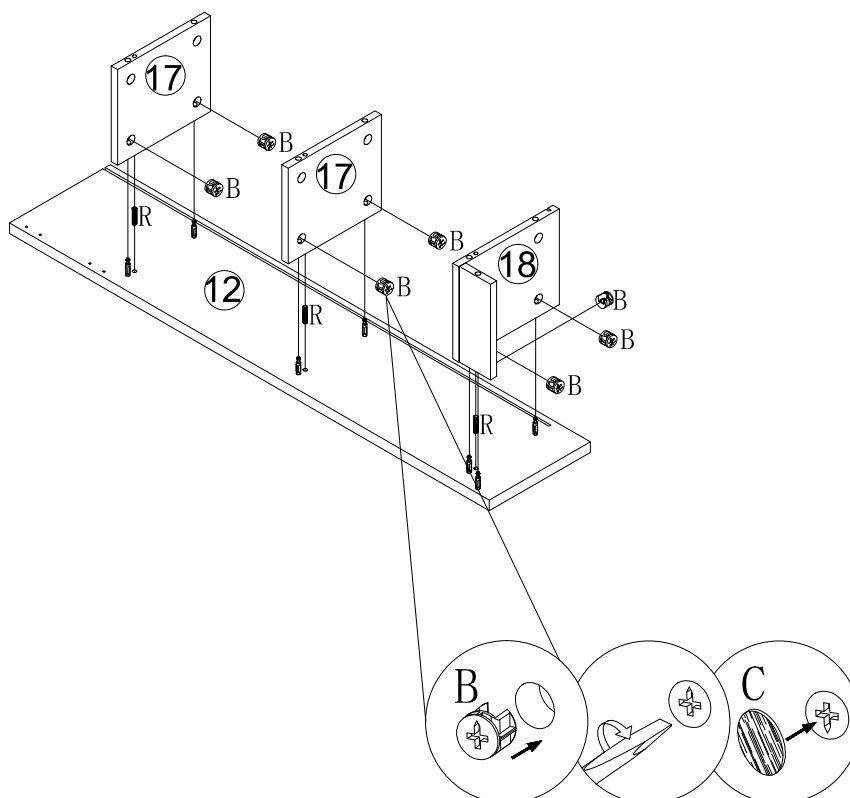

## STEP 14



No. B  
Quantity: 7 Pcs  
Ø15



No. C  
Quantity: 7 Pcs  
Ø20



No. R  
Quantity: 3 Pcs  
6\*30mm

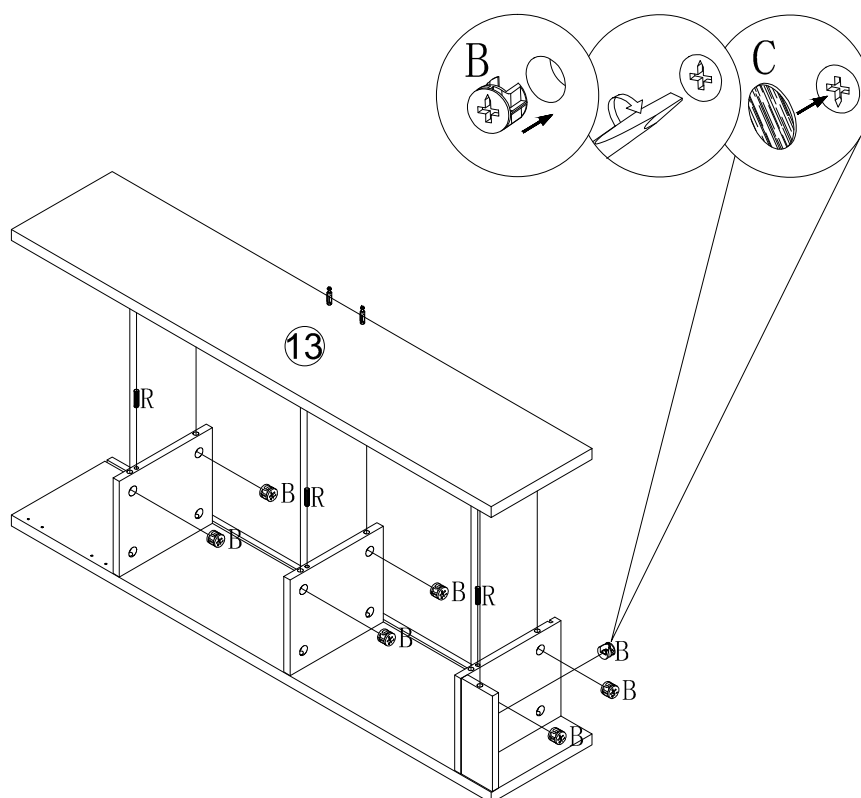


## STEP 15

No. B  
Quantity: 2 Pcs  
Ø15



No. C  
Quantity: 2 Pcs  
Ø20

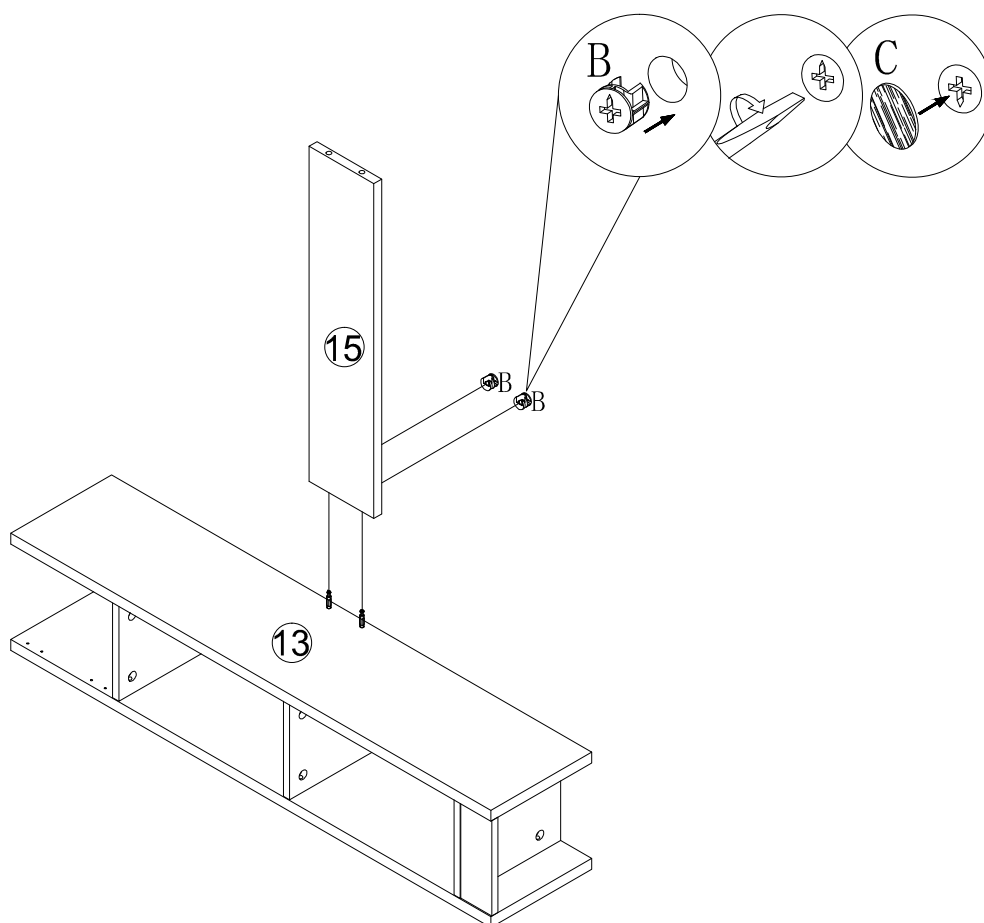


## STEP 16


No. B  
Quantity: 2 Pcs  
Ø15



No. C  
Quantity: 2 Pcs  
Ø20

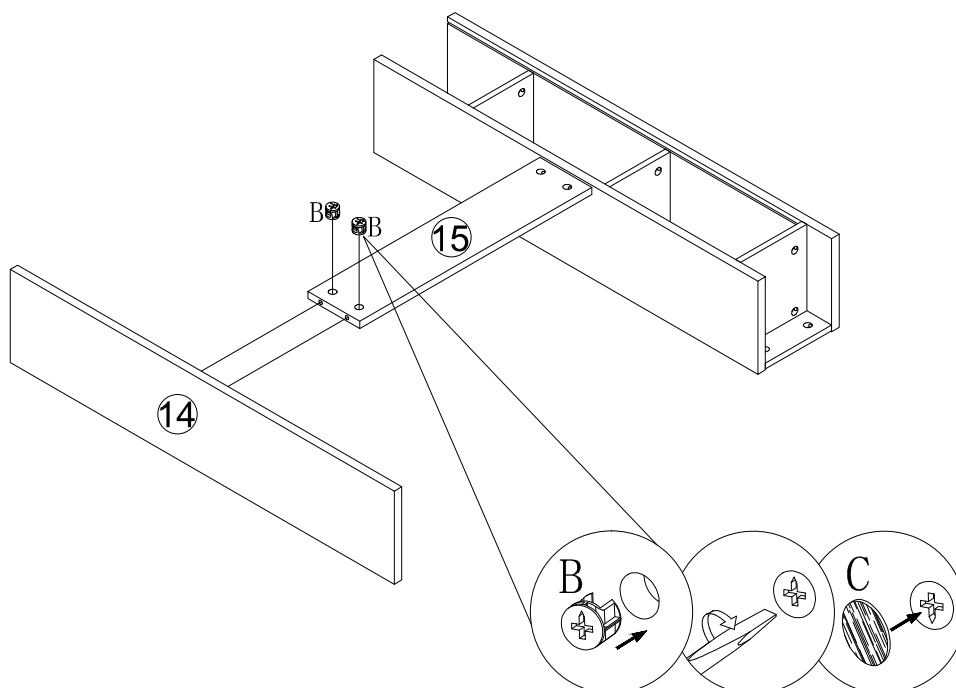


## STEP 17

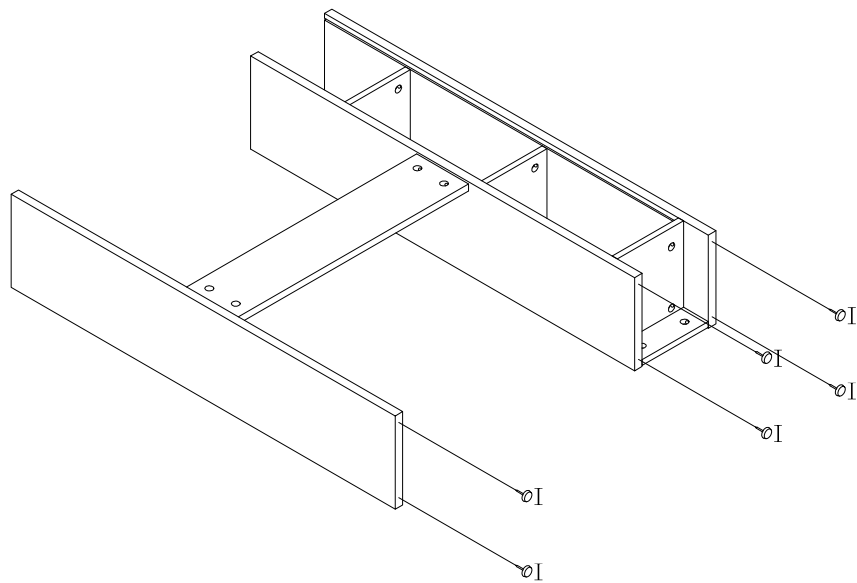

No. I  
Quantity: 6 Pcs  
Ø15



## STEP 18


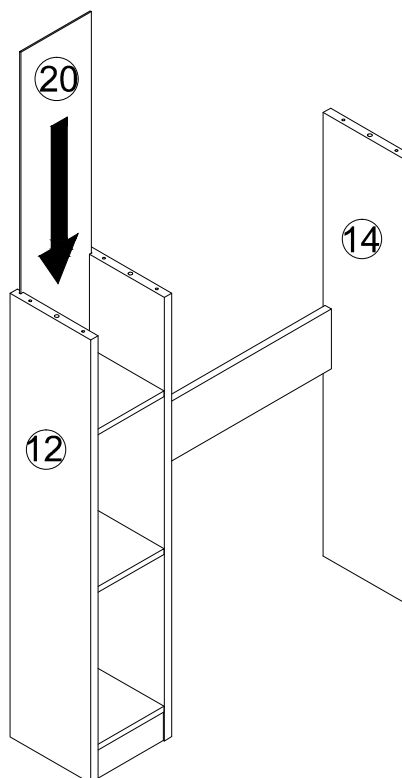


## STEP 19

No. G  
Quantity: 2 Pcs  
M3.5\*14mm




No. O  
Quantity: 1 Pcs

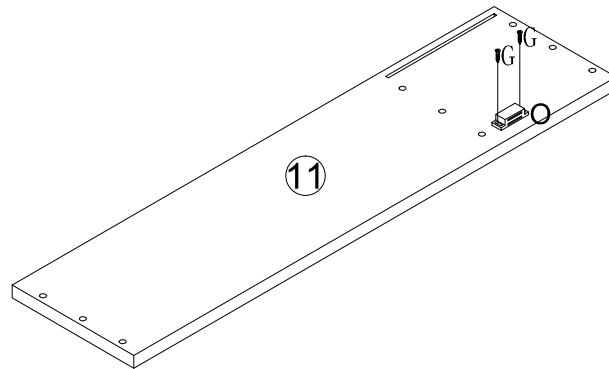

## STEP 20



No. D  
Quantity: 3 Pcs  
8\*30mm



No. M  
Quantity: 6 Pcs  
M6\*40mm



No. N  
Quantity: 1 Pc  
4#

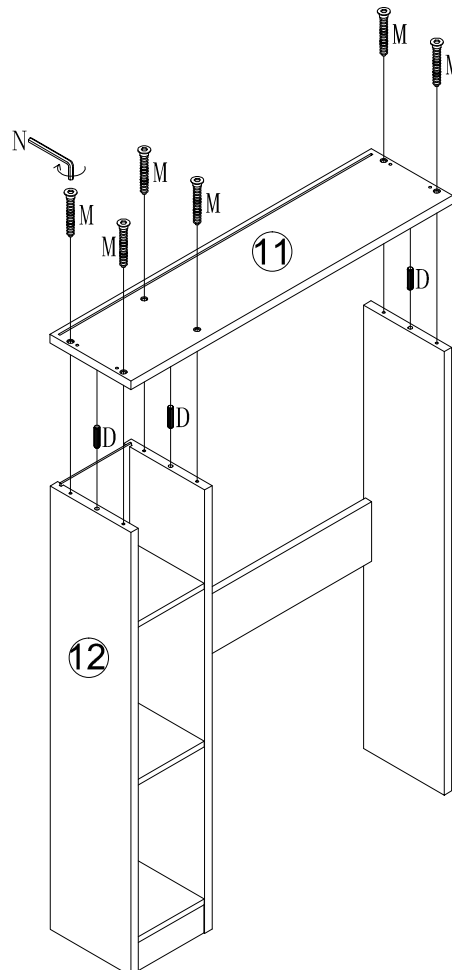

## STEP 21


No. F  
Quantity: 6 Pcs  
M3.5\*12mm



No. H  
Quantity: 2 Pcs




No. O  
Quantity: 1 Pcs

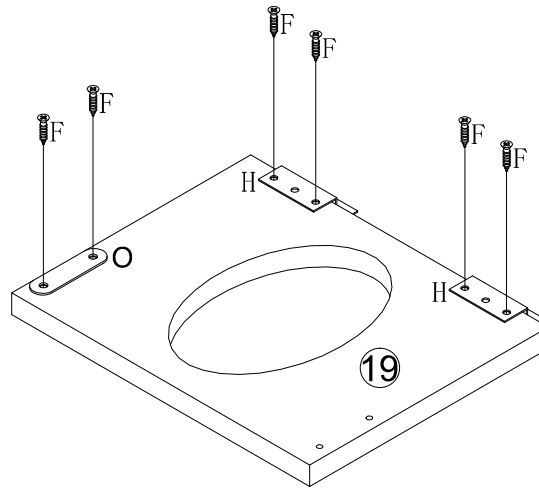



## STEP 22

No. G  
Quantity: 4 Pcs  
M3.5\*14mm

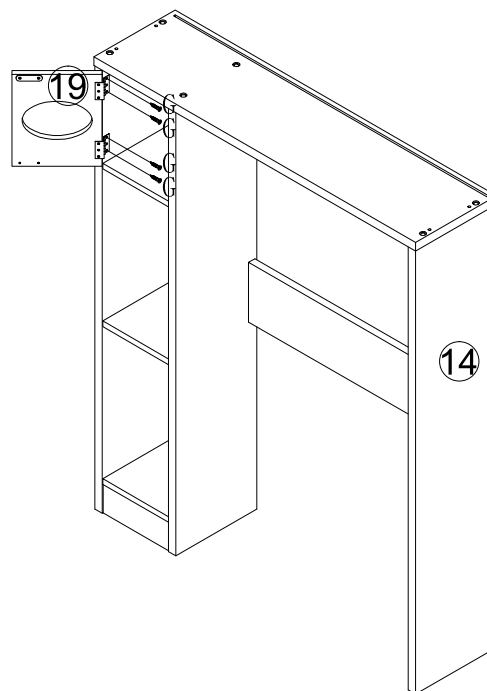

## STEP 23

No. A  
Quantity: 4 Pcs  
8\*28 mm

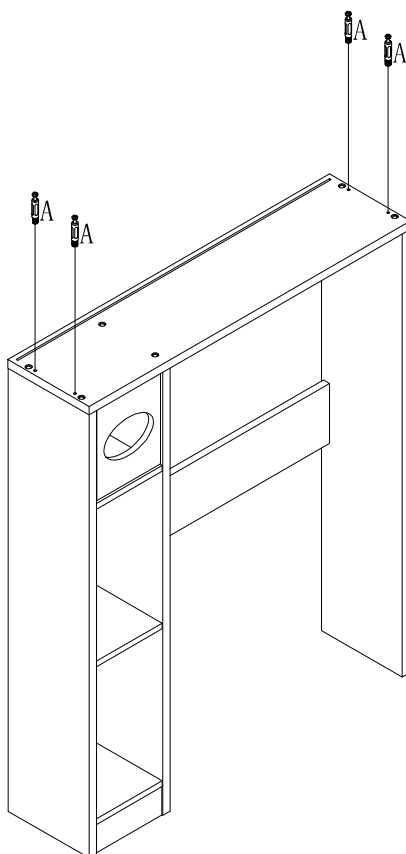

## STEP 24


No. B  
Quantity: 4 Pcs  
Ø15




No. C  
Quantity: 4 Pcs  
Ø20




No. J  
Quantity: 4 Pcs  
M5\*15mm

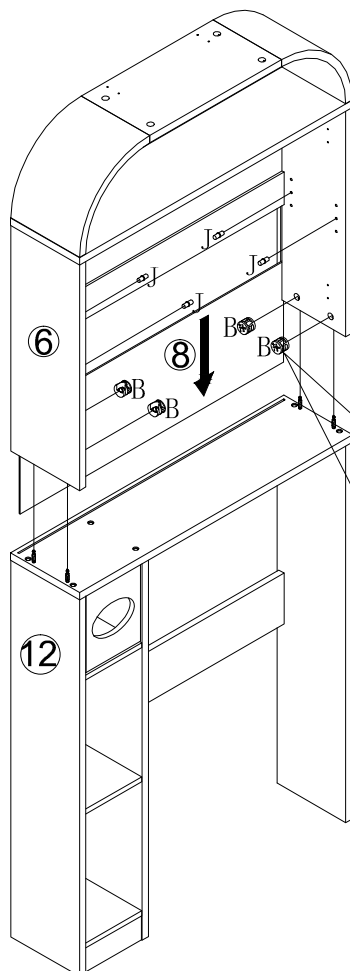

During installation, first push the back panel '8' into the upper half of the cabinet and support it by hand to prevent it from falling out, before proceeding with the installation of the subsequent cabinet parts.

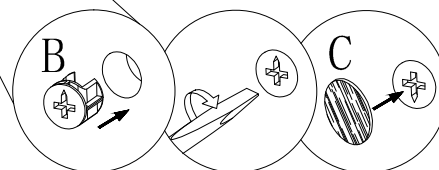


## STEP 25

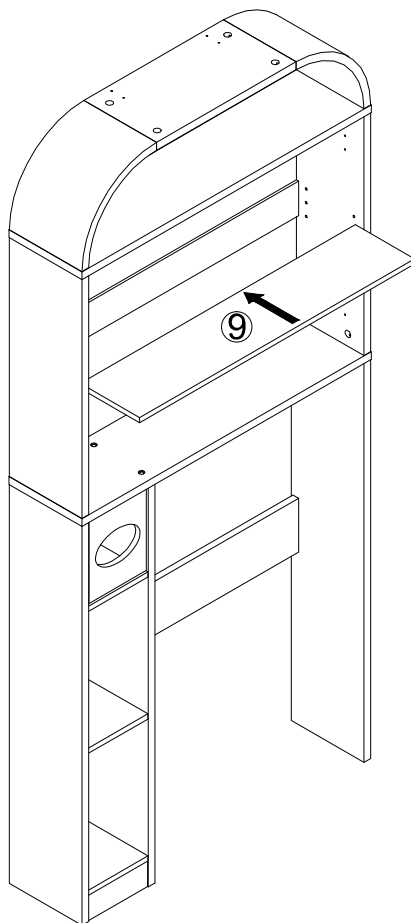

## STEP 26

No. E  
Quantity: 4 Pcs



No. F  
Quantity: 12 Pcs  
M3.5\*12mm




No. K  
Quantity: 2 Pcs



No. L  
Quantity: 2 Pcs  
M4\*18mm




No. O  
Quantity: 2 Pcs

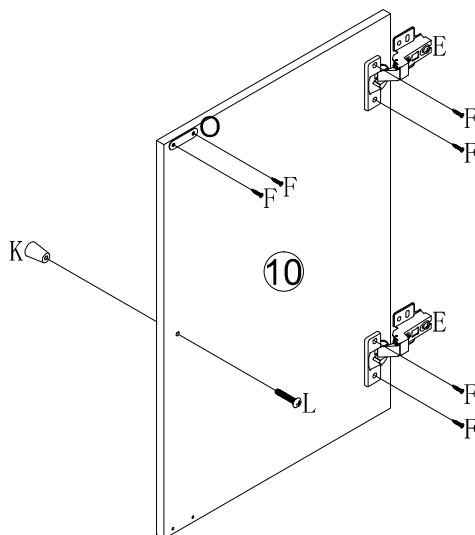


**x2**




## STEP 27

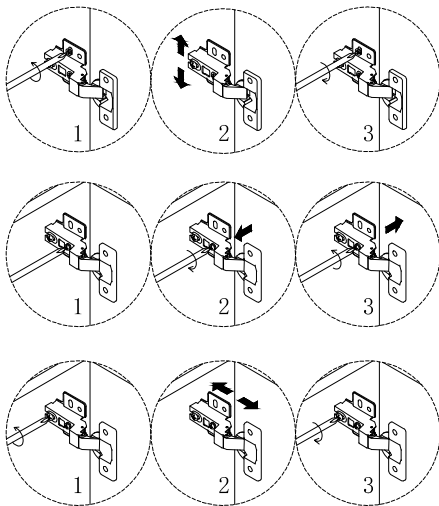

No. G  
Quantity: 16 Pcs  
M3.5\*14mm

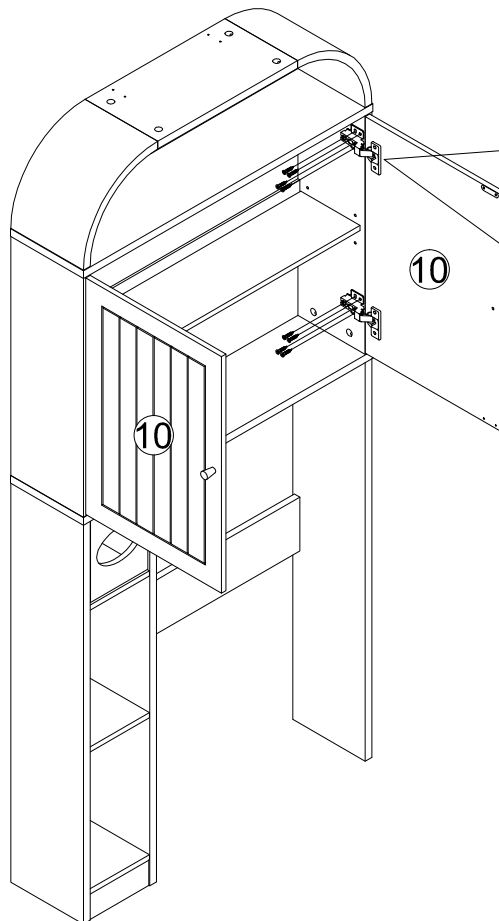


First align the pilot holes and tighten the two screws inside.

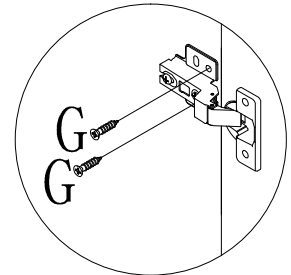
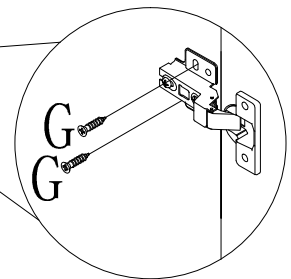


After adjusting the gap of the cabinet door evenly, then fix the two screws on the front side.

## STEP 28

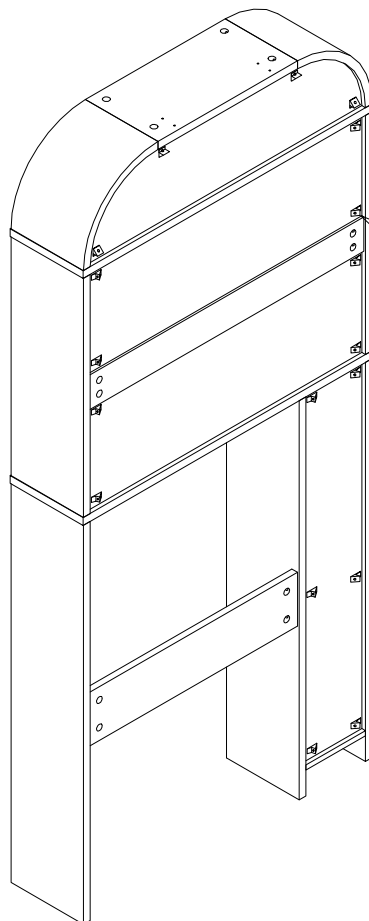


No. P  
Quantity: 18 Sets

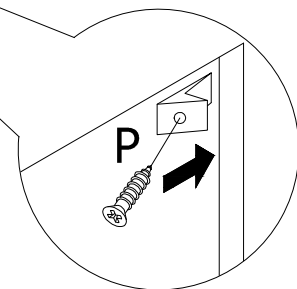


Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

# STEP 29

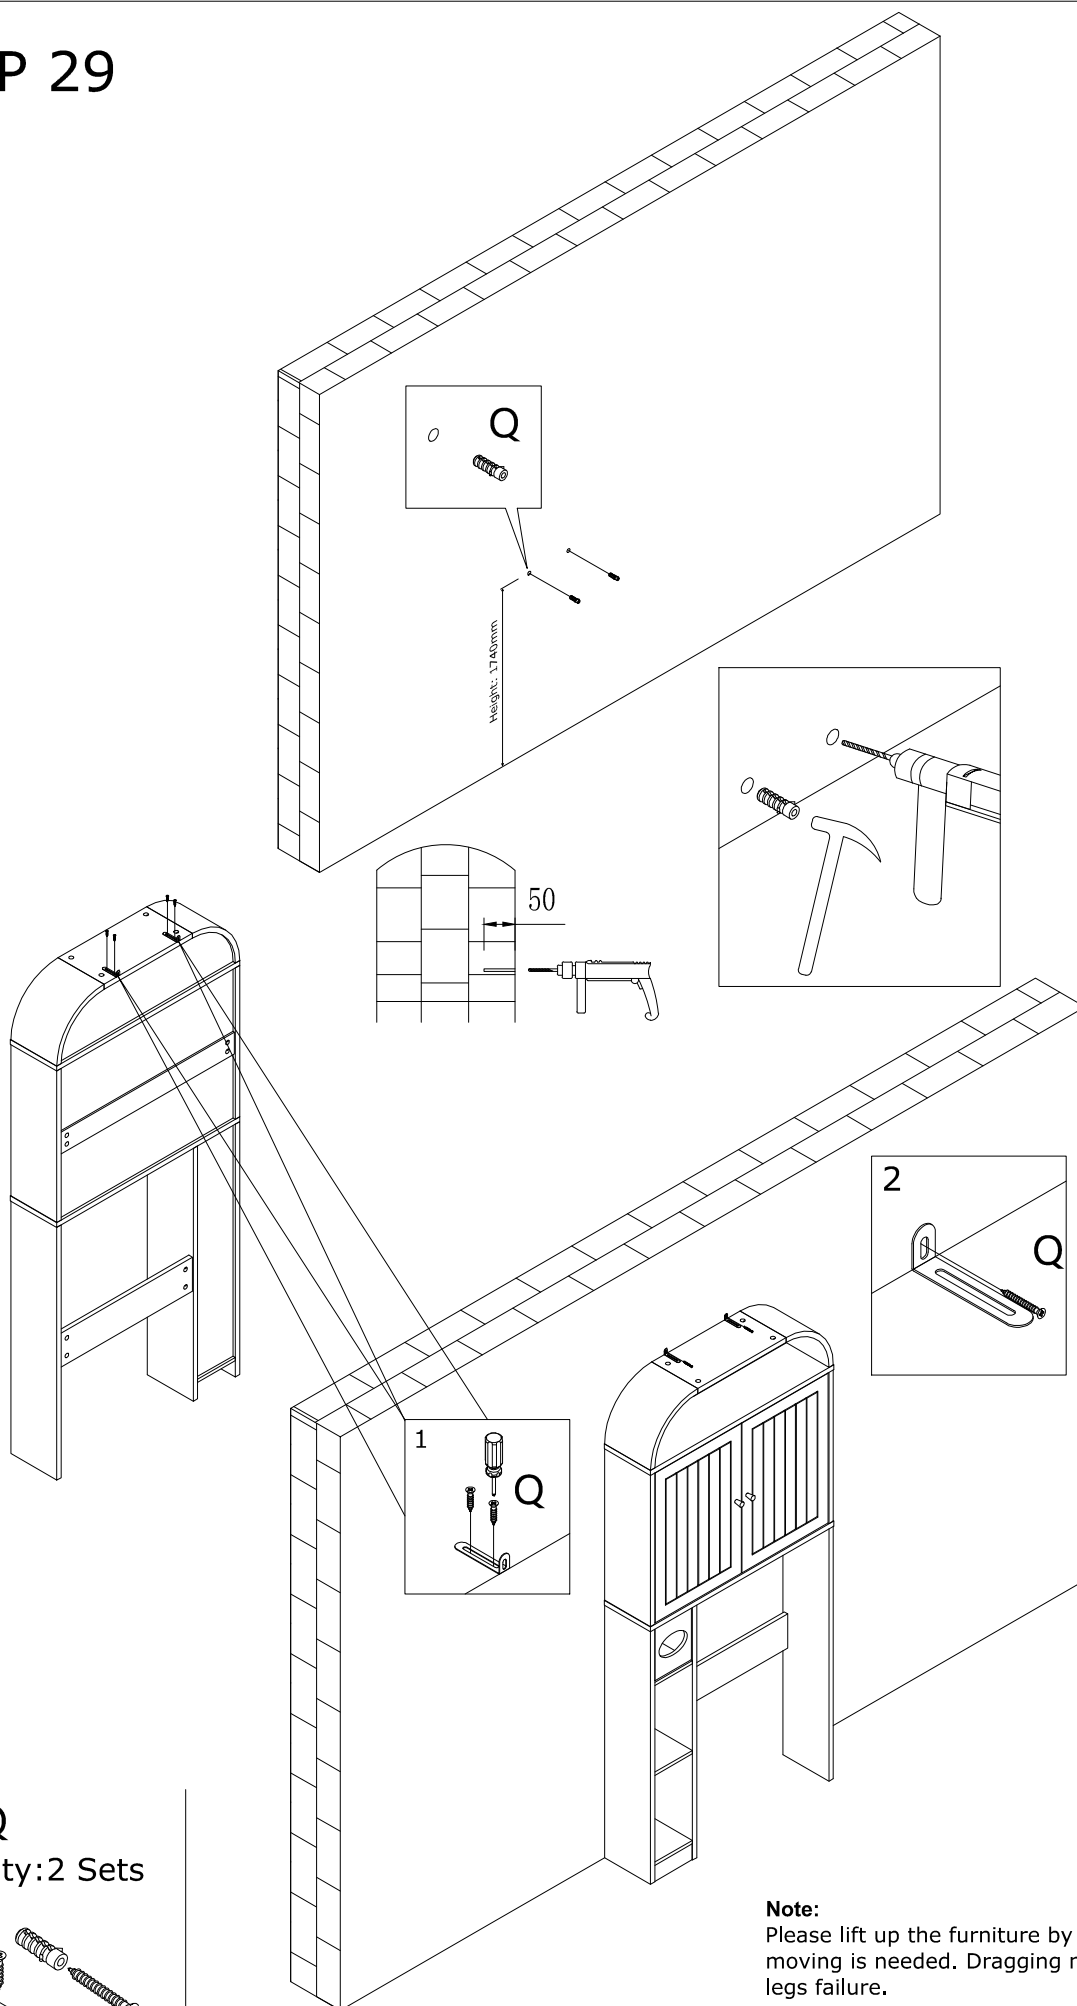

No. Q  
Quantity: 2 Sets



**Note:**  
Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.