

Assembly Instructions

Caution: You must read this before you proceed


Care & Maintenance

-   Do not place furniture outside . For indoor use only.
-   Furniture may scratch floors. We recommend using furniture pads to protect your floors.
-   Do not put hot items directly on furniture surface.
-   Do not clean furniture with harsh cleansers or polish.
-   Do not place furniture under direct sunlight.
-   Do not place furniture near heating or cooling vents.
-   Do not write on furniture without a padded barrier to protect the surface.
-   Not for commercial use. For residential use only.
-   Stains may be removed with mild soap solution and damp cloth.
-   Children should not climb or jump on the furniture.
-   Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in N769P496451 for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.








QUEEN BED

SKU :N769P496451




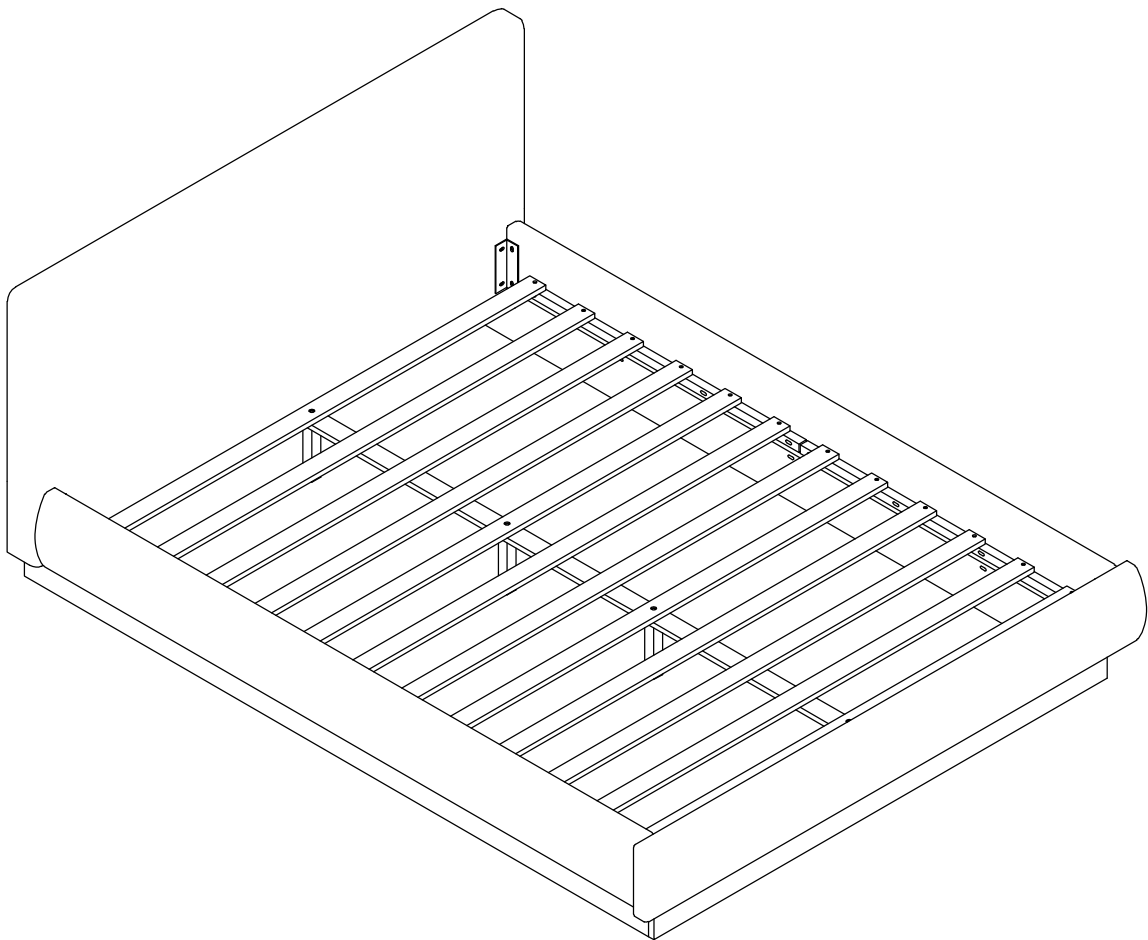



Before installation, insert the screws into the holes and tighten them, but do not tighten them to 100%, 70% to 80% is sufficient. Finally, after all screws are installed, tighten all screws to 100%. If you encounter these issues, such as if the holes cannot be aligned or some parts cannot be installed, please check if the screws are used correctly and adjust the tightness of the screws.

PART LIST (N769P496451/Hardware in this SKU)

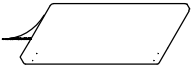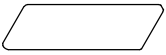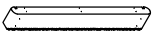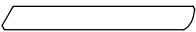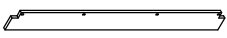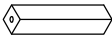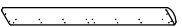Label	Picture	Description	Q.ty
(A)		Pillow cover	1pc
(B)		Top Headboard	1pc
(C)		Bottom Headboard	1pc
(D)		Leg Headboard	1pc
(E)		Footboard	1pc
(F)		Leg Footboard	1pc
(G)		Wood bar	4pcs
(H)		Slats 1	4pcs
(I)		Slats 2	8pcs
(J)		Center slat support rail	1pc
(K)		Center support leg	4pcs
(L)		Wood bar	2pcs
(M)		Side rail	2pcs
(N)		Leg Side rail	2pcs

Hardware (Each of the above hardware including extra 1 pc)

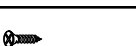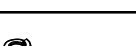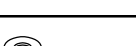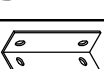
Label	Picture	Description	Q.ty
①		Allen key	1
②		Bolt M6*50mm	20+1
③		Bolt M6*40mm	41+1
④		Bolt M6*25mm	16+1
⑤		Screw Ø4 x 30mm	24+1
⑥		Screw Ø3.5 x 15mm	16+1
⑦		Spring Lock Washer ØM6 x 1.5mm	73+1
⑧		Flat Washer ØM6 x 2mm	73+1
⑨		Plate L 140 x 40 x 40 x 3mm	4
⑩		Plate L 40 x 20 x 20 x 2mm	4

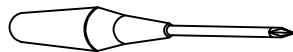

Assembly Preparation

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

Overview


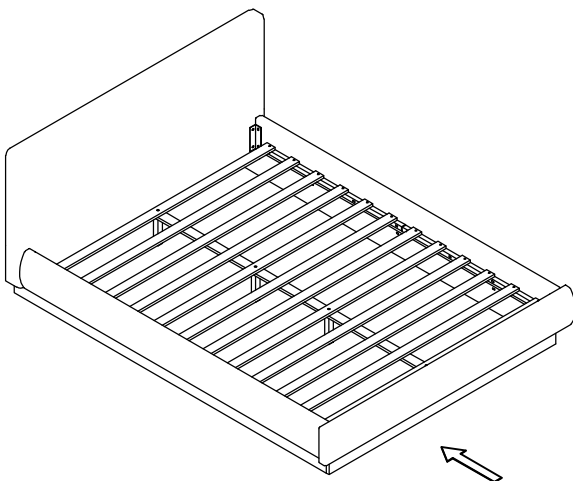


FRONT FACING

This Queen Bed has multiple parts and may require up to 1 hour to assemble.
To give you an overview of the Queen Bed parts, the above picture is to help you put the various parts into perspective.
Please read through the instructions herebelow to familiarise the parts and steps before assembly.

Assembly Preparation

Before Beginning Assembly

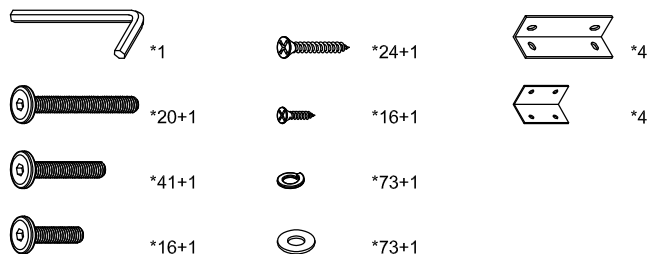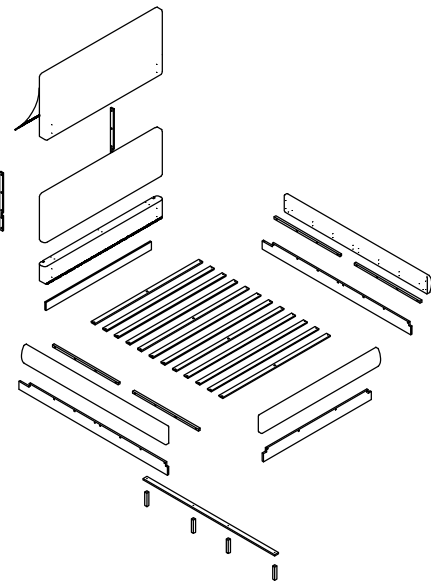

- Read instruction, cover to cover.



- Have 2 adults on hand for assembly.



- Do not assemble on flooring or carpet.




- Assemble on a clean non-marring surface (packing foam).




- Save all packaging until finished.

Step 1:

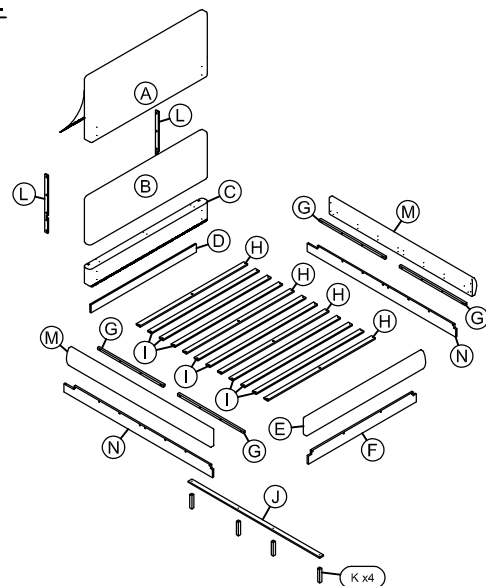


Unpack and place all part on a clean, non-marring surface.

Step 2:

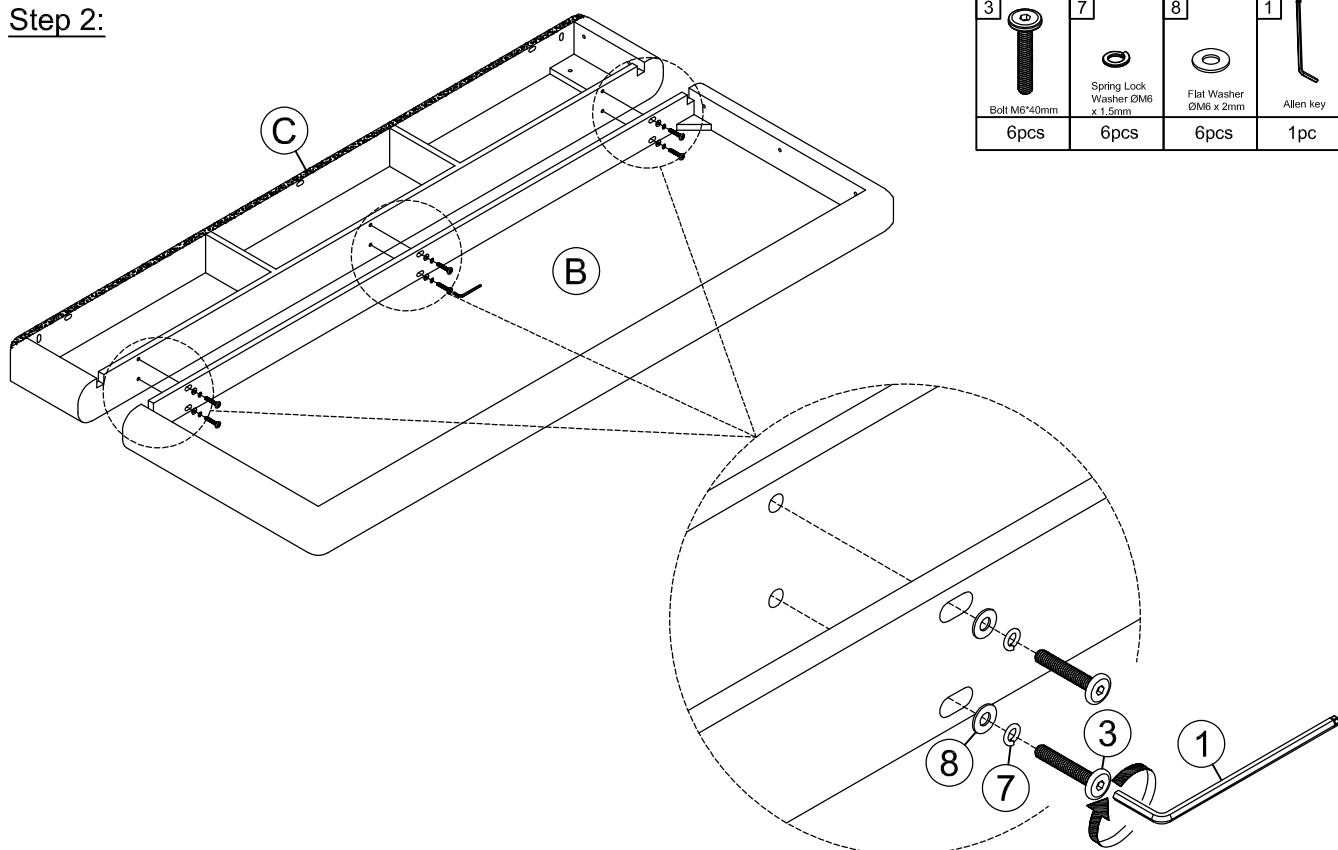


-Attach Top Headboard (B) to the Bottom Headboard (C) using Bolt M6*40mm③ , Spring Lock Washer ØM6 x 1.5mm⑦ , Flat Washer ØM6 x 2mm⑧

Step 3:

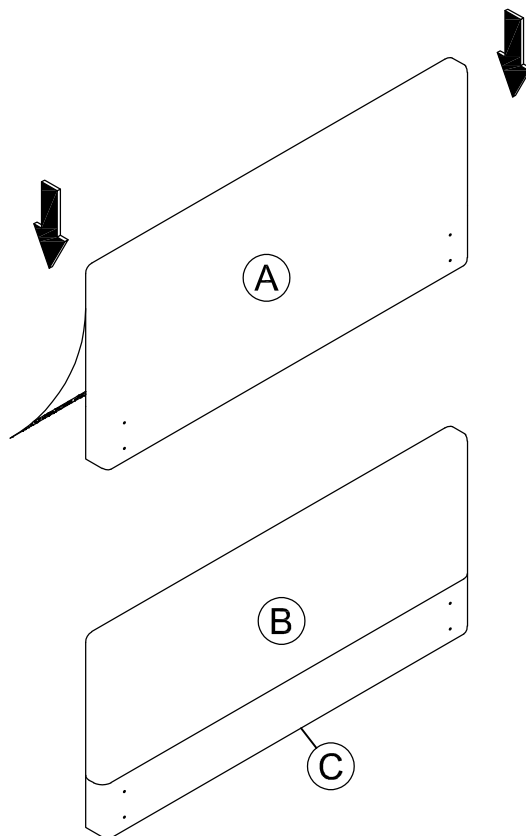

-Attach Fabric (A) to the Top Headboard (B) + Bottom Headboard (C)


Step 4:

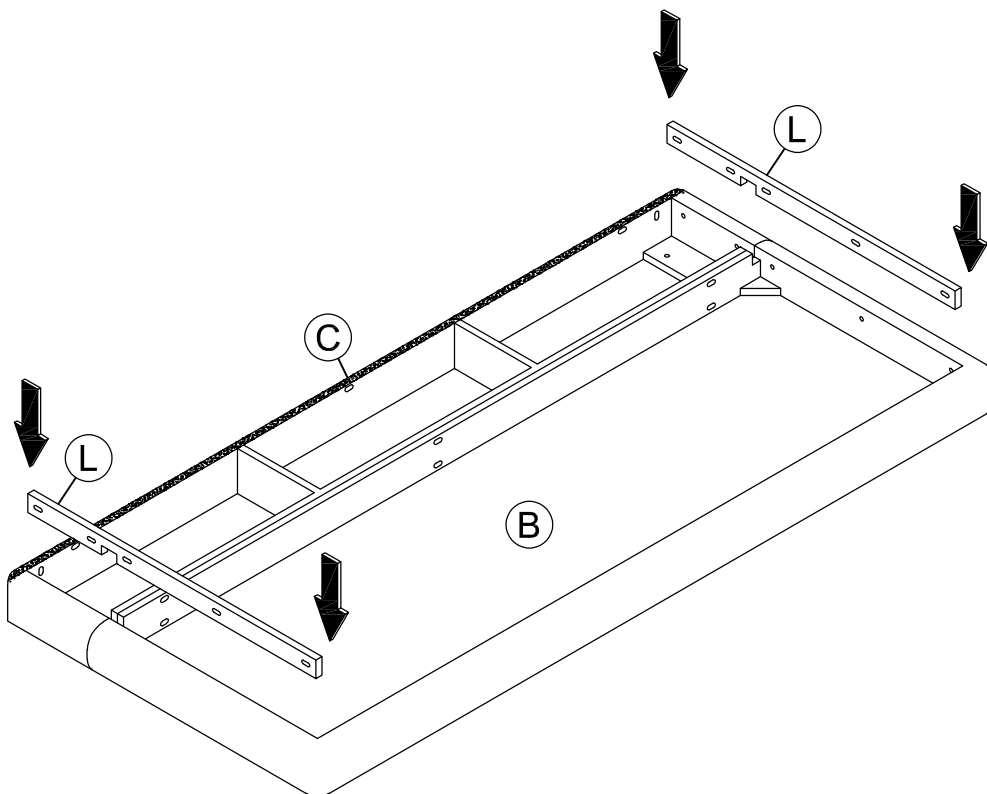

-Attach Wood bar (L) to the Top Headboard (B) & Bottom Headboard (C)


Step 5:

3	7	8	1
Bolt M6*40mm	Spring Lock Washer ØM6 x 1.5mm	Flat Washer ØM6 x 2mm	Allen key
10pcs	10pcs	10pcs	1pc

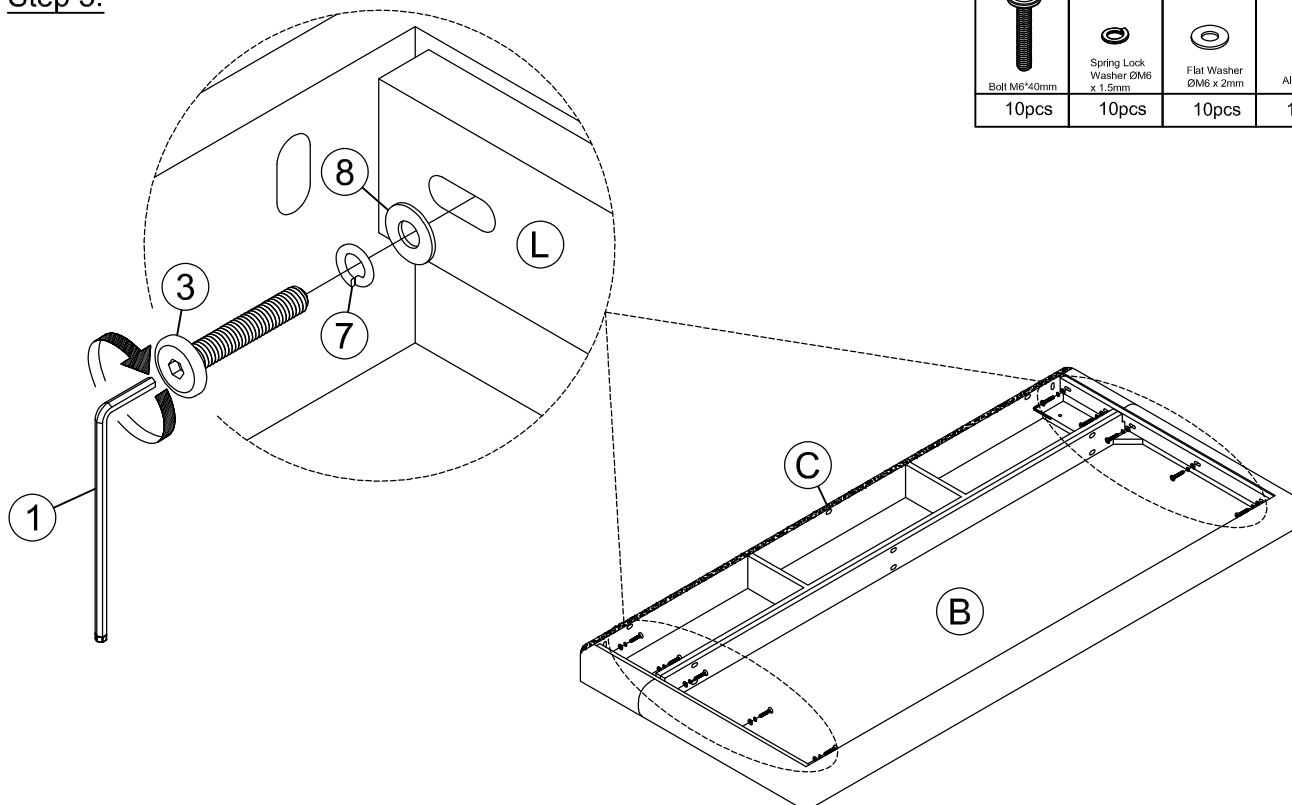


-Using Bolt M6*40mm ③ + Spring Lock Washer ØM6 x 1.5mm ⑦+ Flat Washer ØM6 x 2mm ⑧+ Allen key ①connect Wood bar (L) & Top Headboard (B) & Bottom Headboard (C)

Step 6:

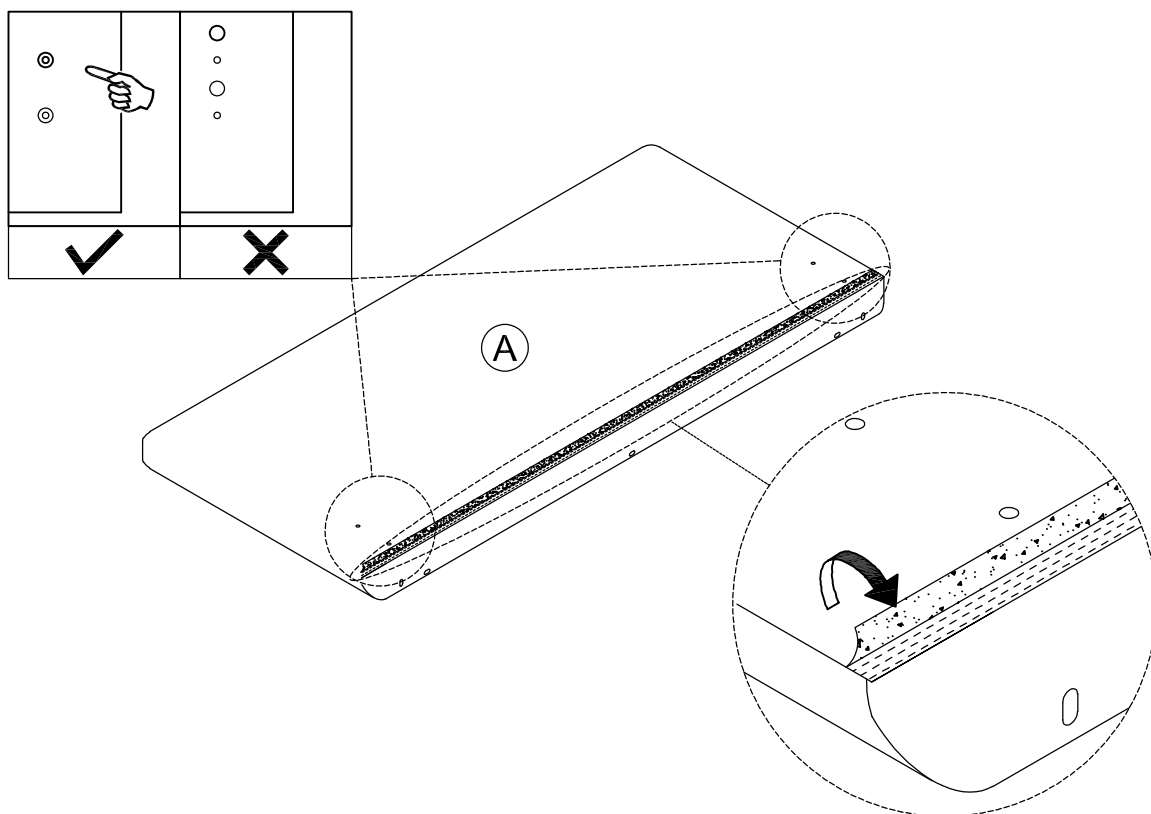


-Assemble according to the illustration.

Step 7:

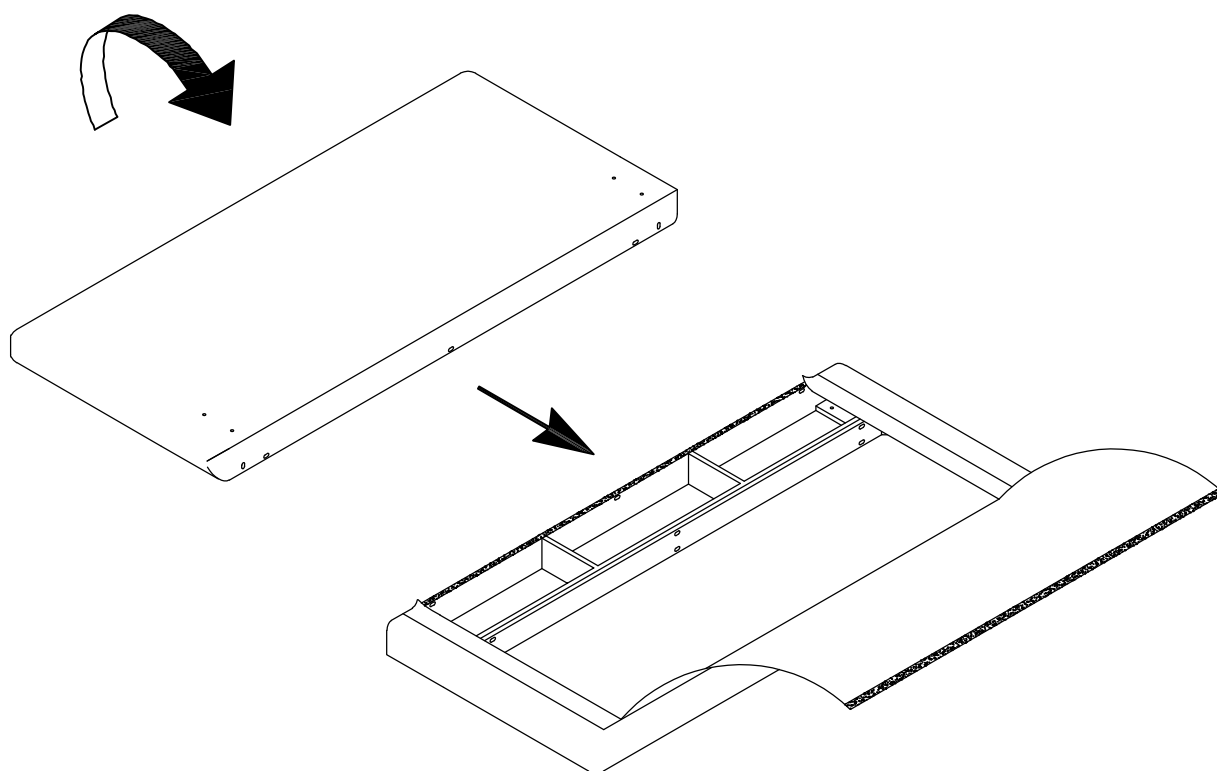

-Assemble according to the illustration.


Step 8:

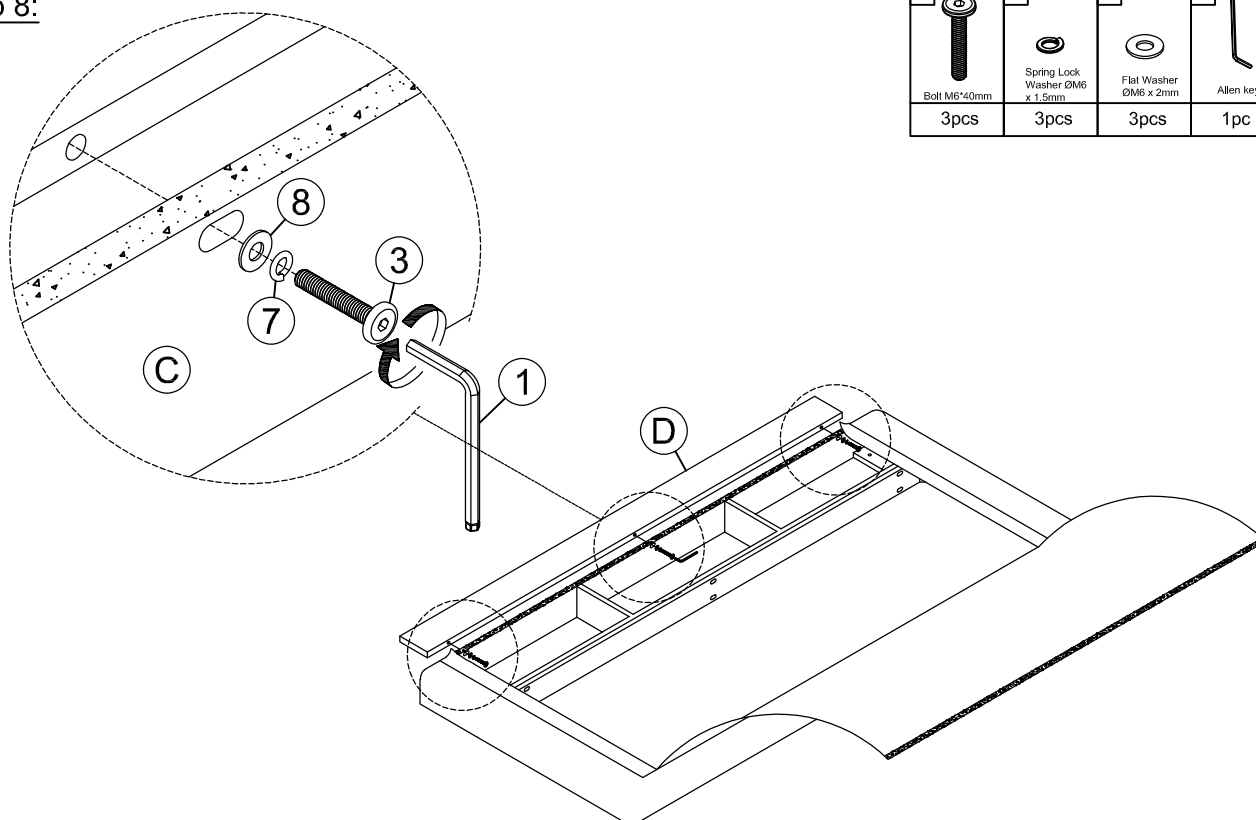

3	7	8	1
Bolt M6*40mm	Spring Lock Washer ØM6 x 1.5mm	Flat Washer ØM6 x 2mm	Allen key
3pcs	3pcs	3pcs	1pc

-Attach Leg Headboard (D) to the Bottom Headboard (C) using Bolt M6*40mm ③ , Spring Lock Washer ØM6 x 1.5mm ⑦+ Flat Washer ØM6 x 2mm ⑧ , Allen key ①

Step 9:

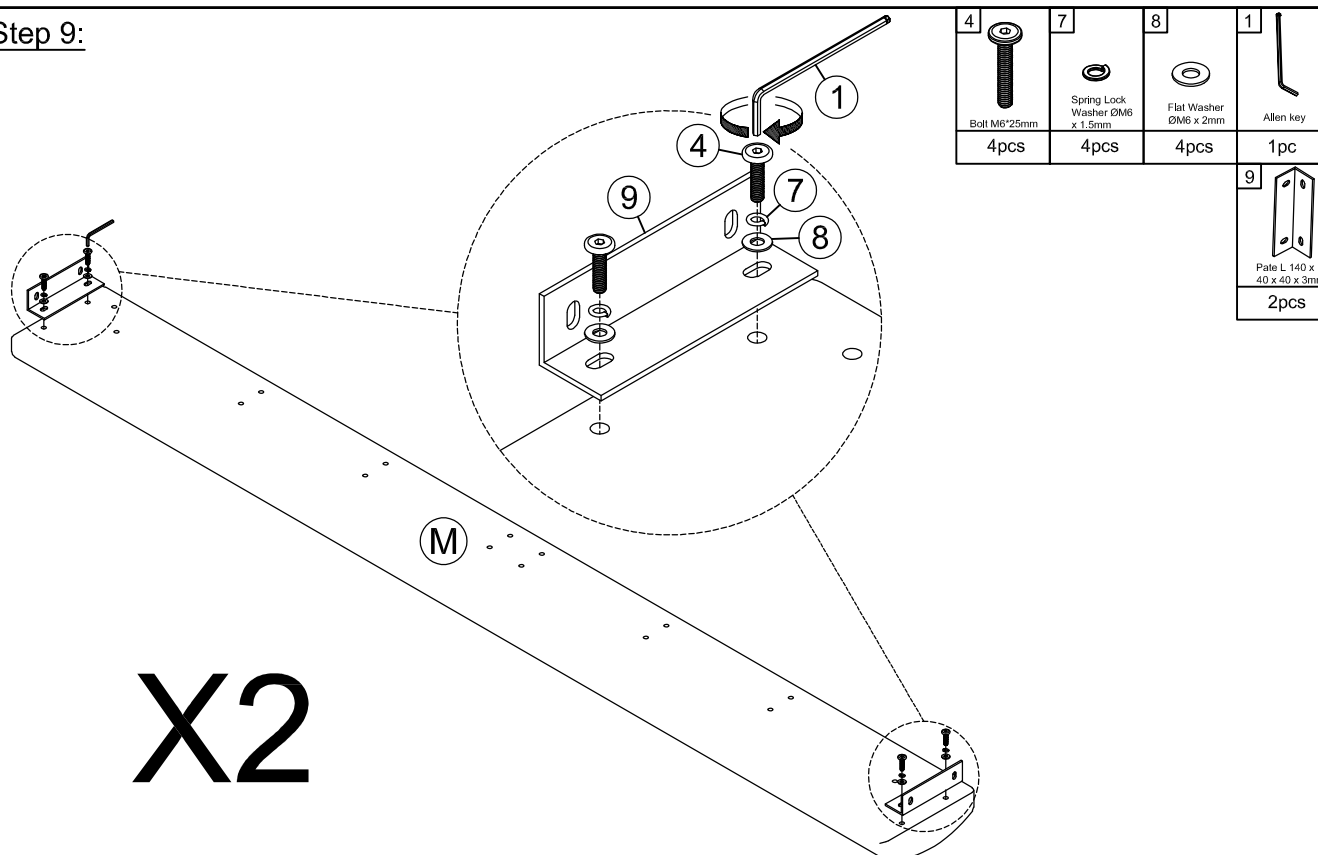


4	7	8	1
Bolt M6*25mm	Spring Lock Washer ØM6 x 1.5mm	Flat Washer ØM6 x 2mm	Allen key
4pcs	4pcs	4pcs	1pc

9
Pate L 140 x 40 x 40 x 3mm
2pcs

X2

-Attach Pate L 140 x 40 x 40 x 3mm ⑨ + Bolt M6*25mm ④ + Spring Lock Washer ØM6 x 1.5mm ⑦+ Flat Washer ØM6 x 2mm ⑧ to the Side rail (M)


Step 10:

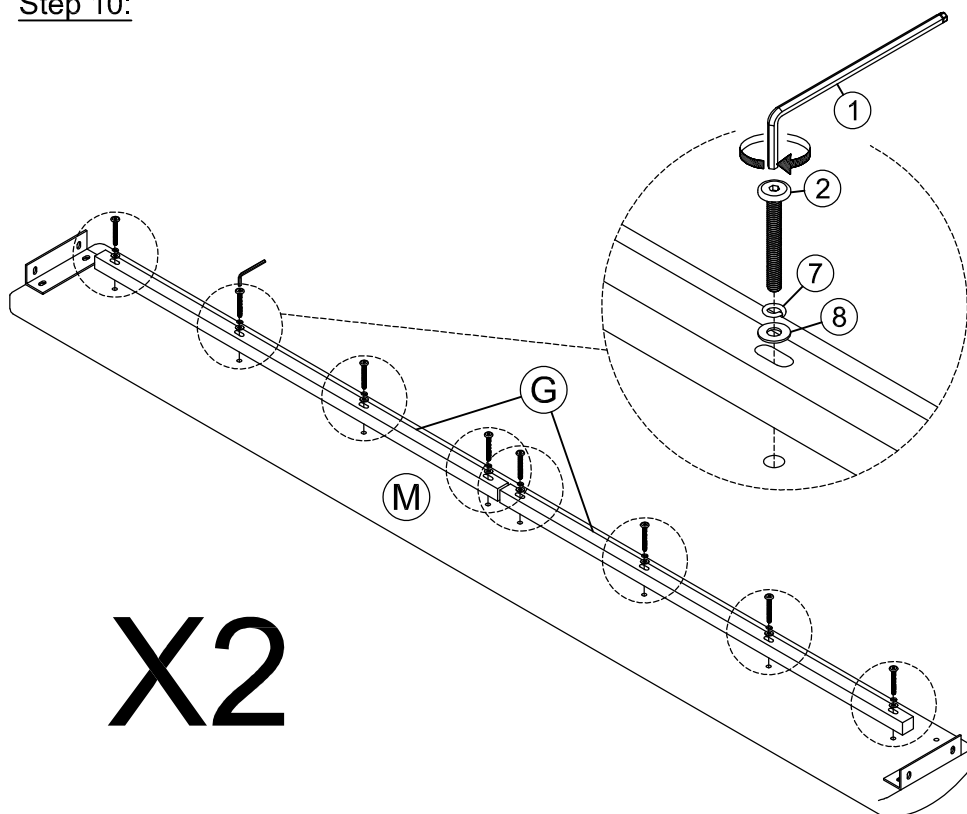

2	7	8	1
Bolt M6*50mm	Spring Lock Washer ØM6 x 1.5mm	Flat Washer ØM6 x 2mm	Allen key
16pcs	16pcs	16pcs	1pc

-Attach Wood bar (G) to the side rail using Bolt M6*50mm②, Spring Lock Washer ØM6 x 1.5mm ⑦+ Flat Washer ØM6 x 2mm ⑧ , Allen key ①


Step 11:

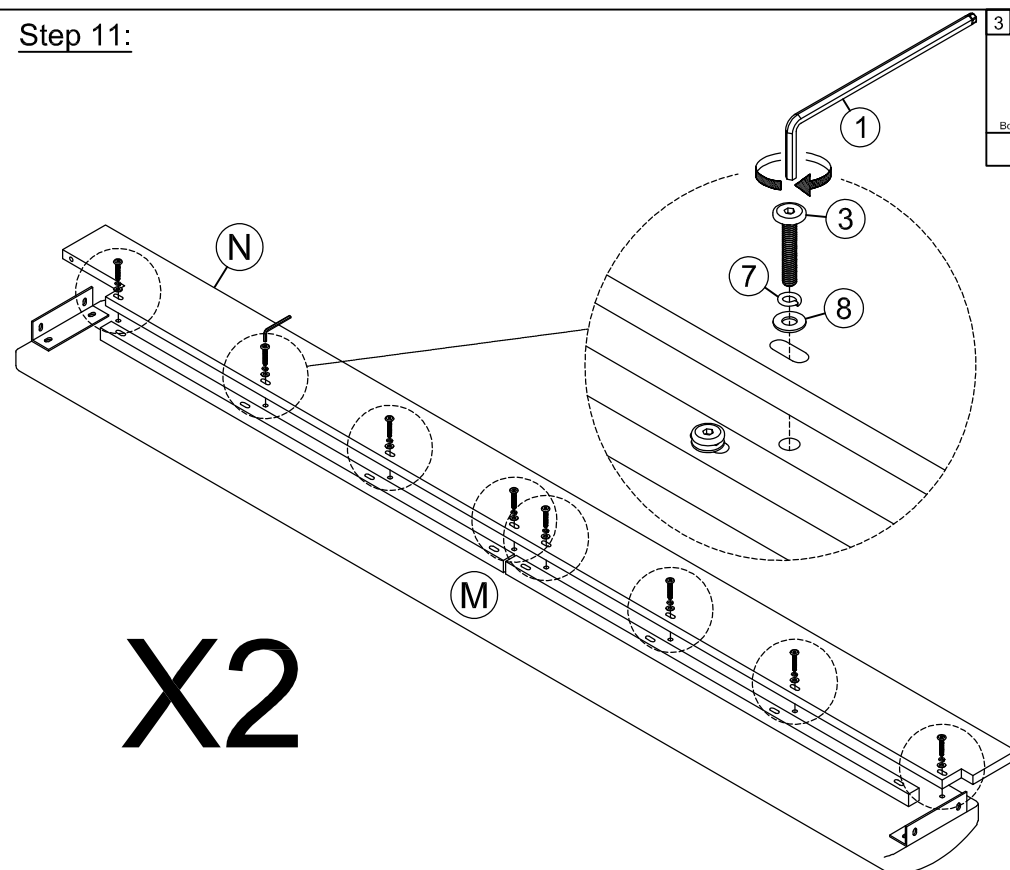

3	7	8	1
Bolt M6*40mm	Spring Lock Washer ØM6 x 1.5mm	Flat Washer ØM6 x 2mm	Allen key
16pcs	16pcs	16pcs	1pc


-Attach Leg Side rail (N) to the Side rail (M) using Bolt M6*40mm③, Spring Lock Washer ØM6 x 1.5mm ⑦+ Flat Washer ØM6 x 2mm ⑧ , Allen key①

Step 12:

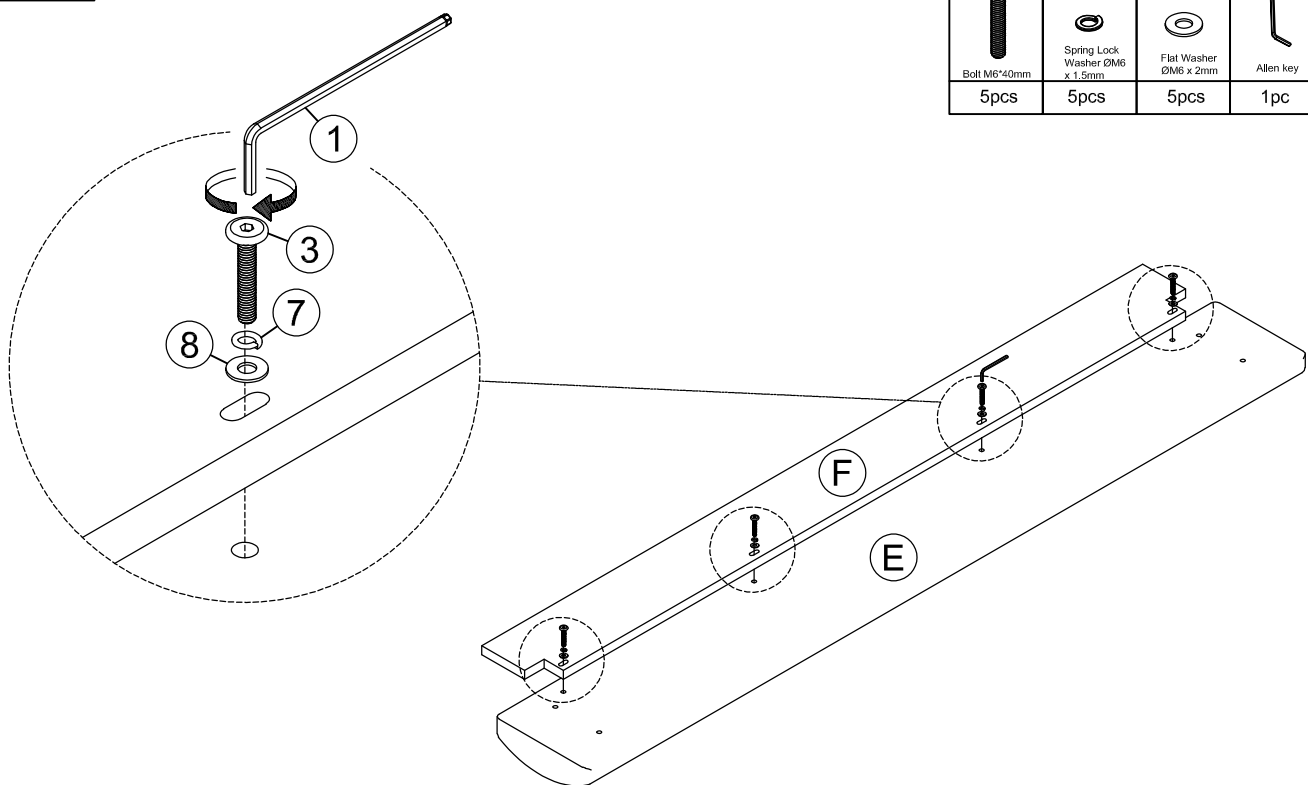


-Attach Leg Footboard (F) to the Footboard (E) using Bolt M6*40mm③, Spring Lock Washer ØM6 x 1.5mm ⑦ + Flat Washer ØM6 x 2mm ⑧ , Allen key①

Step 13:

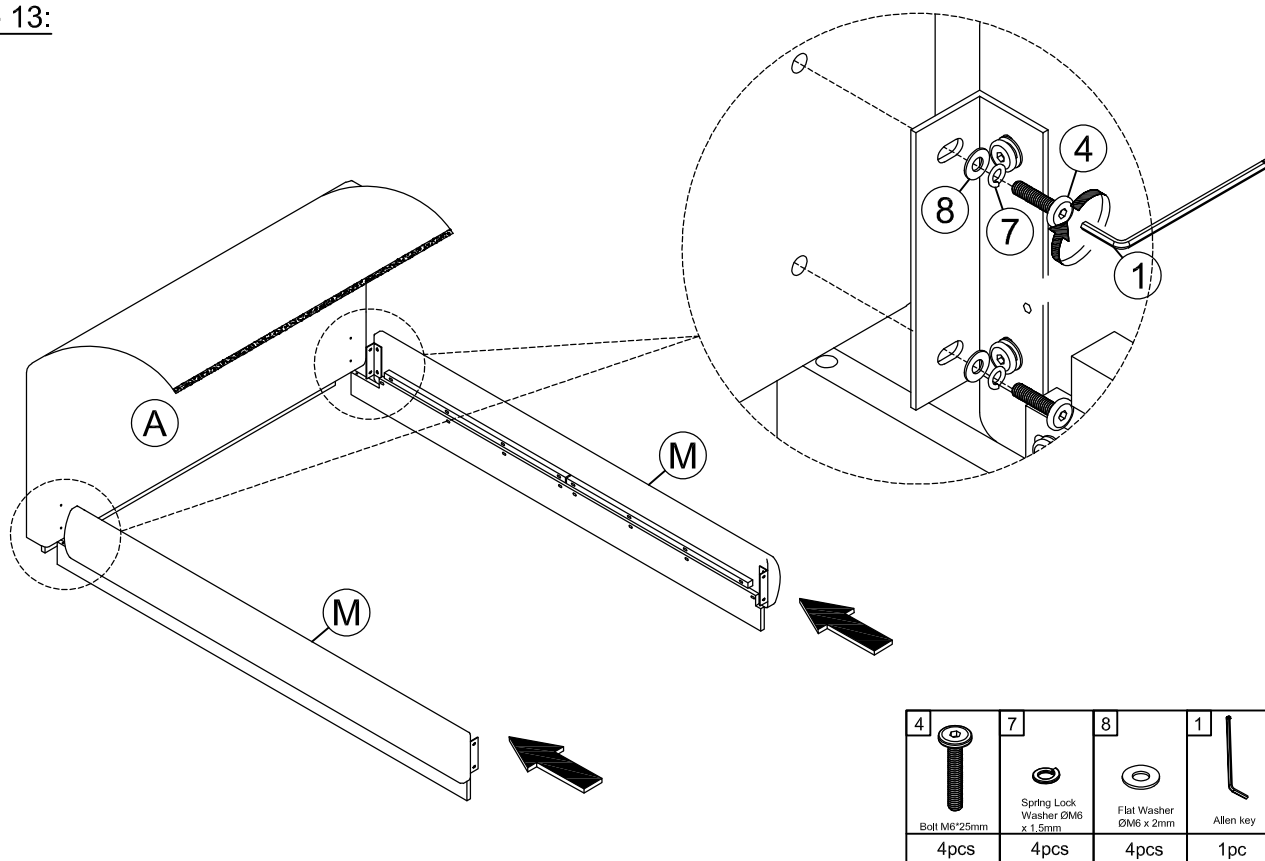


-Attach Side rail (M) to the Bottom Headboard using Bolt M6*25mm④, Spring Lock Washer ØM6 x 1.5mm ⑦ + Flat Washer ØM6 x 2mm ⑧ , Allen key ①

Step 14:

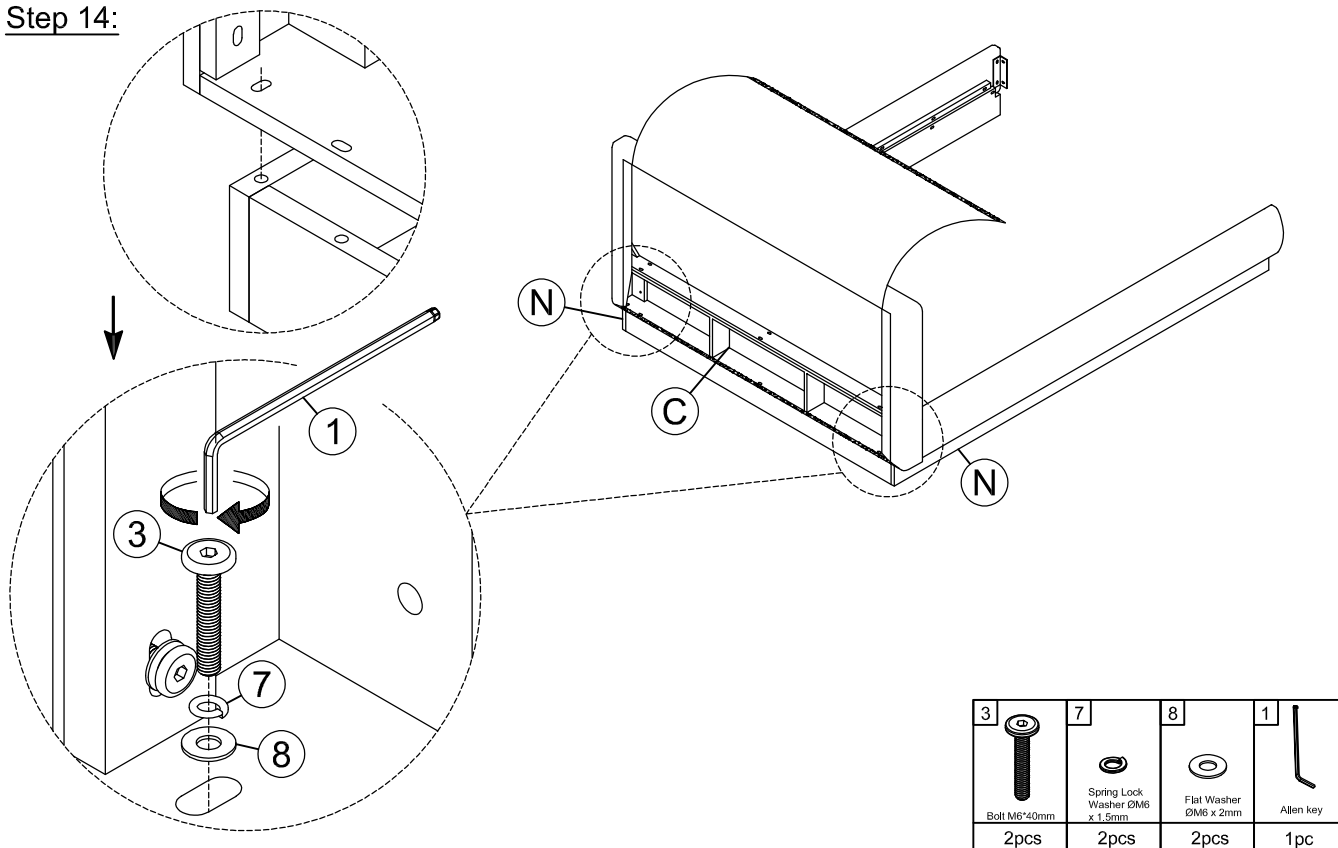


-Attach Bottom Headboard (C) to the Leg Side rail (N) using Bolt M6*40mm③, Spring Lock Washer ØM6 x 1.5mm ⑦+ Flat Washer ØM6 x 2mm ⑧ , Allen key ①

Step 15:

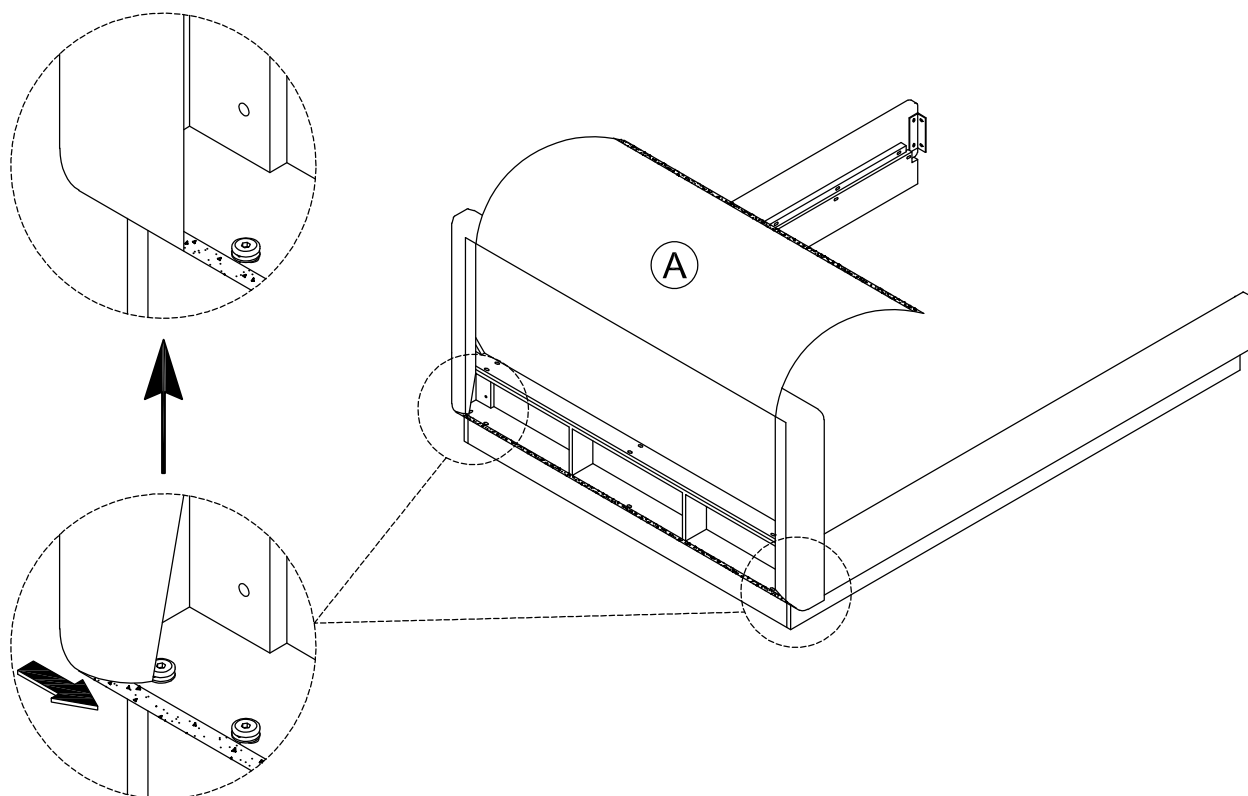


-Assemble according to the illustration.

Step 16:

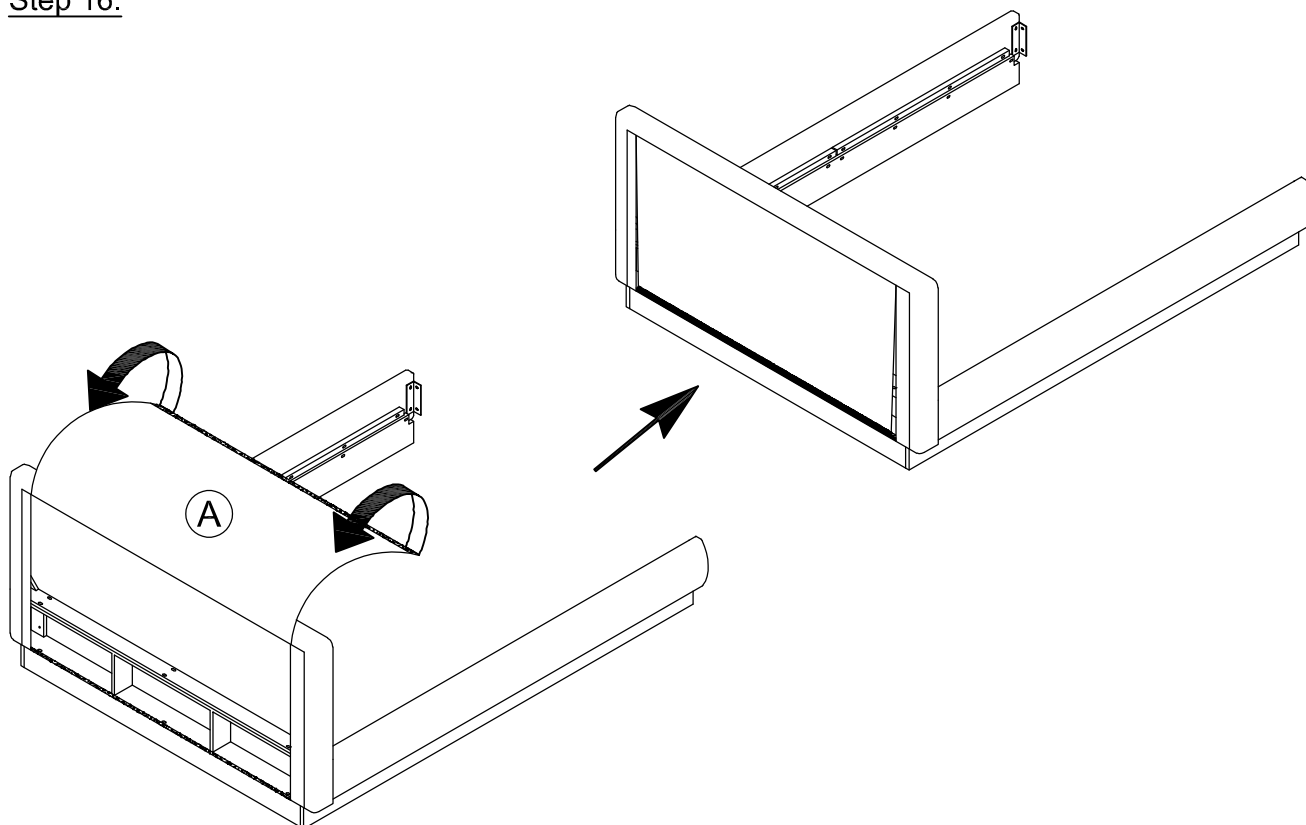


-Assemble according to the illustration.

Step 17:

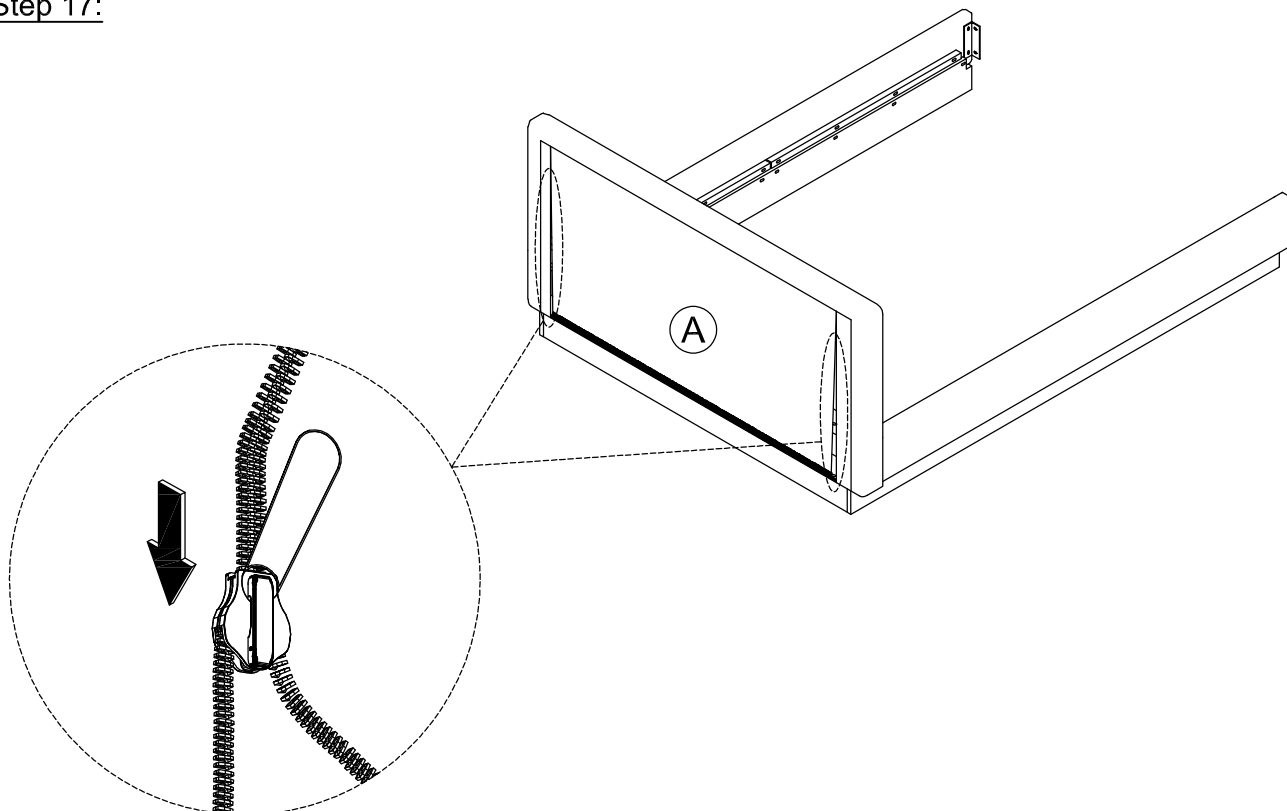


-Assemble according to the illustration.

Step 18:

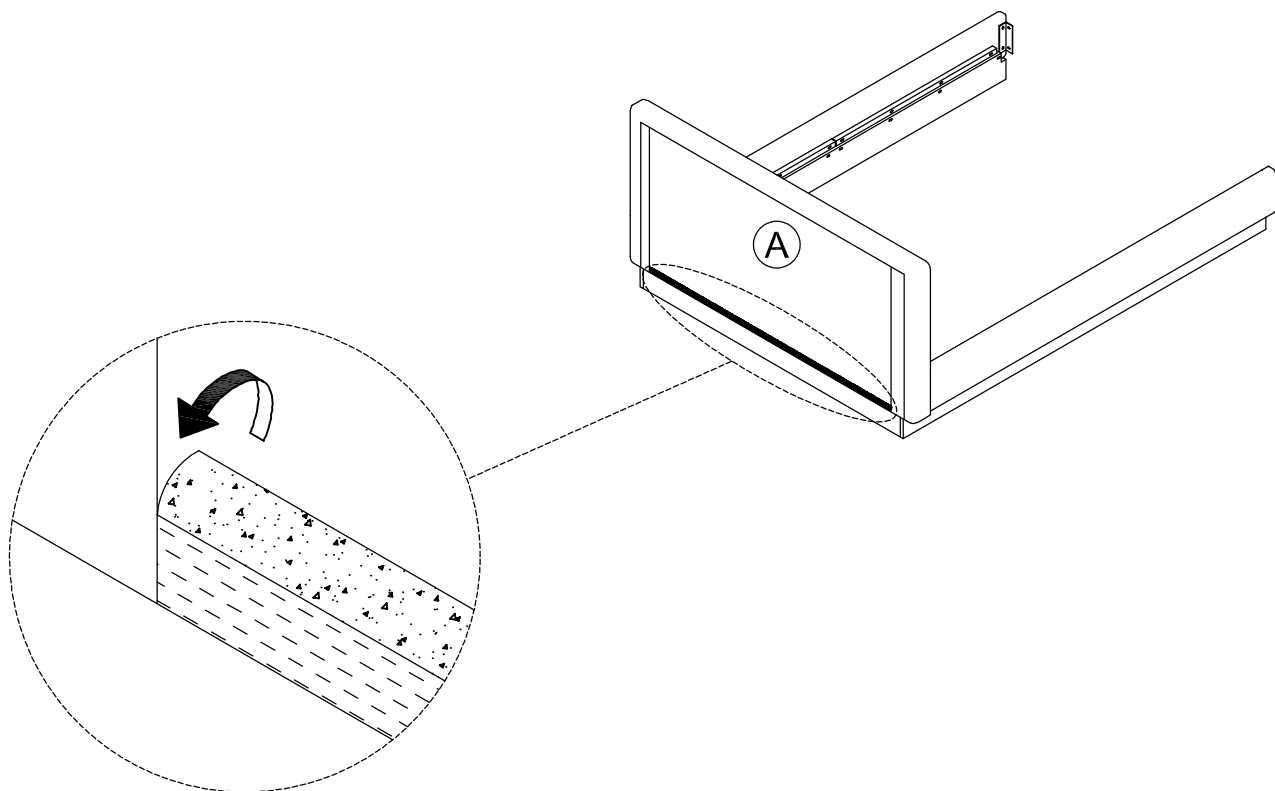


-Assemble according to the illustration.

Step 19:

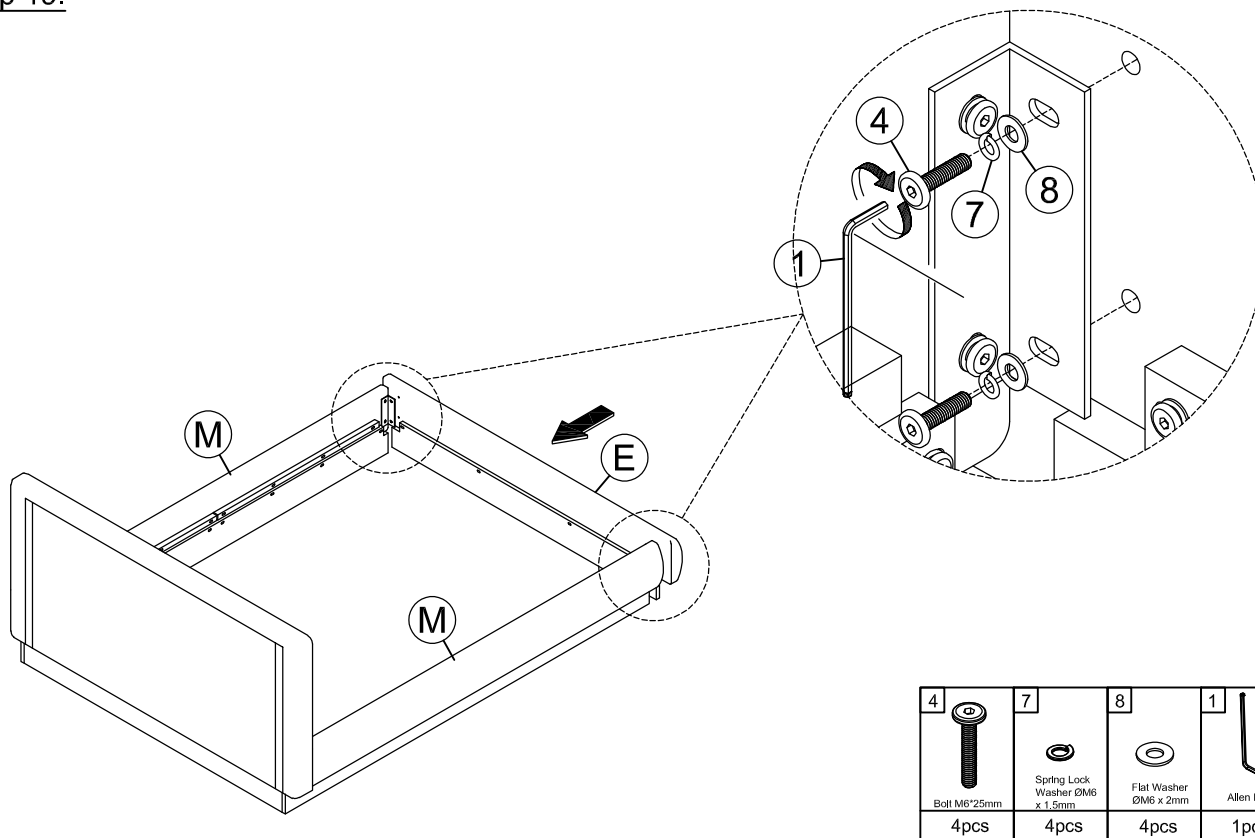



-Attach Footboard (E) to the Side rail (M) using Bolt M6*25mm④, Spring Lock Washer ØM6 x 1.5mm ⑦+ Flat Washer ØM6 x 2mm ⑧ , Allen key①

Step 20:

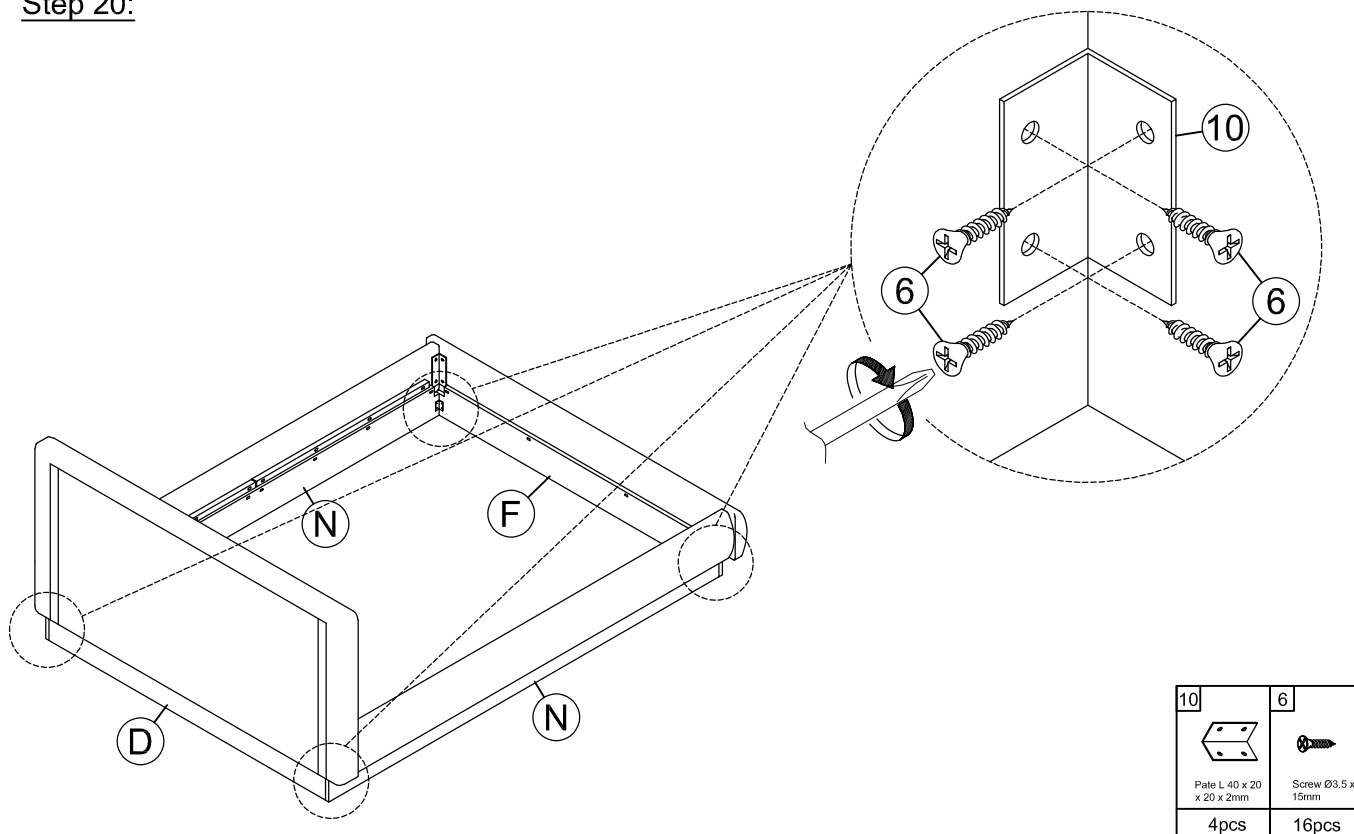


-Attach Leg Footboard (F) , Leg Headboard (D) to the Leg Side rail (N) using Pate L 40 x 20 x 20 x 2mm ⑩ , Screw Ø3.5 x 15mm ⑥

Step 21:

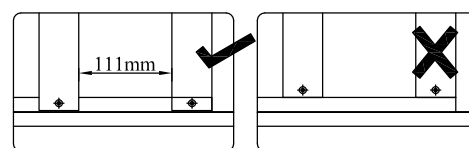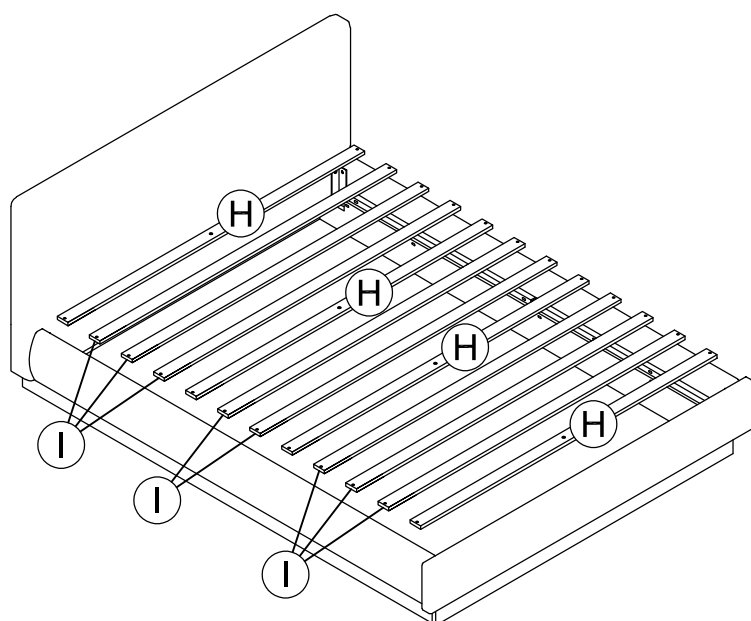


-Attach Slat 1 (H), Slat 2 (I) to side rail (M)

Step 22:

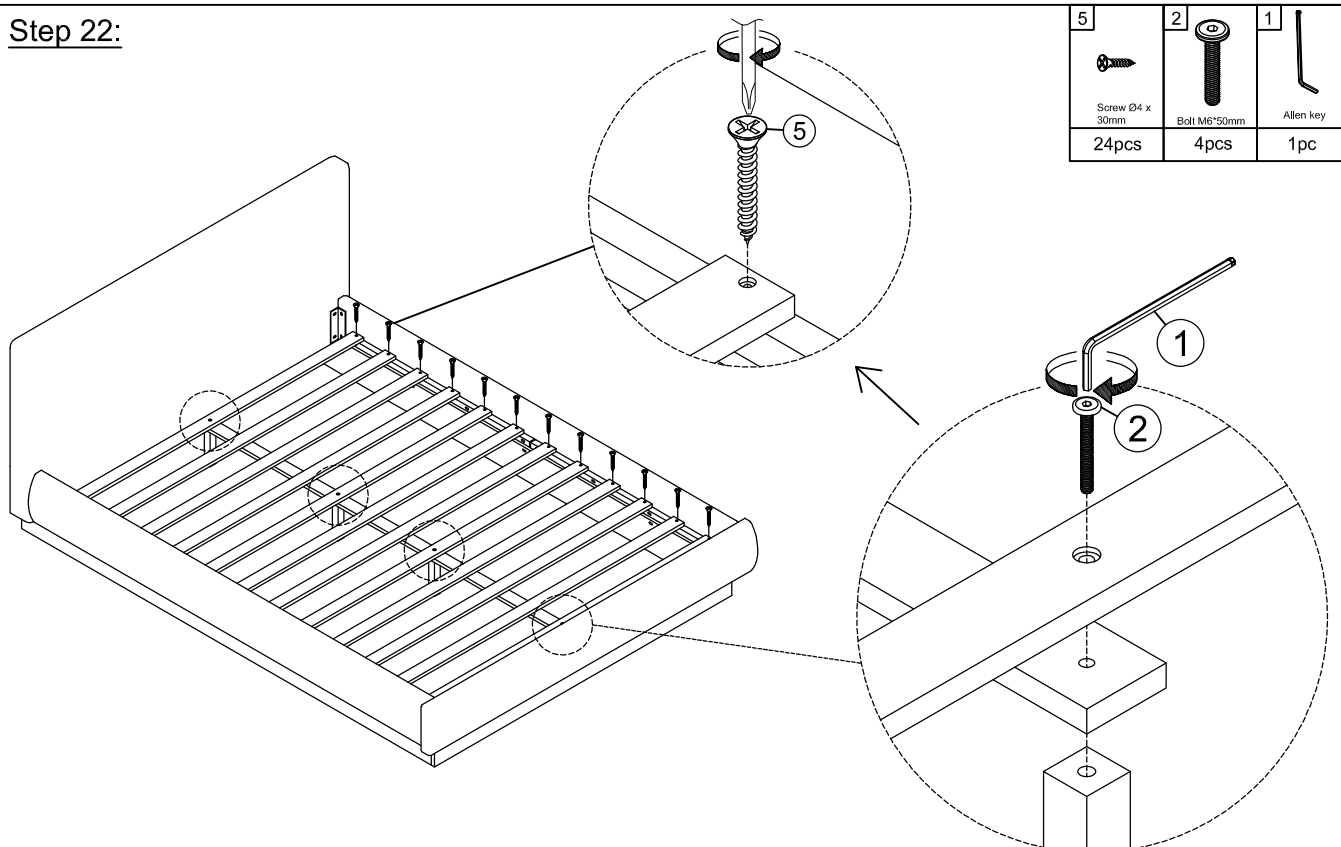

- Attach Center slat support rail (J), Slat 1 (H) to Slats Supporting Legs (K) using Bolt M6*50mm(2), Allen key (1)
- Attach Slat 1 (H), Slat 2 (I) to side rail (M) using Screw Ø4 x 30mm(5).

Step 23:

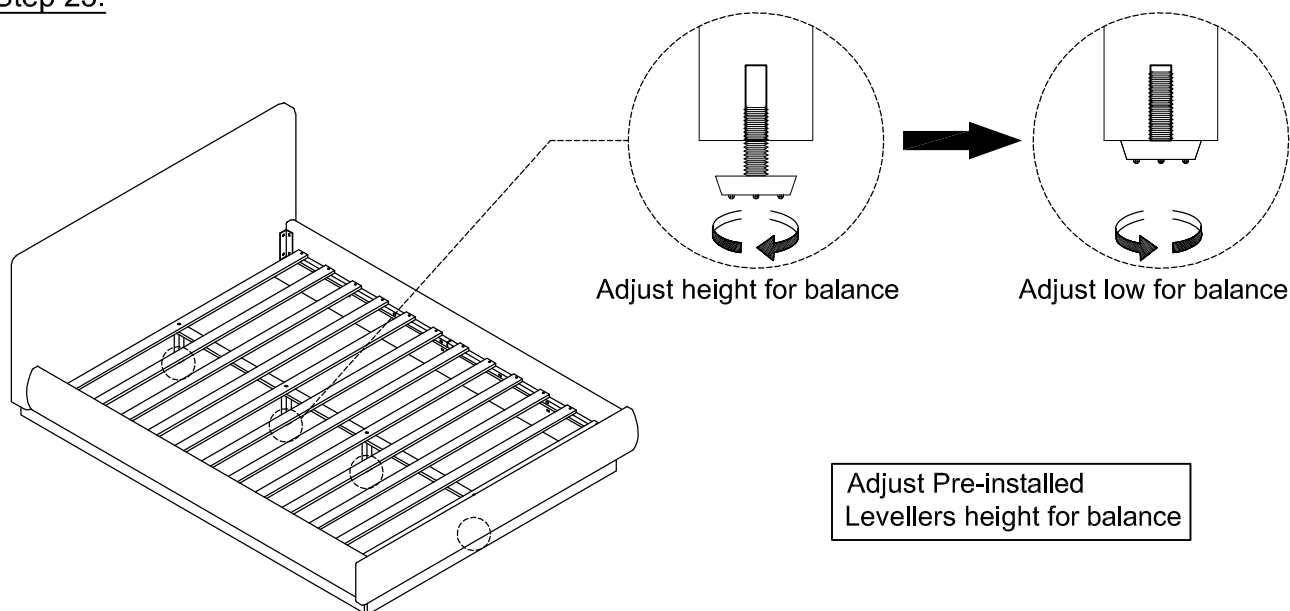

Inspect the Bed and make sure all parts are adequately connected.

Adjust the Levelers to desired height to avoid wobbles.

Your bed is ready for use.

****Please note:** this Bed can only be used on a flat, level surface.

CARE INTRUCTIONS:

Hardware may loosen overtime. Periodically check that all connections are tight.

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners. -15-

Questions & Answers about Proposition 65

- What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals.

Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm.

This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

- What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.

- What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

- Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.

Questions@oehha.ca.gov, or by phone at (916) 445-6900.