

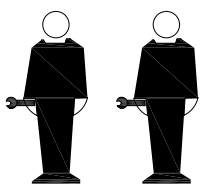
























DJ0733

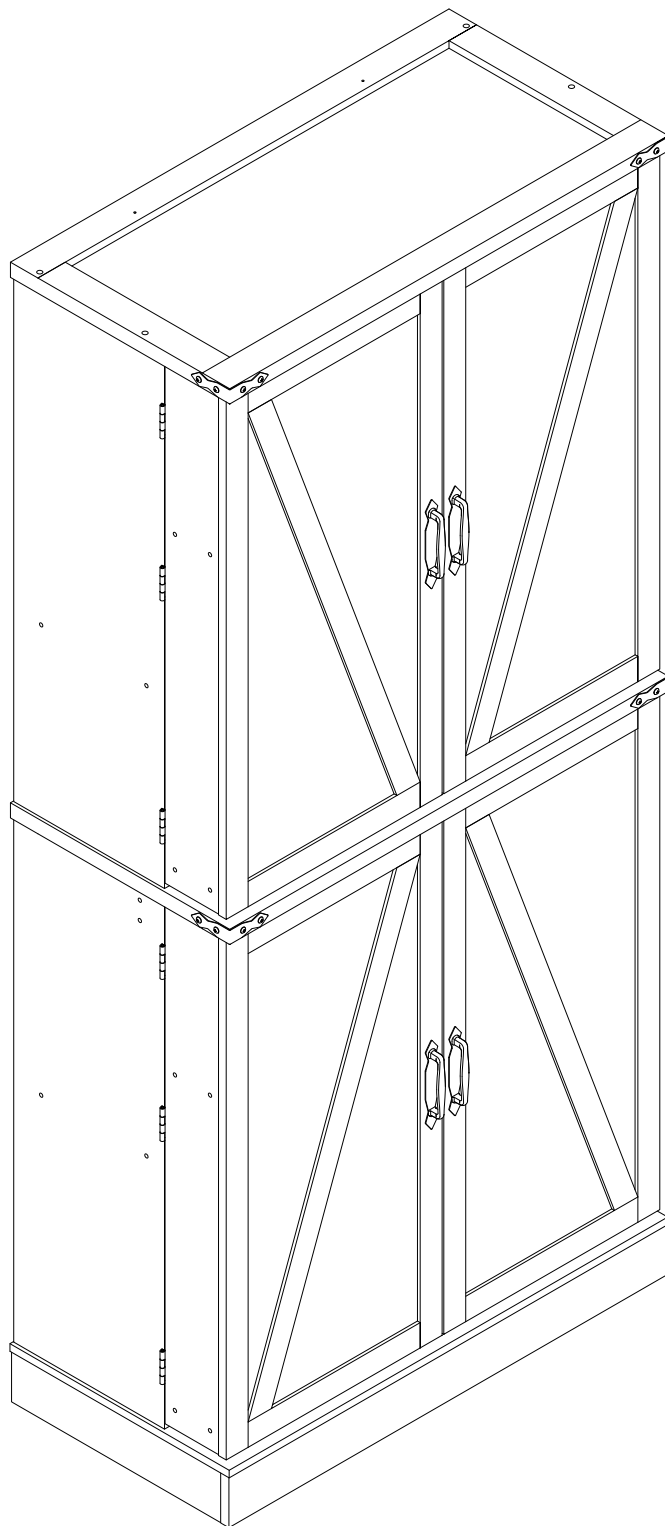


For convenience and safety, we recommend two people to assemble.
If you have any questions, please contact our customer service.






















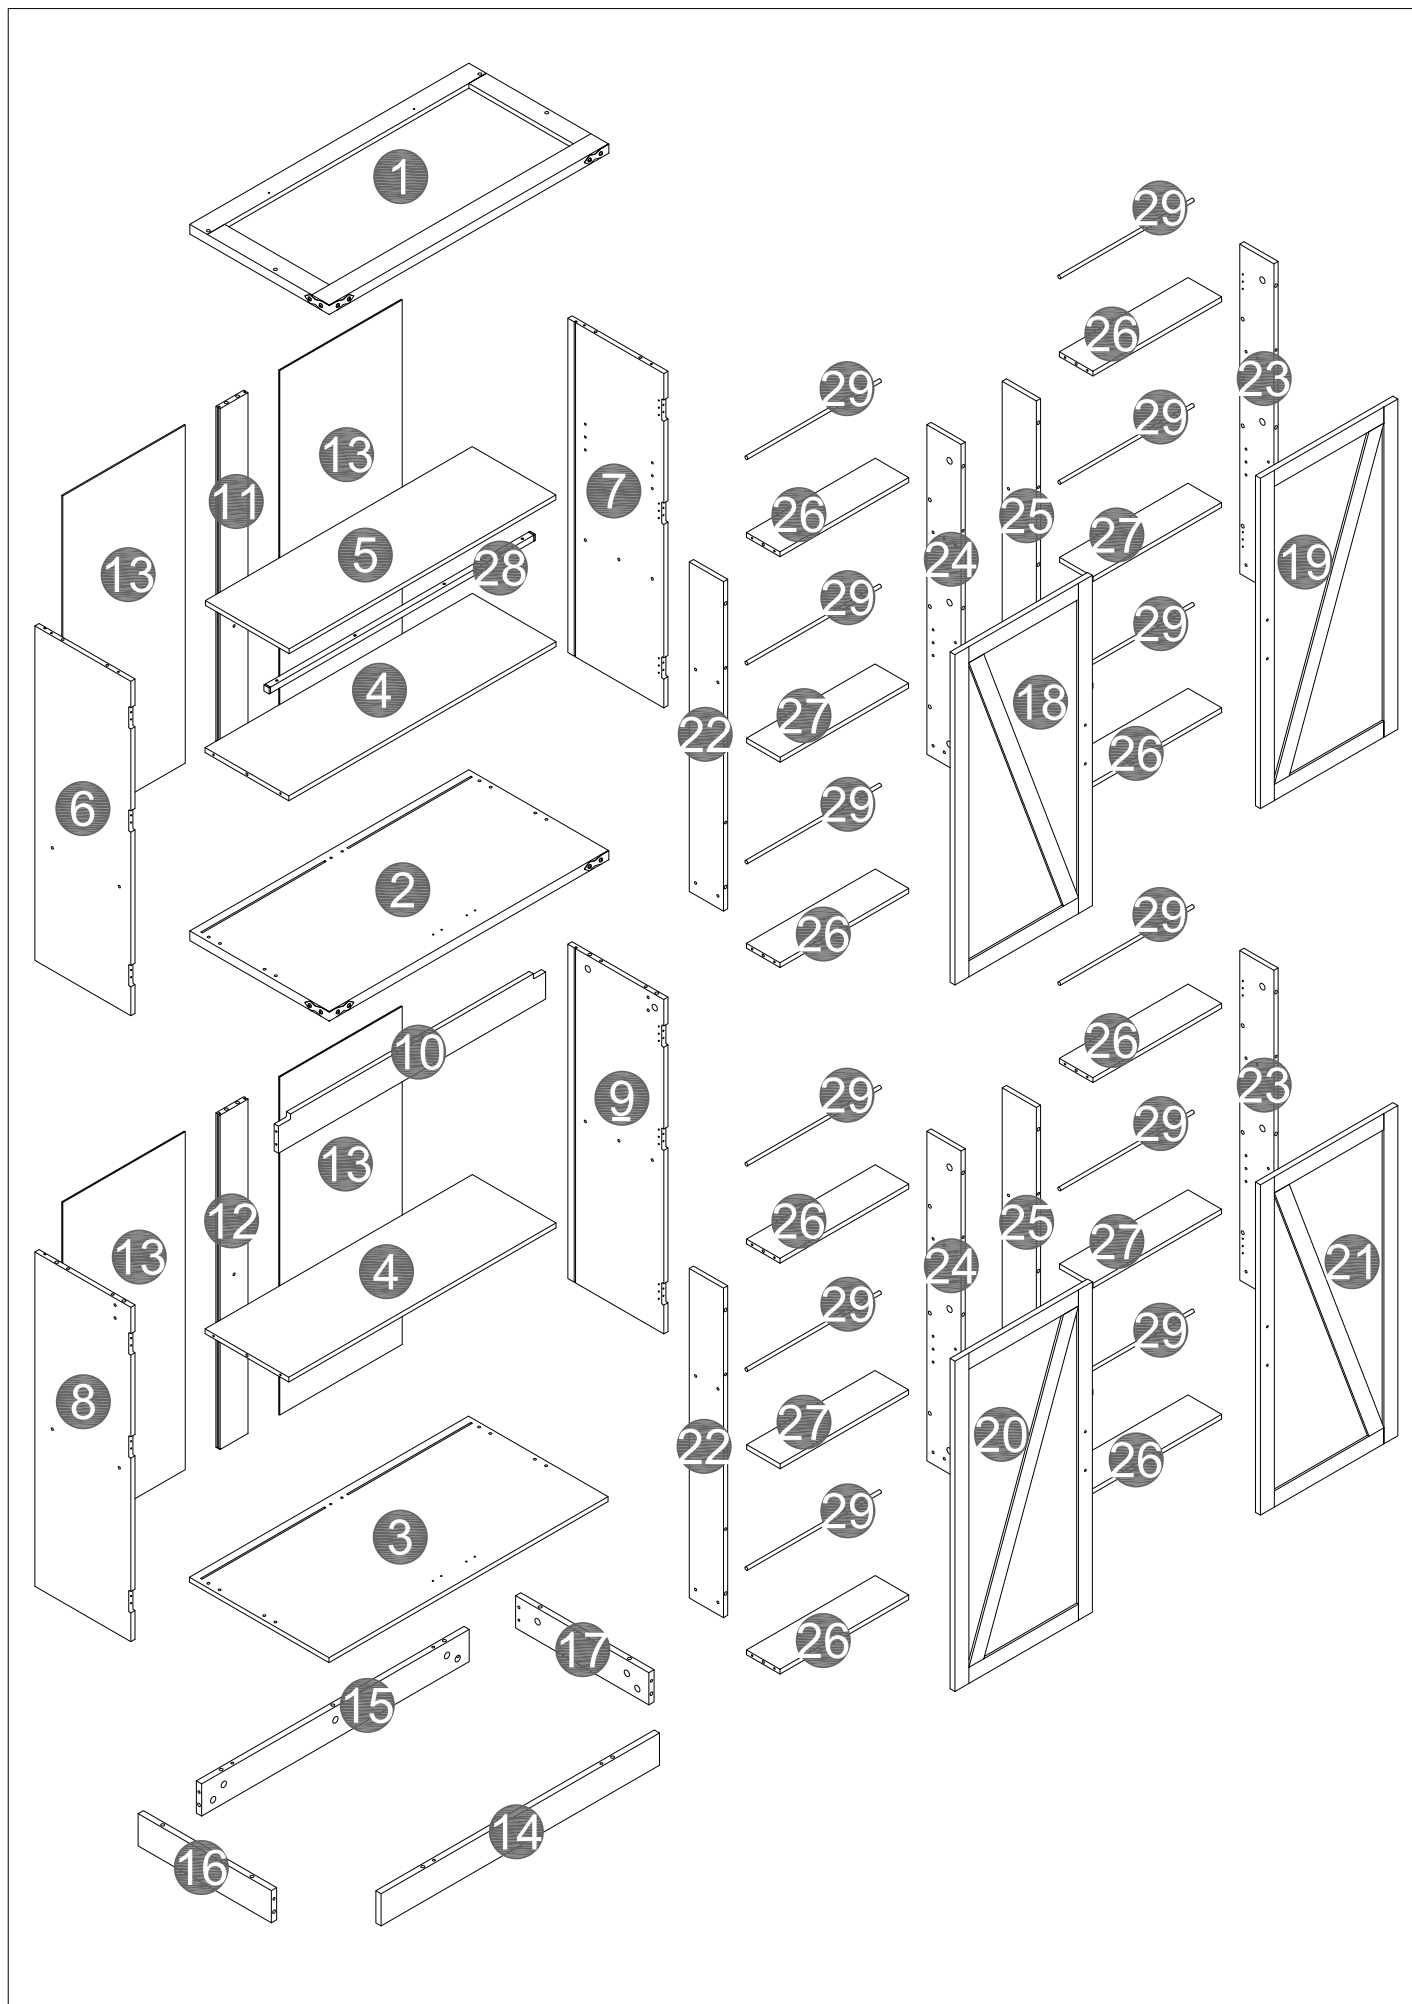


PARTS LIST

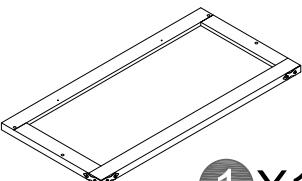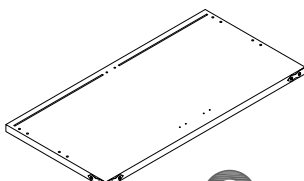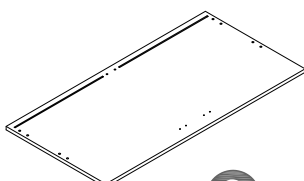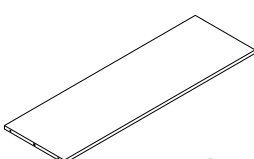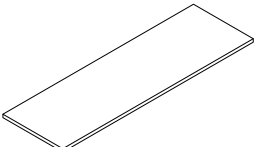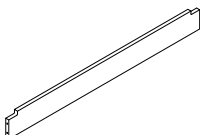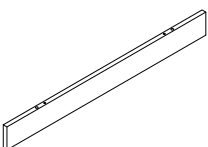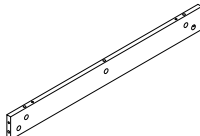 1X1	 2X1	 3X1	 4X2
 5X1	 6X1	 7X1	 8X1
 9X1	 10X1	 11X1	 12X1
 13X4	 14X1	 15X1	 16X1
 17X1	 18X1	 19X1	 20X1
 21X1	 22X2	 23X2	 24X2
 25X2	 26X8	 27X4	 28X1  29X12

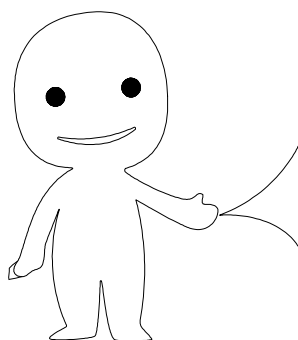

Please prepare the following tools

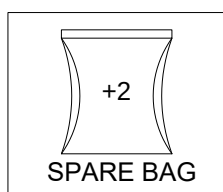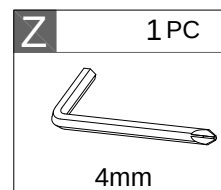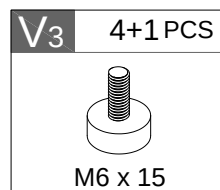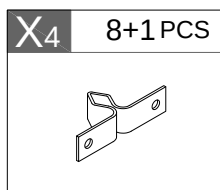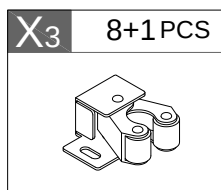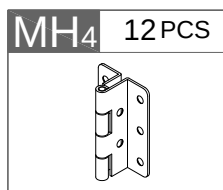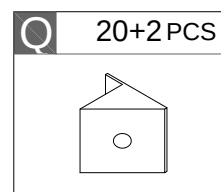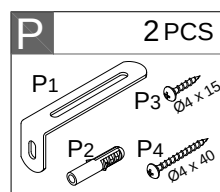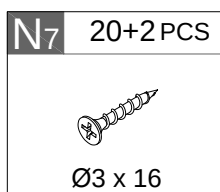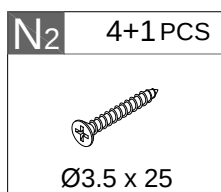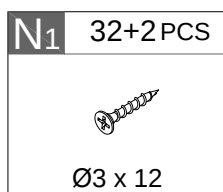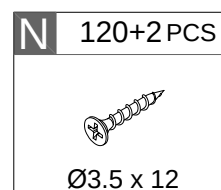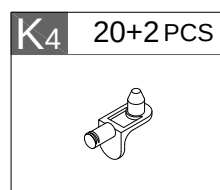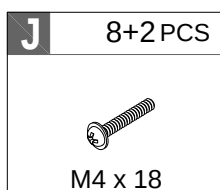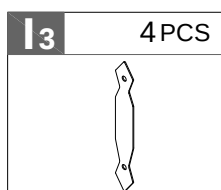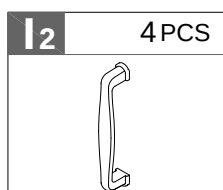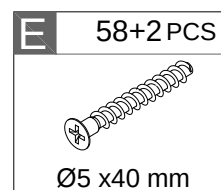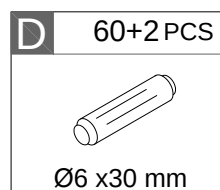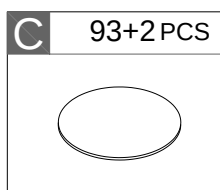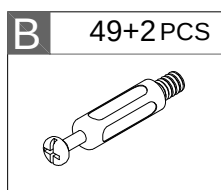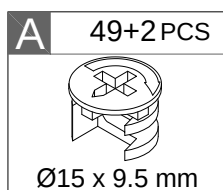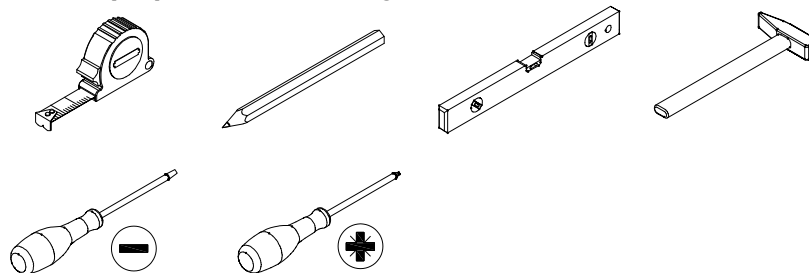

Tips: The number after "+" represents the spare hardware.

IMPORTANT NOTES:




The item you are purchasing is a large furniture product that requires a large number of components to assemble.

Please take all parts boxes out of the packaging and place them in order. So that you can follow the steps in the installation manual to find the corresponding parts box and quantity of need when installing. Please do not take too many parts to prevent the parts from scattering.





Please be patient and follow the instructions step by step for installation. If you have any problems during the installation process, you can ask our customer service to help you solve them!

SAFETY TIPS:


Static charge may cause dust on foam – clean with a dry or damp cloth. Small foam strands may be present – handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guidelines.

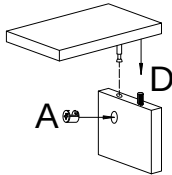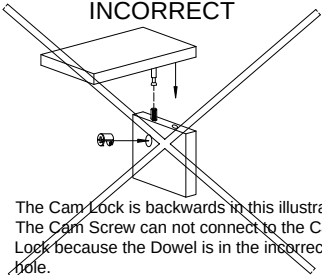Cam Lock/Dowel Placement Supplement		
CORRECT 1  When inserting the Cam lock, make sure that the open End of the cam Lock faces the Cam Screw Entry. The Dowel will be inserted in the hole NEXT to the Cam Lock/Cam Screw hole.	INCORRECT 2  The Cam Lock is backwards in this illustration. The Cam Screw can not connect to the Cam Lock because the Dowel is in the incorrect hole.	3  To tighten, turn the Cam Lock CLOCKWISE until the arrow or "△" signs point AWAY from the connected board. *NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS, DO NOT OVER-TIGHTEN.

1

B	2 PCS	D	6 PCS	E	12 PCS	N₁	4 PCS	X₃	2 PCS
									

Note the gap orientation.

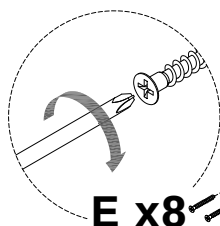


E x8

D x2

Note that the part with holes is at the lower side.



First, insert wooden dowel **D** into the designated side hole, followed by the installation of other components.

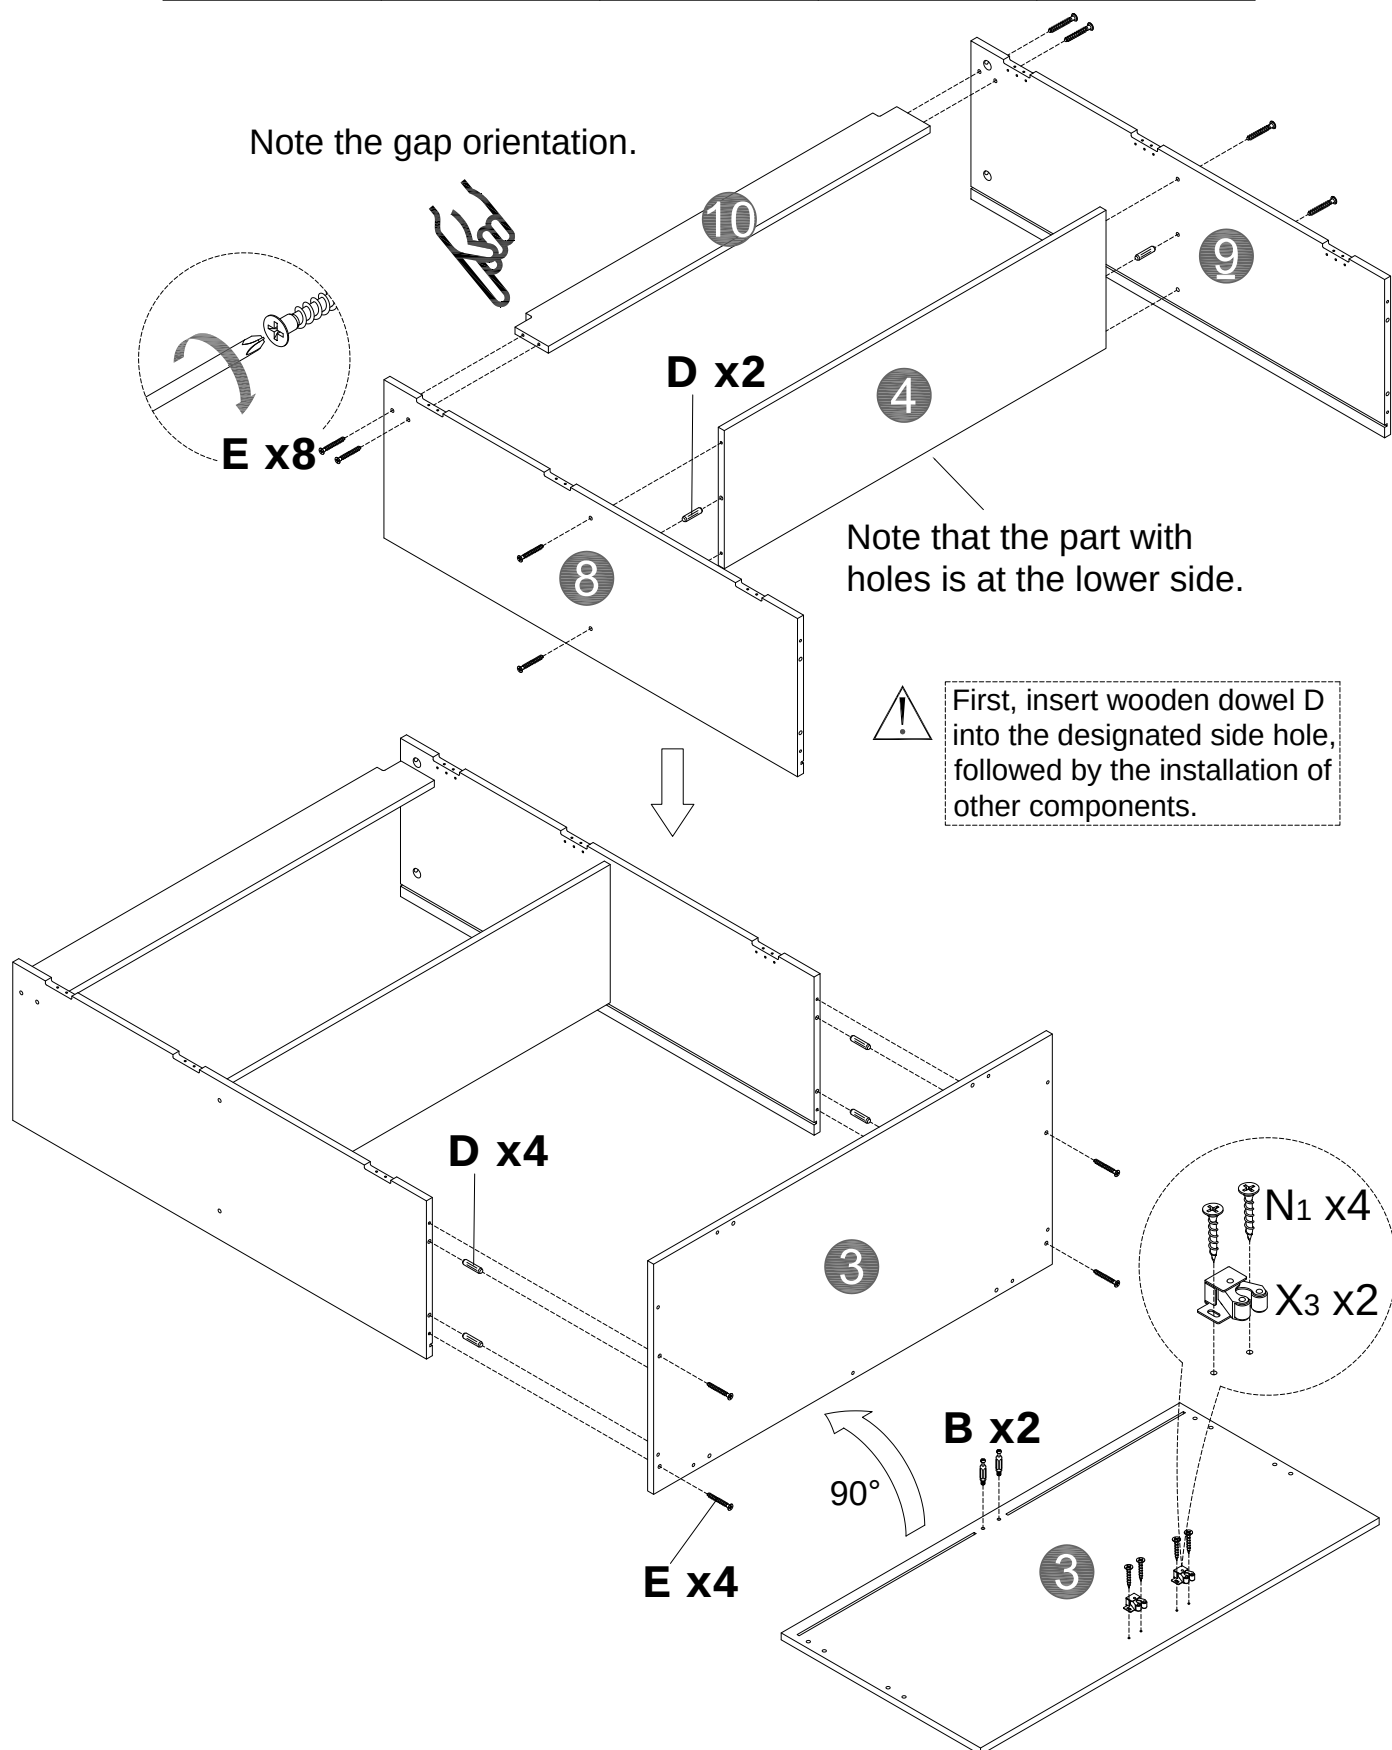

D x4

3

E x4



90°







B x2

3



N₁ x4
X₃ x2



2

A	4 PCS	B	4 PCS	D	4 PCS
					

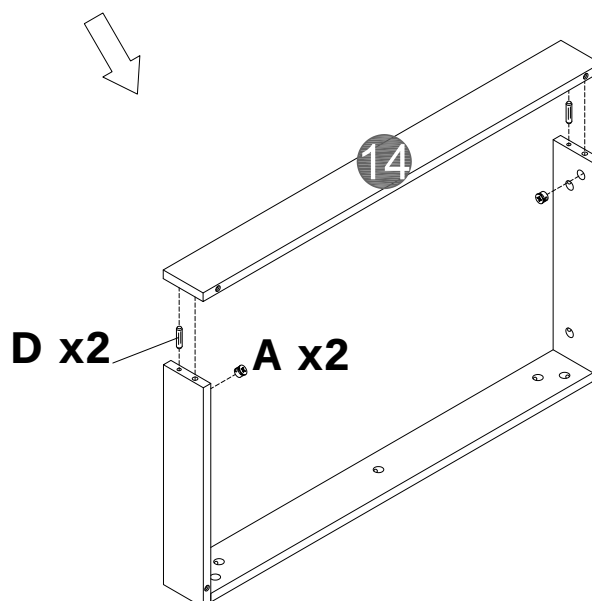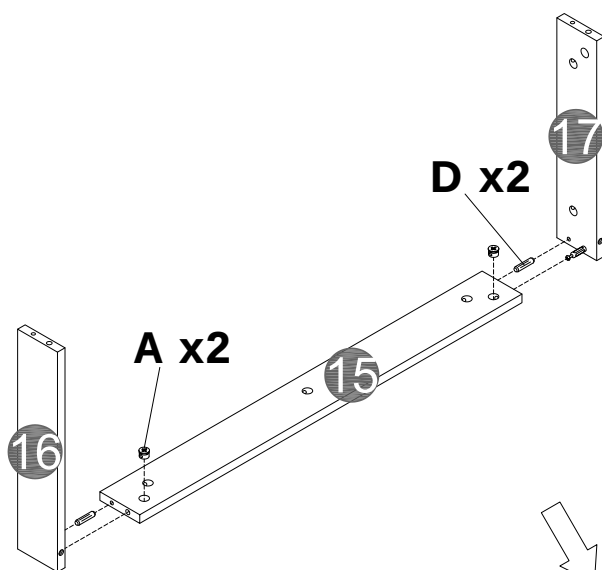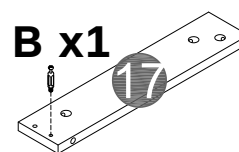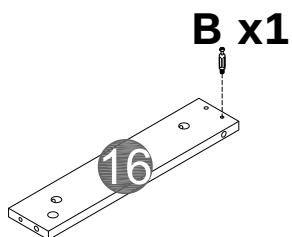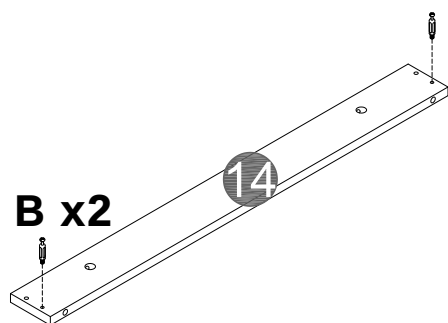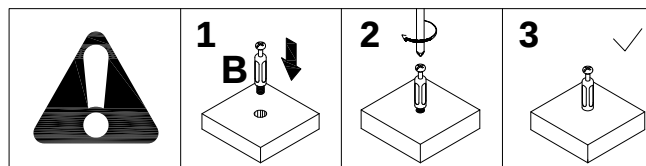



3


A	9 PCS	B	9 PCS	D	4 PCS
					

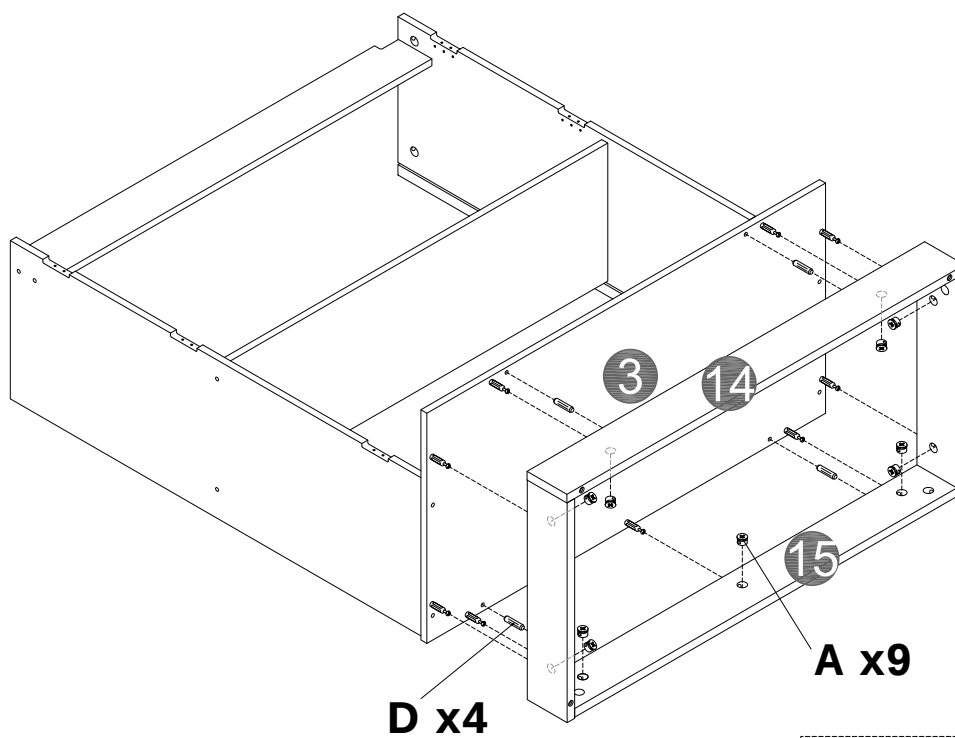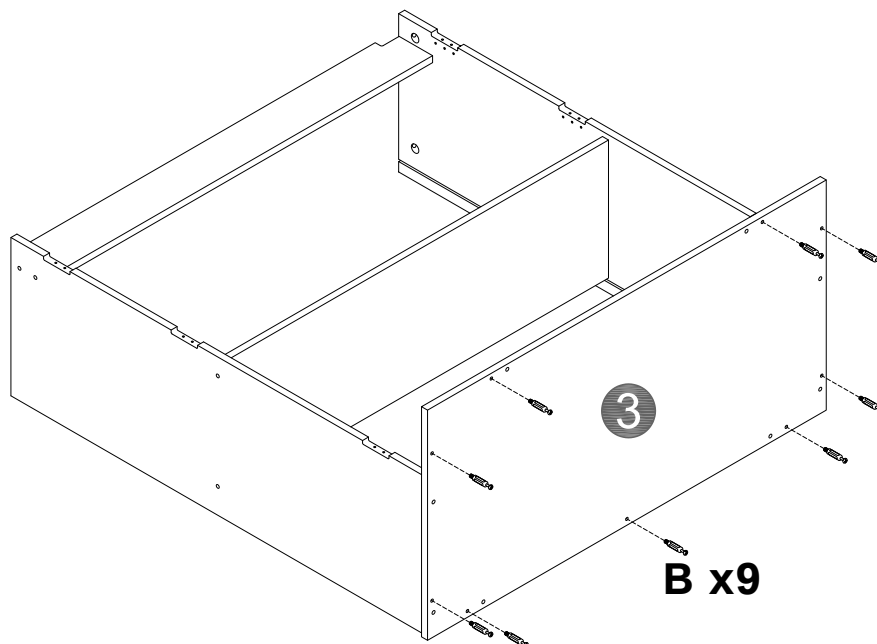


Note the front and rear sides of the bottom frame.

4

A	2 PCS	E	1 PC
			



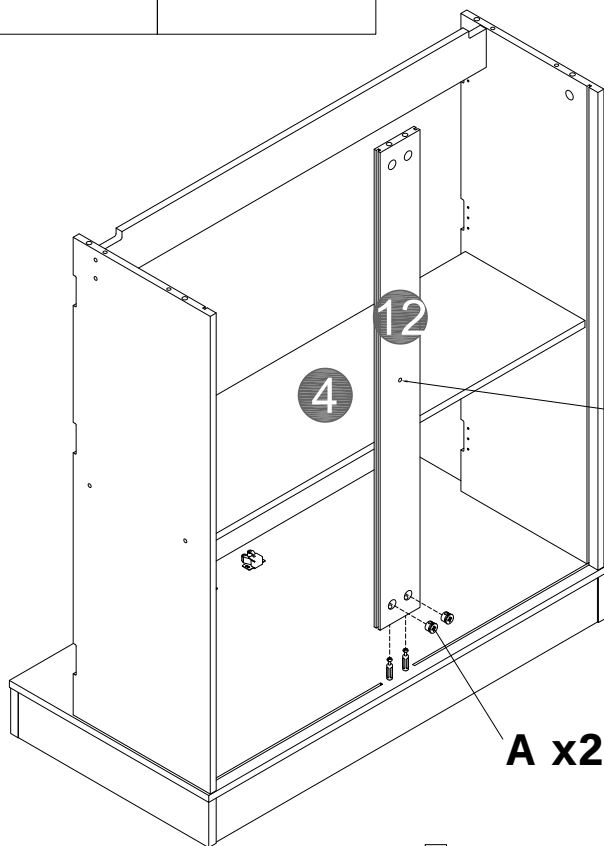



A x2

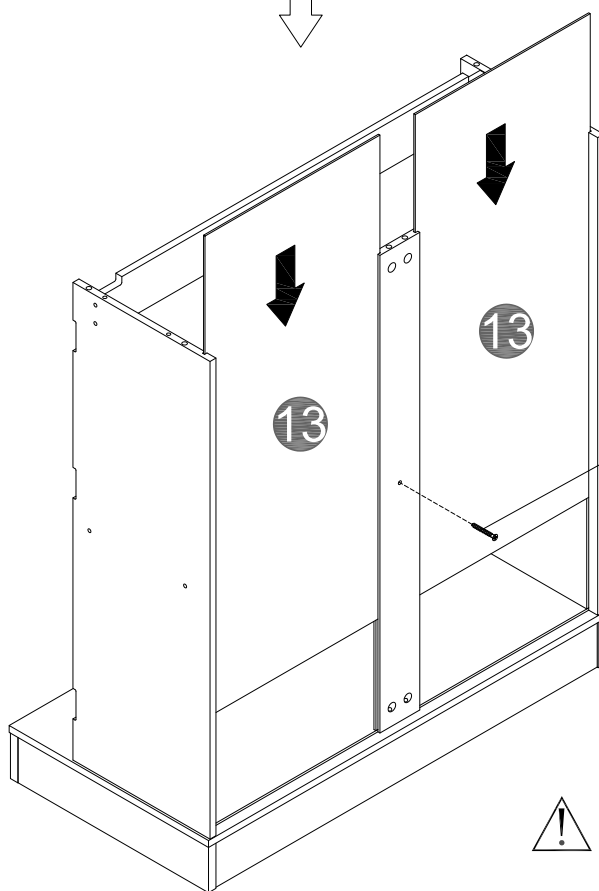


Ensure the back board is inserted into the slot.

5

B	2 PCS	D	6 PCS	E	8 PCS	N₁	4 PCS	X₃	2 PCS
									

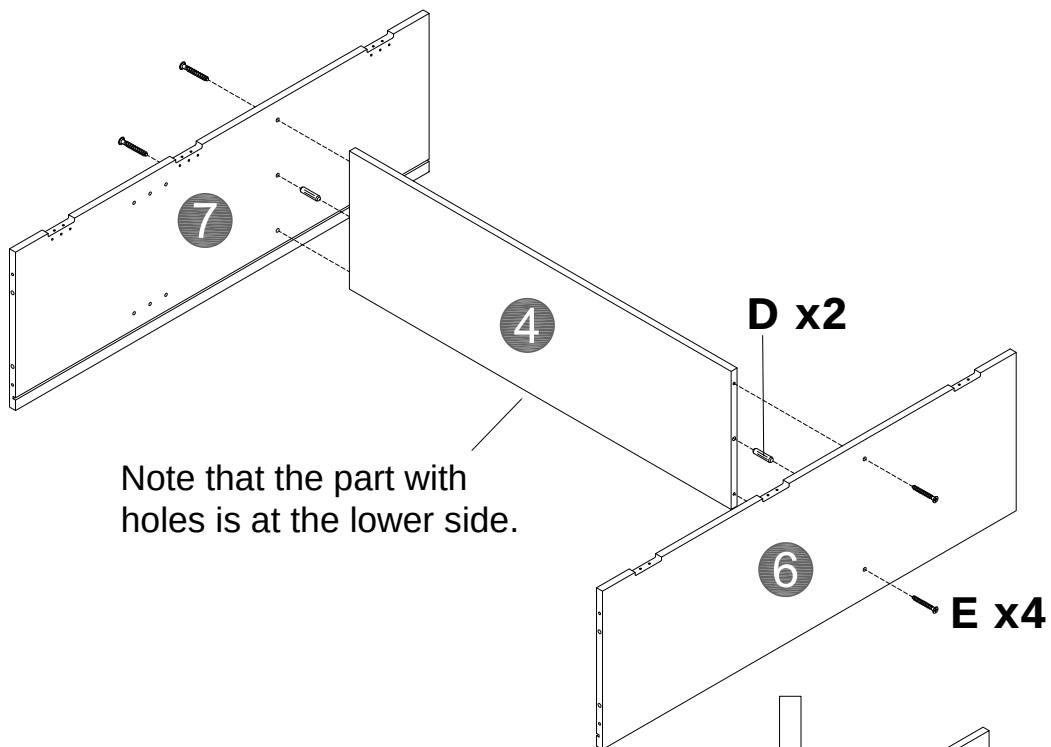


Note that the part with holes is at the lower side.

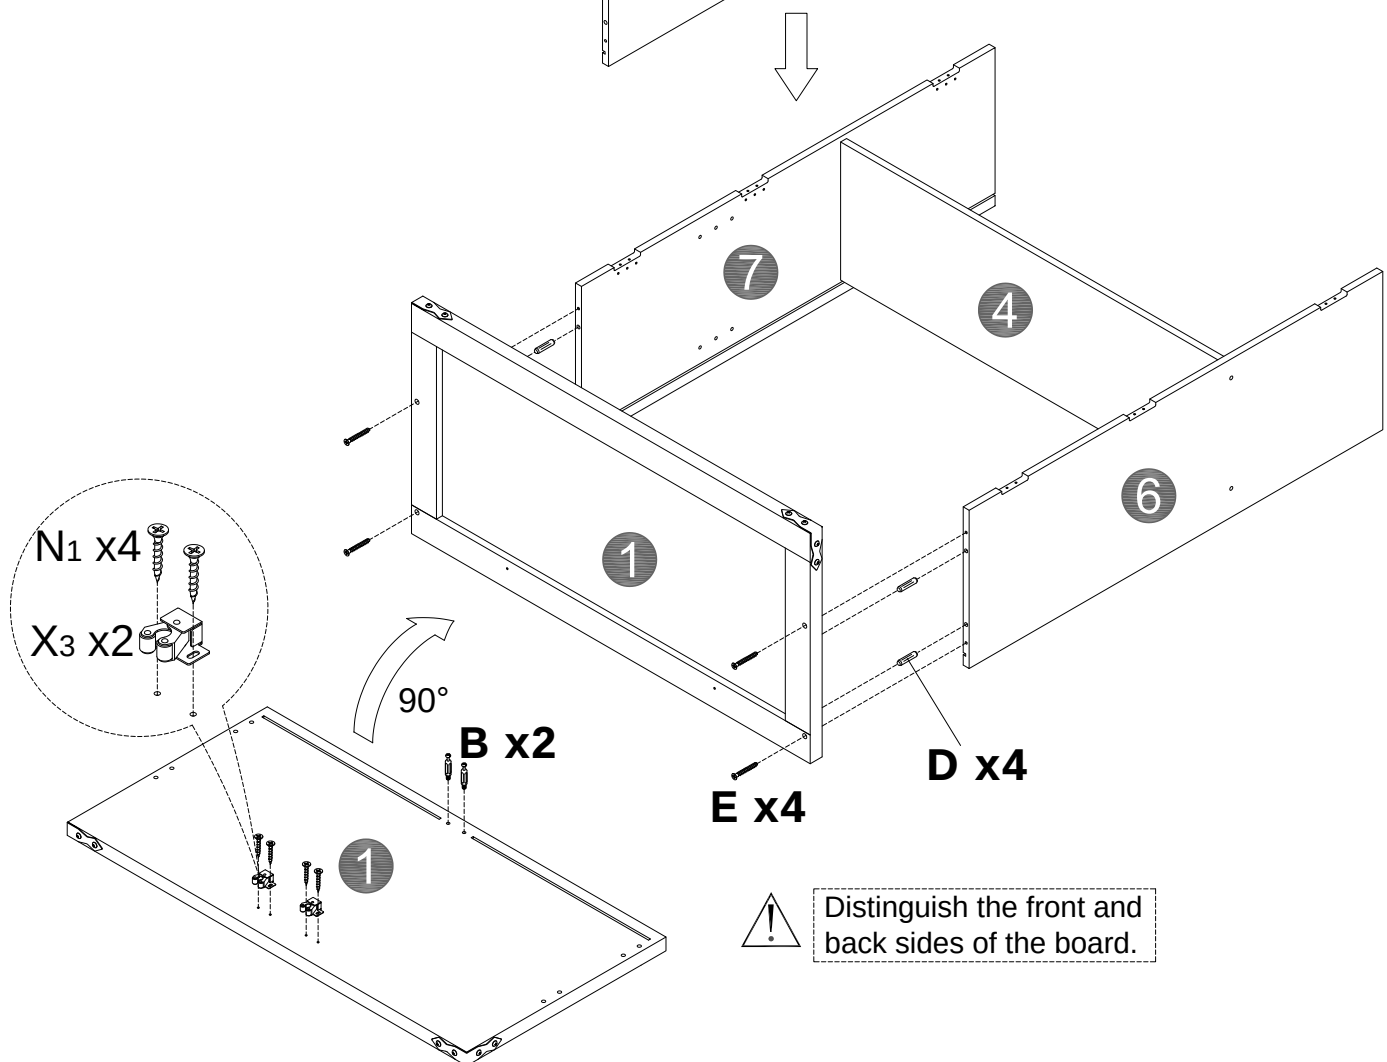

Distinguish the front and back sides of the board.




A	2 PCS	E	1 PC

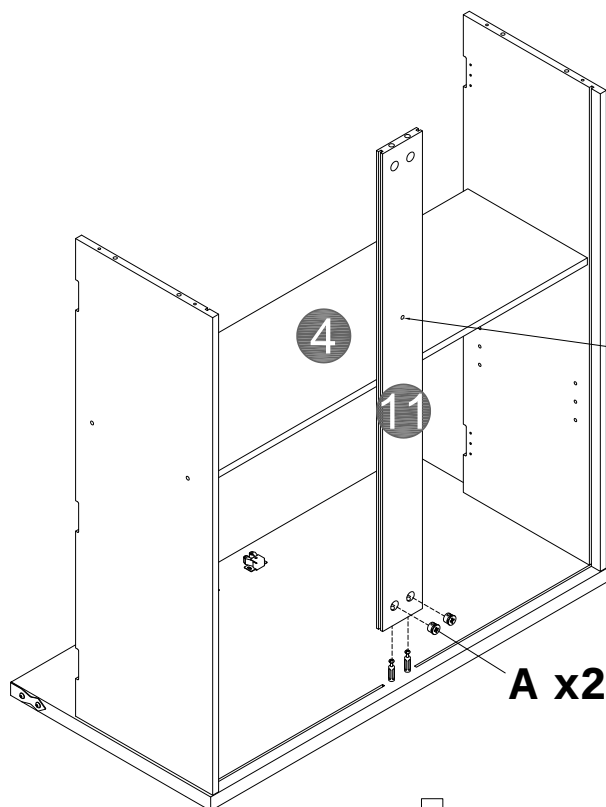

Note: The hole positions on Board 11 correspond to those on Board 4.

A x2



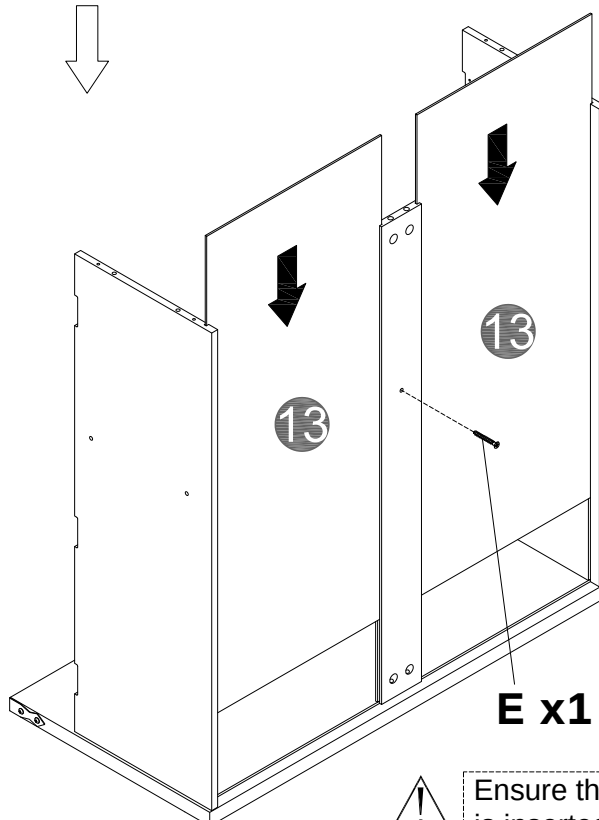





E x1




Ensure the back board is inserted into the slot.

7

A	2 PCS	B	8 PCS	D	4 PCS	E	4 PCS	N ₁	8 PCS	X ₃	4 PCS
											

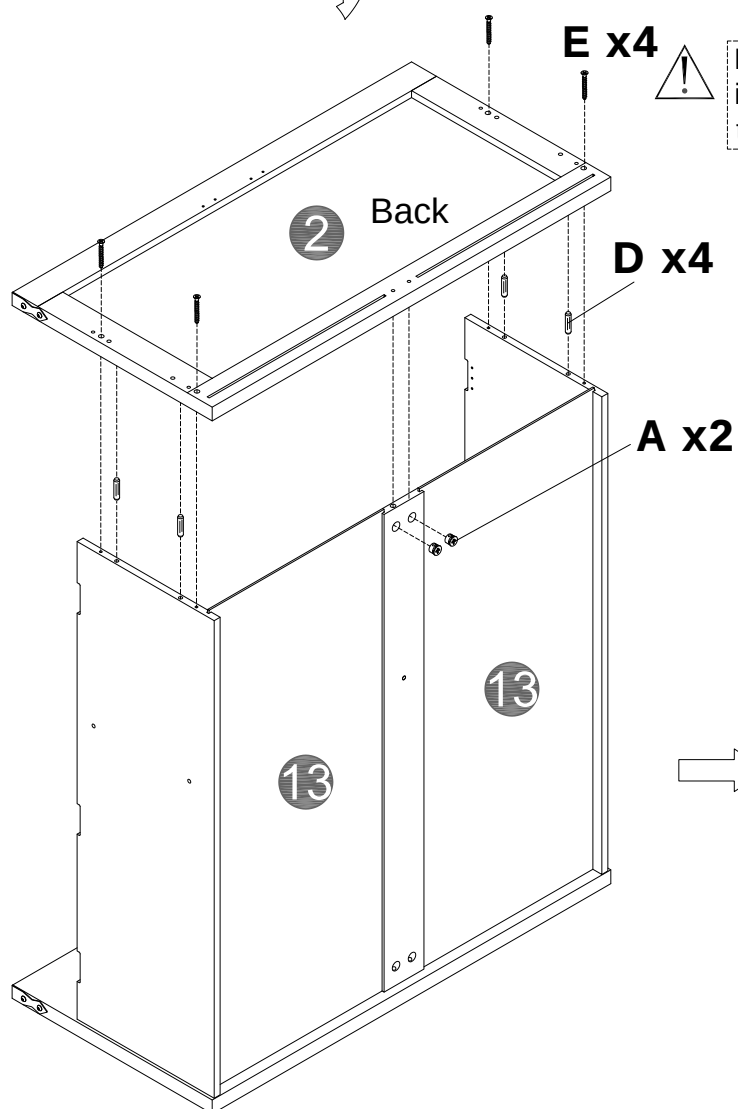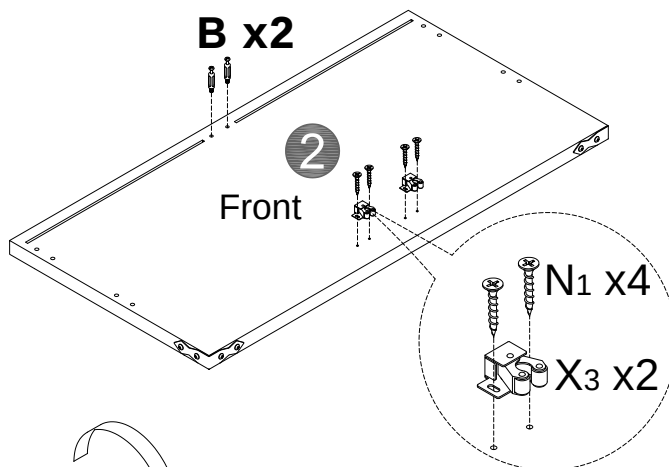


Ensure the back board is inserted into all four slots, then tighten the screws.

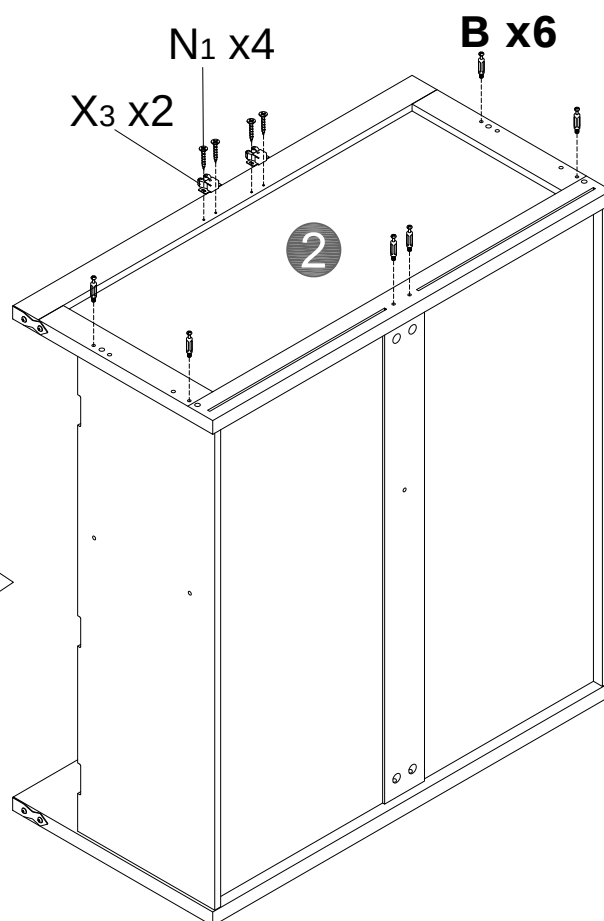




A	6 PCS	D	4 PCS	V₃	4 PCS

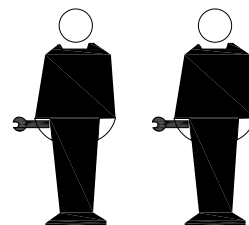

This step requires two people to complete


This step is difficult to install.
Note: Make sure that board **13** is inserted into the groove of board **2** and then fasten A.

use foam to cushion the bottom of the backplane.



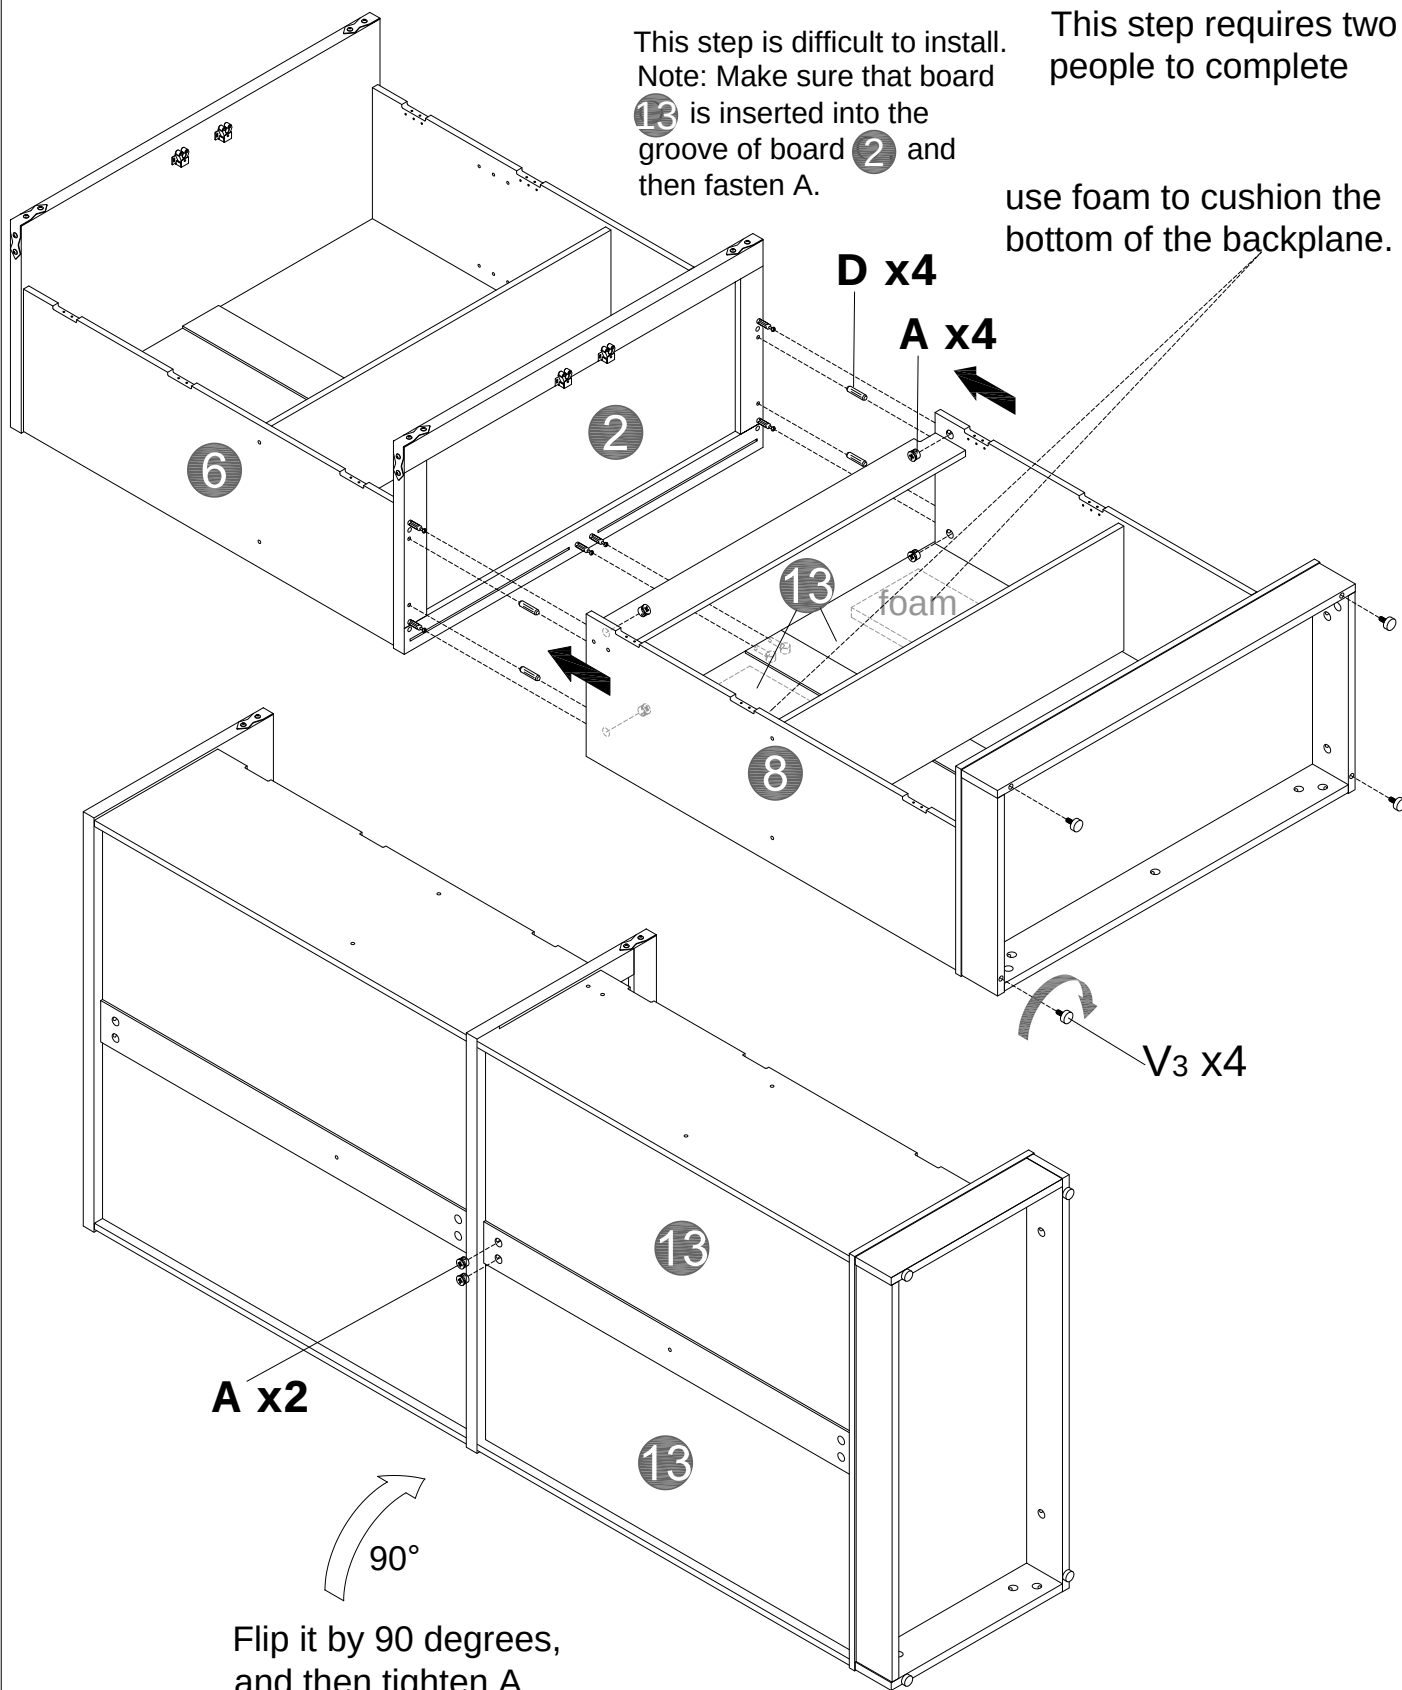







K4	4 PCS	N2	4 PCS
			

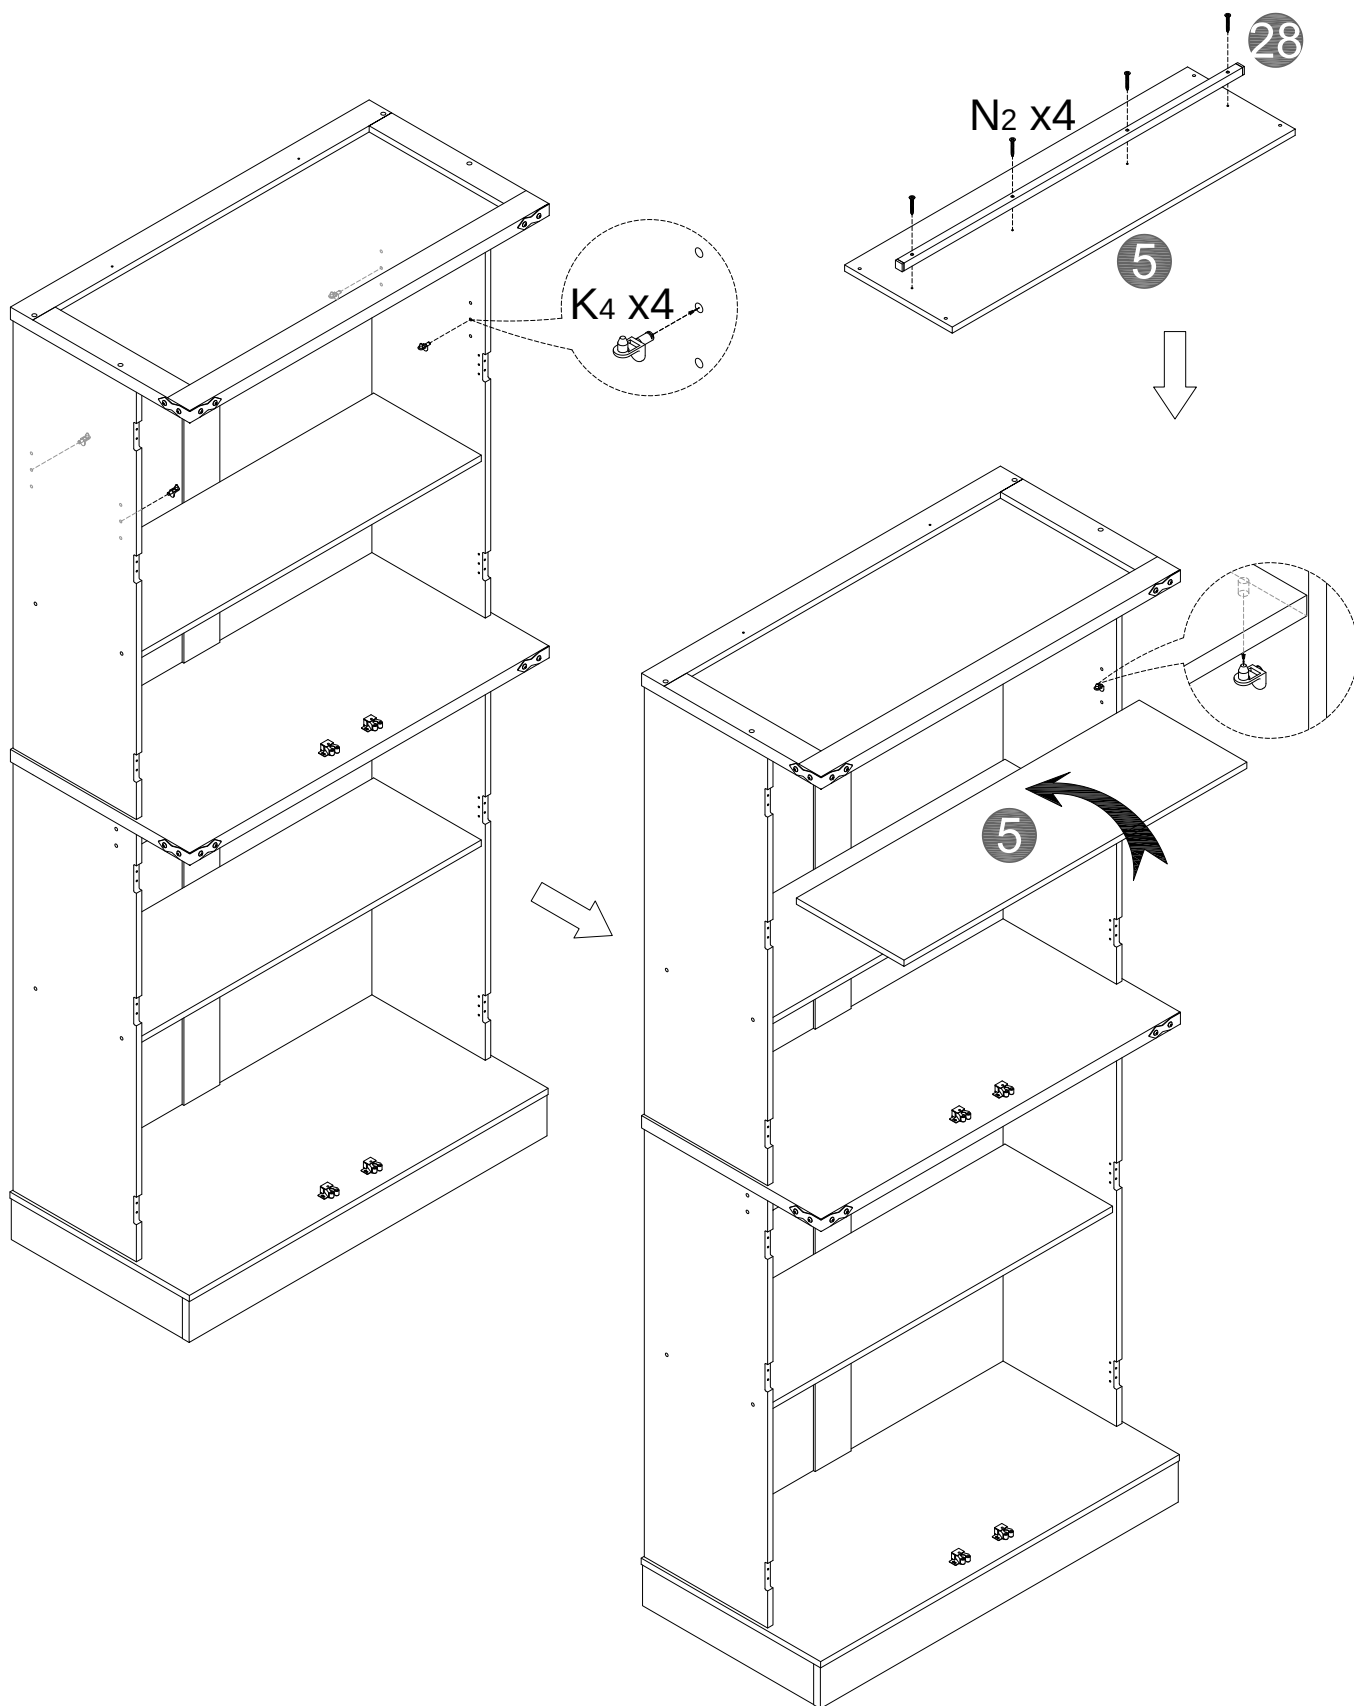

10


D	8PCS	E	16PCS	N	30PCS	MH₄	6PCS
							

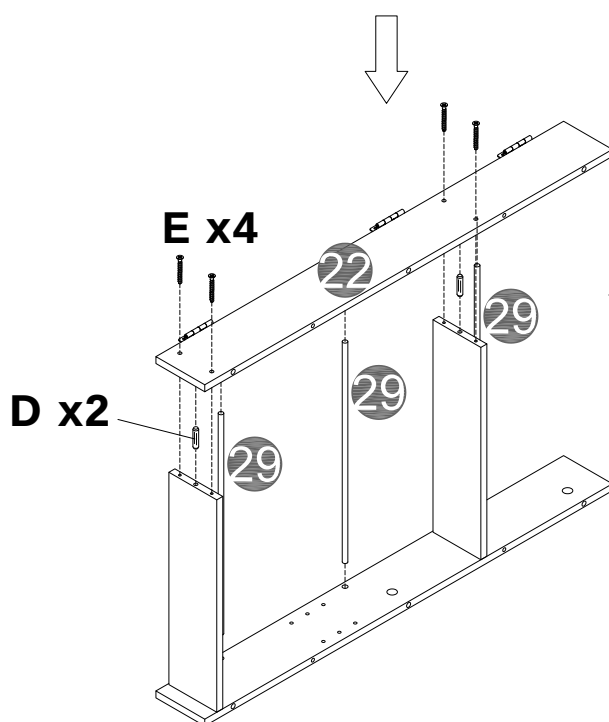
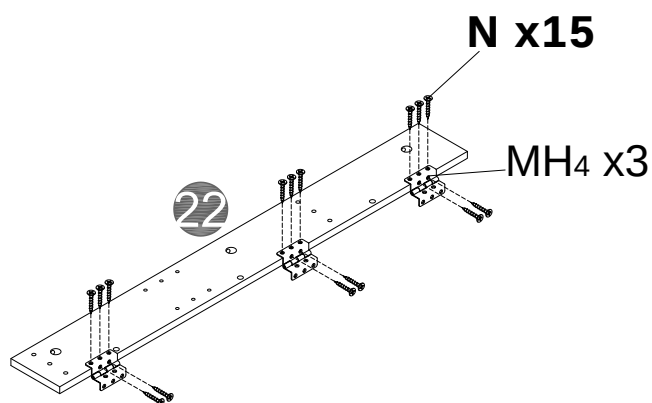
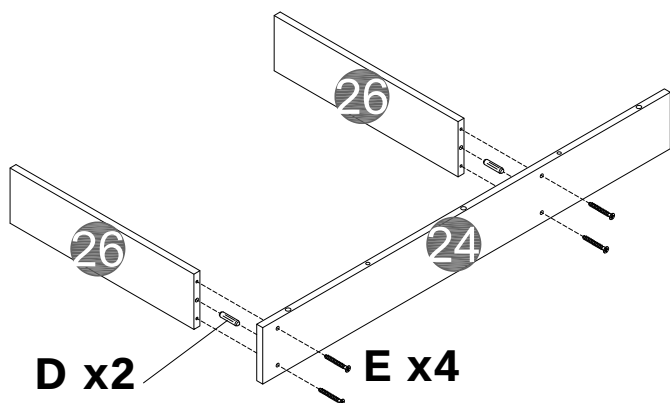


Ensure that the iron pipe is inserted into the holes of the upper and lower boards, then tighten the screws.



x2


1 1

B	12 PCS	I₂	2 PCS	I₃	2 PCS	J	4 PCS	N₁	8 PCS	X₄	4 PCS
											

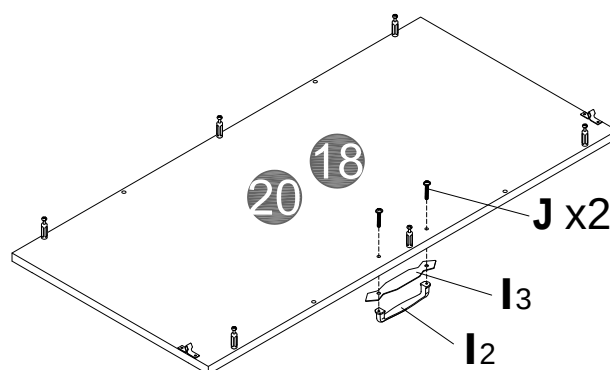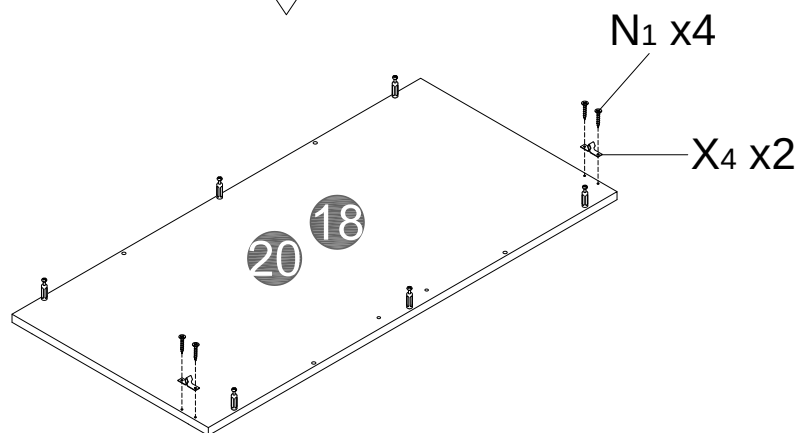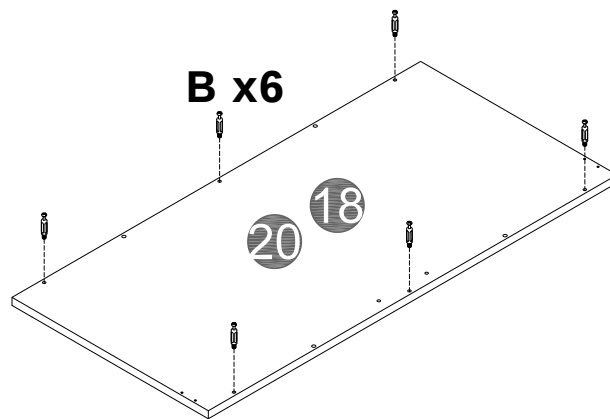


12




A	12 PCS	D	8 PCS
			



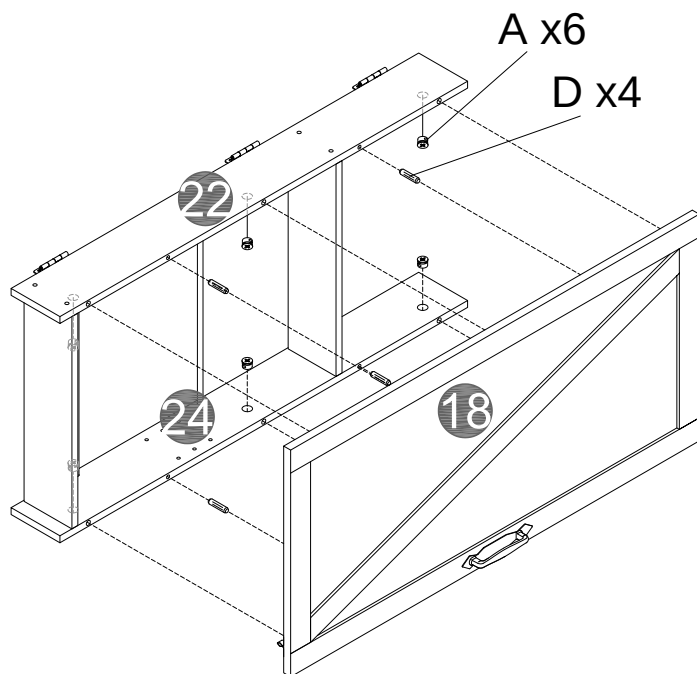


Note: Board 24 and the door board handle must be on the same side.

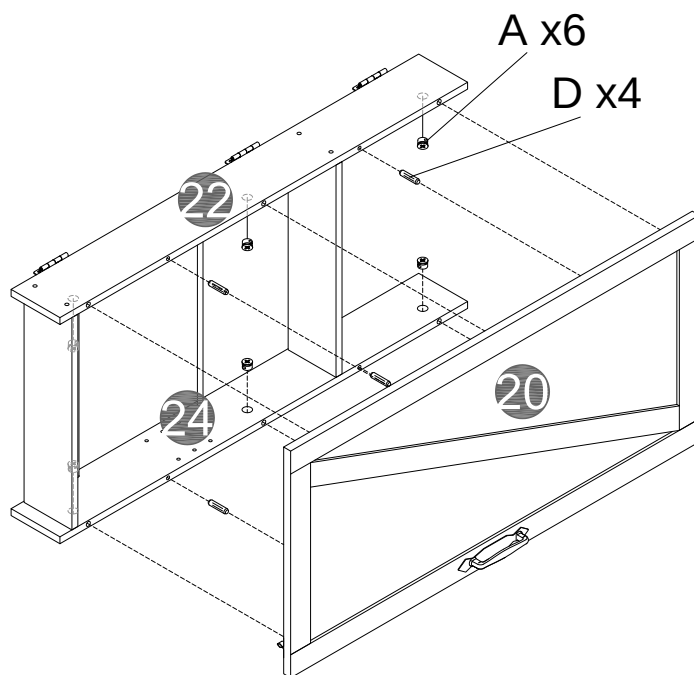

13


D	8PCS	E	16PCS	N	30PCS	MH ₄	6PCS
							

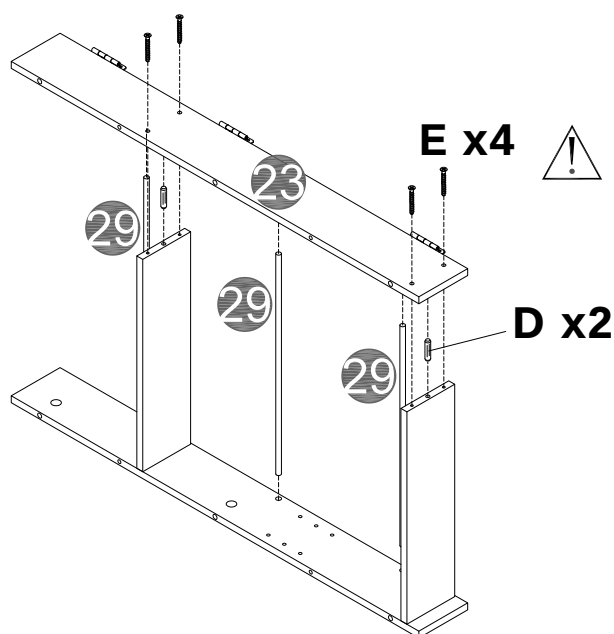
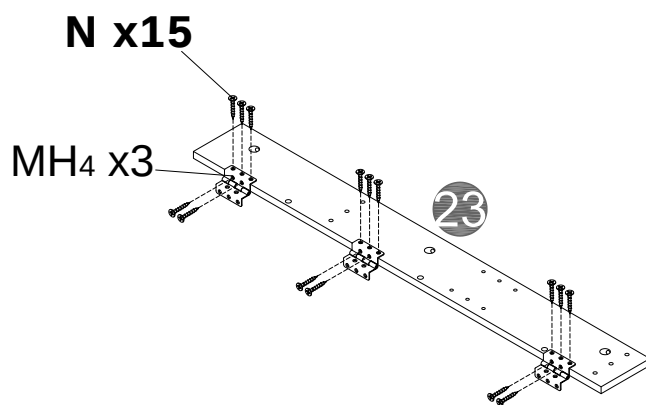
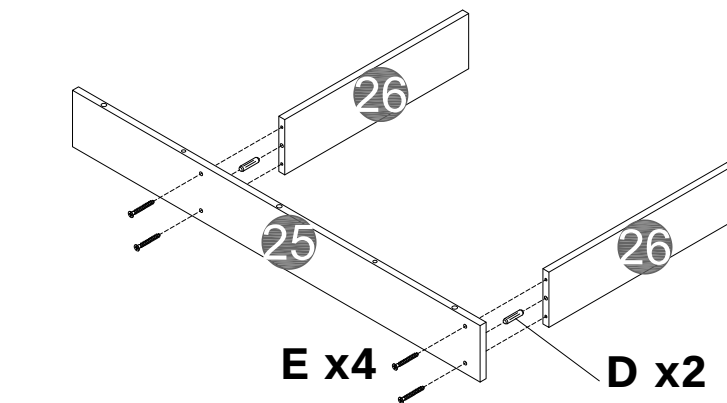


Ensure that the iron pipe is inserted into the holes of the upper and lower boards, then tighten the screws.



x2


14

B	12 PCS	I₂	2 PCS	I₃	2 PCS	J	4 PCS	N₁	8 PCS	X₄	4 PCS
											

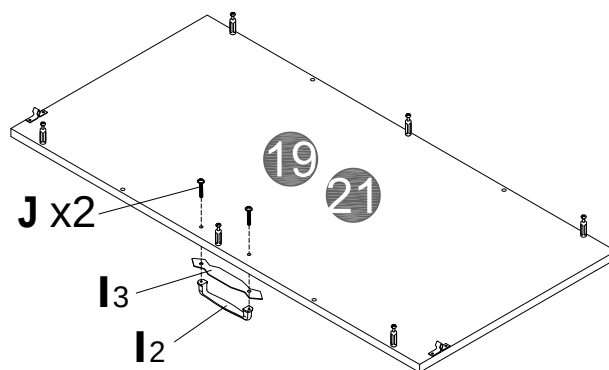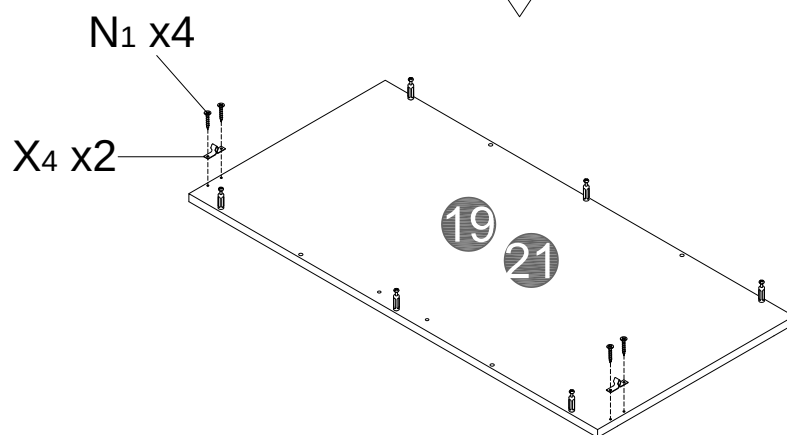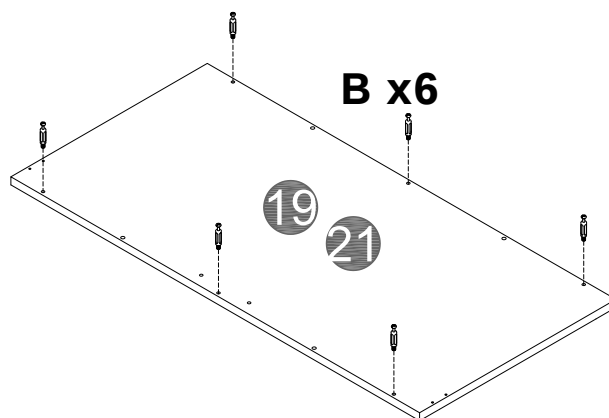


15


A	12 PCS	D	8 PCS
			

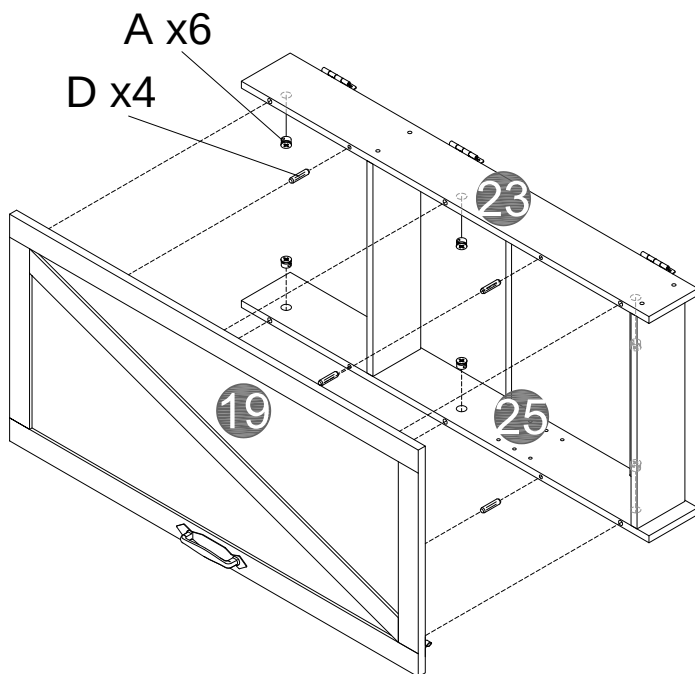



Note: Board 25 and the door board handle must be on the same side.

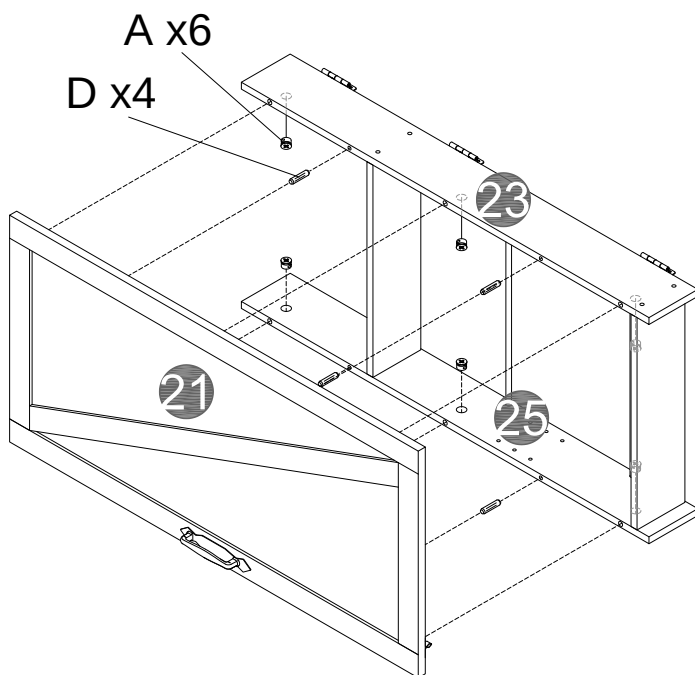

16


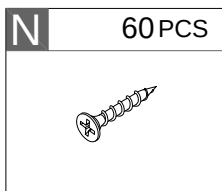


N x60

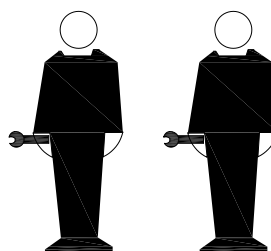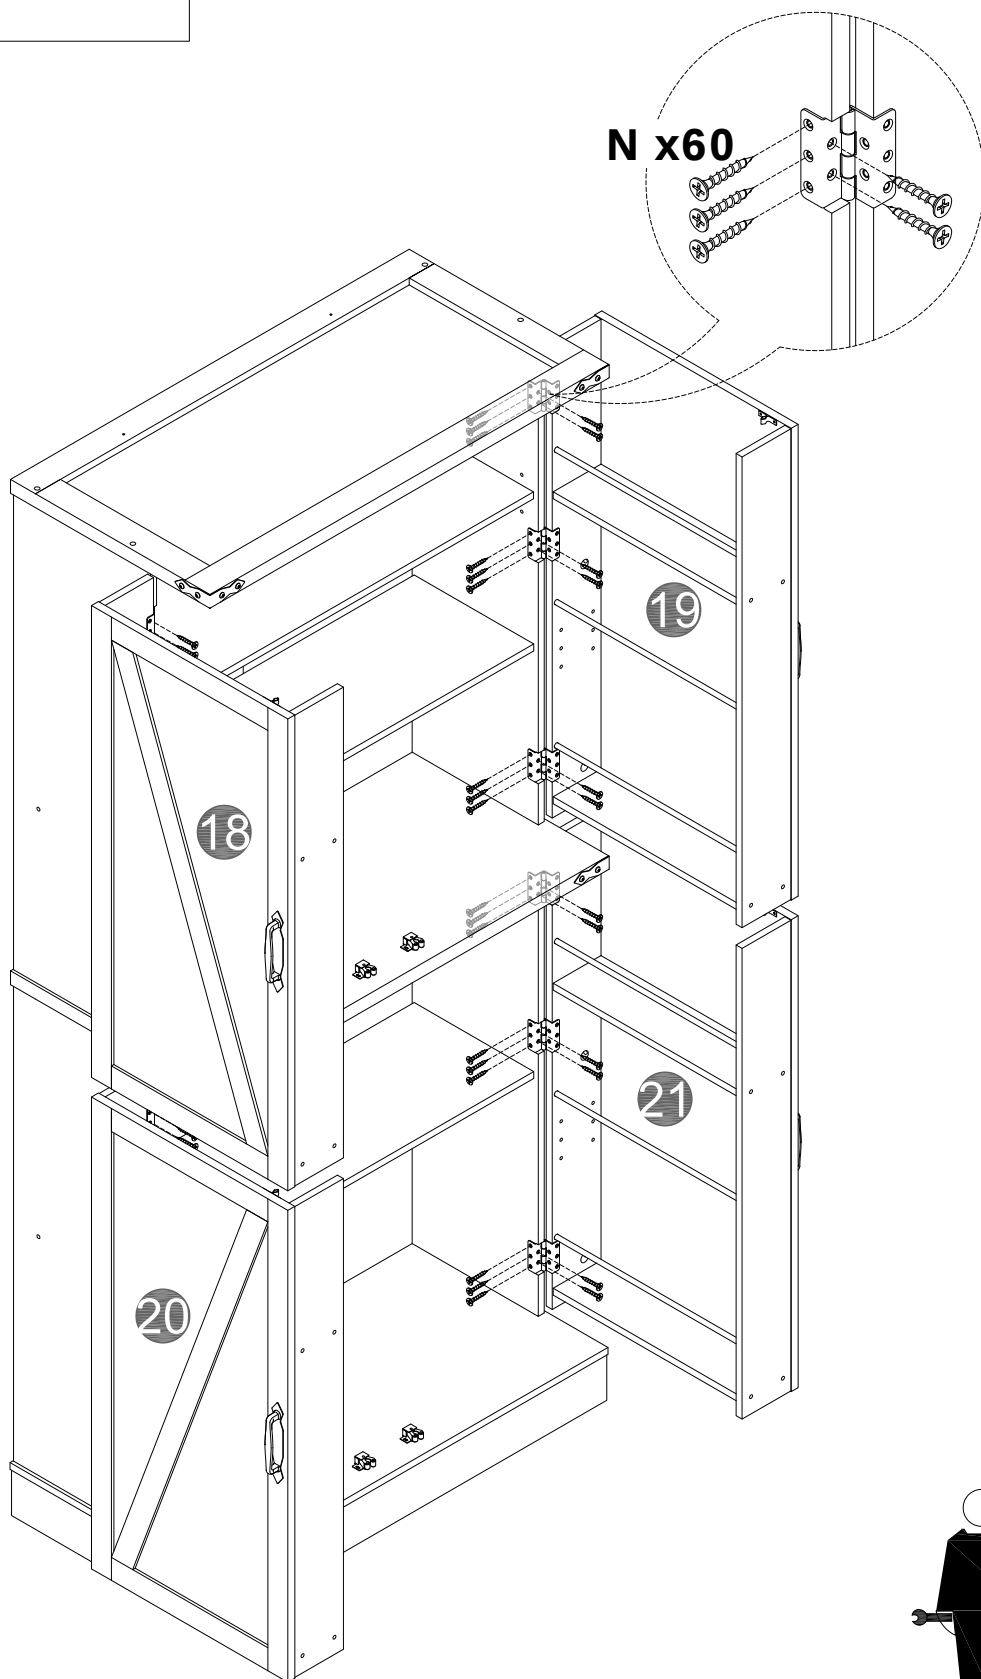


This step requires two people to complete


17

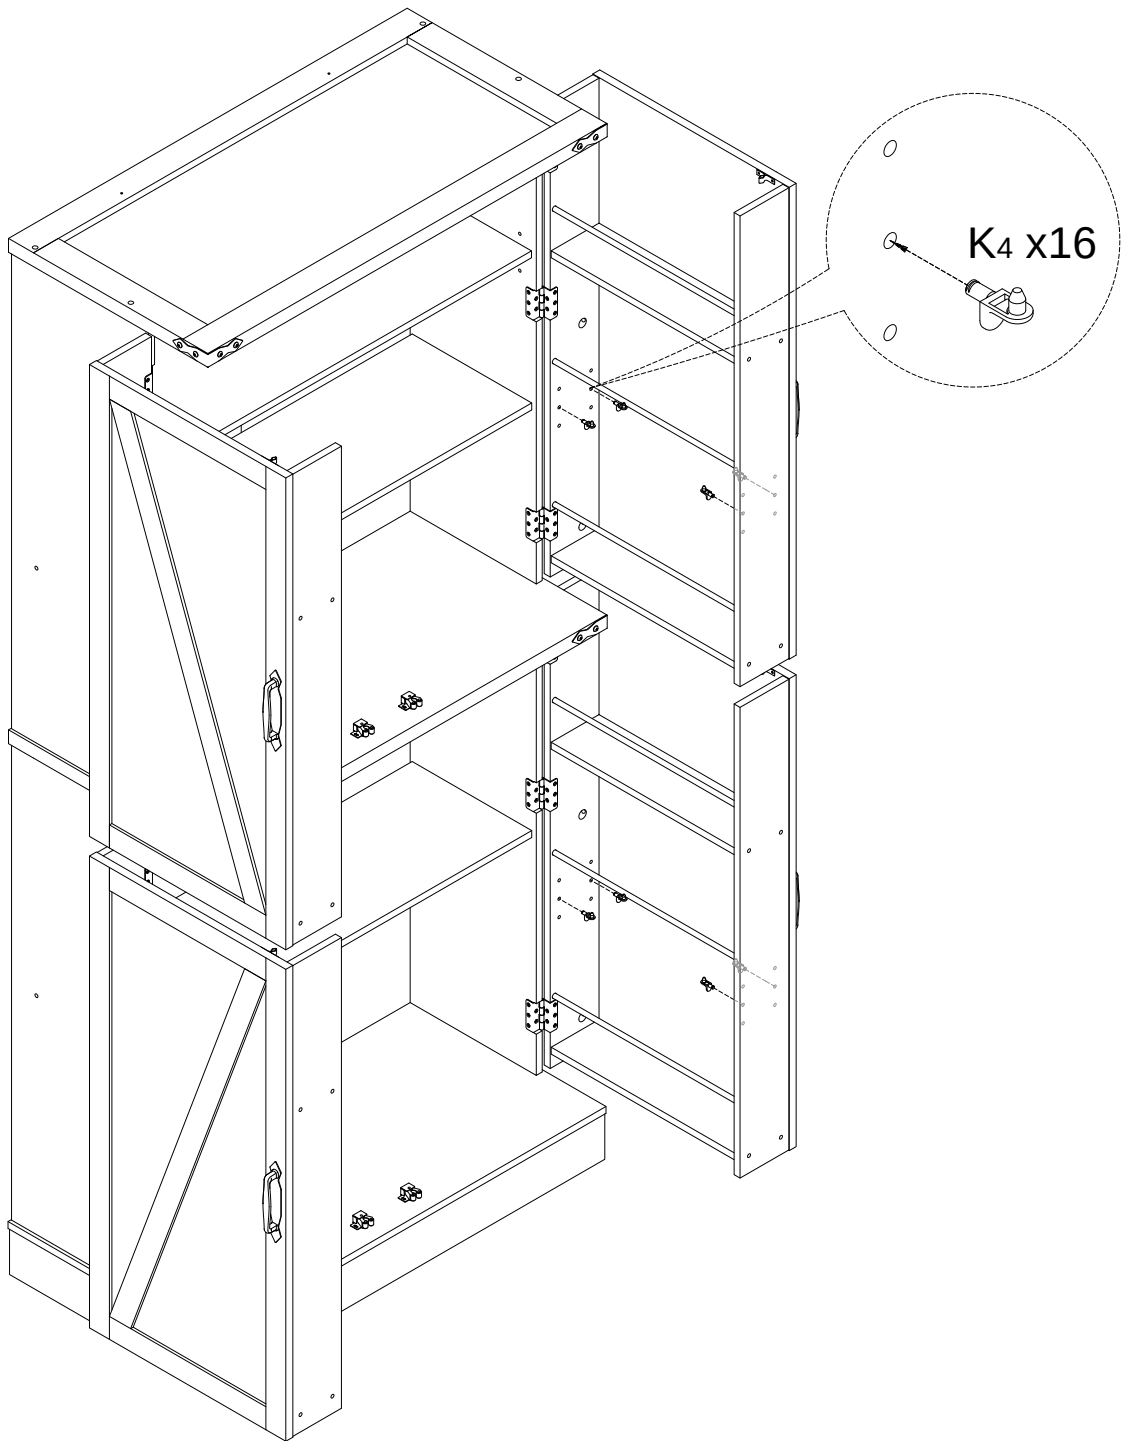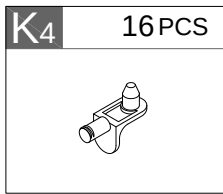

18

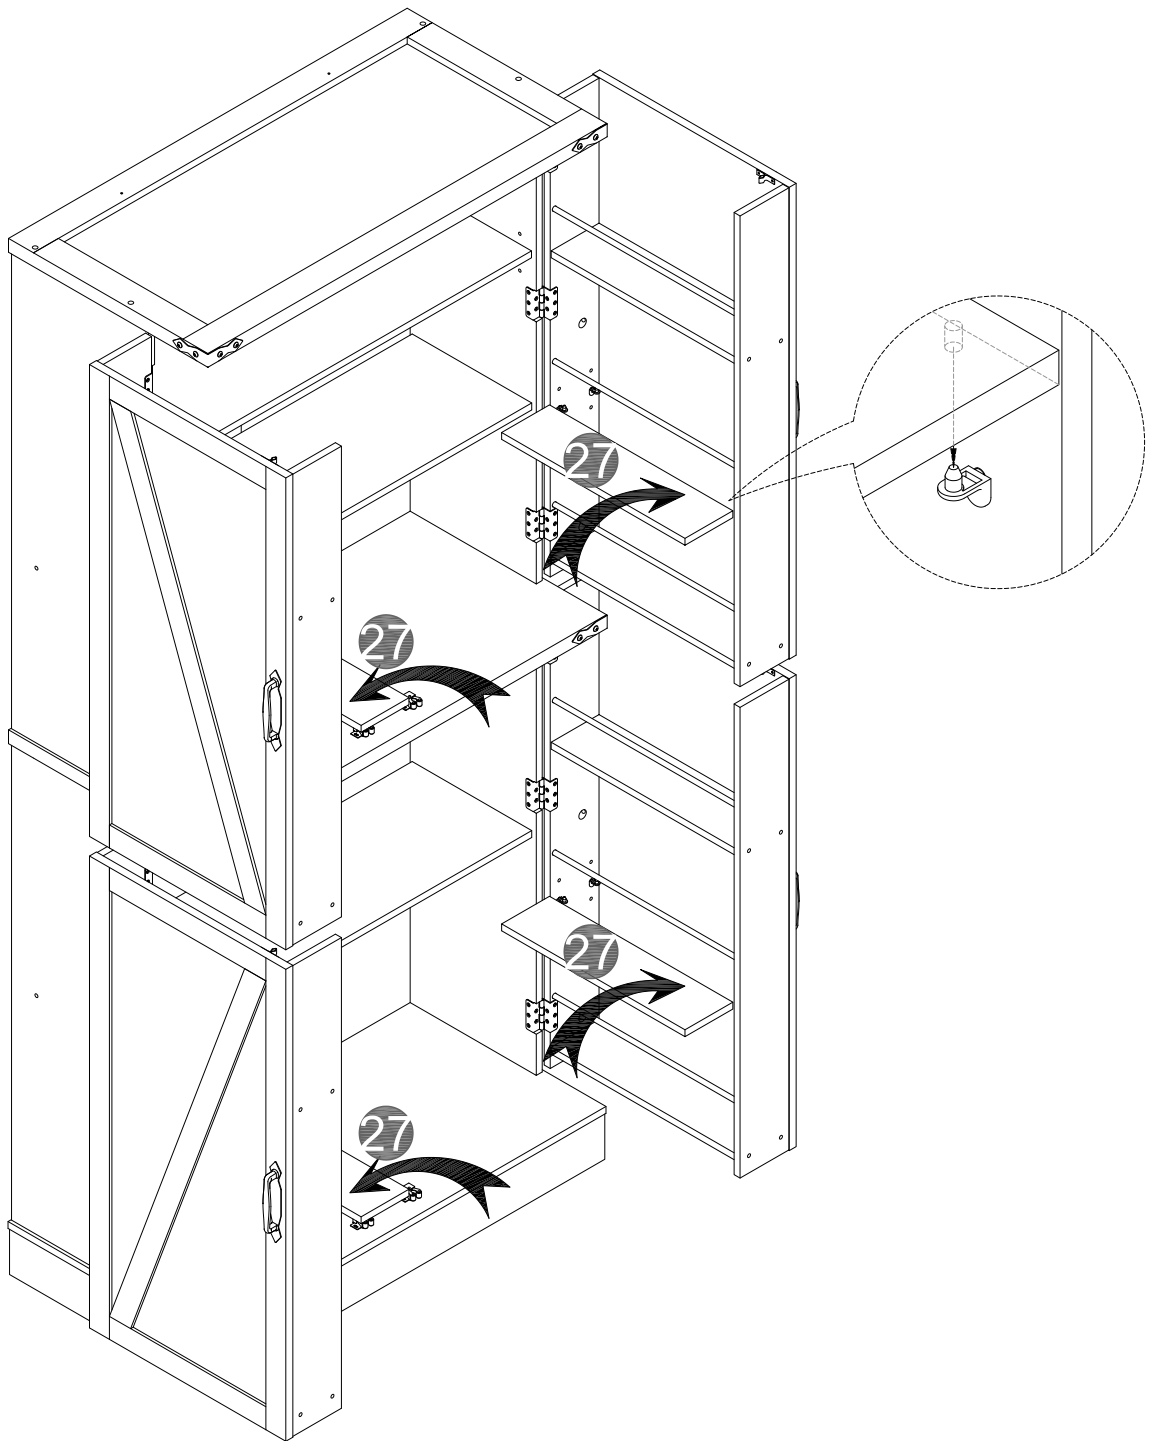


19

Q	20 PCS	N7	20 PCS
			


Installing back board fasteners can improve the overall stability of the furniture. It ensures the verticality of the furniture and that the door boards are level, so that the gaps are uniform.

Also, you can adjust the level of the cabinet by using the adjustable feet at the bottom of the furniture to make the gaps between the cabinet door boards even.

During the adjustment process, you should first place the furniture in the position where it is needed. Otherwise, when you move it to that position after adjustment, you may encounter an uneven floor.

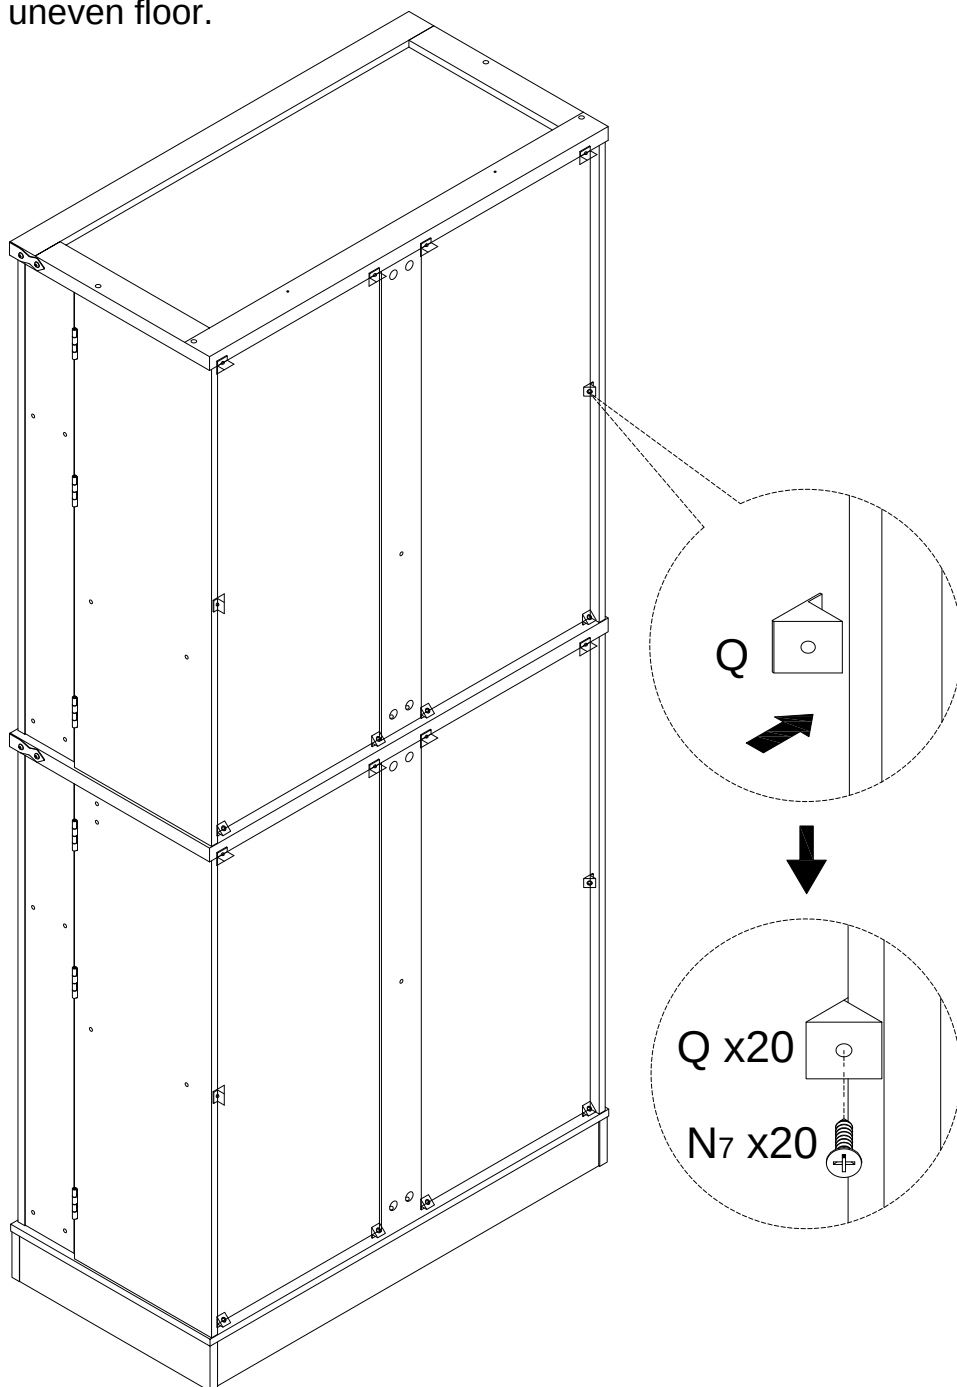


20

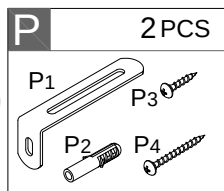

Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

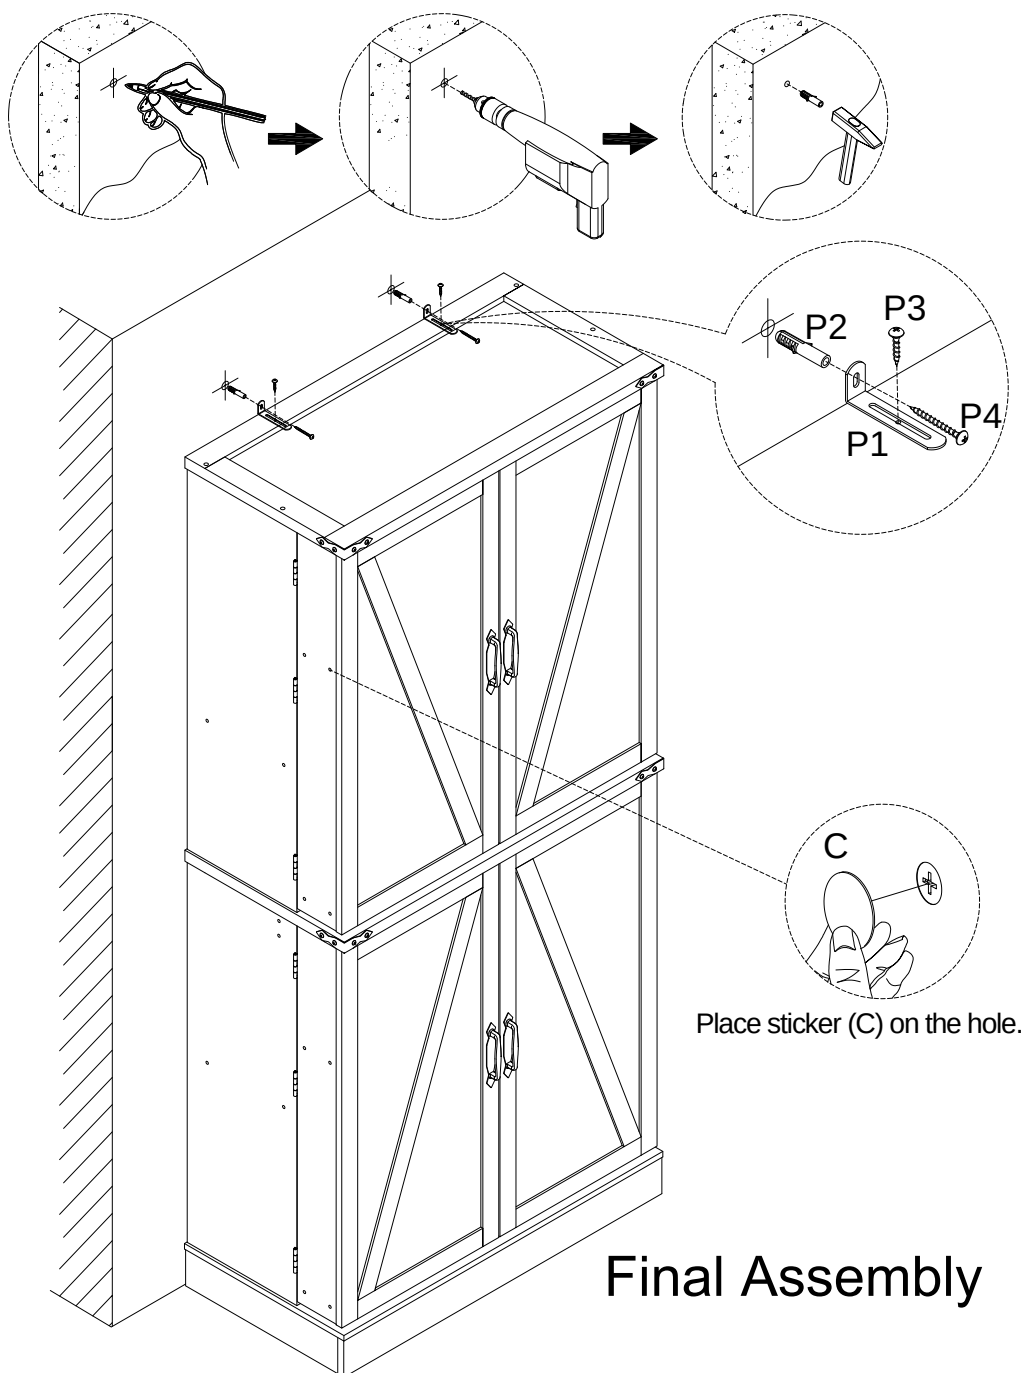

Final Assembly