



furnishing better
lives together

WWW.JOFRAN.COM

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION

MODEL # 2421-AUDEN60NAT


AUDEN 60" NATURAL

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Hardware kit (2421-AUDEN60P01)			
No		Description	Q'Ty
A		Bolt Ø6.3 x 0.794 x 30mm(L)	28 pcs
B		Flat Washer Ø6.3	28 pcs
C		Allen Key	1 pc

**TWO PERSONS ARE REQUIRED
TO SET UP THE TABLE
DO NOT USE POWER TOOLS**

Key Parts			
No	Code	Description	Q'Ty
1		Table Top	1 pc
2	AUDEN60P29	Mounting Plate	1 pc
3	AUDEN60P39T	Support Panel Top	1 pc
4	AUDEN60NATP53D	Side Panel with Dowels	1 pc
5	AUDEN60NATP53	Side Panel - No Dowels	5 pcs
6	AUDEN60P39B	Support Panel Bottom	1 pc
7	AUDEN60P07H	Hinge	8 pcs
8	AUDEN60P01F	Floor Glide	12 pcs

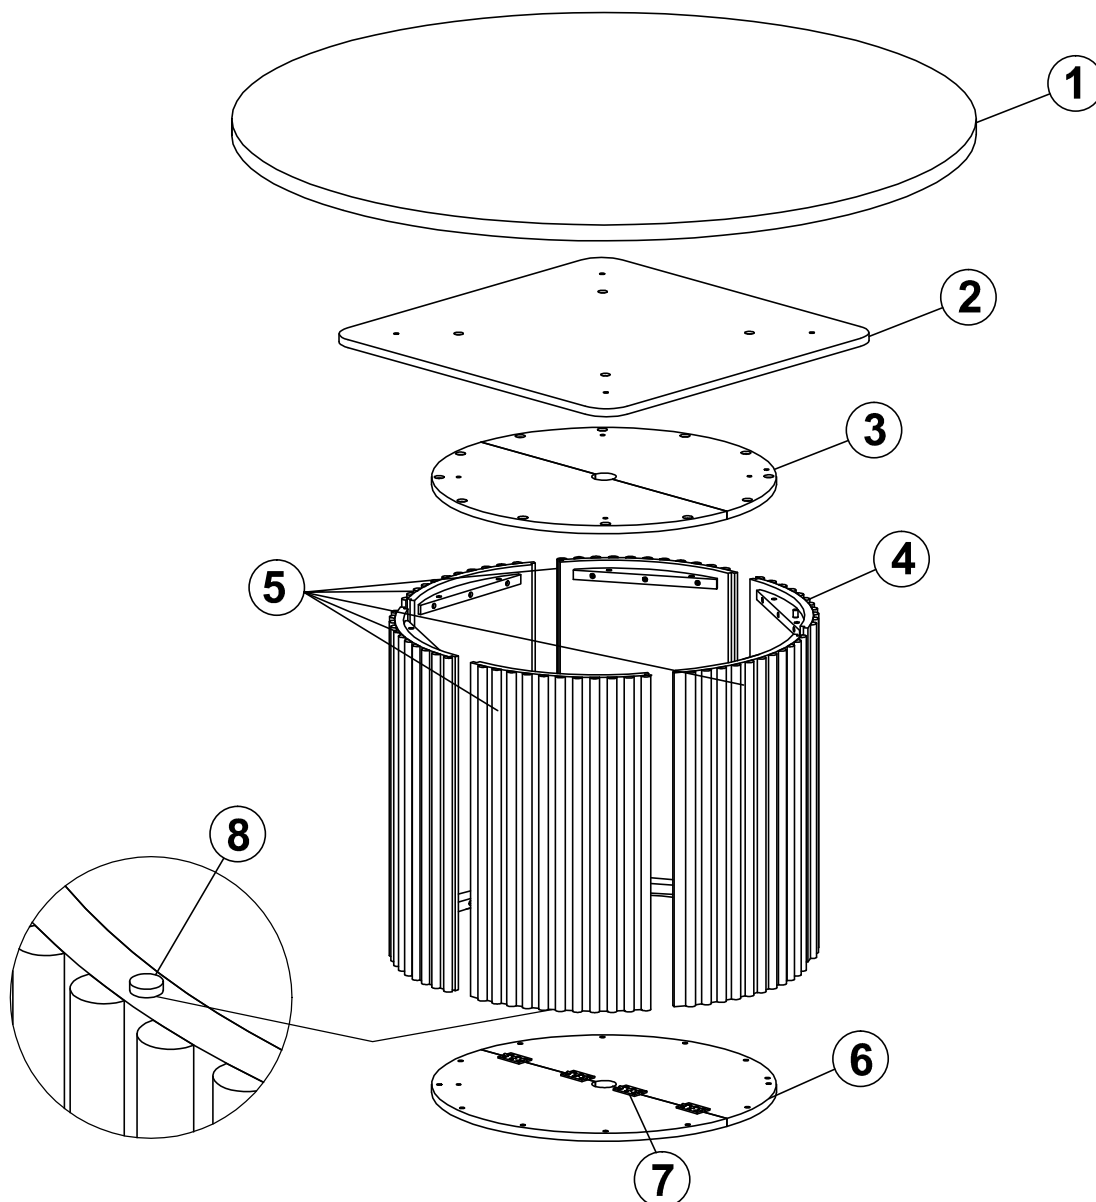



furnishing better
lives together


WWW.JOFRAN.COM

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 2421-AUDEN60NAT AUDEN 60" NATURAL

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


STEP 1

- Carefully lay the Side Panel with Dowels on a smooth flat surface to prevent scratches.
- Attach the Support Panel Bottom and Support Panel Top to the Side Panel with Dowels using a Bolt (A), Flat Washer (B) and Allen Key (C) provided . (See Detail A)

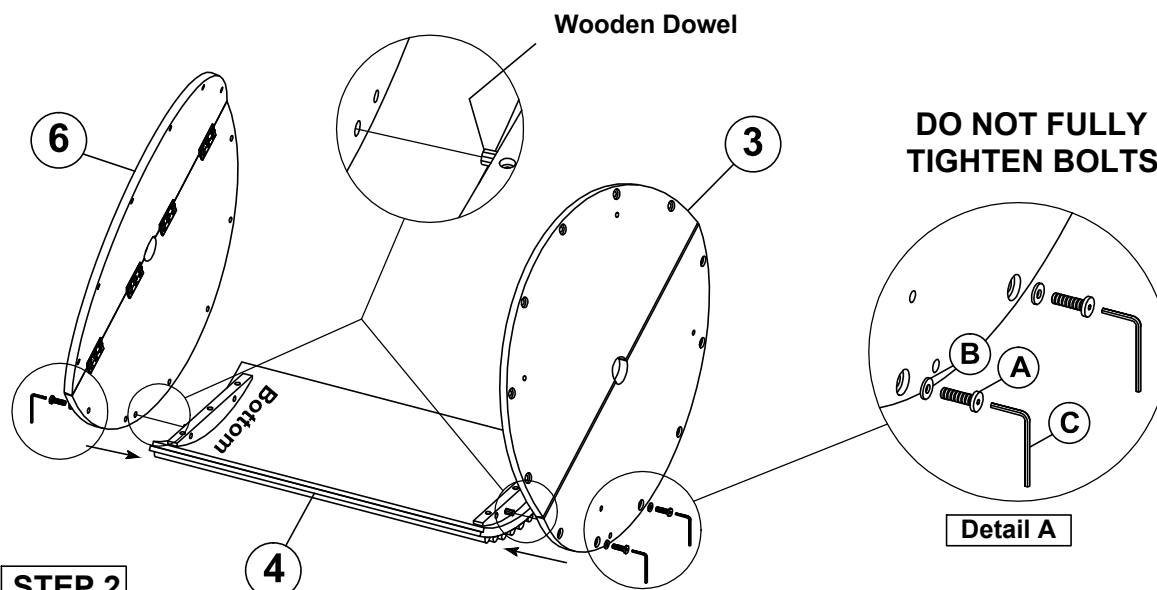

STEP 2

- Attach the Side Panel without the Dowels to the Support Panel Bottom and Support Panel Top using a Bolt (A) Flat Washer (B), and Allen Key (C) provided. (See Detail B)

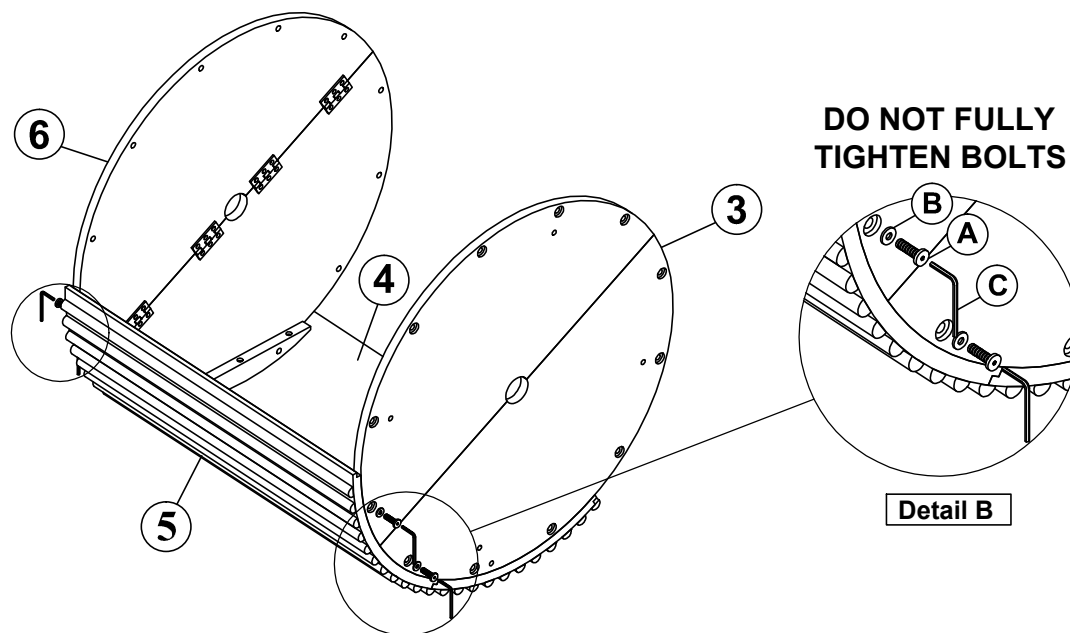



furnishing better
lives together


WWW.JOFRAN.COM

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 2421-AUDEN60NAT AUDEN 60" NATURAL

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

STEP 3

-Continue to attach the Side Panels without the Dowels to the Top and Bottom Support panels until all the Side panels are in place.

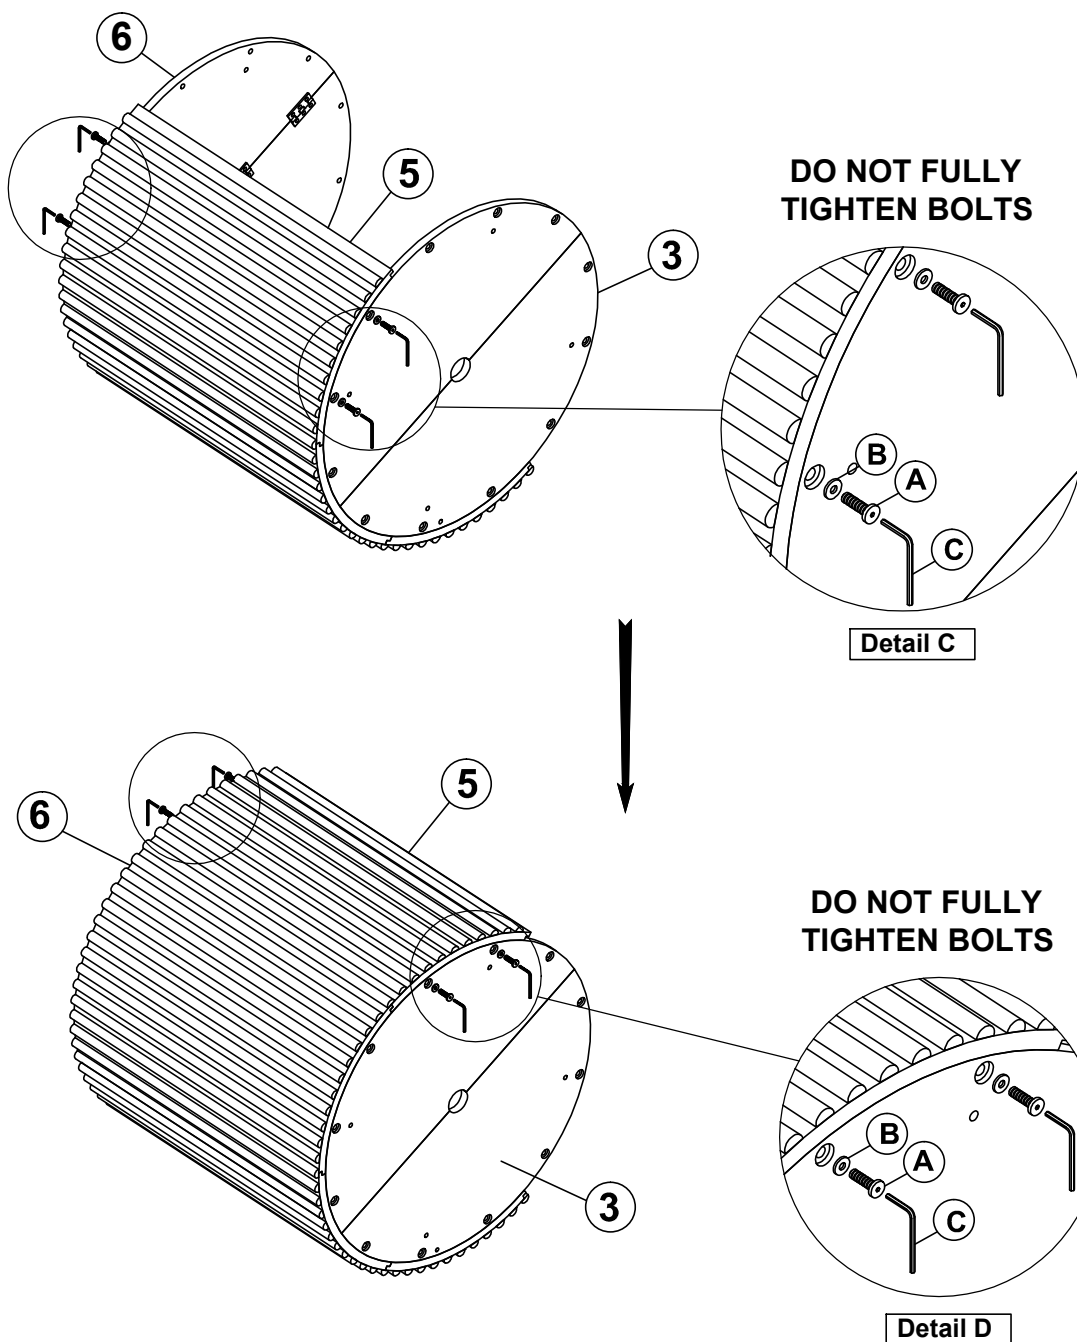




furnishing better
lives together

WWW.JOFRAN.COM


ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 2421-AUDEN60NAT AUDEN 60" NATURAL

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

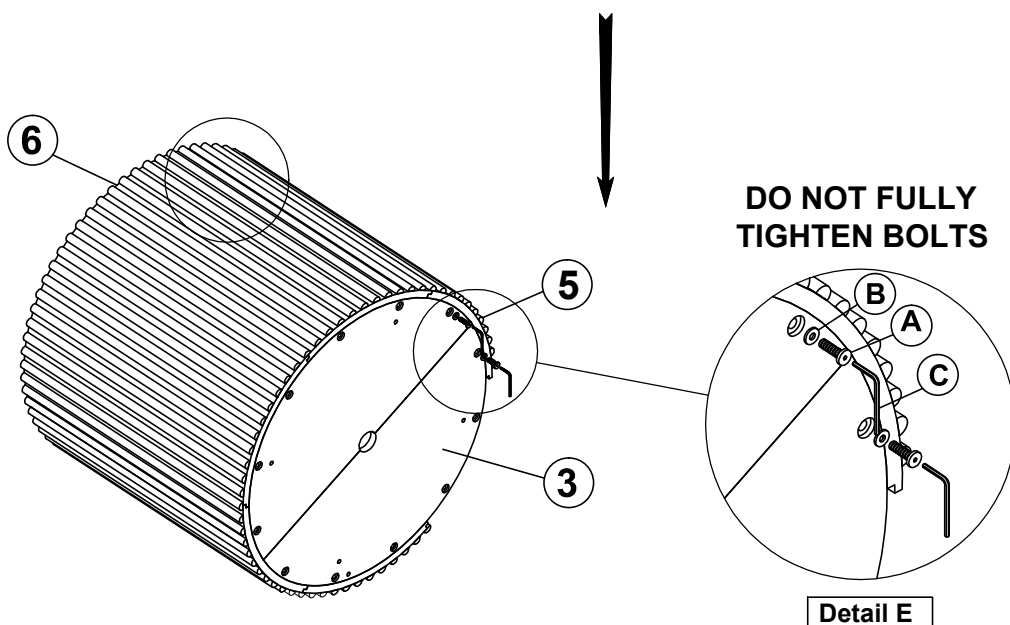

STEP 4

- It may be necessary to slightly shift the Side Panels once you attach the last one.
- Once all the panels are in place, tighten all bolts on the top and bottom.

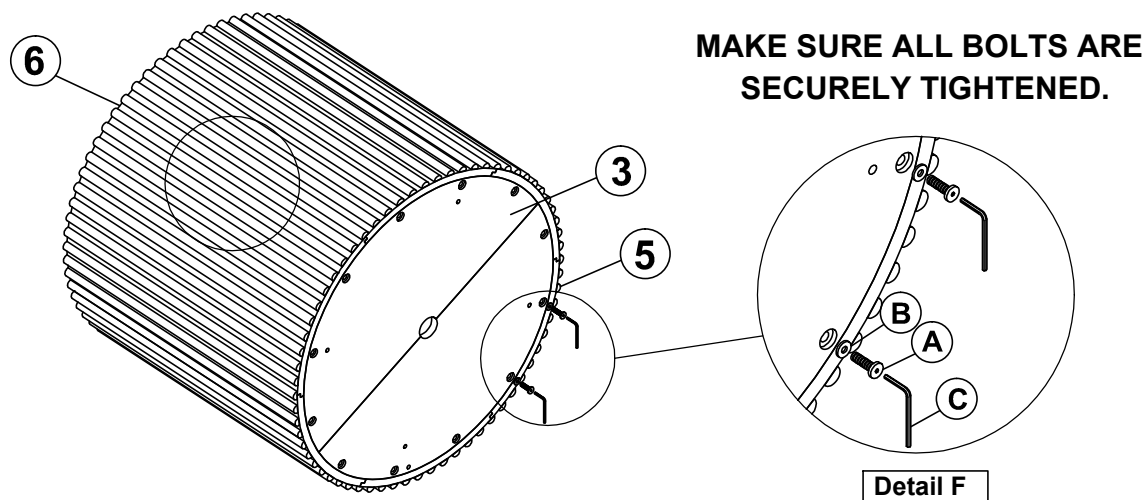



furnishing better
lives together


WWW.JOFRAN.COM

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 2421-AUDEN60NAT AUDEN 60" NATURAL

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


STEP 5

- Carefully lay Table Top on a smooth flat surface to prevent scratches.
- Remove the Mounting Plate from Table Top using Allen Key (C) provided .

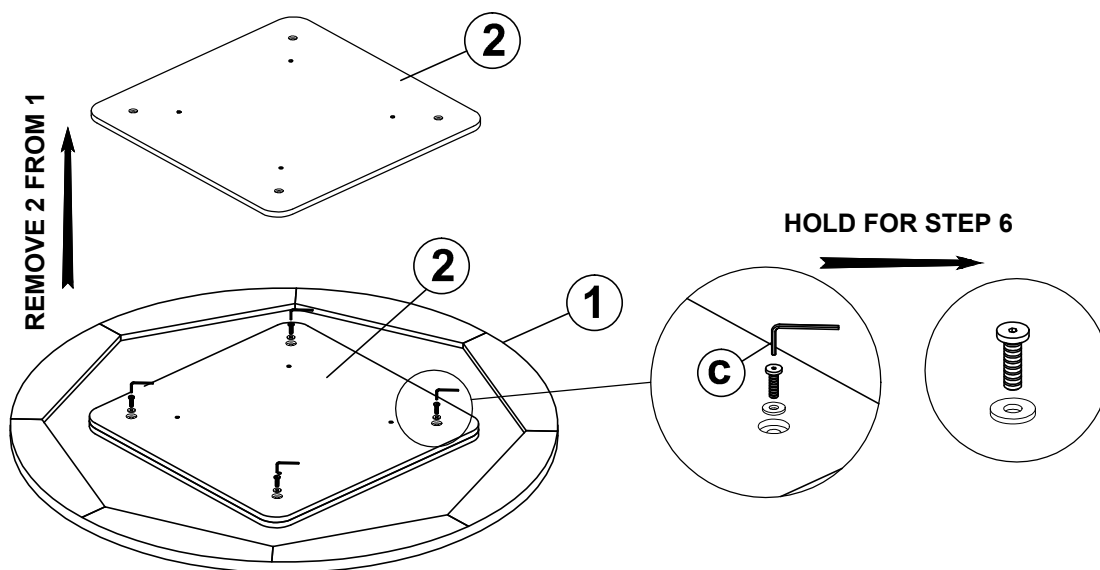

STEP 6

- Attach the Mounting Plate to the top of the assembled Pedestal Base using a Bolt, Flat Washer disconnected in Step 5 and Allen Key (C) provided. (See Detail G)
- Make sure all bolts are securely tightened.

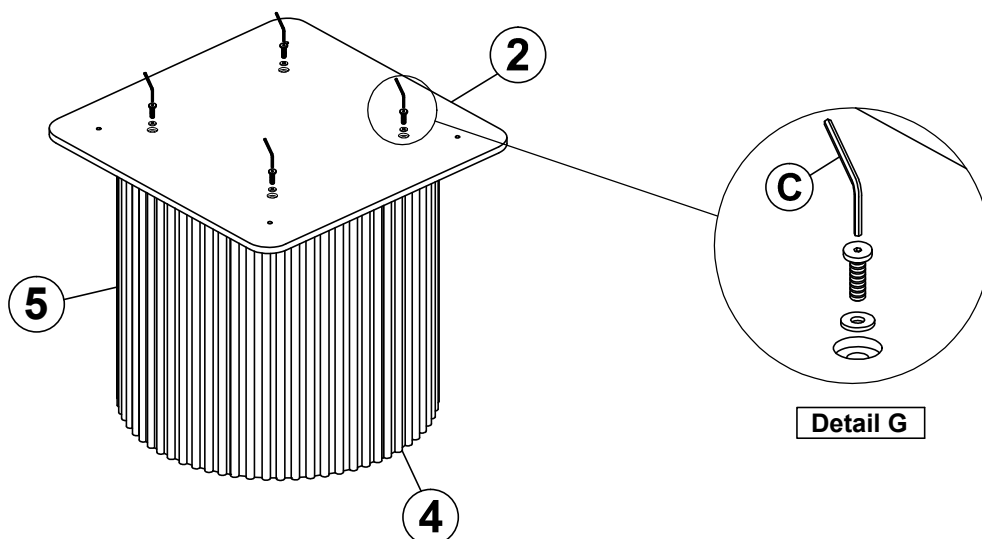



furnishing better
lives together



WWW.JOFRAN.COM

**ASSEMBLY INSTRUCTIONS &
PARTS IDENTIFICATION
MODEL # 2421-AUDEN60NAT
AUDEN 60" NATURAL**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

STEP 7

- Lay the Table Top upside down on a clean padded surface to prevent scratching.
- Attach the Mounting Plate to the Table Top using a Bolt (A), Flat Washer (B) and Allen Key (C) provided. (See Detail H)
- Make sure all bolts are securely tightened.
- With help from the second person, carefully turn the table upright.

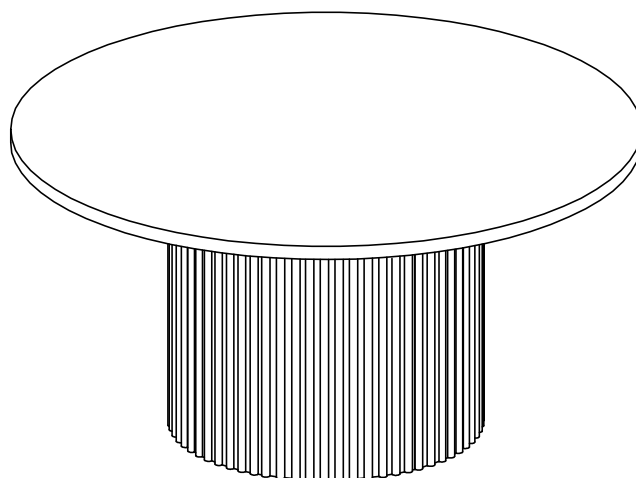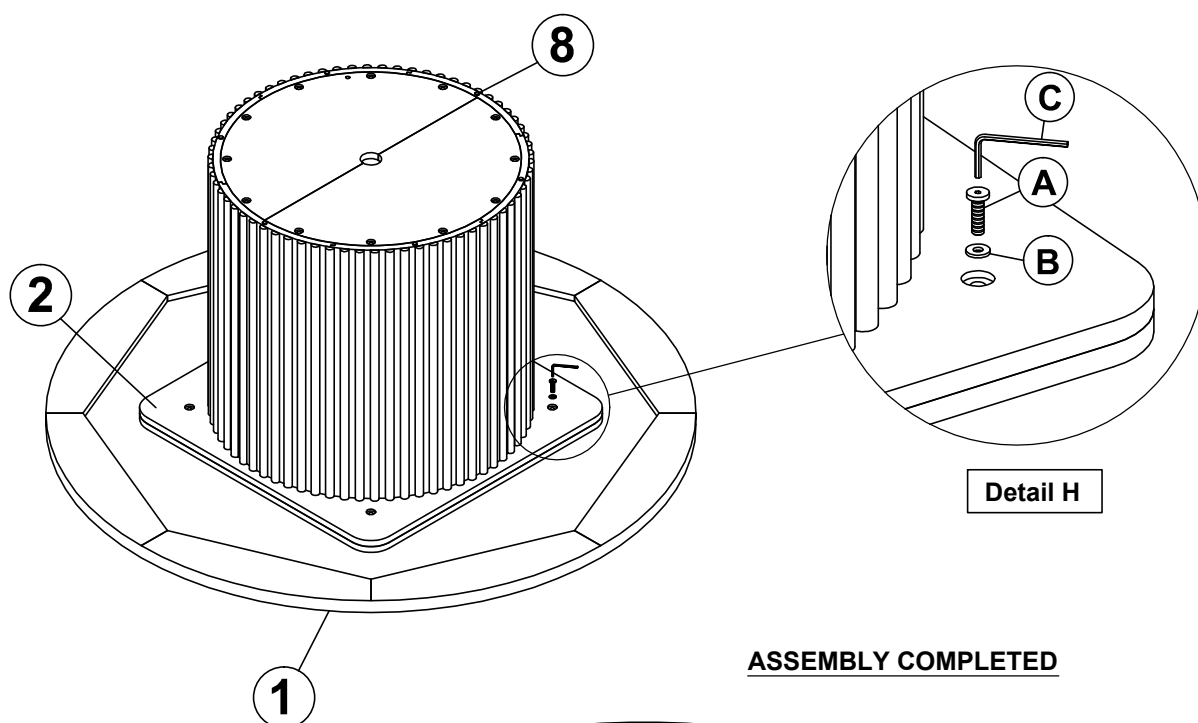

DO NOT ATTEMPT TO TRANSPORT THE TABLE WITH THE BASE ATTACHED.
TOP MUST BE REMOVED AND TRANSPORTED AS TWO PIECES.





furnishing better
lives together®

WWW.JOFRAN.COM

ASSEMBLY INSTRUCTIONS &
PARTS IDENTIFICATION
2526 - EASLEYCGN

Parts List			
ITEM	Code	Description	Qty
A	 EASLEYP53	Metal Legs	1 PC
Chair Hardware Kit (EASLEYP46)			
B		Bolt M6x20mm	4 PCS
C		Lock Washer Ø1/4"	4 PCS
D		Flat Washer Ø1/4"	4 PCS
E		Allen Key	1 PC

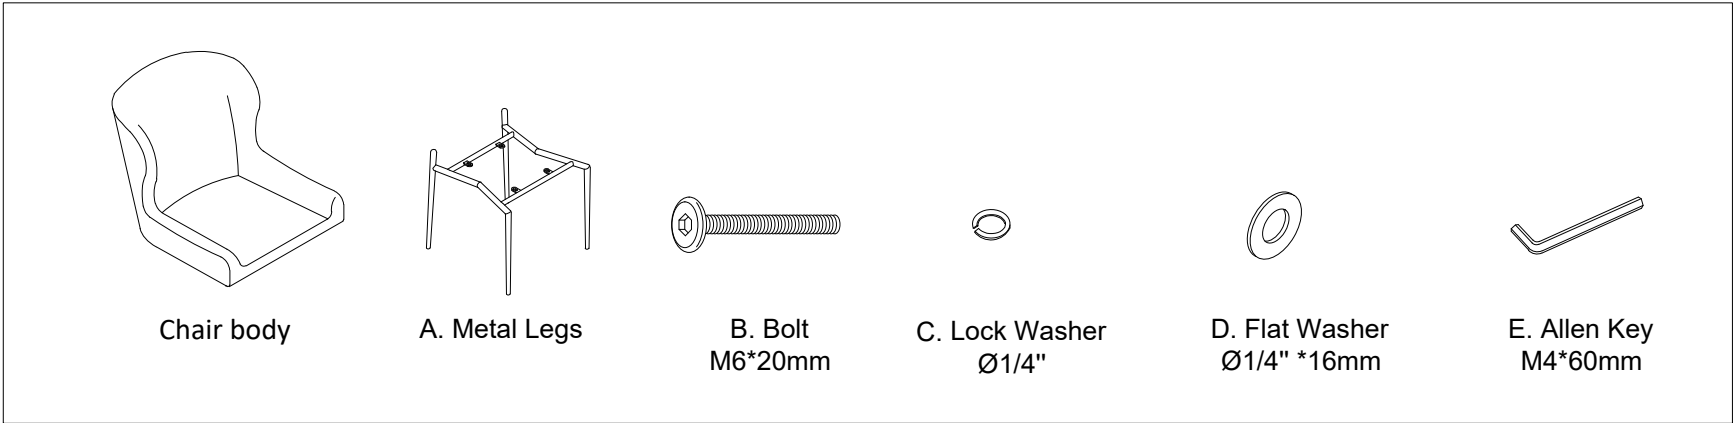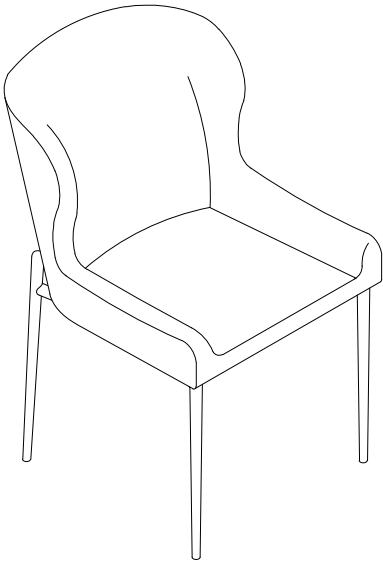

Assembly Steps:


Step 1. Turn chairbody over on a clean flat surface.
Step 2. Attach Metal Legs (A) to Chair body by using a Bolt (B), Lock Washer (C), and Flat Washer (D). Once all the bolts are in place fully tighten the bolts with the Allen Key (E).

FABRIC CONTENT

***Fabric: 100% polyester

***Cleaning Code: S

Professional cleaning recommended. Spot clean with a mild water-free solvent or dry cleaning product. Vacuum surface occasionally with an upholstery attachment. Avoid direct sunlight, water, oil, acid, sharp object etc. Do not clean with water or any harsh detergents.

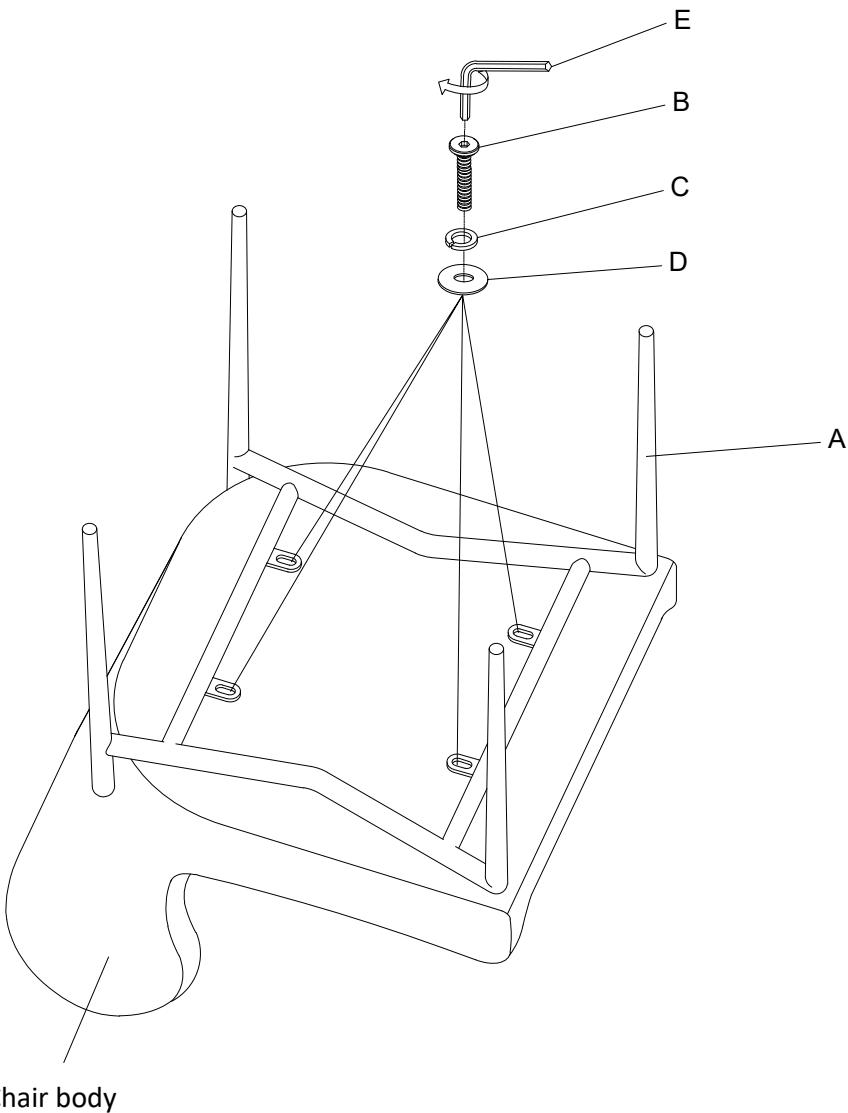

MADE IN VIETNAM





furnishing better
lives together®

WWW.JOFRAN.COM

INSTRUCTIONS DE MONTAGE ET
IDENTIFICATION DES PIÈCES
2526 - EASLEYCGN

Liste des pièces			
ITEM	Code	Description	Qty
A	 EASLEYP53	Pieds en métal	1 PC
Trousse de quincaillerie (EASLEYP46)			
B		Boulon M6x20mm	4 PCS
C		Rondelle de blocage Ø1/4"	4 PCS
D		Rondelle plate Ø1/4"	4 PCS
E		Clé Allen	1 PC

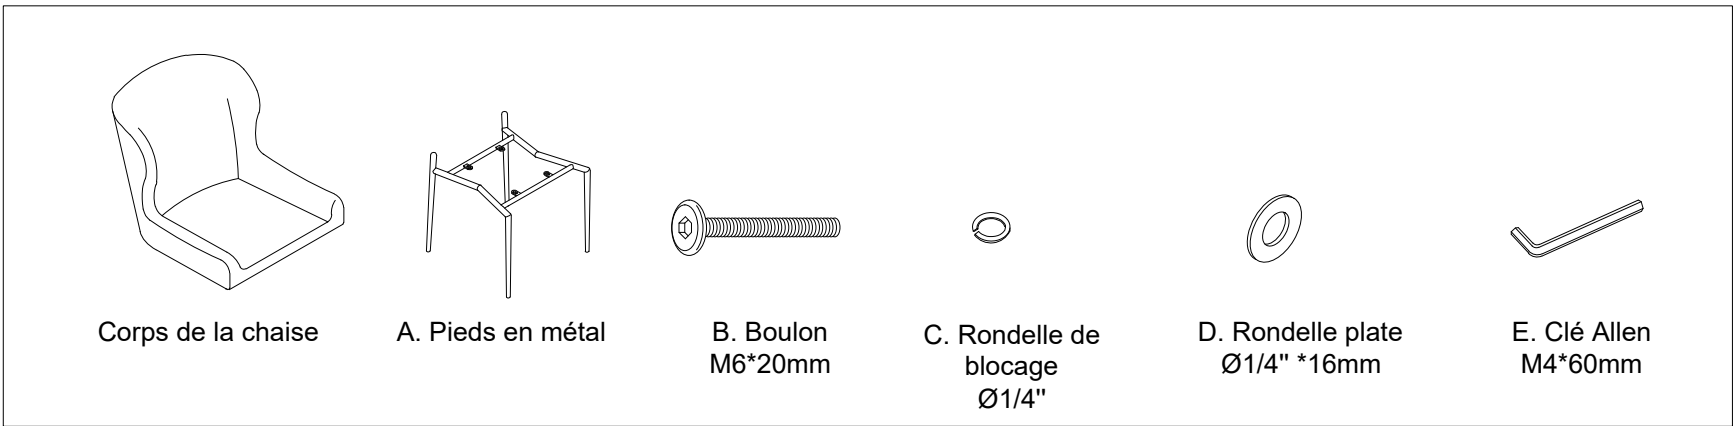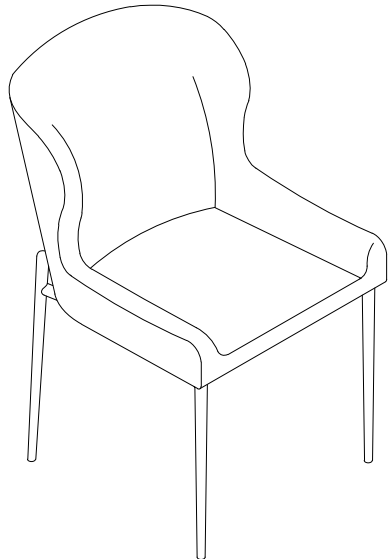

Étapes d'assemblage:

Étape 1. Tournez le corps de la chaise sur une surface plane et propre.


Étape 2. Fixez les pattes métalliques (A) au corps de la chaise à l'aide d'un boulon (B), d'une rondelle frein (C) et d'une rondelle plate (D). Une fois tous les boulons en place, serrez-les à fond avec la clé Allen (E).

CONTENU DU TISSU

***Tissu: 100% polyester

***Code de nettoyage: S

Nettoyage professionnel recommandé. Nettoyez les taches avec un solvant doux sans eau ou un produit de nettoyage à sec. Passez l'aspirateur de temps en temps avec un embout pour tissus d'ameublement. Évitez l'exposition directe au soleil, à l'eau, à l'huile, aux acides et aux objets pointus. Ne pas nettoyer avec de l'eau ou des détergents agressifs.

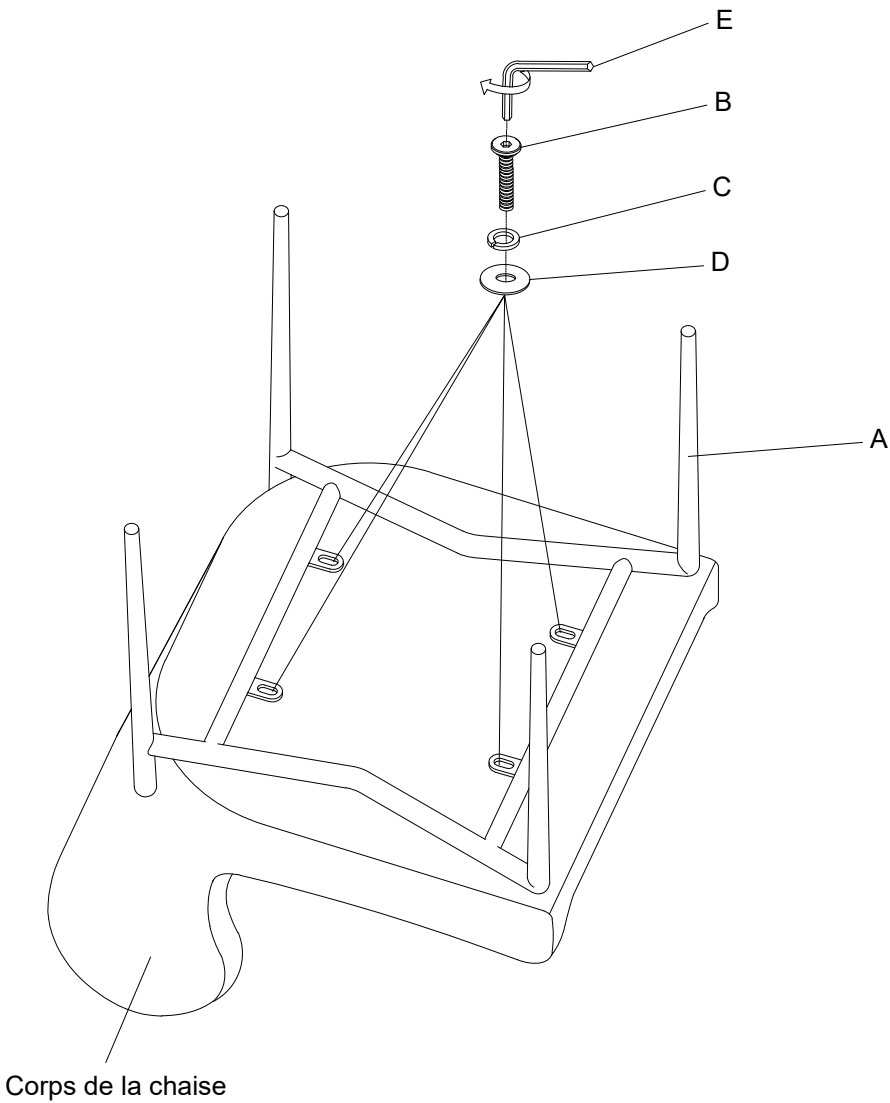

FABRIQUÉ AU VIETNAM





furnishing better
lives together®

WWW.JOFRAN.COM

INSTRUCCIONES DE MONTAJE E
IDENTIFICACIÓN DE PIEZAS
2526 - EASLEYCGN

Lista de piezas			
ITEM	Código	Description	Cant'd
A	 EASLEYP53	Atas de metal	1 PZ
Kit de hardware (EASLEYP46)			
B		Tornillo M6x20mm	4 PZS
C		Arandela de seguridad Ø1/4"	4 PZS
D		Arandela Plana Ø1/4"	4 PZS
E		Llave Allen	1 PZ

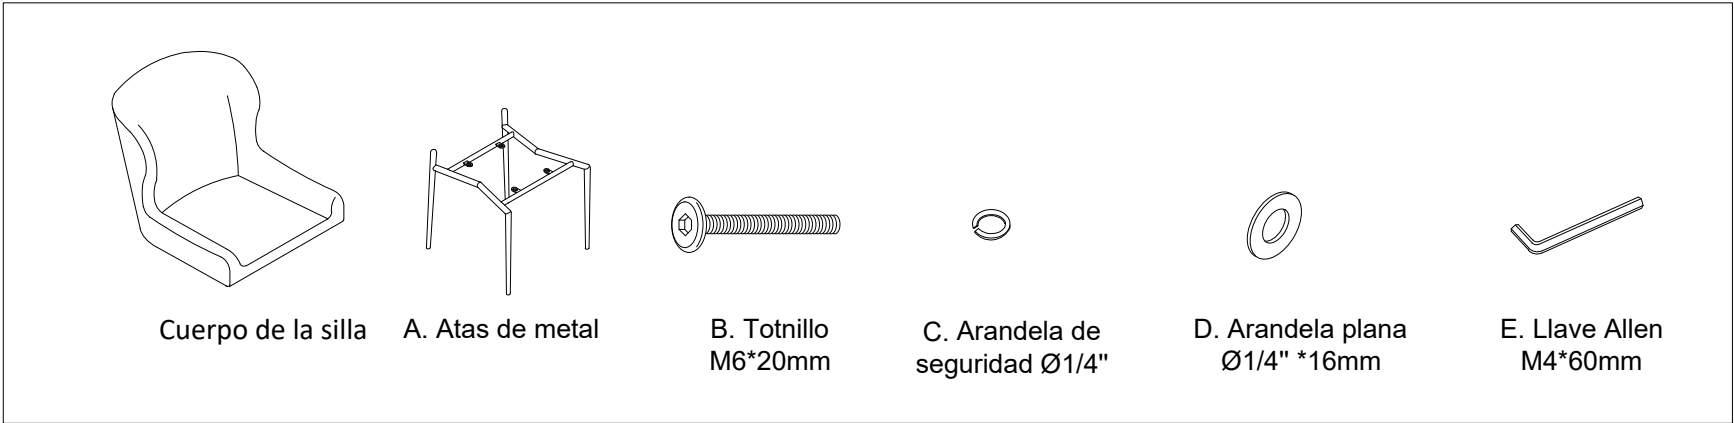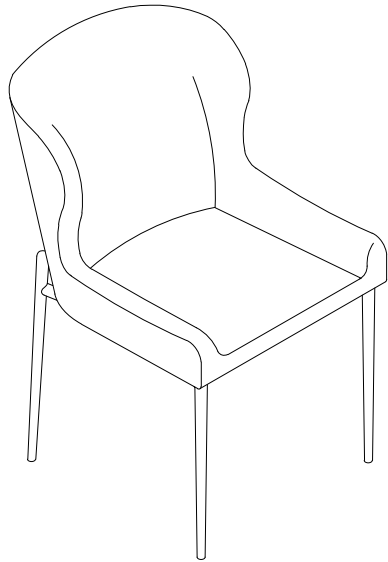

Pasos de montaje:

Paso 1. Voltee el cuerpo de la silla sobre una superficie limpia y plana.


Paso 2. Fije las patas metálicas (A) al cuerpo de la silla con un perno (B), una arandela de seguridad (C) y una arandela plana (D). Una vez colocados todos los pernos, apriételos completamente con la llave Allen (E).

CONTENIDA DE LA TELA

***Tejido: 100% poliéster

***Código de limpieza: S

Se recomienda limpieza profesional. Limpie las manchas con un disolvente suave sin agua o un producto de limpieza en seco. Aspire la superficie ocasionalmente con un accesorio para tapicería. Evite la luz solar directa, el agua, el aceite, el ácido, objetos afilados, etc. No limpie con agua ni detergentes agresivos.

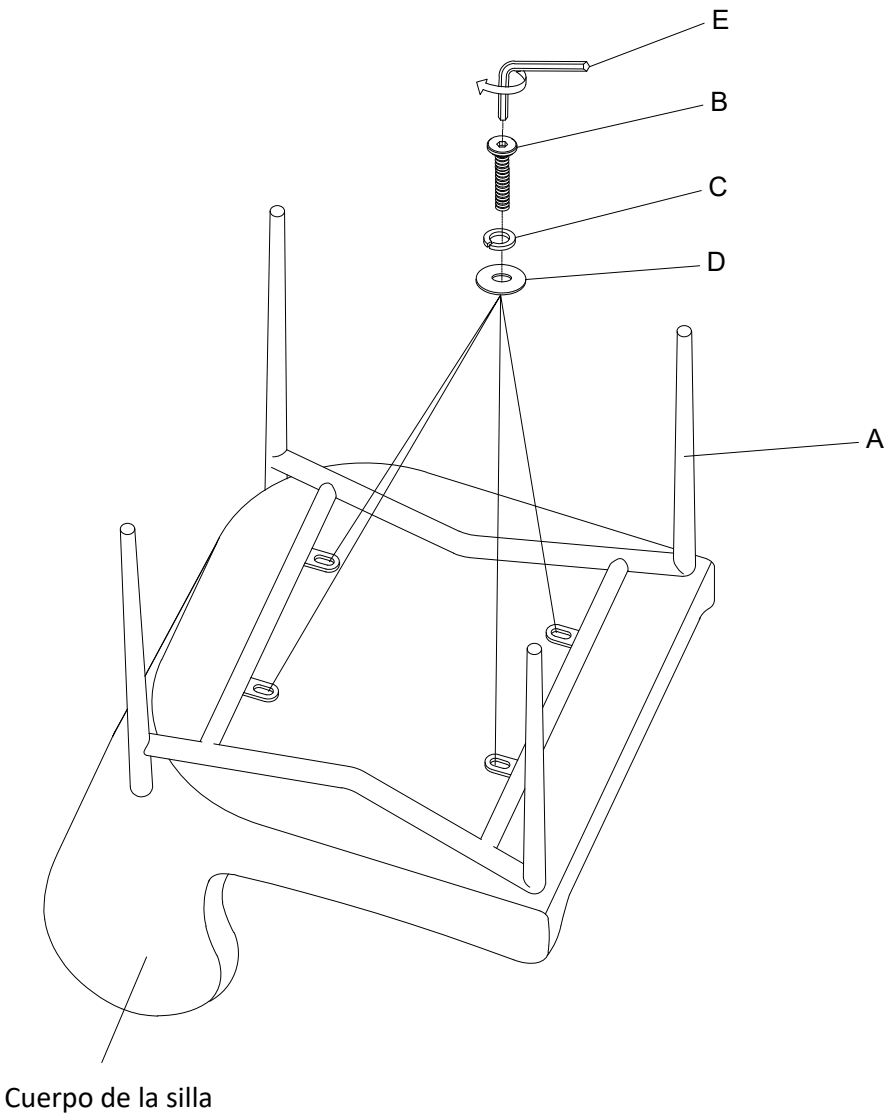

HECHO EN VIETNAM