


ASSEMBLY INSTRUCTIONS

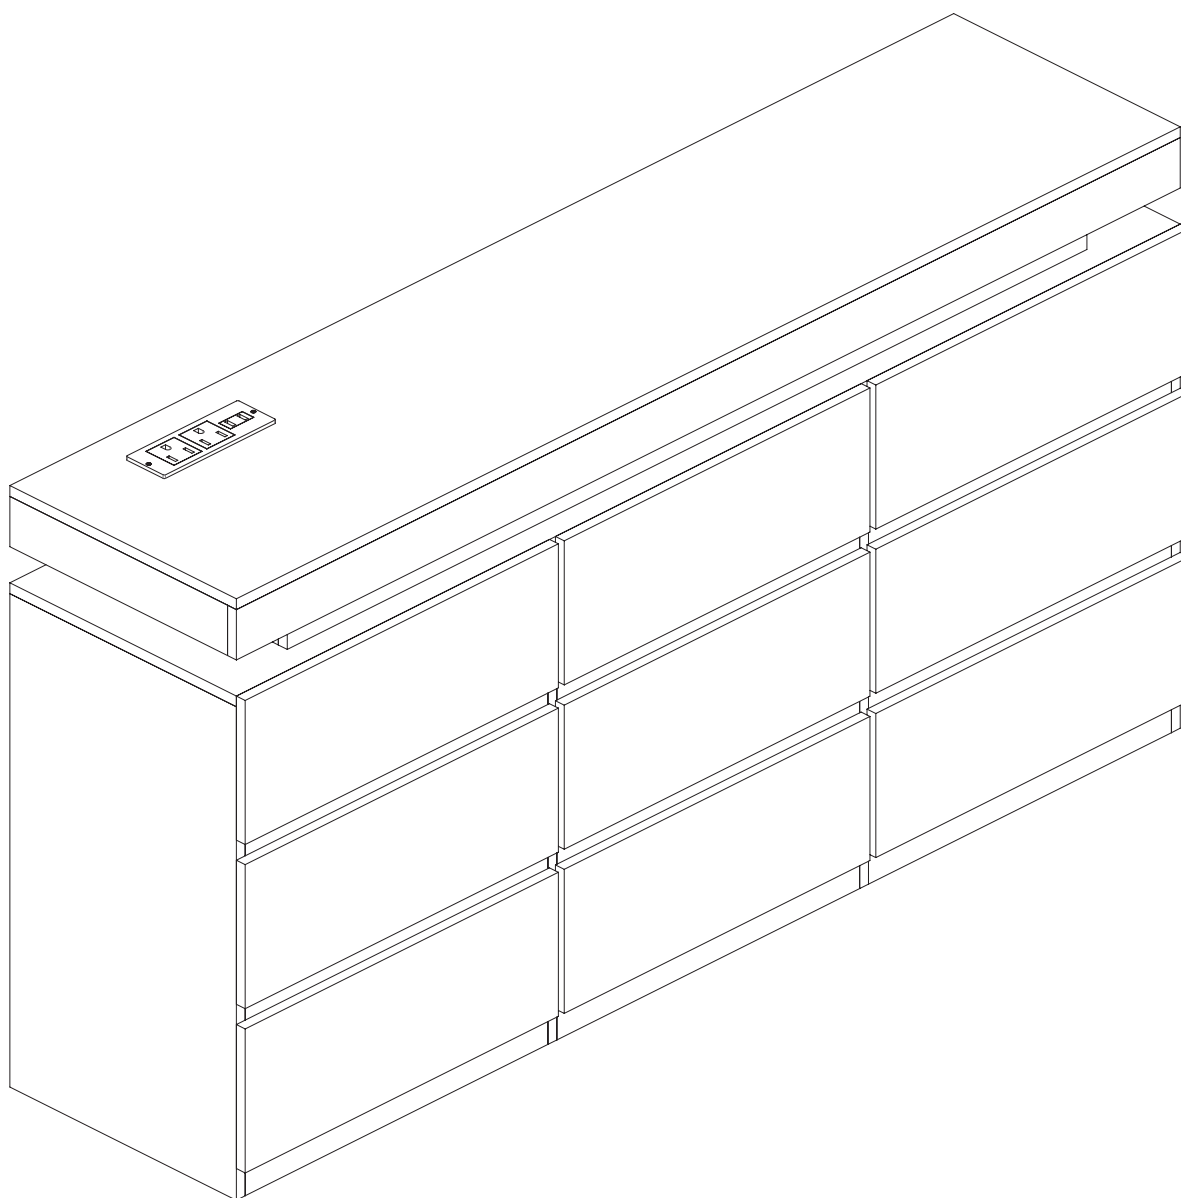

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.

Contact our customer service department in case there are any missing or damaged parts or hardware. Please also tell us your "Order ID", We will solve for you as soon as possible.

ASSEMBLY PREPARATION:

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are correct before assembly. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION:

1. Keep all hardware parts out of reach of children.
2. Dispose plastic packaging material immediately to avoid any risk of suffocation to children and animals..

TIPS FOR ASSEMBLY:


1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE:

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.














Part List

Please check if all the pieces listed below are received

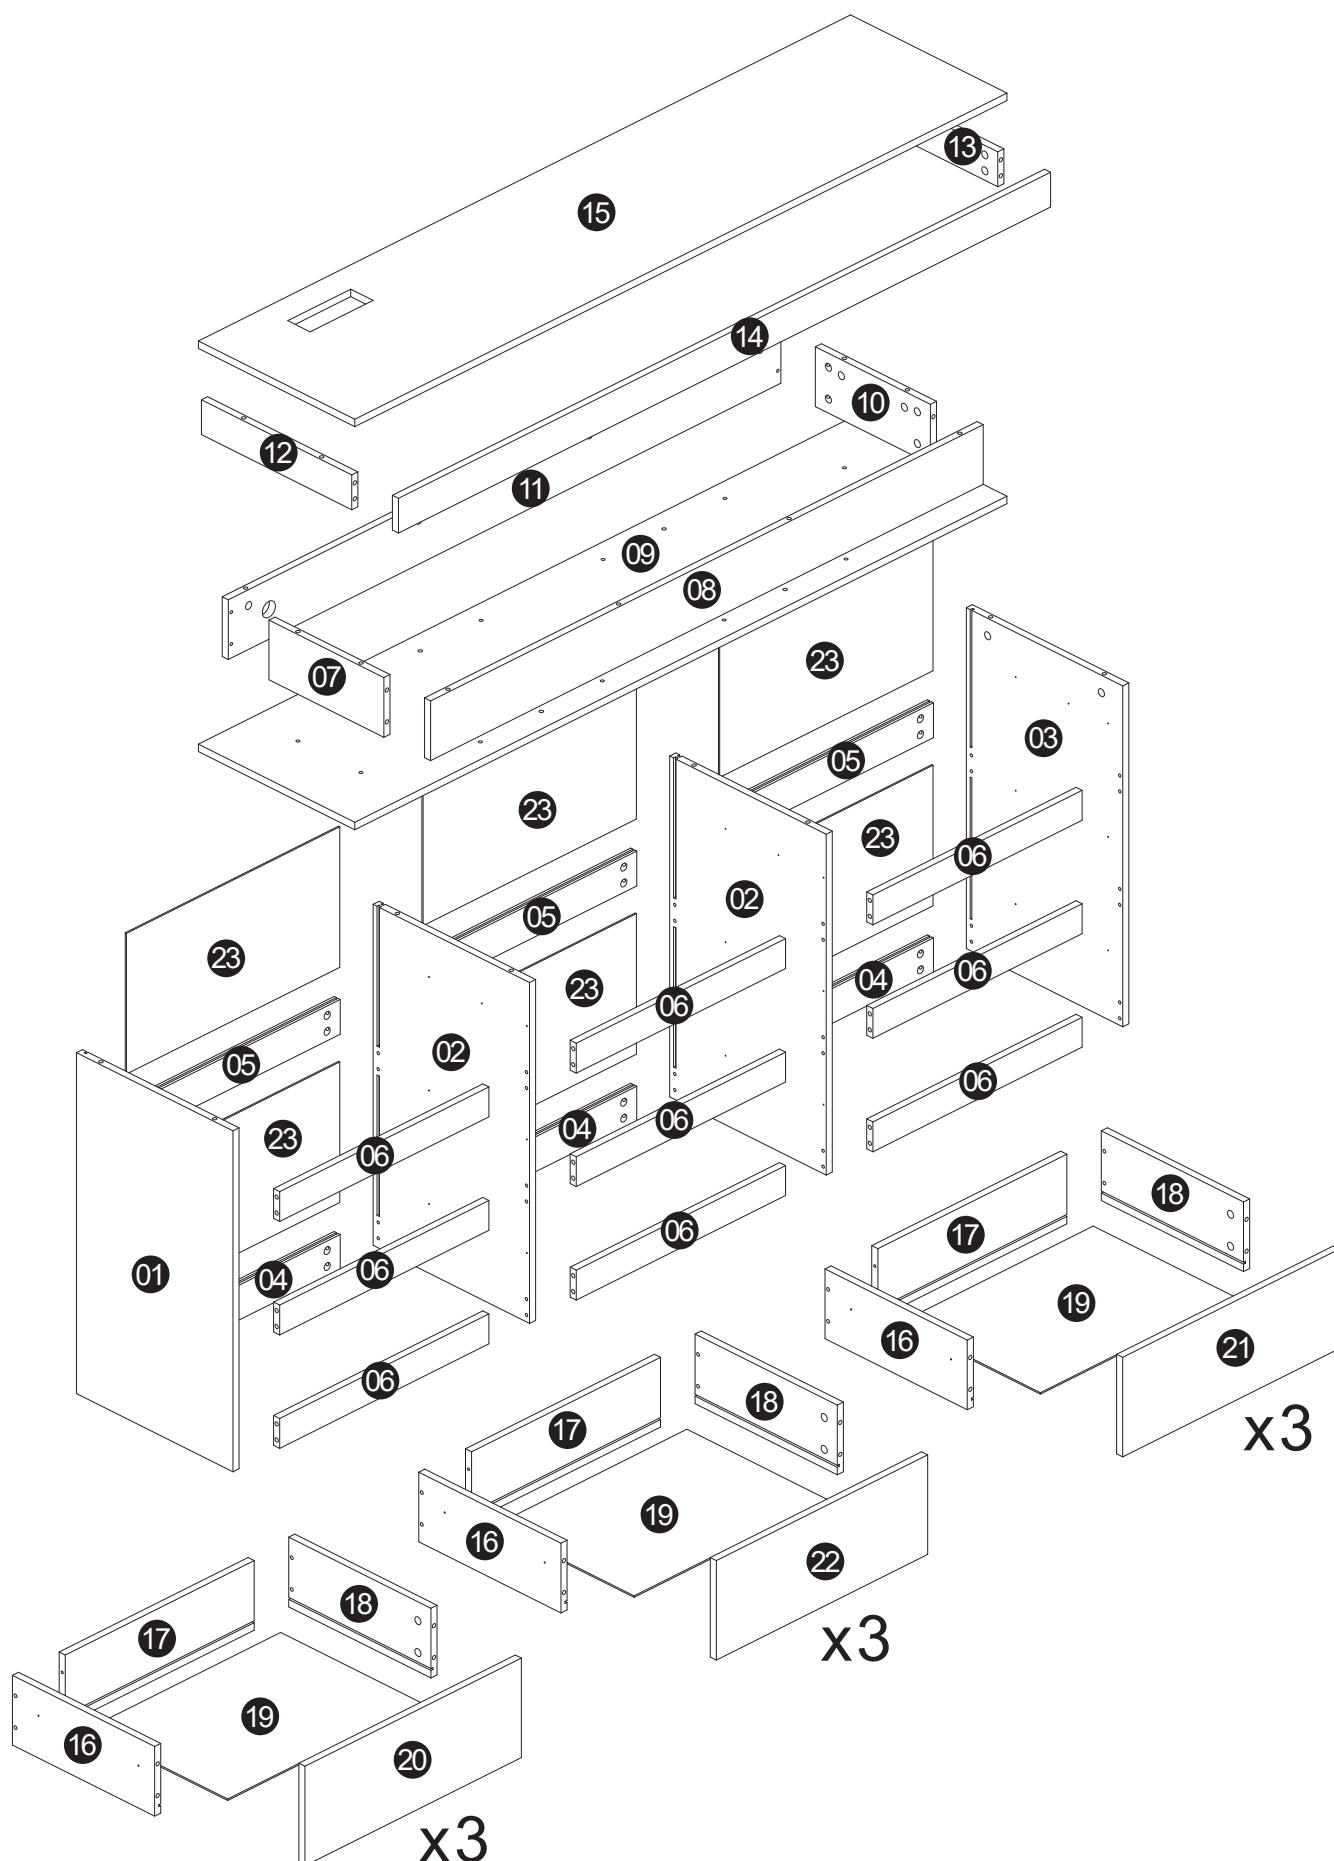

Hardware List


Please check if all the pieces listed below are received

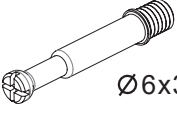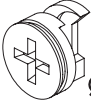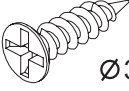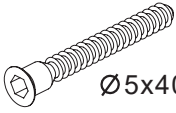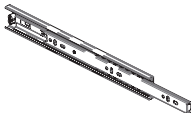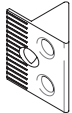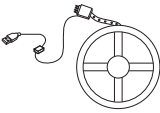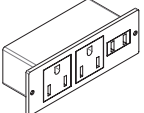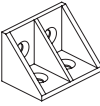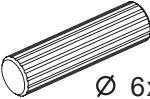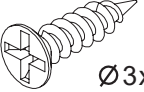A Cam bolt  $\varnothing 6 \times 35$ 132pcs	B Cam lock  $\varnothing 9 \times 15$ 132pcs	C Screw  $\varnothing 3 \times 12$ 112pcs	D Long screws  $\varnothing 5 \times 40$ 48pcs	E Slide rail  18pcs
F Plastic wedge  12pcs	G Anti-tip accessory  2pcs	H Light strip  1pc	Remote control  1pc	Light strip clip  4pcs
I Power strip  1pc	J Hex screwdriver  1pc	K Screwdriver  1pc	L L-shaped bracket  5pcs	M Wood dowel  $\varnothing 6 \times 30$ 4pcs
N Screw  $\varnothing 3 \times 14$ 12pcs				

**ASSEMBLY
REQUIREMENTS**

4-5Hours
Assembly Time
(Approximate)


2 -Person Assembly

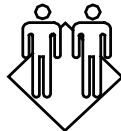


Tools Required (Not Provided):

Mark Pencil

Power Drill

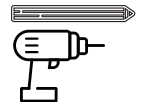


How the knock down assembly system works

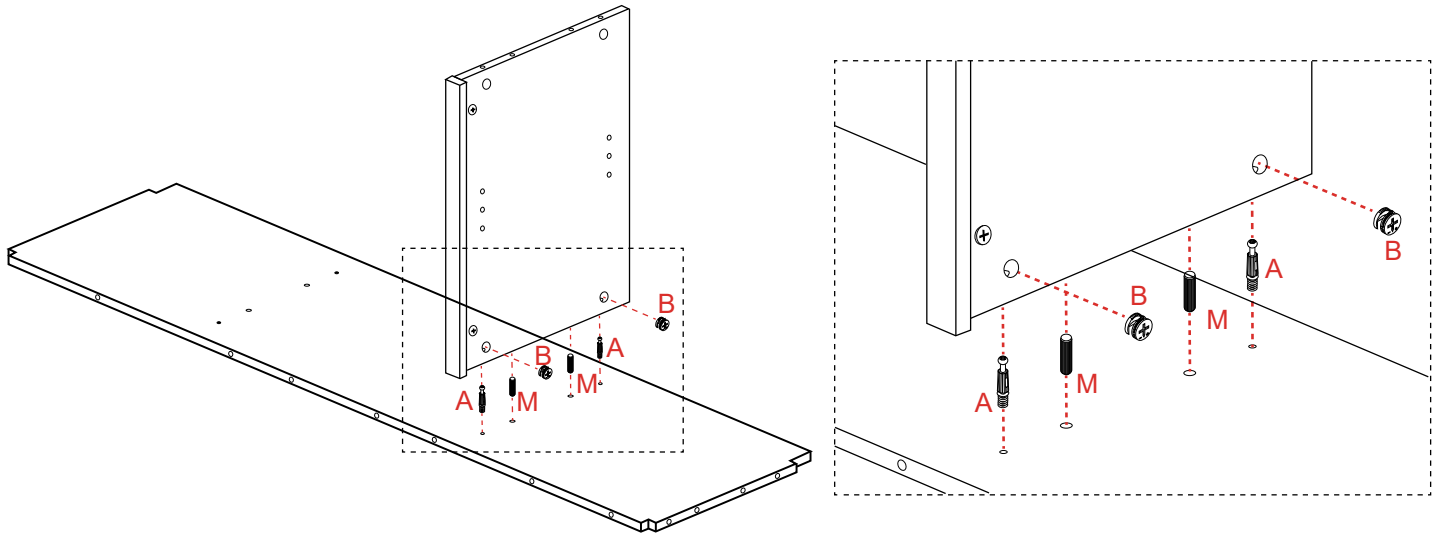


How to Install Wood Dowel


Insert the wood dowel (M) at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

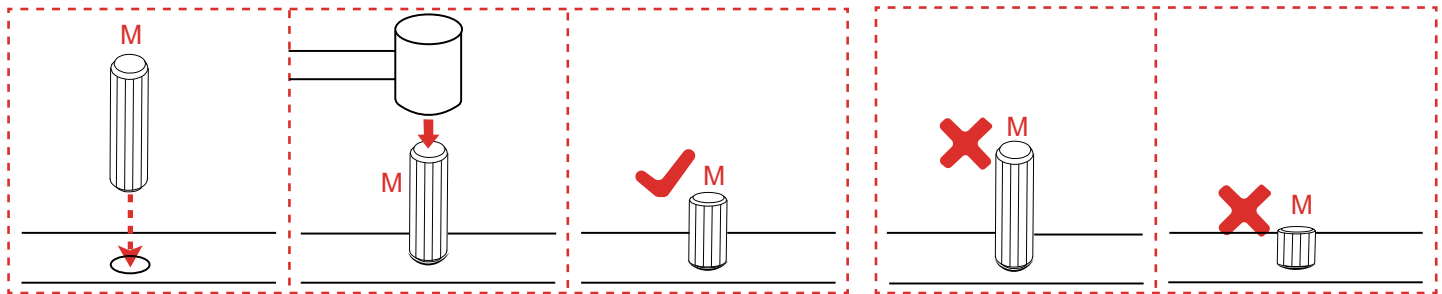

CAM LOCK SYSTEM OPERATION

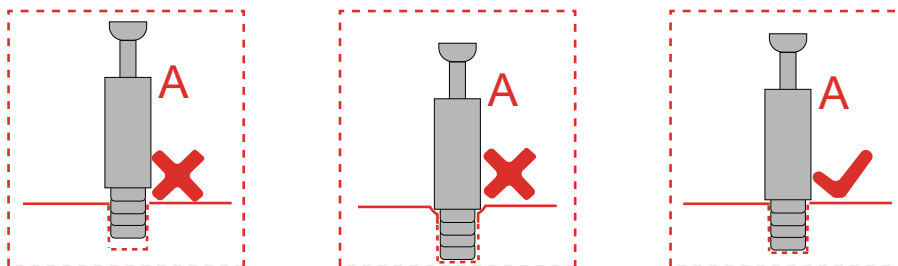

1. Screw the cam bolt (A) into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt (A) goes into the pre-drilled large hole on the end of panel for cam lock (B).
3. Insert the cam lock (B) into the pre-drilled large hole on the panel. Make sure the cross slot of cam lock (B) faces out (The arrow should point towards Screw No. A).
4. Rotate the cam lock (B) clockwise with a self-supplied phillips screwdriver to lock the cam bolt (A) in place (Rotate 100-180 degrees until tight).

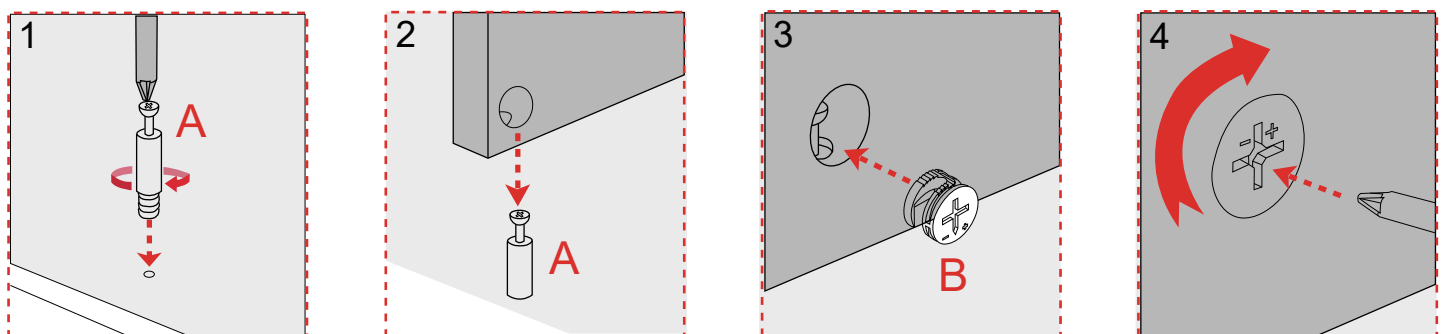





Hardware installation demonstration

- Before installing the drawer rails, you need to split rail No.E into outer rail No.E1 and inner rail No.E2

1.Place the rail No.E as shown in picture, Then Pull out the E2

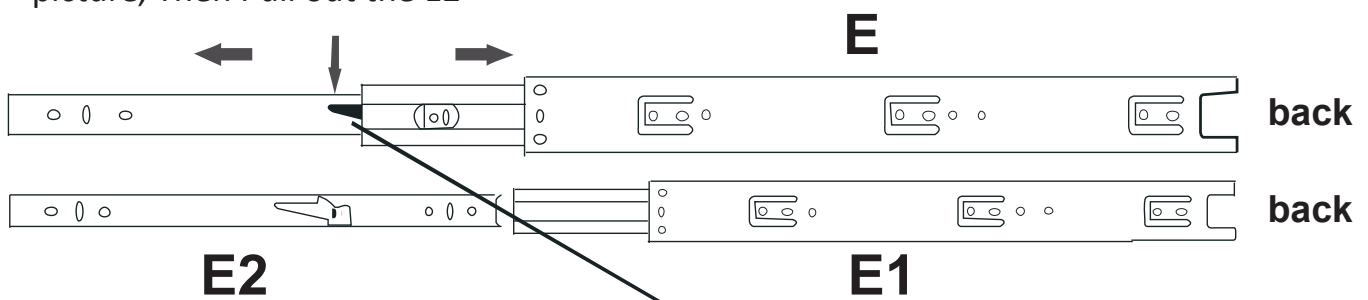

2.Find the latch position,press it and split.

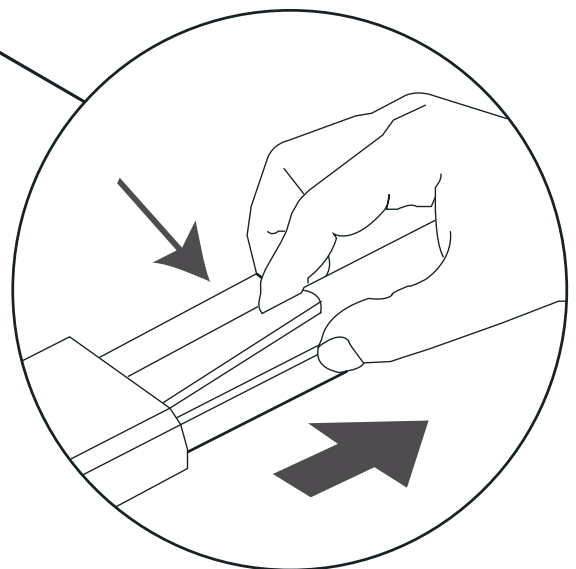


Warm Reminder:Press it and split

Step 1

I. Use screws (C) to attach the slide rail (E1) to panels (1).


Note: For the correct orientation of slide rail (E1), please refer to the image.(front and back)

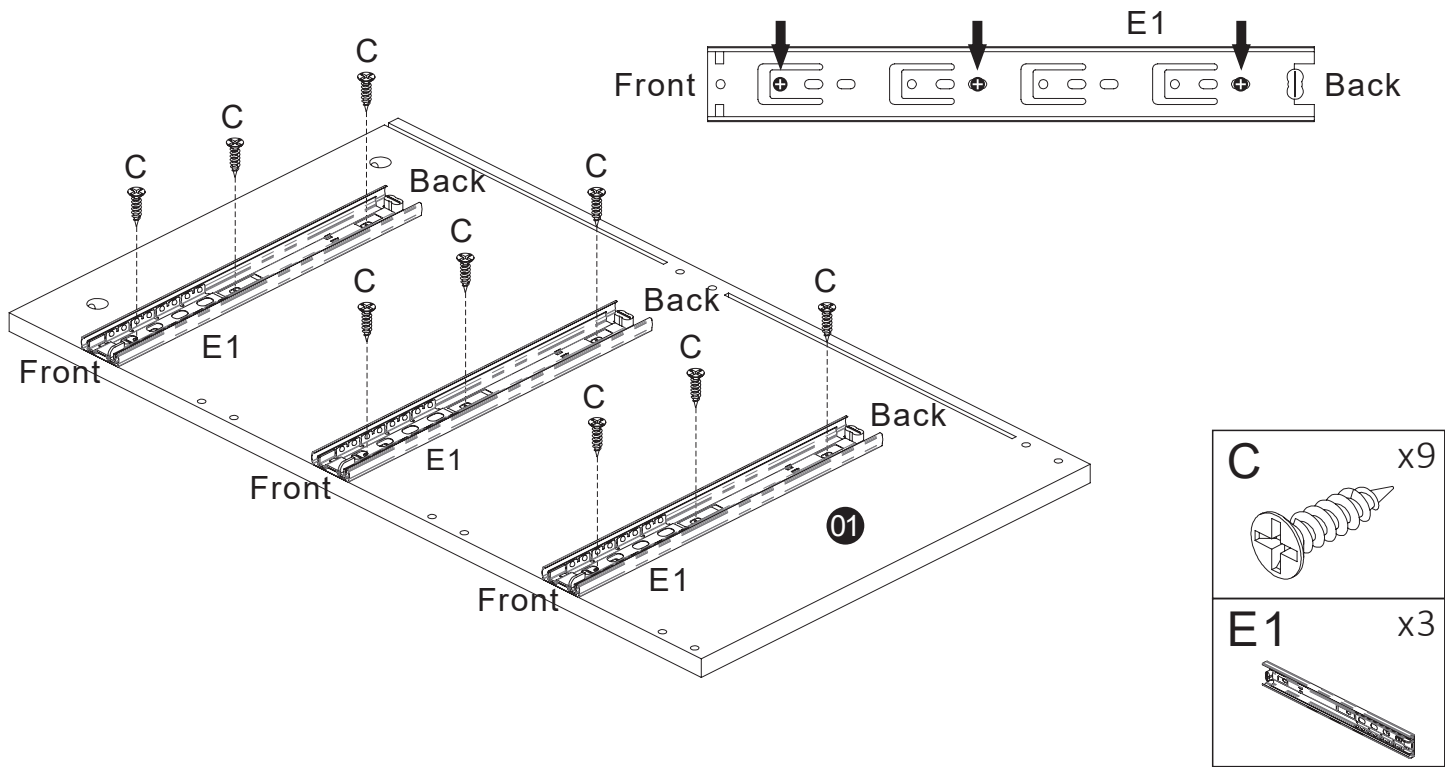

Step 2



I. Use screws (C) to attach the slide rail (E1) to panels (3).

Note: For the correct orientation of slide rail (E1), please refer to the image.(front and back)

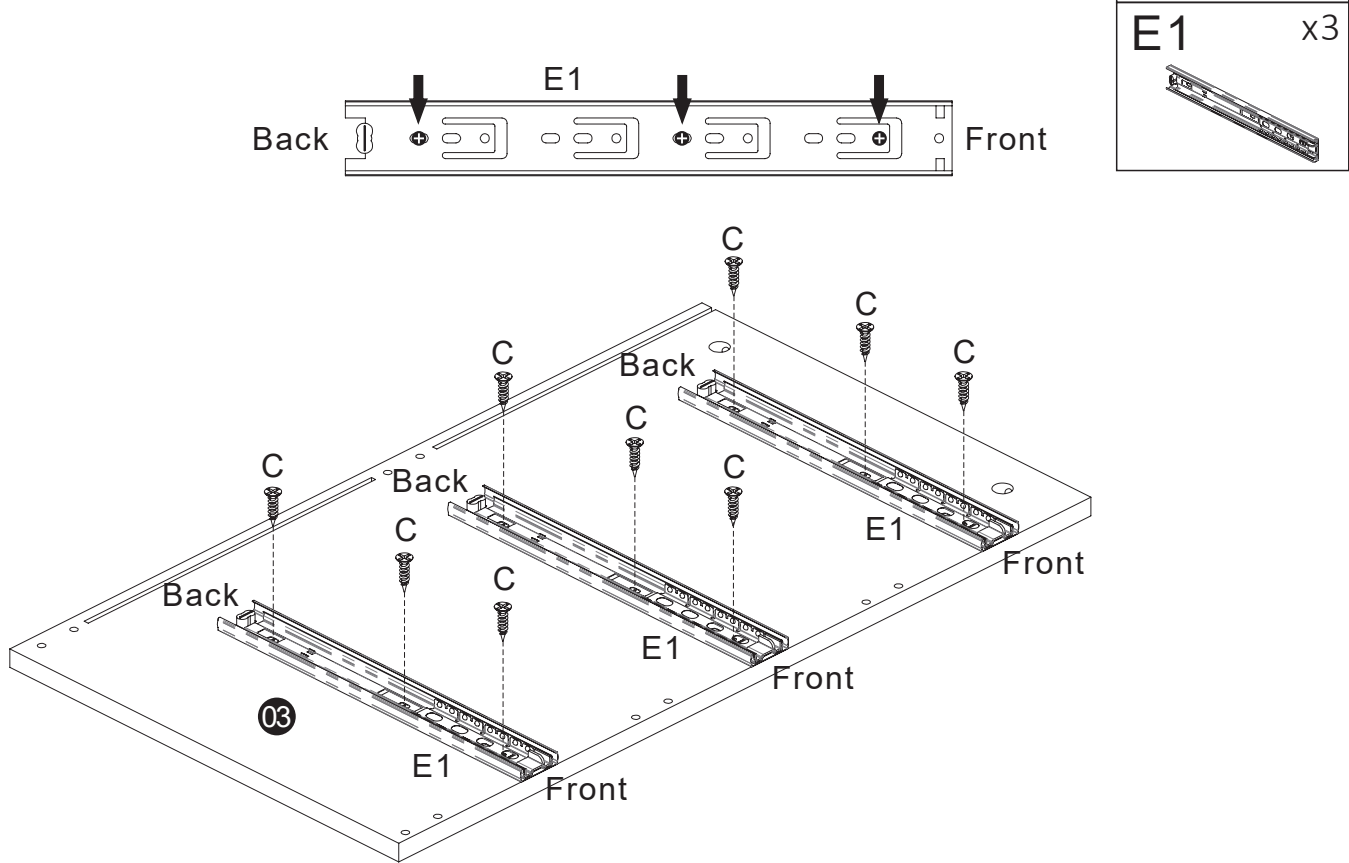

Step 3





I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (1 and 3).

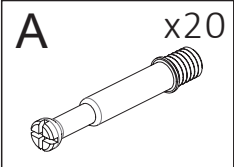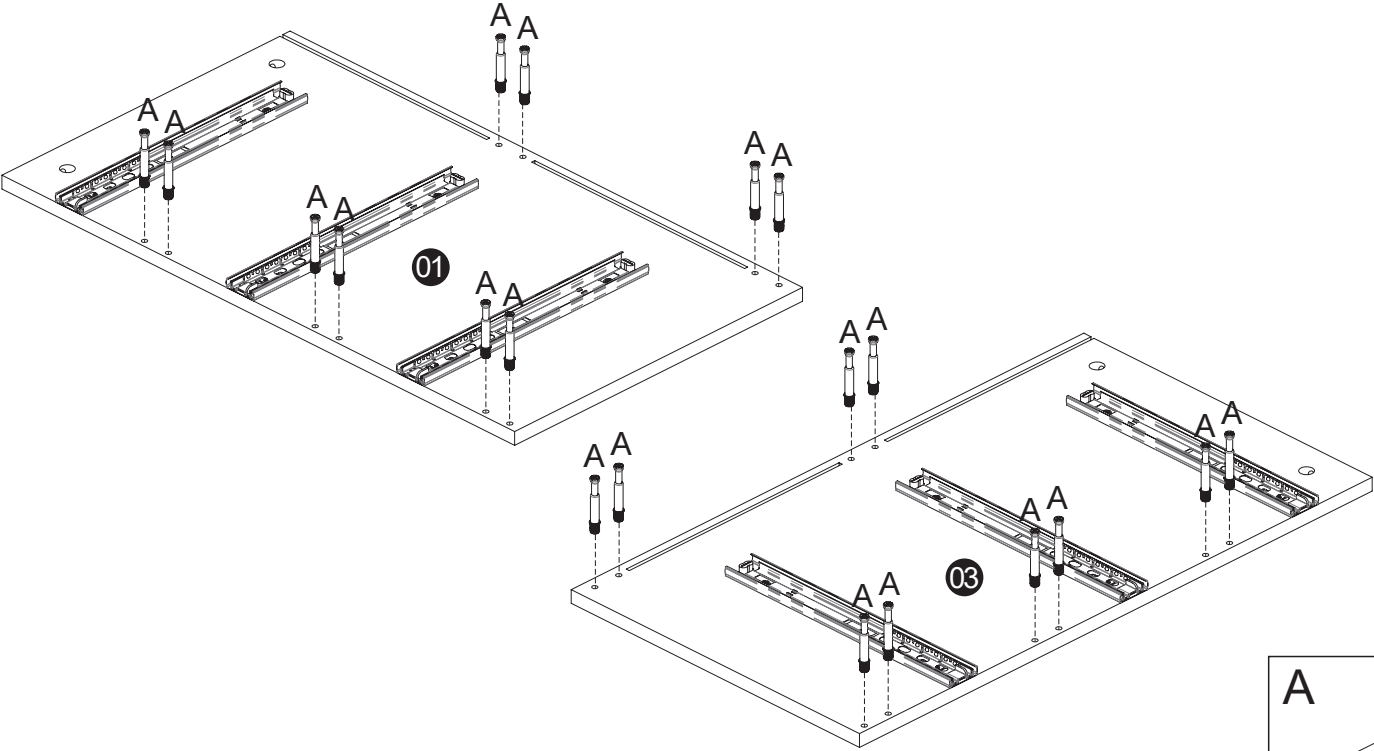

Step 4

I. Use screws (C) to attach the slide rail (E1) to panels (2).


Note: For the correct orientation of slide rail (E1), please refer to the image.(front and back)

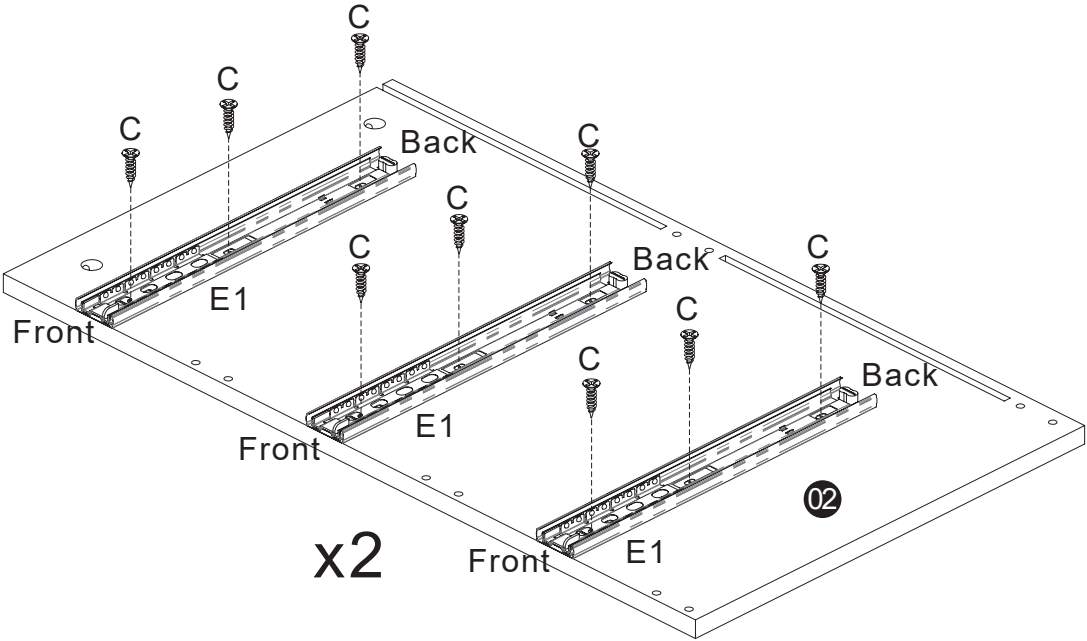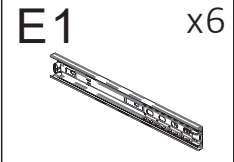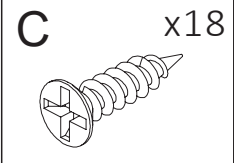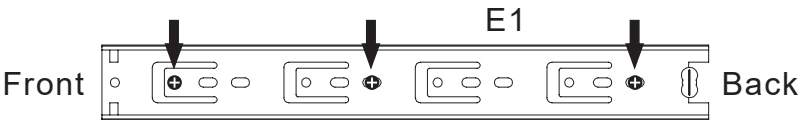

Step 5

I. Rotate panel (2) 180°, use screws (C) to attach the slide rail (E1) to panels (2).

Note: For the correct orientation of slide rail (E1), please refer to the image.(front and back)

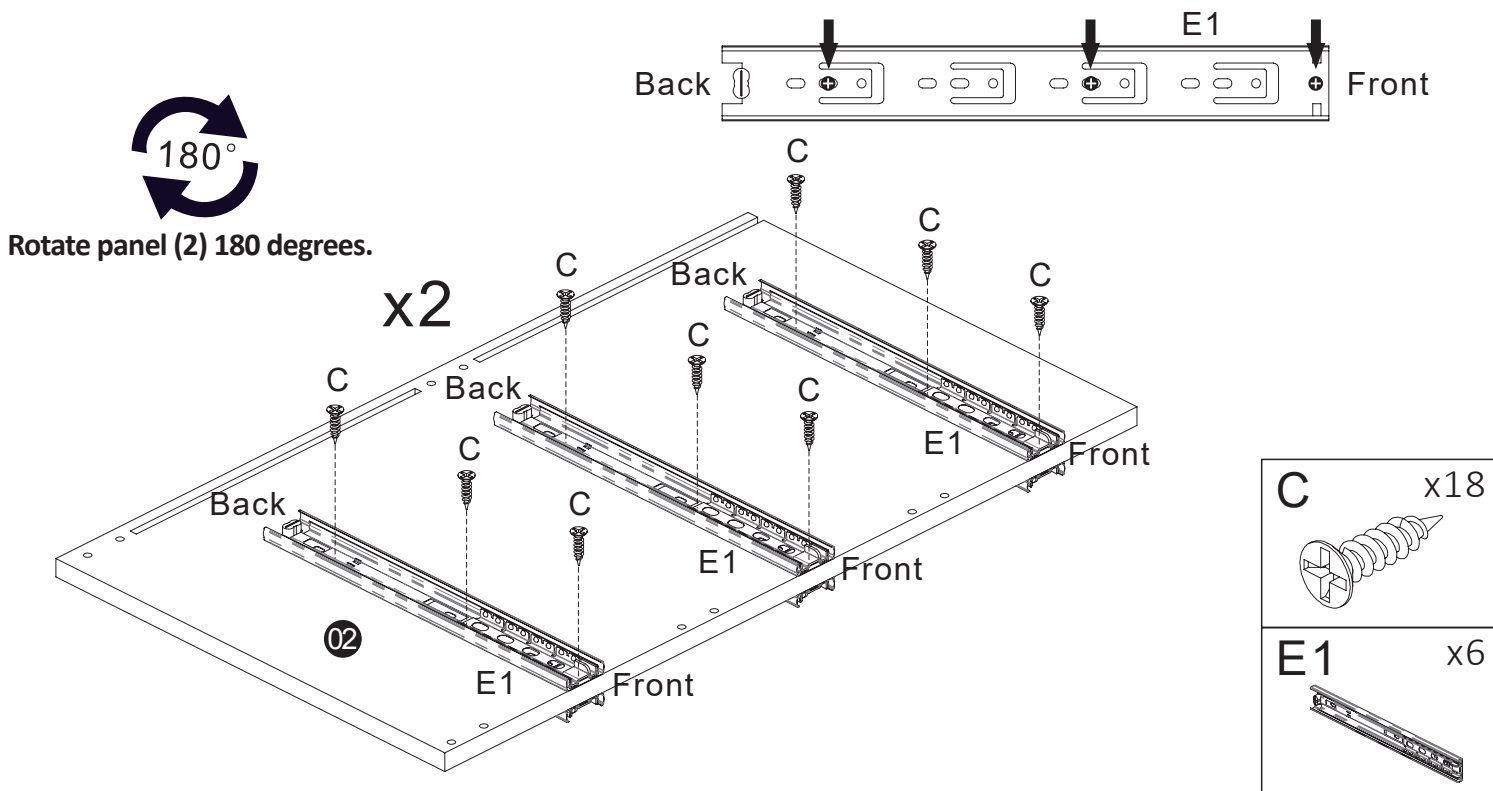


Step 6

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (2).


Note: Install cam bolt (A) on panel (2), please use a manual screwdriver.

It is not recommended to use an electric screwdriver.

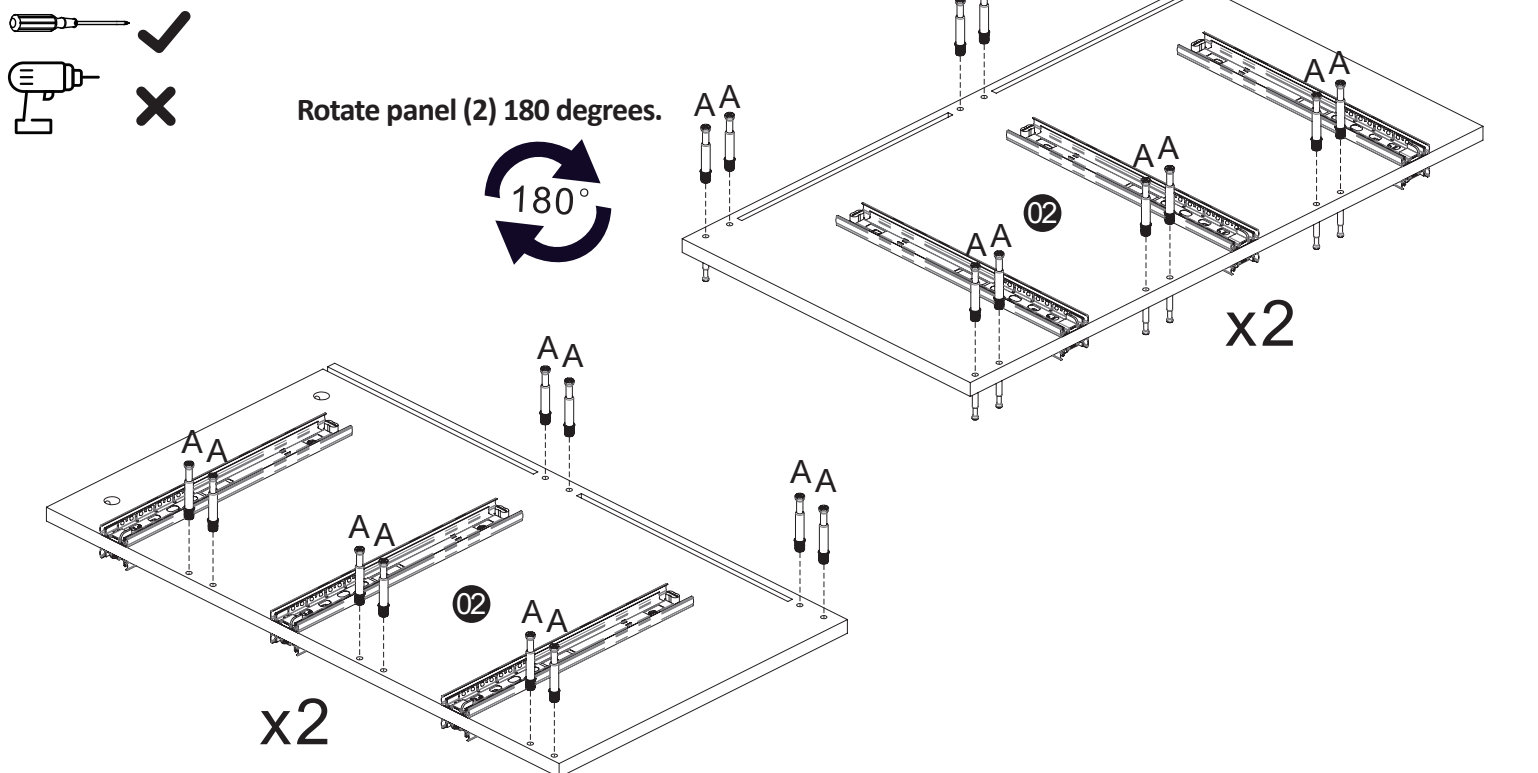


Step 7

I. As shown in the illustration, connect the panels (4、5、6、6 and 6) to panel (3), insert the cam lock (B) into the corresponding holes on panels (4、5、6、6 and 6), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

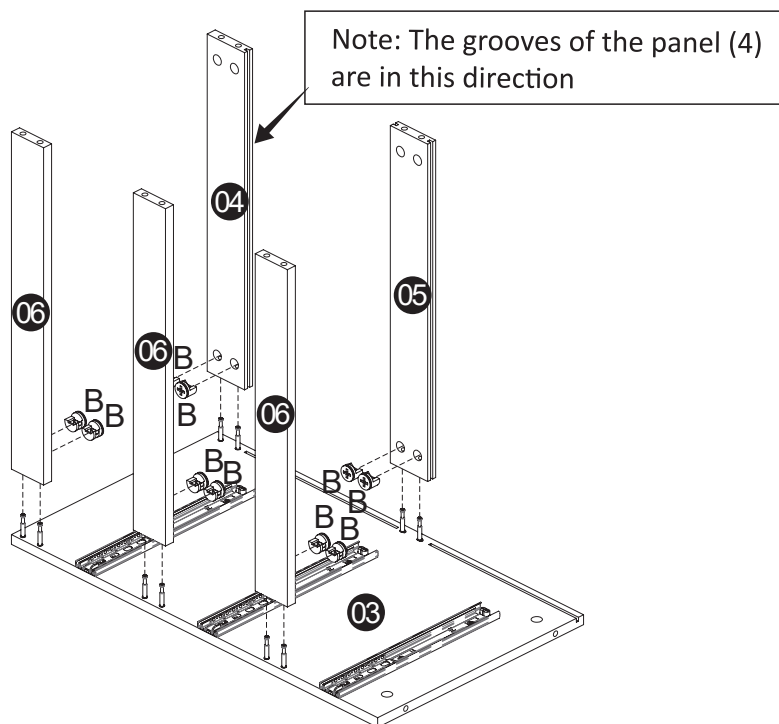



Step 8

I. Install panel (23) as per diagram and slide them into the grooves until they are fully seated.

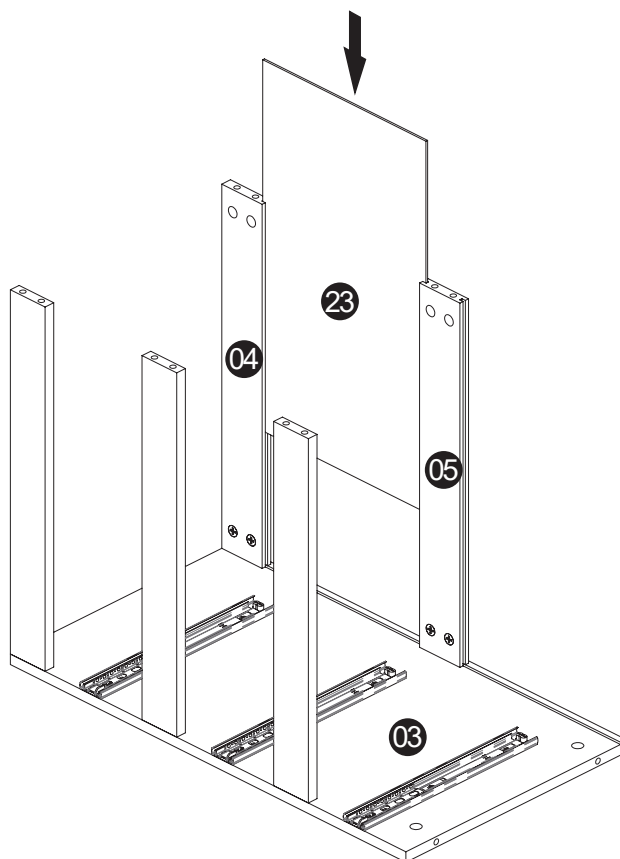


Step 9

I. As shown in the illustration, connect the panel (2) to panels (4、 5、 6、 6 and 6), insert the cam lock (B) into the corresponding holes on panels (4、 5、 6、 6 and 6), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

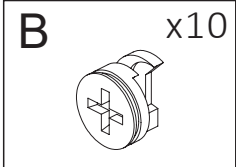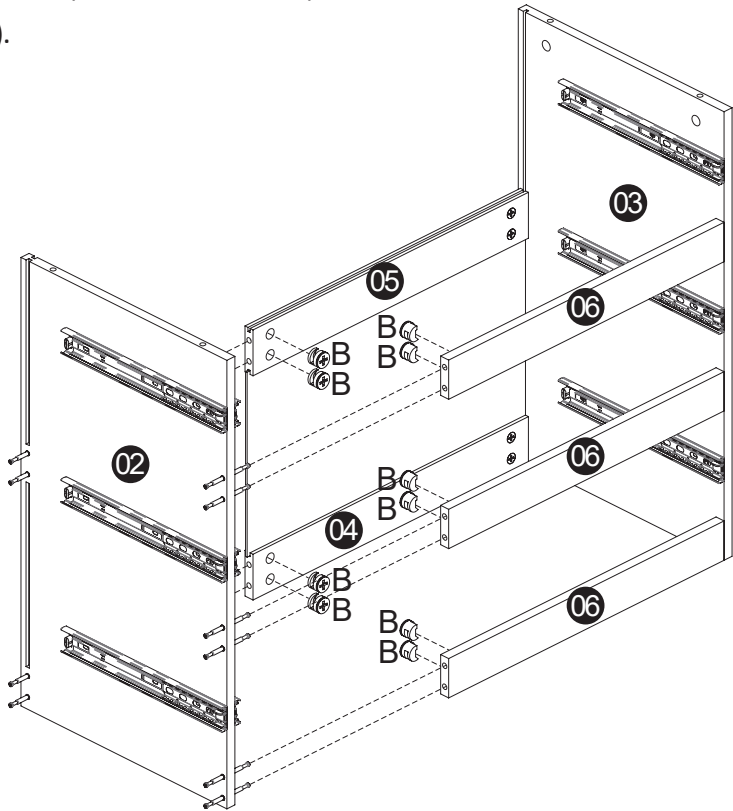


Step 10

I. As shown in the illustration, connect the panels (4、 5、 6、 6 and 6) to panel (2), insert the cam lock (B) into the corresponding holes on panels (4、 5、 6、 6 and 6), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

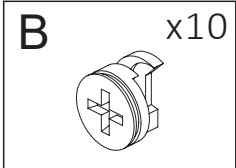


Note: The grooves of the panel (4) are in this direction

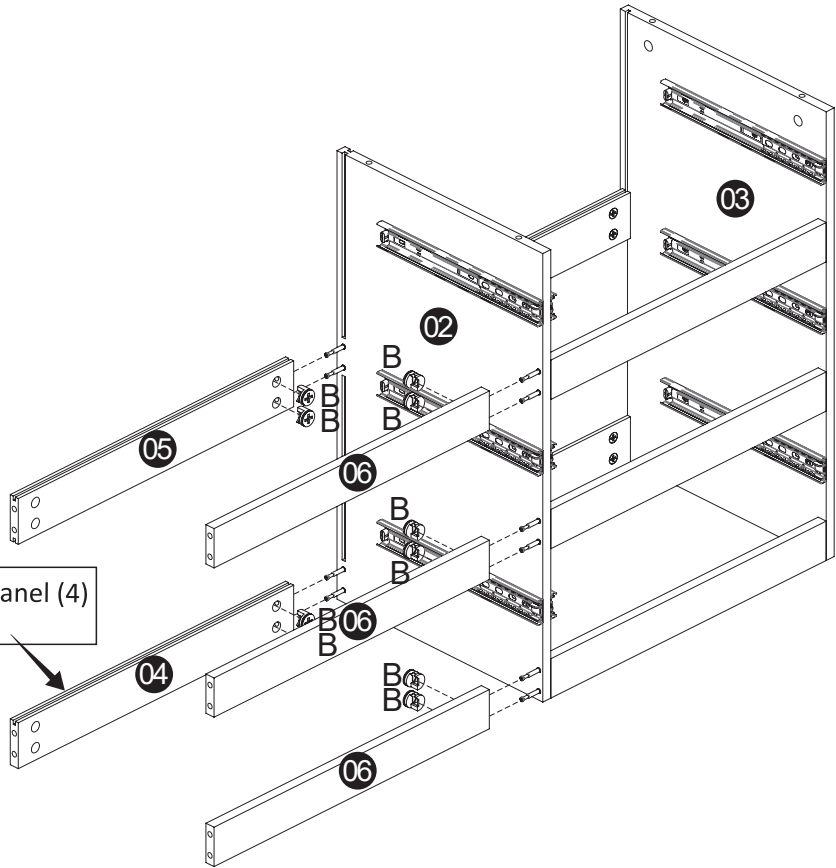



Step 11

I. Install panel (23) as per diagram and slide them into the grooves until they are fully seated.

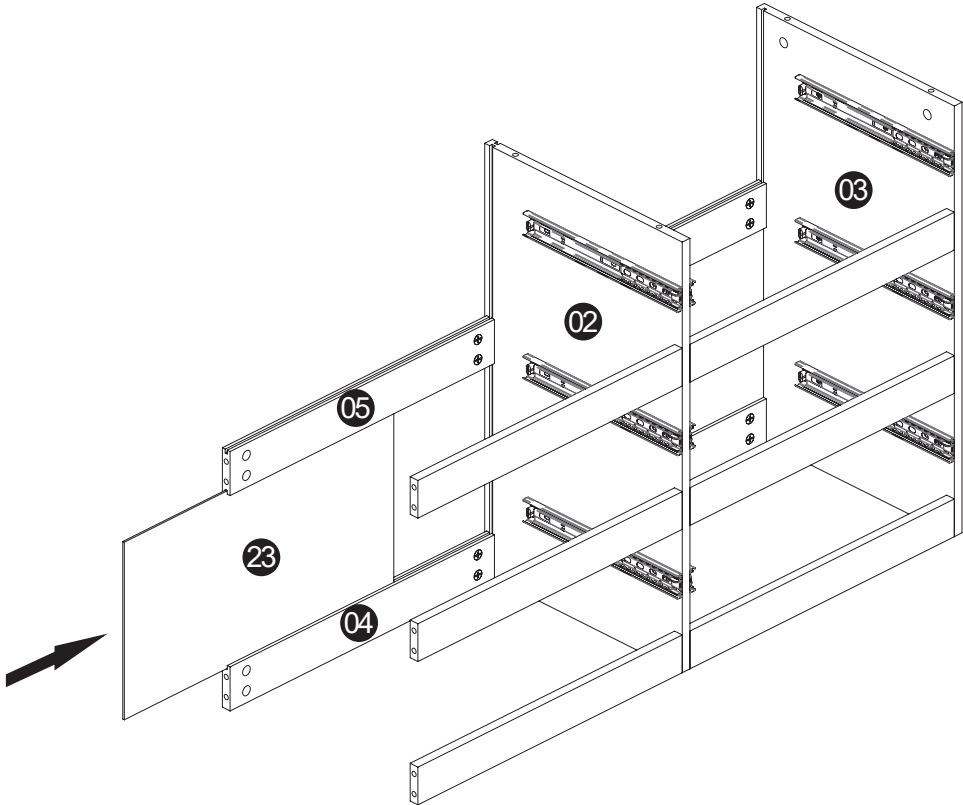



Step 12

I. As shown in the illustration, connect the panel (2) to panels (4、 5、 6、 6 and 6), insert the cam lock (B) into the corresponding holes on panels (4、 5、 6、 6 and 6), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

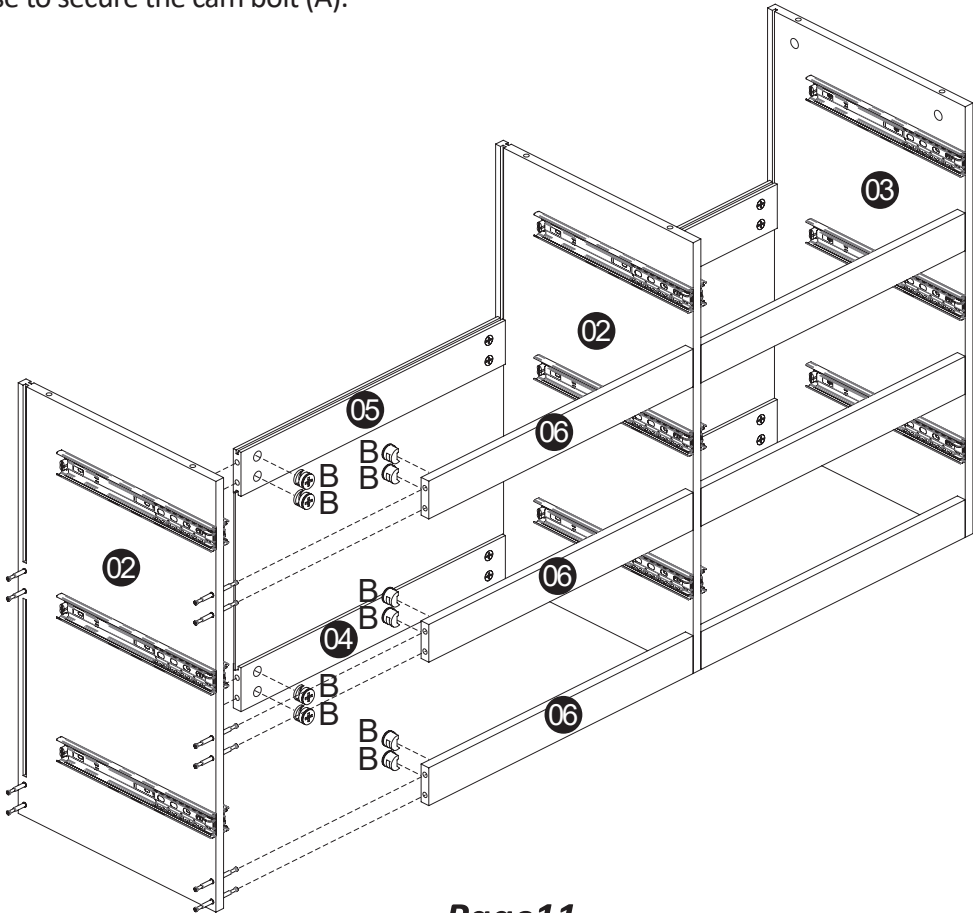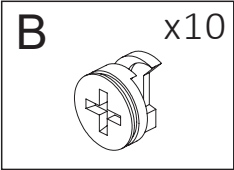


Step 13

I. As shown in the illustration, connect the panels (4、 5、 6、 6 and 6) to panel (2), insert the cam lock (B) into the corresponding holes on panels (4、 5、 6、 6 and 6), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

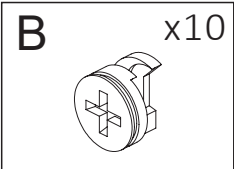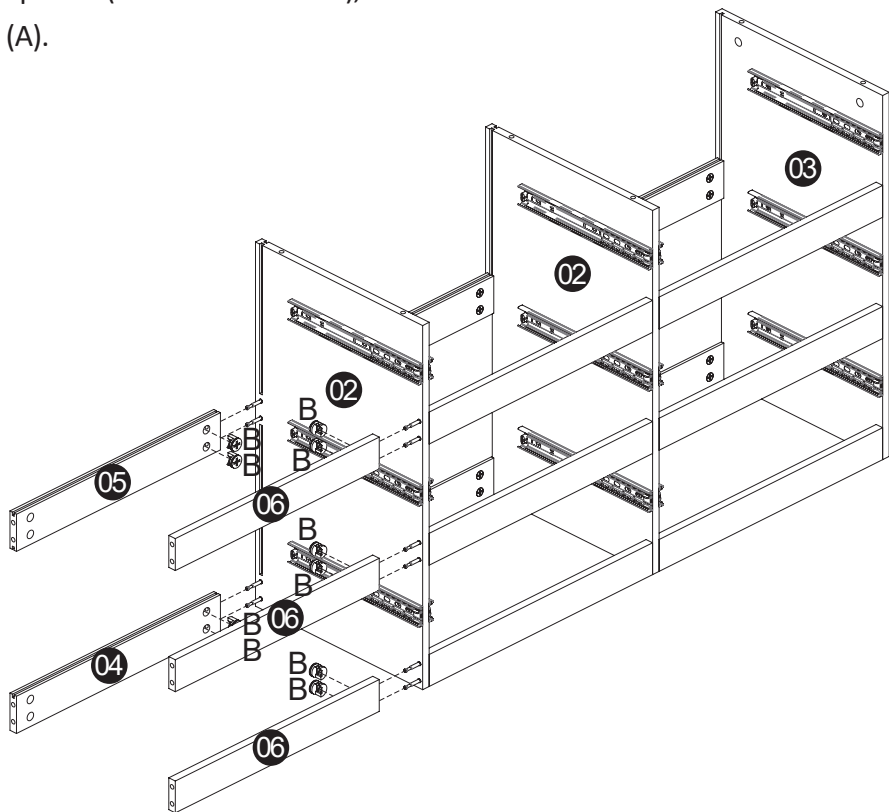



Step 14

I. Install panel (23) as per diagram and slide them into the grooves until they are fully seated.

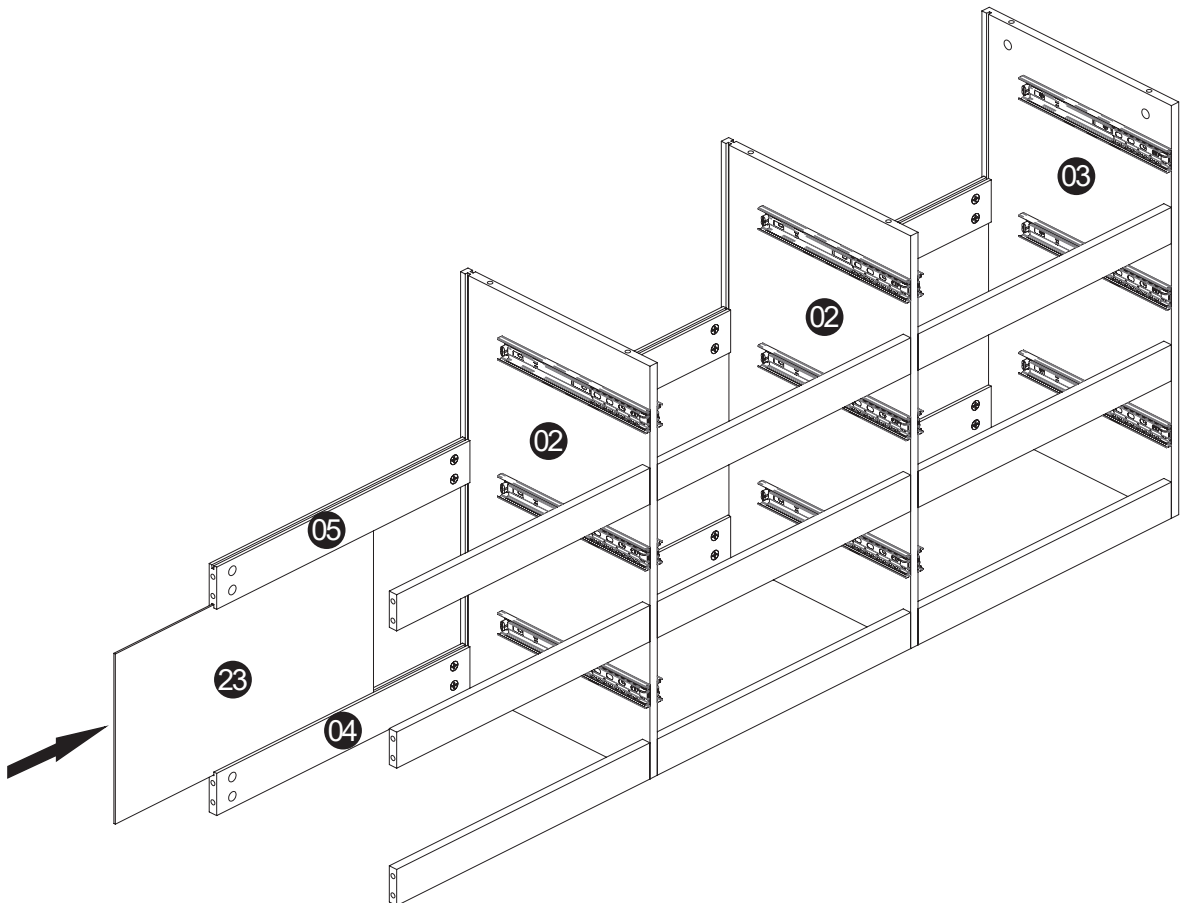


Step 15

I. As shown in the illustration, connect the panel (1) to panels (4、 5、 6、 6 and 6), insert the cam lock (B) into the corresponding holes on panels (4、 5、 6、 6 and 6), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

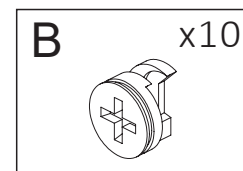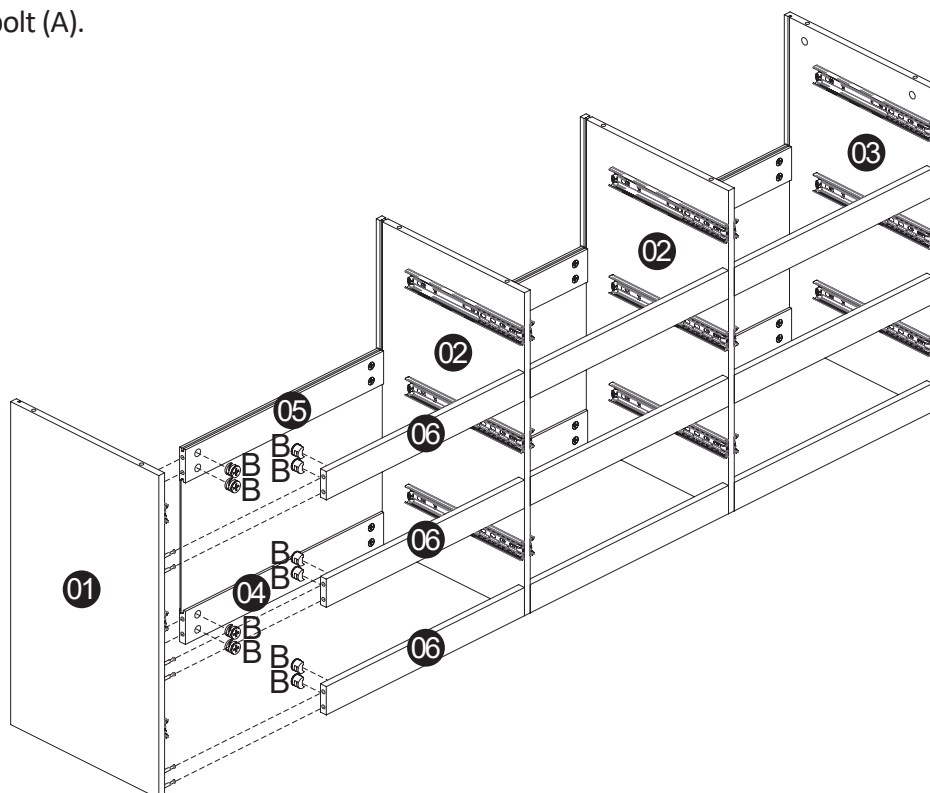



Step 16

I. Install panel (23) as per diagram and slide them into the grooves until they are fully seated.

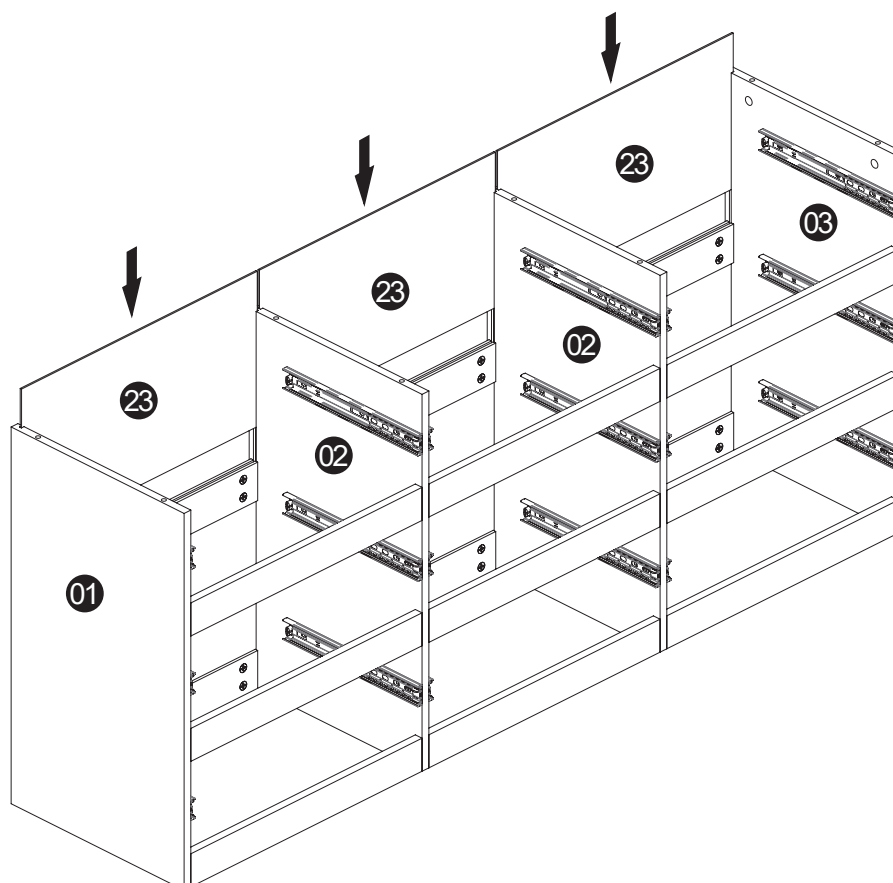



Step 17

- I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (14).
- II. As shown in the illustration, connect the panel (14) to panels (12 and 13), insert the cam lock (B) into the corresponding holes on panels (12 and 13), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

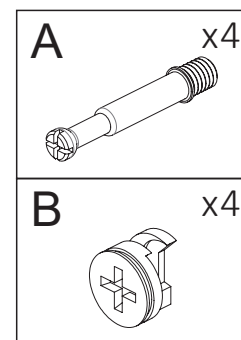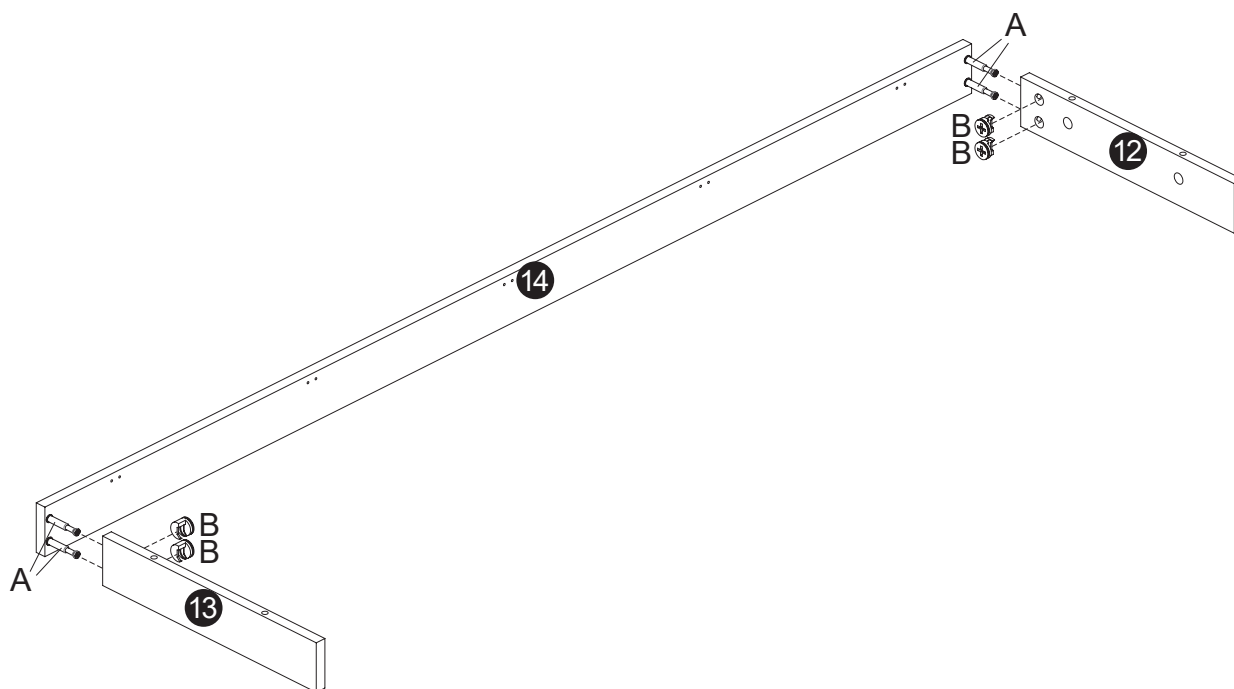

Step 18


- I. As shown in the illustration, connect the panels (12 and 13) to panel (15), insert the cam lock (B) into the corresponding holes on panels (12 and 13), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).
- II. Use screws (C) to secure the L-shaped bracket (L) to panels (14 and 15), and connect panels (14) and (15) together.

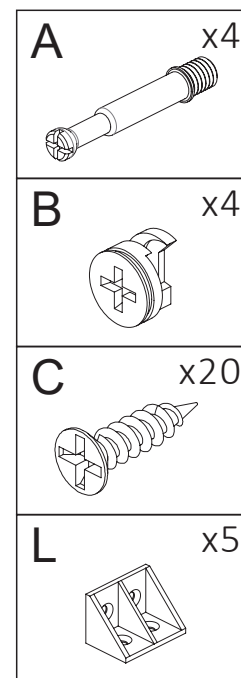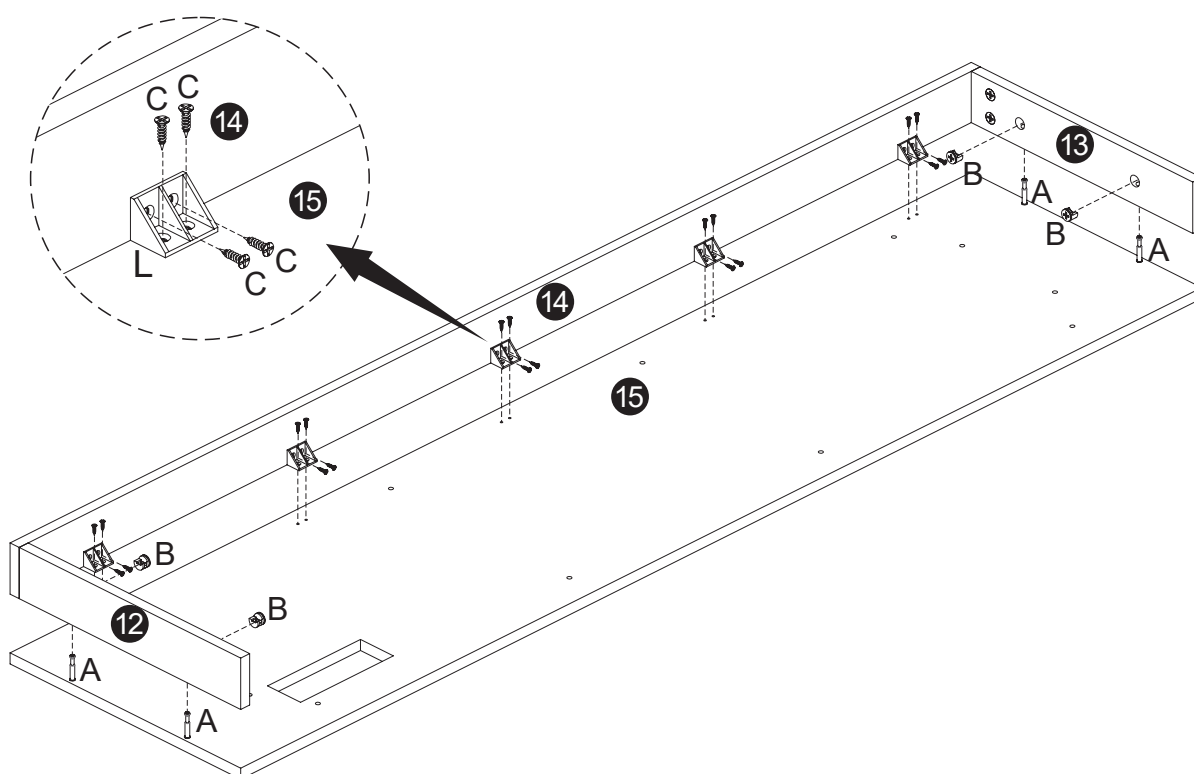

Step 19


- I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (8 and 11).
- II. As shown in the illustration, connect the panels (8 and 11) to panels (7 and 10), insert the cam lock (B) into the corresponding holes on panels (7 and 10), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

Note: This hole is an outlet hole, which is installed on the left as shown in the figure.

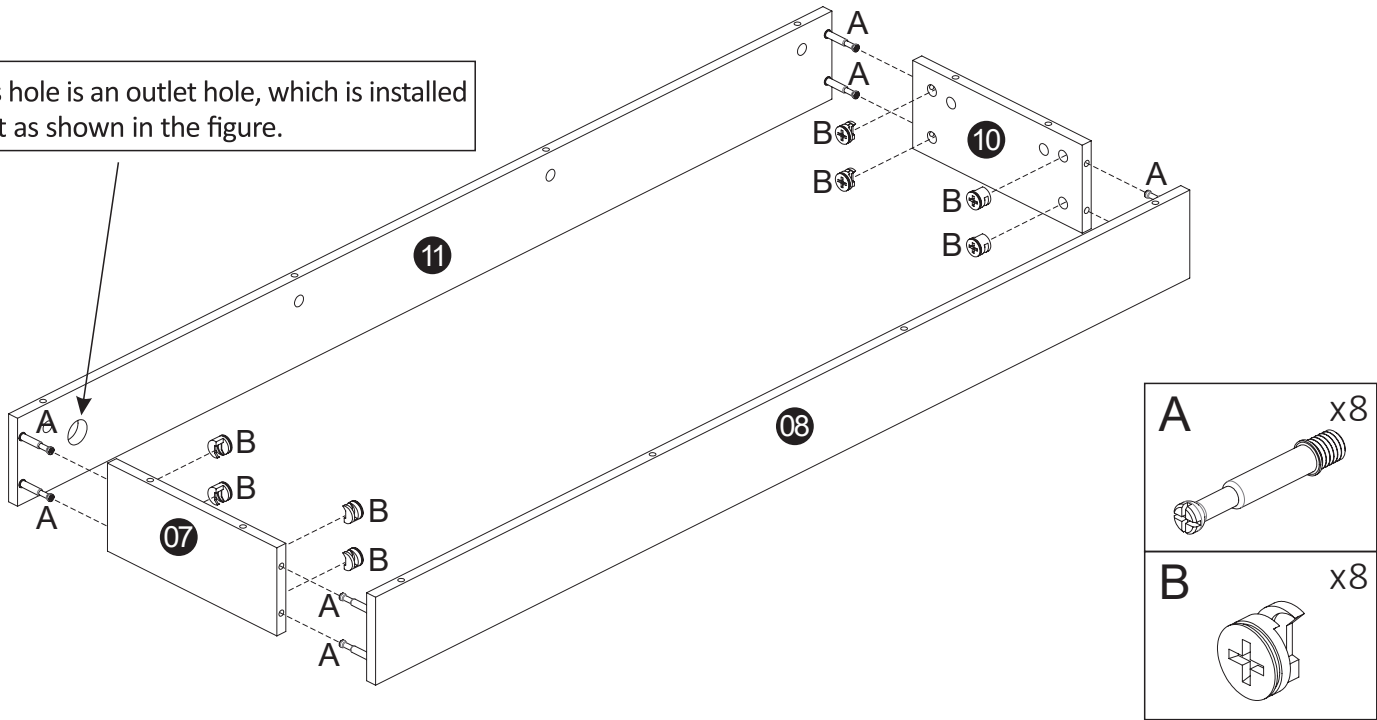

Step 20



- I. Peel off the adhesive backing from the light strip (H) and the light strip clips (H).
- II. Attach the light strip (H) to the panels (7, 8, 10 and 11). Use the light strip clips (H) to hold the light strip (H) in place for added stability.

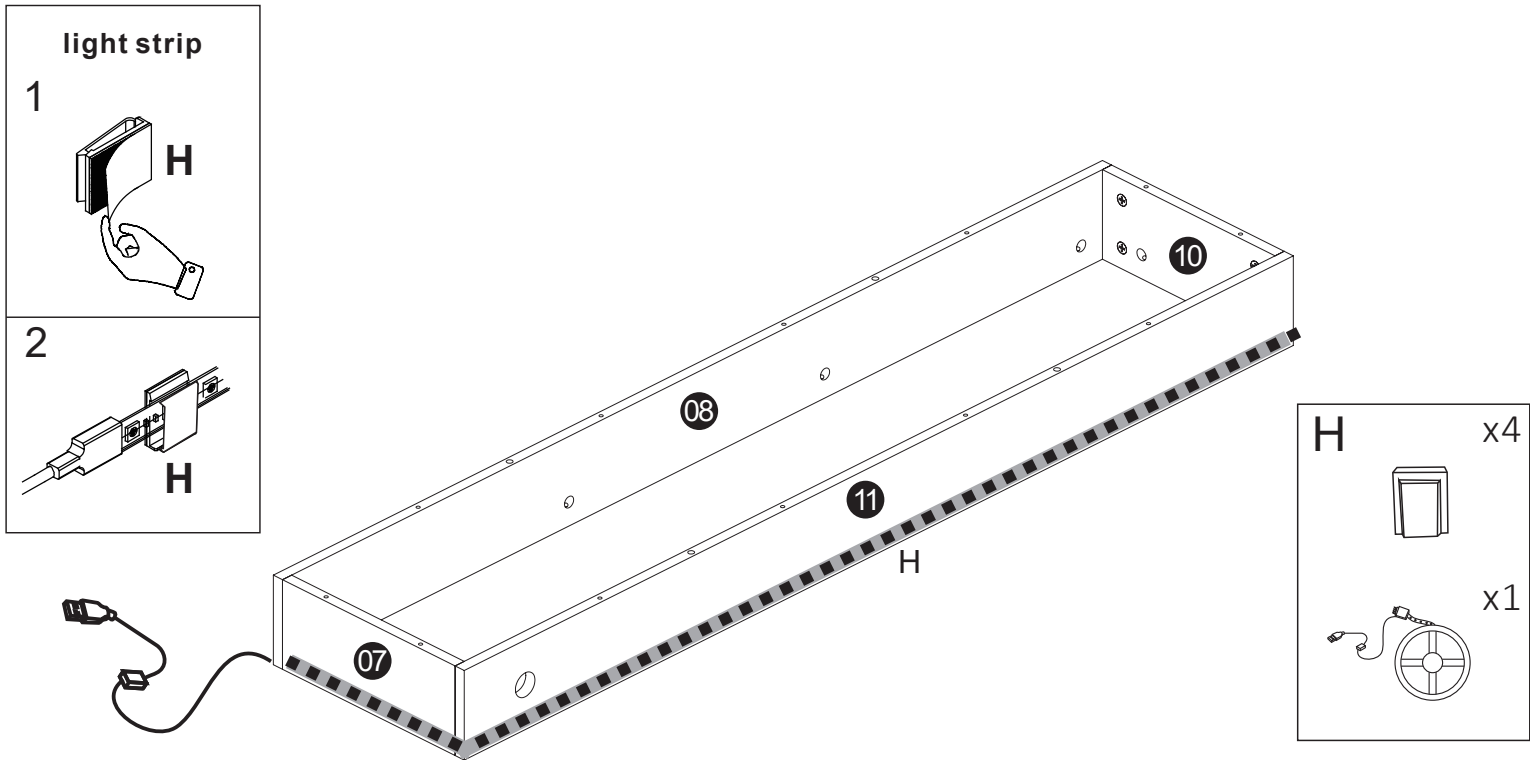

Step 21


- I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (15).
- II. As shown in the illustration, connect the assembled panels (7, 8, 10 and 11) to panel (15), insert the cam lock (B) into the corresponding holes on panels (7, 8, 10 and 11), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

Note: As shown in the figure, panel (8) and panel (14) are in the same direction.

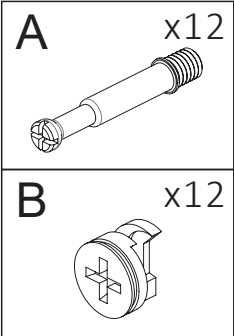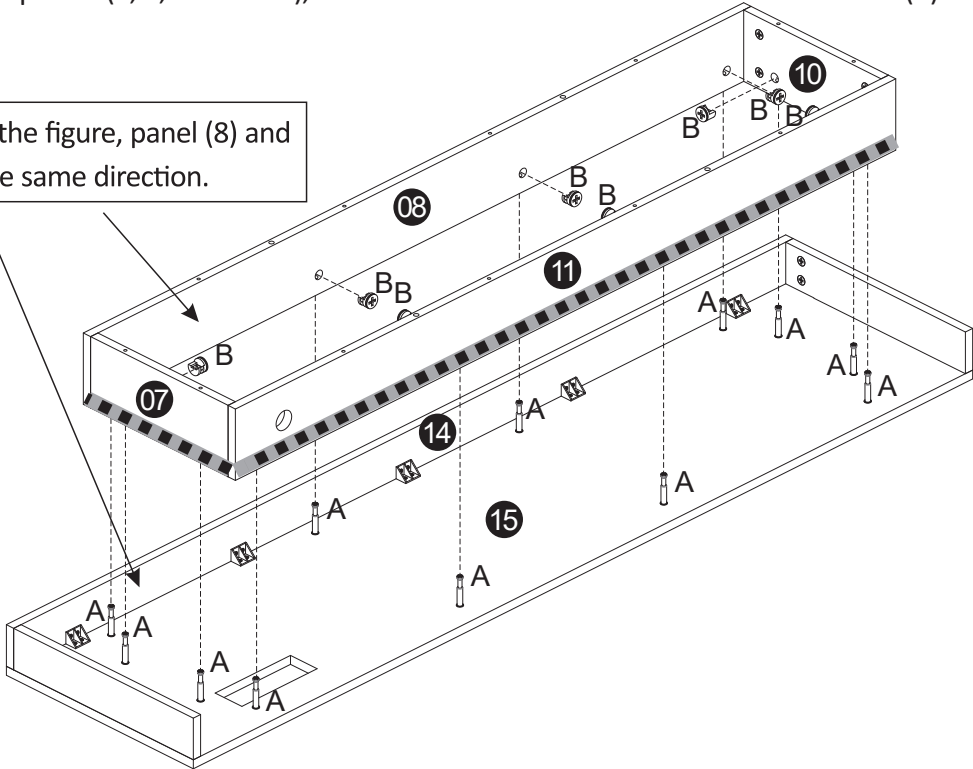


Step 22

- I. Insert the wooden dowel (M) into the panels (8 and 11)
- II. Use screws (D) to attach panel (9) to panels (7, 8, 10 and 11).


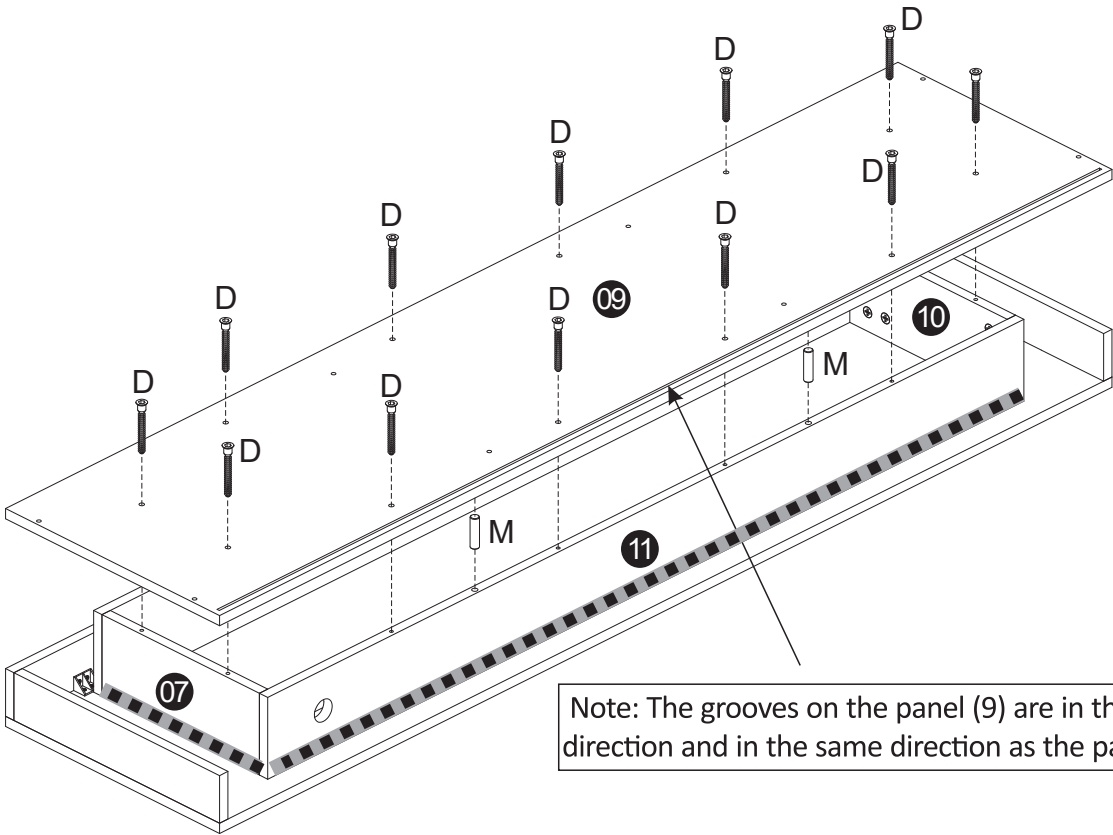


Note: The grooves on the panel (9) are in this direction and in the same direction as the panel (11).

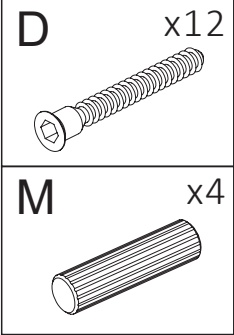



Step 23

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (9).

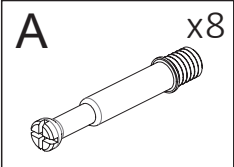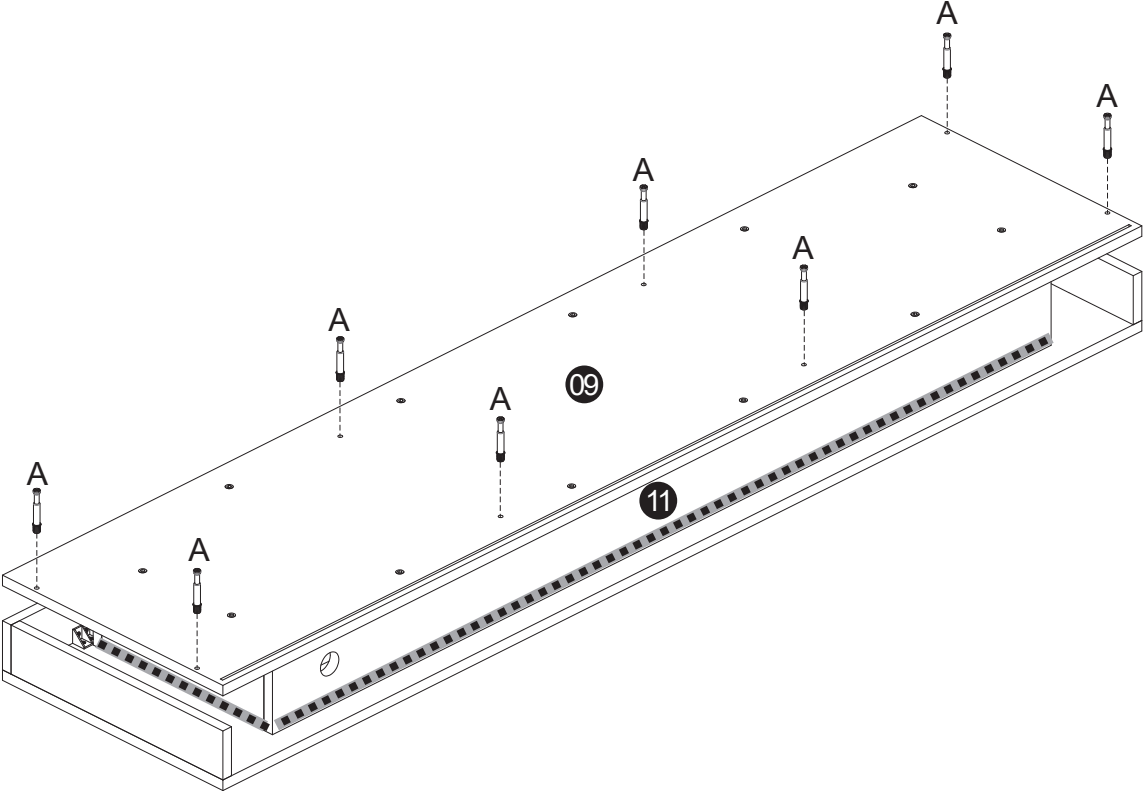



Step 24

I. As shown in the illustration, connect the assembled panel (9) to panels (1, 2, 2 and 3), insert the cam lock (B) into the corresponding holes on panels (1, 2, 2 and 3), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

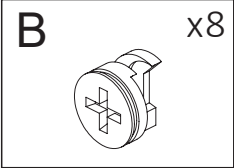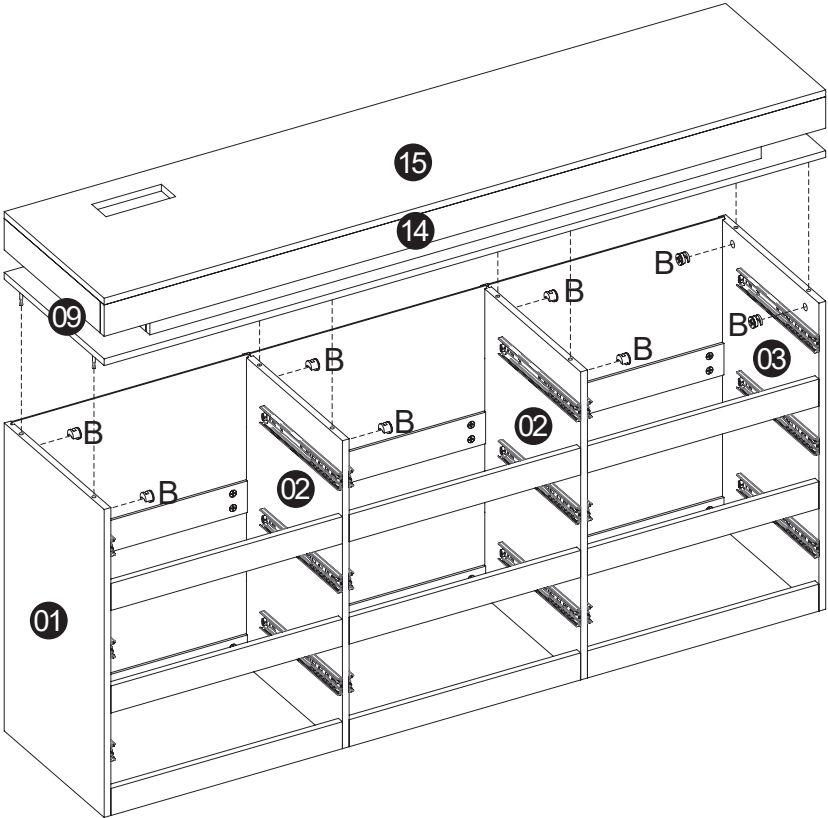




Step 25

I. Use screws (C) to attach Power strip (I) to panel (15).

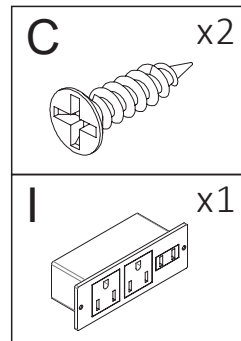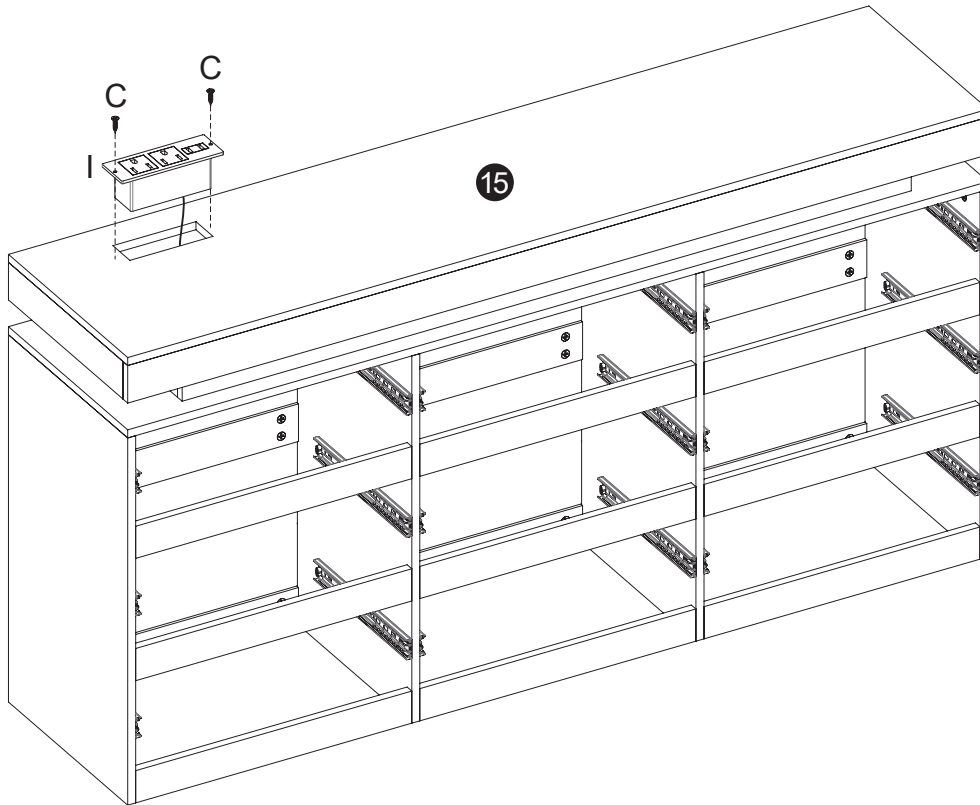



Step 26

I. Insert the thinnest side of the plastic part (F) into the gap between the back panel and the cabinet, then secure it with screws (N).

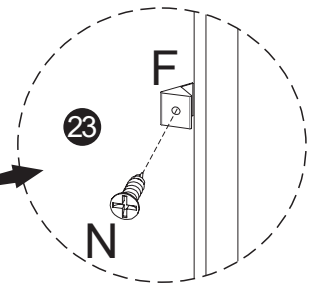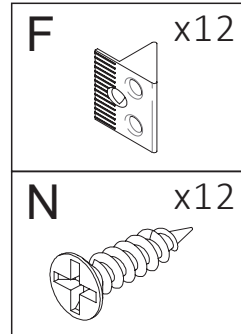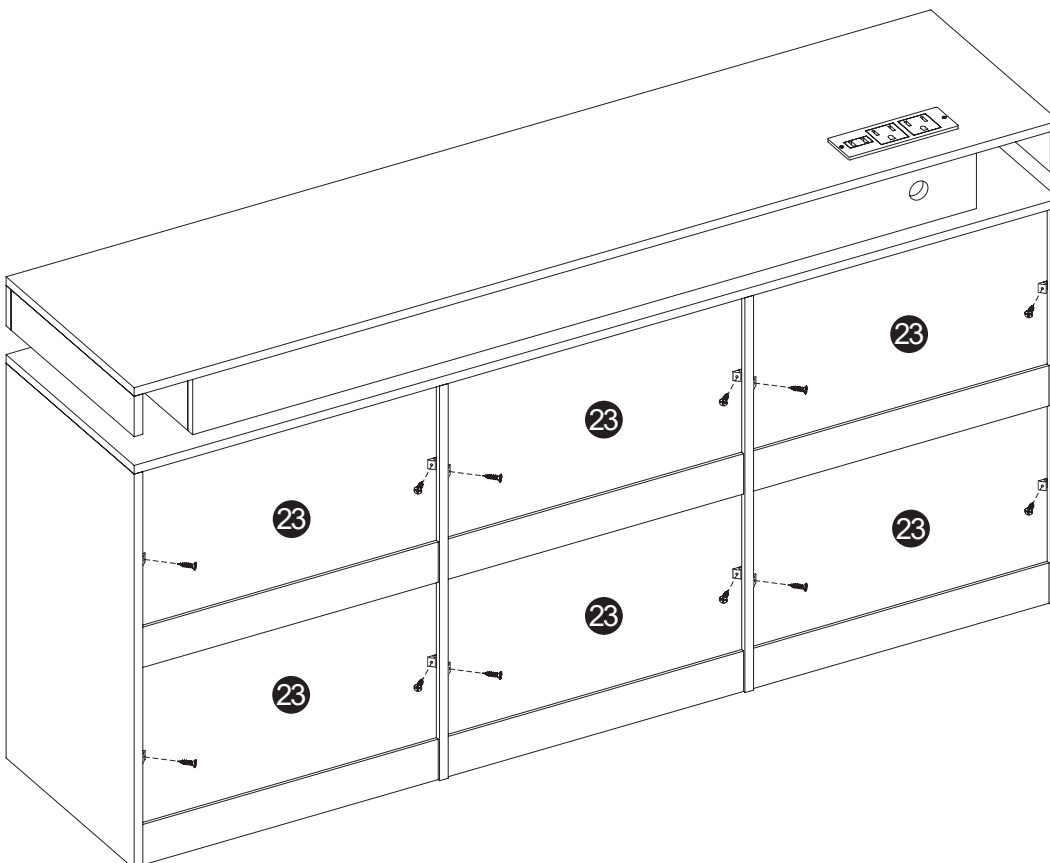


Step 27

I. Use screws (D) to attach panels (16 and 18) to panel (17).

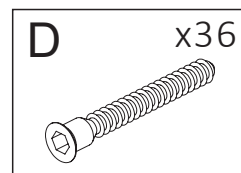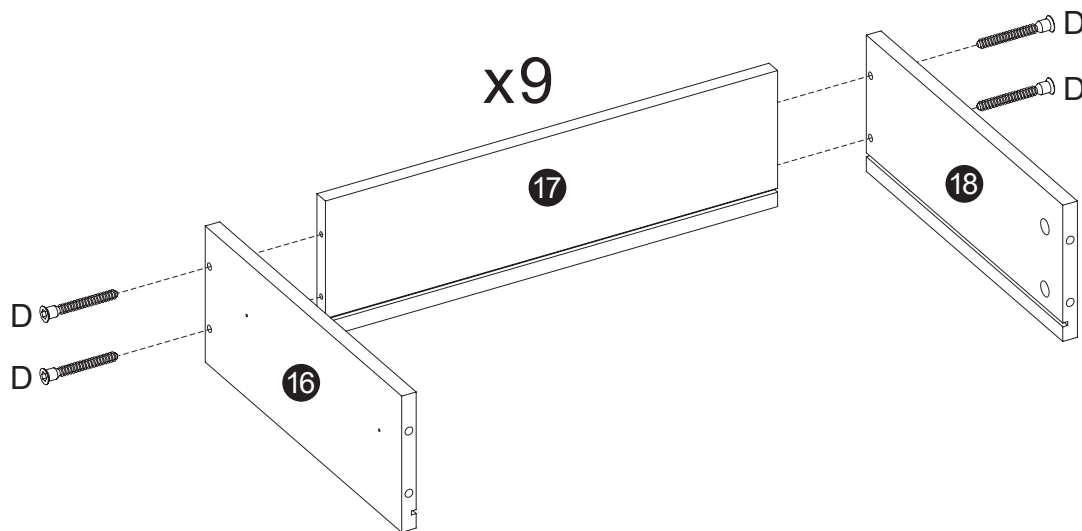

Step 28



I. Install panel (19) as per diagram and slide them into the grooves until they are fully seated.

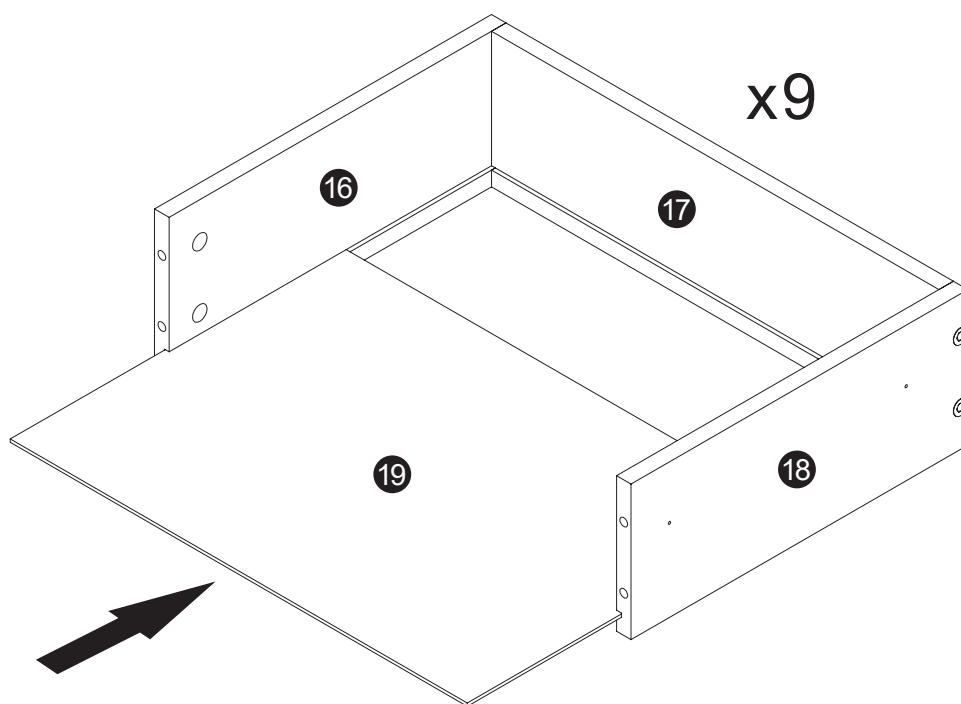

Step 29




I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (20, 21 and 22).

II. As shown in the illustration, connect the panels (20 or 21 or 22) to panels (16 and 18), insert the cam lock (B) into the corresponding holes on panels (16 and 18), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

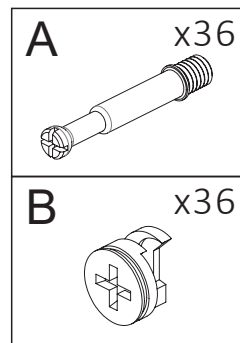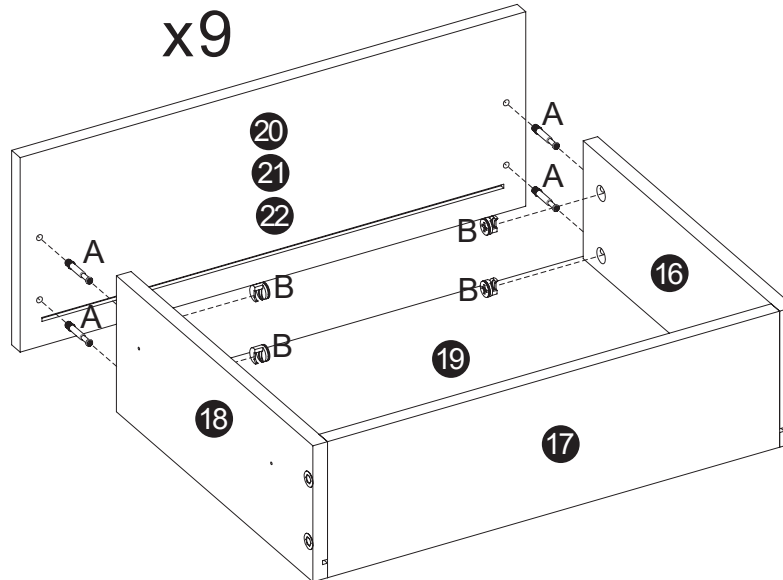

Step 30

I. Use screws (C) to attach the slide rail (E2) to panels (16 and 18).

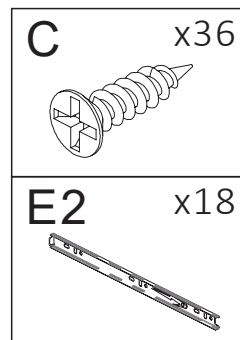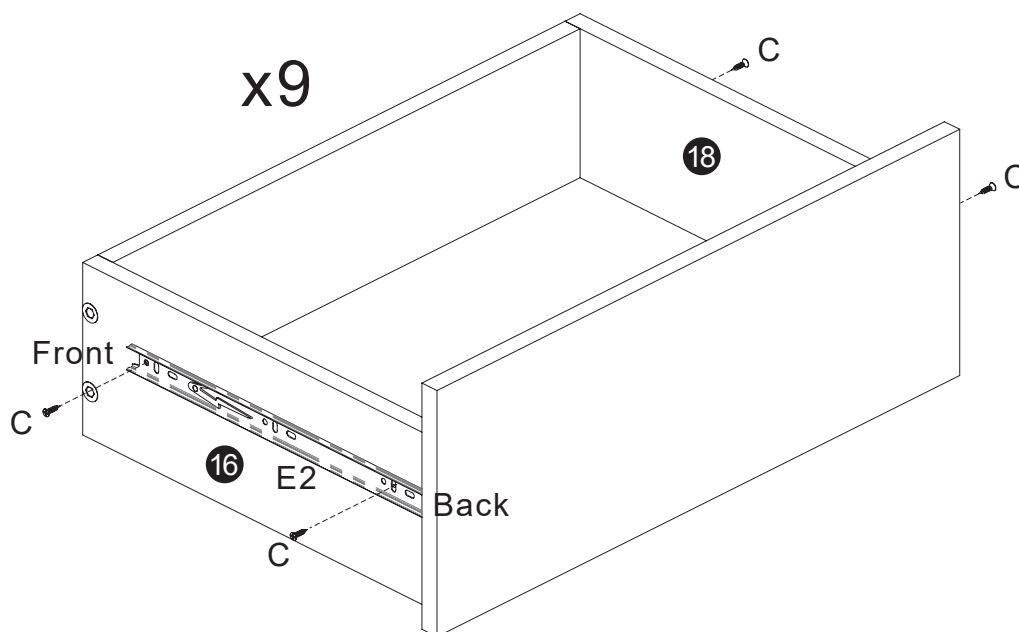
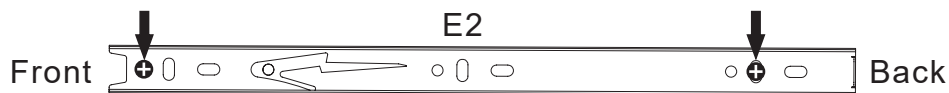


Step 31

I. Install the assembled drawer on the cabinet.

Note: Please install the panel (21) of the assembled drawer on the right as shown in the figure, and install the panel (22) of the assembled drawer on the middle, and install the panel (20) of the assembled drawer on the left.



If drawer 20 and drawer 22 and drawer 21 are not aligned vertically, you can adjust this screw (C) to align them: you can first use a screwdriver to loosen the screw (C), then move the panels (16,18) upward or downward, and then use a screwdriver to tighten the screw (C).

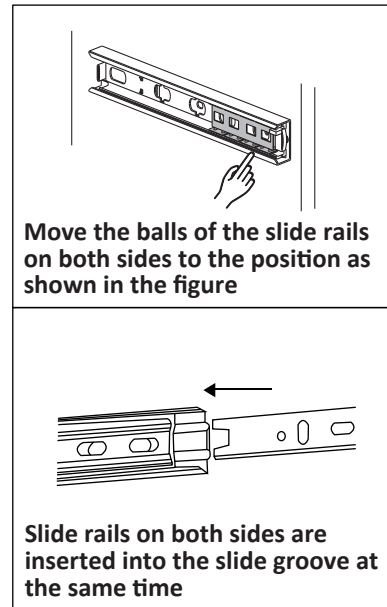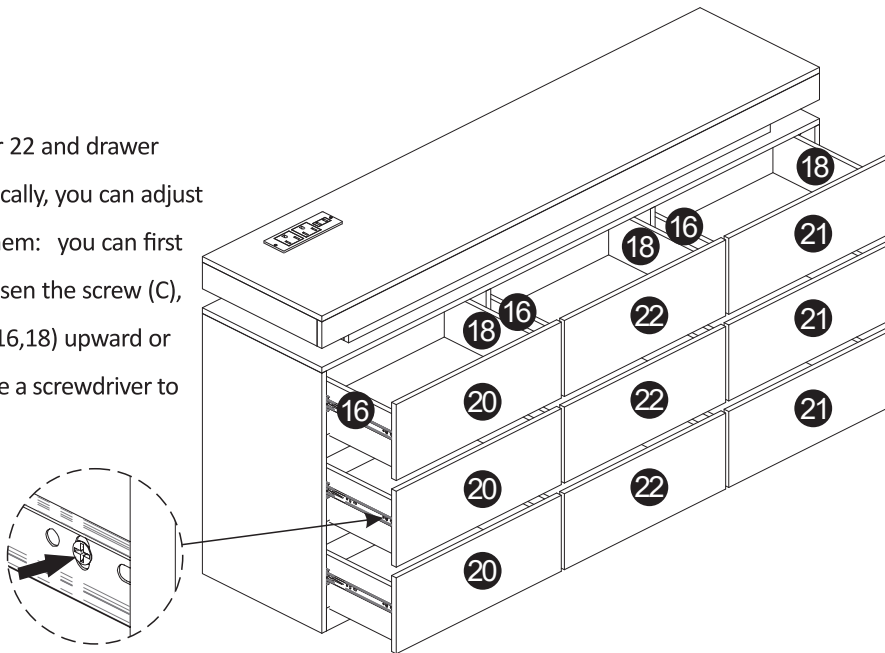

Step 32



I. Fix the plastic board (G) to the panel (9) with short screws (G).

(It is strongly recommended to install this device, especially if there are children in the household.)

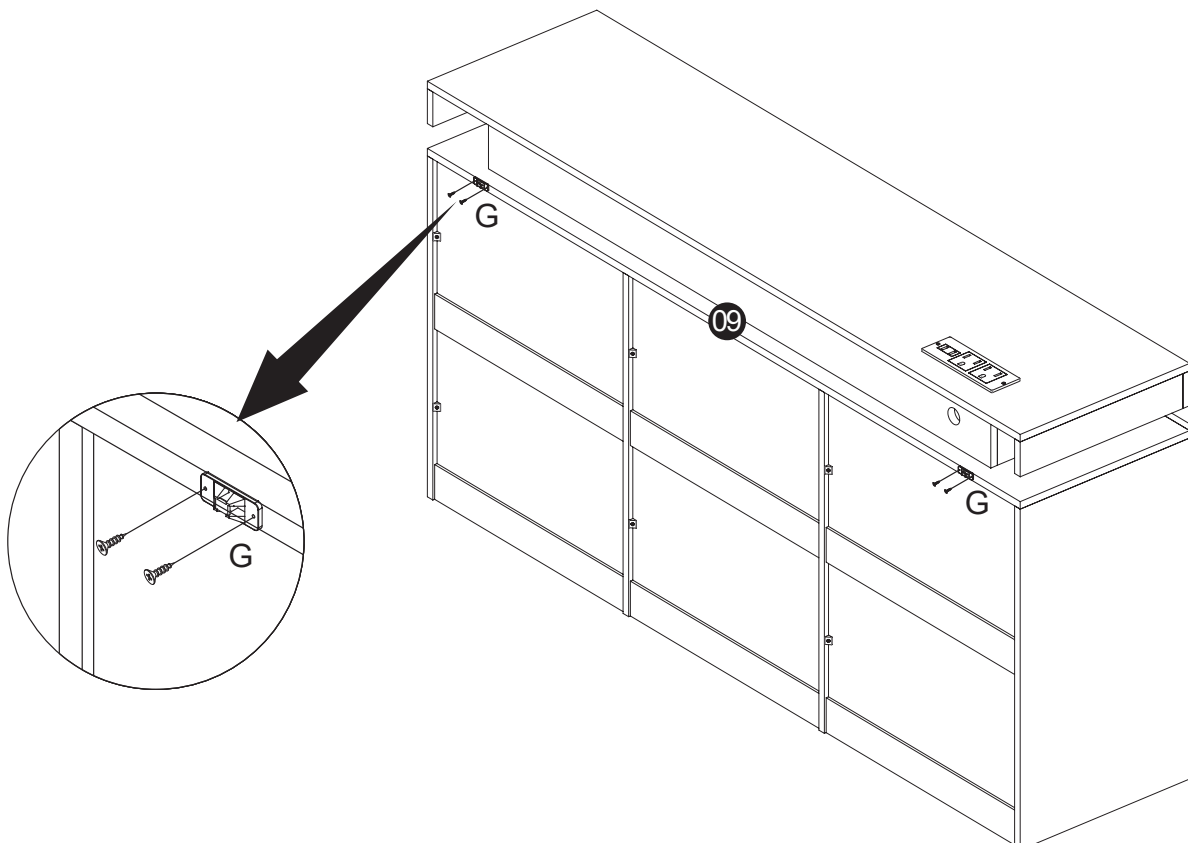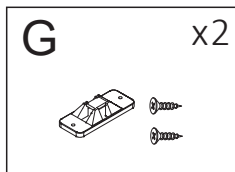

Step 33

- I. Mark the drill position on the wall with a pencil.
- II. Drill a small hole on the marked position.
- III. Insert drywall anchor (G) into the drilled hole.
- IV. Use long screws (G) to secure the plastic board (G) to the drywall anchor (G).

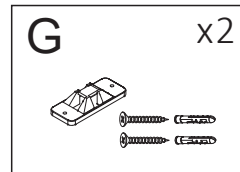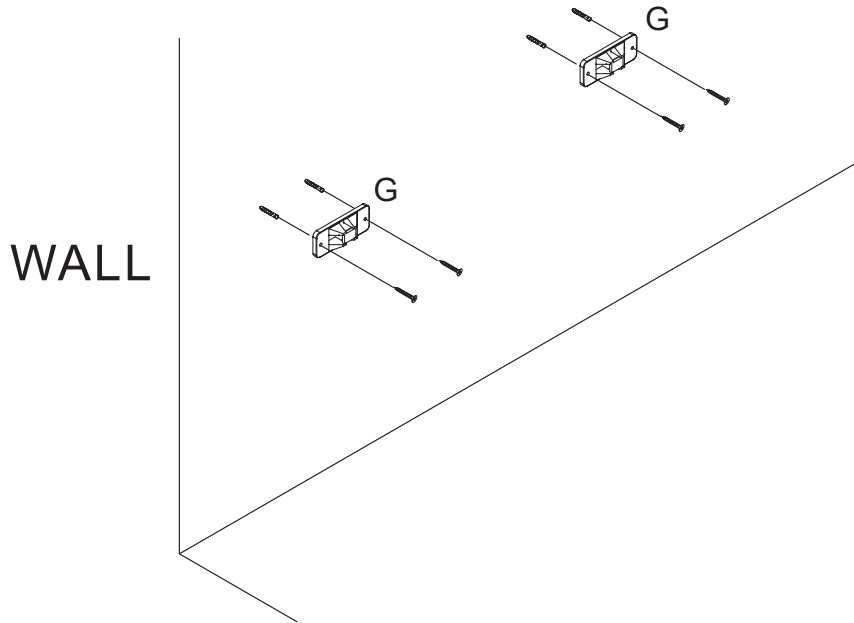

Step 34

- I. Use the plastic strap (G) to connect the plastic board on the wall to the plastic board on panel (9).

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent this, we recommend that the furniture be permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure the hardware is suitable for your walls before installation, as different wall materials may require different types of anchors.

