


Assembly Instructions

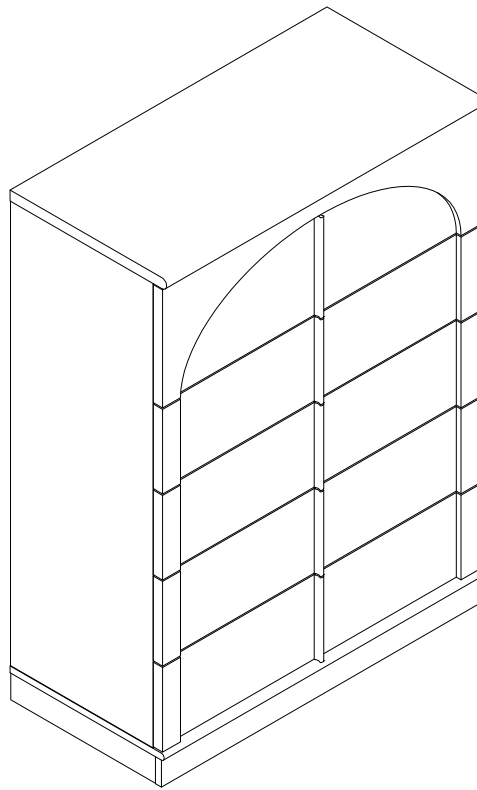


If you have any questions, please follow these steps(“Find Your Orders” – “Problem with the Order” – “Contact Seller”) to contact our customer service. Thanks!


Revised 10/21/2025

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

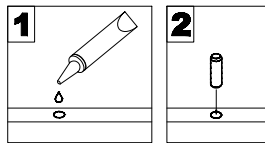


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

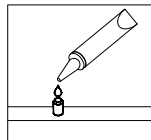


- VI. A Phillips head screwdriver is required for the assembly of this product .

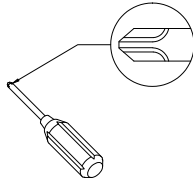





- VII. Power tools should not be used to assemble this product .

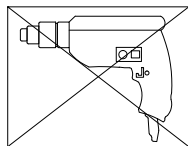


Parts List

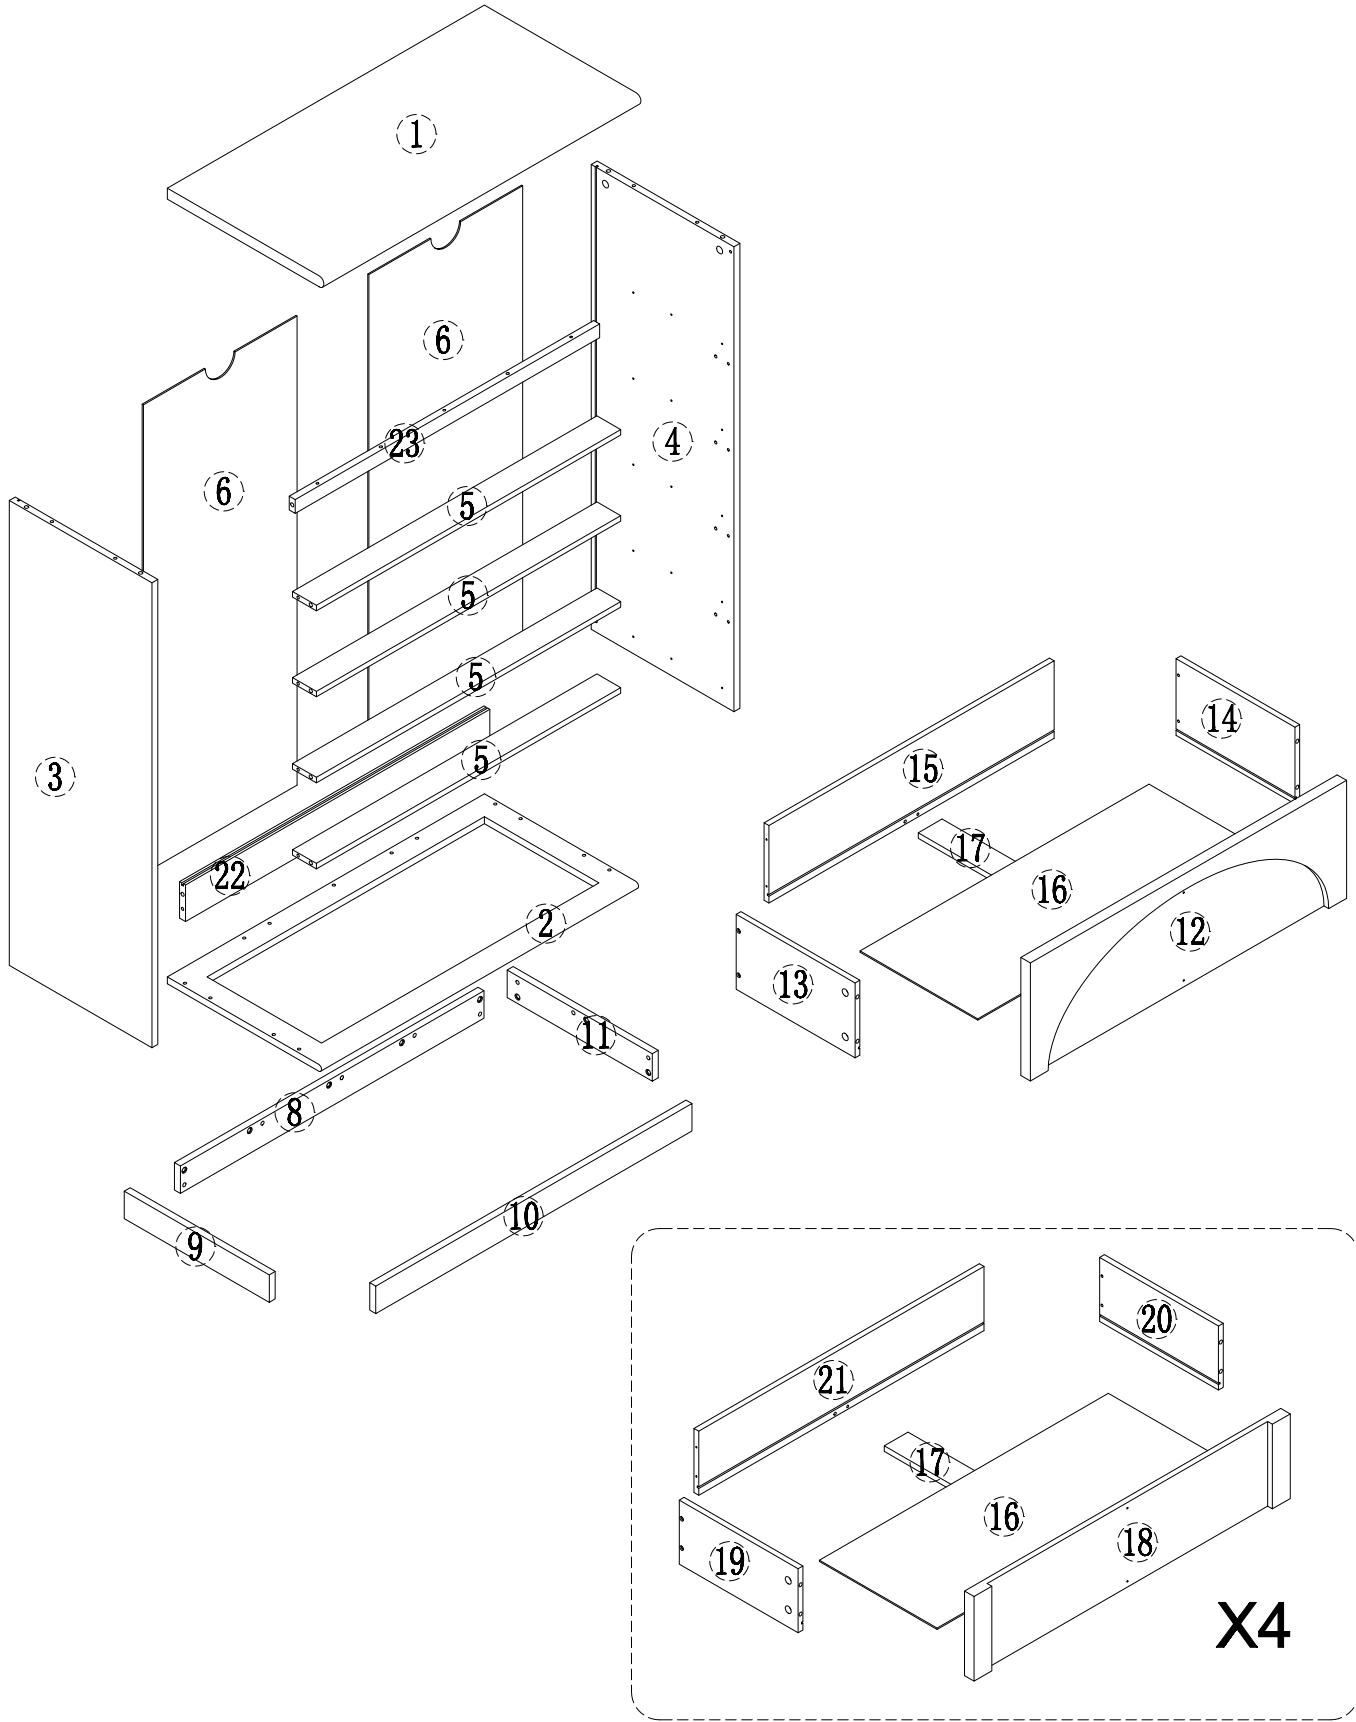

Hardware List


A		Ø8x30mm	Wooden dowel	32	pcs
B		Ø6x32mm	Cam bolt	41	pcs
C		Ø15x9mm	Cam lock	33	pcs
D		Ø15x11mm	Cam lock	8	pcs
E		Ø30mm	Sticker	41	pcs
F		Ø6x50mm	Screw	7	pcs
G		M 4	Hex Key	1	pc
H		M6*12mm	Bolt	24	pcs
I			Plastic wedge	12	pcs
J		Ø4x32mm	Screw	28	pcs
M		12"	Drawer sildes	5	sets
N		Ø3x12mm	Screw	60	pcs
O			Plastic wedge	16	pcs
P		Ø3x17mm	Screw	16	pcs
Q		192mm	Handle	1	pcs
R		160mm	Handle	4	pcs
S		Ø4x16mm	Bolt	10	pcs
U			Glue tube	1	pc
V		73x25x15mm	Anti-inversion piece	2	pcs
W		Ø4x15mm	Screw	2	pcs
X		Ø6x40mm	House lizard	2	pcs
Y		Ø4x40mm	Screw	2	pcs

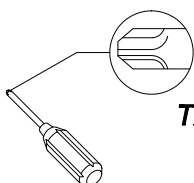


**Philips head screwdriver required for assembly
(not included)**

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

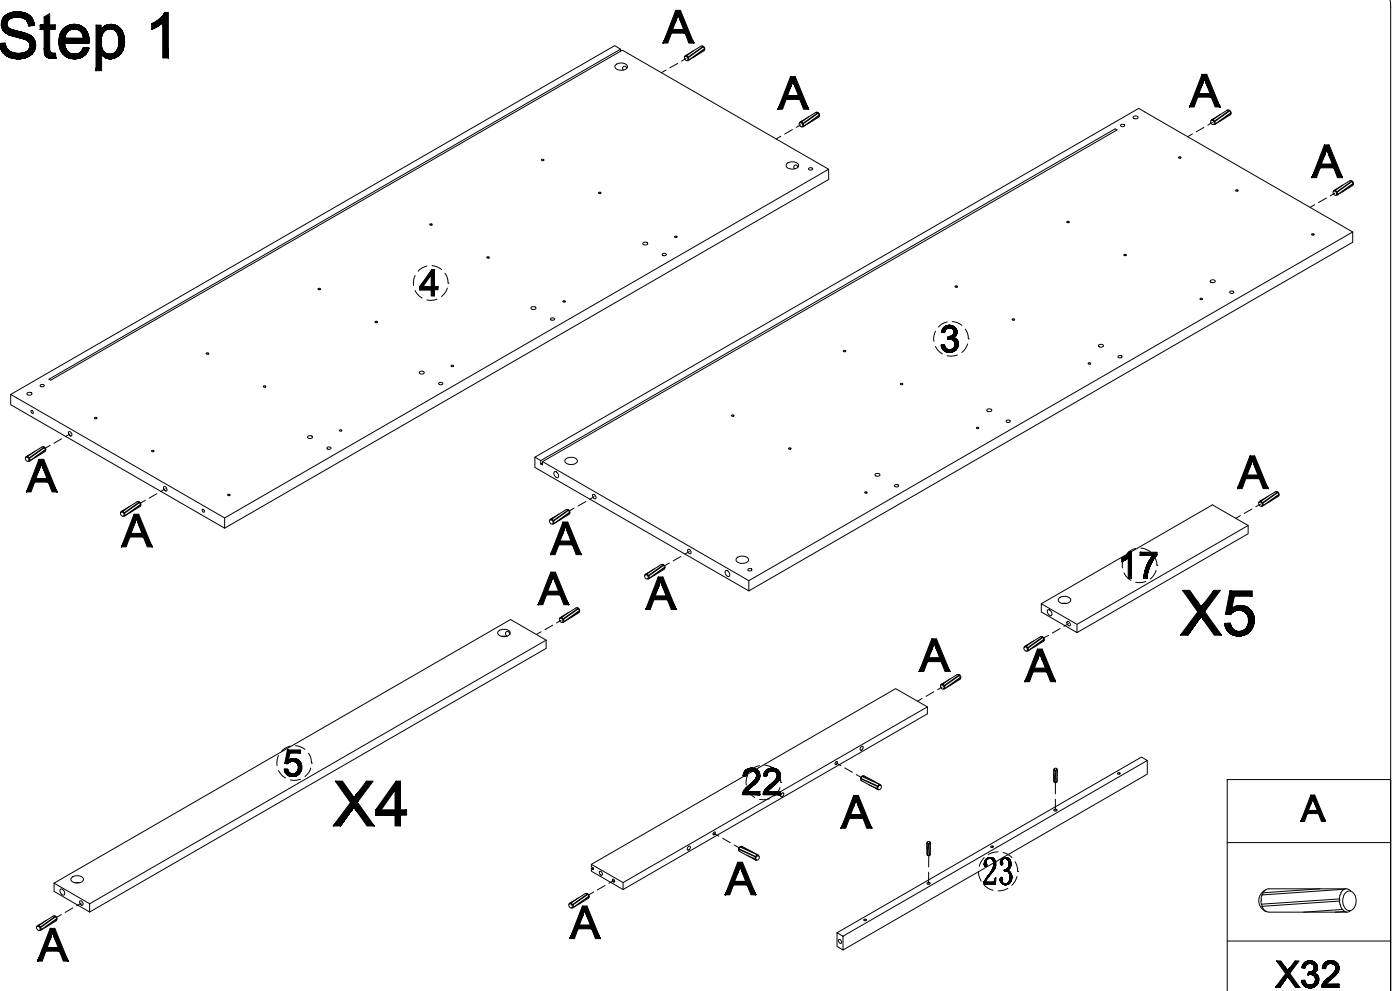


Step 2

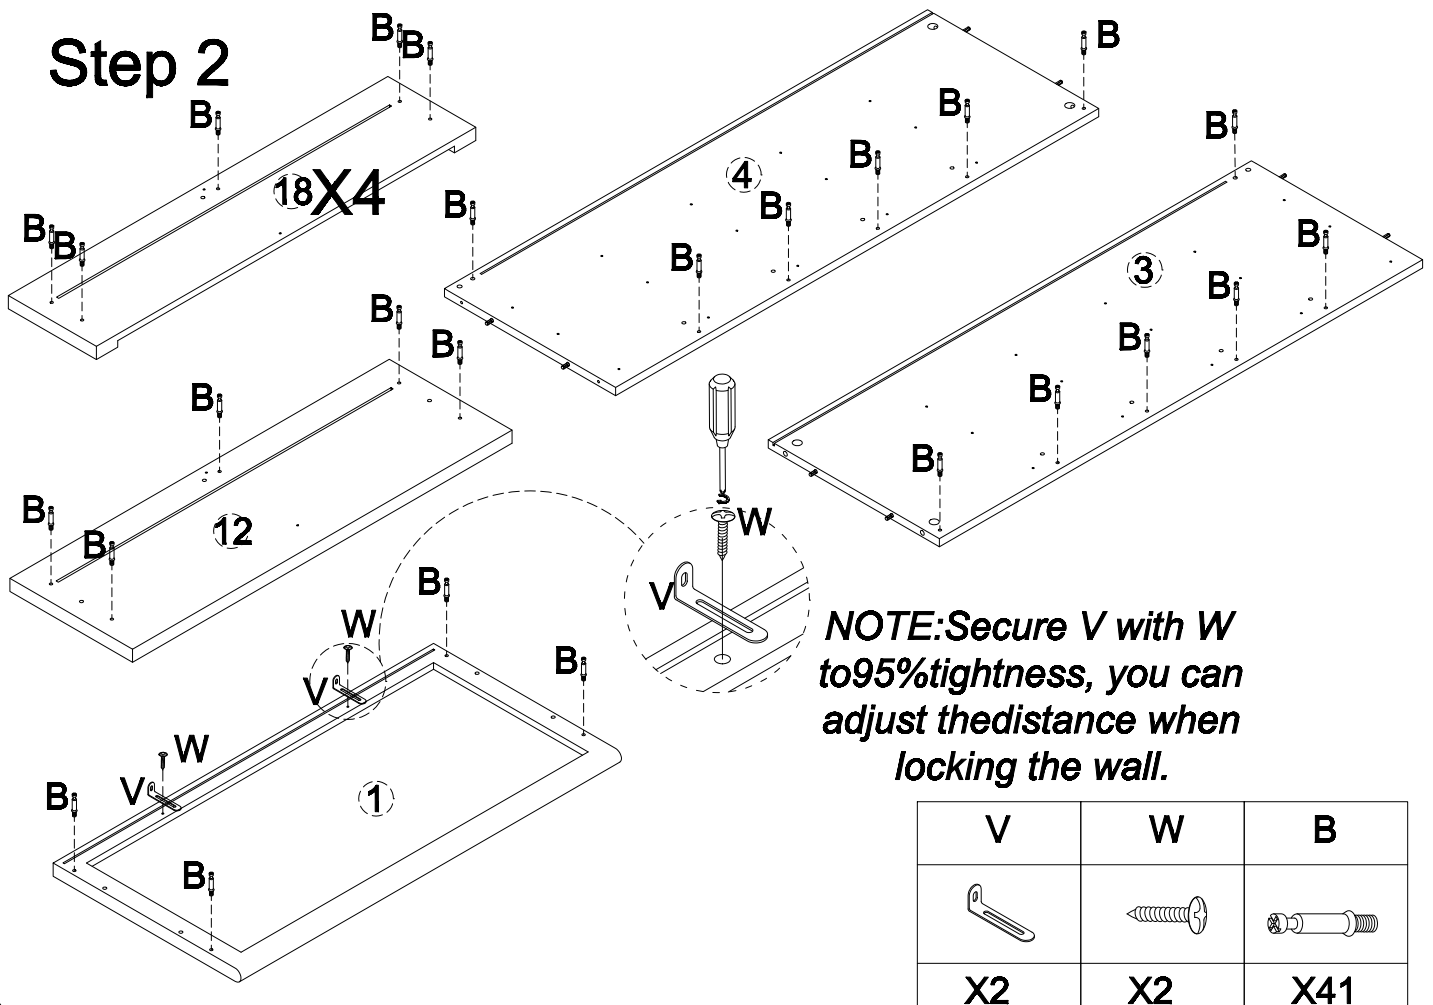


Step 3


M-CL




M-CR



M-DL

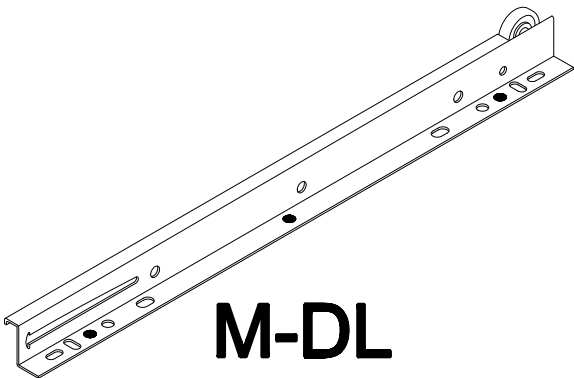

M-DR

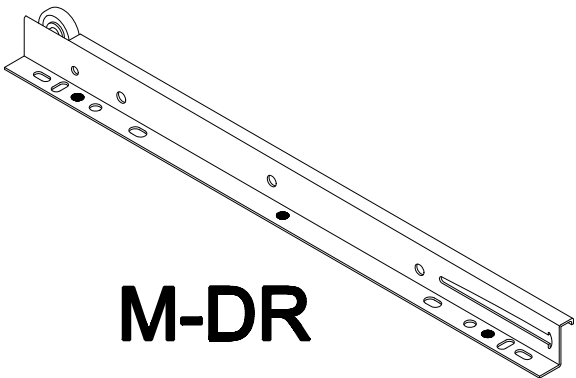


Step 4




NOTE:

Refer to the images to identify M-CL (left) and M-CR (right). Attach M-CL to #3 panel and M-CR to #4 panel. [N] screws must go in the exact spots shown.


M-CL



M-CR



Make sure the rollers on the slides face downward.


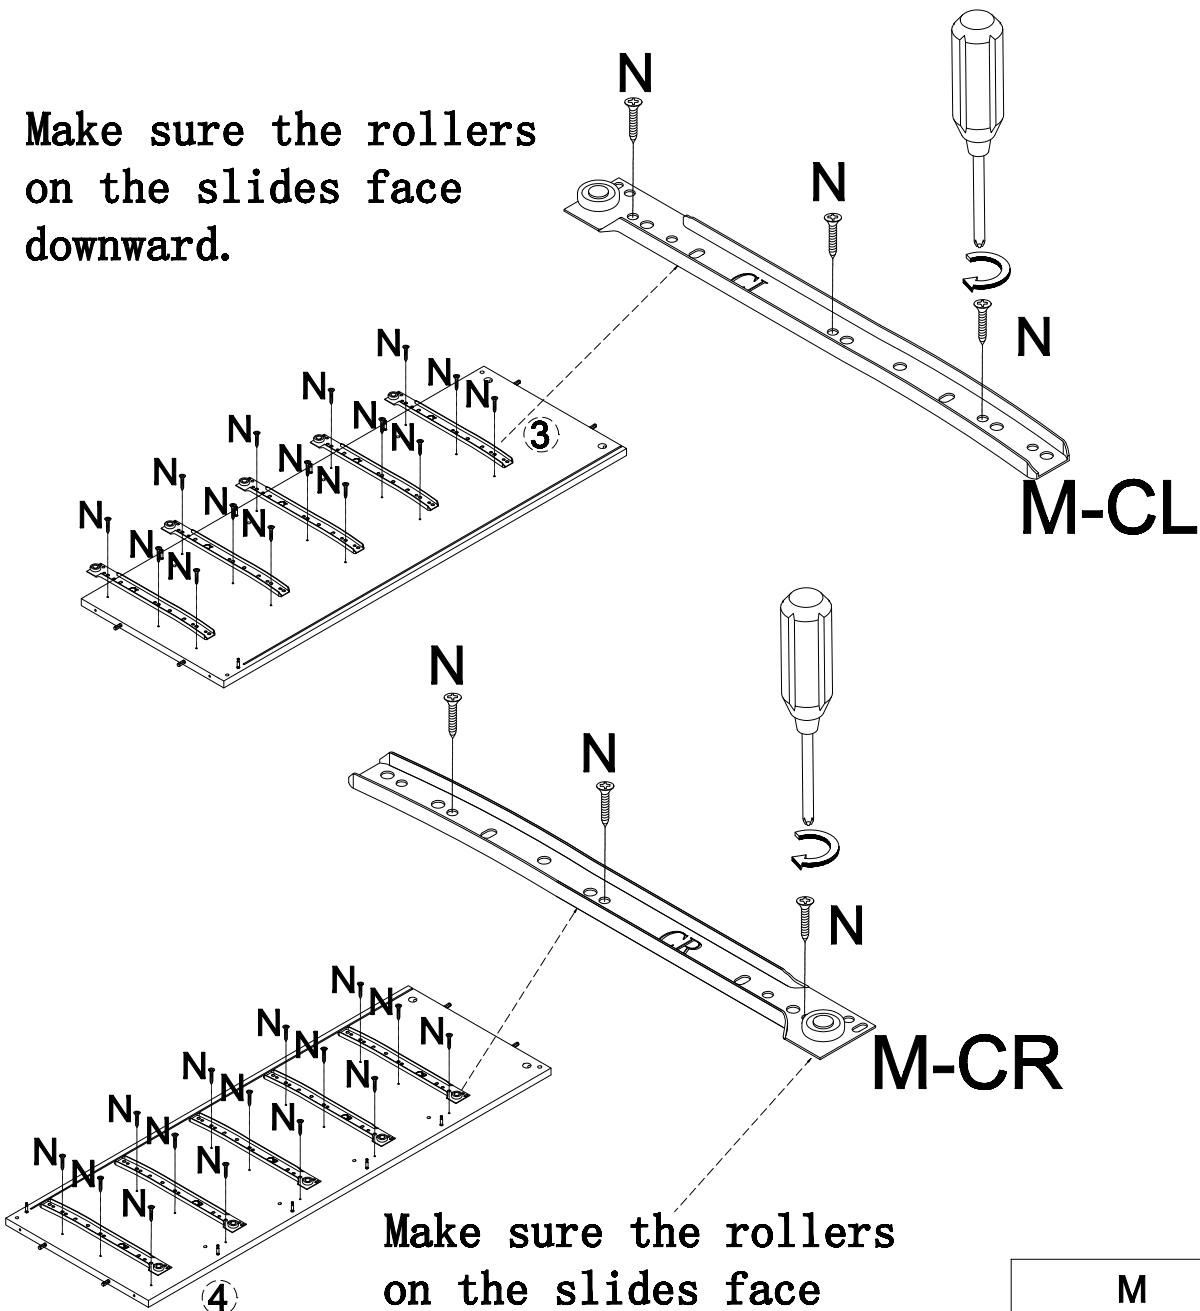


Make sure the rollers on the slides face downward.

M	N
X5	X30

Step 5




NOTE:
Ensure to use [C] 9mm cam lock for panel 5, and [D] 11mm cam lock for panels 22 and 23

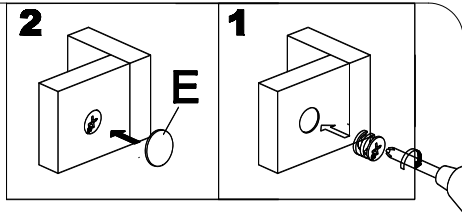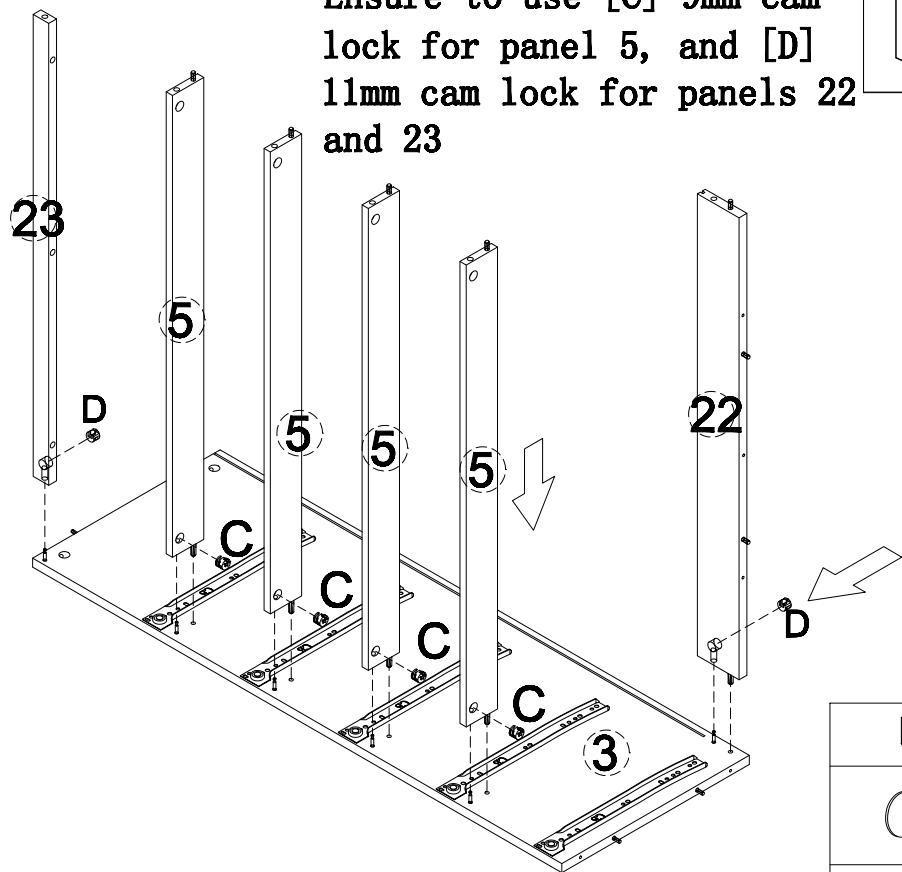

E	C	D
X6	X4	X2

Step 6

NOTE:
Ensure to use [C] 9mm cam lock for panel 5, and [D] 11mm cam lock for panels 22 and 23

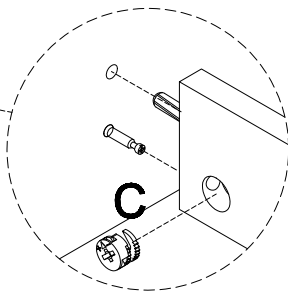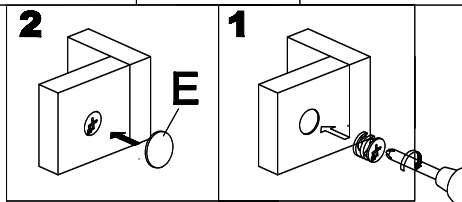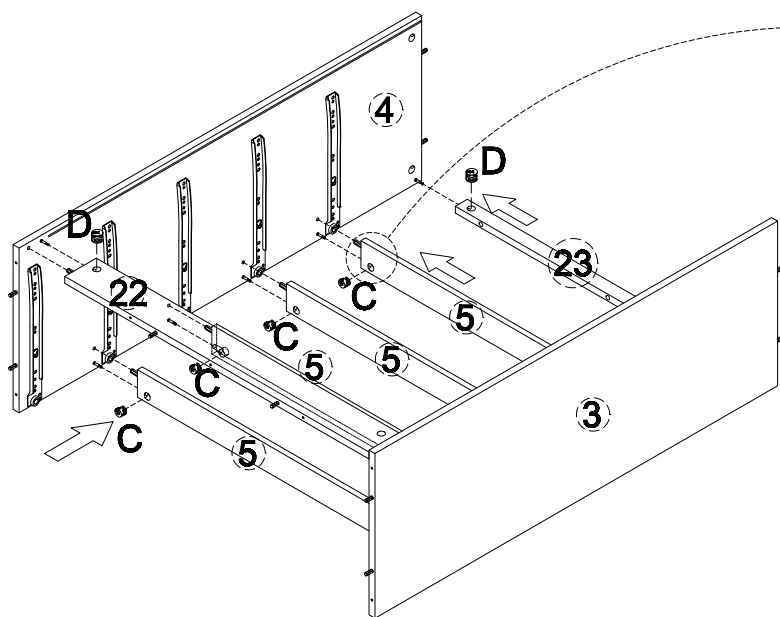


E	C	D
X6	X4	X2

Step 7




NOTE:
Flip the cabinet over to ensure that board 5 is facing upwards

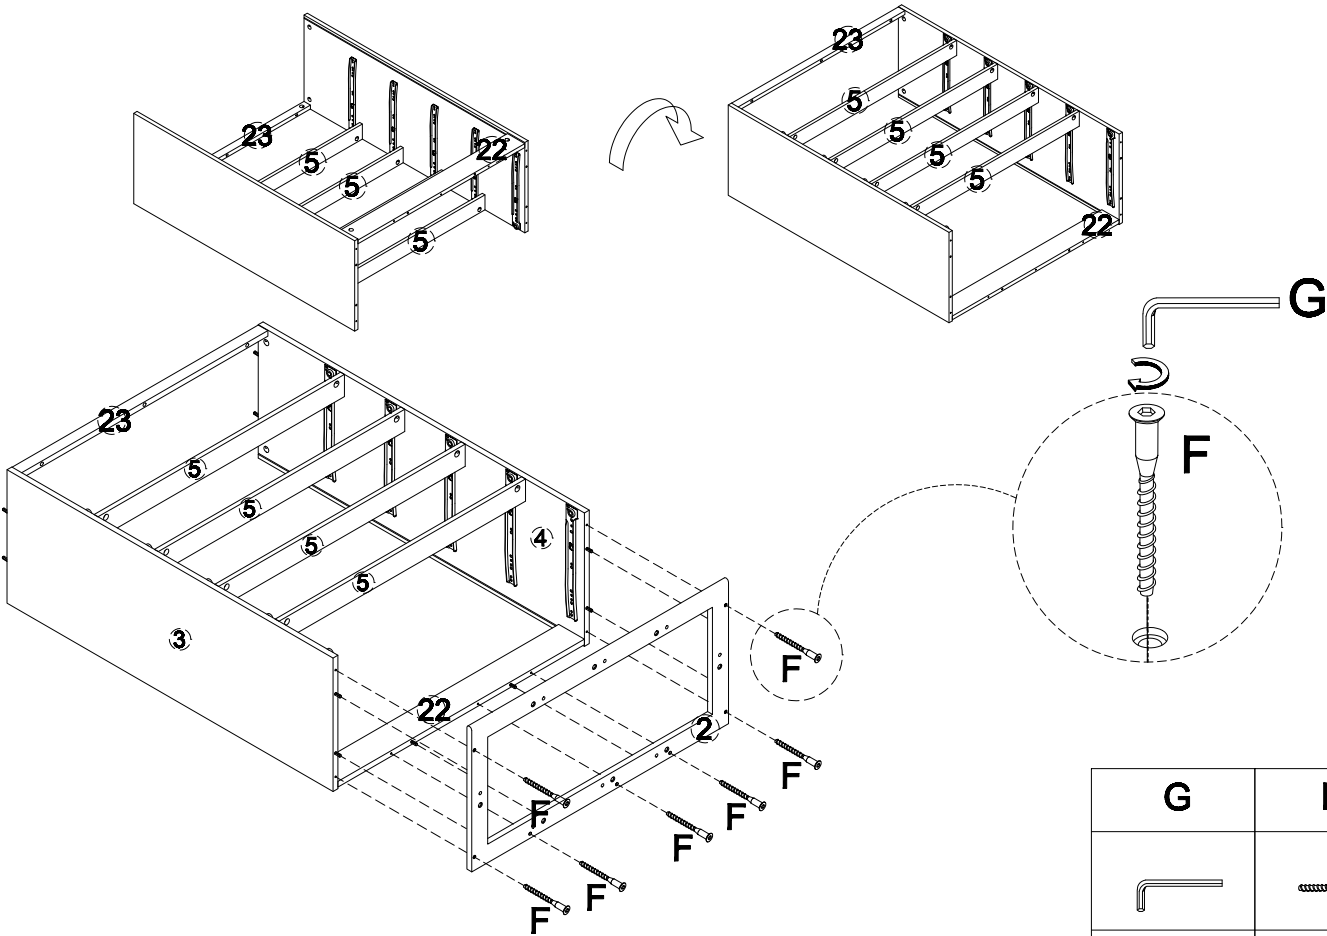


G	F
X1	X7

Step 8

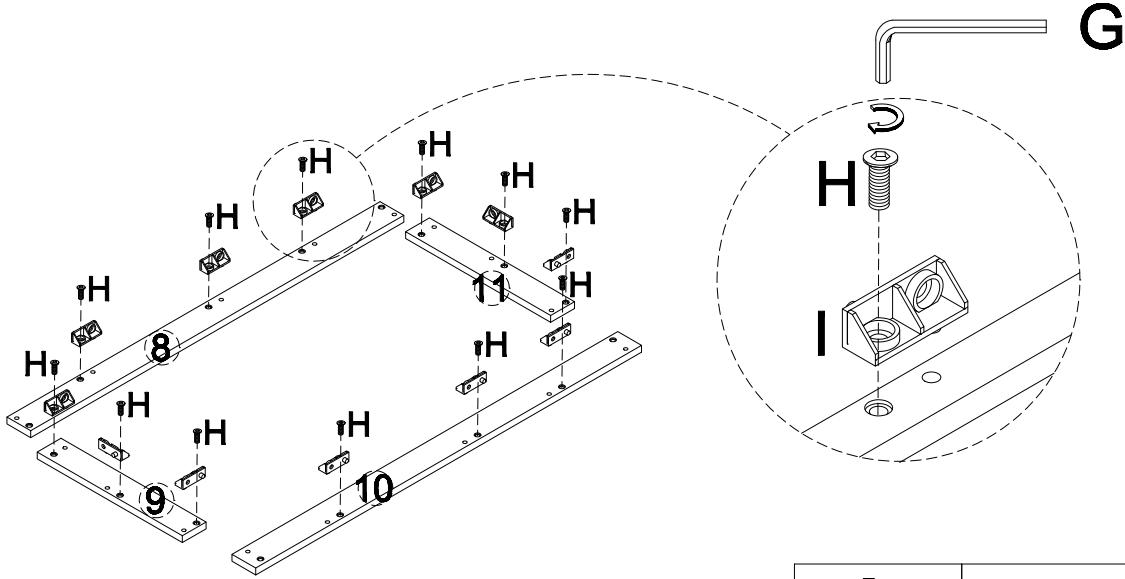


G	I	H
X1	X12	X12


Step 9

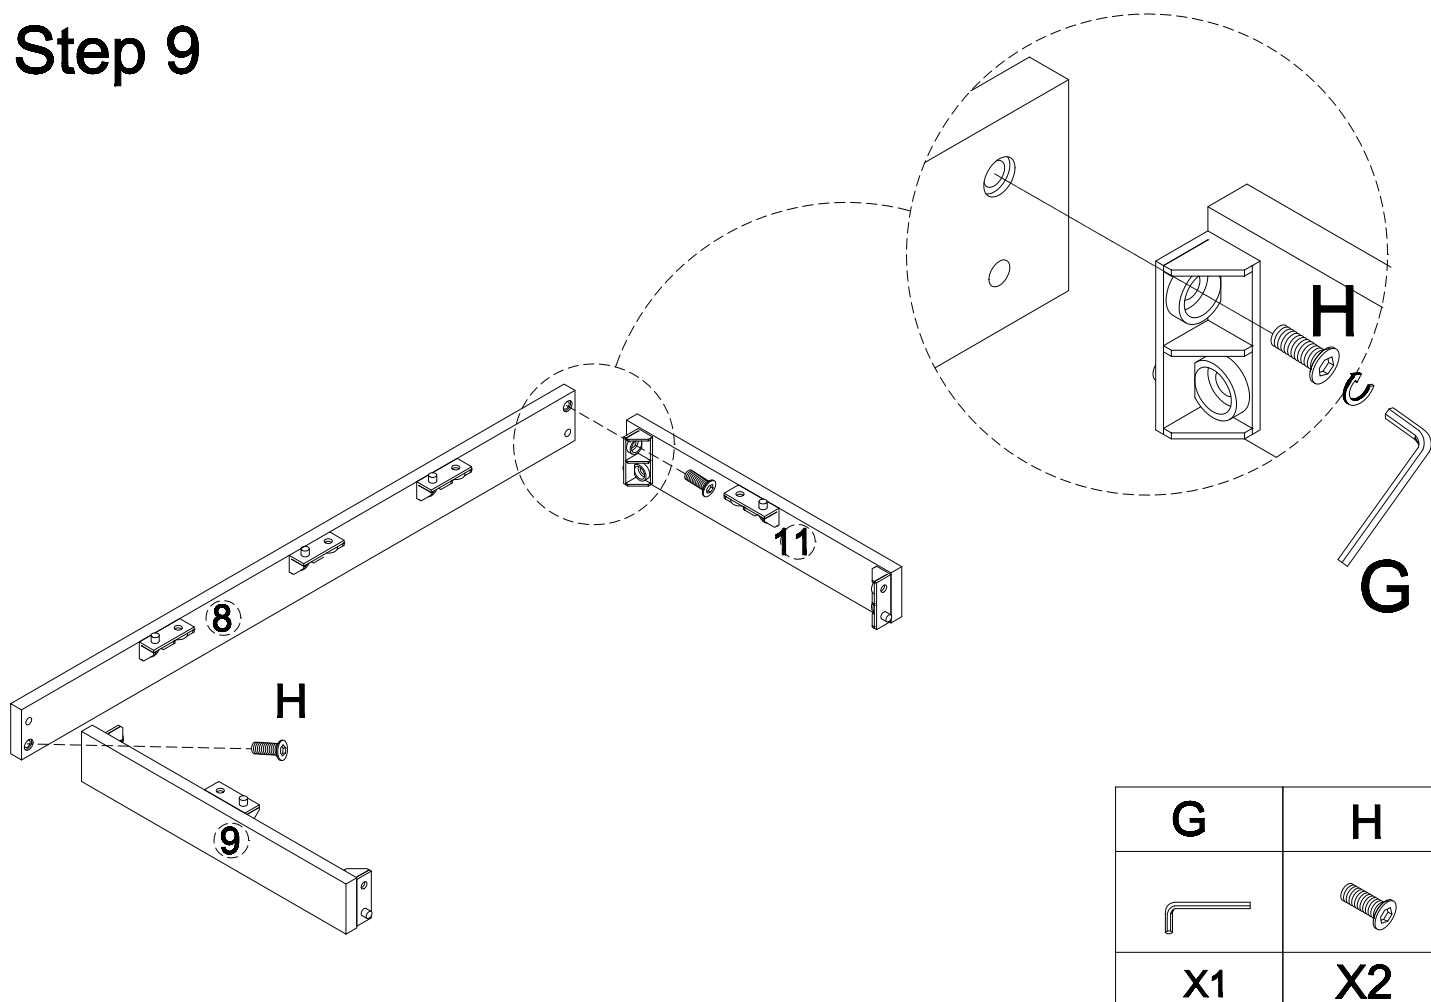

Step 10

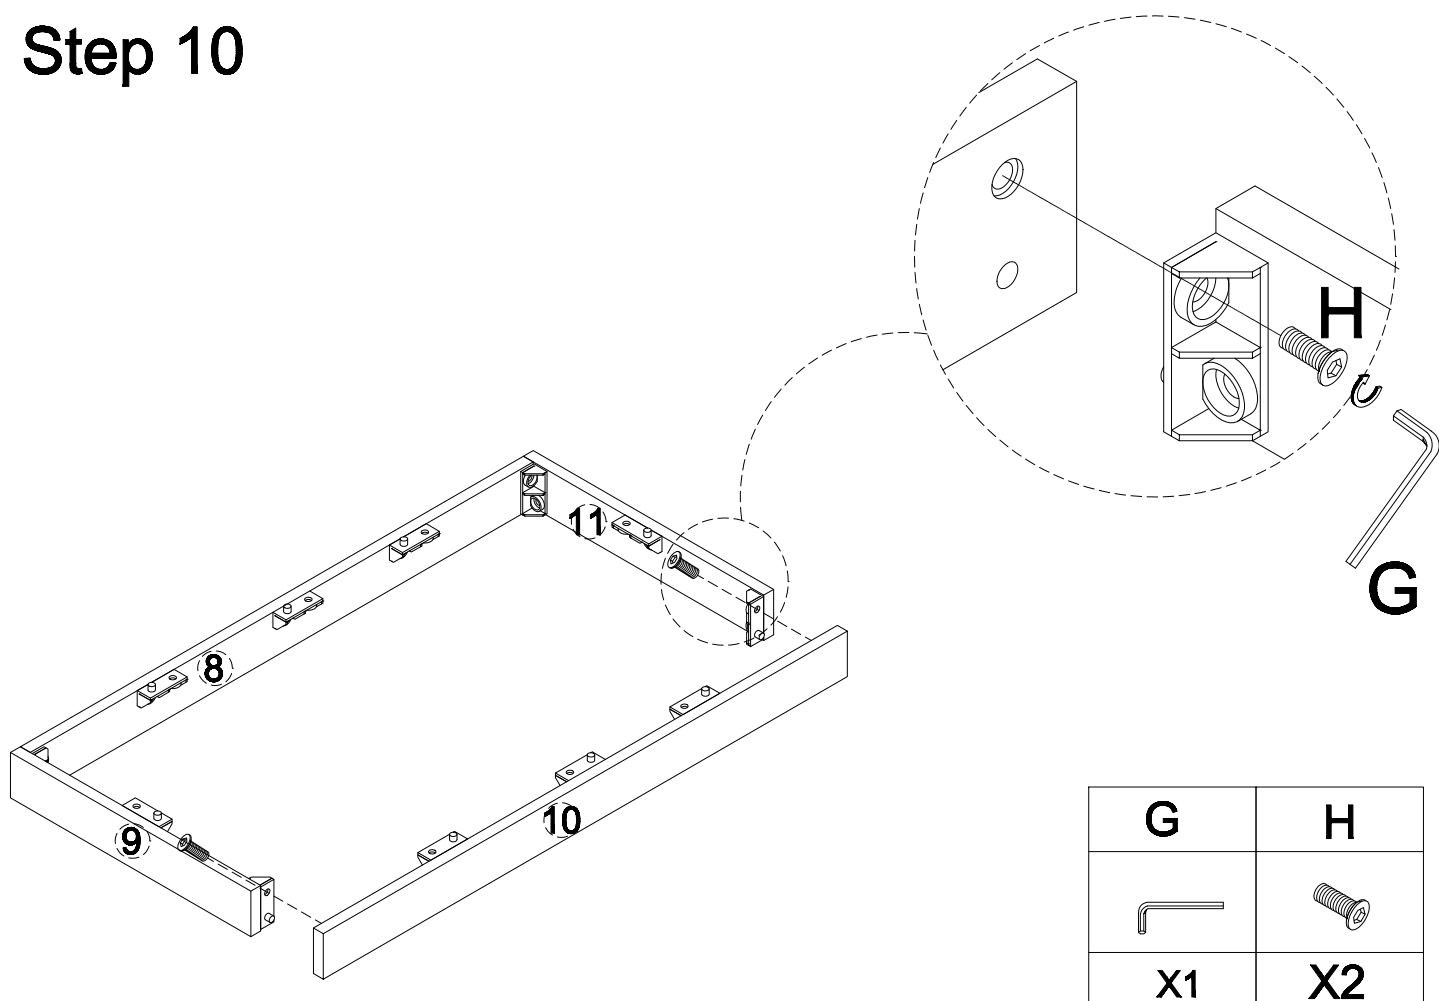

Step 11

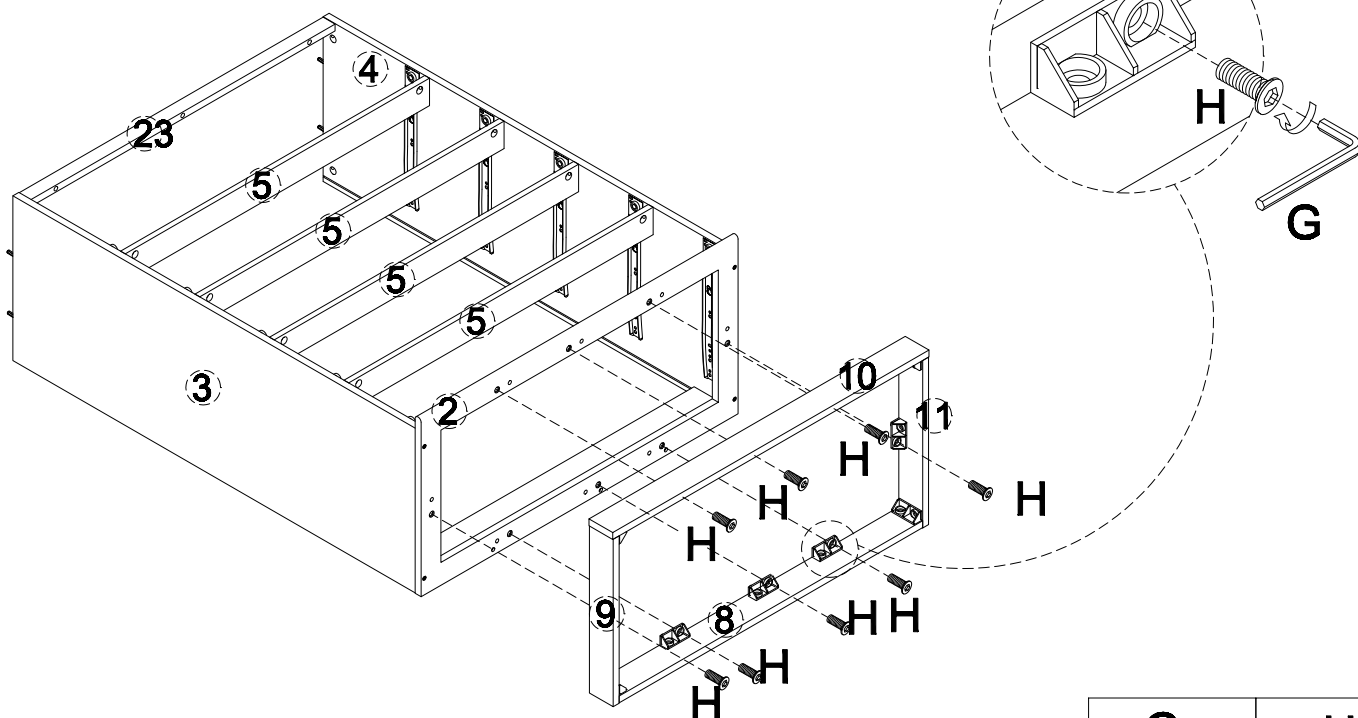


Notice:


Ensure Part 10 faces front during assembly.

G	H
	
X1	X8

Step 12

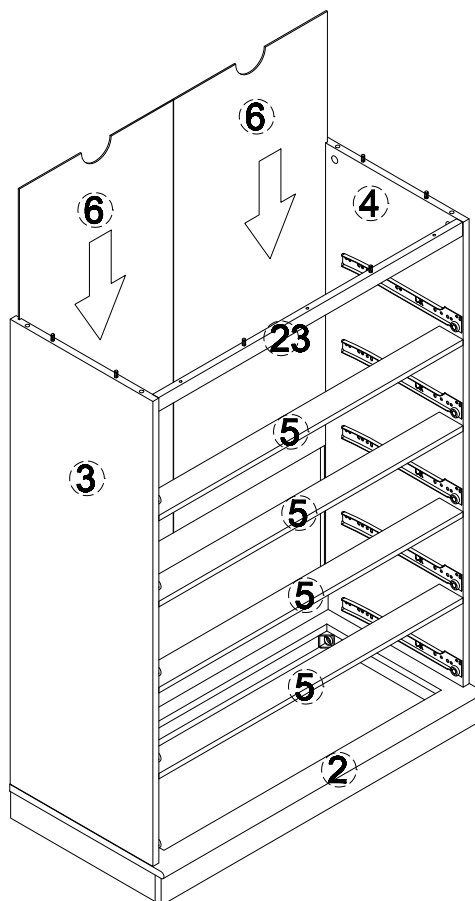


Step 13

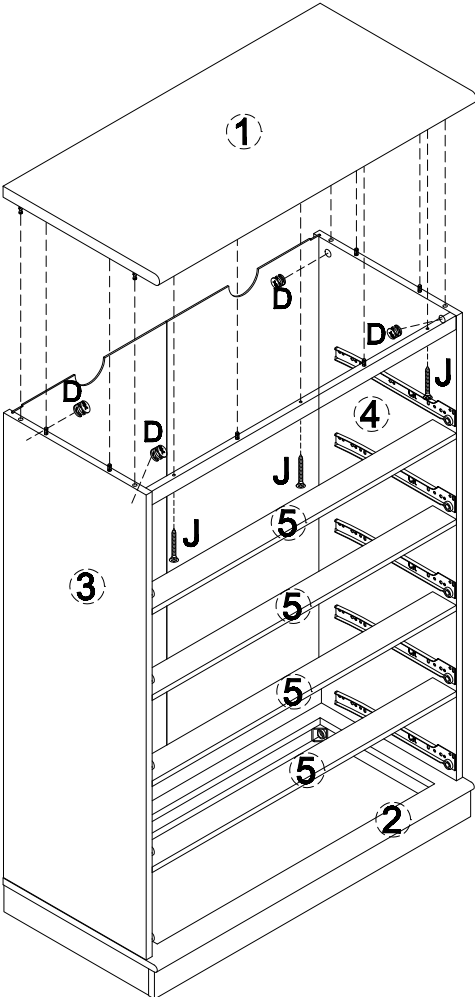

D	J
	
X4	X3


Step 14

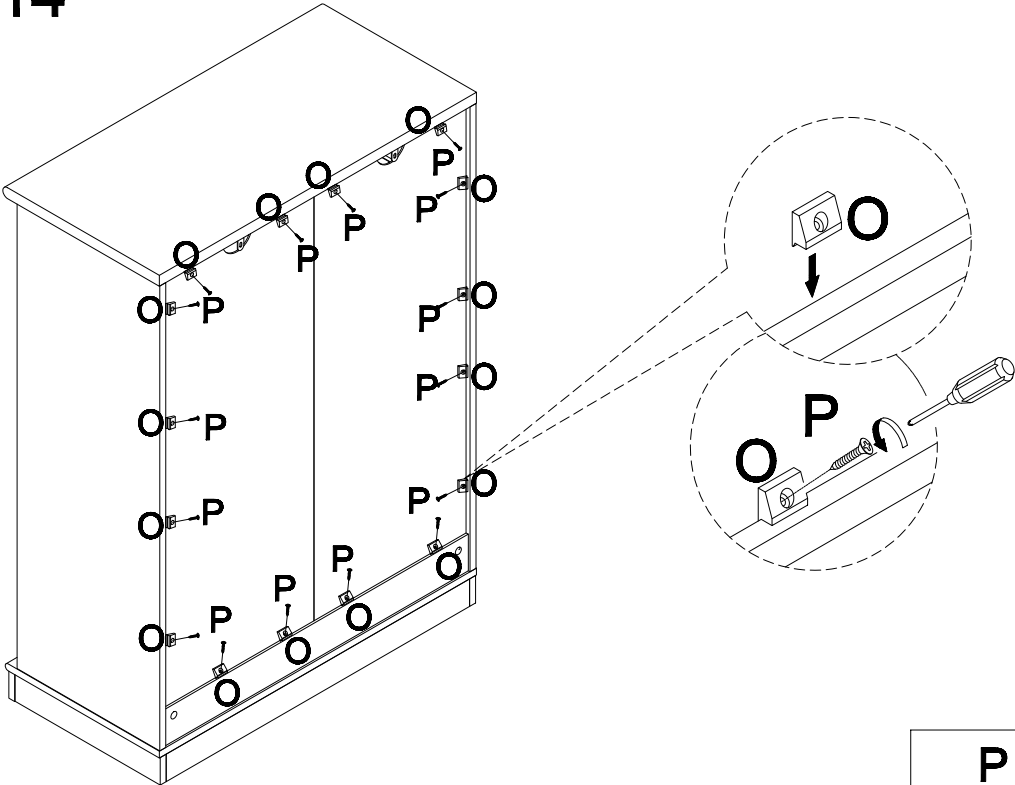


P	O
	
X16	X16

Step 15

Make Four holes 45MM deep

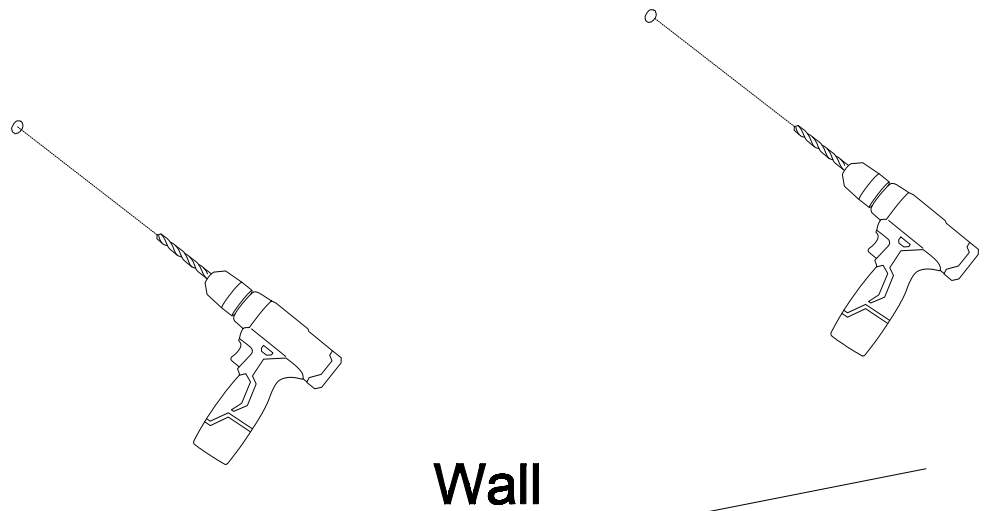


Step 16

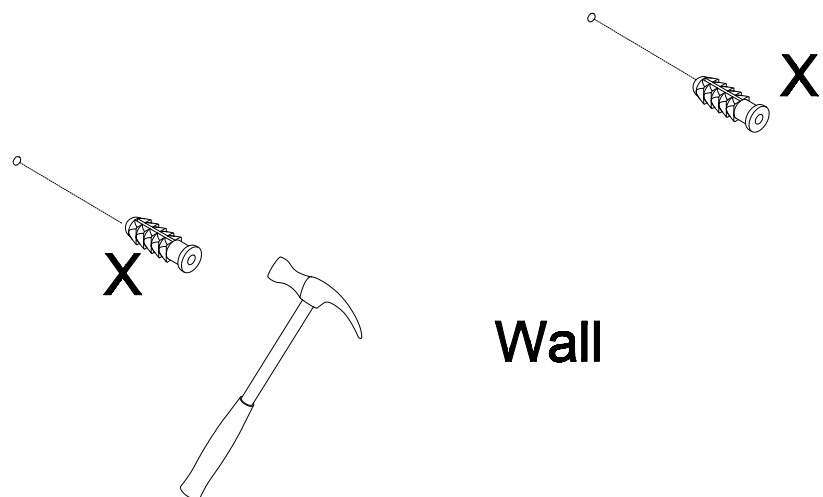

X

X2


Step 17

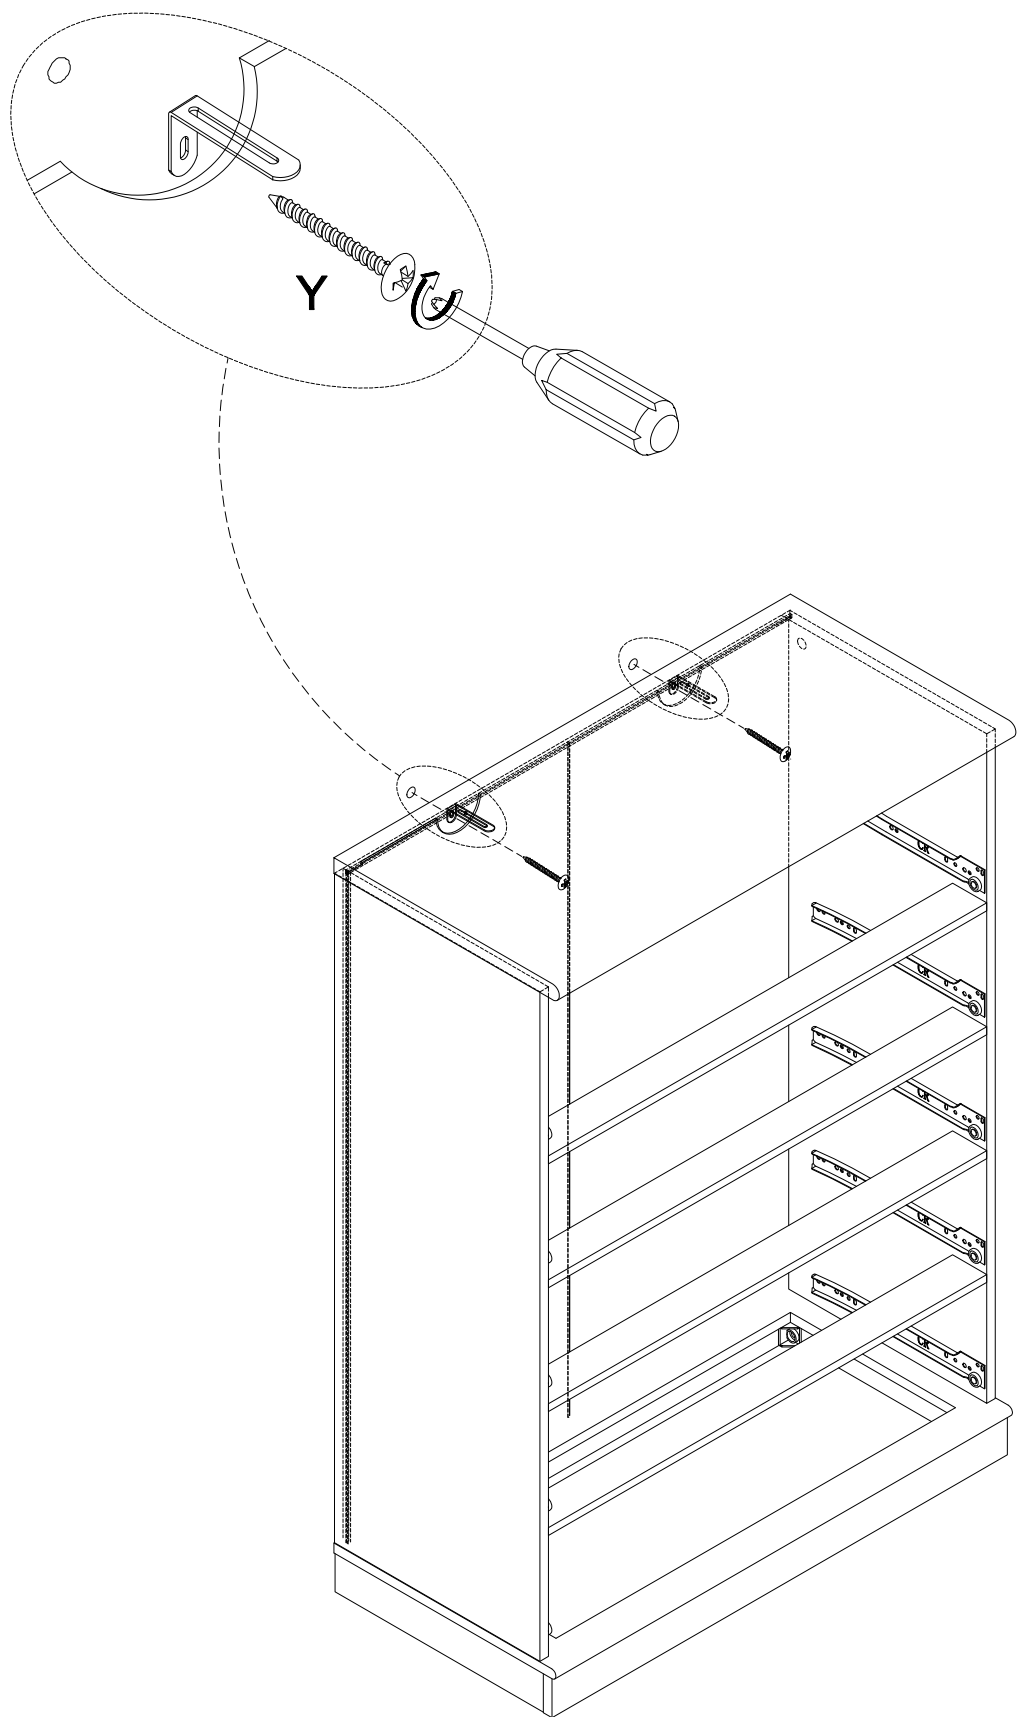


Y

X2



Step 18

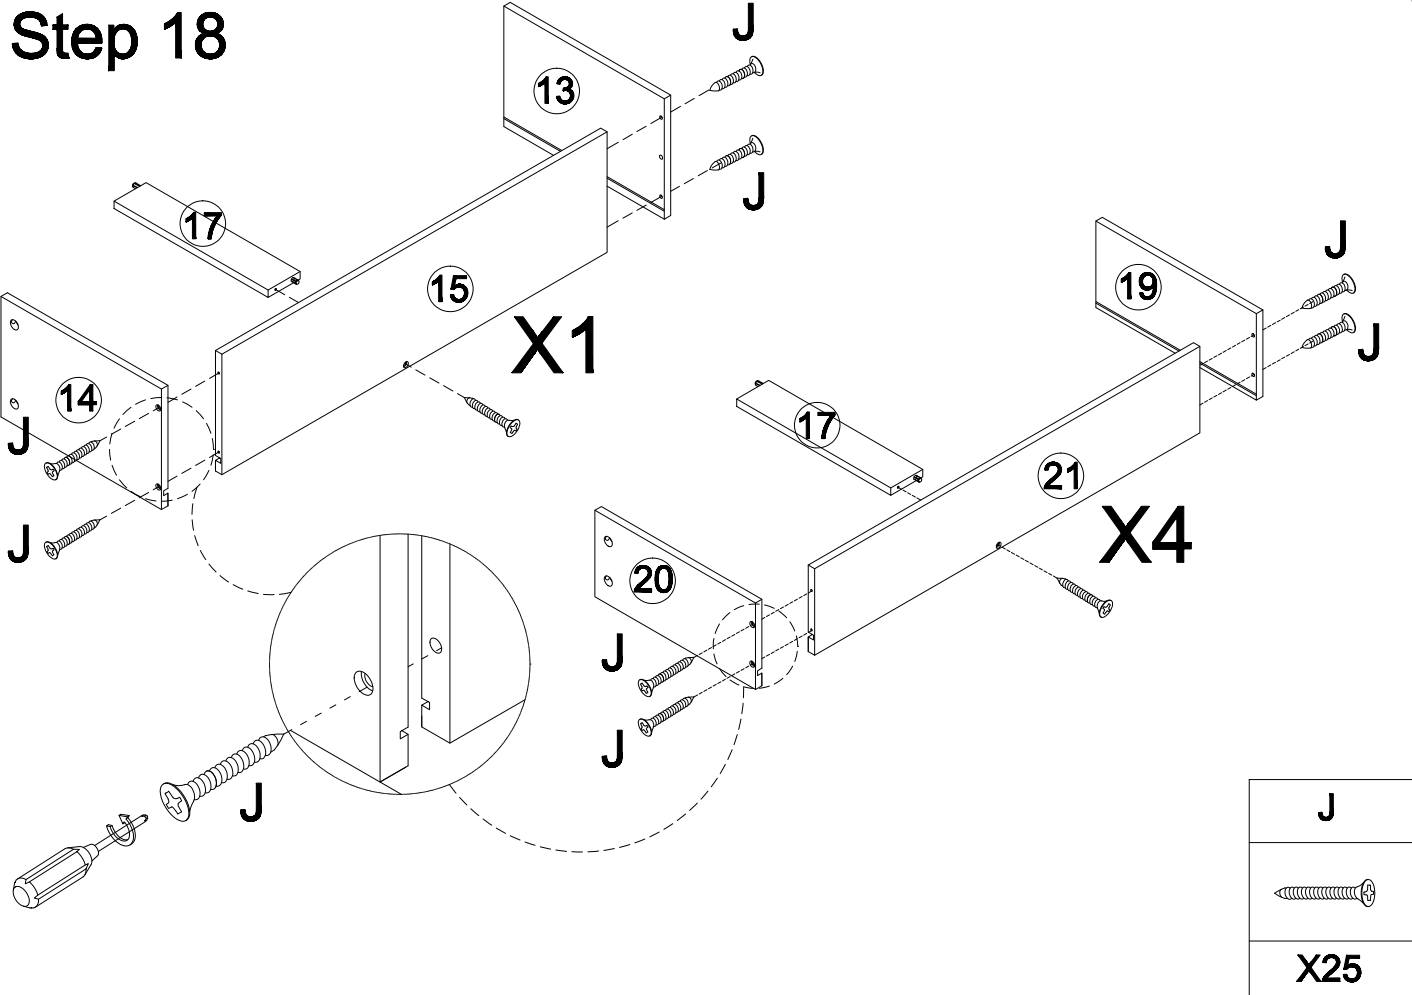

Step 19




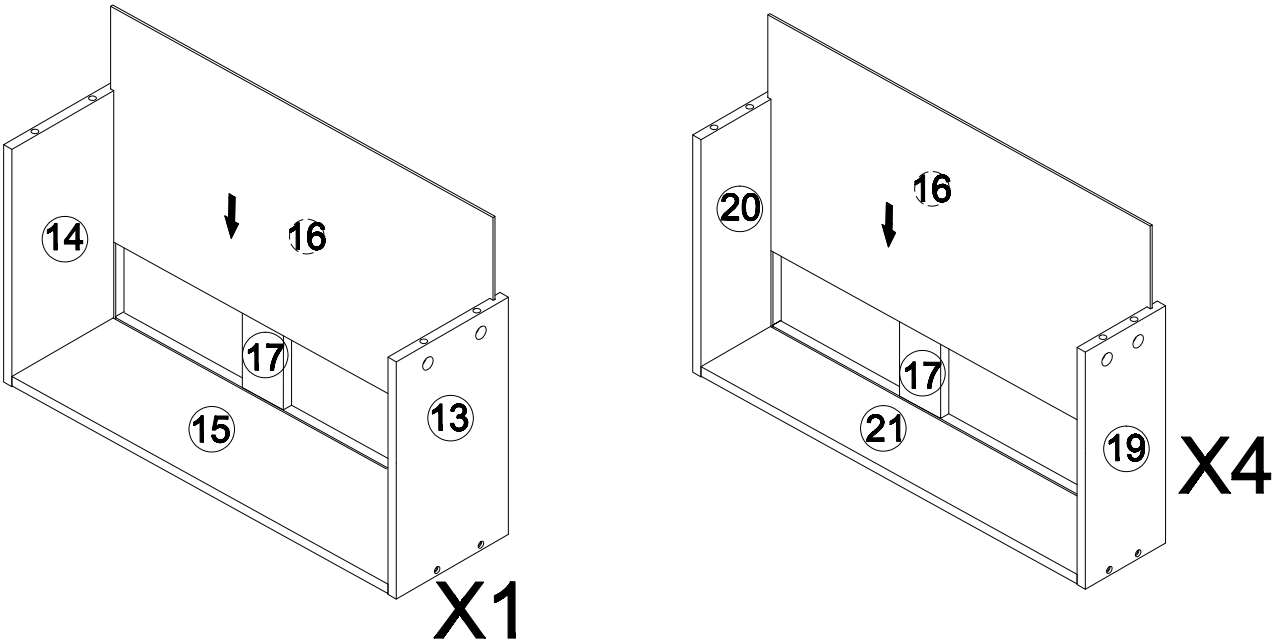


Step 20

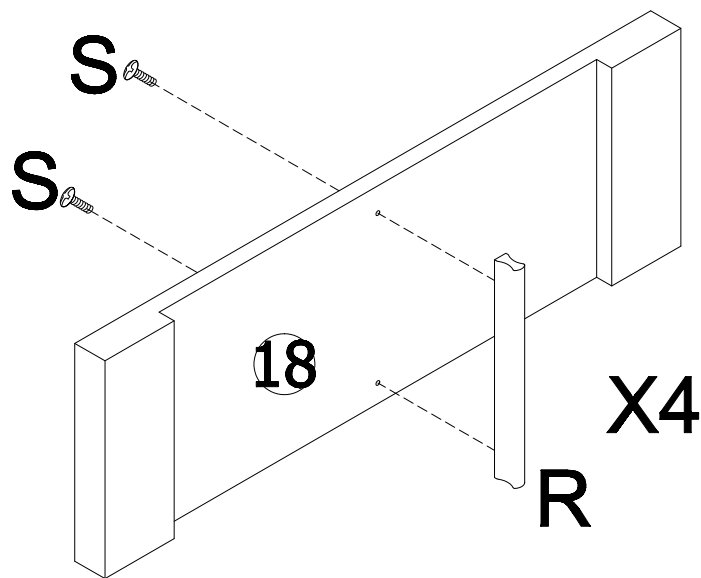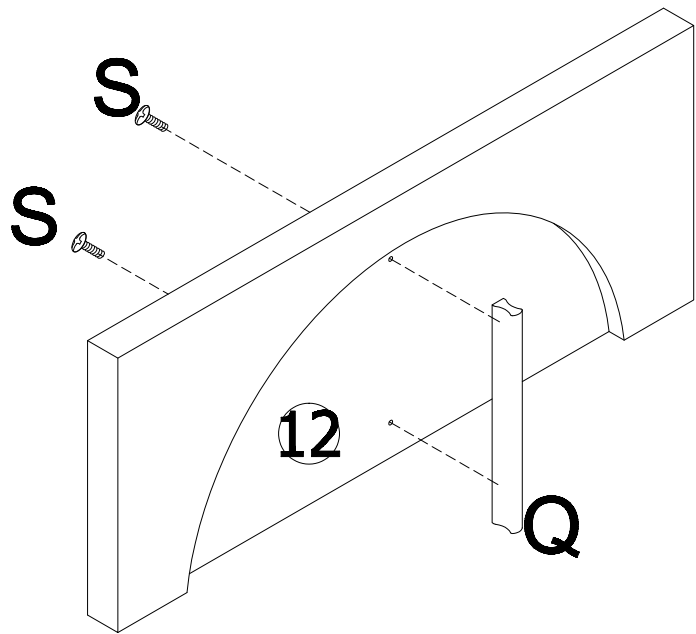

S	R	Q
		
X10	X4	X1

Step 21

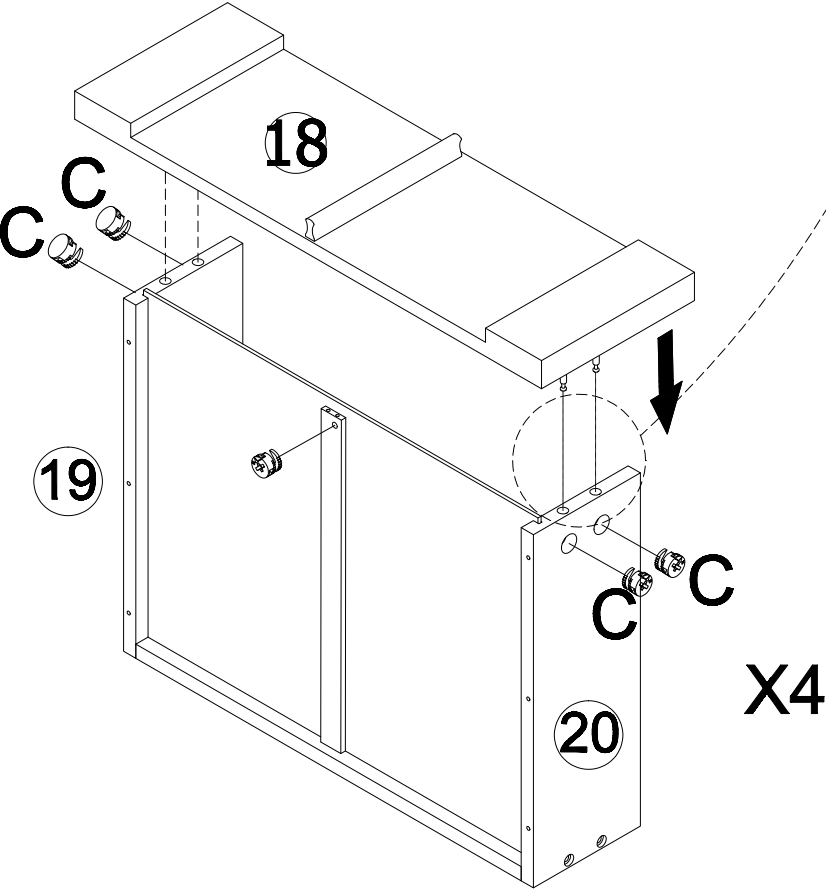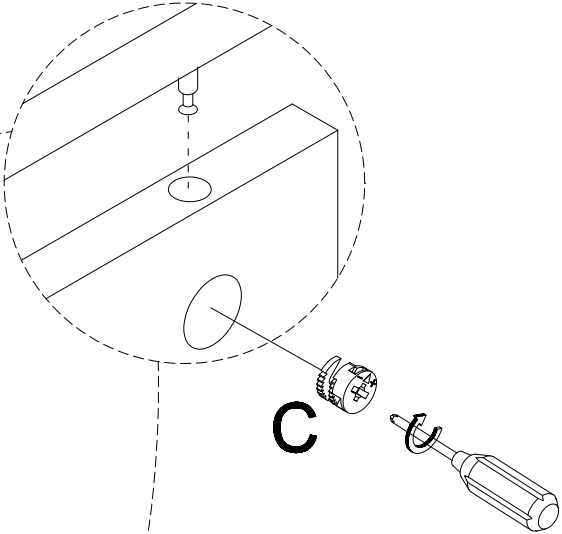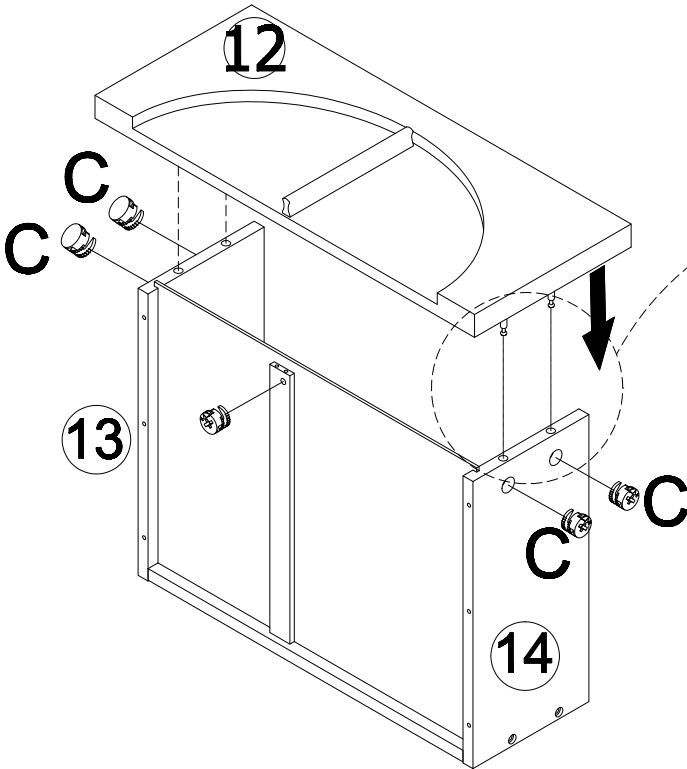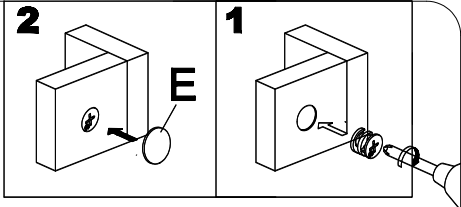


E	C
X25	X25

Step 22



NOTE:

Refer to the images to identify M-DL (left) and M-DR (right). Attach M-DL to #13 panel and M-DR to #14 panel. [N] screws must go in the exact spots shown.

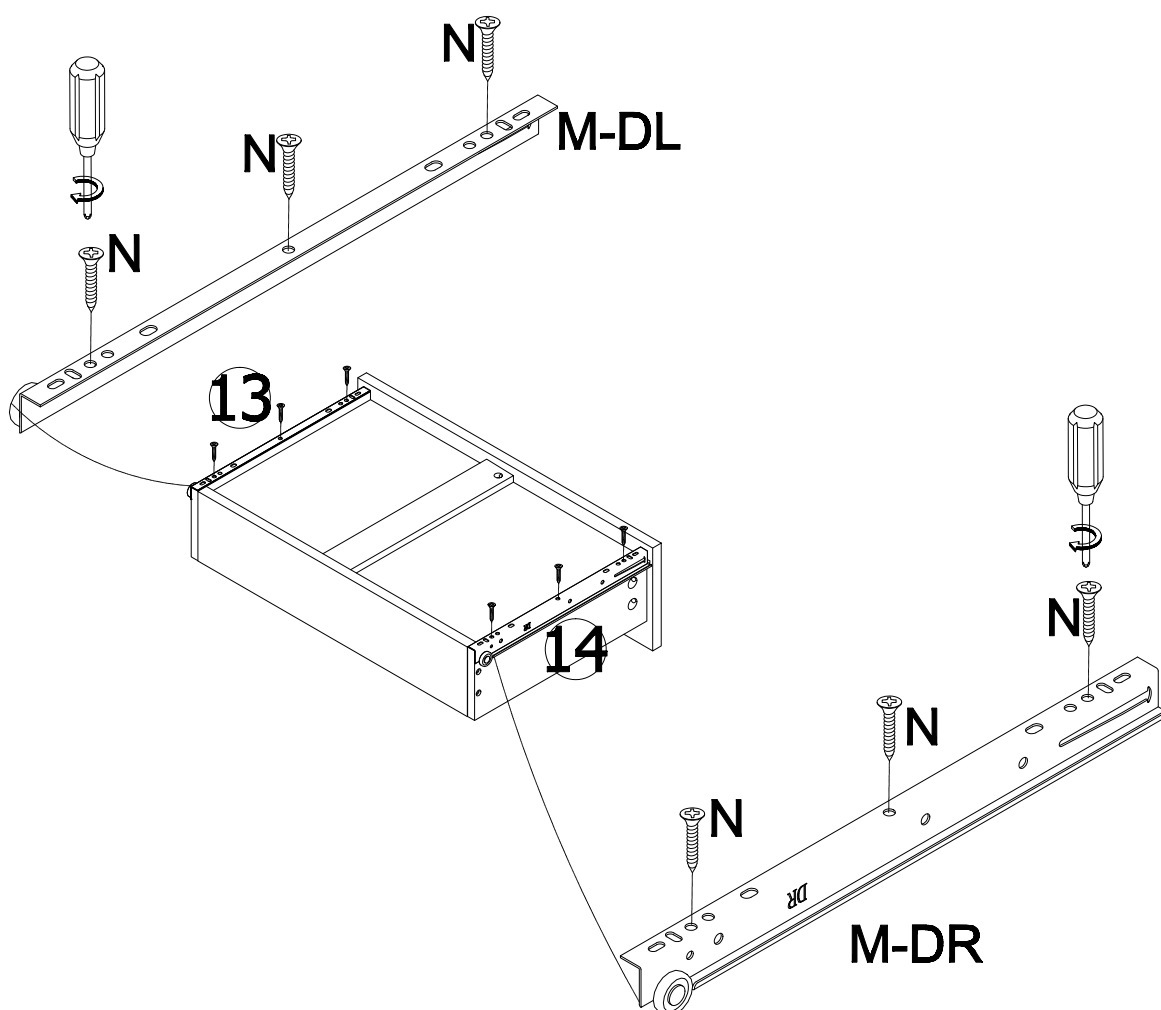


N	M
X6	X1

Step 23




NOTE:

Refer to the images to identify M-DL (left) and M-DR (right). Attach M-DL to #19 panel and M-DR to #20 panel. [N] screws must go in the exact spots shown.

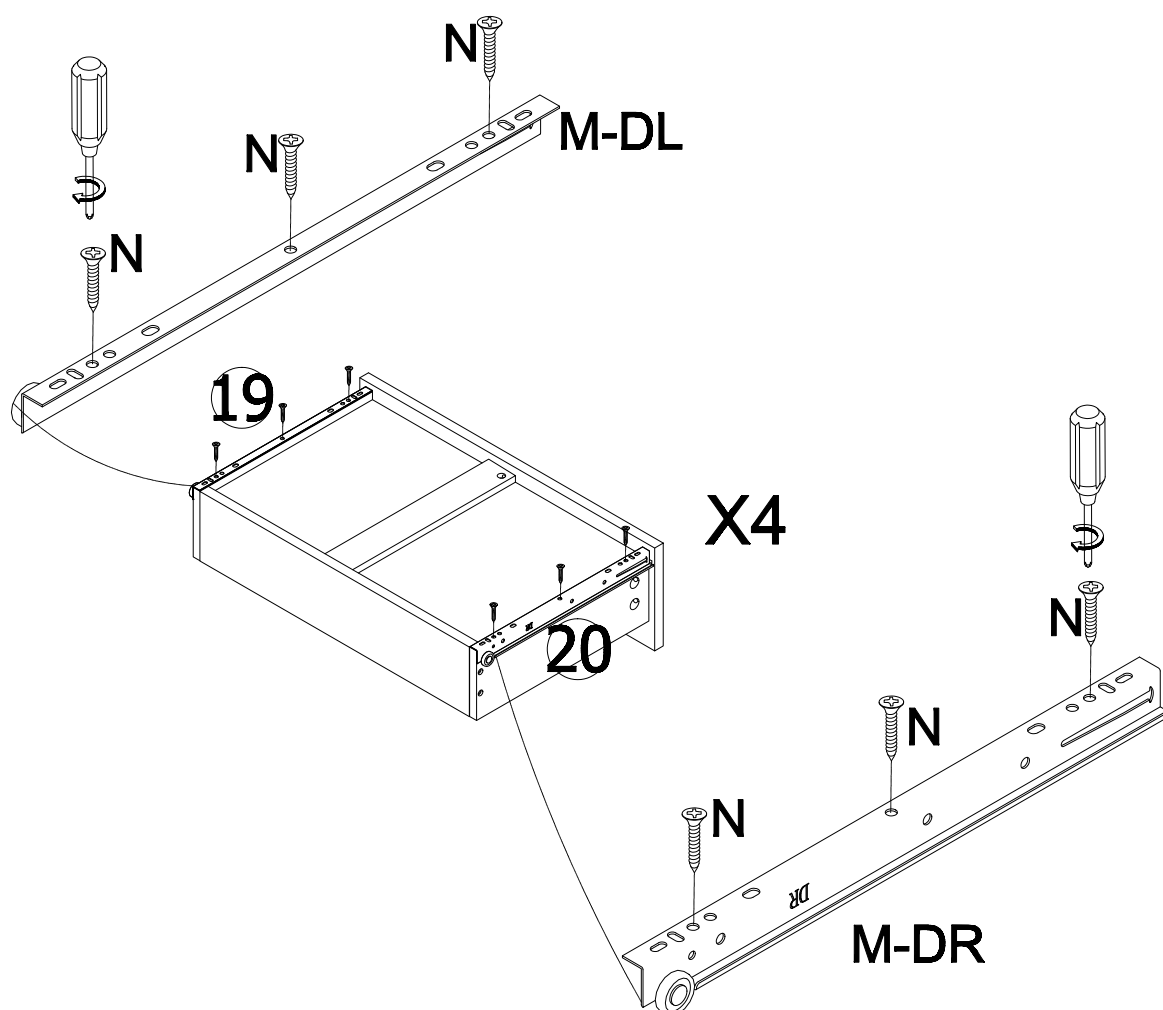


N	M
X24	X4

Step 24

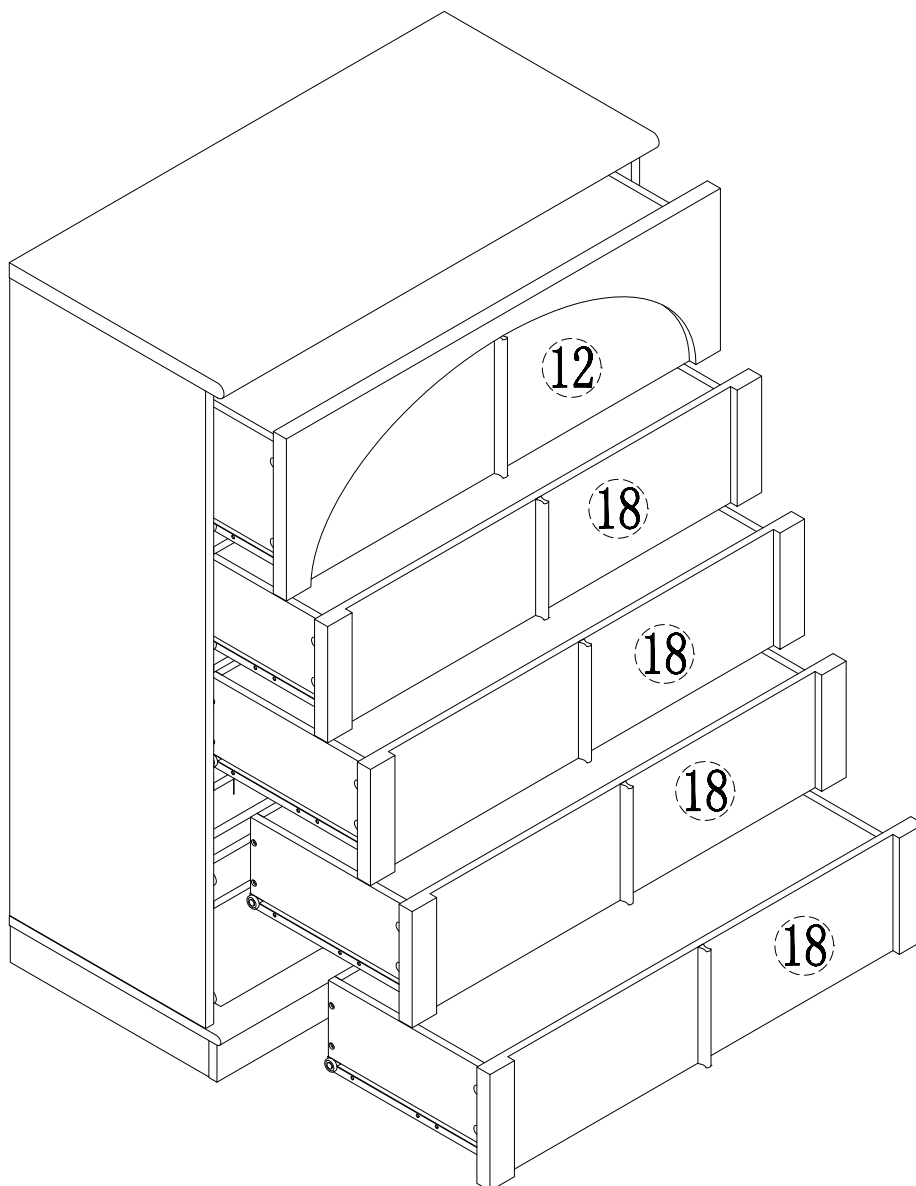

Step 25

Final Assembly

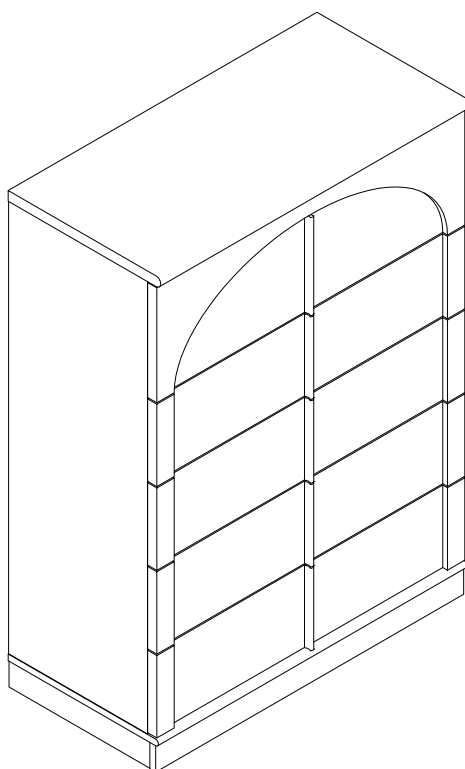

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **ALWAYS** install Anti-tip device provided.
- **NEVER** put a TV on this product.
- **NEVER** allow children to stand, climb or hang on drawers, doors, or shelves.
- **NEVER** open more than one drawer at a time.
- Place heaviest items in the lowest drawers.