
Resin Garden Shed

OWNER'S MANUAL
Instructions for Assembly

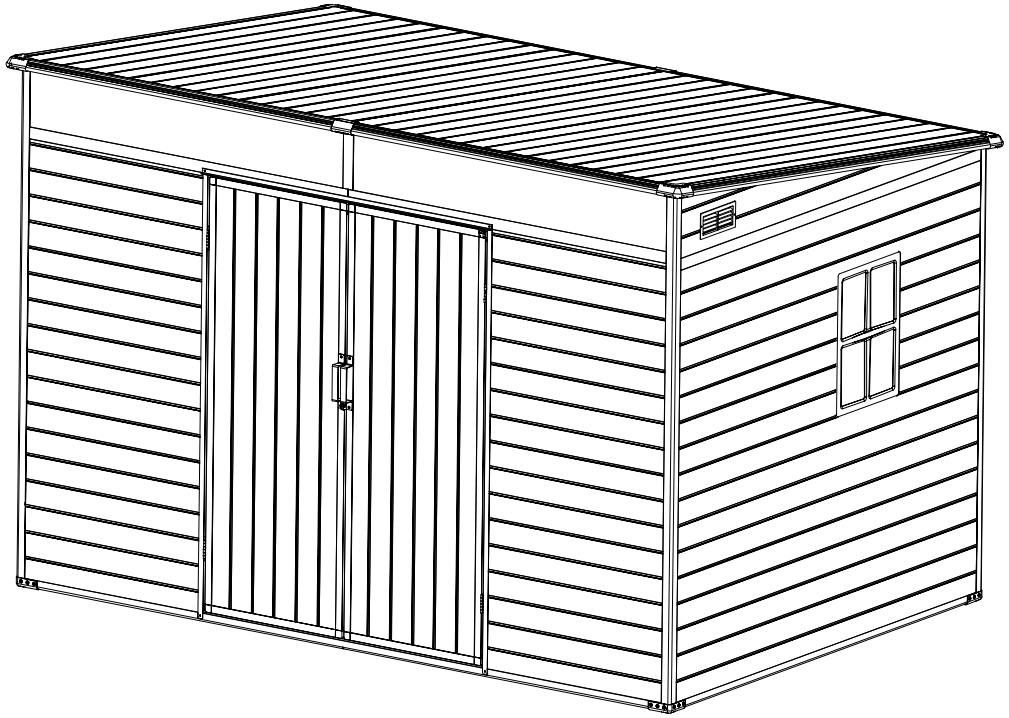

SLD-PS710W

Requires two peoples and take 3-4 hours for installation.
Quick & Easy assembly.Ridge Reinforced Walls.
Available in Various Sizes.

BEFORE YOU START

Owner's Manual

Prior to installation, it is important that you contact your local government authority to determine if building approval is required. Study and understand this owner's manual. Important information and helpful tips will make your construction easier and more enjoyable.

Assembly instructions

Instructions are supplied in this manual and contain all appropriate information for your building model. Review all instructions before you begin. During assembly, follow the step sequence carefully for correct results .Please be aware: this unit takes three people about 4 - 5 hours to complete.


Parts

Check to be sure that you have all the necessary parts for the building.

Separate contents of the carton by the part number while reviewing parts list.


Familiarize yourself with the hardware and fasteners for easier use during construction. These are packaged within the carton. Note that extra fasteners have been supplied for your convenience.

TOOLS MAY REQUIRED

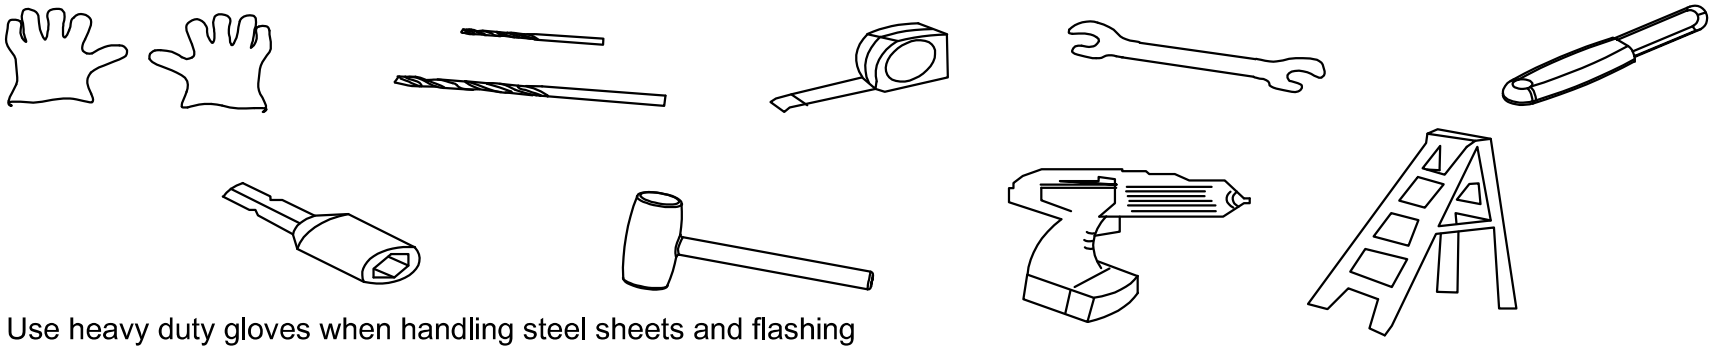

Use heavy duty gloves when handling steel sheets and flashing

PLAN AHEAD

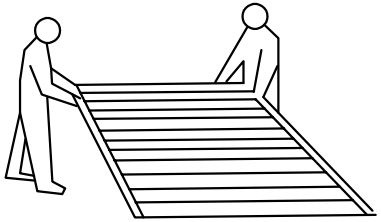

Watch the weather:

Please be sure the day you select for installation is dry and calm.

DO NOT attempt to assemble your shed in windy weather because of risk of damage to panels, or personal injury. Be careful of wet or muddy ground.

Teamwork:

Whenever possible, two or more people should work together to assemble the building. One person can position parts or panels

PLAN AHEAD

Site Selection

Avoid overhanging trees as much as possible as leaves will make regular cleaning necessary and broken branches are a potential hazard.
Small trees,bushes or fences nearby can be helpful,acting as a wind break.

If a concrete pad is made,it is important that this slopes towards the edges to prevent water ingress.
Time must be allowed for any concrete or cement to dry before building the shed on top.

Site Preparation

The site must be prepared so that the base of the shed is level all round and checking with a spirit level is required.

The base can be constructed by treated timber or concrete,in order to stop the moisture getting into the shed.The shed is not designed to be built onto lawn directly.Also the ground will get muddy during rainy days.

Bases can also be constructed from bricks,blocks,or mounted on a concrete pad.

The bricks or blocks should be cemented onto firm and level concrete footings and the greenhouse frame drilled and screwed to the base.

IMPORTANT NOTES:

Find someone to help you:it is much easier with someone to hold parts,pass tools ect.Also some steps require two people to lift structures together.This is not very heavy work so would suit most able-bodied people.




















Allow plenty of time:rushing often causes errors and the re-doing of incorrect assemblies.If you have never built a shed before,it can take most of a day to carefully complete the construction.

















Have the right tools to hand.






Safety clothing as recommended in the 'Tools' section.


Ideally lat out the parts and check that all are present before commencing construction.Lay on cloths or plastic sheets if there is any risk of scratching the parts.


Tighten all nuts carefully,being sure not to miss any.Check the frame is square and using a spirit level to check that it is upright.

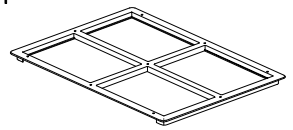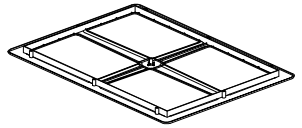
PS710-C01 	x 1	PS77-C07 	x 1	PS77-C18 	x 2	F35-C30 	x 4
PS77-C02 	x 4	PS710-C02 	x 6	PS710-C11 	x 4	F35-C31 	x 1
PS77-C03 	x 1	PS710-C03 	x 2	PS77-C20 	x 2	F35-C32 	x 1
PS710-C08 	x 2	PS77-C10 	x 6	GF 	x 2	F35-C33 	x 1
PS77-C05 	x 4	PS710-C04 	x 6	AM88-C23 	x 2	PS710-C35 	x 2
PS710-C37 	x 1	PS710-C05 	x 2	A64-C30 	x 1	PS710-C36 	x 2
PS710-C38 	x 1	PS77-C21 	x 5	A812-C26 	x 2	PS710-C06 	x 2
PS77-C06 	x 1	PS710-C10 	x 2	F35-C27 	x 4	PS710-C07 	x 2

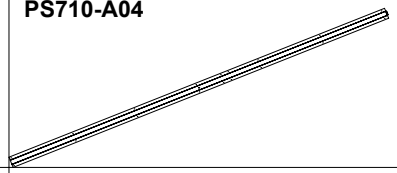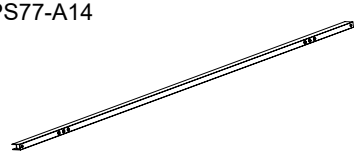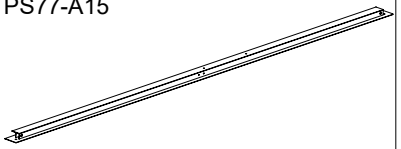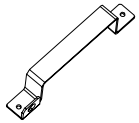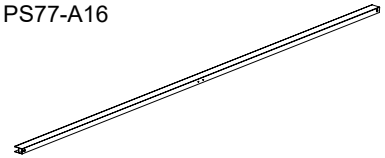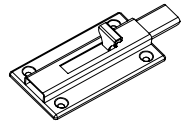PS710-A12 	x 1	**PS77-A09** 	x 1	**PS710-A10** 	x 1	**AM88-C25** 	x 8
PS710-A01 	x 1	**PS710-A06** 	x 2	**PS710-A11** 	x 1	**PS710-A25** 	x 10
PS710-A05 	x 2	**PS710-A07** 	x 2	**PS77-A01** 	x 1	**PS710-A18** 	x 2
PS710-A02 	x 1	**PS77-A11** 	x 2	**PS77-A02** 	x 1	**PS710-A04** 	x 1
PS710-A03 	x 1	**PS77-A38** 	x 2	PS77-A14 	x 2	**F35-C34** 	x 1
AM88-A04 	x 1	**PS77-A13** 	x 2	PS77-A15 	x 1	**D03** 	x 1
PS710-A13 	x 1	**PS710-A09** 	x 2	PS77-A16 	x 1	**G6** 	x 2
PS710-A14 	x 1	**PS77-A19** 	x 2	PS710-A08 	x 4	**A64-A15** 	x 4

E01 	x 22						
E02 	x 501						
E03 	x 28						
E04 	x 5						
E12 	x 24						
E14 	x 4						

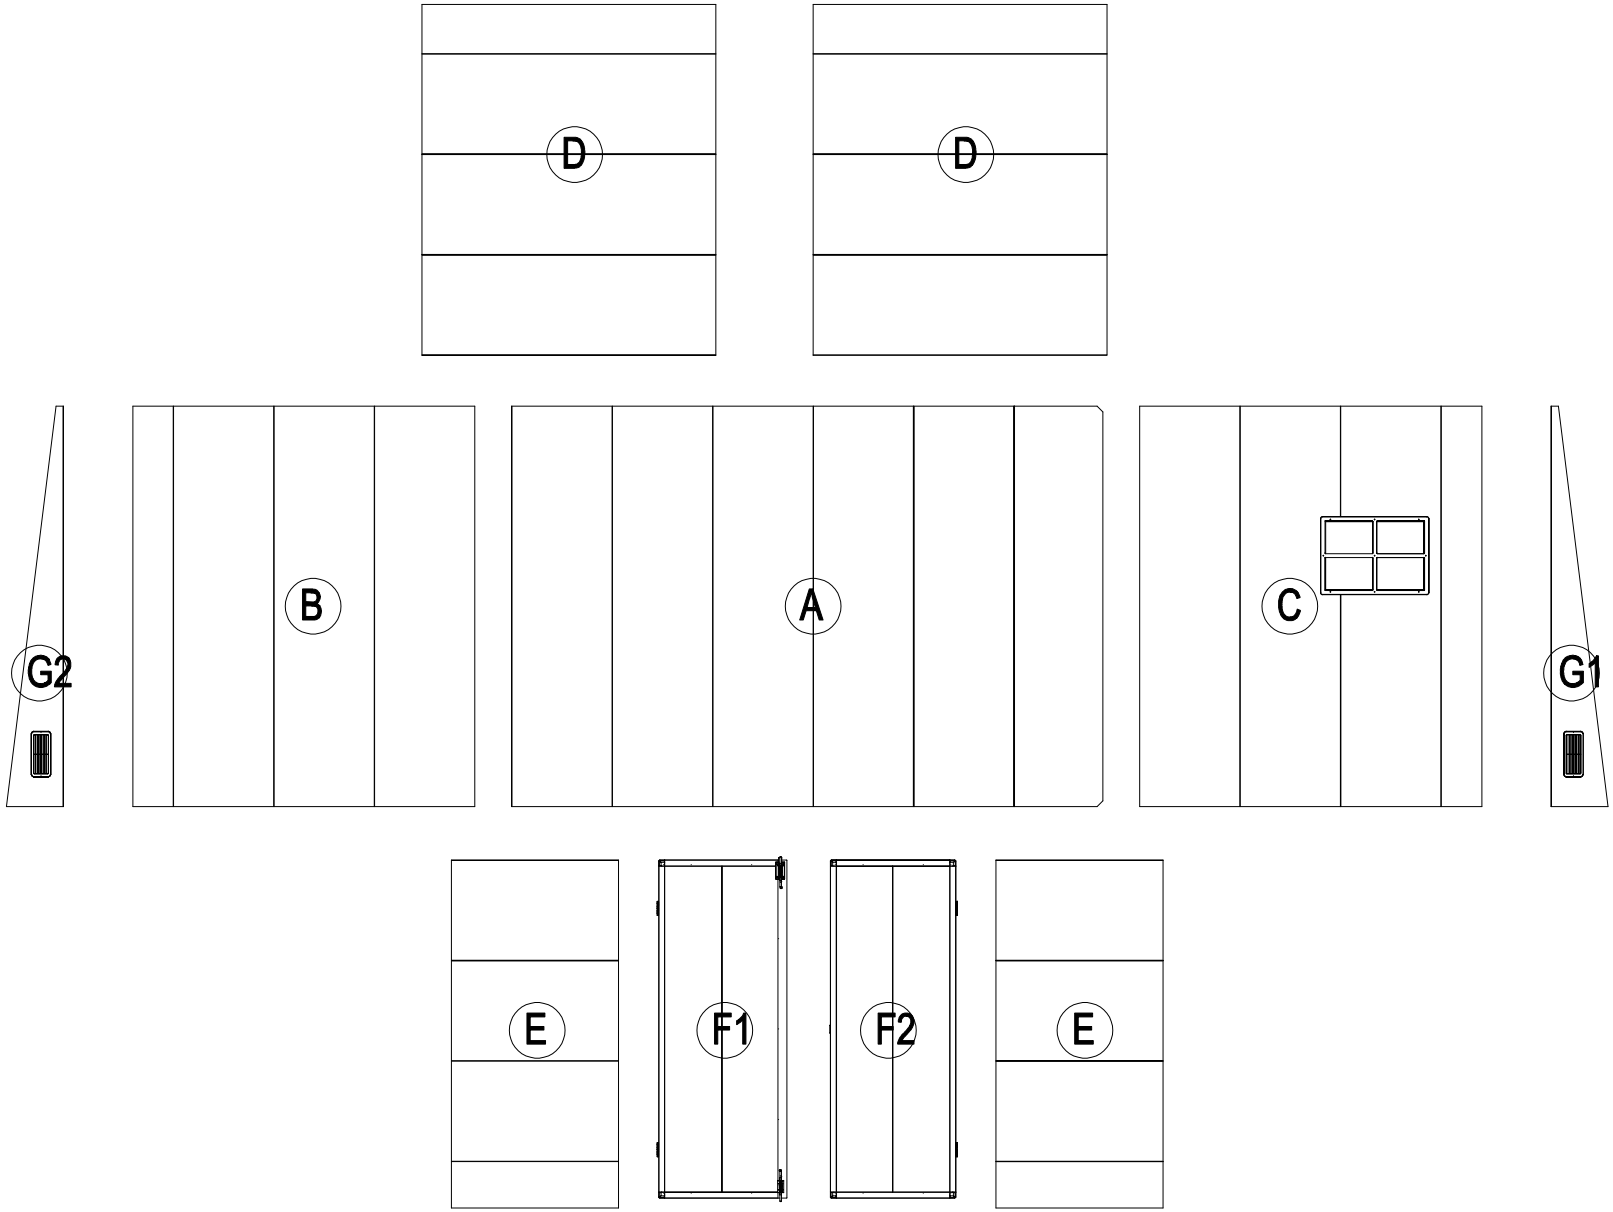
D
D
G2
B
A
C
G1
E
F1
F2
E

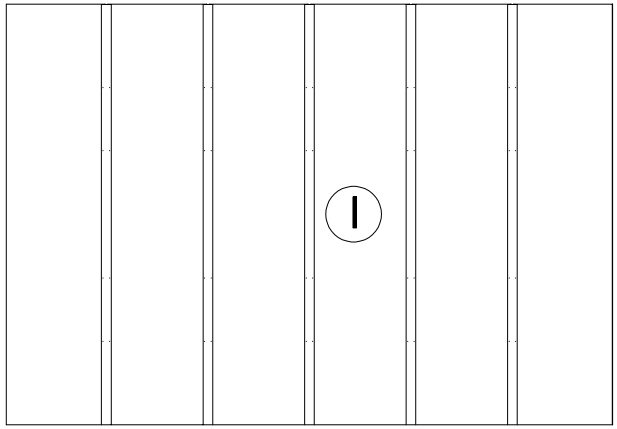
I




PS710-C01x1



PS77-C02x4




PS77-C03x1



（ST4.2x12）
E02x15

Basement Pre-assembly

A

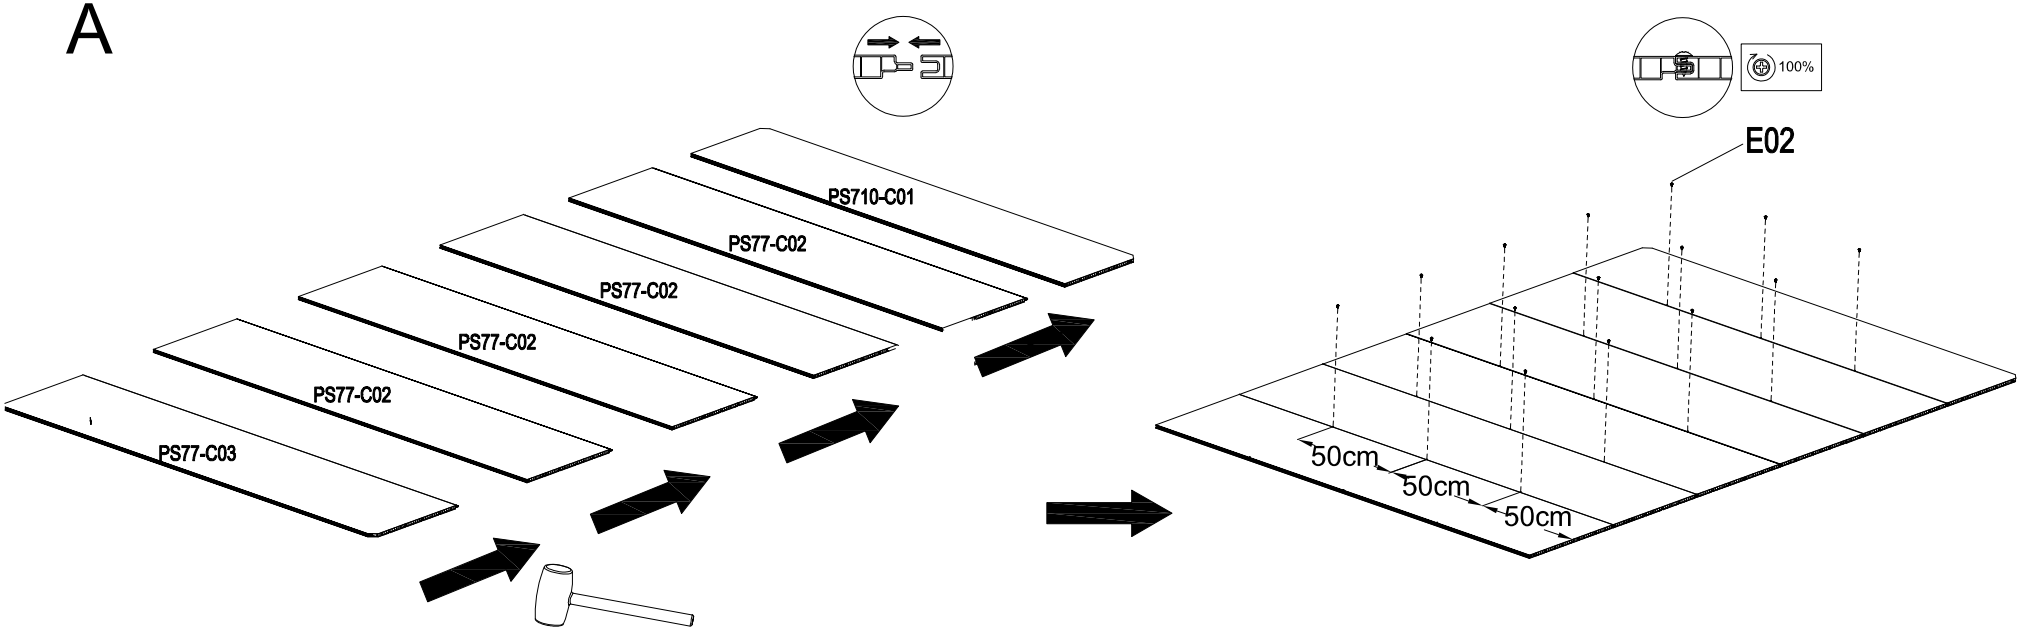


Note：①All panels have a rough side and a smooth side. When installing, make sure that the smooth side is toward the inside of the storage shed.

②There are card slots on all panels.Align the panel and push it directly with force when installing panels; if it can't be pushed, you can stand the panel up and use the sliding type installation

③Place the panel smooth side up,knock the panel tightly by using hammer to make sure the panel is tightly fitted. This will prevent leaks, and then secure it with screws.


④It is recommended to have three people install this at the same time,this will help with a better installation.



PS77-C05x3




PS710-C08x1





（ST4.2x12）
E02x9

Left Side wall Pre-assembly

B

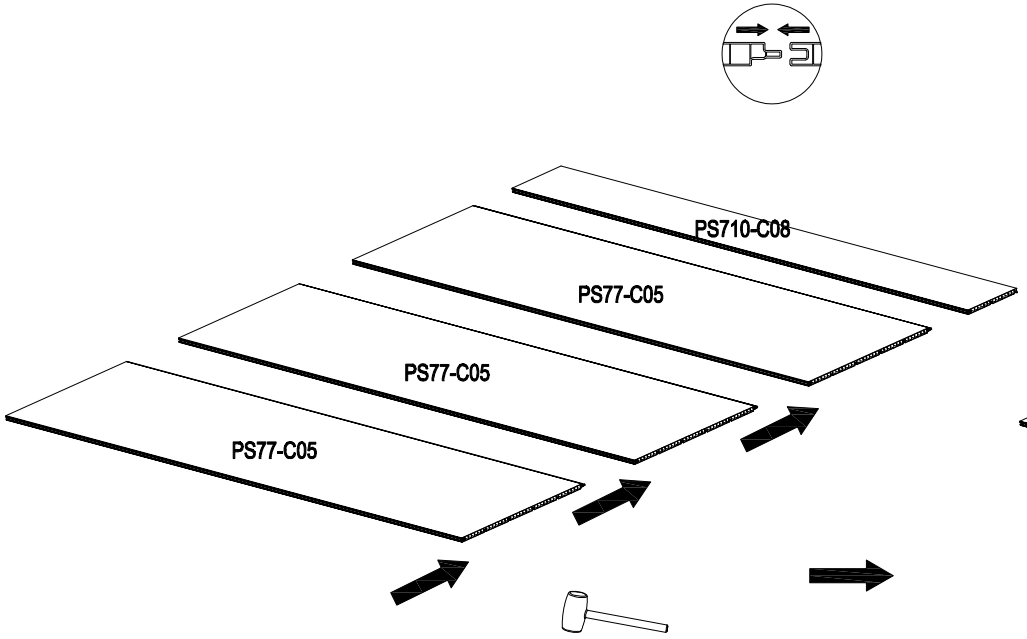

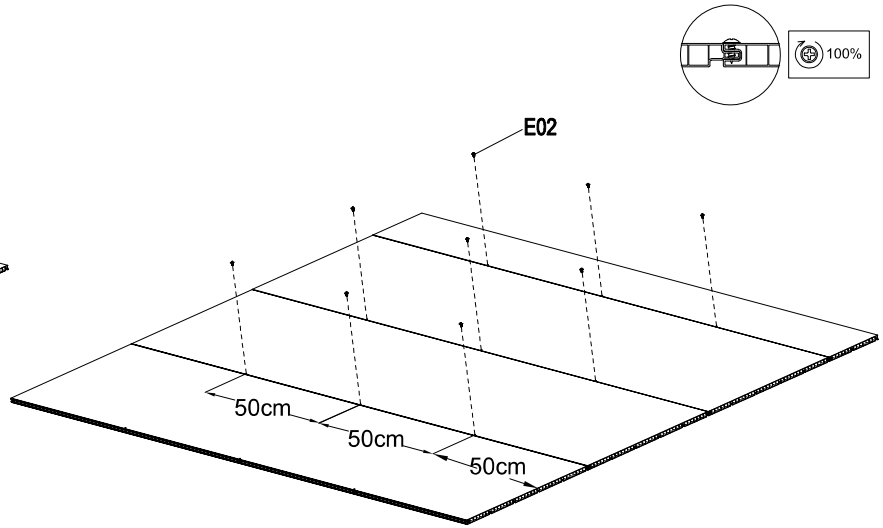





PS77-C05x1




PS710-C08x1



PS710-C37x1




PS710-C38x1





(ST4.2x12)
E02x9


Right Side wall Pre-assembly


C



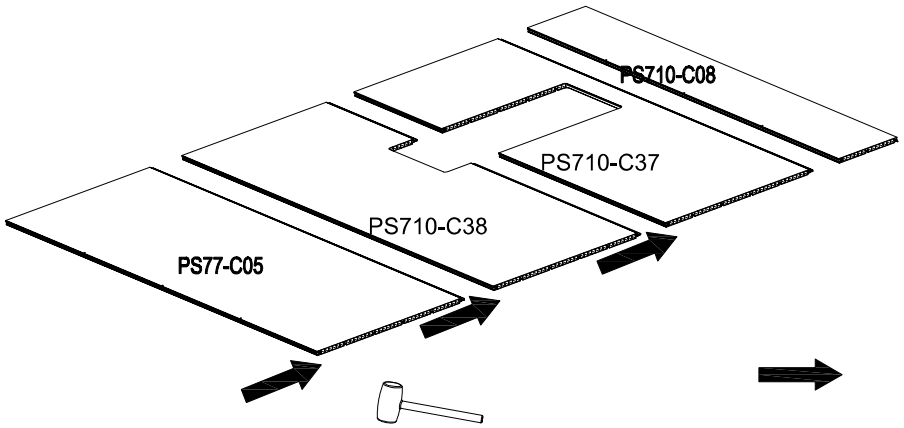




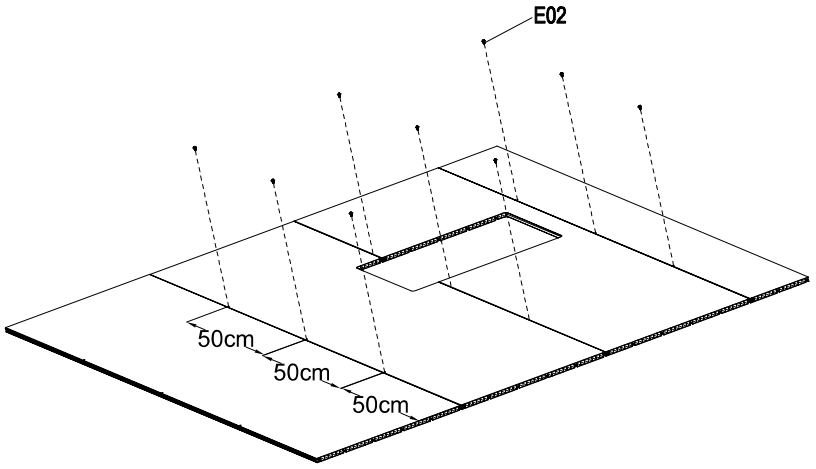


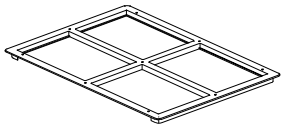


F35-C31x1

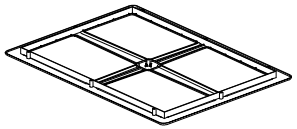

F35-C32x1




F35-C33x1



（ST4.2x12）
E02x9

Right Side wall Pre-assembly

C

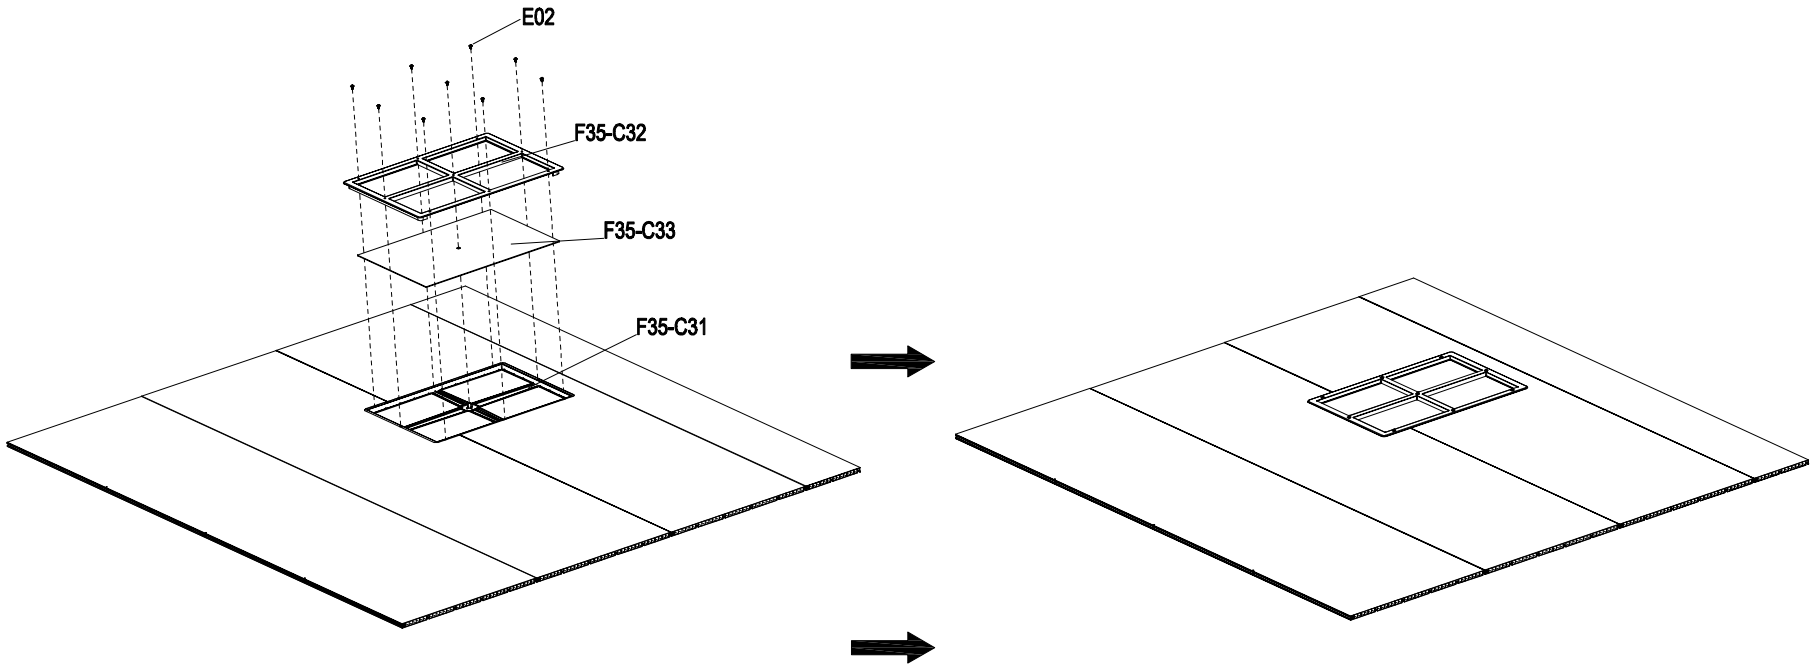




PS710-C02x6




PS710-C03x2




(ST4.2x12)
E02x18

Back wall Pre-assembly

Dx2

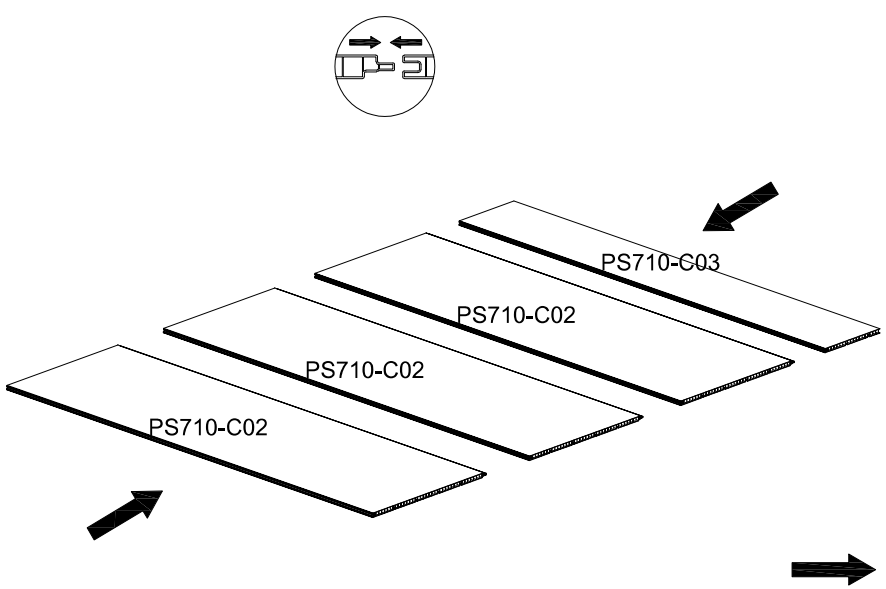

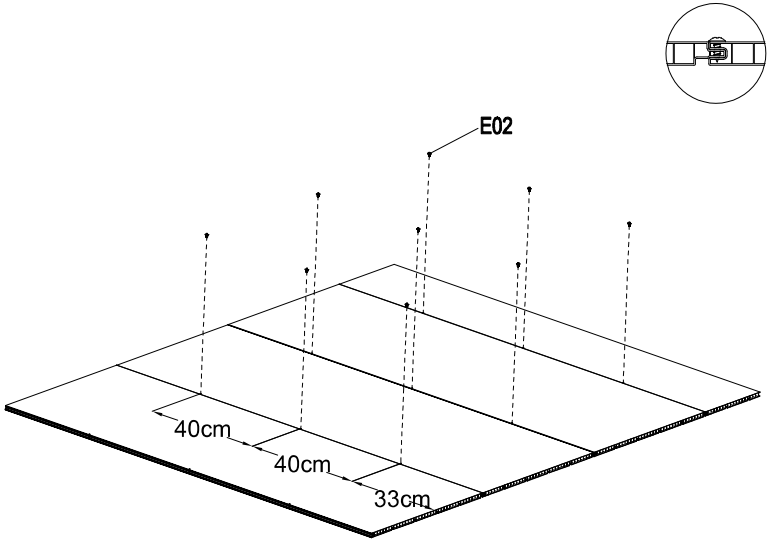


x2



PS710-C04 x6




PS710-C05 x2





(ST4.2x12)
E02x12


Front wall Pre-assembly

Ex2

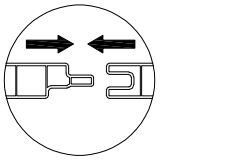

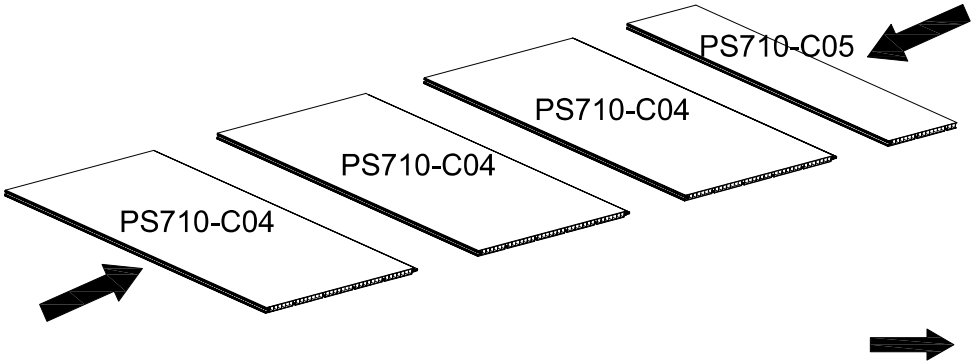

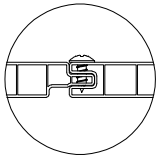

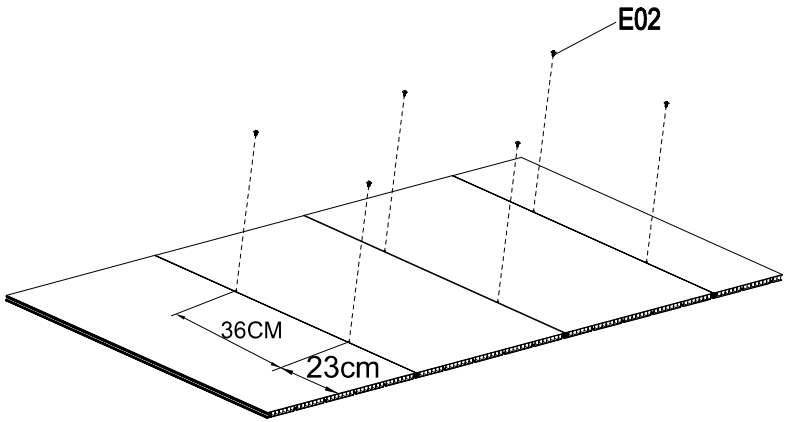


x2




PS710-C06 x1



PS710-C07 x1

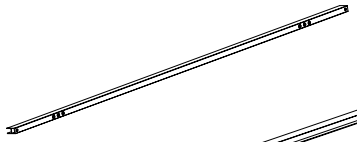

PS77-A14 x1

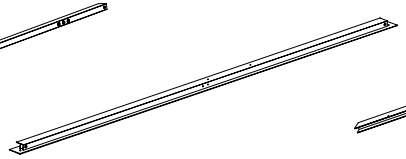


PS77-A15 x1




PS710-A08 x2



AM88-C25 x4



(ST4.2x12)
E02x13





(ST4.2x13)
E01x8

Door Pre-assembly


F1

I




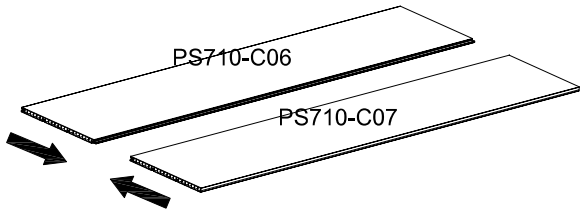


Tips:Pay attention to the front side and back side of parts AM88-C25

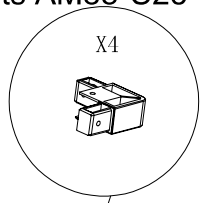


II

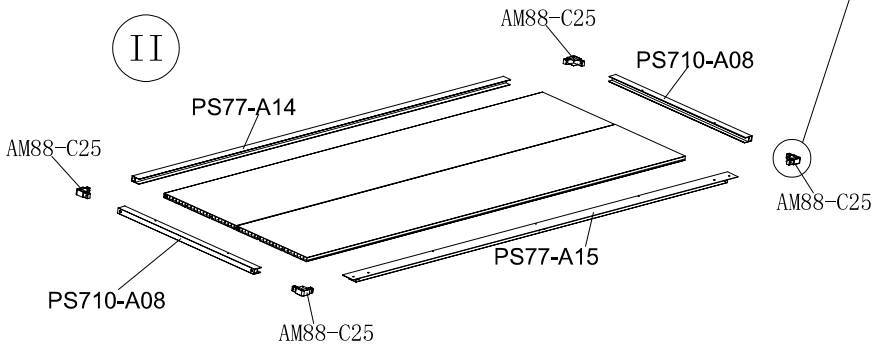




X = X


III

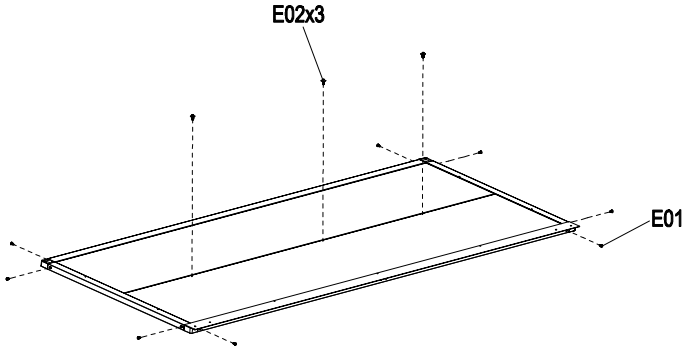


IV

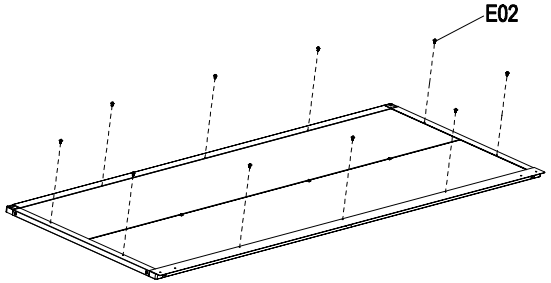


Note:Please kindly confirm the diagonal distance "X" of the door should be same before assembling the screws.

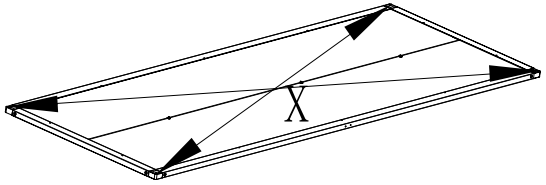


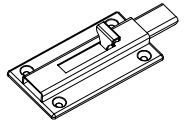


G6 x2



A64-A15 x2




E12 x6




(ST4.2x13)
E01x6

Door Pre-assembly

F1

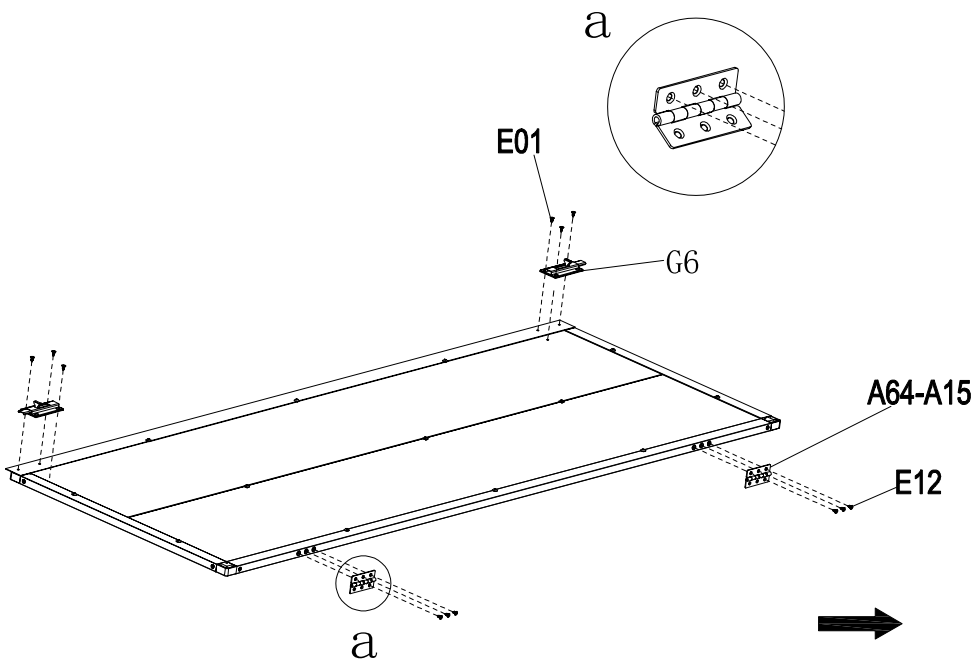

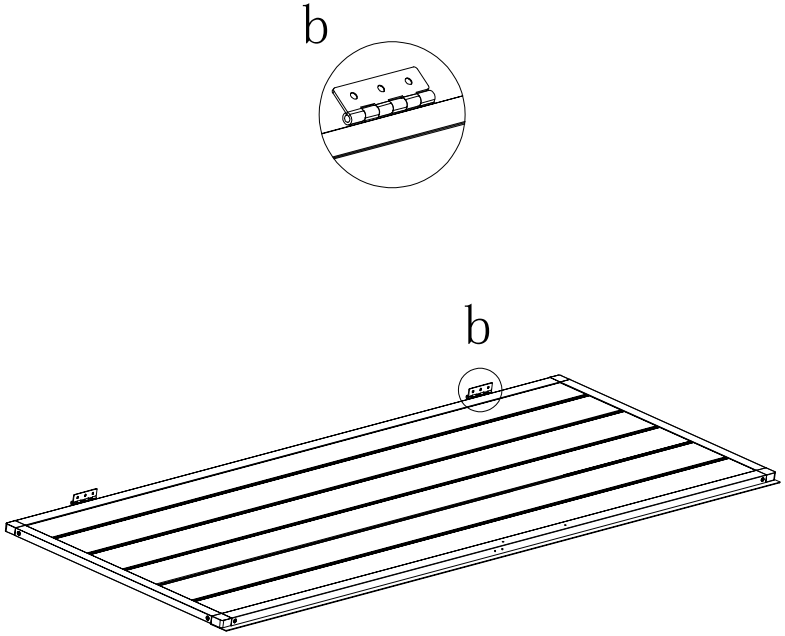





PS710-C06 x1



PS710-C07 x1

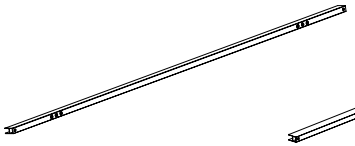

PS77-A14 x1

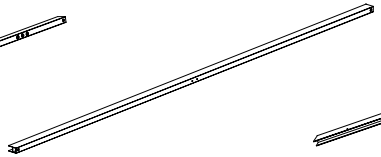


PS77-A16 x1




PS710-A08 x2



AM88-C25 x4



(ST4.2x12)
E02x13





(ST4.2x13)
E01x8

Door Pre-assembly


F2

I




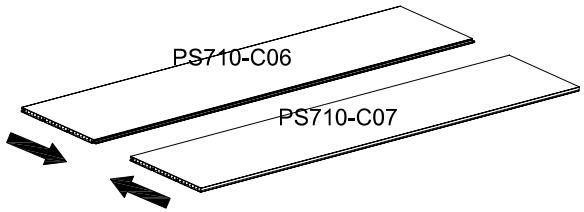


III

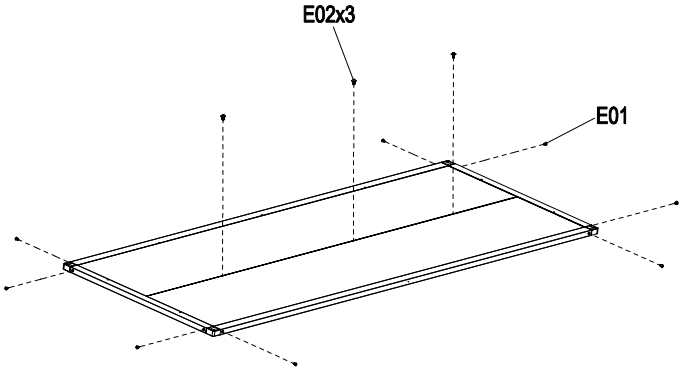


Tips:Pay attention to the front side and back side of parts AM88-C25

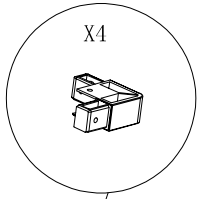


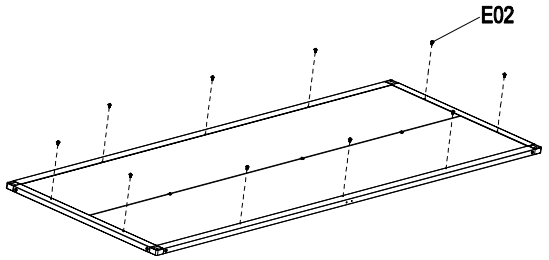

II

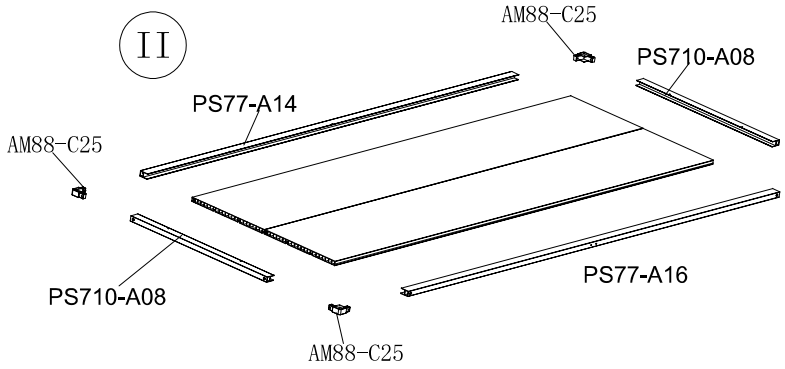



IV



X = X

Note:Please kindly confirm the diagonal distance"X"of the door should be same before assembling the screws.

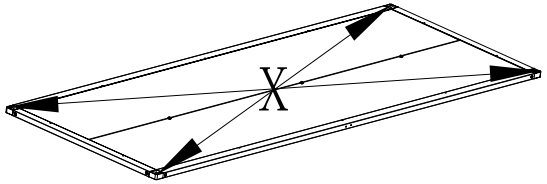




A64-A15 x2



E12 x6


Door Pre-assembly

F2

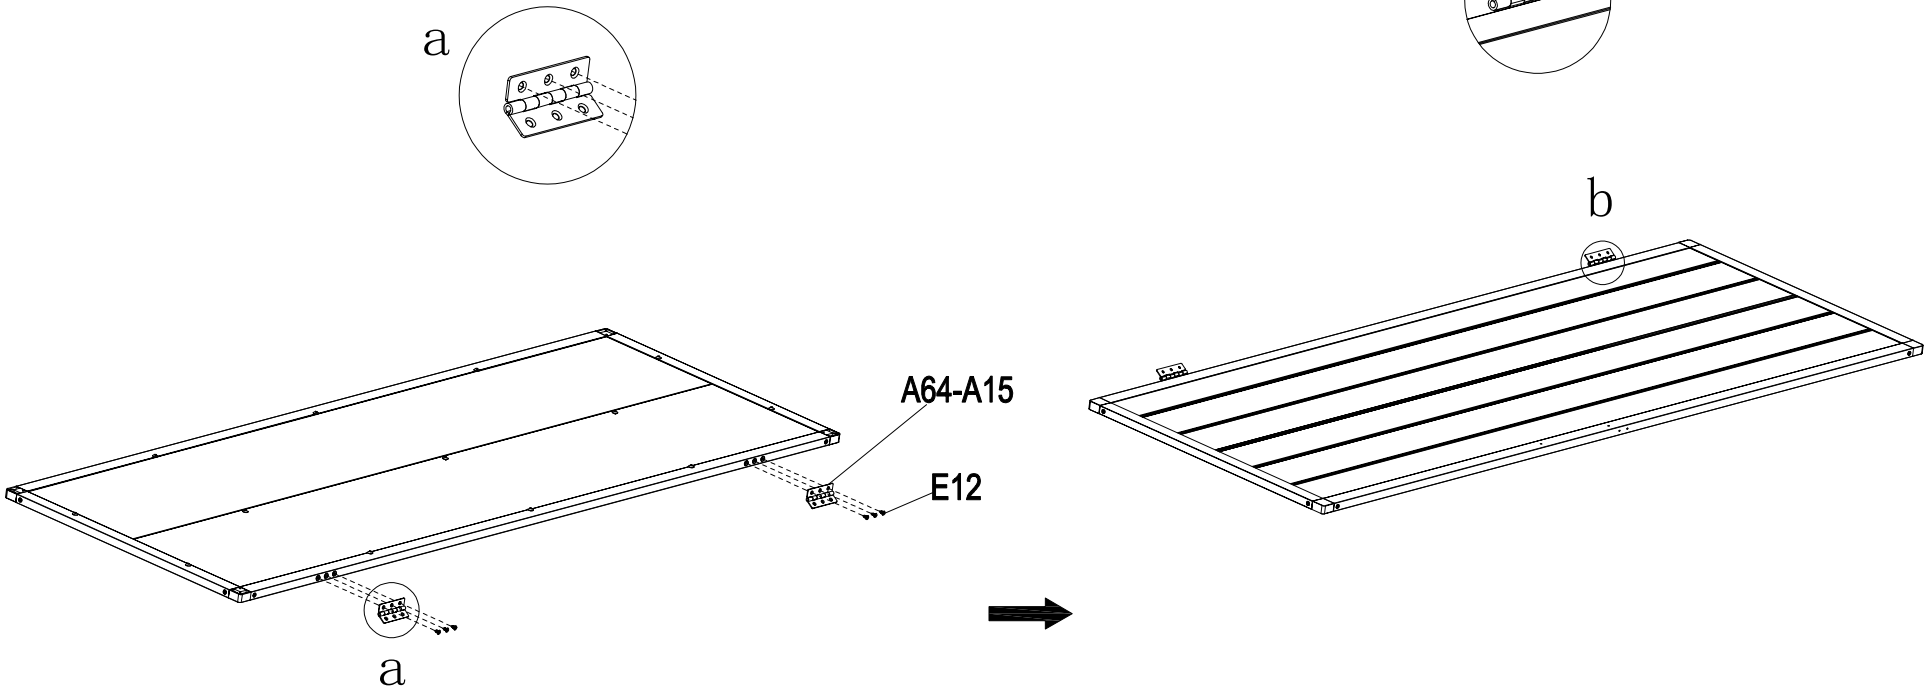





PS77-C06 x1



GFx1




AM88-C23 x1



E14 x2


Triangle board Pre-assembly

G1

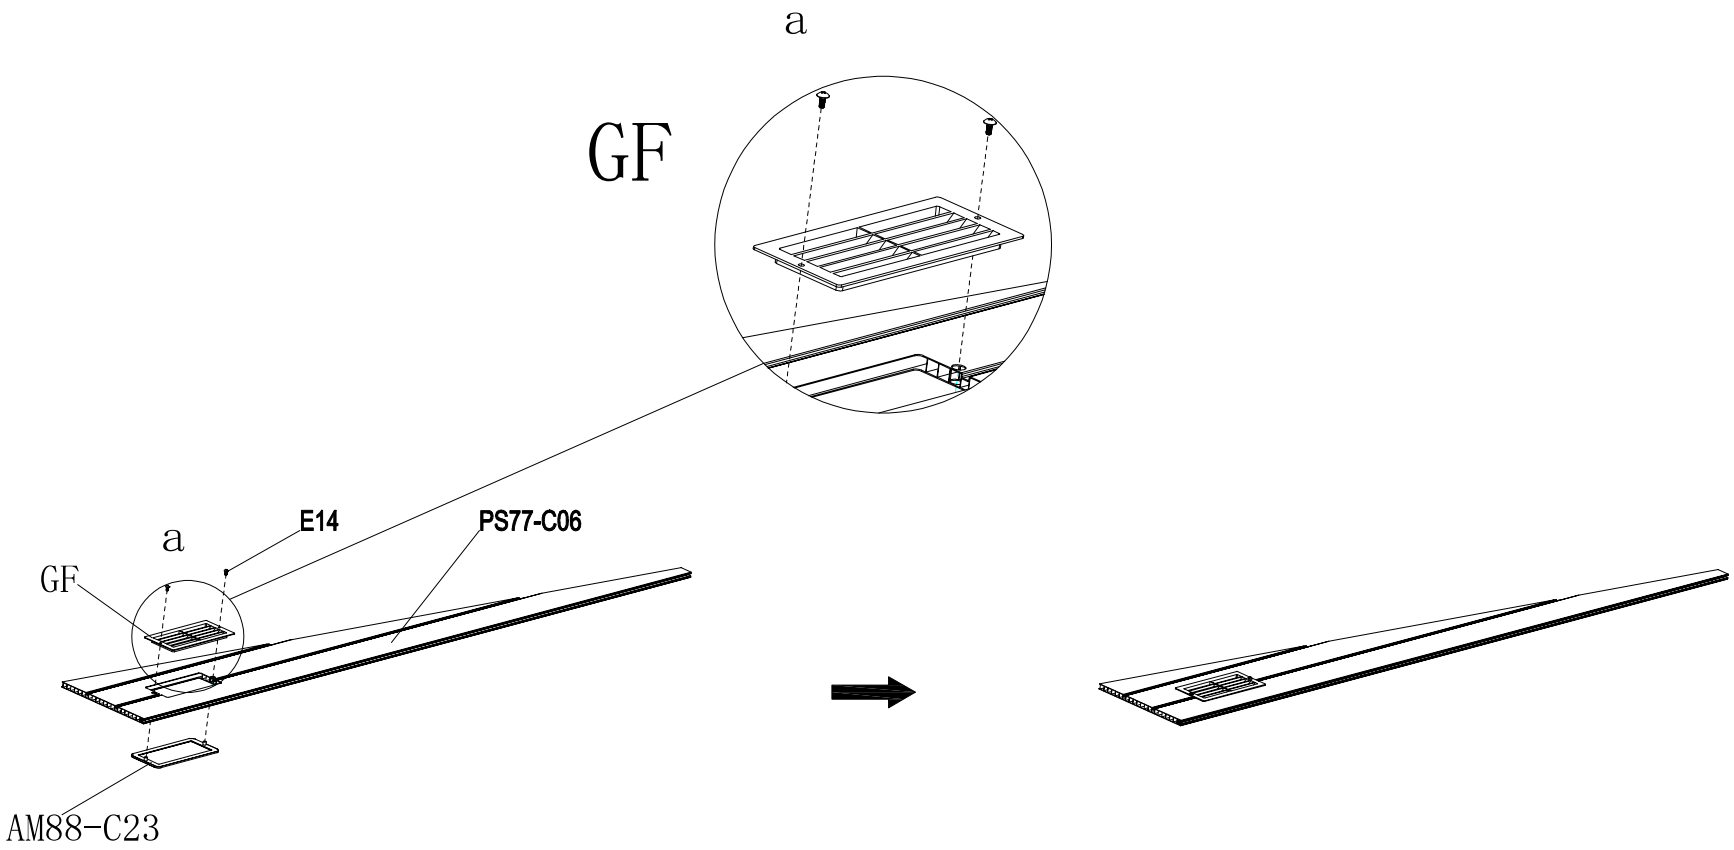





PS77-C07 x1



GF x1




AM88-C23 x1



E14 x2

Triangle board Pre-assembly

G2

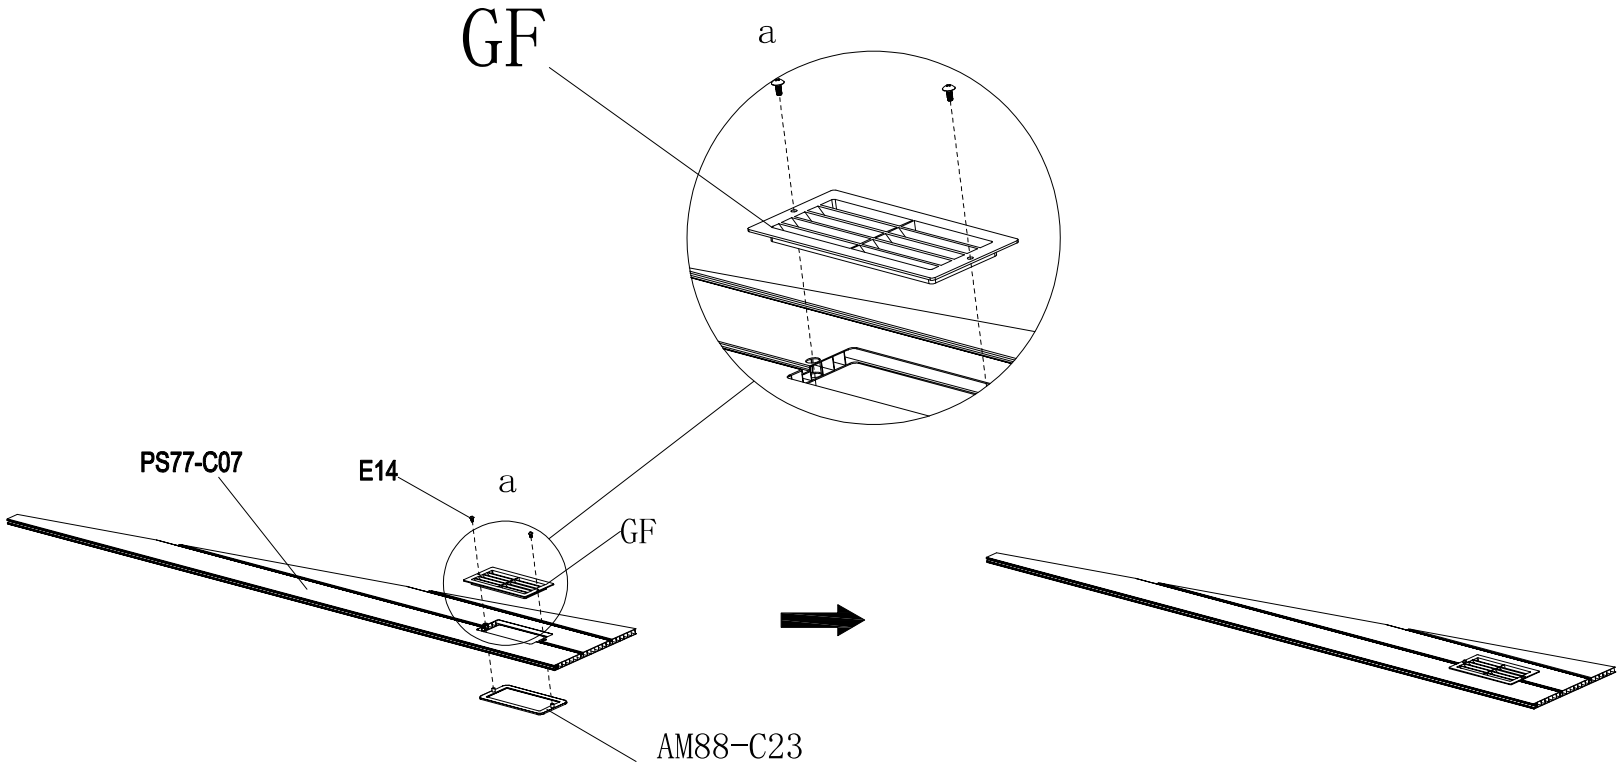




PS77-C10 x6




PS77-C21 x5




(ST4.2x12)
E02x40


Roof Pre-assembly

I

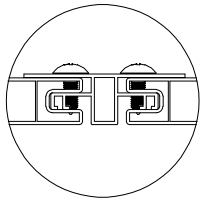


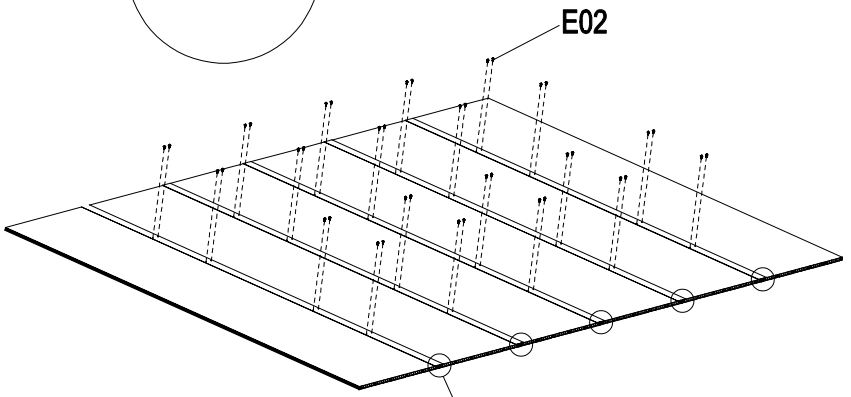


PS77-C10

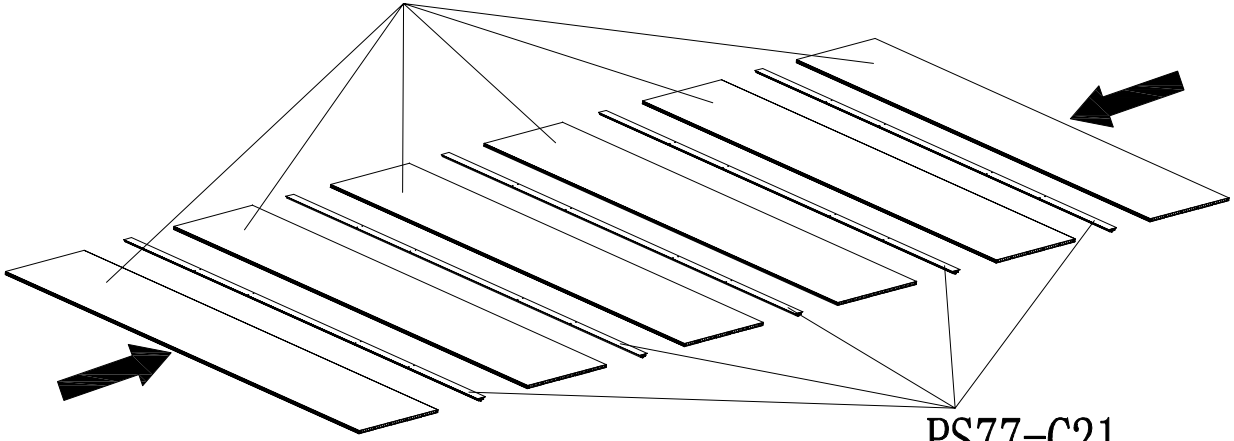

PS77-C21

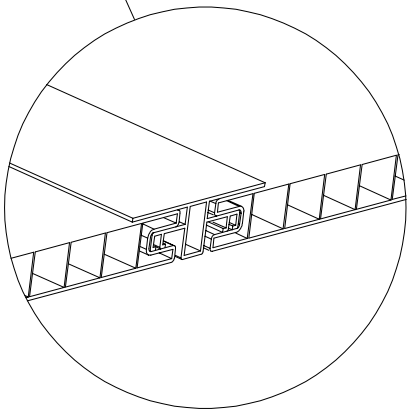

Tips: Pay attention to the front and back side of parts



A x1




PS710-A06x2




PS710-A07x2




PS77-A11x2




A64-C30x1





F35-C27x4




(ST4.2x12)
E02x40




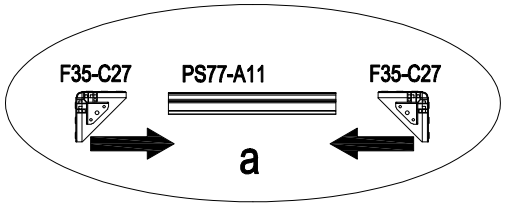

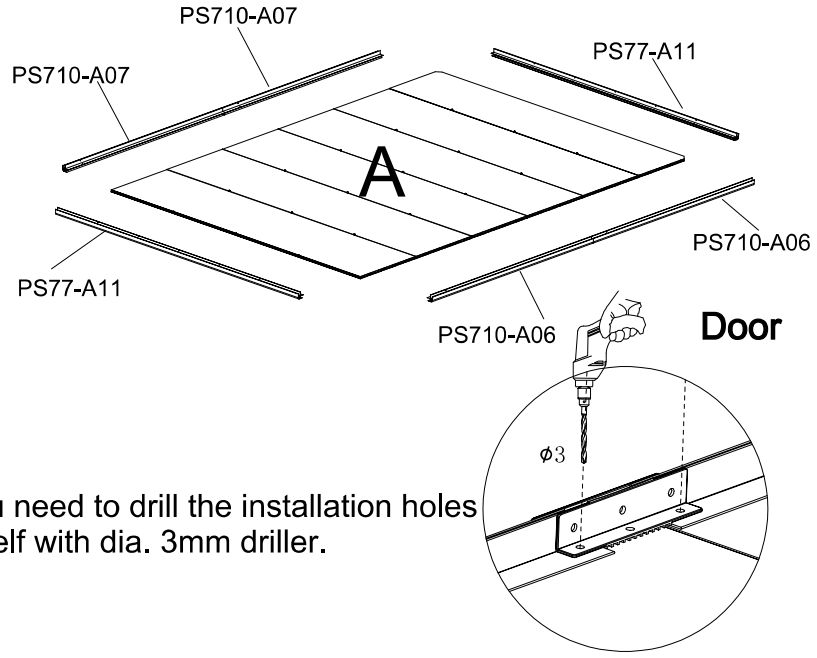

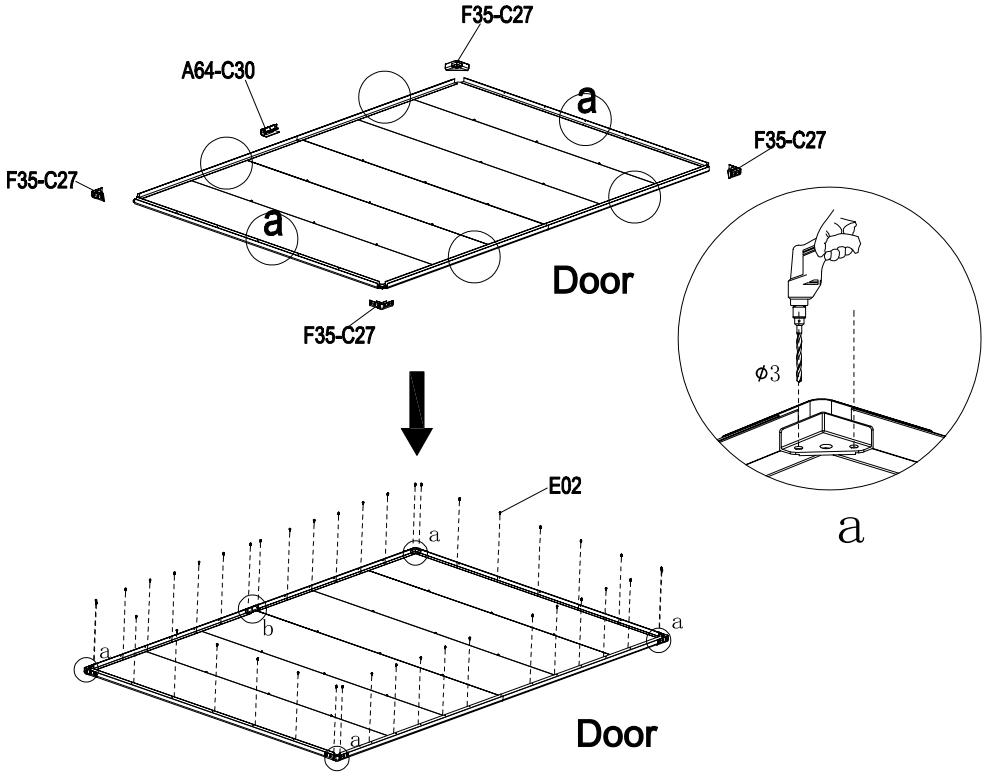



Tips: You need to drill the installation holes byyourself with dia. 3mm driller.




E04x5

Note:Please kindly confirm the diagonal distance "X" of the basement should be same before assembling the screws.

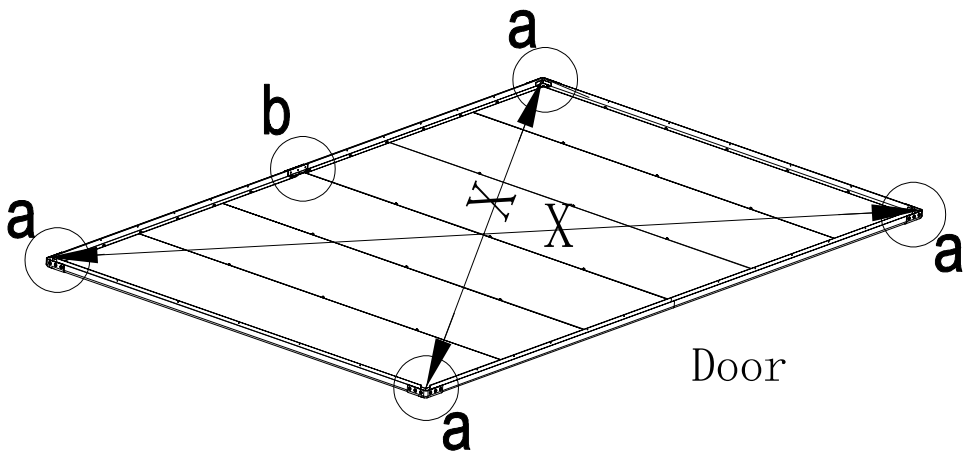


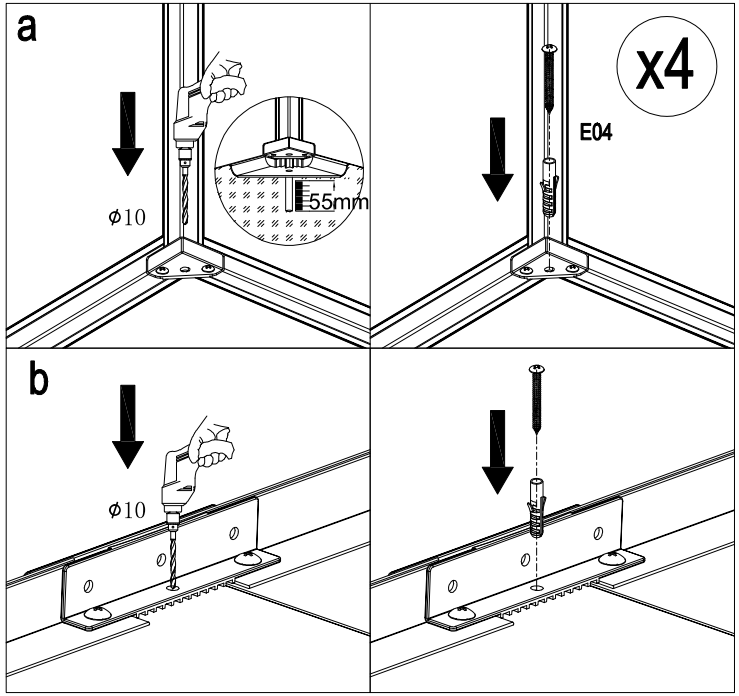

Tips: You need to drill the installation holes by yourself with dia. 10mm driller.

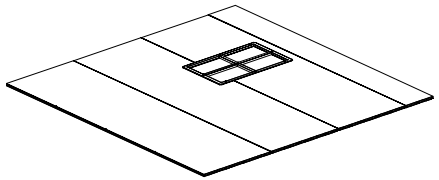

C x1

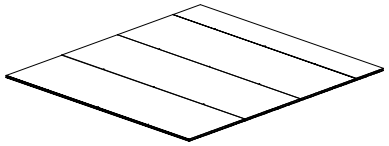



D x1




PS77-A13x1


Tips:Please note the small panel PS710-C03 is upward

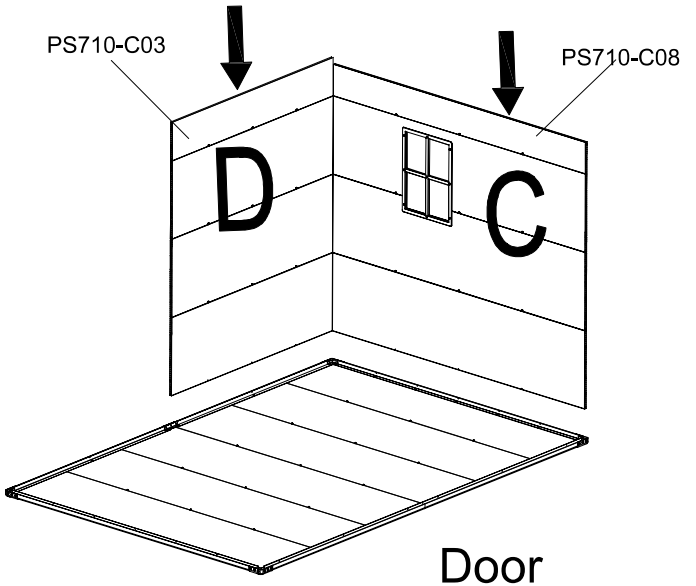

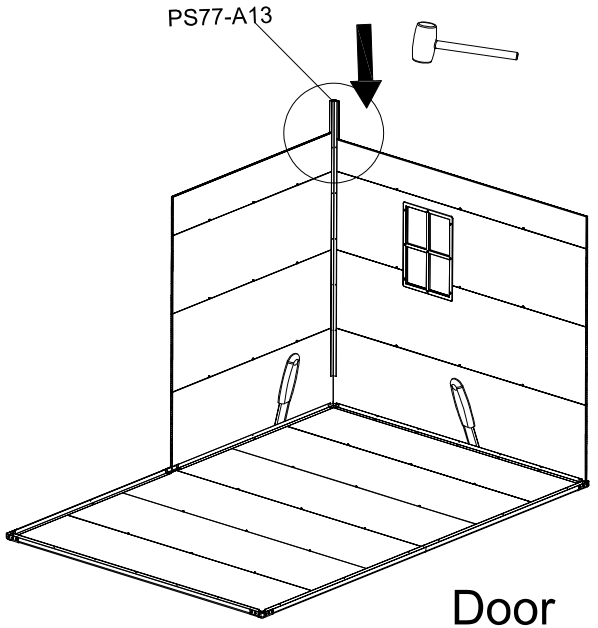





Please use rubber-knife to helping assembly.




(ST4.2x12)
E02x10

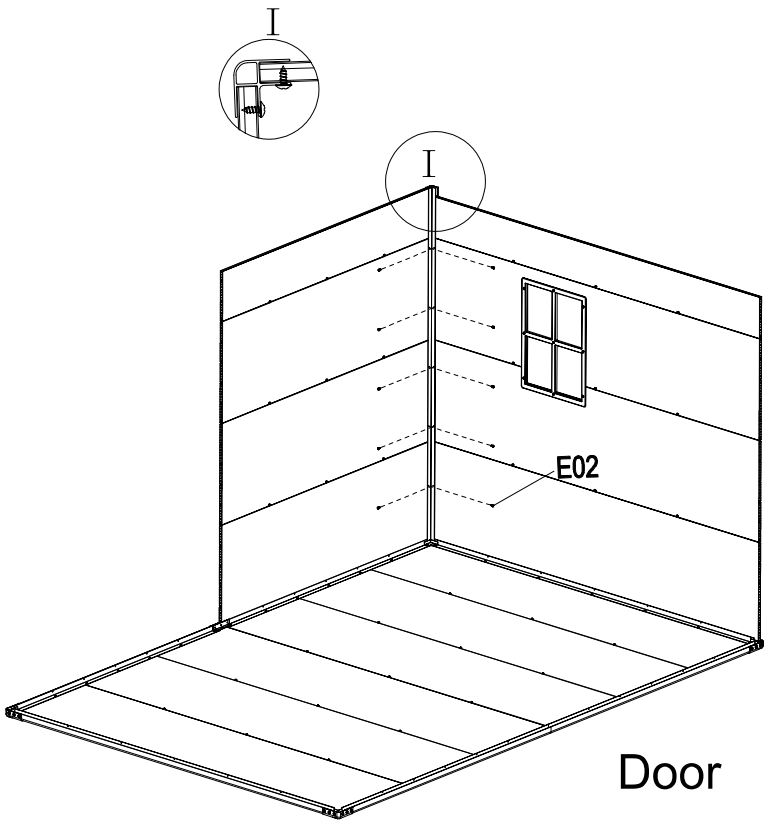

Door

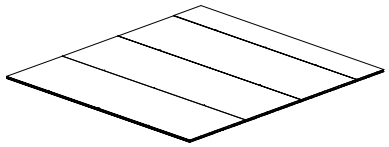



D x1




PS710-A10 x1

Tips:Please note the small panel PS710-C03 is upward

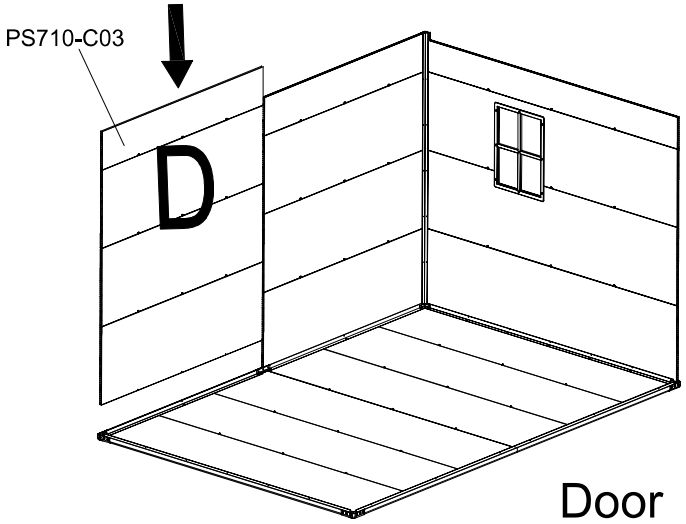


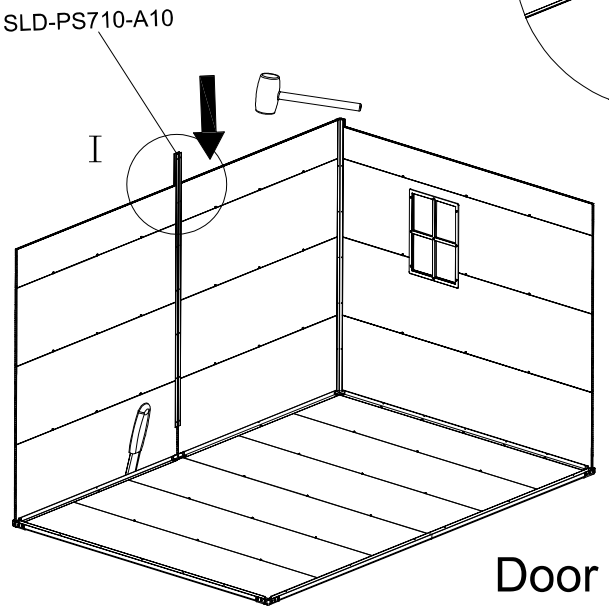

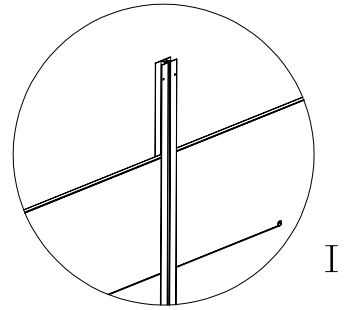




Please use rubber-knife to helping assembly.

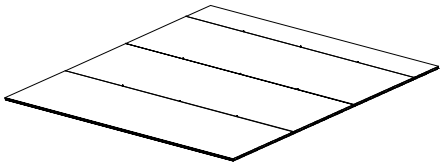


B x1



PS77-A13x1

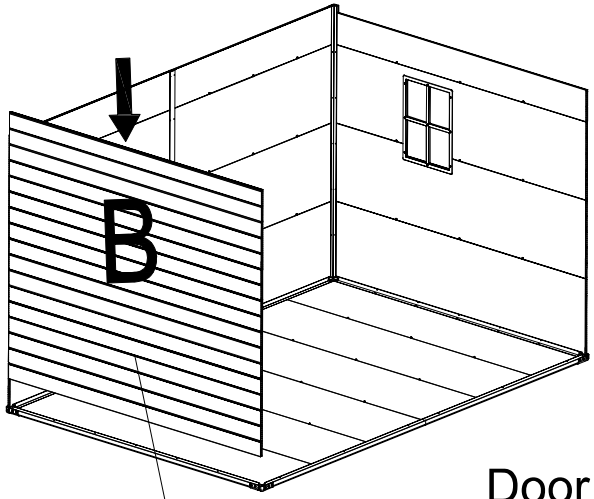


Door

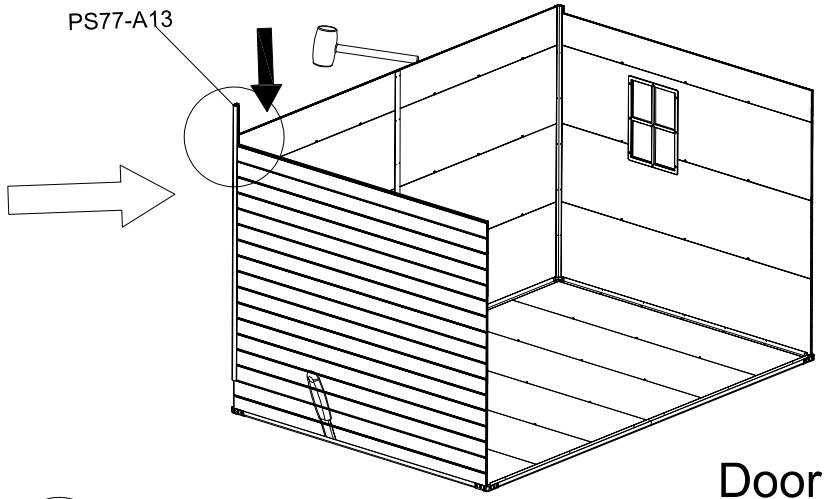


Door

The back of the board

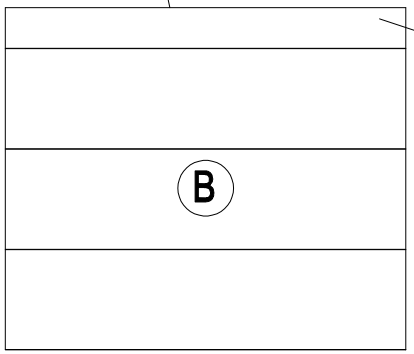


PS77-C04




Please use rubber-knife to helping assembly.


Tips:Please note the small panel PS77-C04 is upward

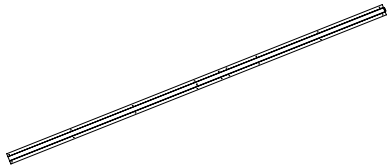


PS710-A04x1




（ST4.2x12）
E02x36

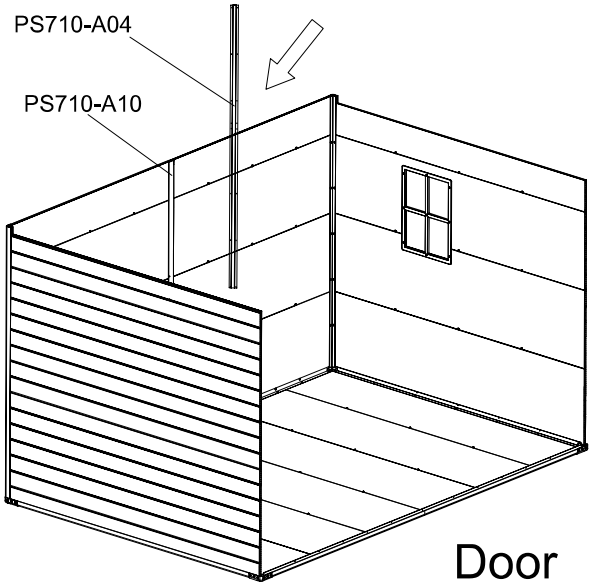


Door

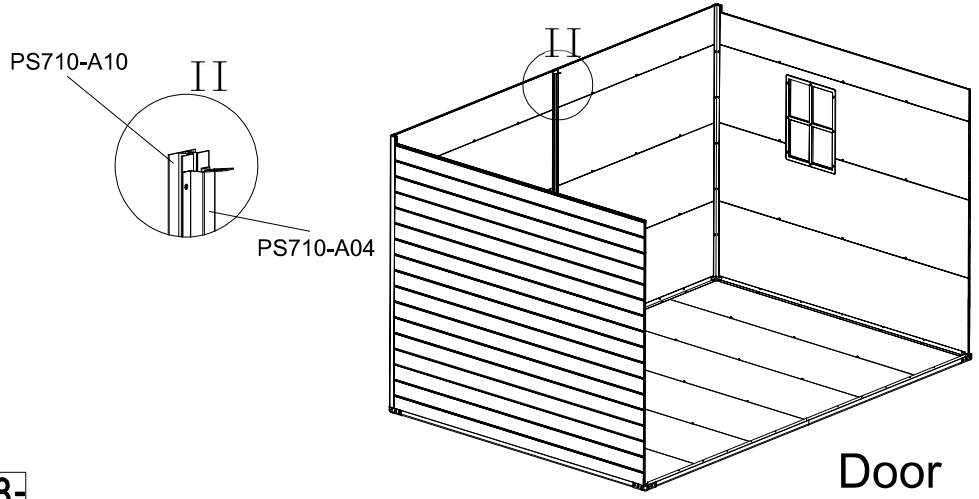

Door

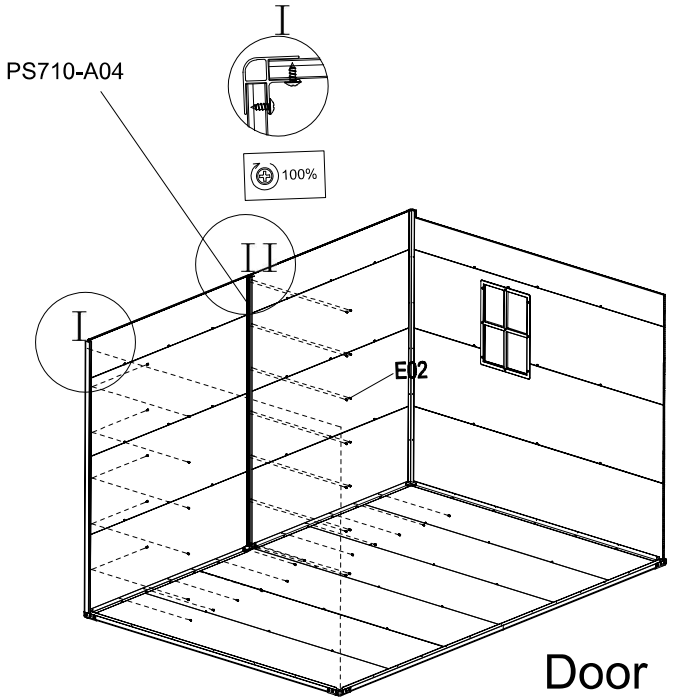


Door



Ex1




PS710-A38 x 1

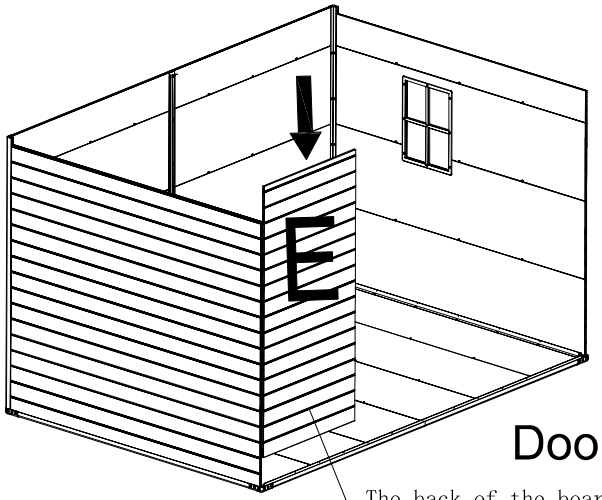


Door

The back of the board


PS710-C05

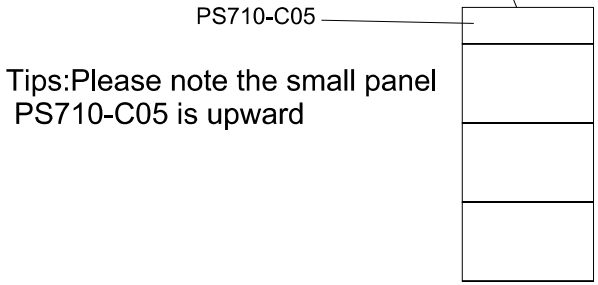


Tips:Please note the small panel
PS710-C05 is upward




Please use rubber-knife to helping assembly.

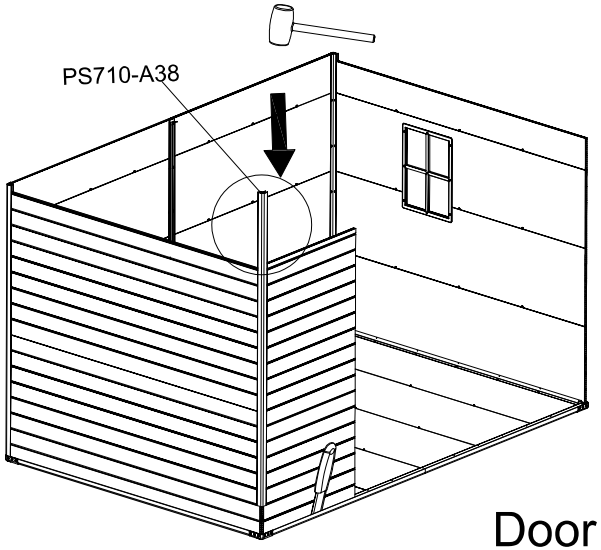


Door



（ST4.2x12）
E02x10

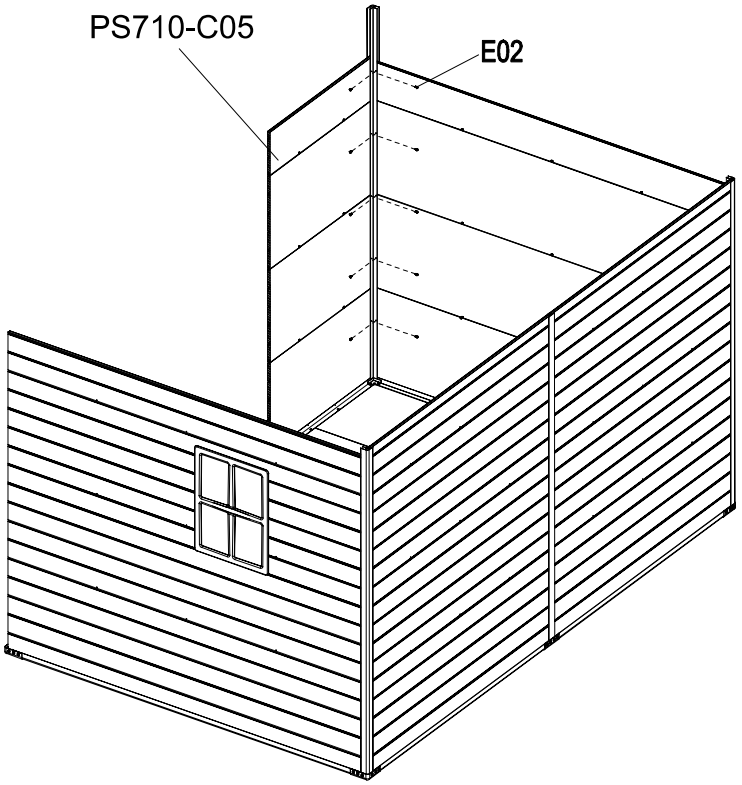




Ex1




PS710-A38

The back of the board


Tips:Please note the small panel
PS710-C05 is upward

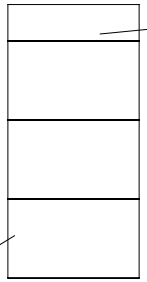


PS710-C05

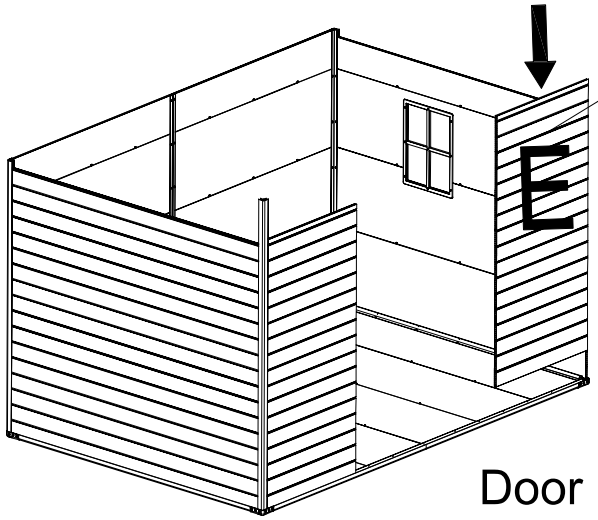


Door

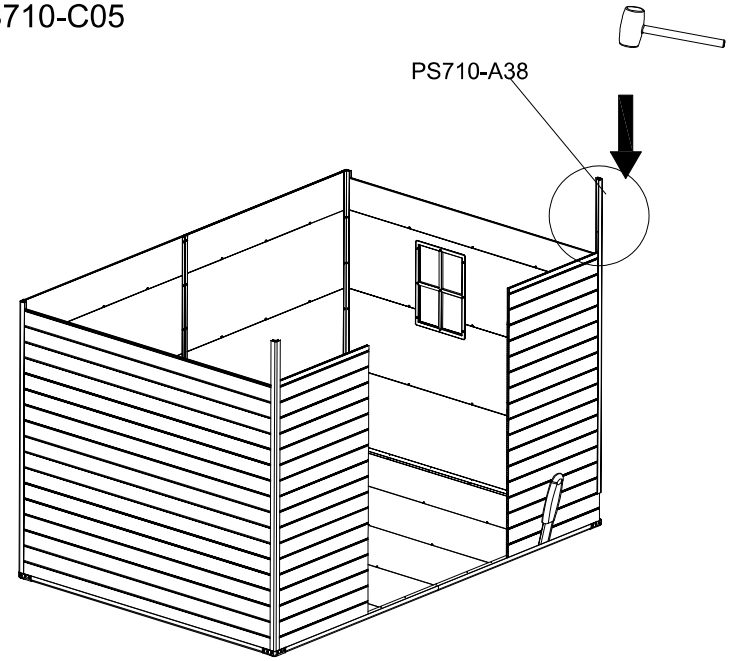


PS710-A38




Please use rubber-knife to helping assembly.




（ST4.2x12）
E02x10

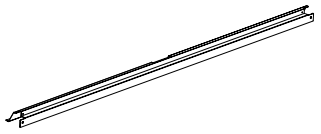


AM88-A04x1

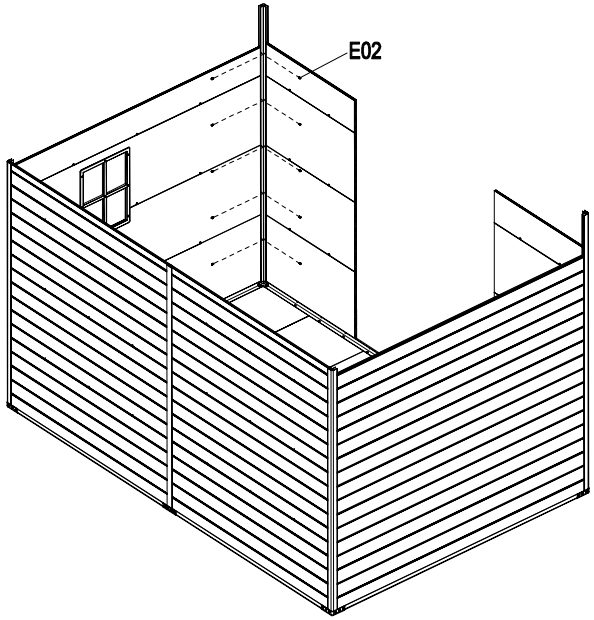


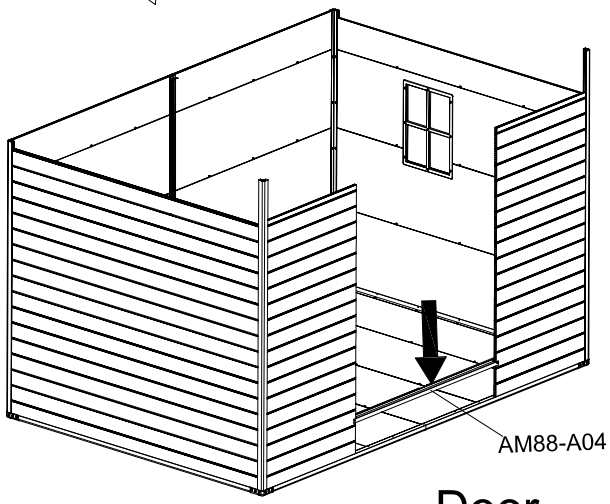

Door

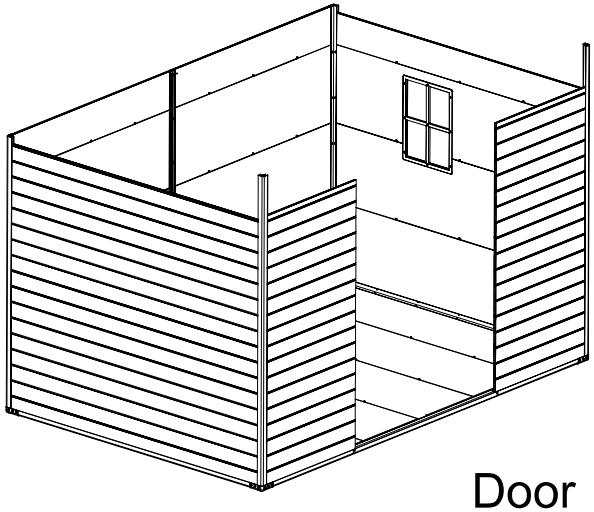



Door




（ST4.2x12）


E02x21

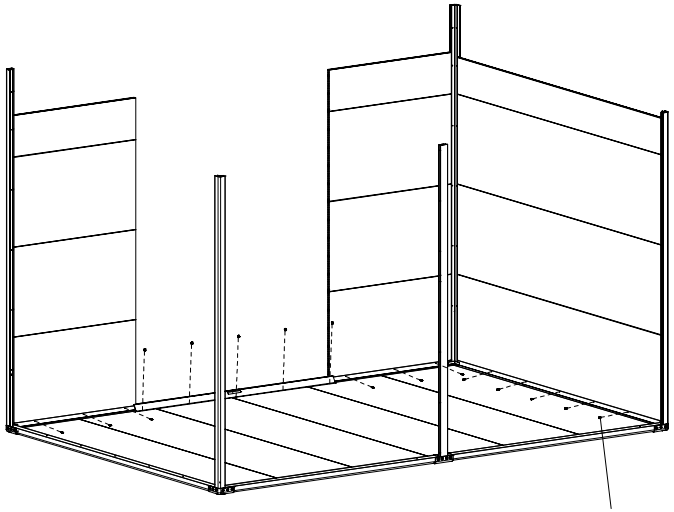

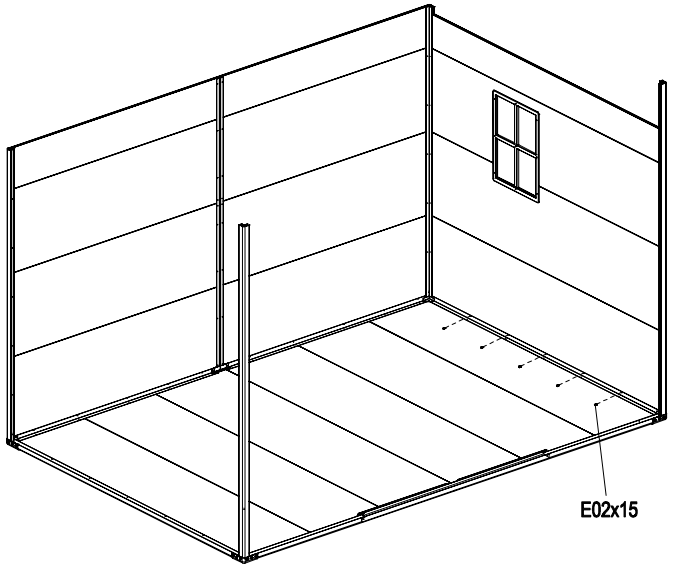


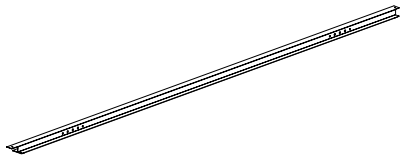


PS77-A01 x1

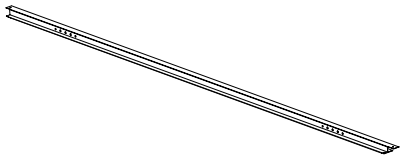



PS77-A02 x1

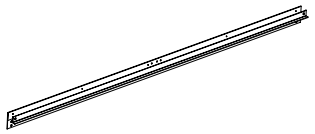

PS710-A12 x1

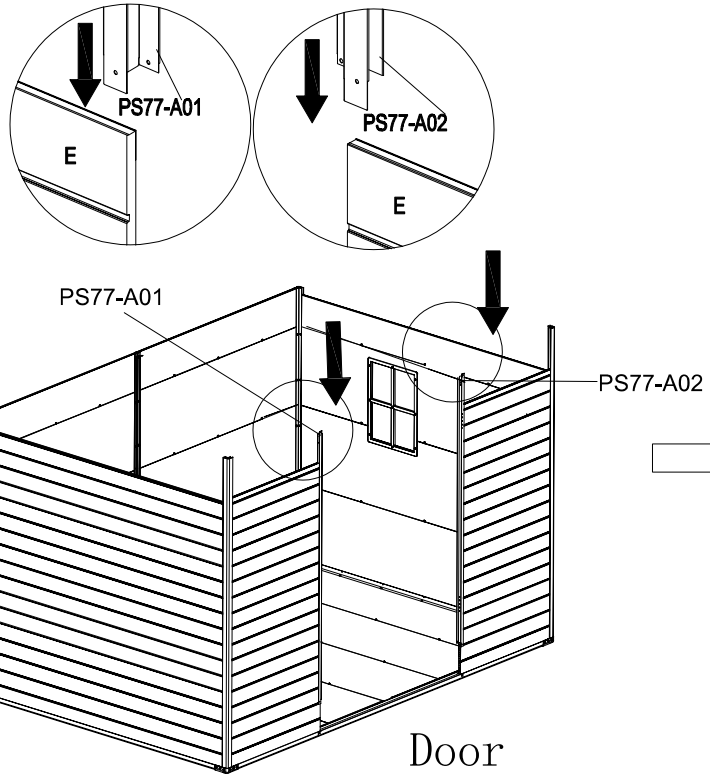

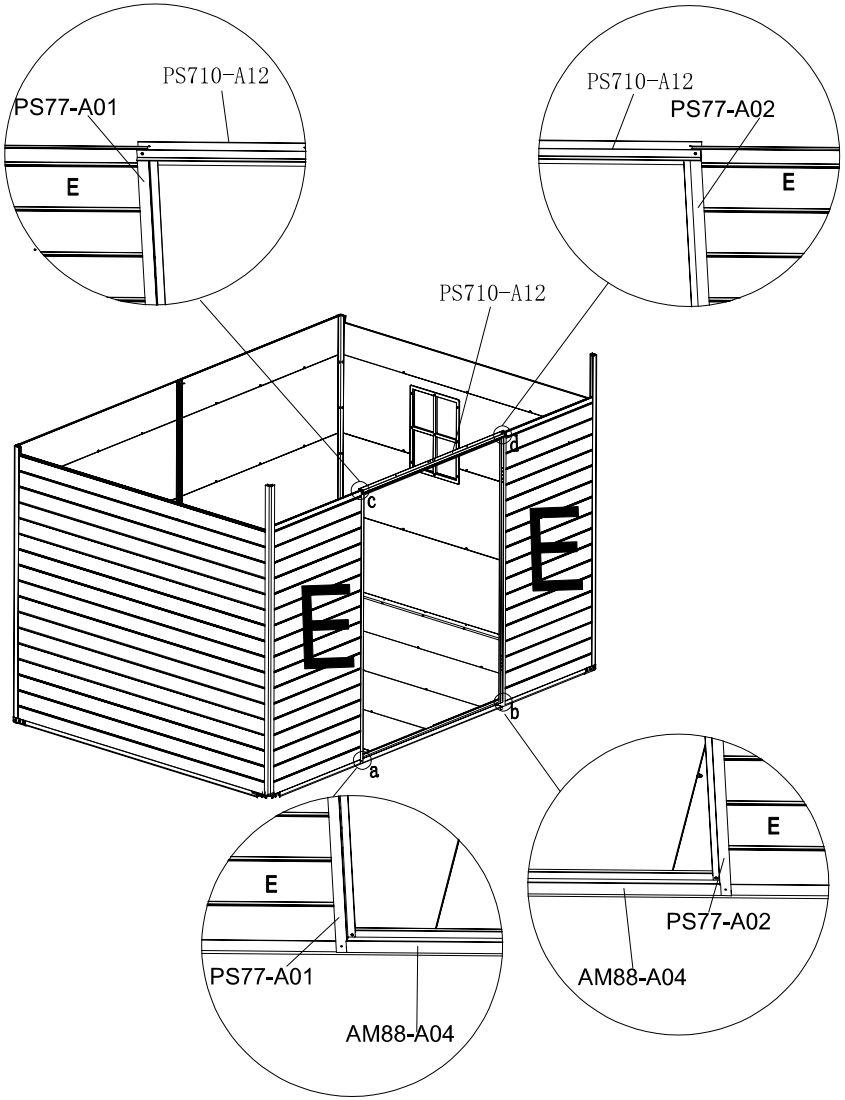


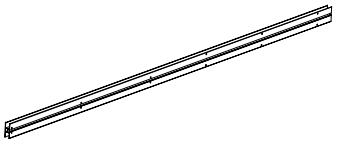


PS710-A09 x2





PS710-C36 x2



PS710-A11 x1

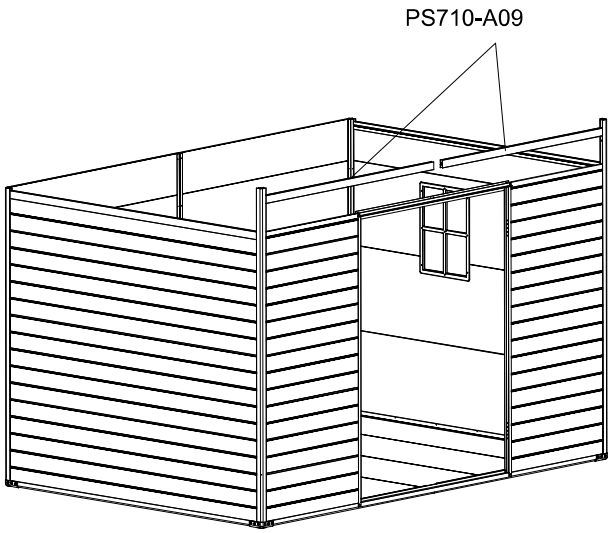


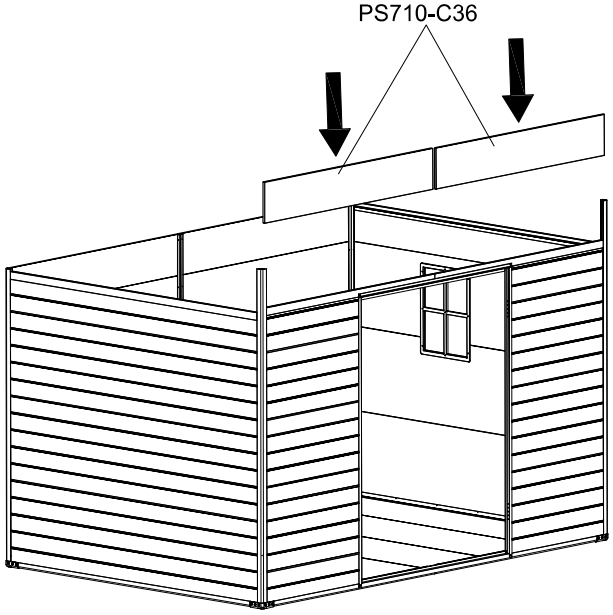

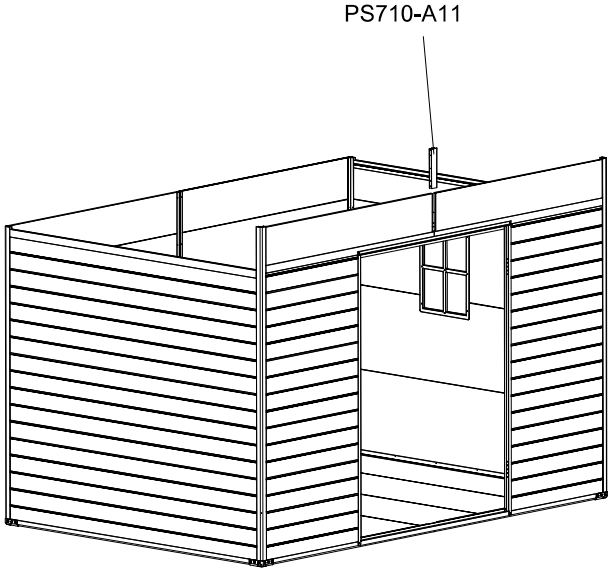





PS710-A25 x10




(ST4.2x12)
E02x40


Holes Alignment

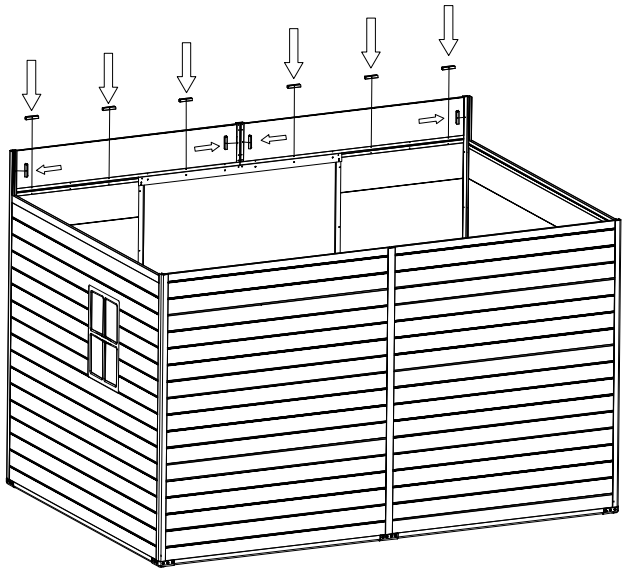

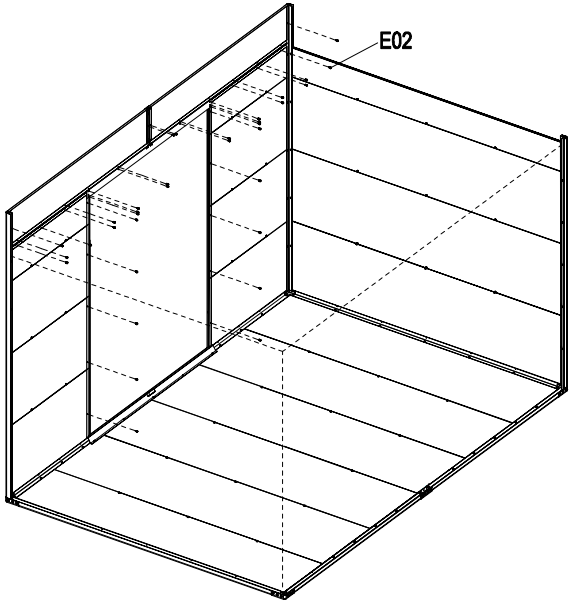


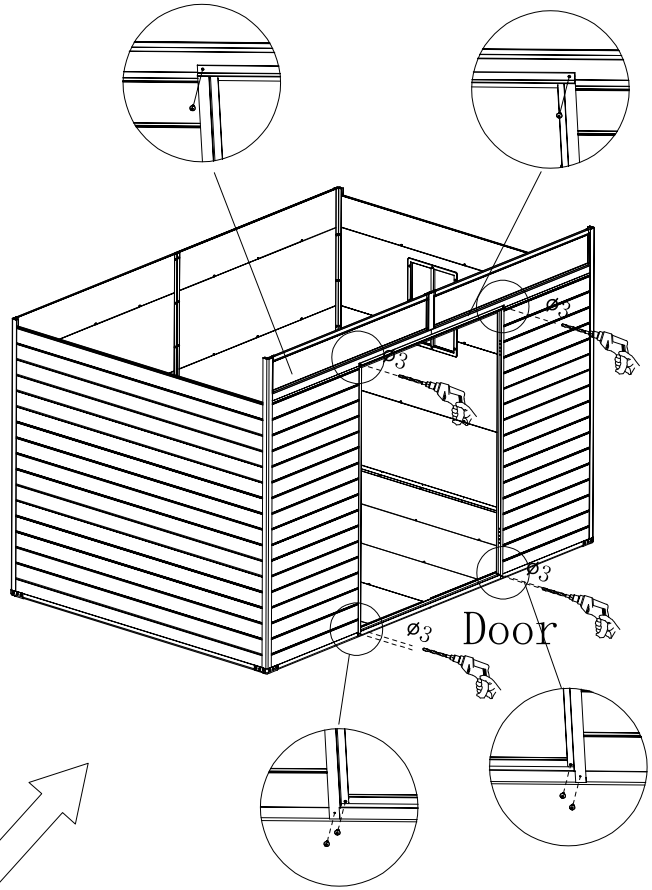


Tips: You need to drill the installation holes by yourself with dia. 3mm driller.

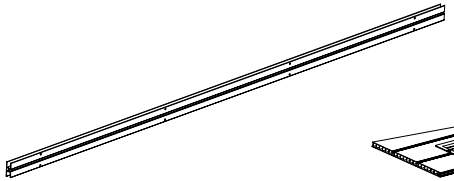


PS77-A19 x2

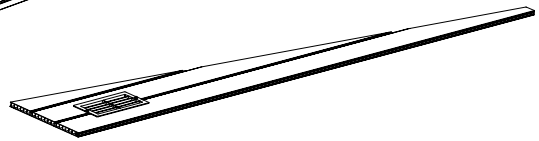

G1 x1

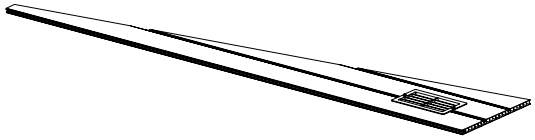


G2 x1




(ST4.2x12)
E02x16

Note: The wider side of part PS77-A19 must face outside

SLD-PS77-A19

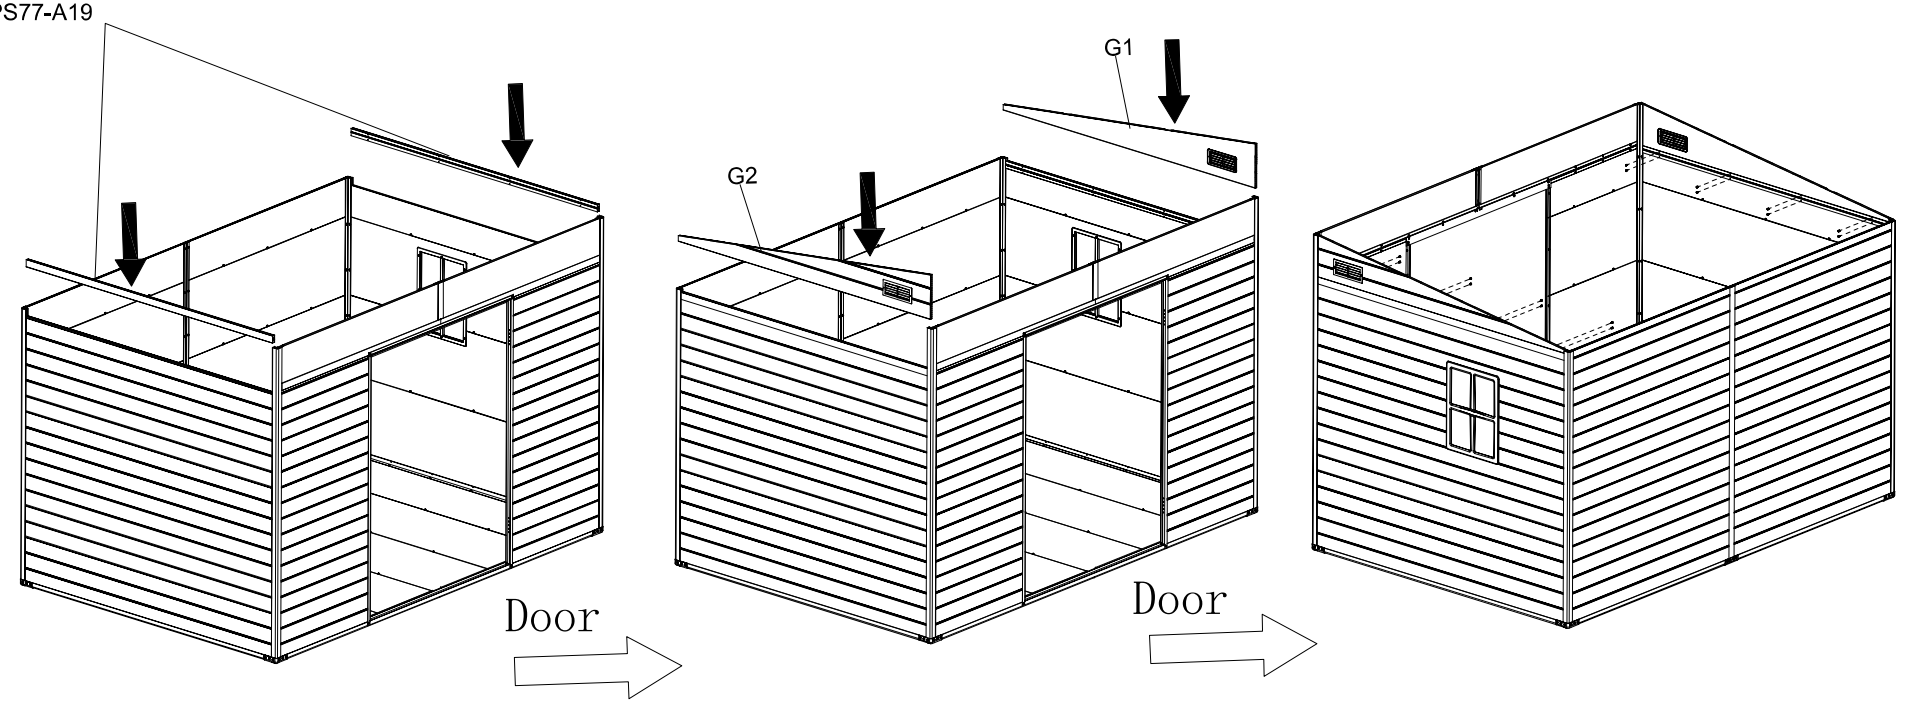




PS710-A18 x2



(ST4.2x12)

E02x32

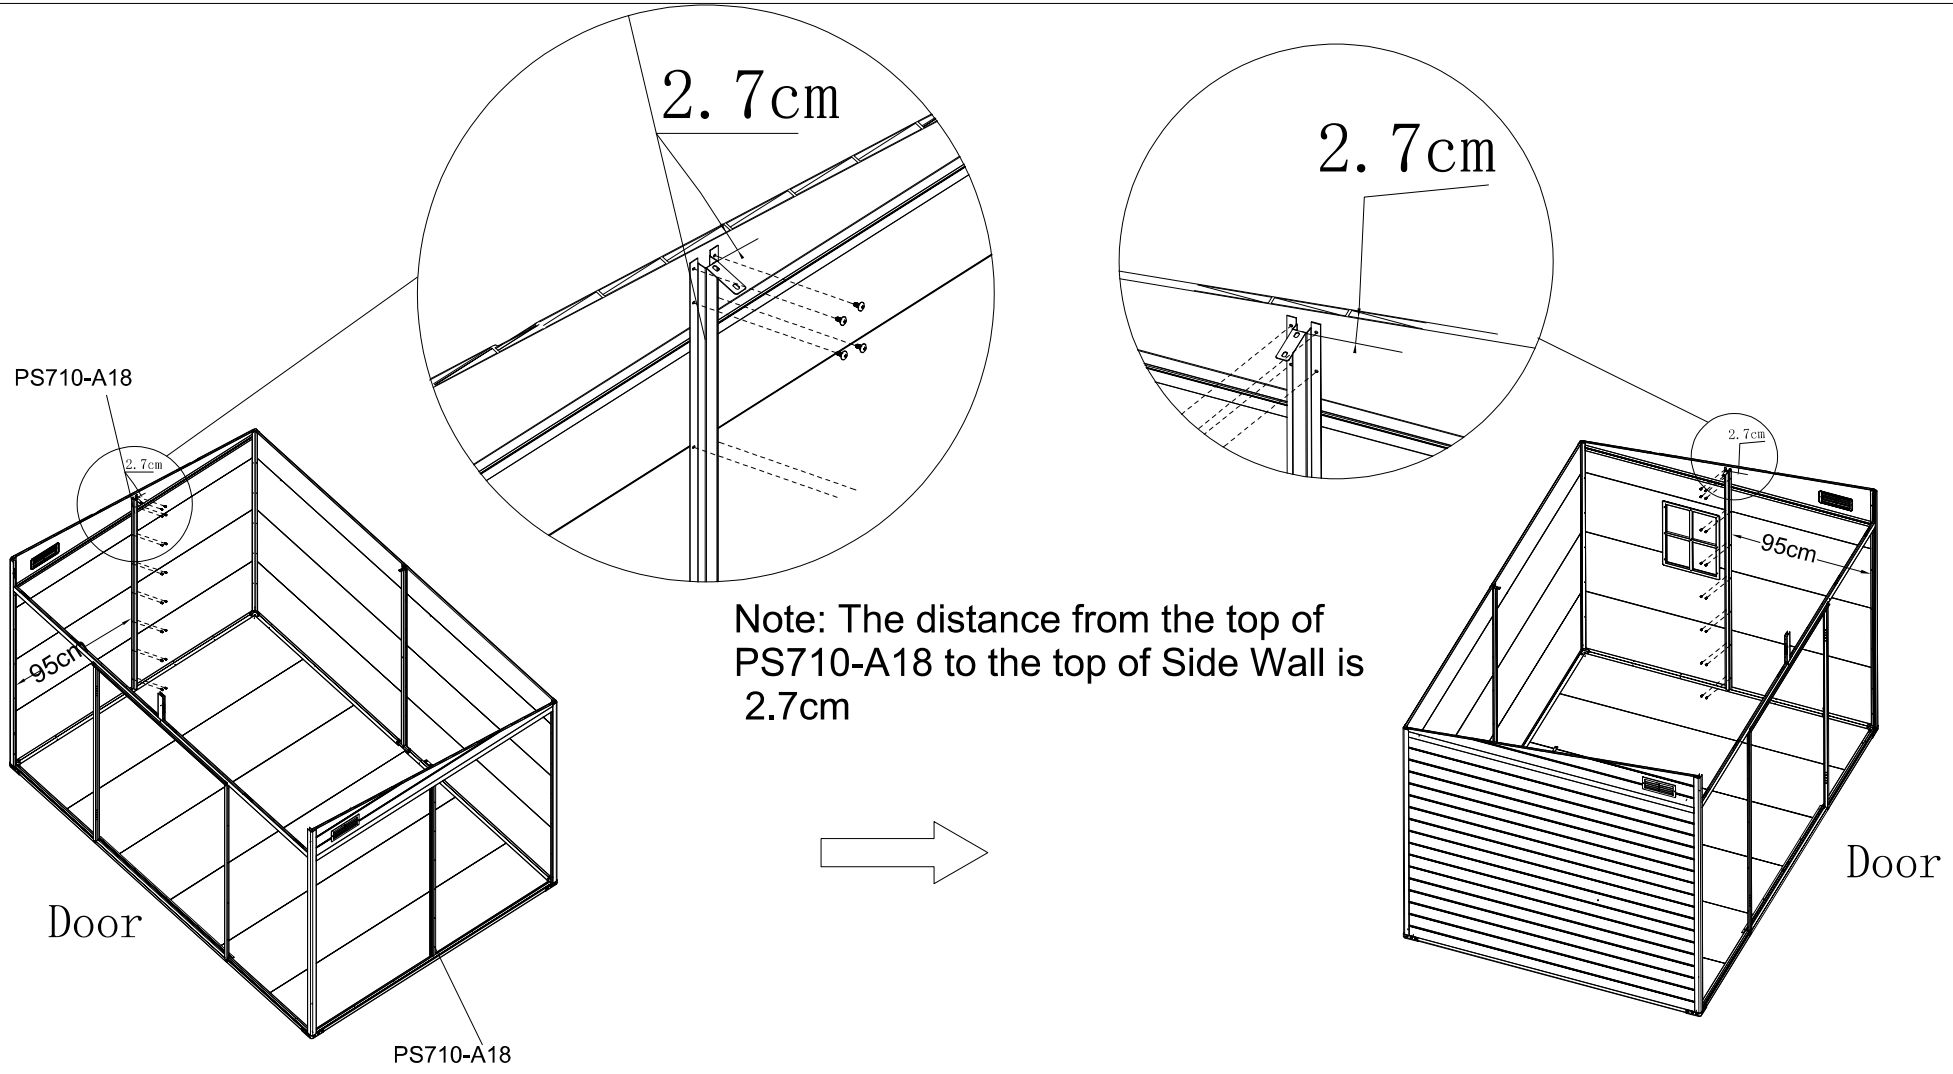





PS710-A01 x1




PS77-A09 x1

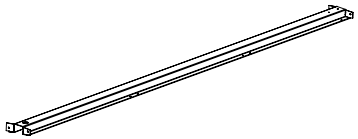

PS710-A02 x1

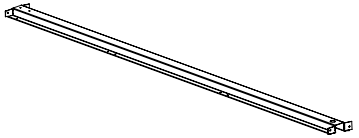

PS710-A03 x1

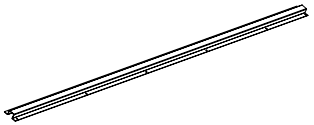



PS710-A05 x2



(ST4.2x12)

E02 x40

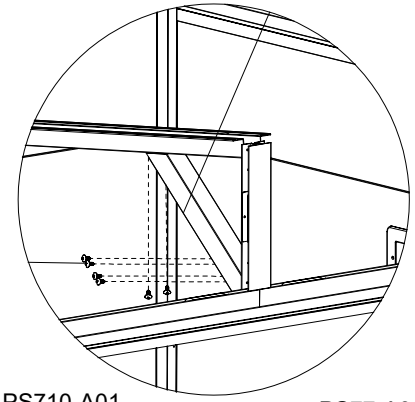

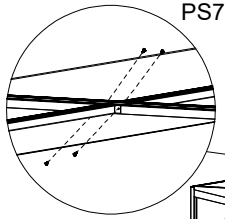

PS710-A03

PS710-A02

E02

PS710-A05

b

a


a

E02

PS710-A05


PS710-A01

PS77-A09

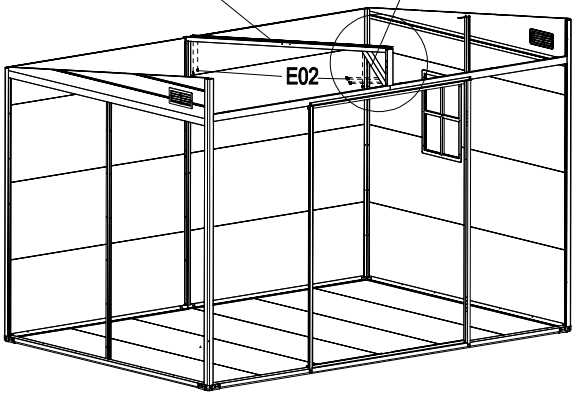


E02

Door

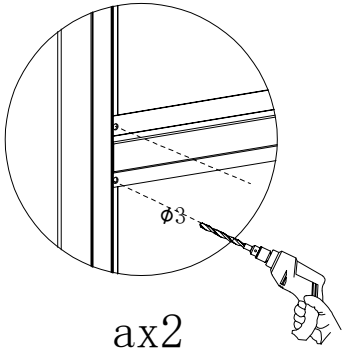


ϕ3

ax2

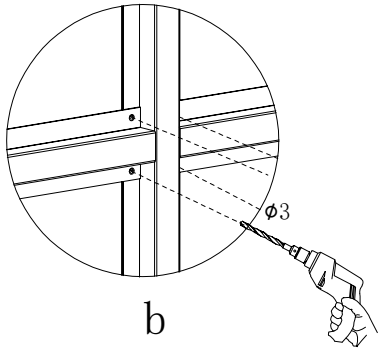

ϕ3


b

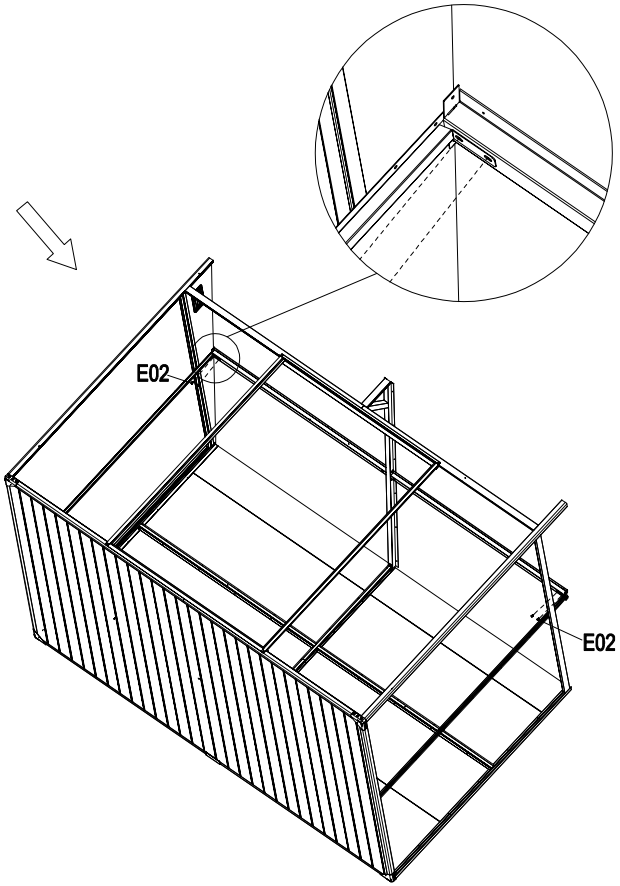


E02

E02


Tips: You need to drill the installation holes by yourself with dia. 3mm driller.




PS710-C10 x2




PS77-C18 x2




PS710-C35 x2

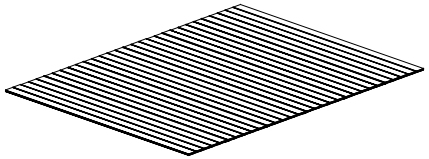


I x1




(ST4.2x12)
E02x6

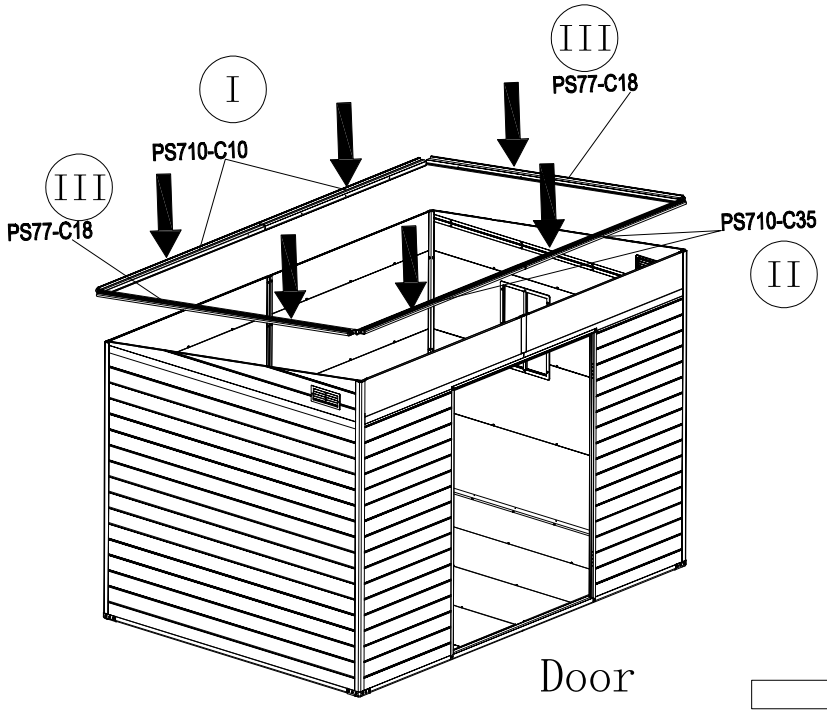


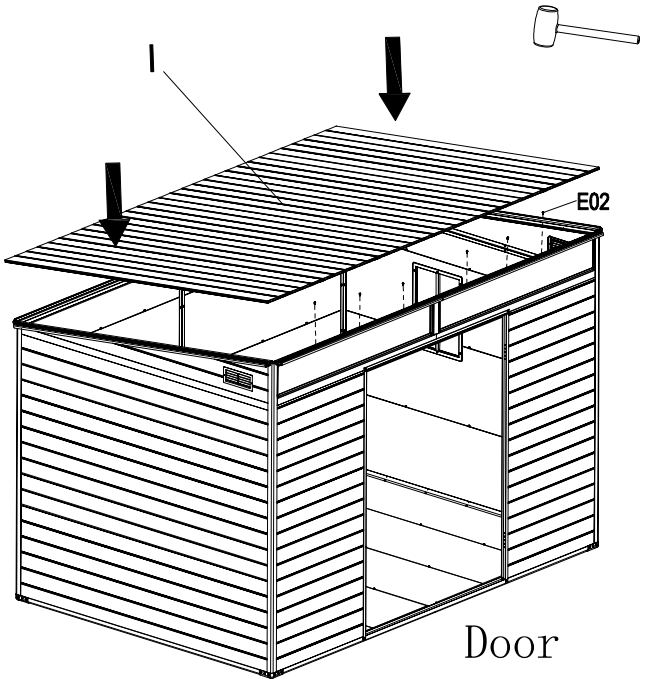


Attention！ Direction

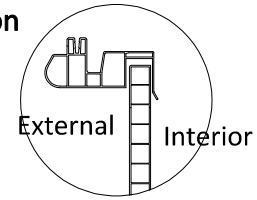


Note：Before putting the roof "I" on the shed,
You should tighten the screws at first.

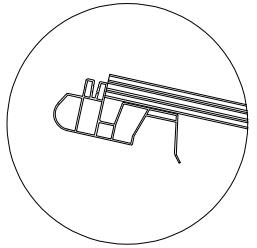





PS710-C11 x4




PS77-C20 x2



F35-C30 x4





A812-C26 **x 2**





(ST4.2x12)
E02x24


① Insert the PS710-C11 on the back wall
② Insert the PS710-C11 on the front wall
③ Insert the PS77-C20 on the two side wall

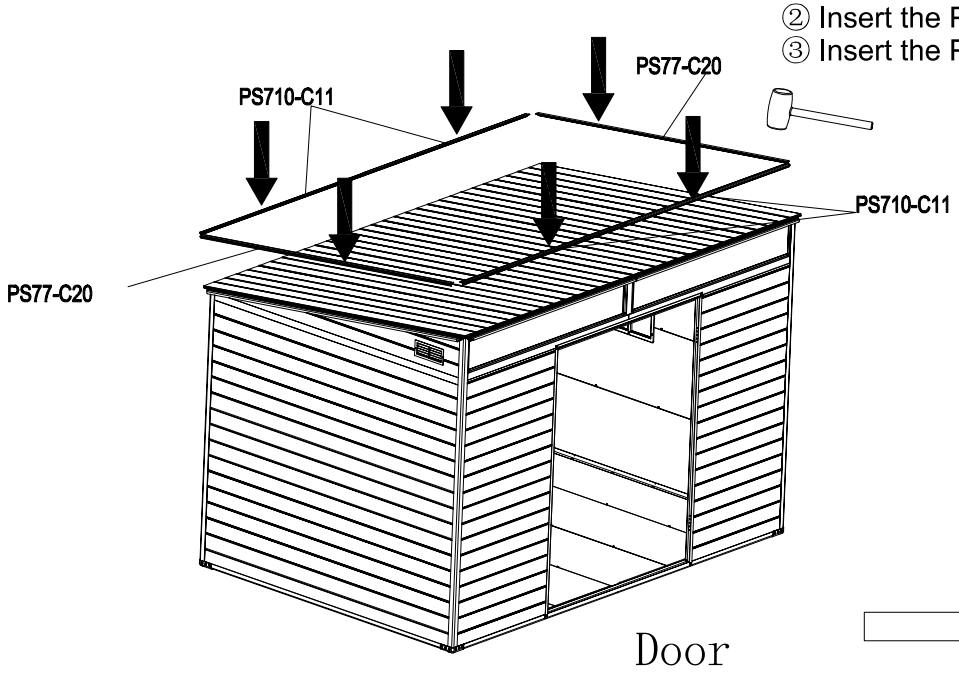


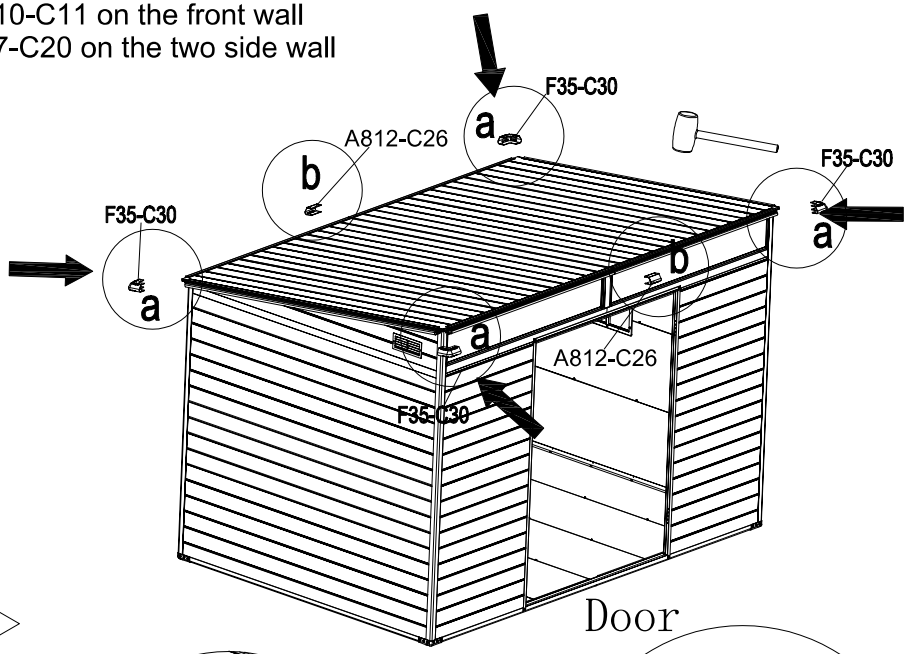

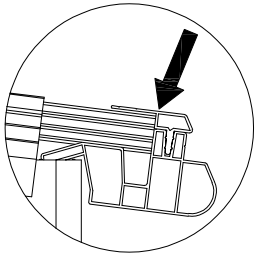


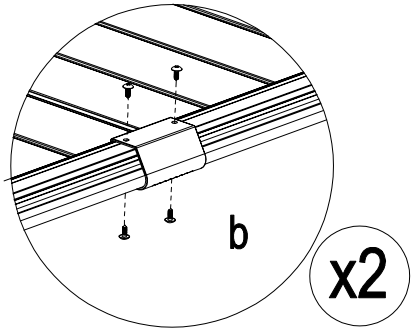

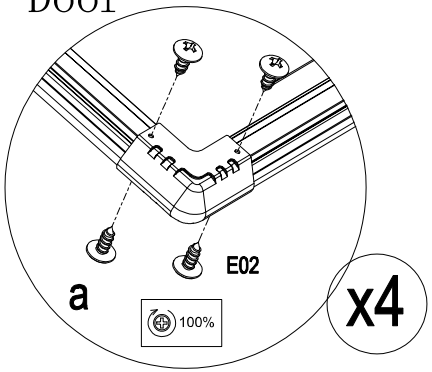





（ST4.2x12）
E02x32

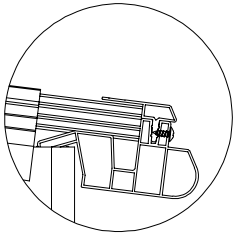



100%

Tips:Please note before twist the screws in the interior space, you should assembling the roof firstly.

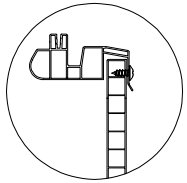


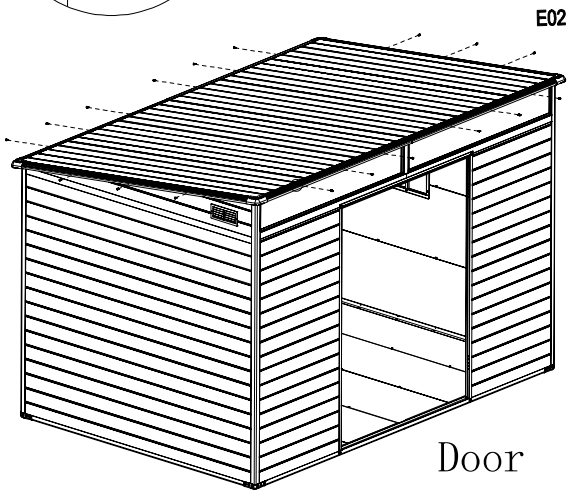

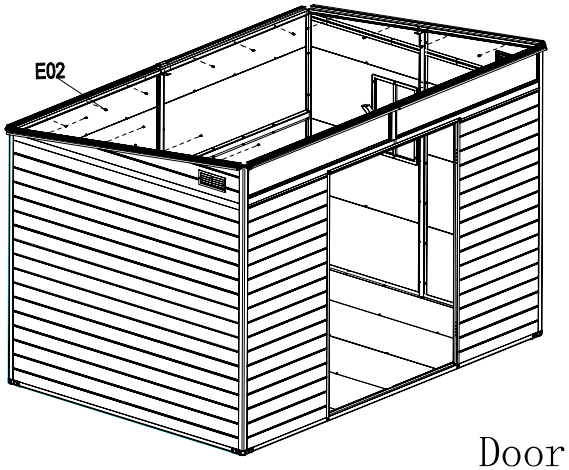





（ST4.2x12）
E02x32

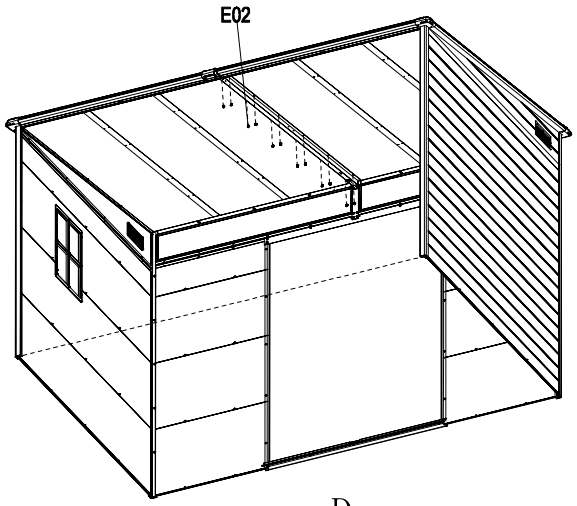


Door



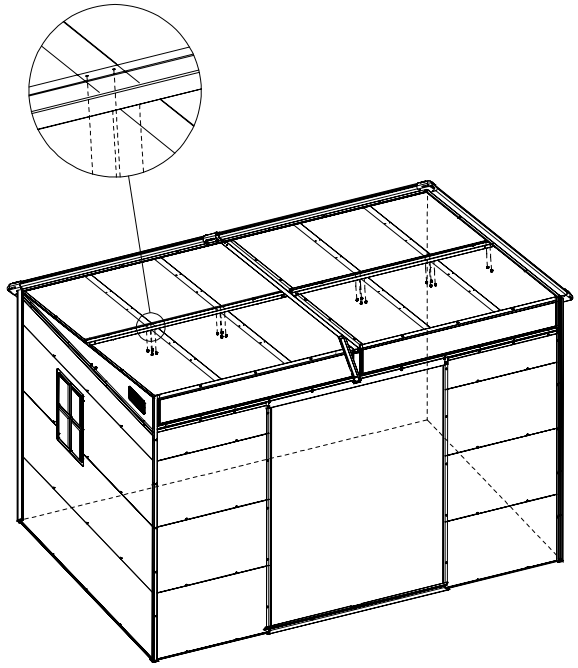


Door




M4*12


E12x12

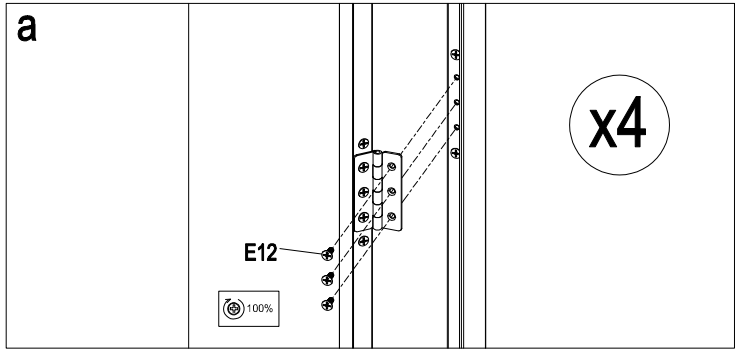


F1

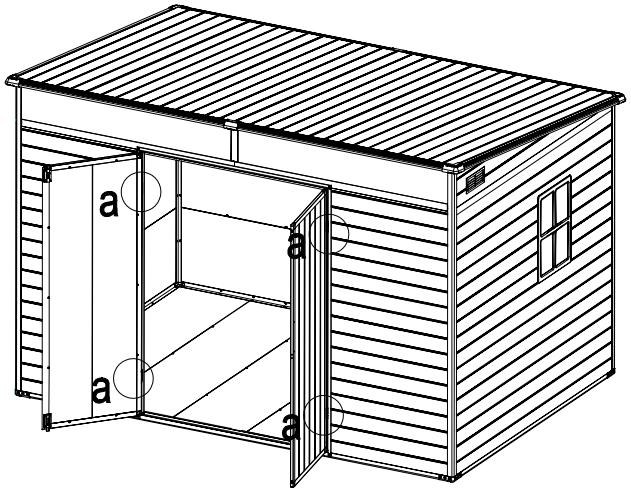


F2

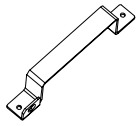


PS710-A13 x 1




PS710-A14 x 1




(ST4.2x12)
E02x4

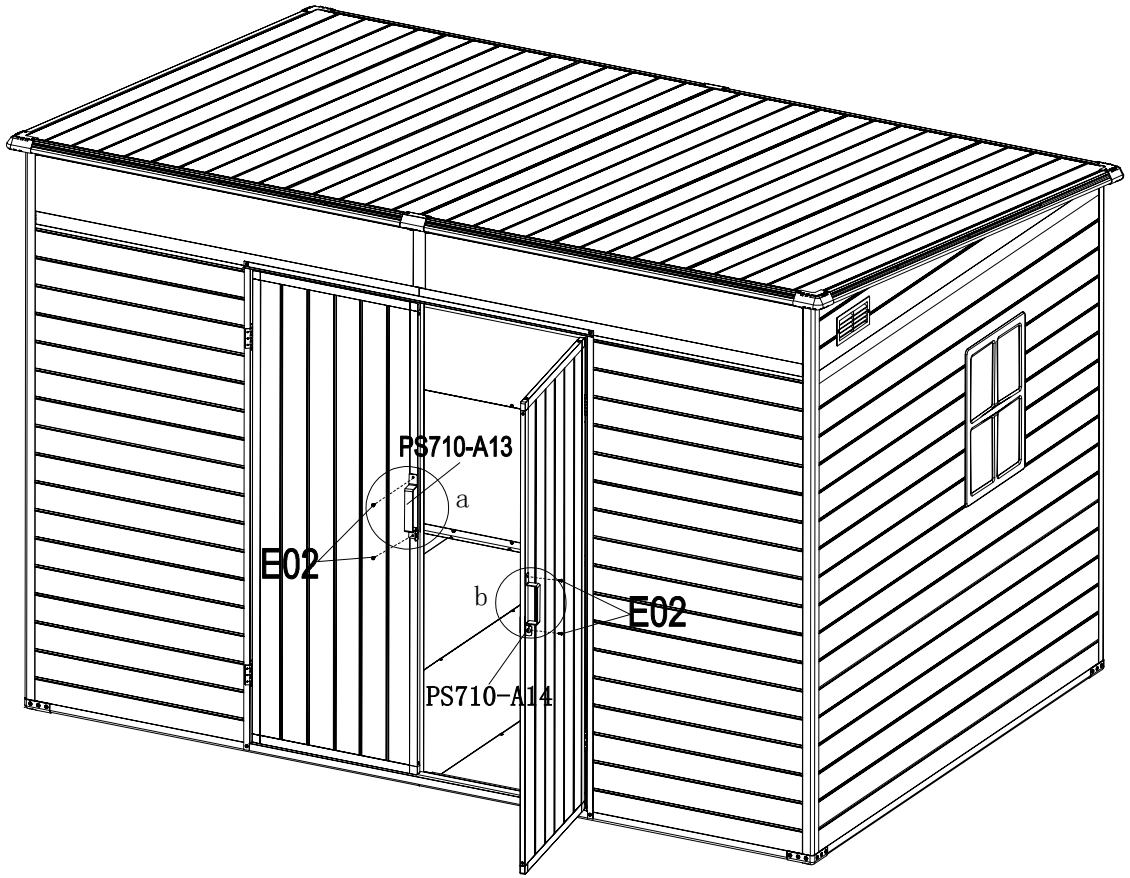


a

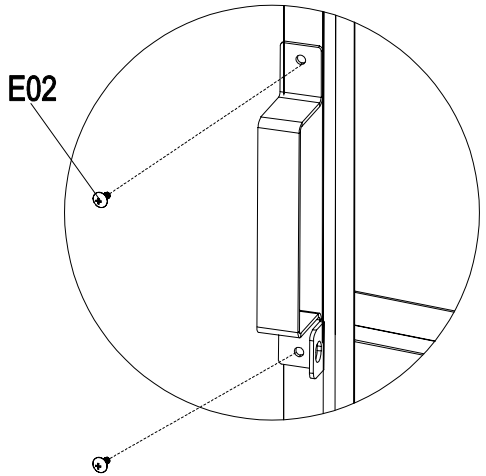



b

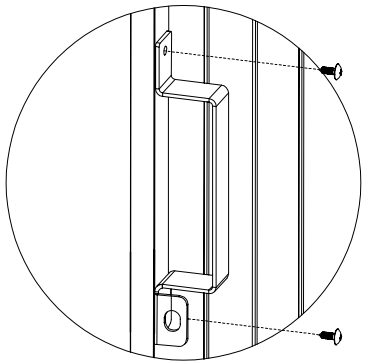




(ST4.8x19)
E03x28

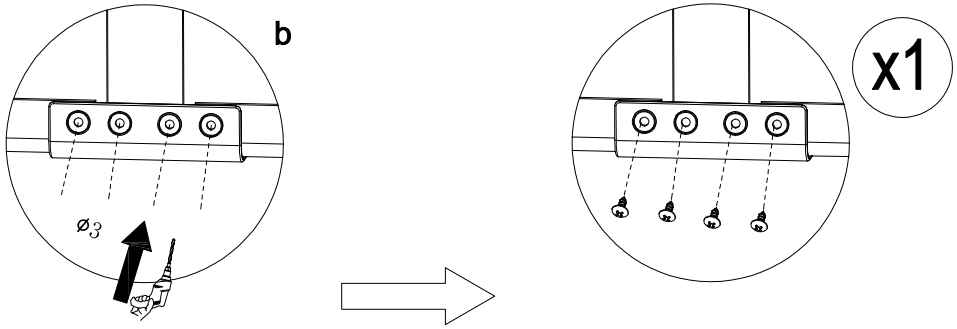

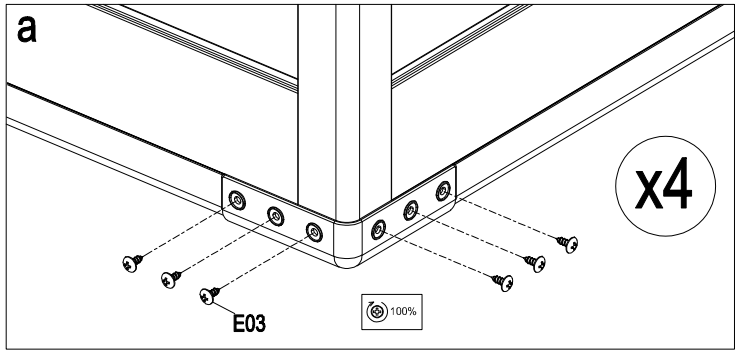

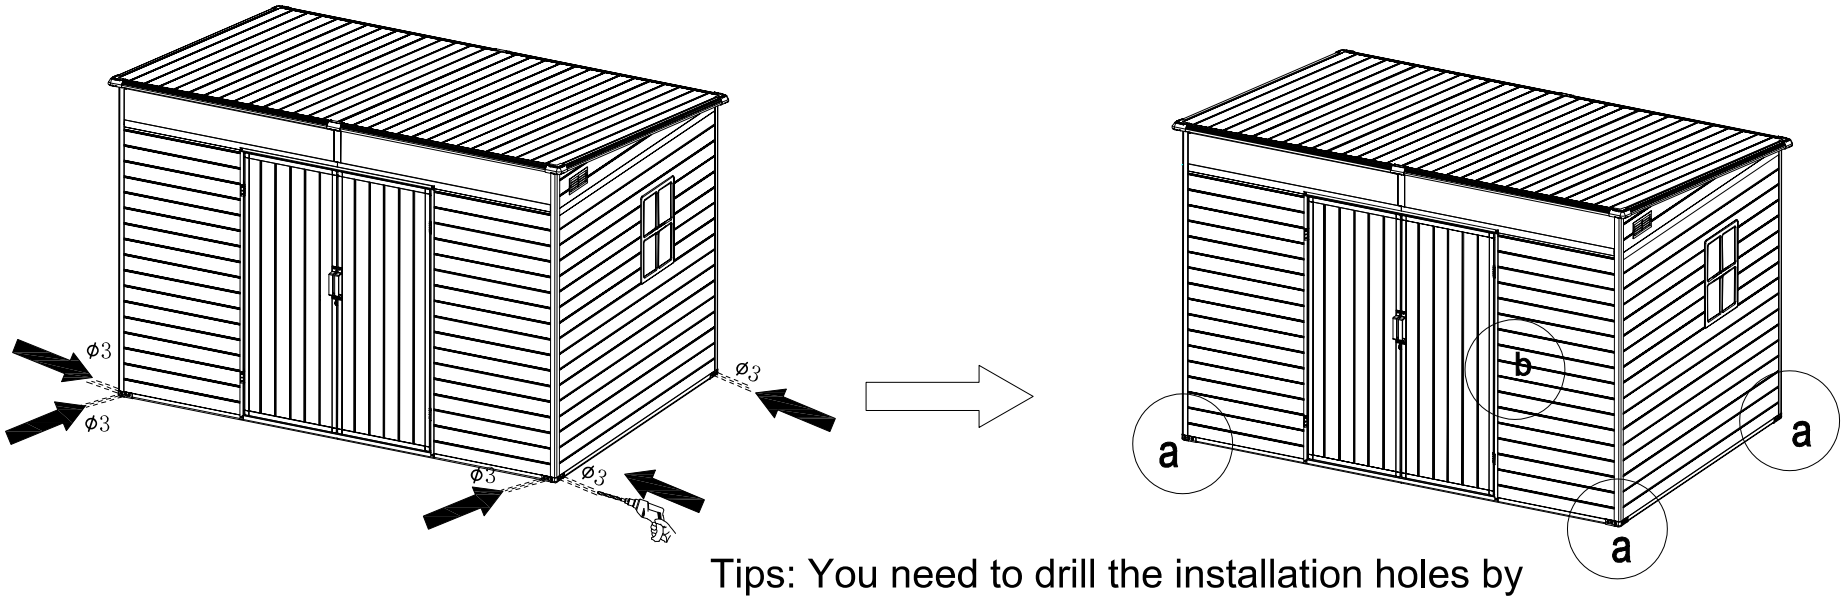

Tips: You need to drill the installation holes by yourself with dia. 3mm driller.