
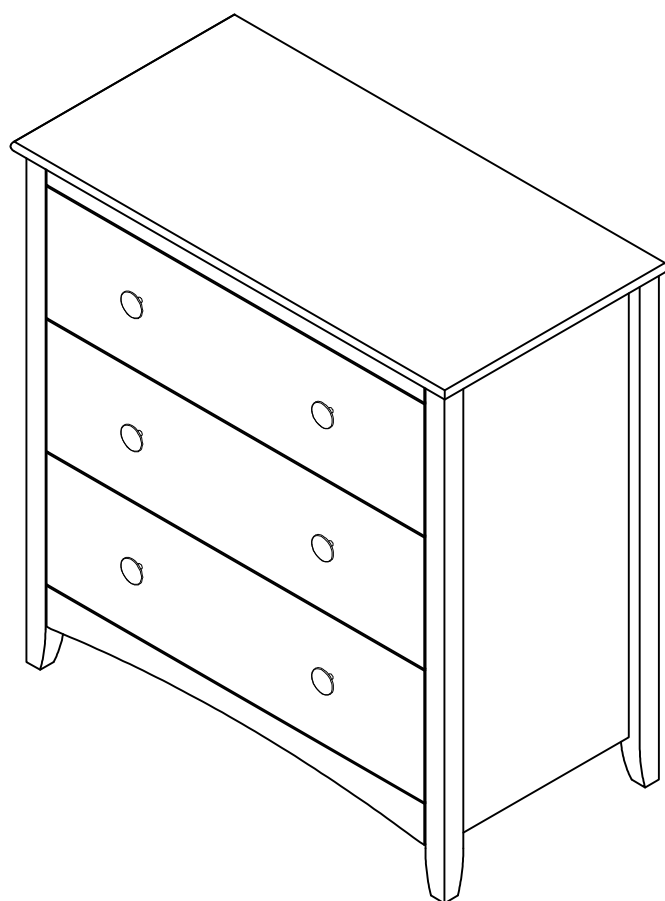
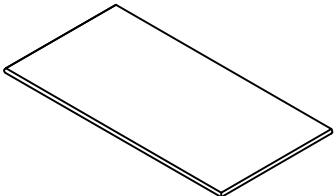
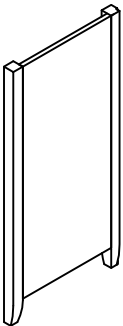
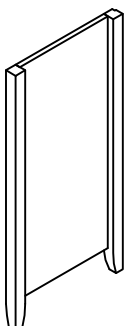
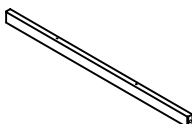
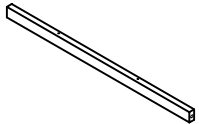
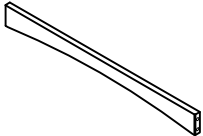
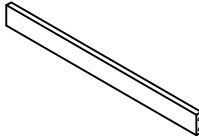
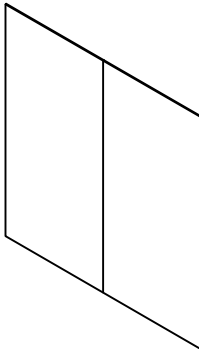
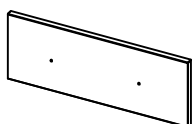







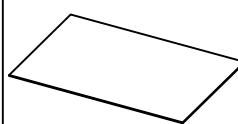



Parts for frame listing			
①  x1	②  x1	③  x1	④  x1
⑤  x1	⑥  x1	⑦  x1	⑧  x1

Parts for drawers listing


⑨  x3	⑩  x3	⑪  x3	⑫  x3	⑬  x3	⑭  x3
---	---	---	--	---	---

Hardware listing


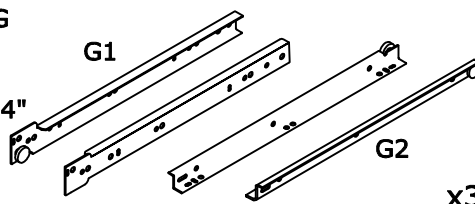
A Ø8x30mm  x8	B Ø6x35mm  x27	C Ø15x9mm  x27	D Ø3x13mm  x20	E  x6	
F M4x22mm  x6	G 14"  G1 G2 x3		k 250x25mm  x1	N  x1	
H Ø3x12mm  x24	I Ø4x35mm  x4	J Ø3x25mm  x18	M  x1	l Ø9x1mm  x2	O Ø4x50mm  x1

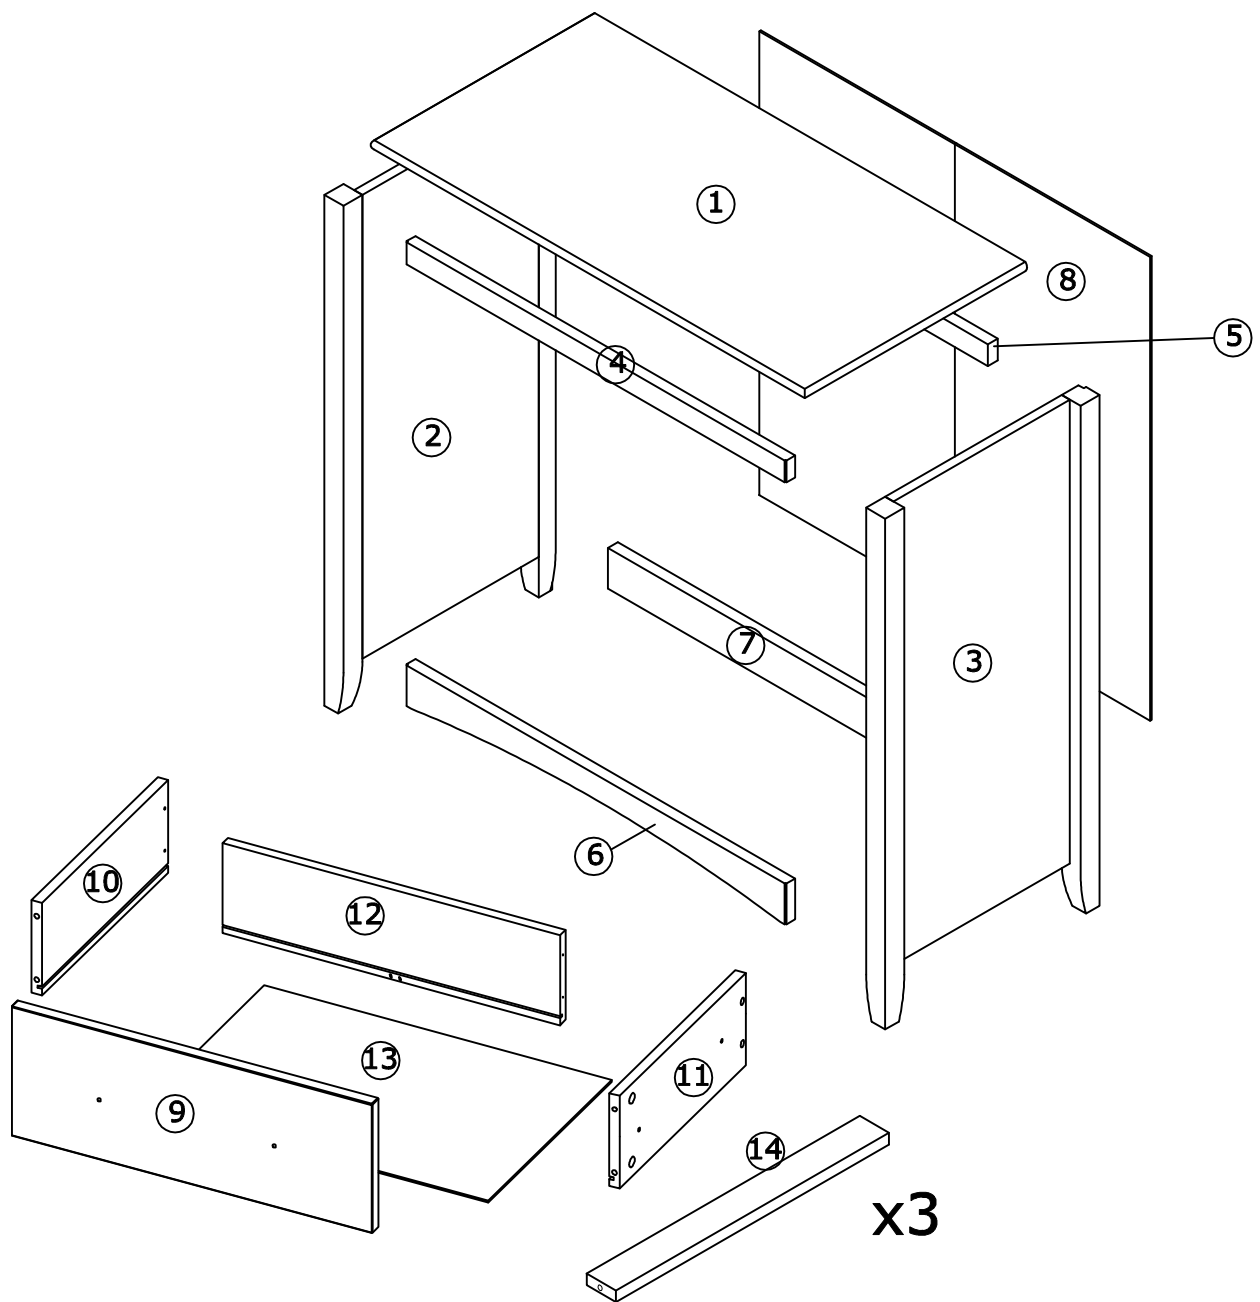


5X45mm bolt installation as below

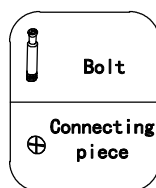


STEP

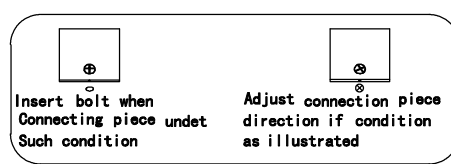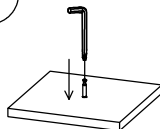


STEP




STEP

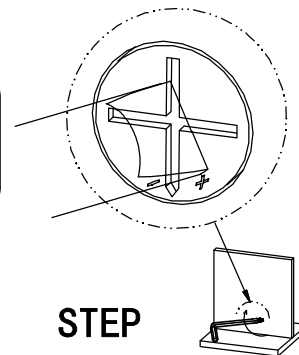


1

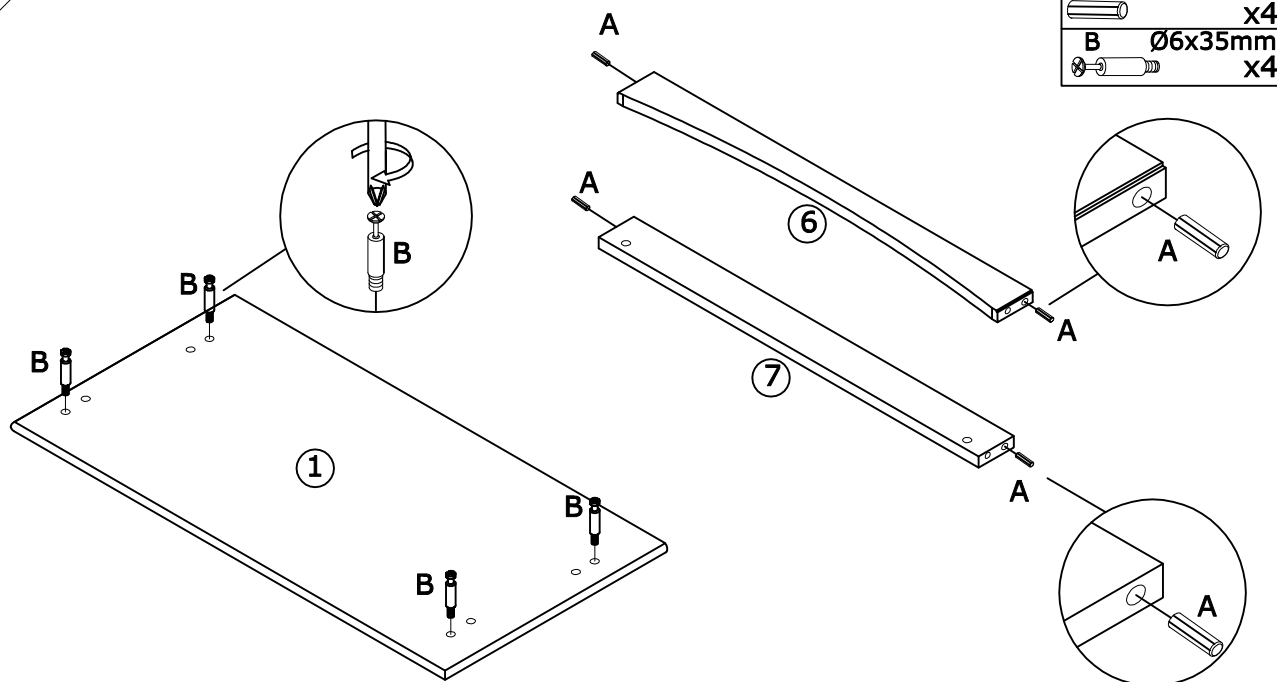


2

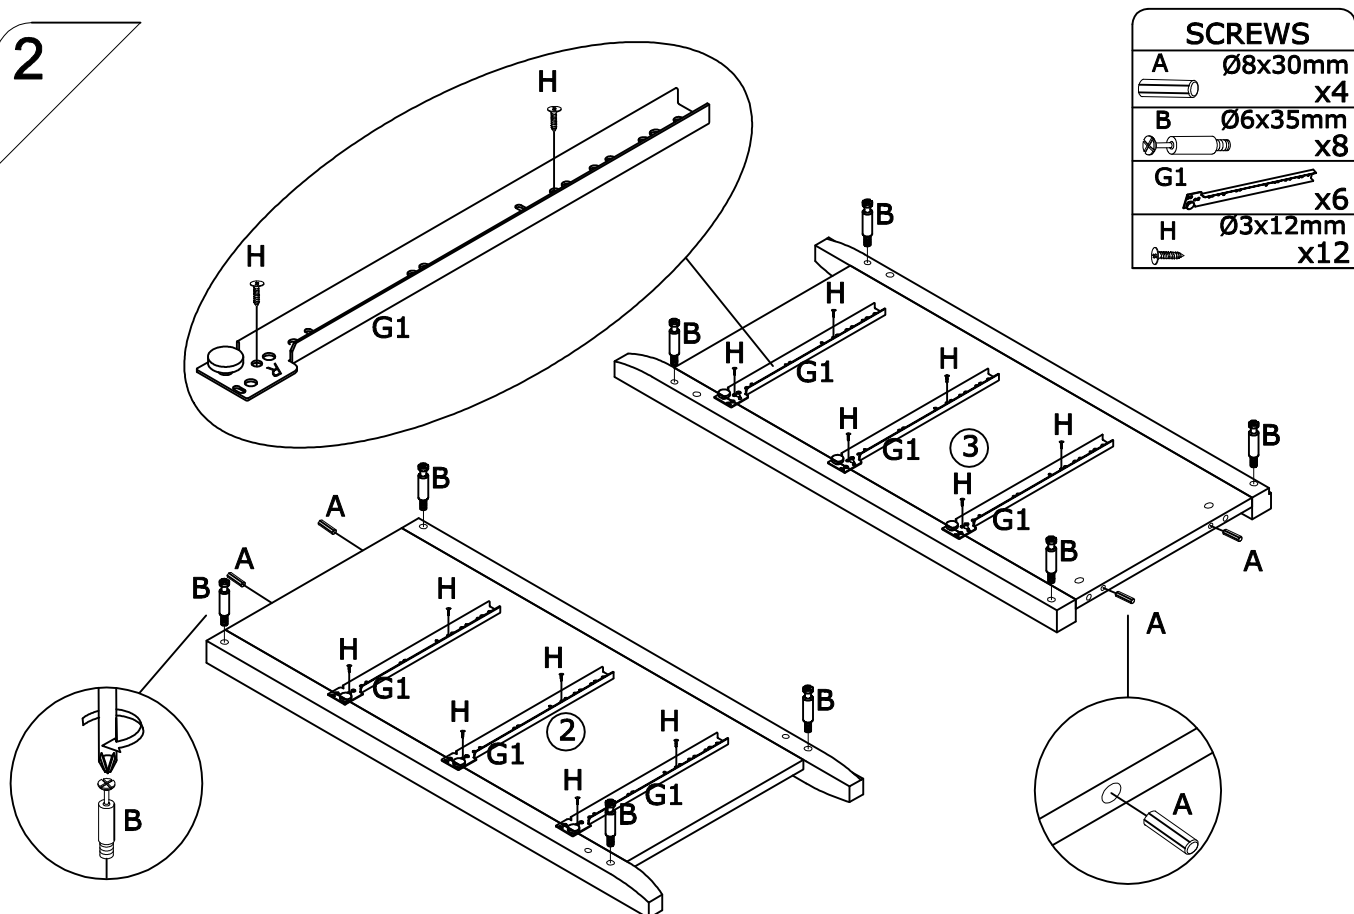

3

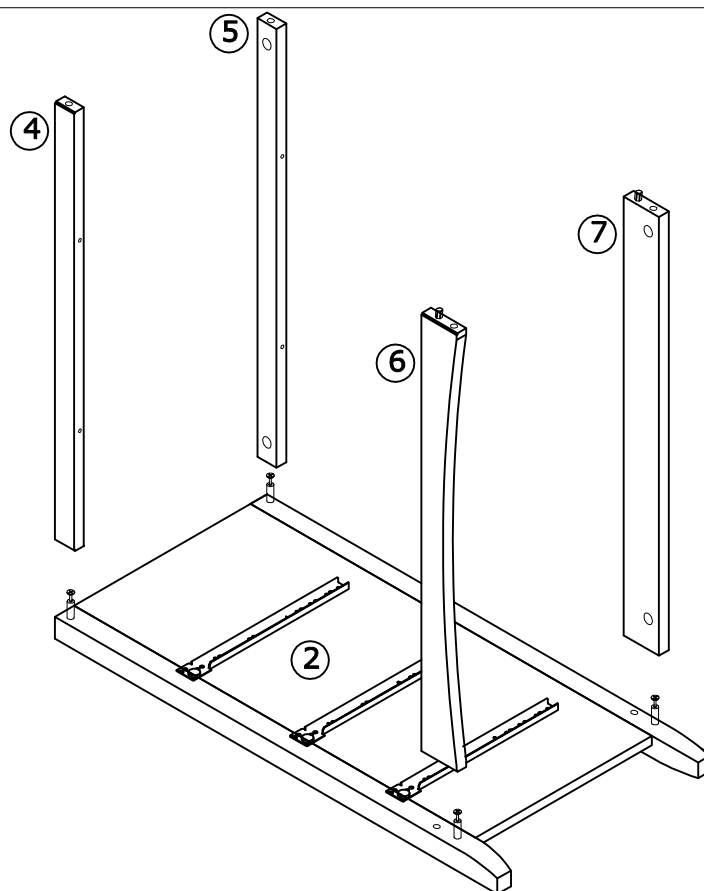

4

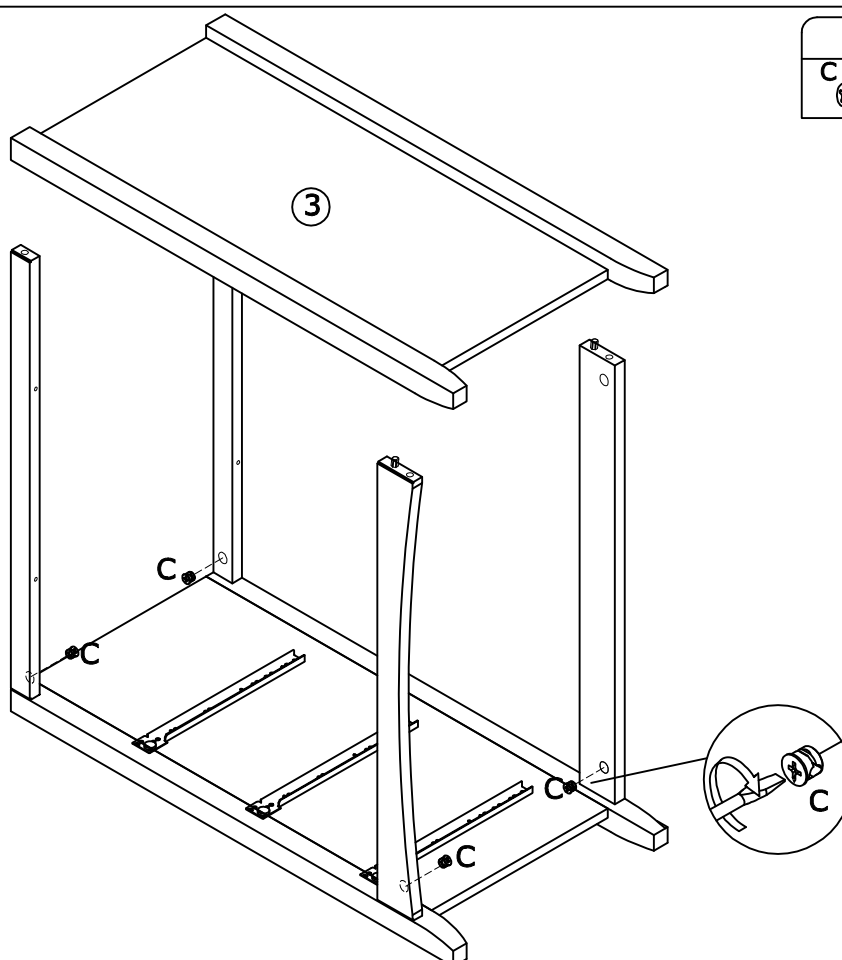


SCREWS

C Ø15x9mm
x4


5

SCREWS

C Ø15x9mm x4

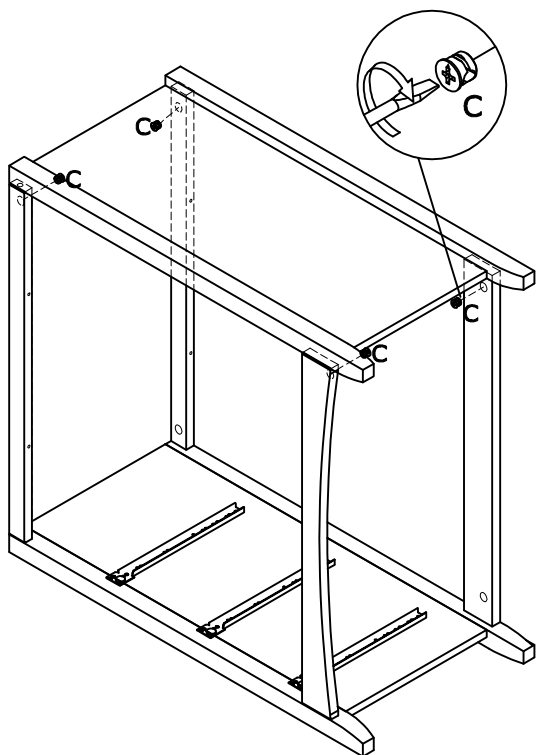

6

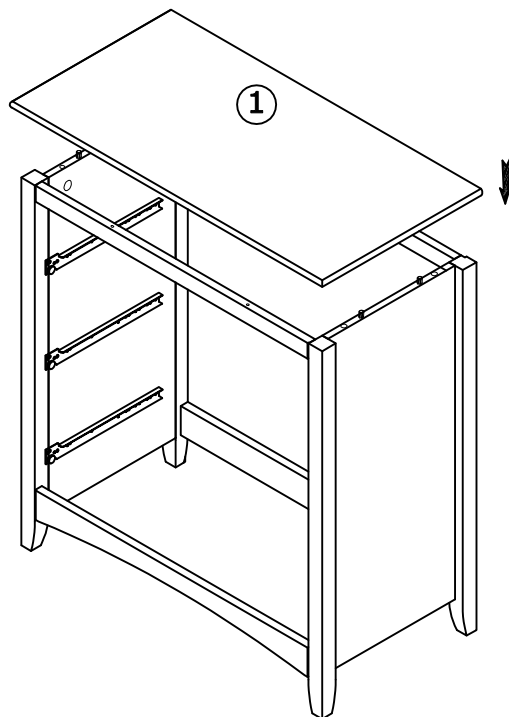


7

SCREWS

C Ø15x9mm x4

I Ø4x35mm x4

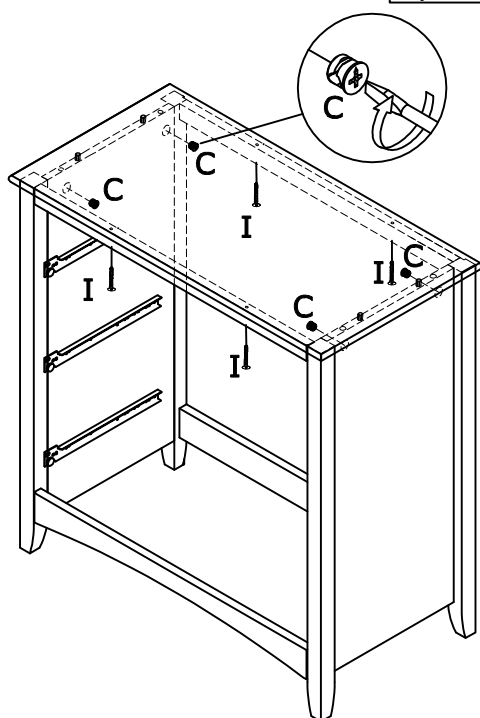


8

SCREWS

D Ø3x13mm x20


k 250x25mm x1

l Ø9x1mm x1

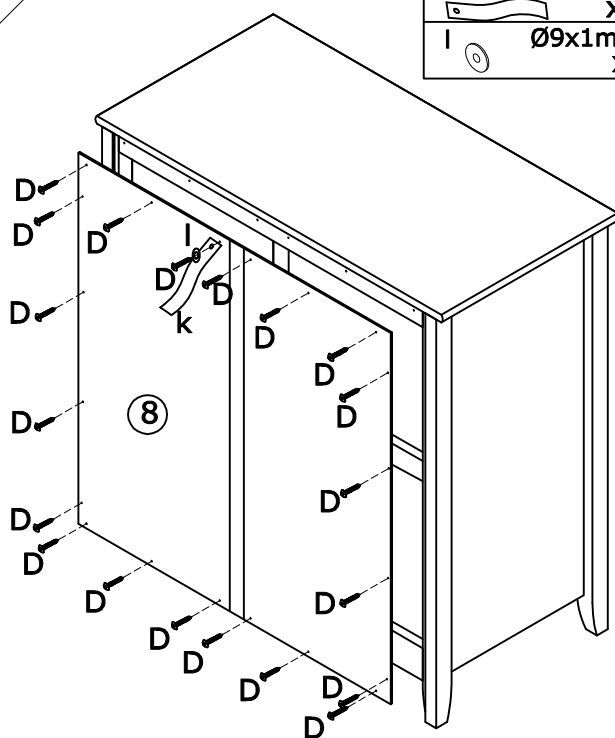


9

SCREWS

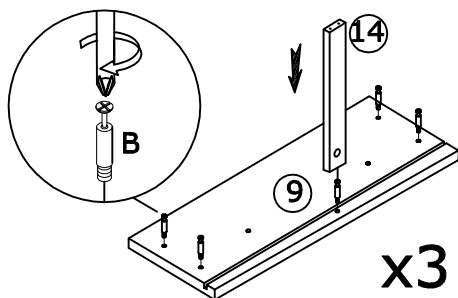B Ø6x35mm
x15


10

SCREWS

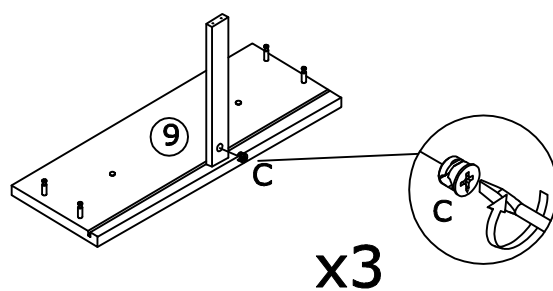C Ø15x9mm
x3


11

SCREWS

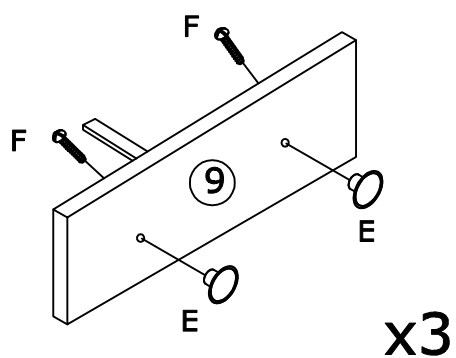
E
x6
F M4x22mm
x6

12

SCREWS

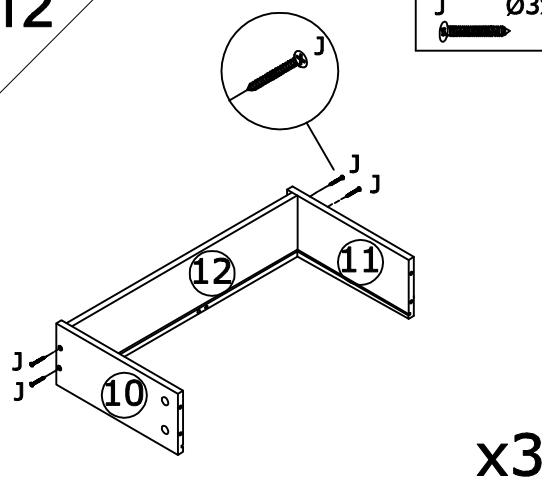J Ø3x25mm
x12


13

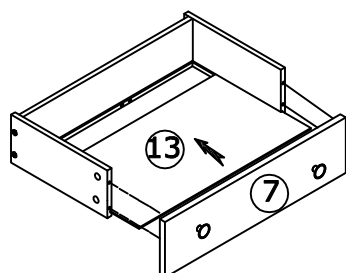


x3

14


SCREWS

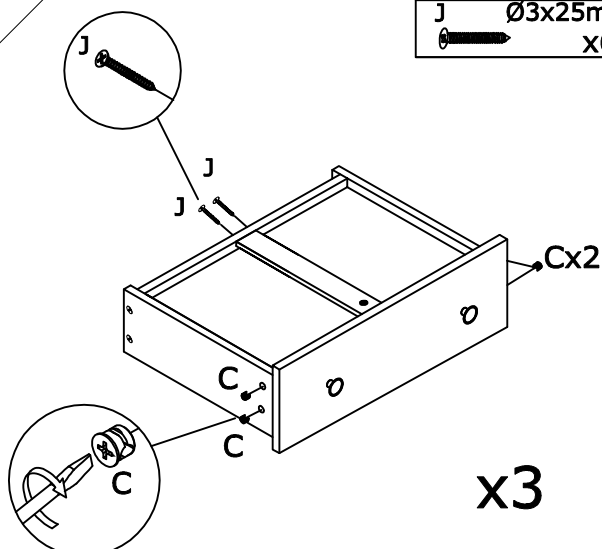C Ø15x9mm
x12
J Ø3x25mm
x6


15

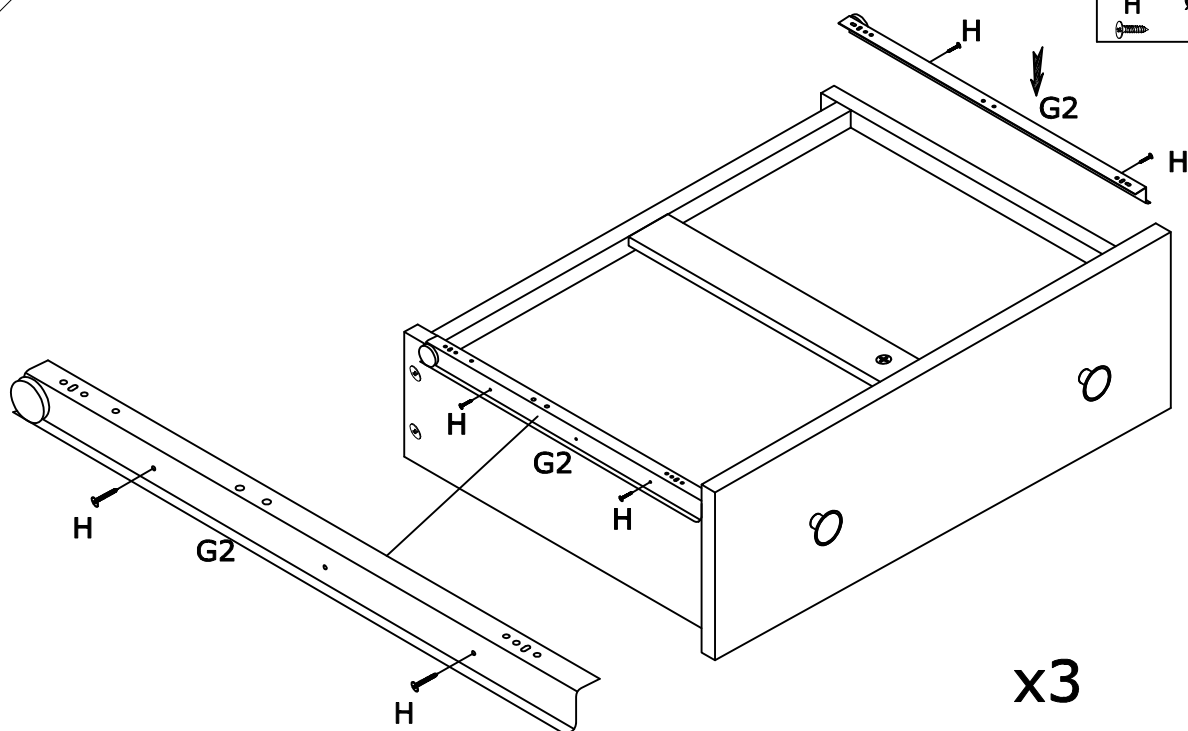

16

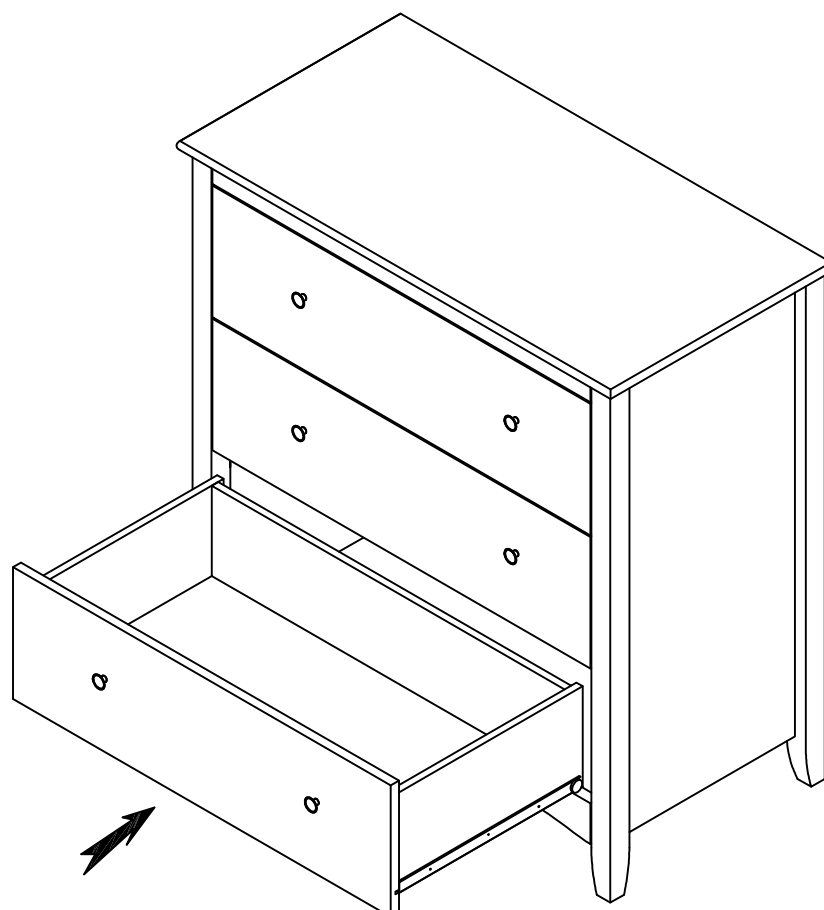

17

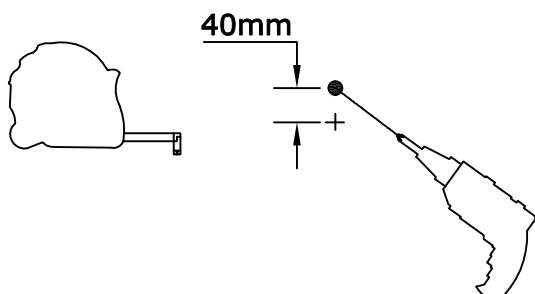


SCREWS


N



x1

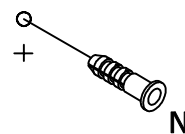

18

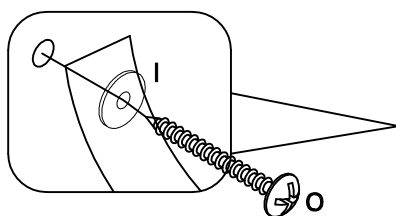

SCREWS

I

Ø9x1mm

x1

O

Ø4x50mm

x1

