
PPSTN052B706 PPSTN052B716 PPSTN052B1026

Upholstered Bed

King


Weight Limit:

Bed:1000LBS / 454KG















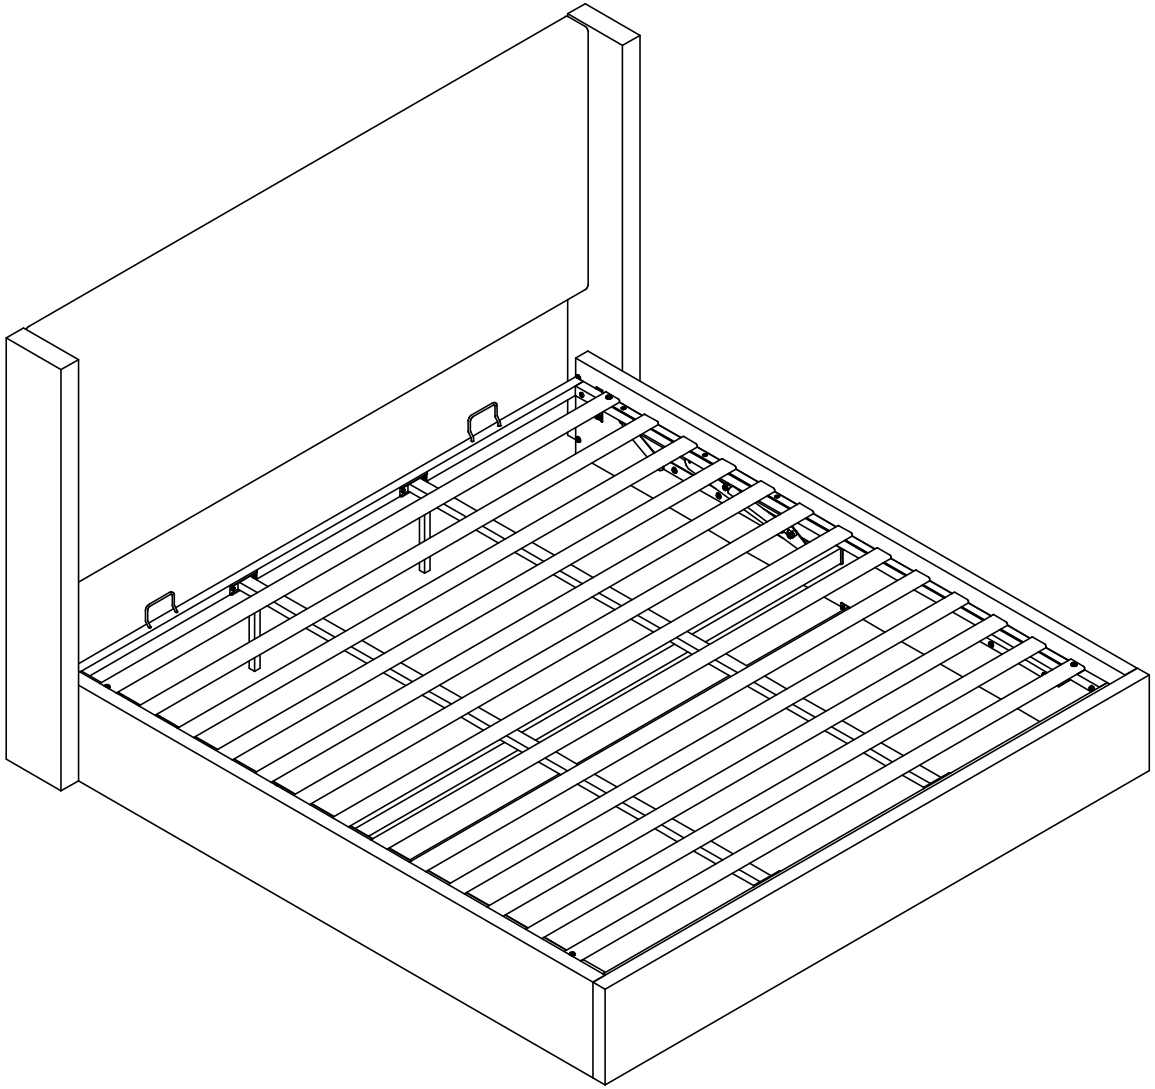


Version：2026/7/21









PARTS

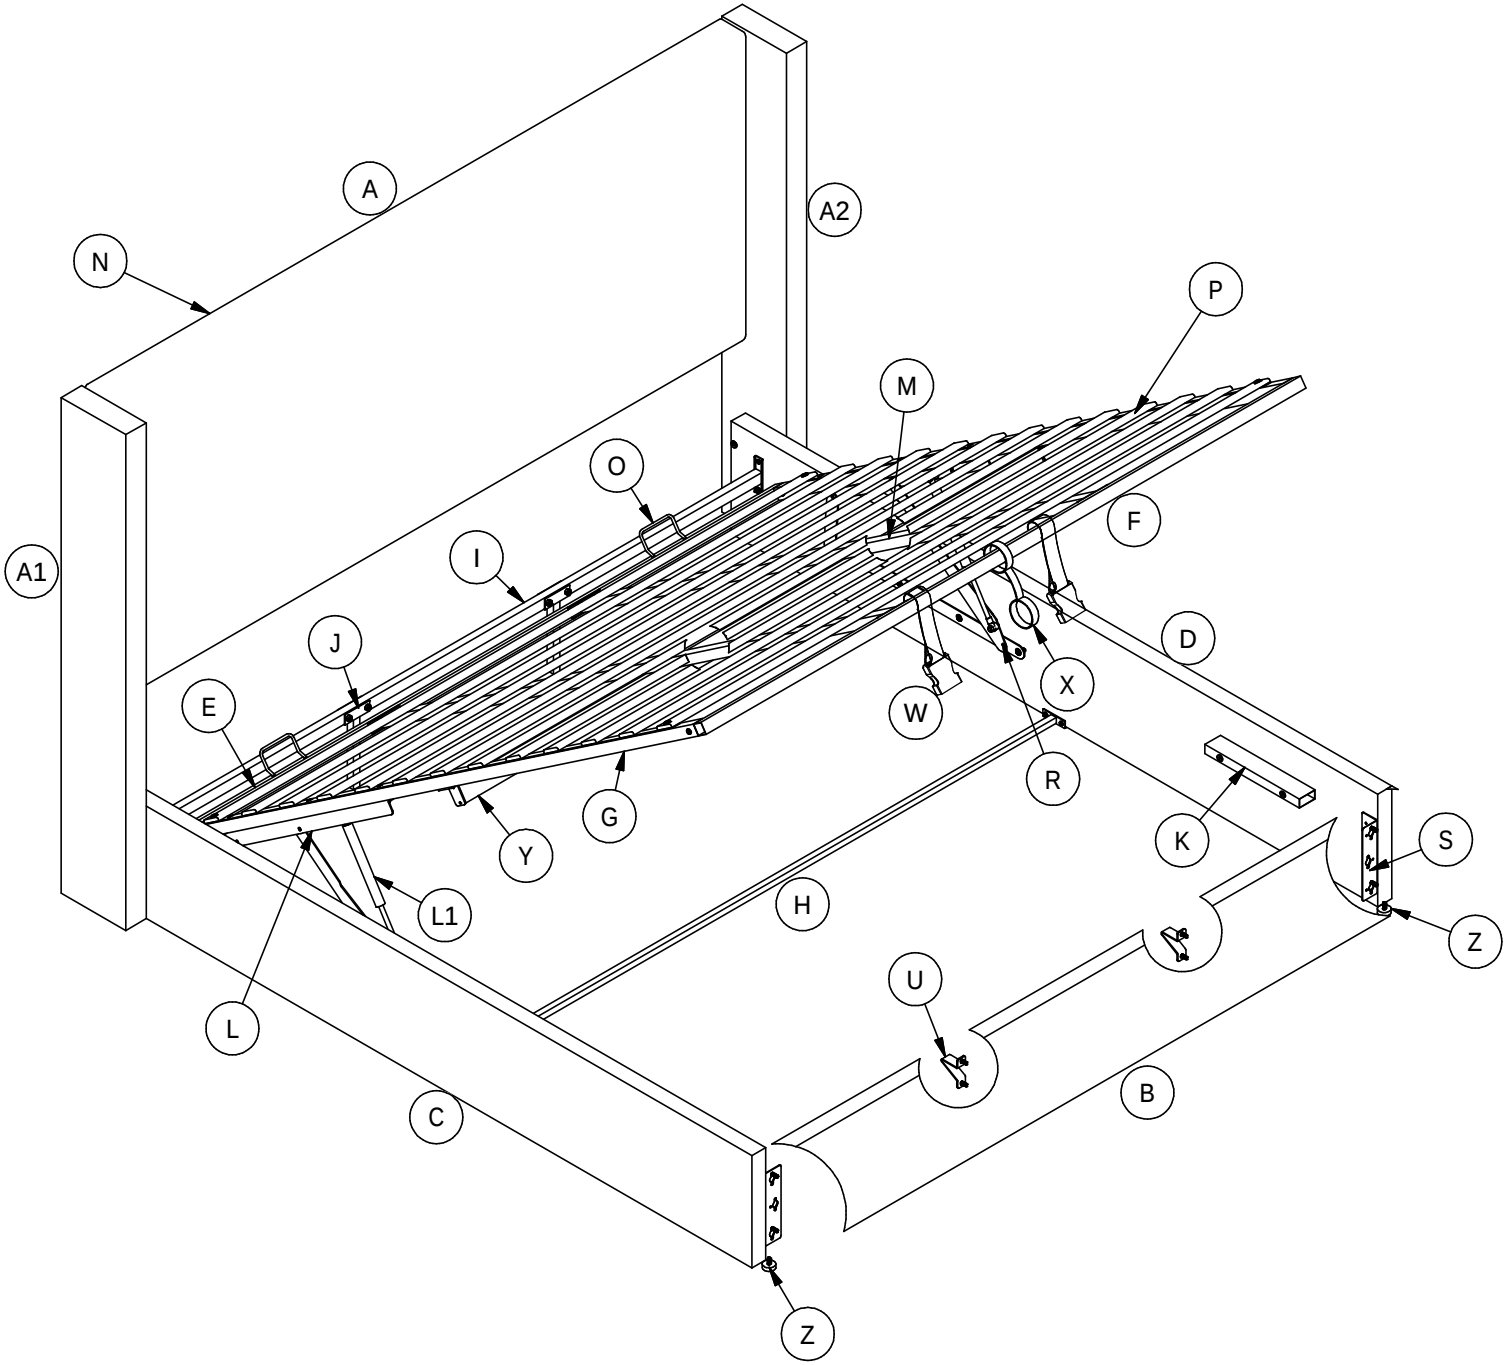












PARTS LIST

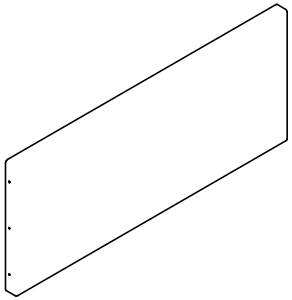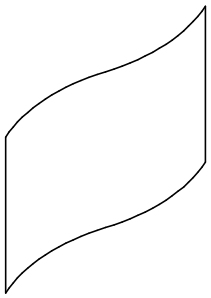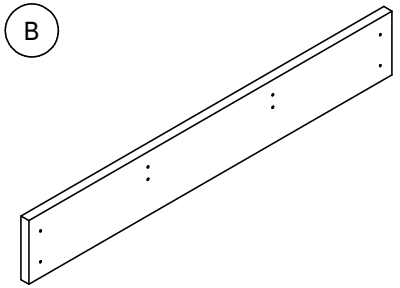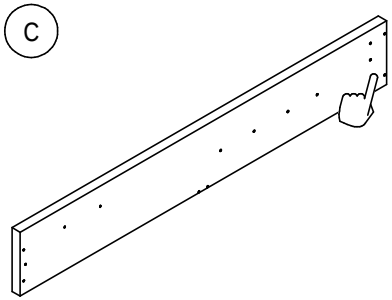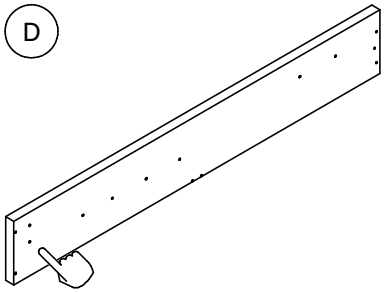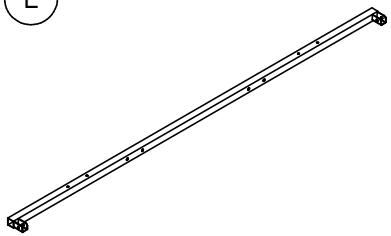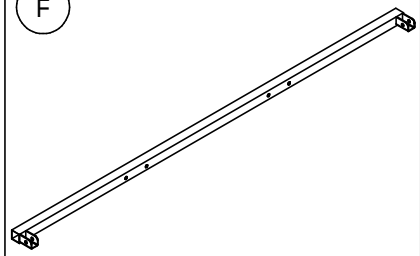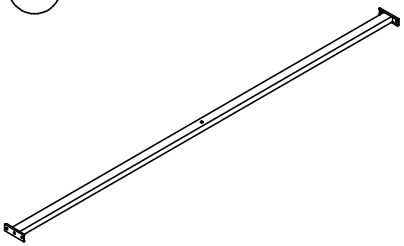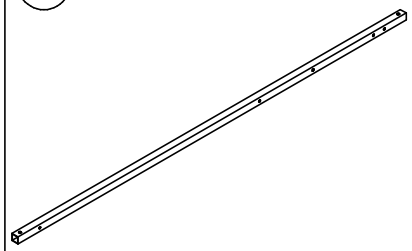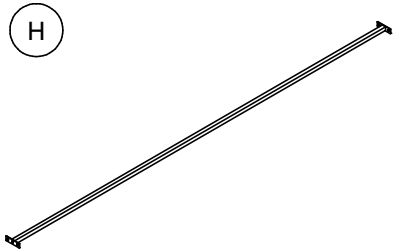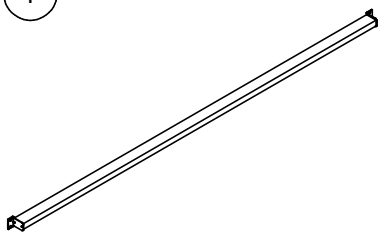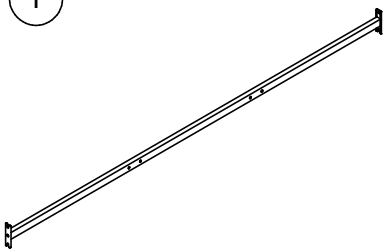A 	A1 	A2 	N 	B 
Headboard 1 PC	Side Board 1 PC	Side Board 1 PC	Back Cover 1 PC	Footboard 1 PC
C 	D 	E 	F 	M 
Side Panel 1 PC	Side Panel 1 PC	Front Tube 1 PC	Rear Tube 1 PC	Center Rail 2 PCS
G 	H 	Y 	J 	I 
Side Rail 2 PCS	Center Tube 1 PC	Cross Tube 1 PC	Support Leg 2 PCS	End Tube 1 PC

PARTS LIST

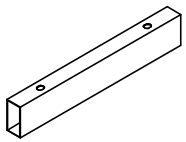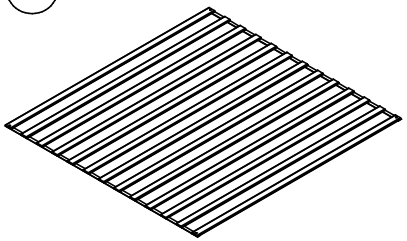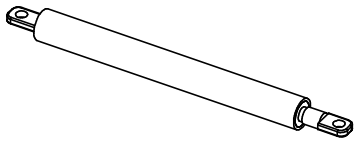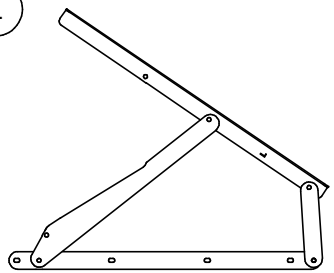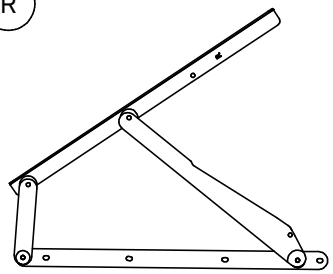
K 	S 	U 	O 	P 
Bed Frame Support Bar 2 PCS	Connector 2 PCS	Frame Support 2 PCS	Mattress Retainer 2 PCS	Wooden Slats 1 PC
L1 	L 	R 	X 	W 
Gas Spring 2 PCS	Left Lift Mechanism 1 PC	Right Lift Mechanism 1 PC	Strap 1 PC	Buckle 2 PCS
V 	Z 			
Buckle 2 PCS	Foot 2 PCS			


HARDWARE LIST

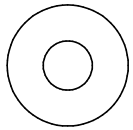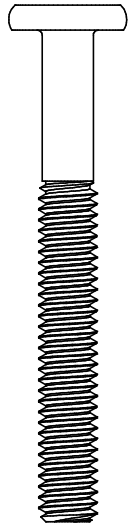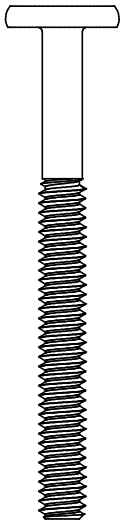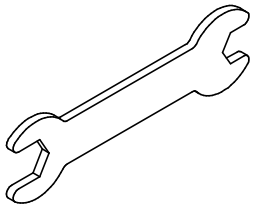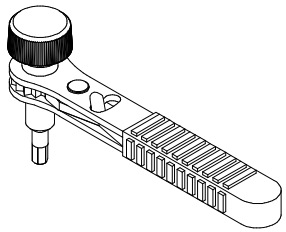1 	2 	3 	4 	5 	6 
1/4" X 3/4"	1/4" X 1 9/16"	1/4" X 1 3/8"	1/4" X 1 3/4"	1/4"	5/16" X 2 9/16"
Bolt 42 PCS	Bolt 12 PCS	Bolt 8 PCS	Bolt 6 PCS	Metal Washer 22 PCS	Bolt 4 PCS
7 	8 	9 	10 	11 	12 
1/4" X 2 9/16"	1/4"	5/16"	1/4"	4mm	4mm
Bolt 6 PCS	Nut 14 PCS	Nut 4 PCS	Wrench 1 PC	Allen Key 1 PC	Ratchet Wrench 1 PC

How To Use The Ratchet

1. Before assembling the furniture, please adjust the lock tool as needed.

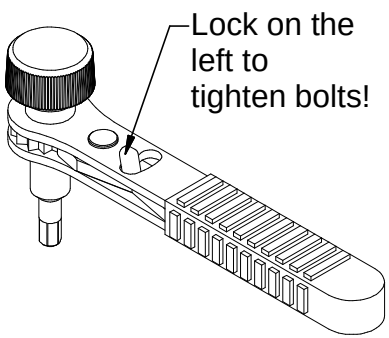


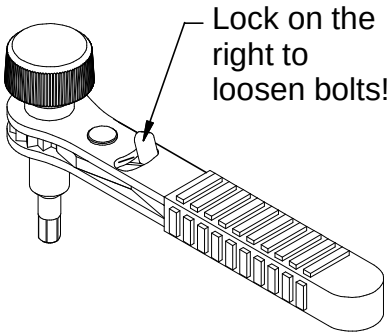

2. Tighten or loosen the bolts

- **Tighten bolts :** Locate the turncap (picture) and rotate it clockwise to screw the bolt quickly, until it cannot be rotated any more. Then start rotating with the handle clockwise to finalize tightening the bolts.

- **Loosen bolts :** Rotate the handle counterclockwise to loosen the bolt. Then, to completely remove the bolts, continue rotating with the turncap in the same direction.

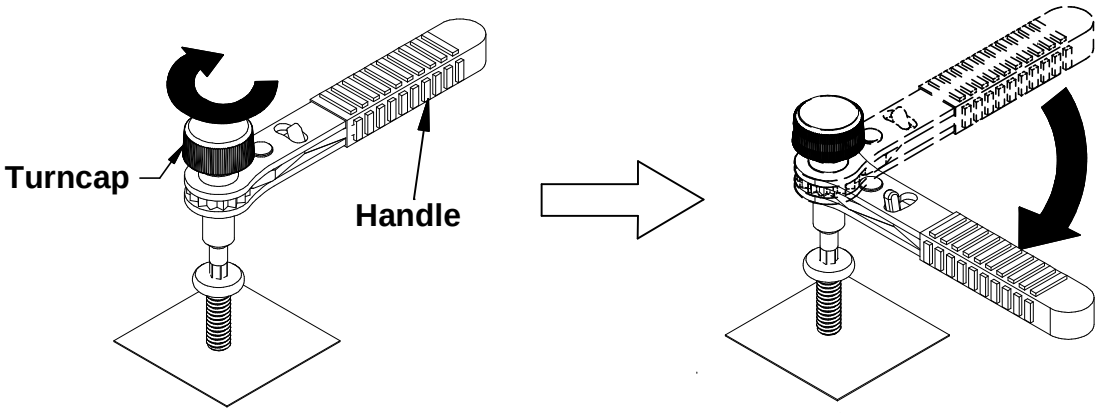


Helpful Hints


- Before assembling the furniture, please read the instructions on how to use ratchet, it will help you to assemble the furniture quickly.
- Please don't throw away the ratchet in case you may need to use in future.

Step 1

Attach **Z x 2** to **B** as illustrated with ❶.

⚠ **Fully tighten all the bolts in this step.**

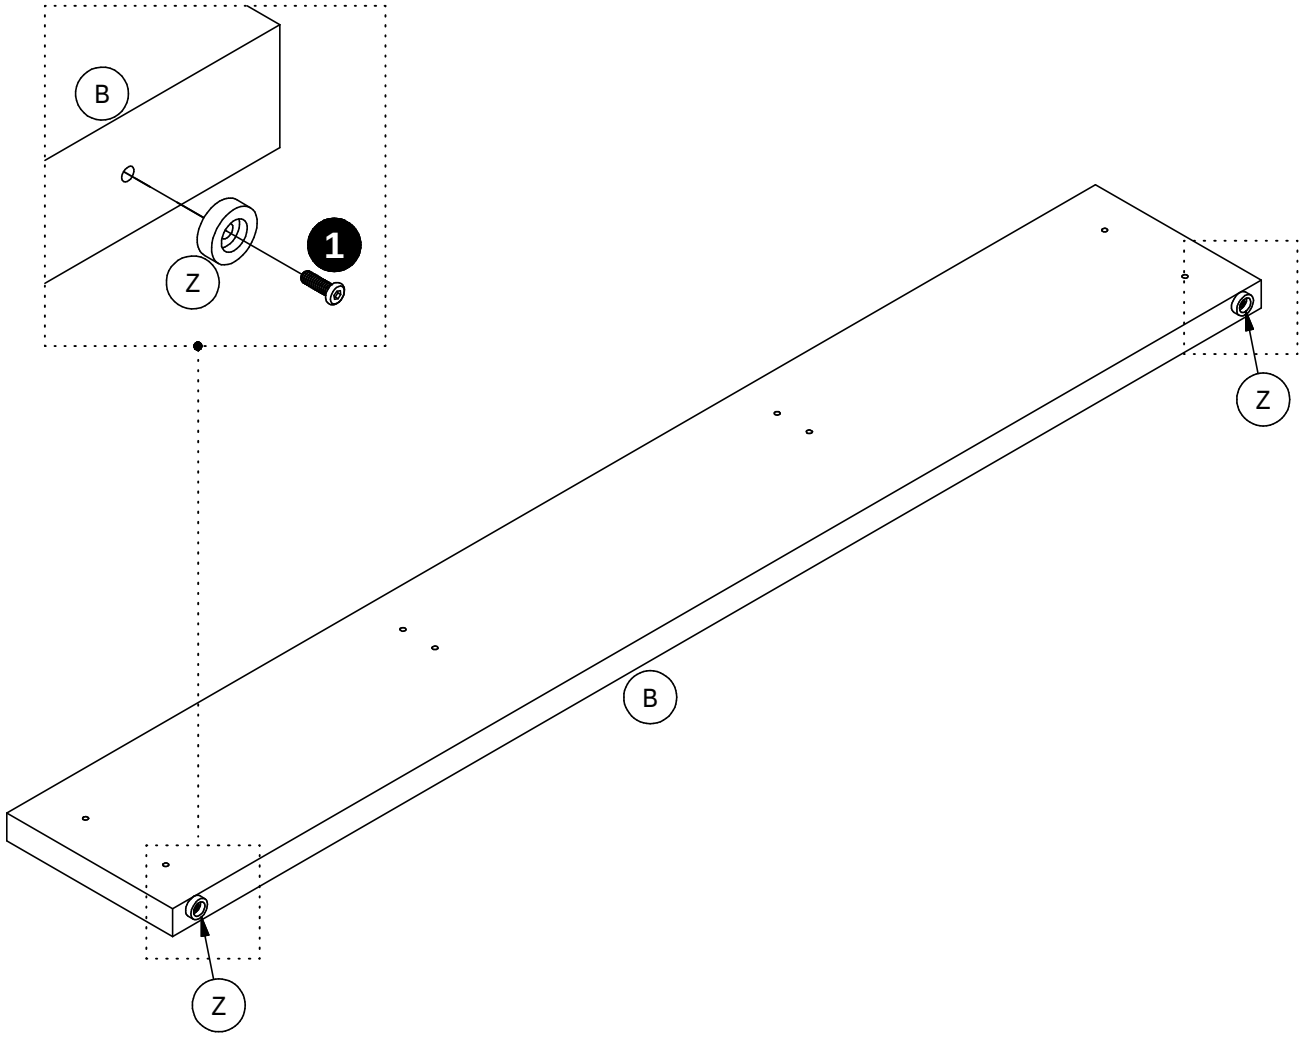


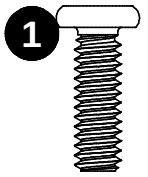


X 2

Step 2

2.1 Screw ❶ into **B** as illustrated, making sure to leave half of the threads exposed.
2.2 Loop **V x 2** onto **U x 2**, and then attach them to **B** with ❶**.**

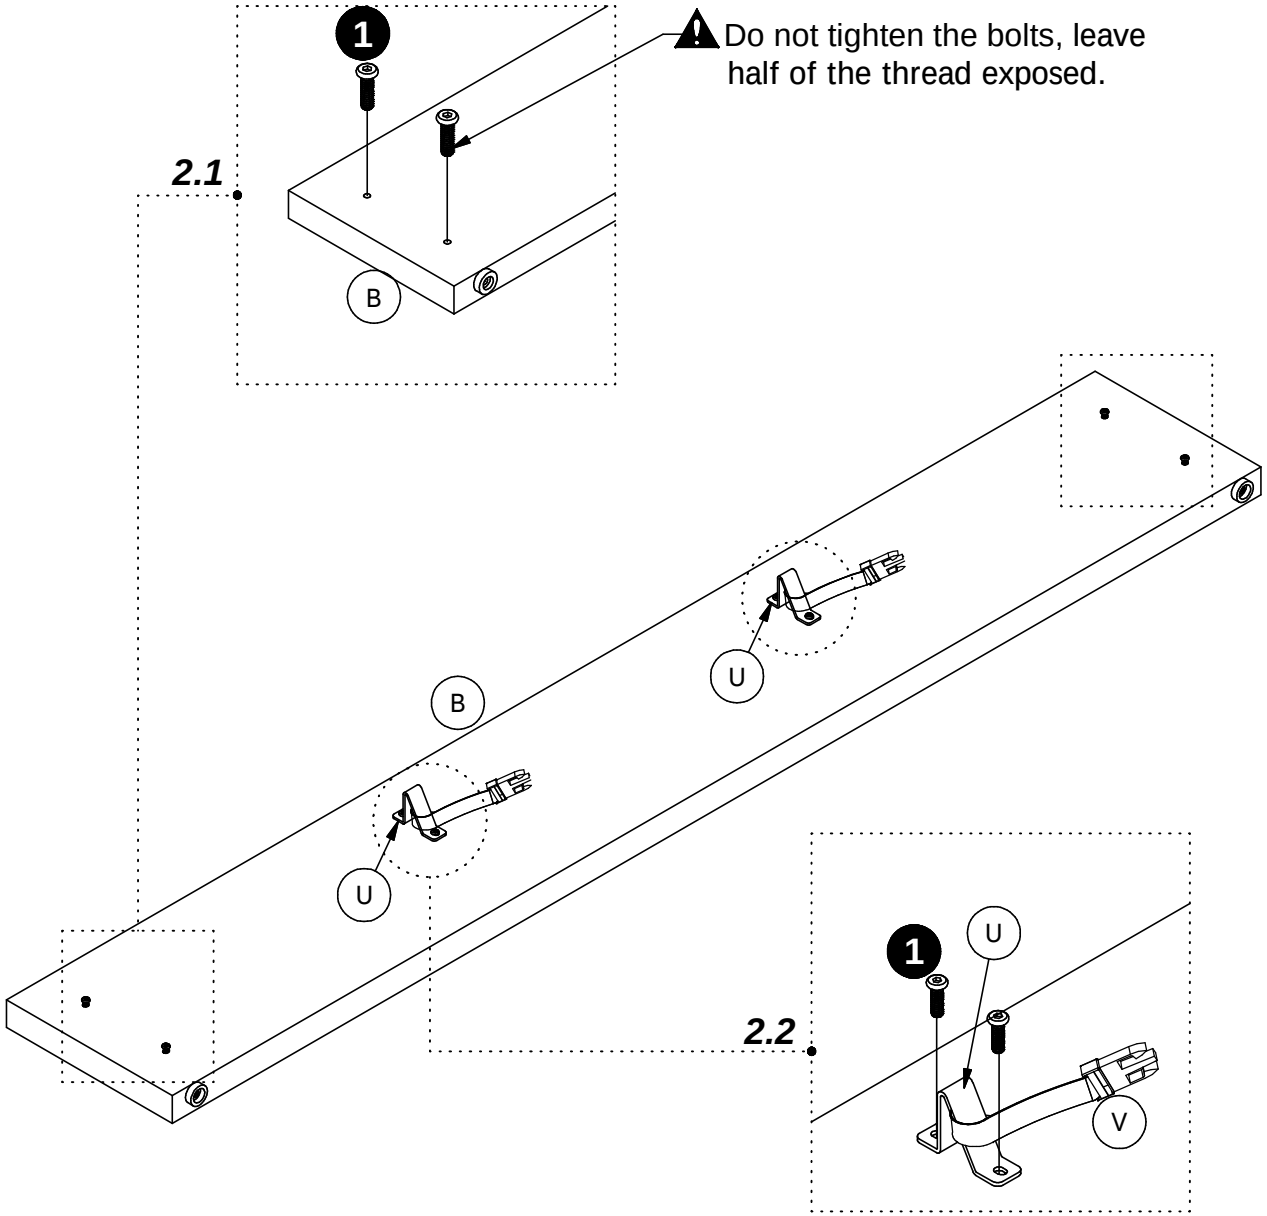


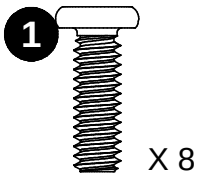


X 8

Step 3


3.1 Attach one **S** to **C** with ❶.
3.2 Attach the other **S** to **D** with ❶.

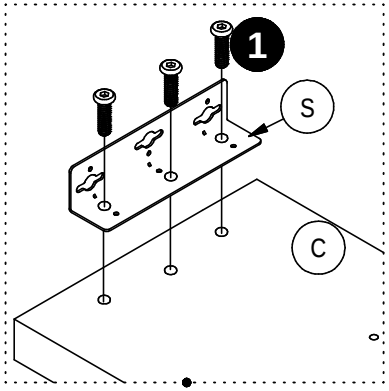


3.1

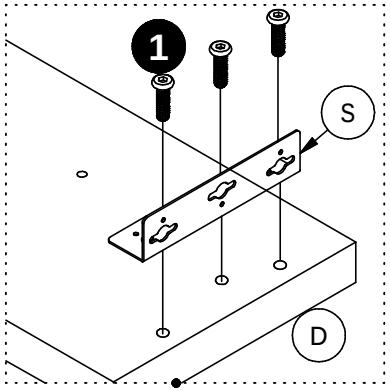


3.2

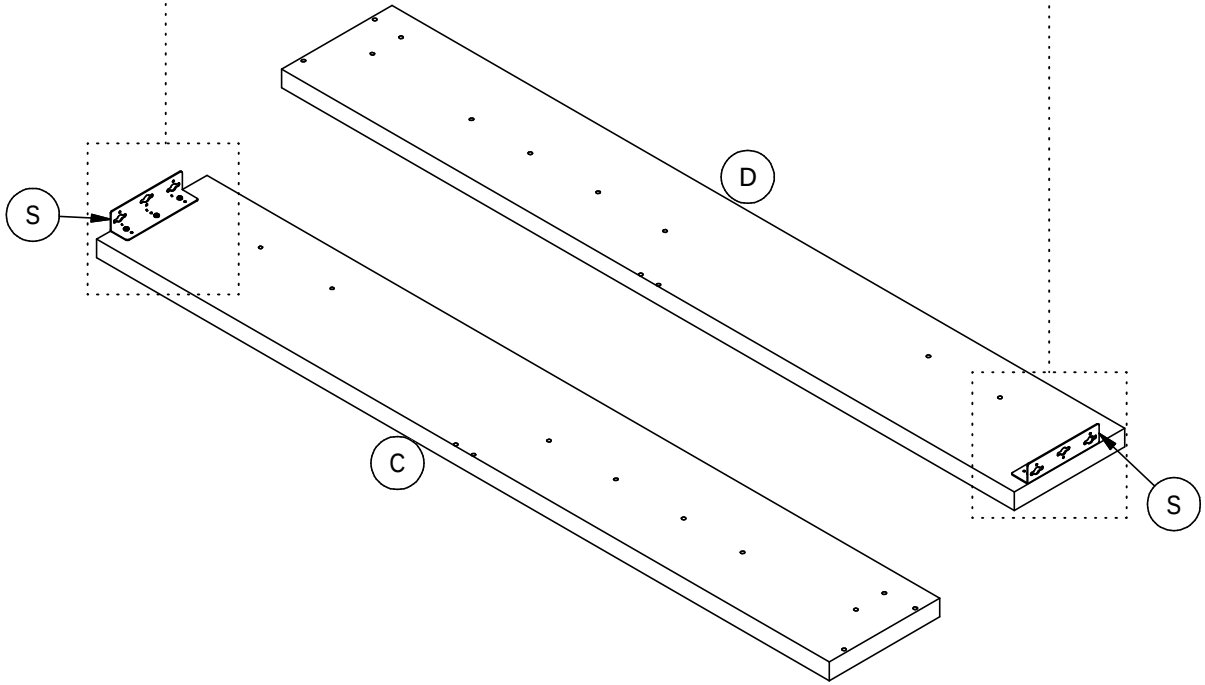

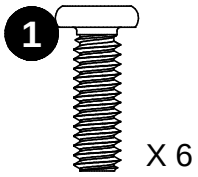

X 6

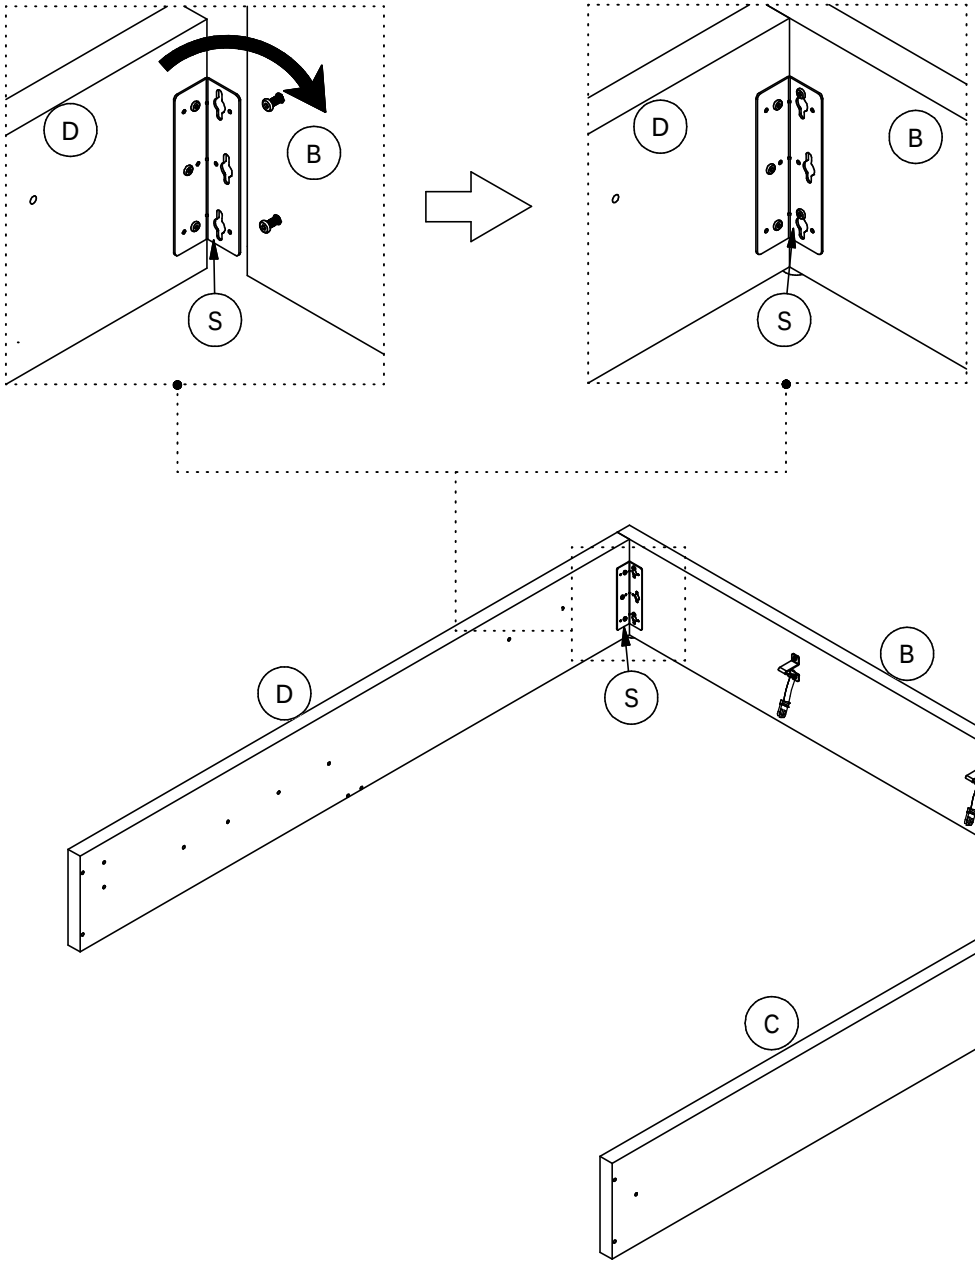


Step 4


Hang **C** and **D** on **B** as illustrated.

⚠ Do not fully tighten the bolts in this step until **STEP 10** is completed.

Step 5


Attach **C** to **A1** with 7 & 5 .
Attach **D** to **A2** with 7 & 5 .

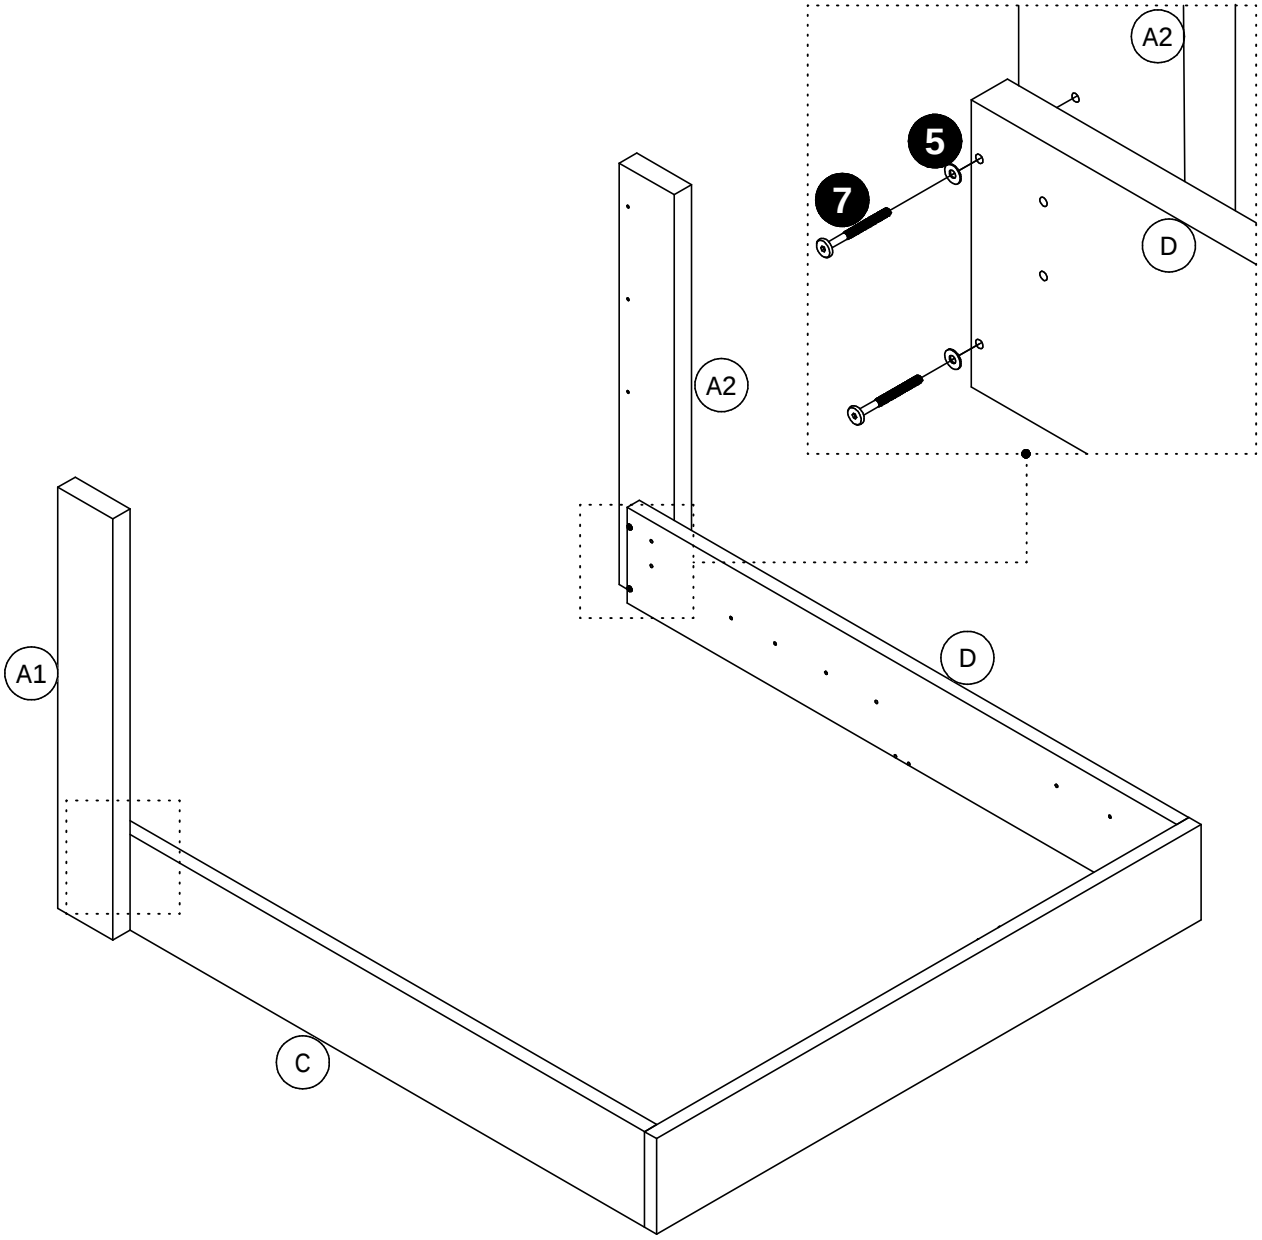


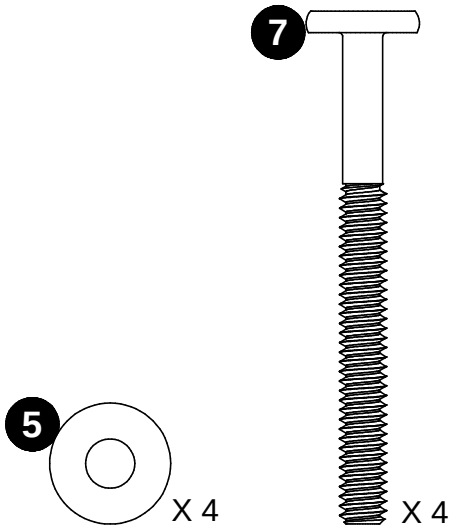

Step 6


Attach **J x 2** to **I** as illustrated with ❸ & ❽ .

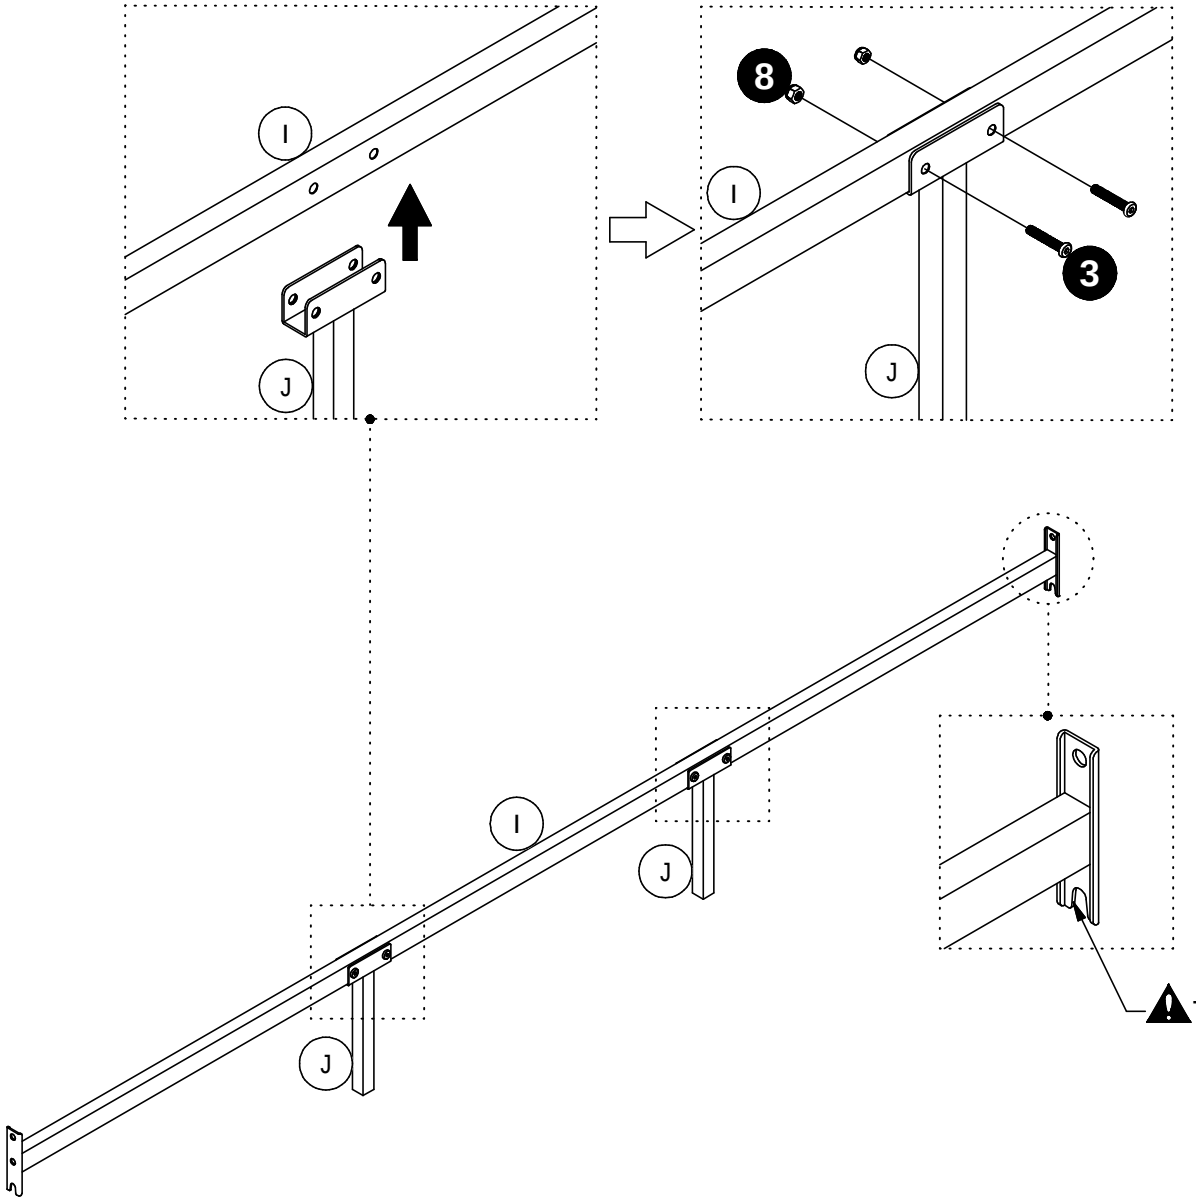

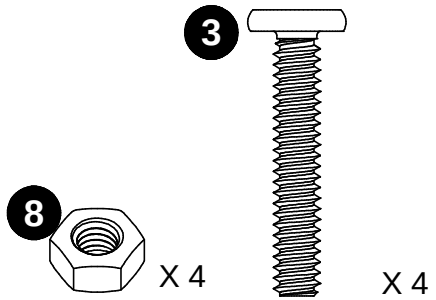


Step 7

7.1 Screw 7 into **C** and **D** with half of threads exposed as illustrated.
7.2 Slide **I** down onto 7 as illustrated , then attach **I** to **C** and **D** with 1 **.**

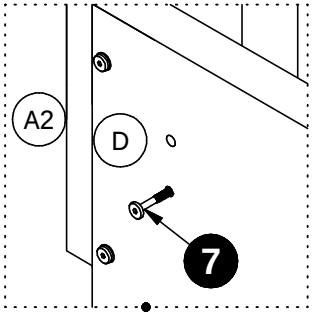



7.1

⚠ Do not fully tighten the screws, leave half of the threads exposed for next step.

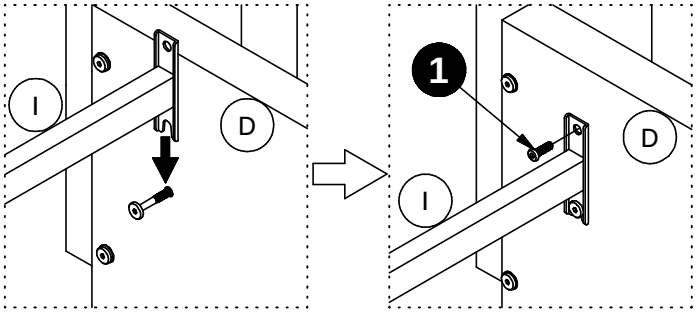


7.2

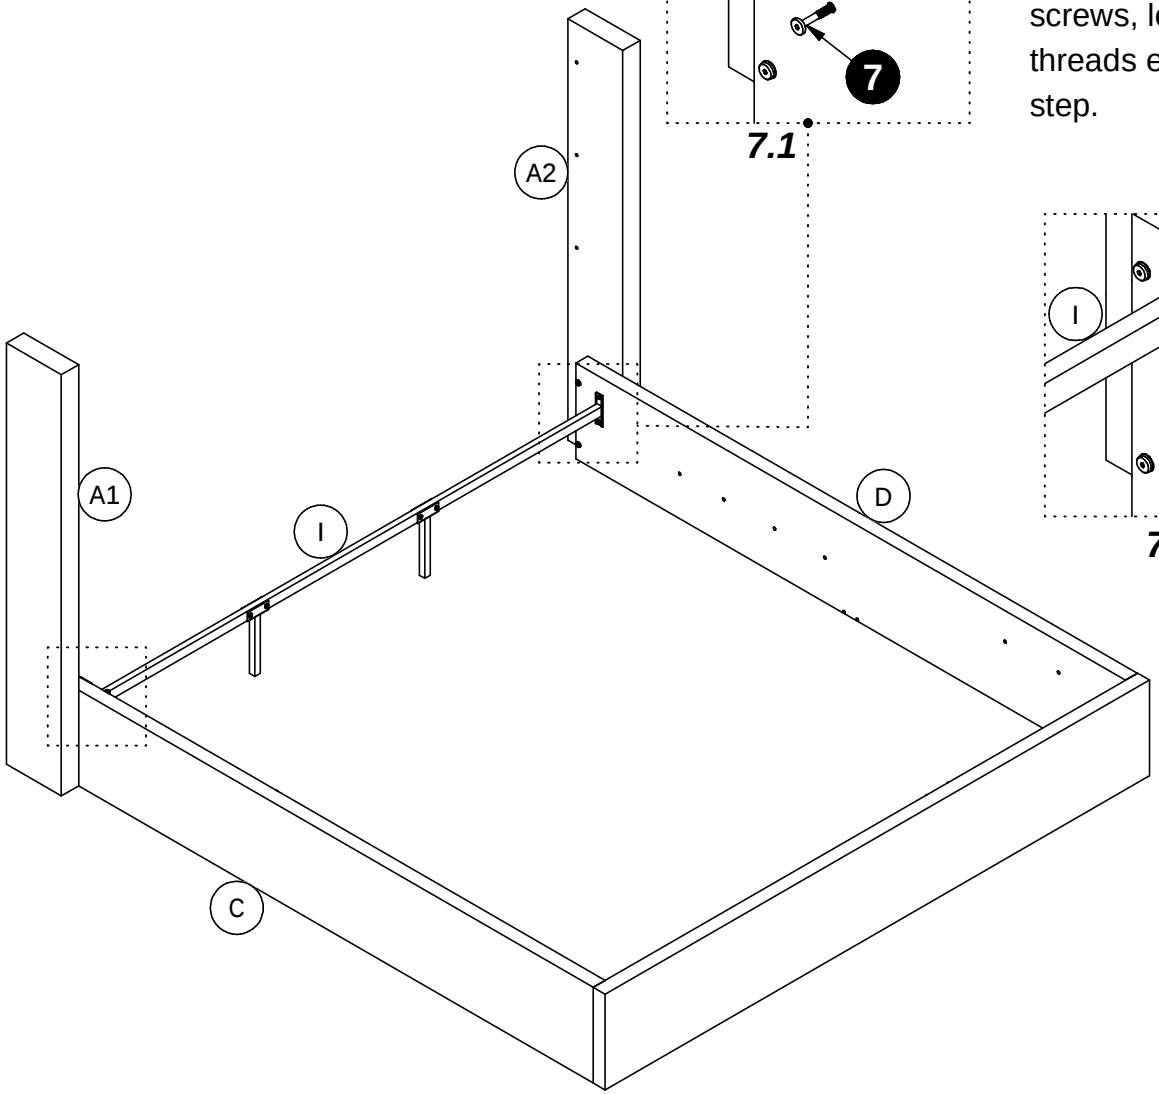

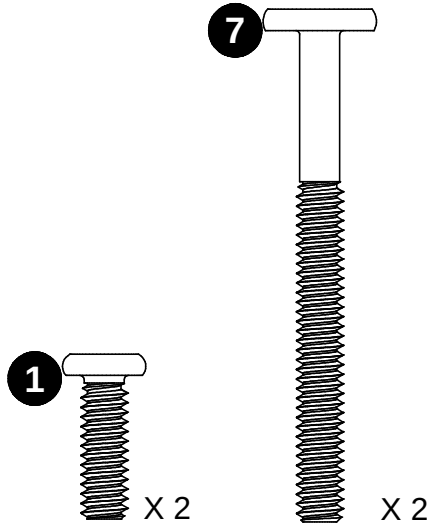


Step 8

Attach one **K** to **C** with 6 .
Attach the other **K** to **D** with 6 .

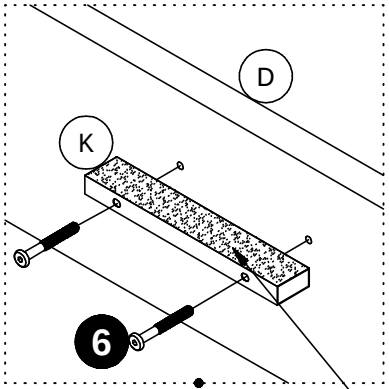


Note the EVA side faces upward

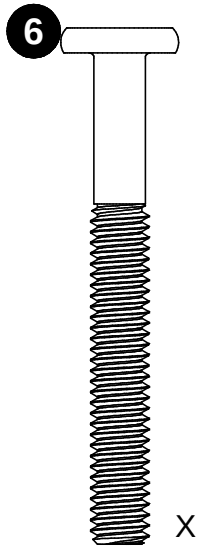


X 4

Step 9

Attach **H** to **C** and **D** with ❶.

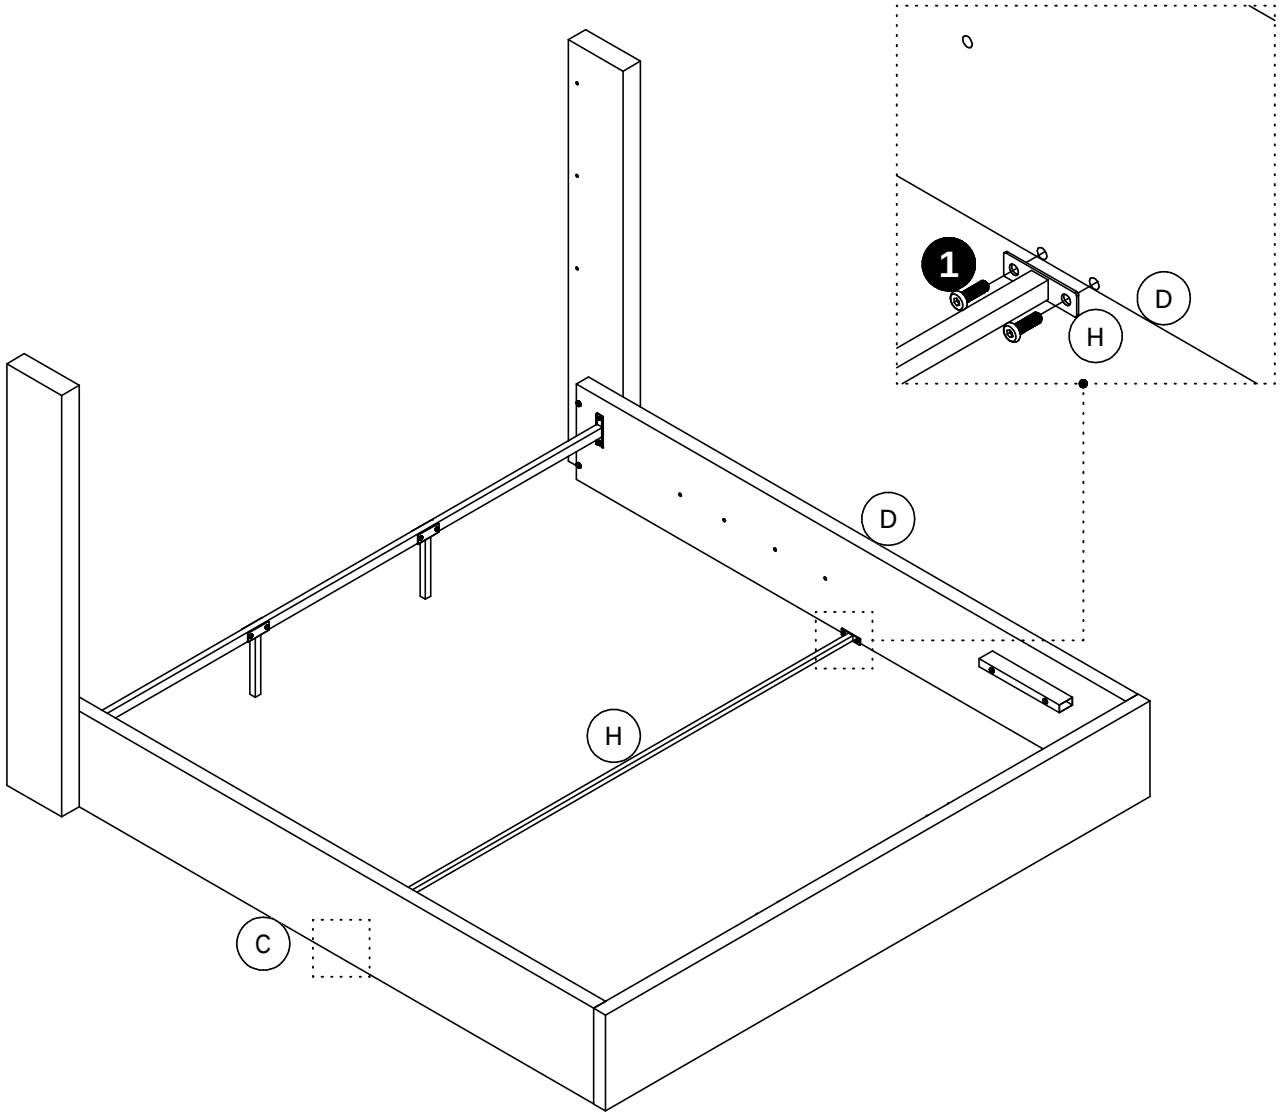


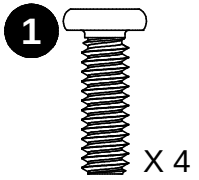



Step 10

Attach **A** to **A1** & **A2** with ❷ & ❺ .

⚠ **Fully tighten all the bolts in all steps.**

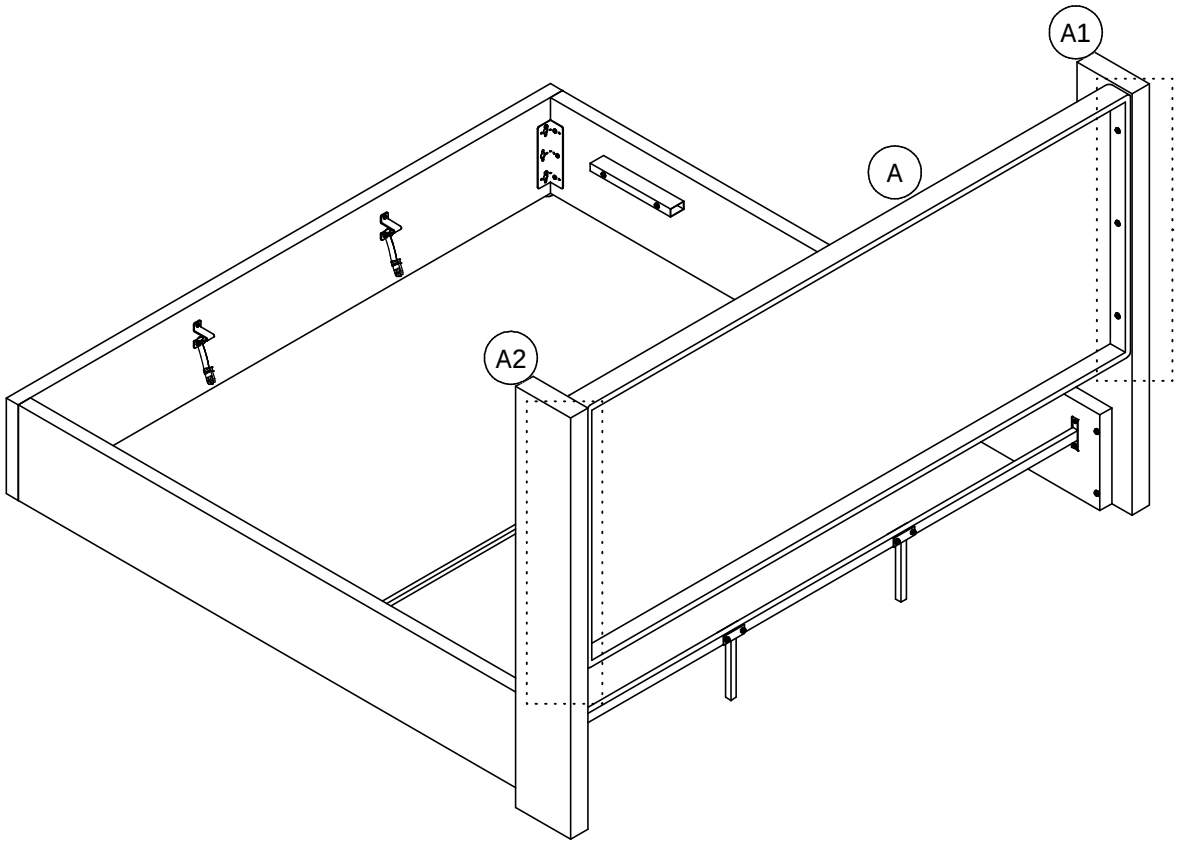


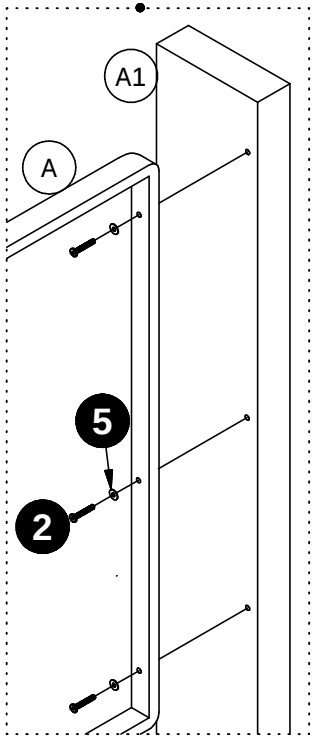

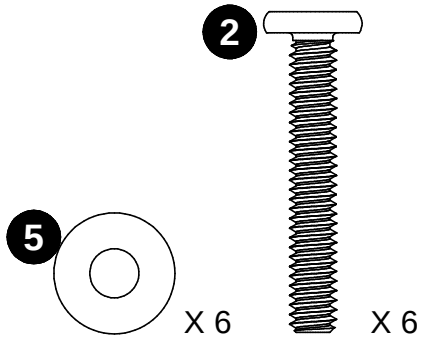


Step 11


Stick **N** to the back of **A** with Velcro.

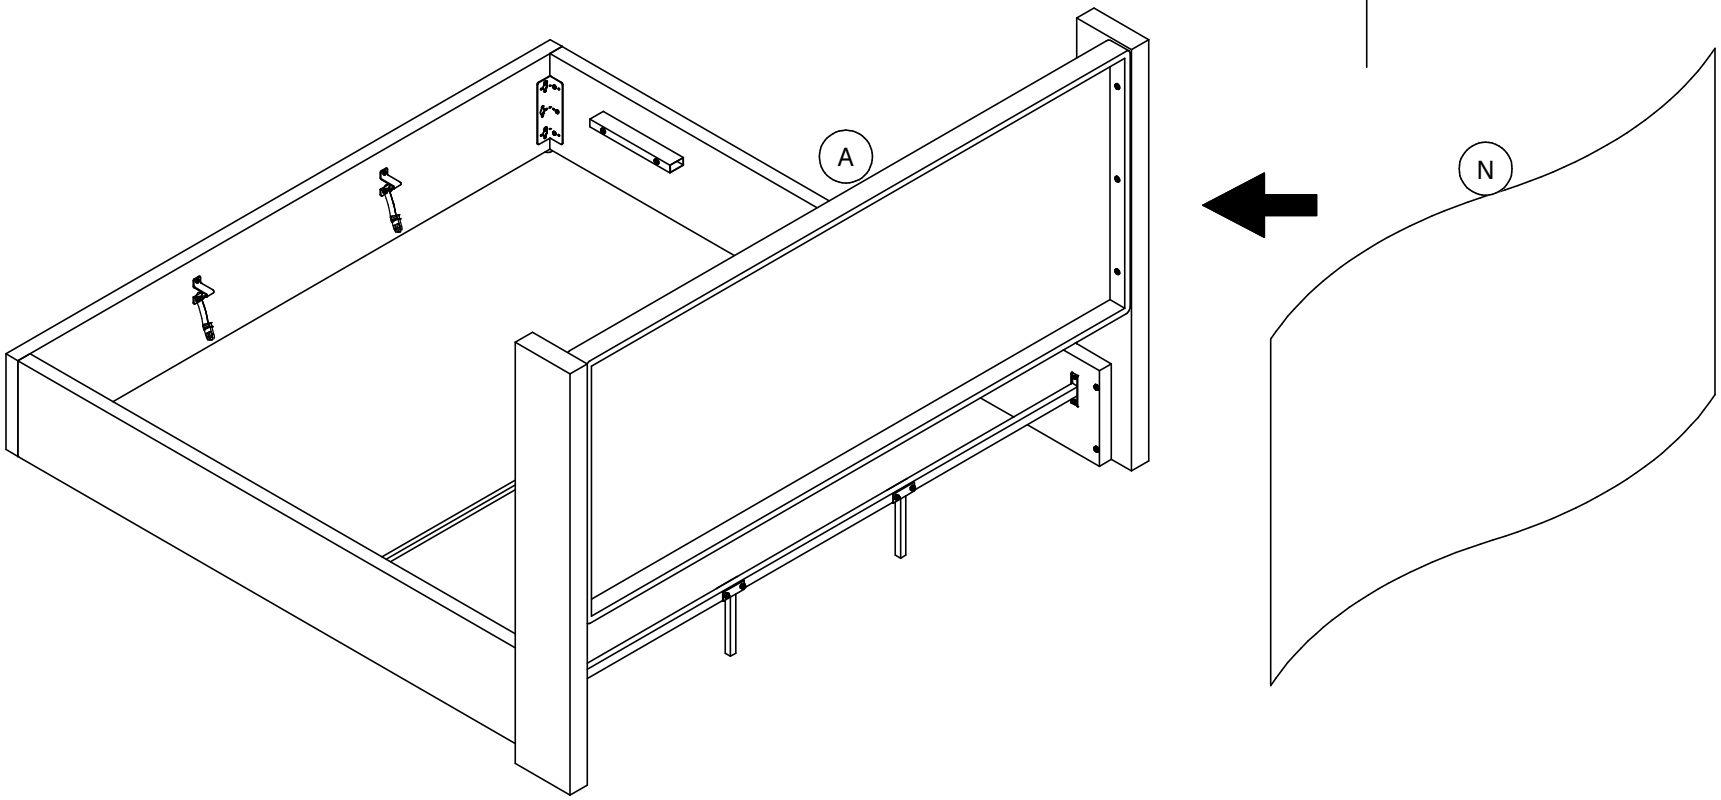


Step 12

12.1 Unfold the Right Lift Mechanism **R**.
12.2 Attach one **L1** to **R** with ❾.

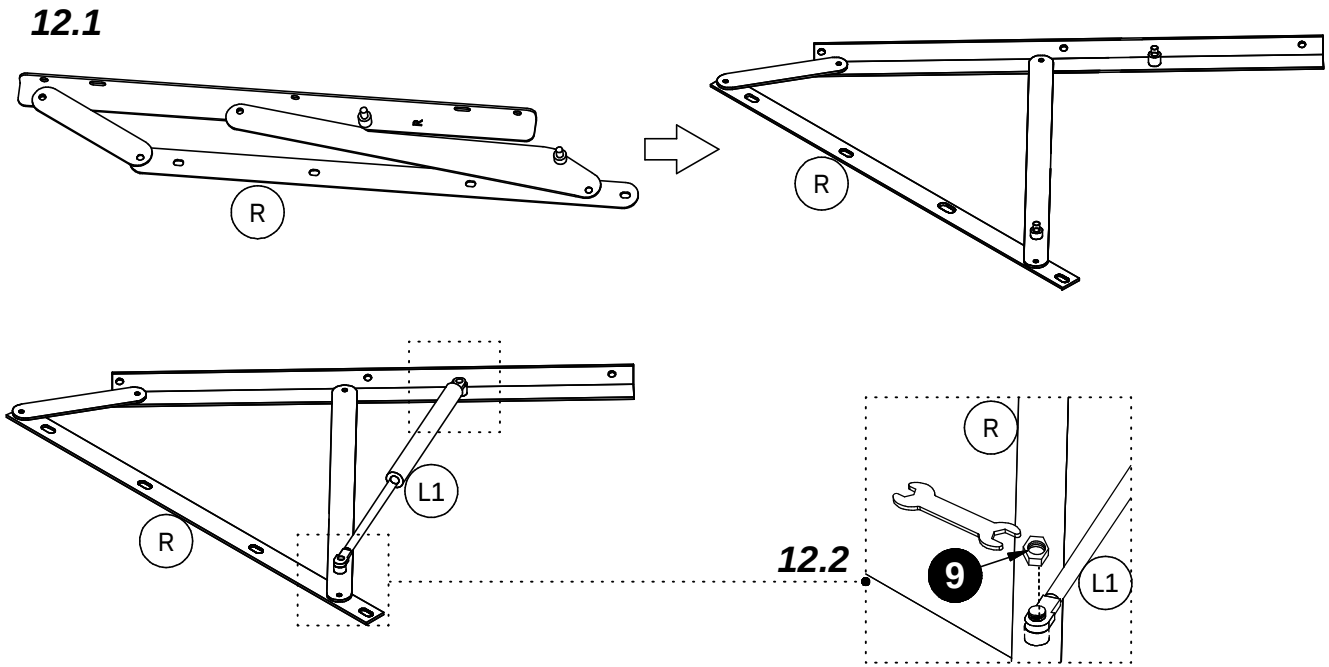

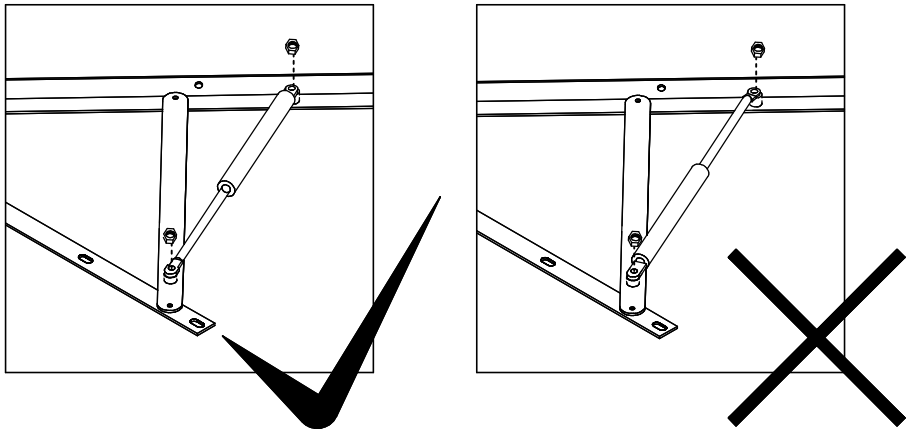


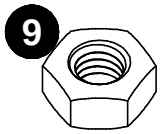



X 2

Step 13

13.1 Unfold the Left Lift Mechanism **L**.
13.2 Attach the other **L1** to **L** with ❾.

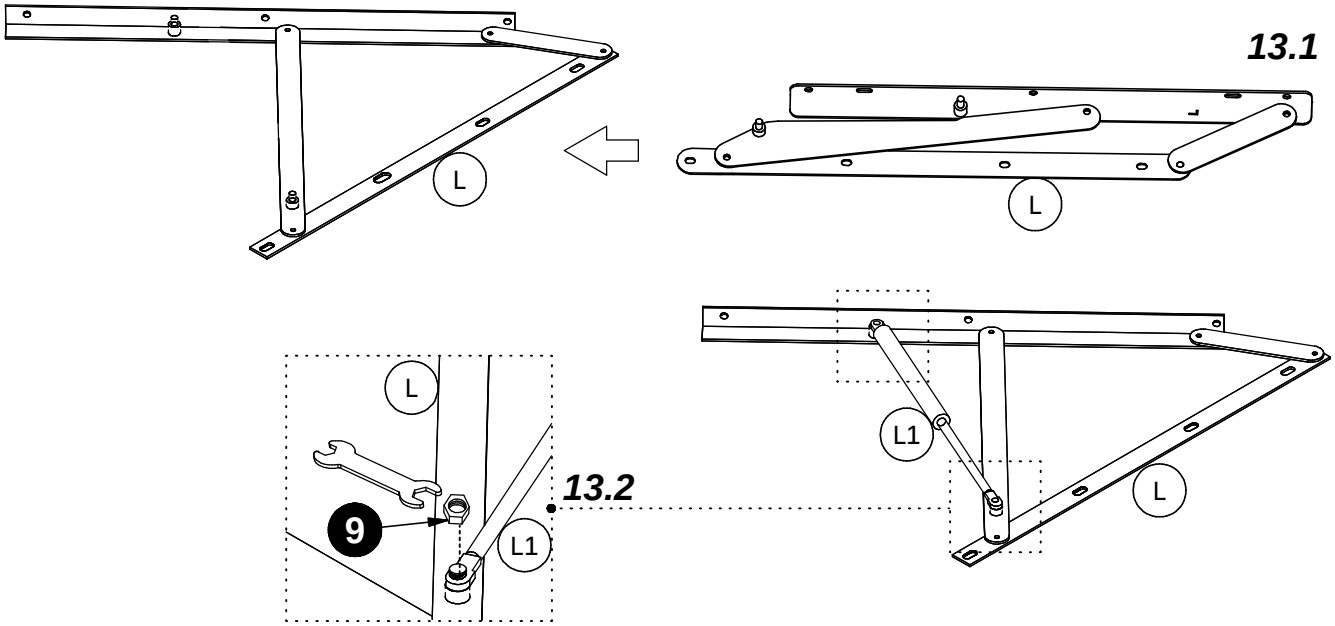

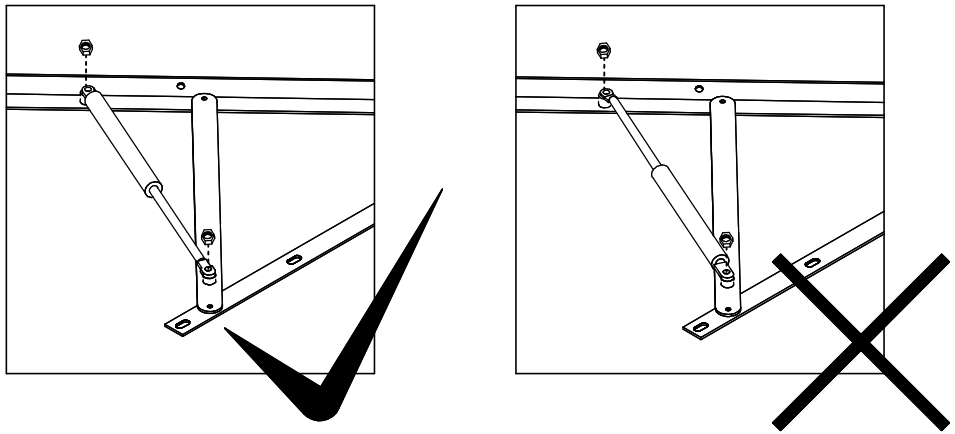


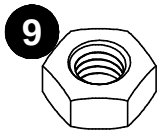

X 2


Step 14


Attach **R** to one **G** with ❹ & ❽**.**

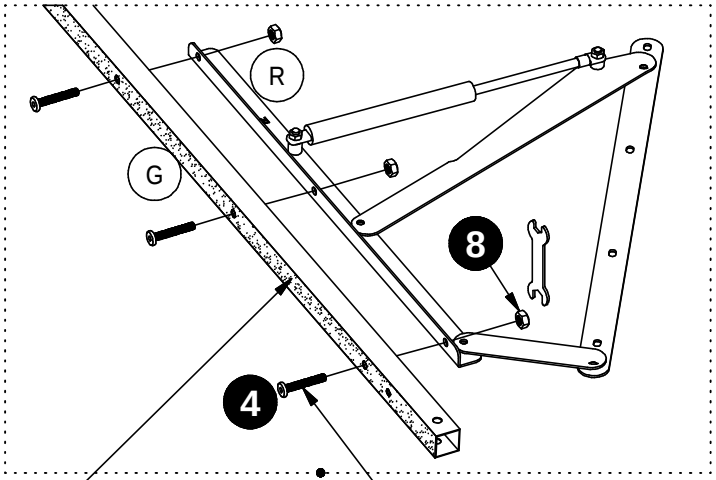

⚠ Side with Velcro!


⚠ Tighten this bolt first, and then the rest two bolts, this will help alignment.

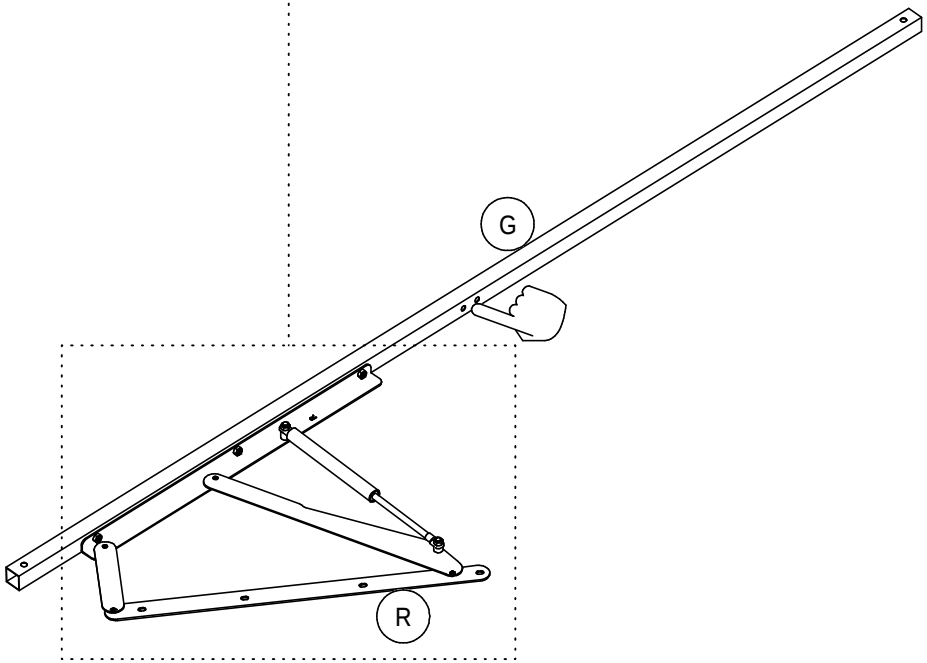

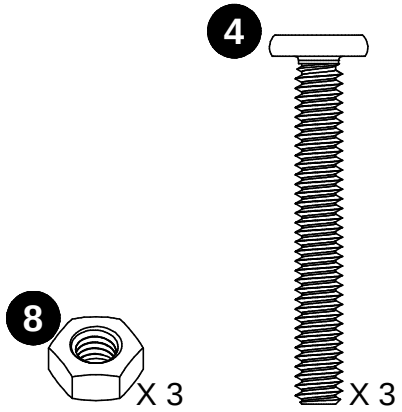


Step 15


Attach **L** to another **G** with 4 & 8 .

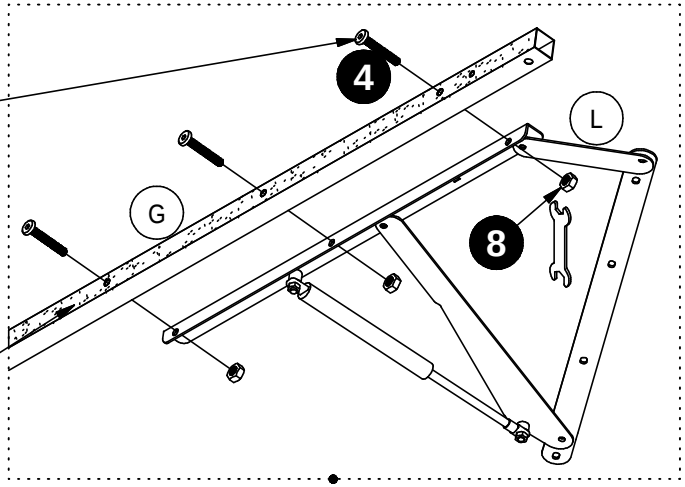


⚠ Tighten this bolt first, and then the rest two bolts, this will help alignment.

⚠ Side with Velcro!

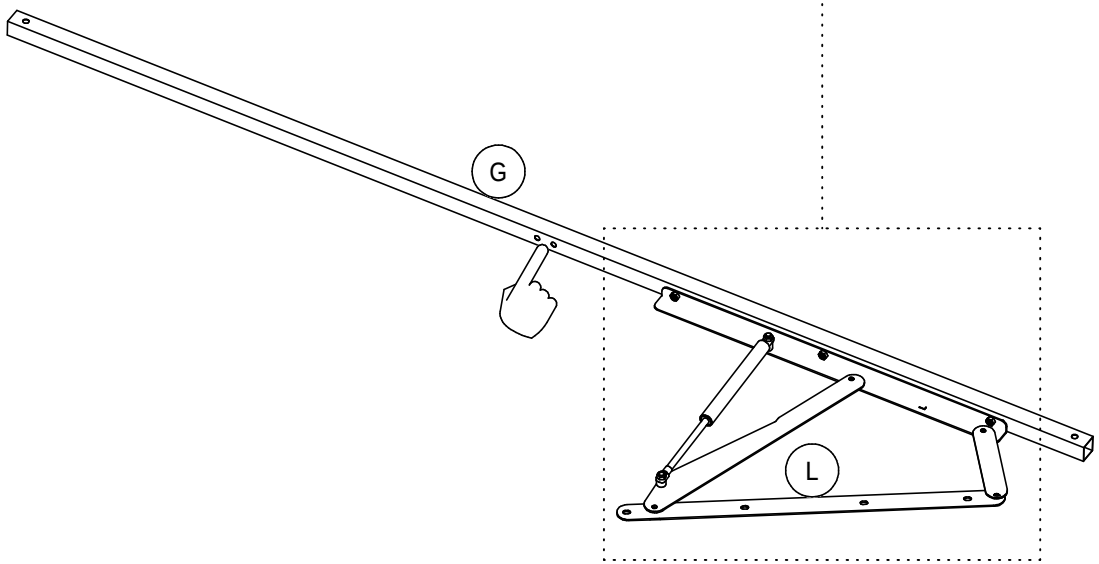

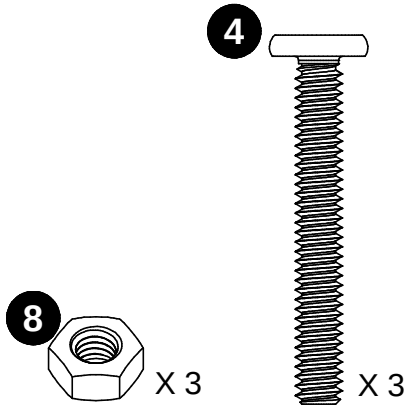


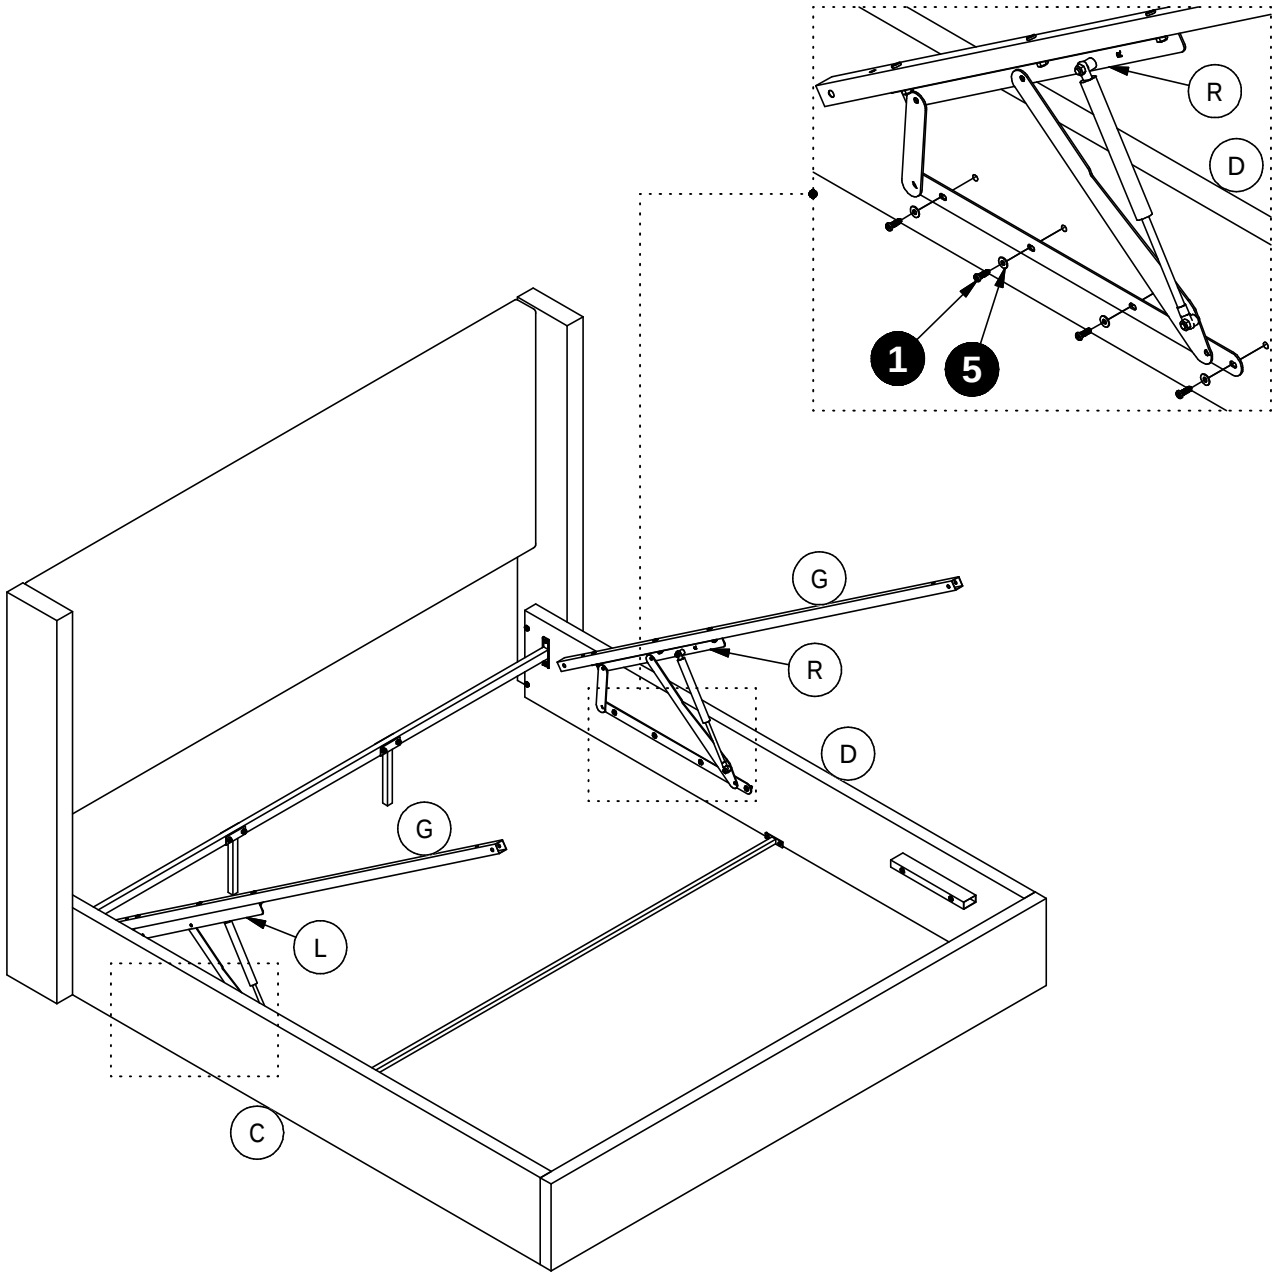

Step 16

Attach **R** and **G** to **D** with ❶ & ❺**.**
Attach **L** and **G** to **C** with ❶ & ❺**.**


⚠ Making sure the Velcro side on the **G x 2** is facing up before you proceed the next step.

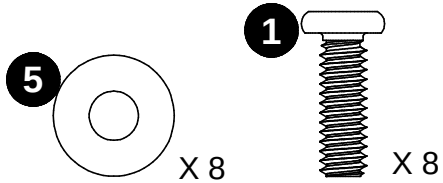


Step 17

Attach **E** to **G x 2** as illustrated with ❷ & ❽.


⚠ Note the nut faces outside of the bed.

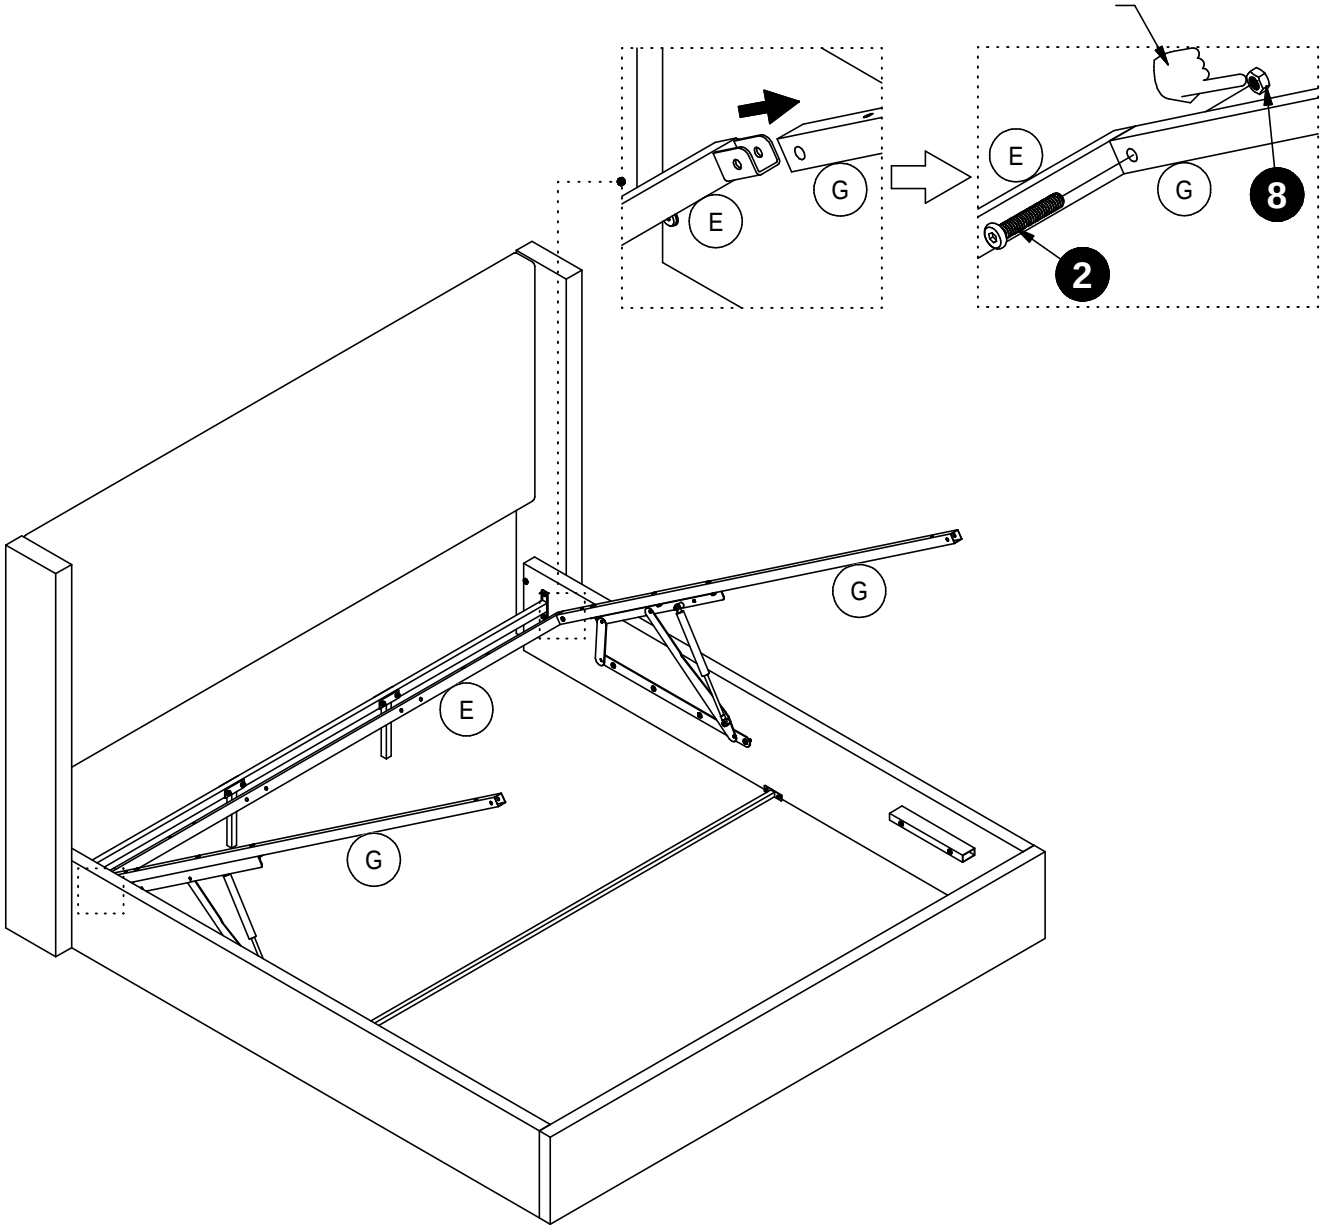

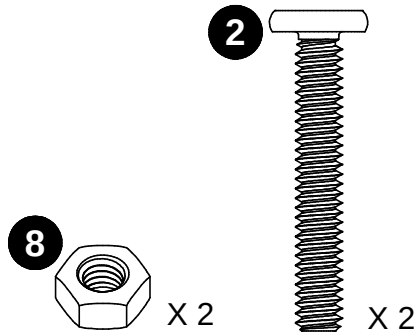



Step 18


18.1 Slide **W x 2 & X** onto **F.**
18.2 Attach **F & W & X** to **G x 2** with **2** & **8**.

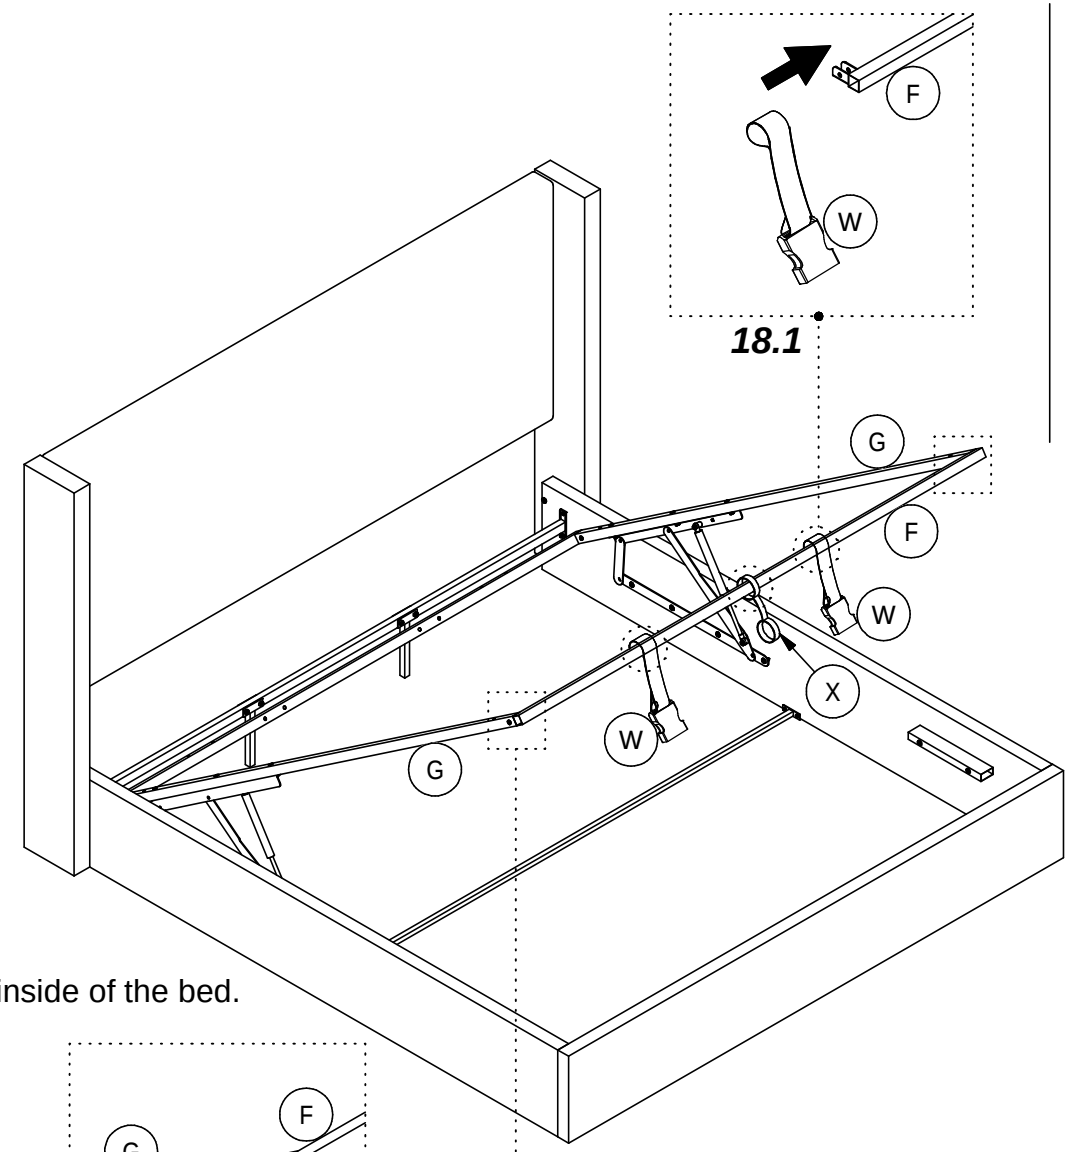

⚠ Note the nut faces inside of the bed.

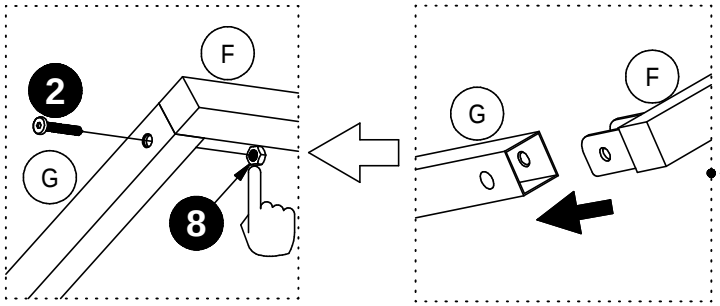


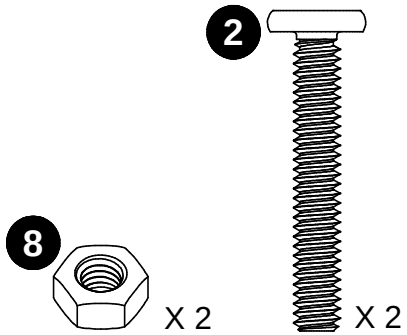

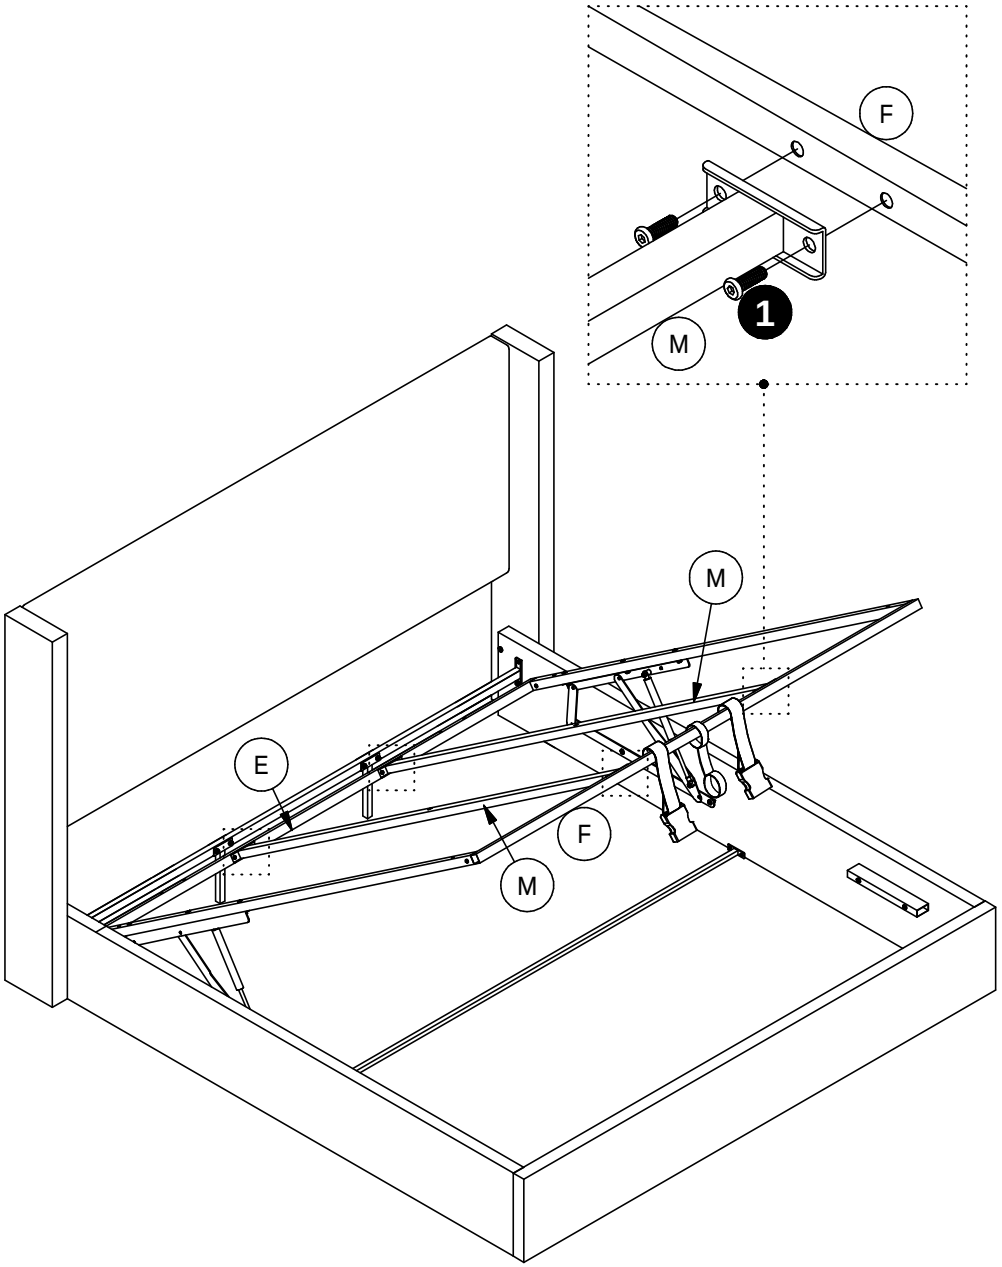


Step 19


Attach **M x 2** to **E** and **F** as illustrated with 1**.**

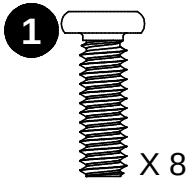

Step 20


Attach **Y** to **G x 2** as illustrated with **1**.

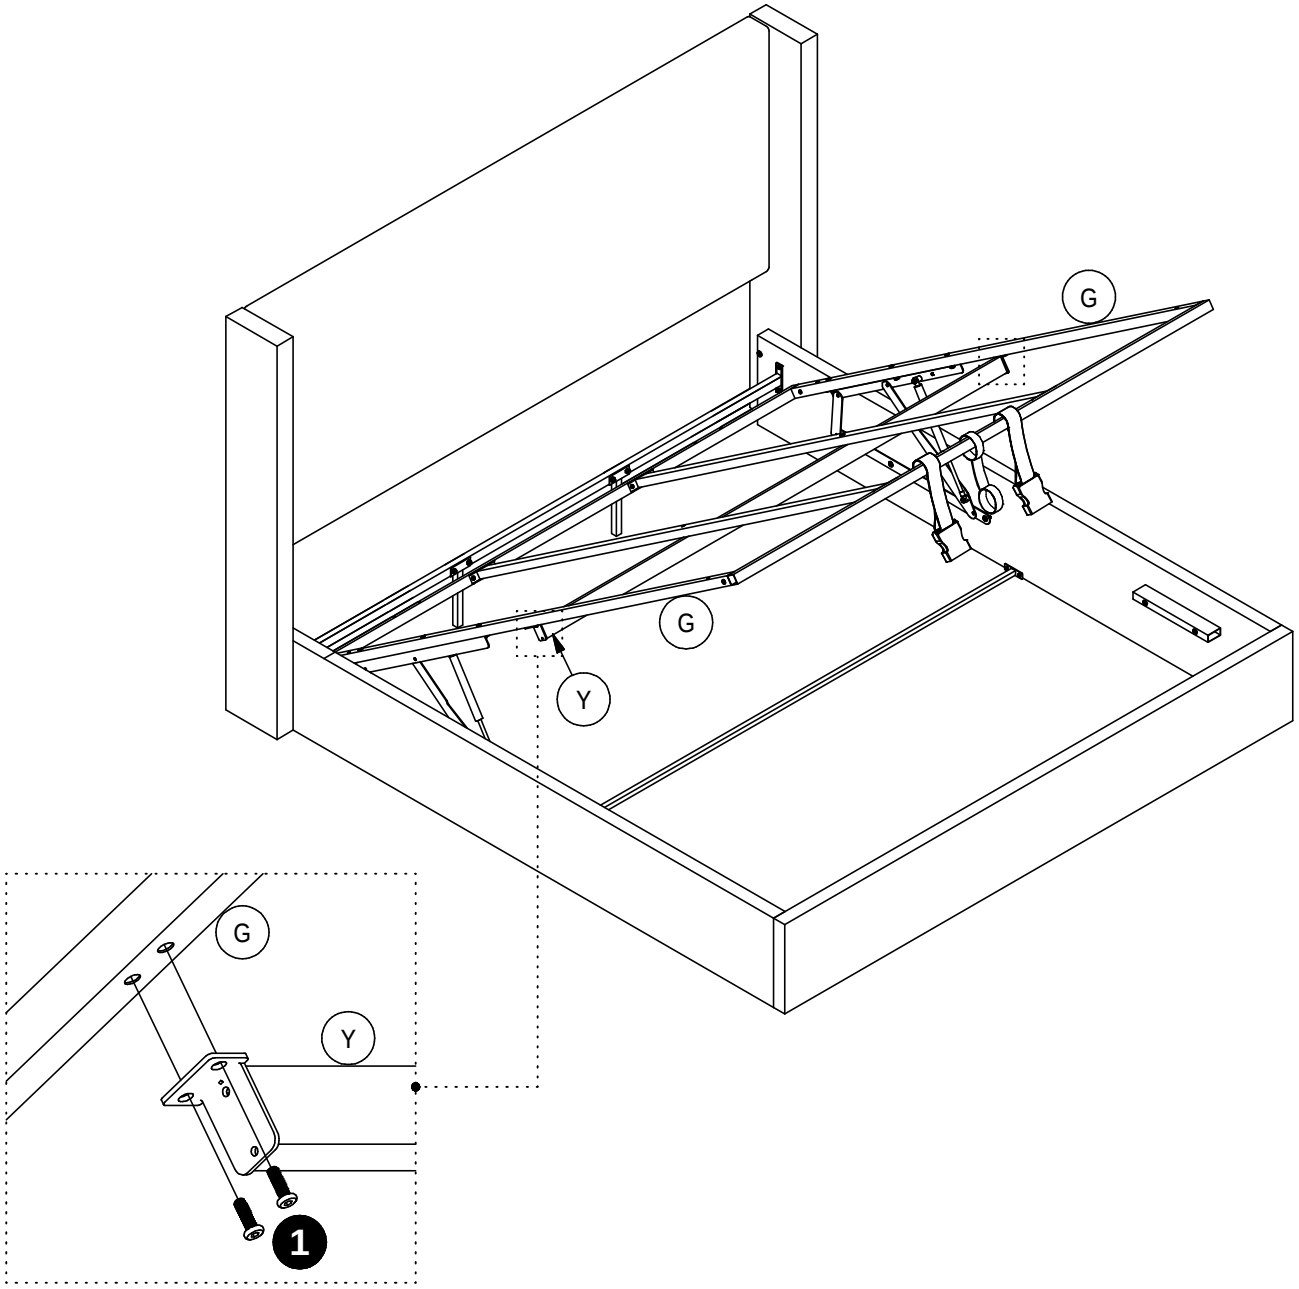


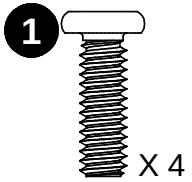


Step 21

21.1 Attach **M x 2** to **Y** as illustrated with ❷**.**
21.2 Insert **O x 2** into **E** as illustrated.

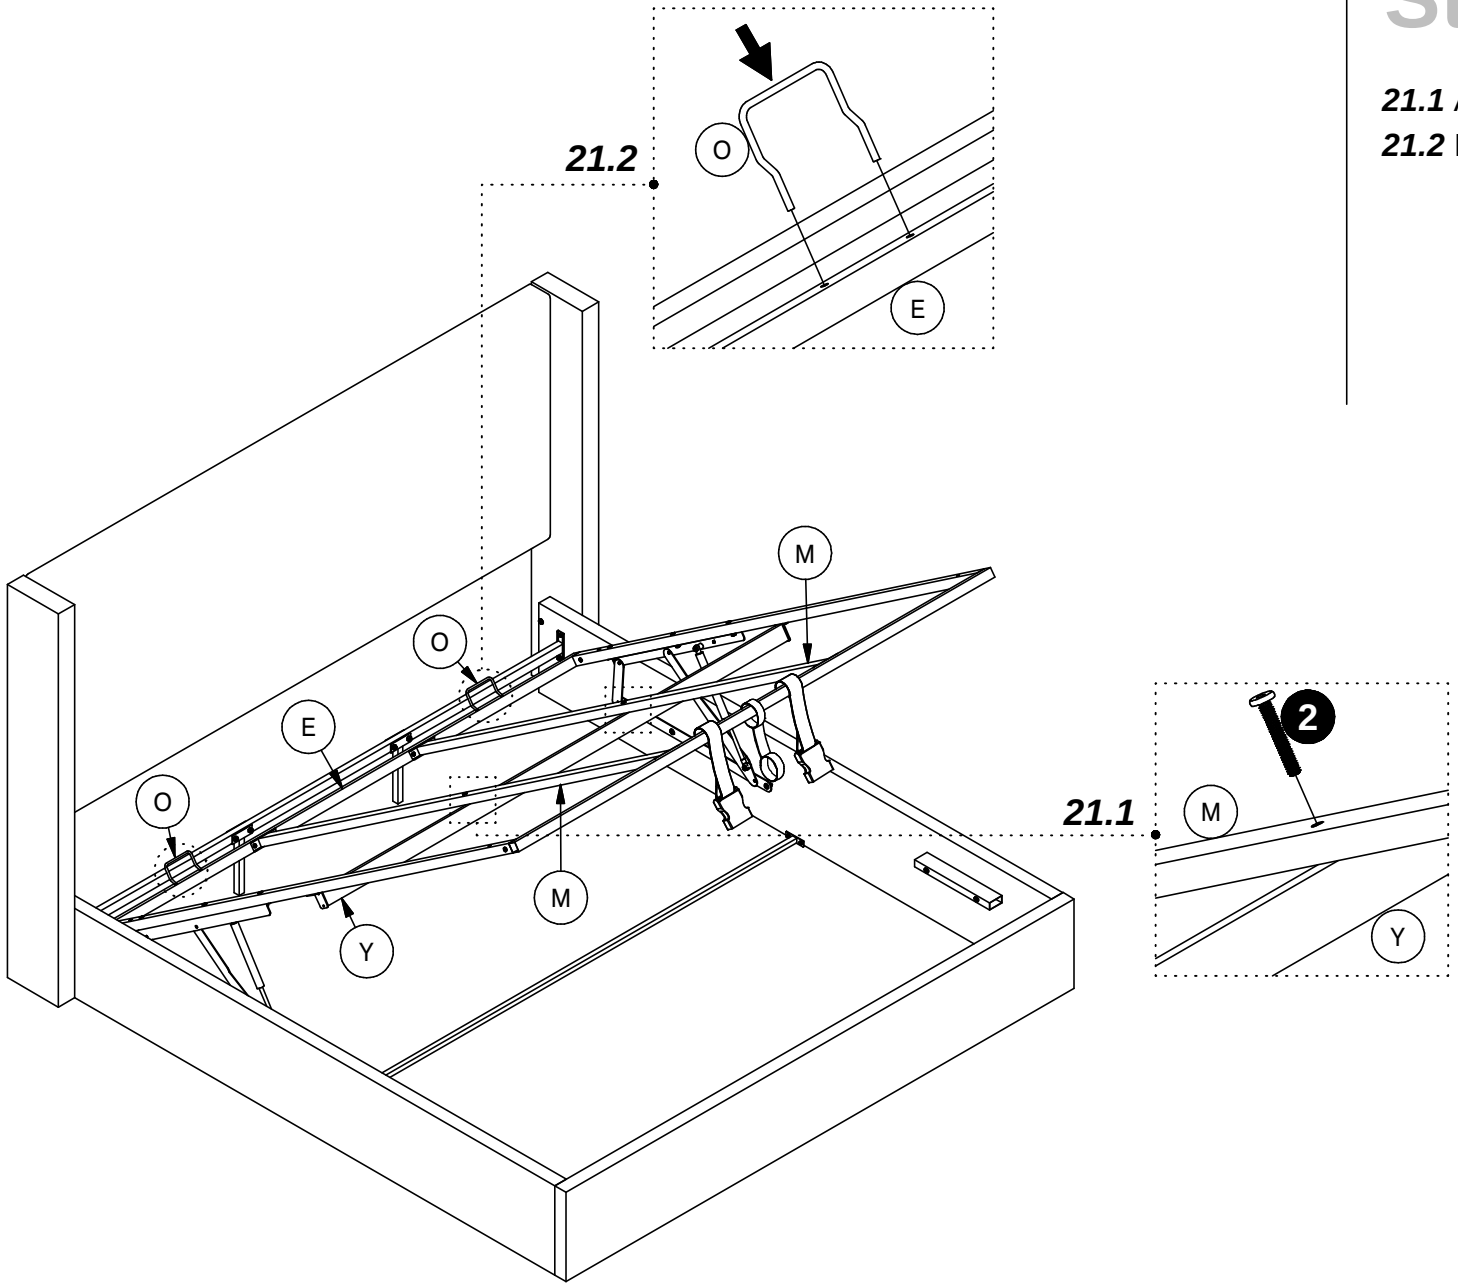

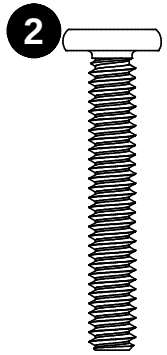

X 2

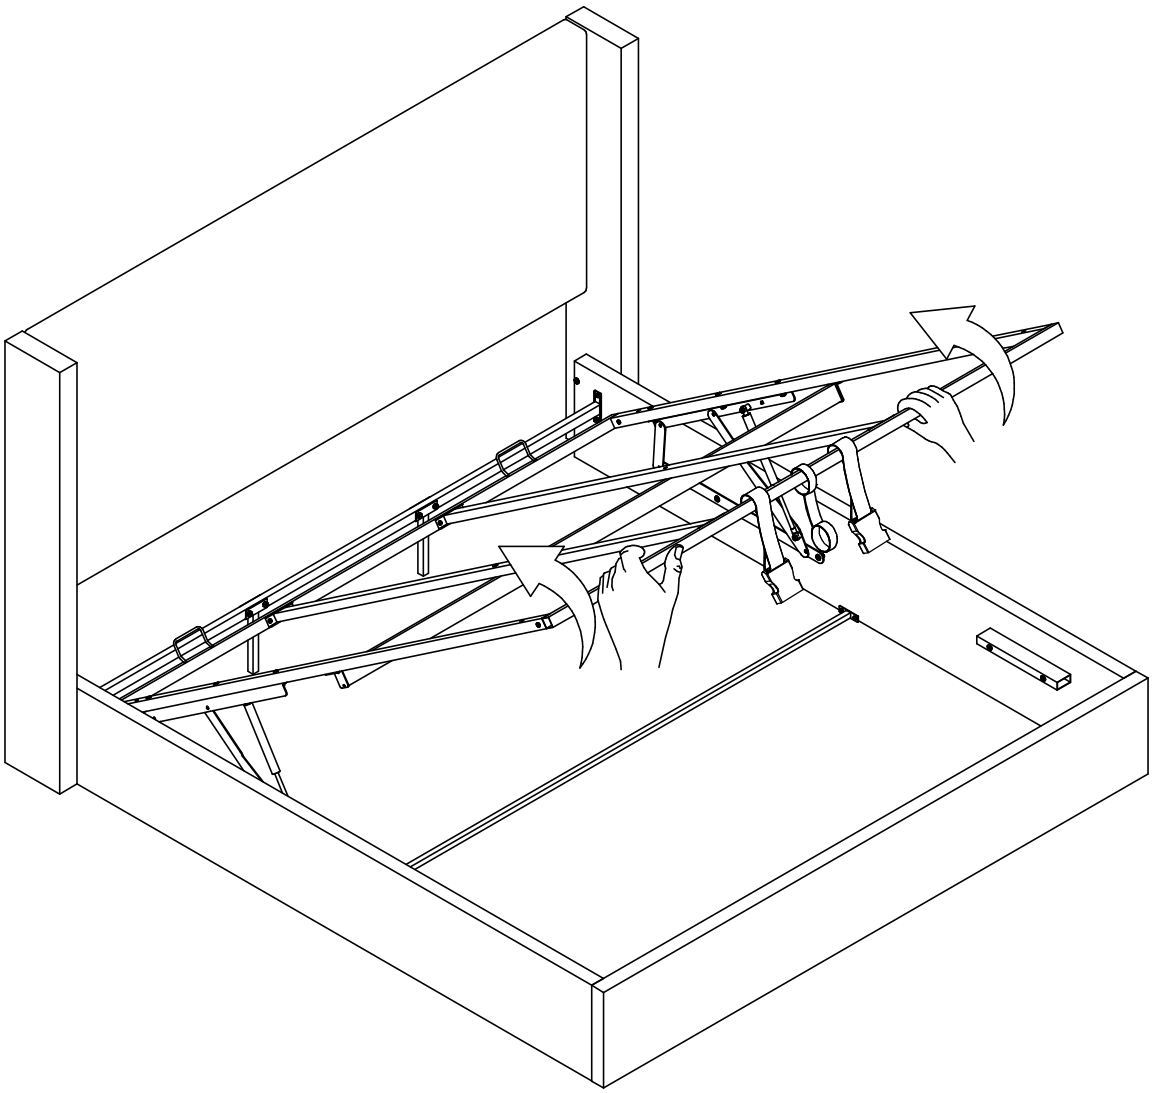


Tips for step 22

2 People are required to press down the frame during the assembly.

・ Please press the position indicated in the figure below on the frame.


・The gas springs have certain resistance due to safety. Please press hard!

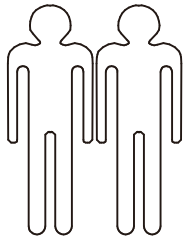


2-person

Step 22

Press the bed frame down and fasten buckle **W x 2** to buckle **V x 2** as illustrated. This ensures safety during subsequent assembly steps.

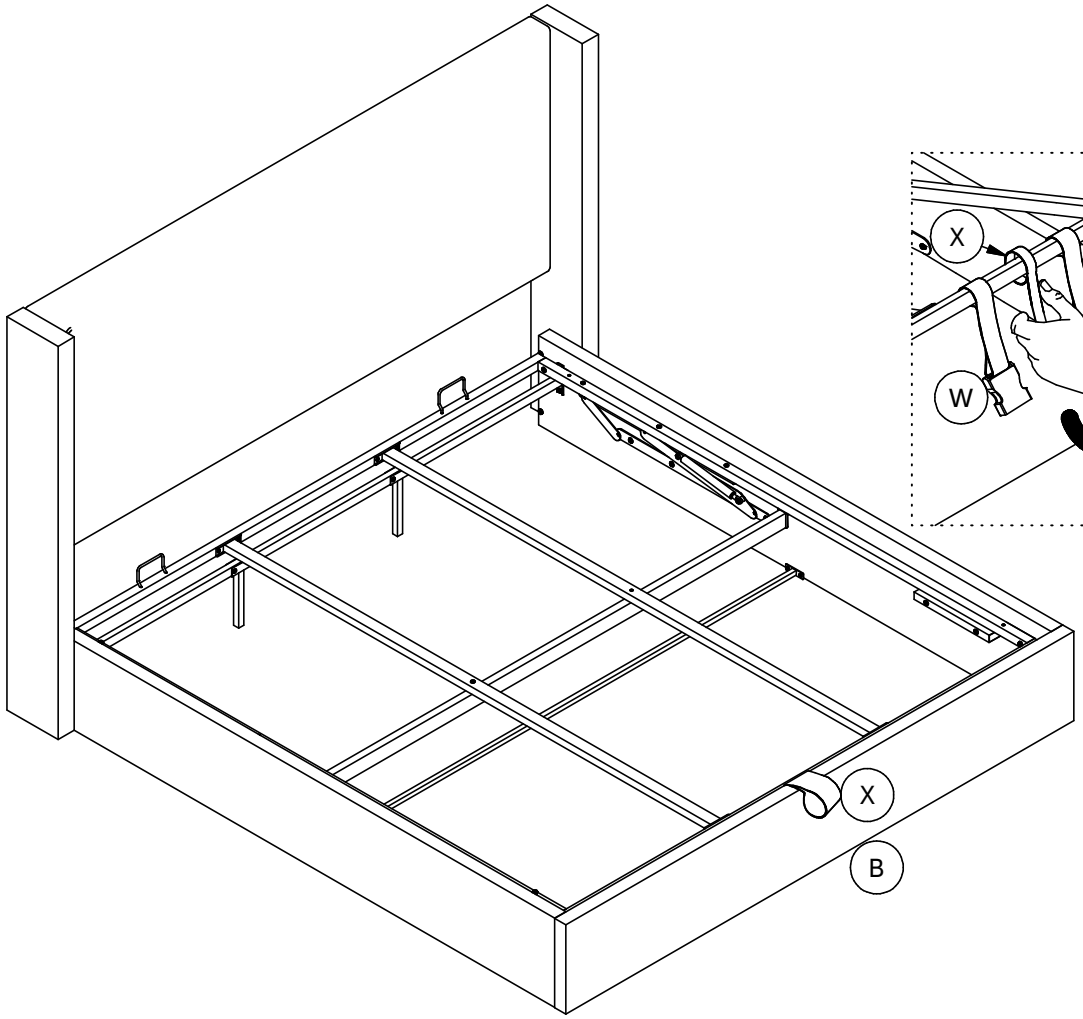


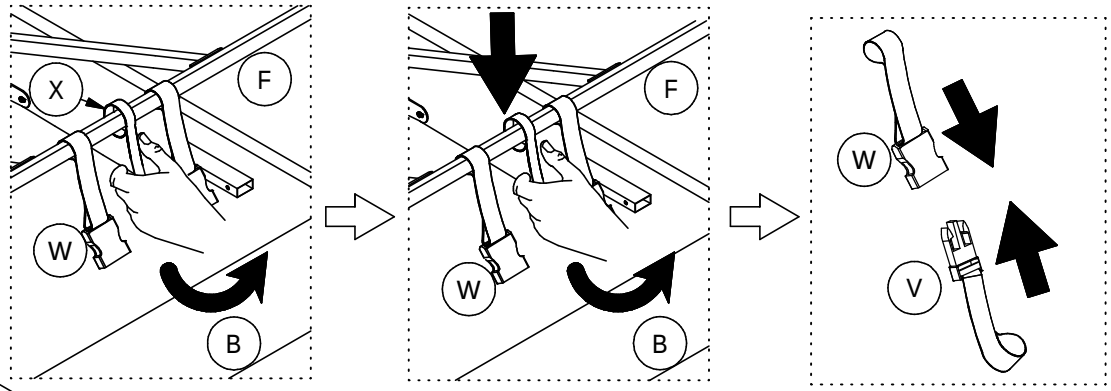


⚠ The hydraulic lift mechanism is highly tensioned and currently operating without the weight of a mattress. Multiple people are required to safely press the frame down.


Step 23

23.1 Fix the first slat of **P** to the pre-drilled holes on **G x 2** as illustrated with ❸ & ❺.
23.2 Spread the slats **P** along the bed rails **G** with equal spacing**.**

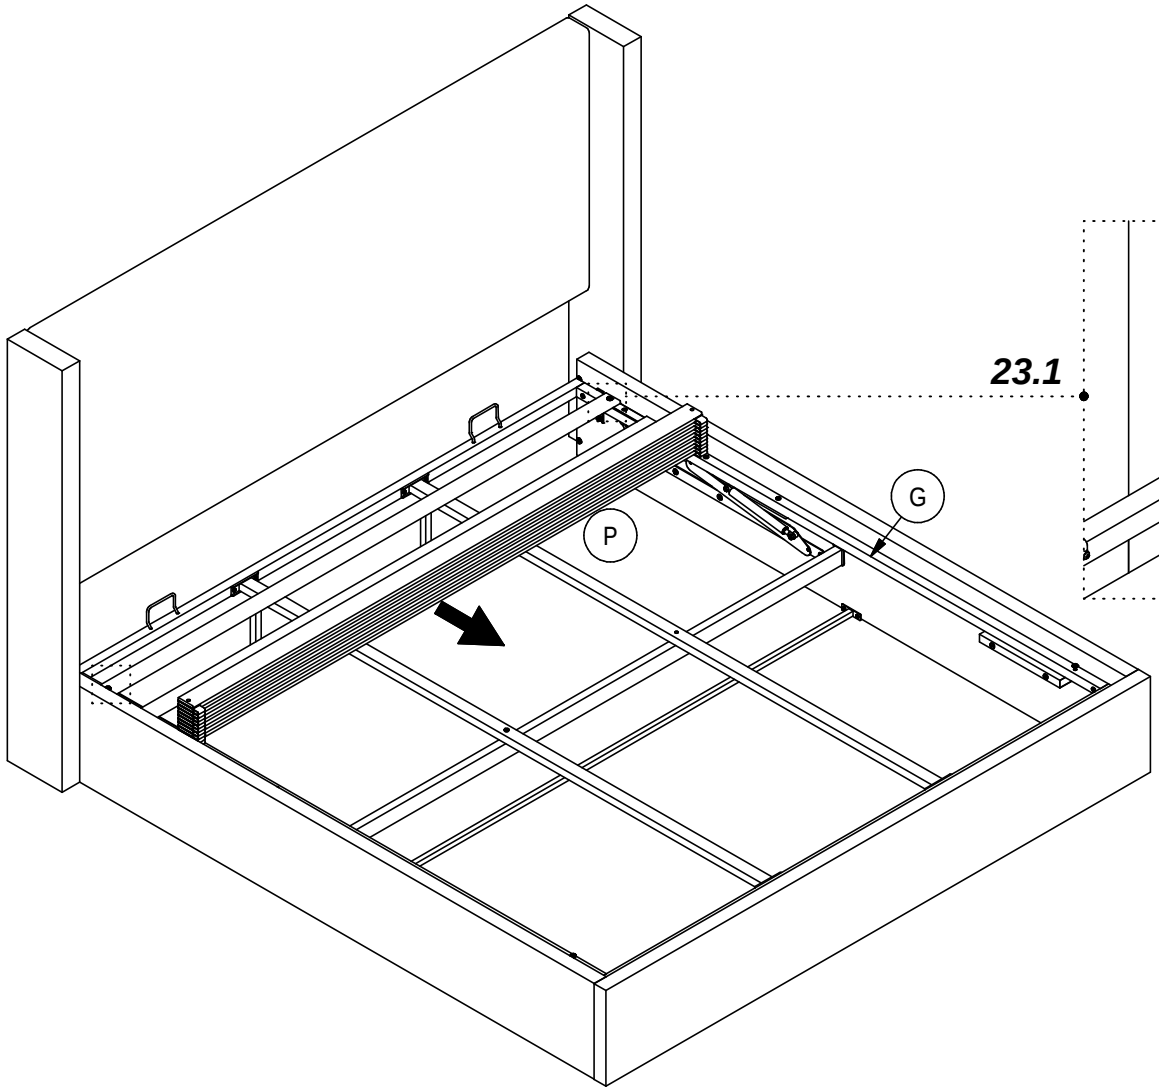


23.1

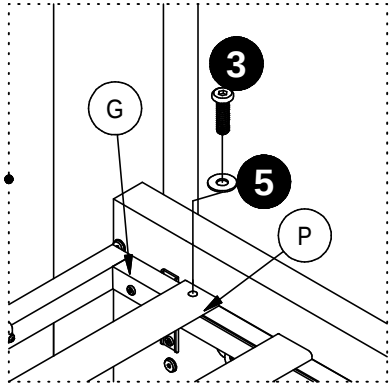

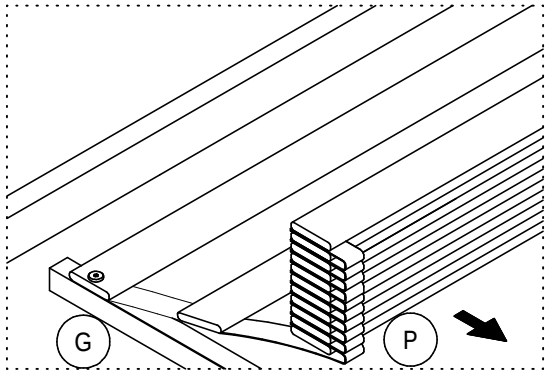


23.2

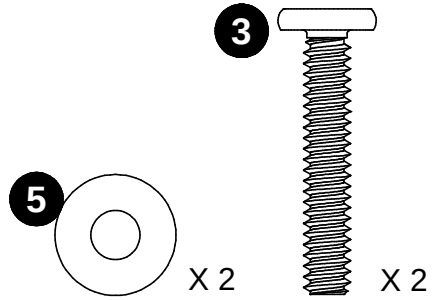



Step 24

Fix the last slat of **P** to the pre-drilled holes on **G x 2** as illustrated with ❸ & ❺.

⚠ Note: If the holes not aligned,adjust the hook-and loop fasteners to ensure a perfect alignment.

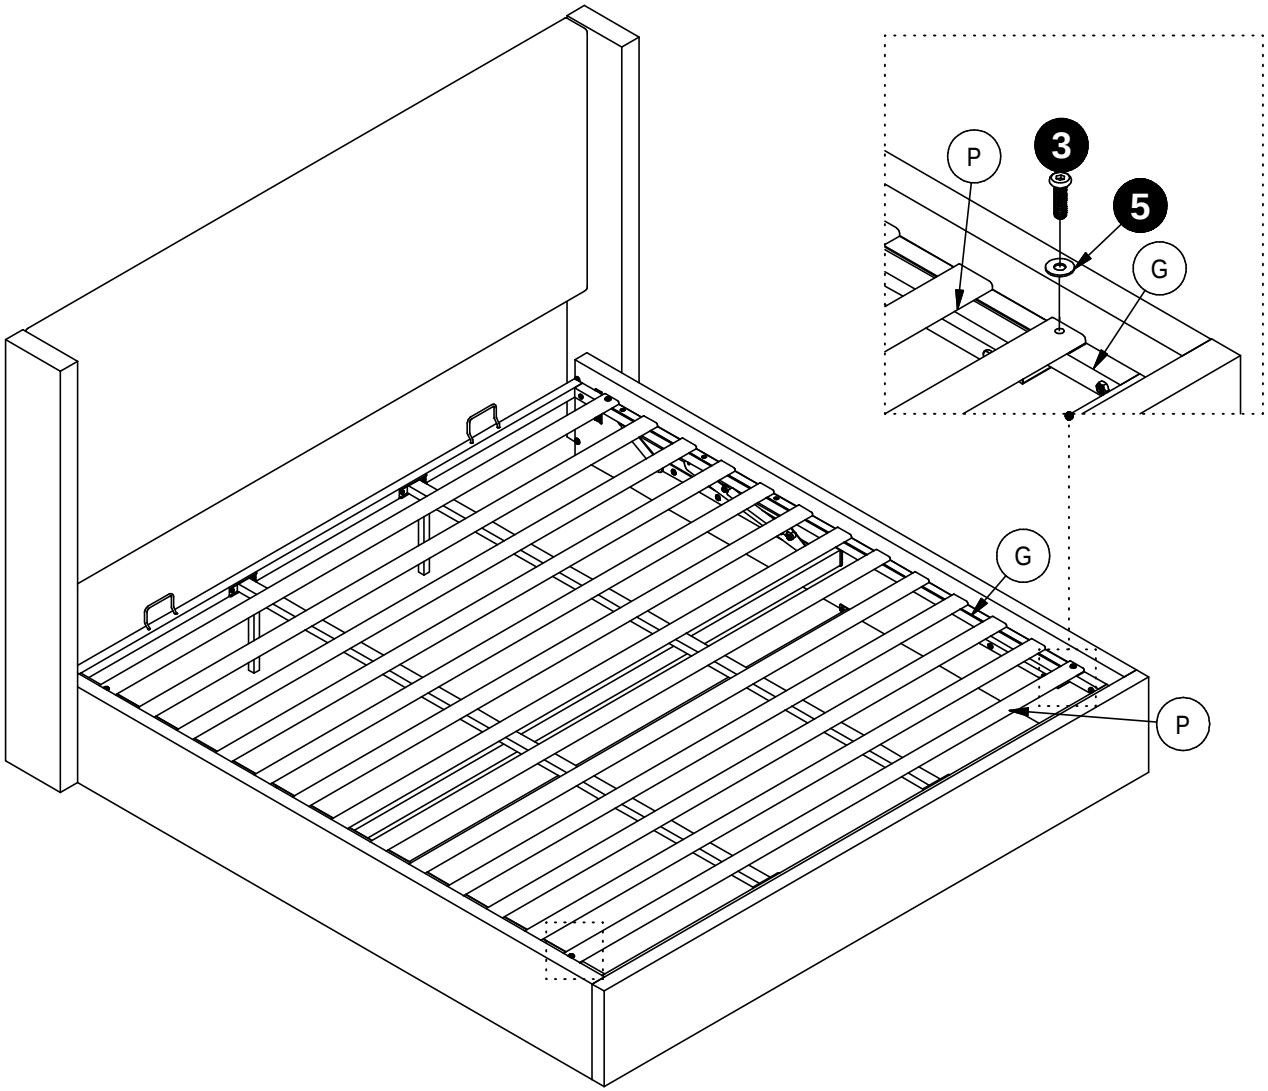

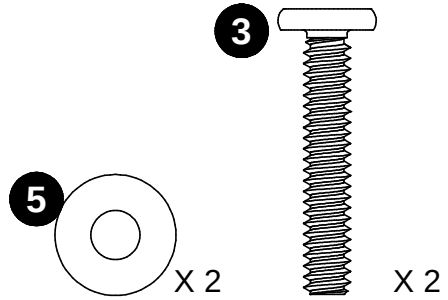

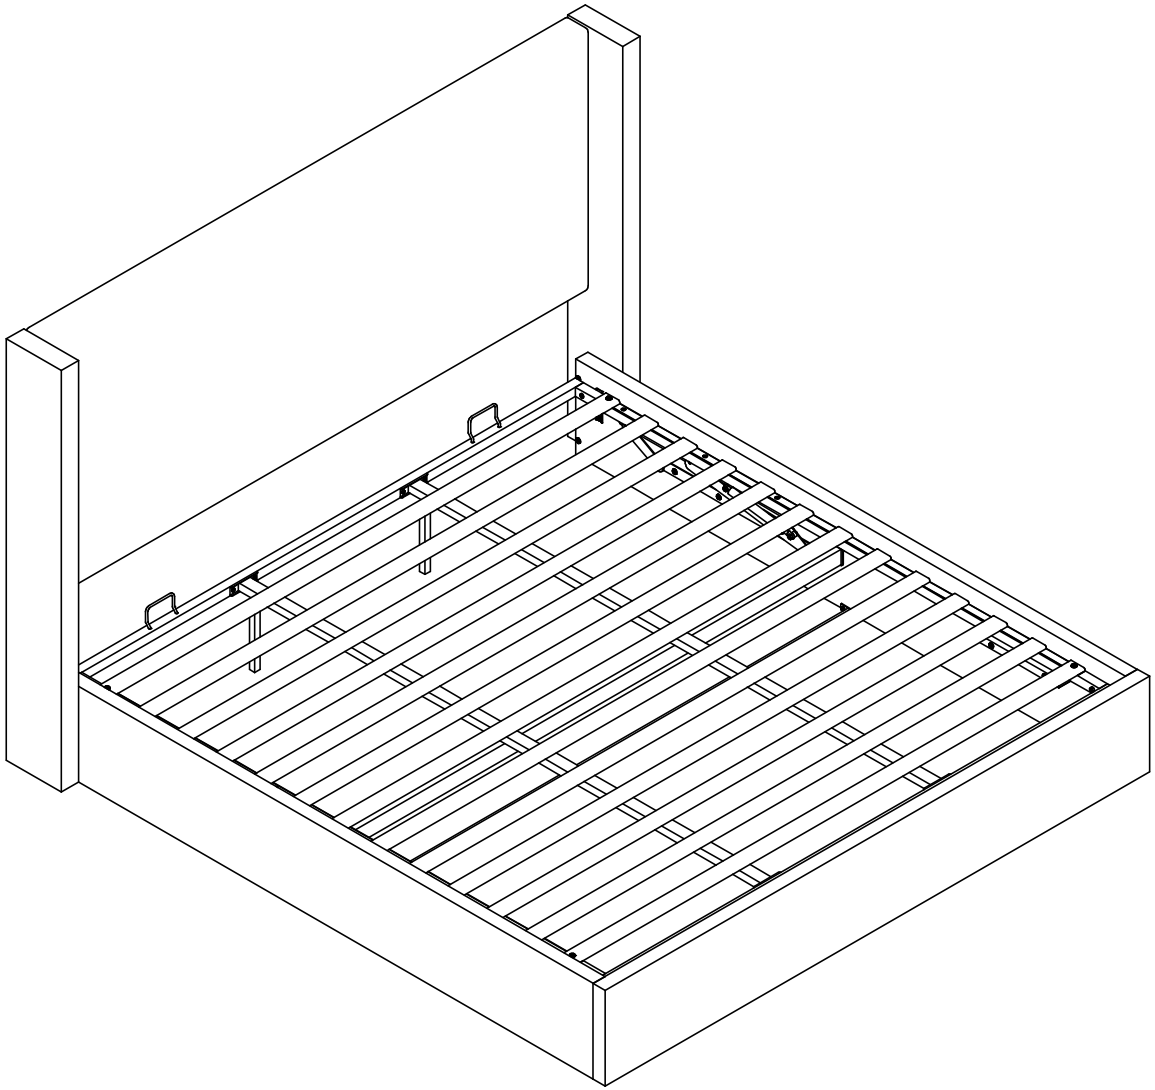

NOTICE: Maximum Weight Capacity:

Bed: 1,000 lbs /454 kg

That's it! You have finished assembling your storage bed!

WARNING

- When closing the bed frame, must always fasten the buckles W and V, for safety use!
- When lifting or lowering the bed frame, it can only support items weighing less than 136 pounds.
- When lifting or lowering the bed frame,keep a safe distance between the body and the frame to avoid injury.
- Ensure that there are no people or objects interfering with the bed's sides or footboard when lifting or lowering the bed frame to avoid any dangers.
- Before entering underneath the bed, make sure the bed frame is lifted to its highest position and confirm it will not drop after being released.