
Patio Chaise Lounge

ASSEMBLY MANUAL

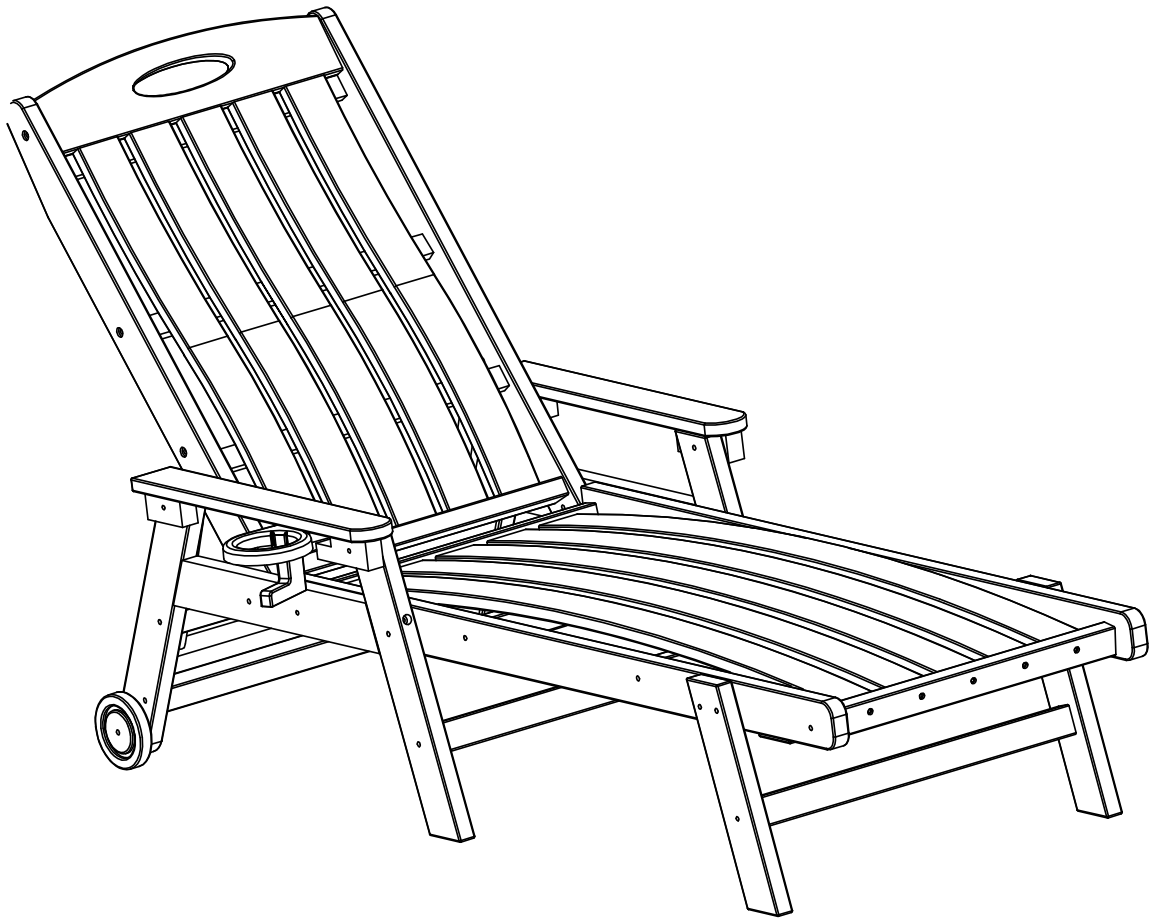

BEFORE STARTING ASSEMBLY

① Please check all parts and components to ensure that there are no damages or missing items BEFORE starting the construction of the product.


② For ease of construction, you may need a Power Drill (Cordless, Variable Speed).

③ It would be much easier to assemble the product with two or more people.


④ Some parts have metal edges. Please be careful when handling components.

⑤ Cleaning tips: For a quick clean, simply wipe with soap and water; for a deep clean, use a clean cloth to apply a solution of 1/3 bleach and 2/3 water to the lumber, let it sit for a few minutes (this won't affect the color), then loosen dirt and debris in surface grooves with a soft-bristle brush and rinse with a hose.


IMPORTANT: Please contact Customer Service if you encounter any issues or find any missing parts.




① Seat Panel 1X

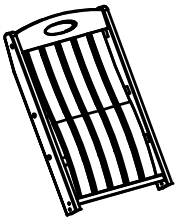


② Back Panel 1X

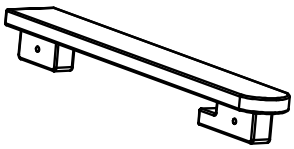

③ Right Arm 1X

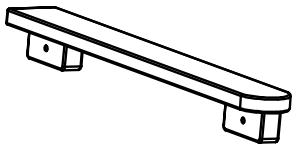

④ Left Arm 1X



Right Foot Set

⑤ 1X



Left Foot set

⑥ 1X




Bar

⑦ 4X




Right Front Leg

⑧ 1X




Right Rear Leg

⑨ 1X




Bracket


⑩ 2X



⑪ Left Front Leg 1X

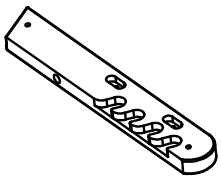

⑫ Left Rear Leg 1X

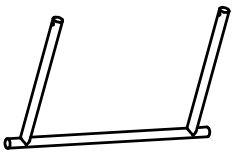


⑬ adjustment rod 1X



Wheels

㉒ 2X



㉓ Cup Holder 1X



M6*50mm Bolt

14 2X



M6*55mm Bolt

15 6X



M6*60mm Bolt

16 10X



M6 Nut

17 18X



M6 Washer

18 19X



ST6*100mm Screw

19 4X



ST6*50mm Screw

20 8X




M6*60mm Bolt

21 1X



Allen key

24 1X



Spanner

25 1X

Adirondack Chair should include the following parts.
Please inspect box contents to ensure you have received all components.
If you are missing any parts, need assistance withassembly or have questions, please contact our Customer Service.



④ 1X



⑩ 1X



⑪ 1X



⑫ 1X



⑮ 2X



⑲ 2X




⑰ 2X



⑱ 2X




㉔ 1X



㉕ 1X

Step 1: Attach the Bracket ⑩ Left Front Leg ⑪ and Left Rear Leg ⑫ with two screws ⑲.

Step 2: Use Screw ⑮ to fix top frame Left Arm ④ to side Stand Left Front Leg ⑪,and attach side block: Screw ⑮+ Washer ⑱+ Nut ⑰, lock tight.

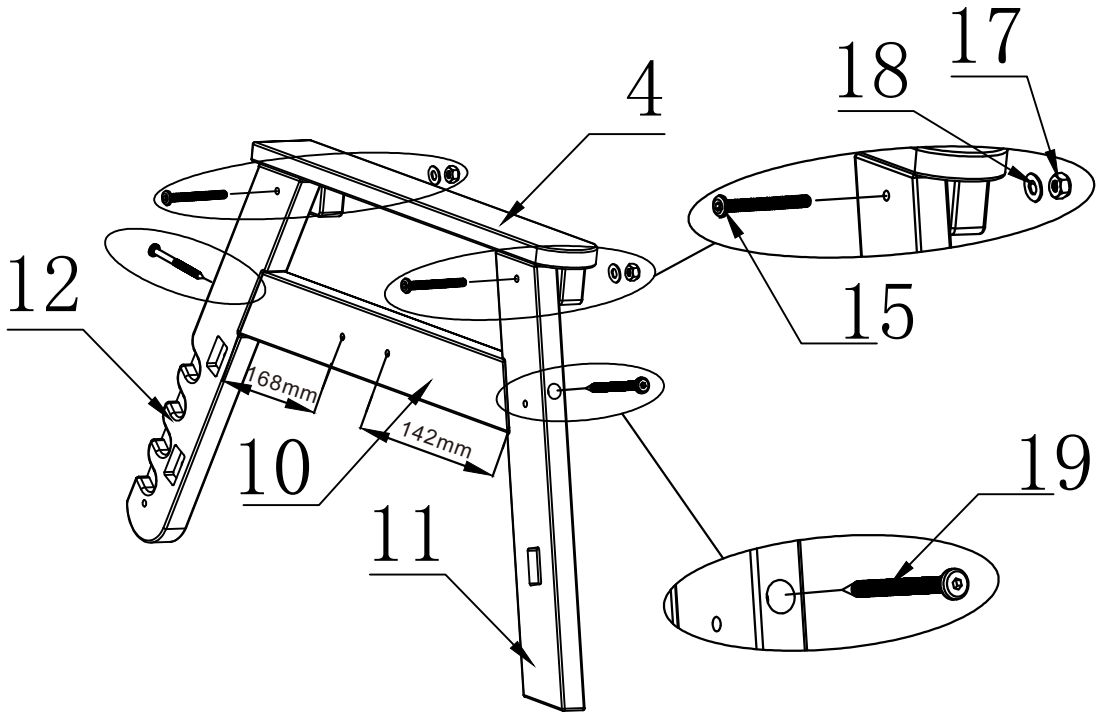

Step 3: Repeat the step 2 to attach Left Arm ④ and Left Rear Leg Front Leg ⑫.


Note: The Bracket ⑩ and the front and rear leg are connected using a mortise-and-tenon joint. After aligning the joints, gently tap with a hammer to fit the tenon into the groove.

1

Assemble the left armrest.



③ 1X



⑧ 1X



⑨ 1X



⑩ 1X



⑮ 2X



⑲ 2X




⑰ 2X



⑱ 2X



㉔ 1X




㉕ 1X

Step 1: Attach the Bracket ⑩ to Right Front Leg ⑧ and Right Rear Leg ⑨ with two screws ⑲.

Step 2: Use Screw ⑮ to fix top frame Right Arm ③ to side Stand Right Front Leg ⑧ ,and attach side block:
Screw ⑮+ Washer ⑱+ Nut ⑰, lock tight.

Step 3: Repeat the step 2 to attach Right Arm ③ and Right Rear Leg ⑨.

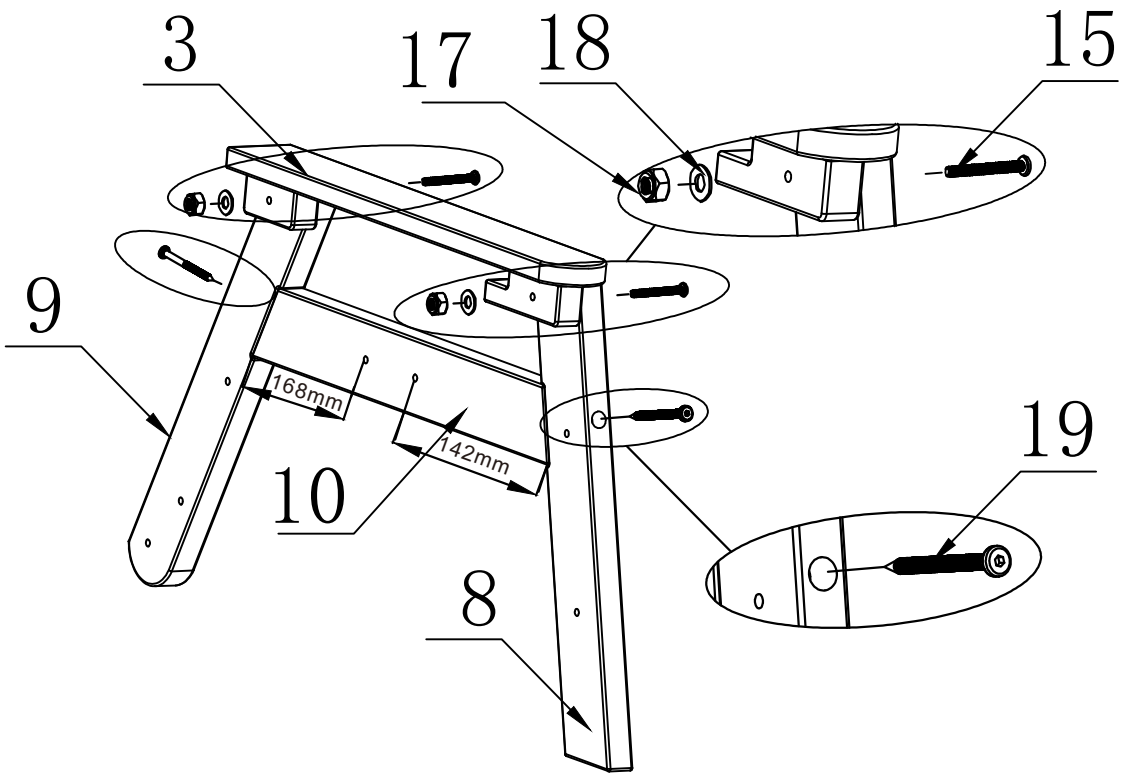


Note: The Bracket ⑩ and the front and rear leg are connected using a mortise-and-tenon joint. After aligning the joints, gently tap with a hammer to fit the tenon into the groove.

Assemble the Right armrest.

⑦ 3X

⑳ 6X

㉔ 1X

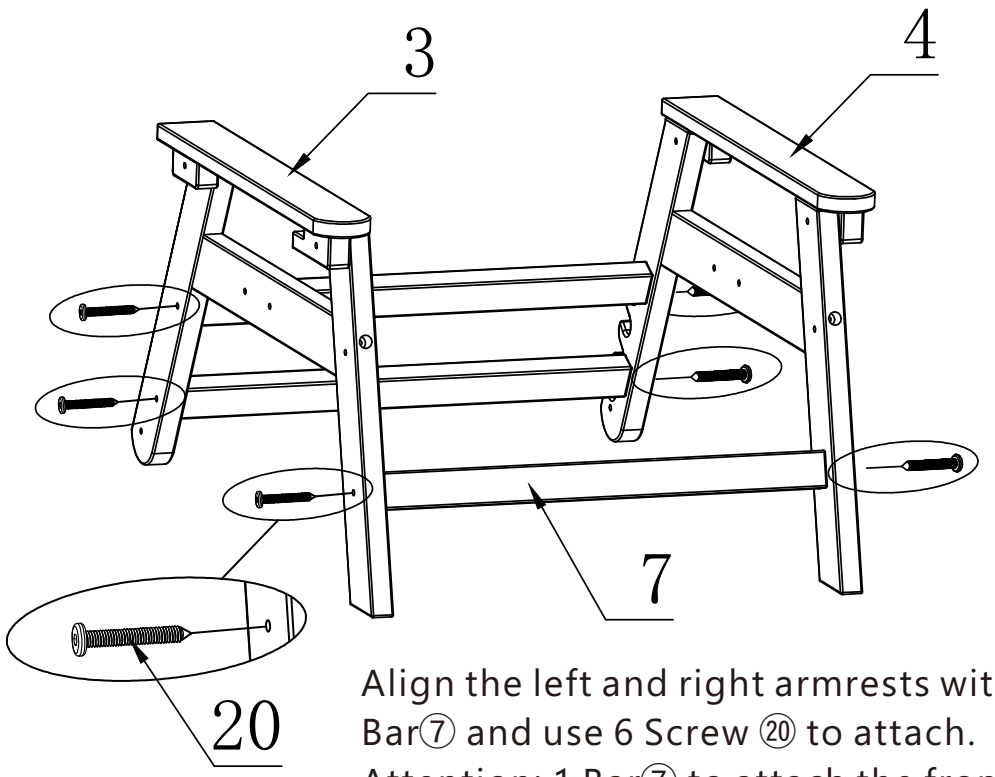

Align the left and right armrests with 3 Bar⑦ and use 6 Screw ⑳ to attach.
Attention: 1 Bar⑦ to attach the front legs, and 2 Bar⑦ to attach the Rear legs.

Attach the left and right armrests together


⑤ 1X

⑥ 1X

⑦ 1X

⑳ 2X

㉔ 1X

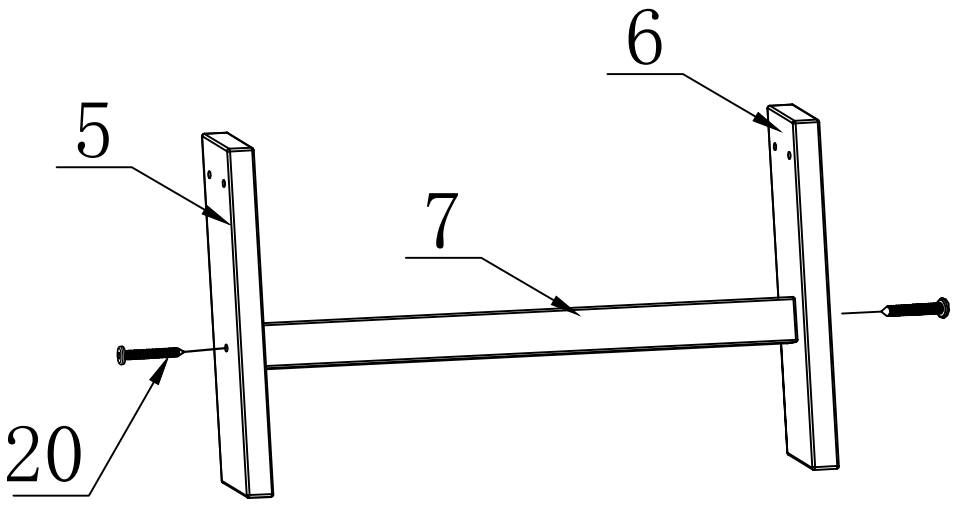

Attach the Bar ⑦ to right foot set ⑤ and left foot set ⑥ with 2 Screw ⑳.

3

Assemble the foot set



① 1X



⑯ 8X




⑰ 8X



⑱ 8X




㉔ 1X



㉕ 1X

Step 1:Place the Seat Panel ① onto the pre-assembled armrest frame.
Align all mounting holes on the seat panel with the holes on the frame.

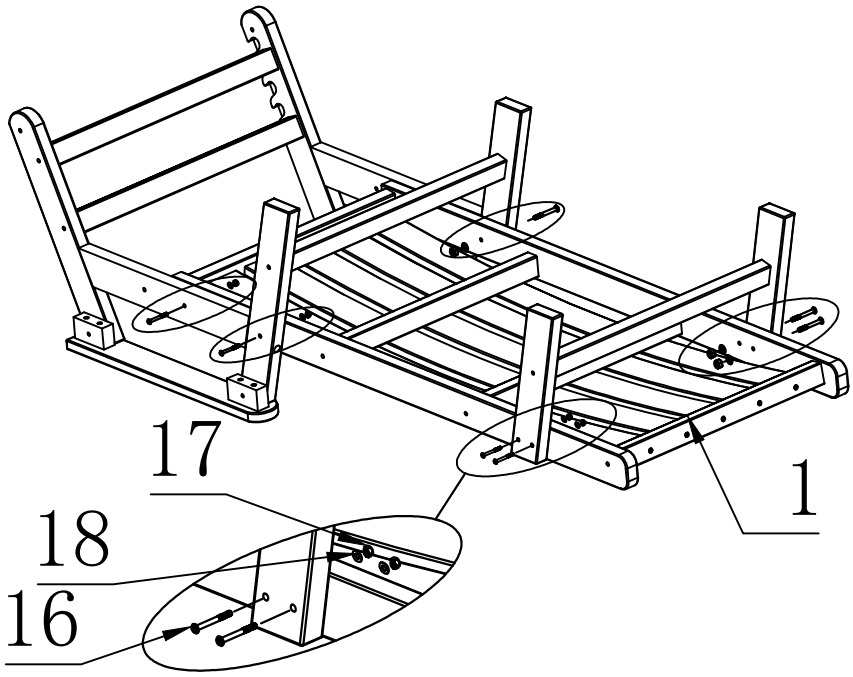


Step 2:Fit one Washer ⑱ onto each Bolt ⑯, then insert the bolt through the aligned holes. Attach one Nut ⑰ to the end of each bolt by hand. Hold the Bolt ⑯ in place with Allen Key 24, then tighten each Nut ⑰ securely with Wrench 25.

Step 3:Check that all 8 sets of bolts, washers, and nuts are fully tightened.
Ensure the seat panel is flat, level, and securely attached to the frame.

Assemble the Seat Panel

②	1X
⑮	2X
⑯	2X
⑰	4X
⑱	4X
㉒	2X
㉔	1X
㉕	1X


Step 1:Position Back Panel② and align holes. Equip Bolt⑯ with matched washersFix with Nut⑰ and tighten fully.

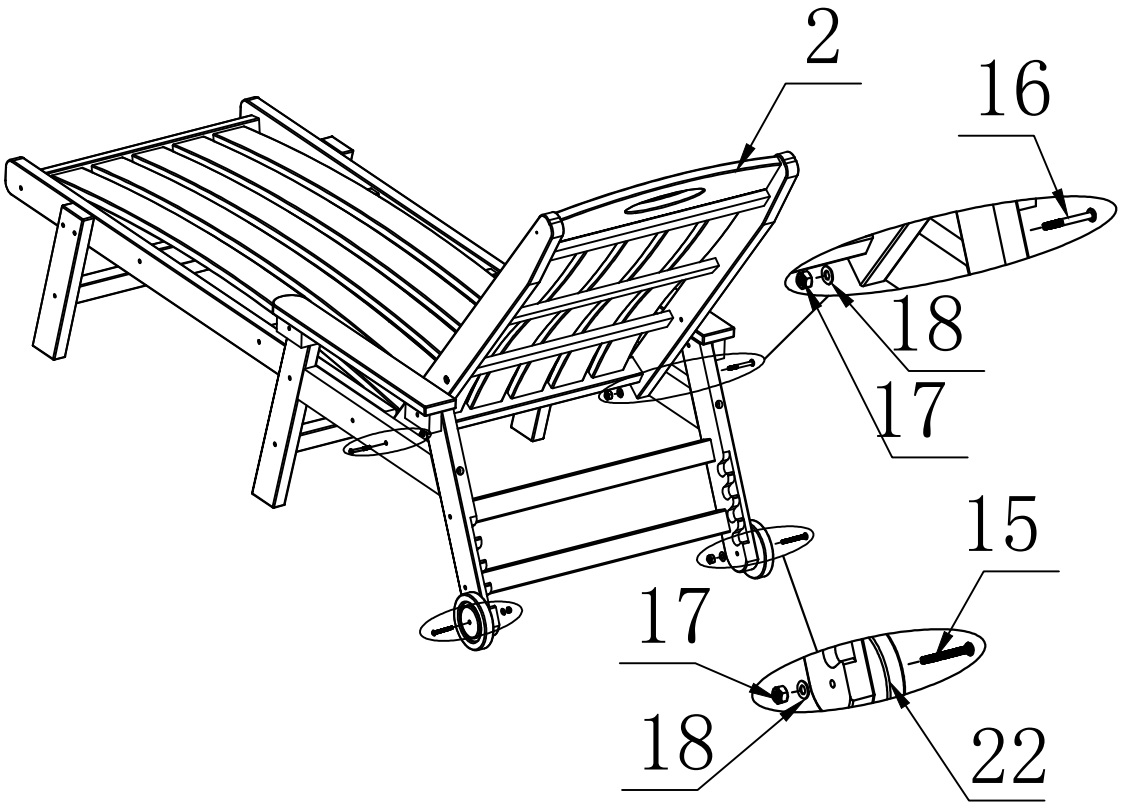

Step 2:Position Wheels ㉒ and align holes. Equip Bolt ⑮ with matched washers , don't fully tighten the bolts and nuts.

Assemble the Back panel and wheels


⑬	1X
⑭	2X
⑰	2X
⑱	2X
㉔	1X
㉕	1X

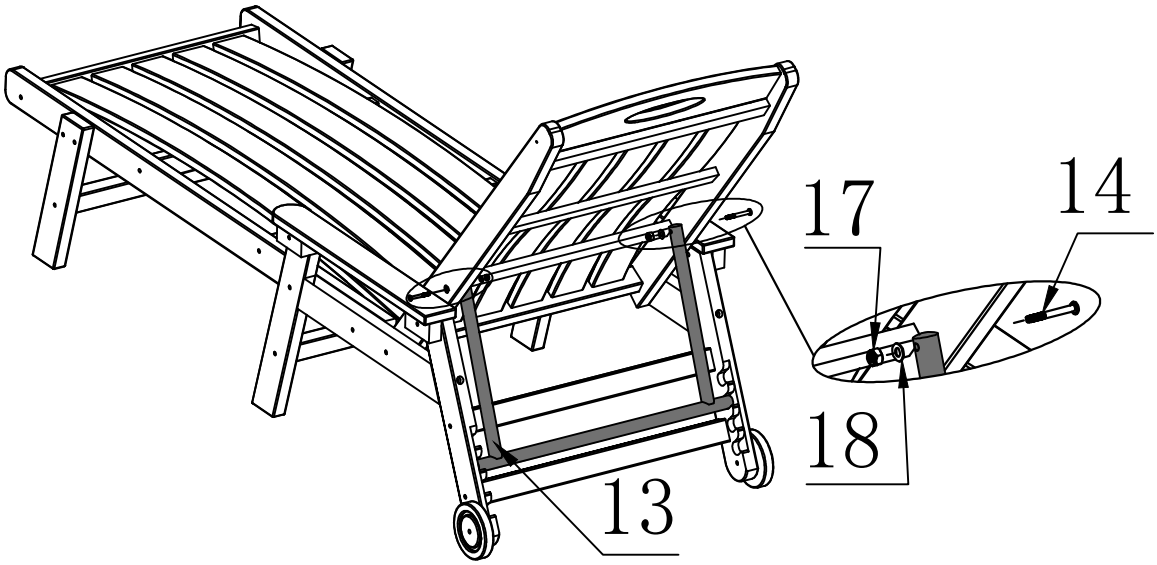

Step 1:Align the holes of Adjustment rod ⑬ with the mounting positions on the lounge chair frame.
Step 2:Place one Washer ⑱ onto each Bolt ⑭, then insert the bolts through the aligned holes. Thread Nut ⑰ onto the end of each bolt by hand.
Step 3:Hold Bolt ⑭ steady with Allen Key ㉔, then tighten the nuts securely with Wrench ㉕.


Assemble the Adjustment rod

 ㉑	1X
 ⑱	1X
 ㉓	1X

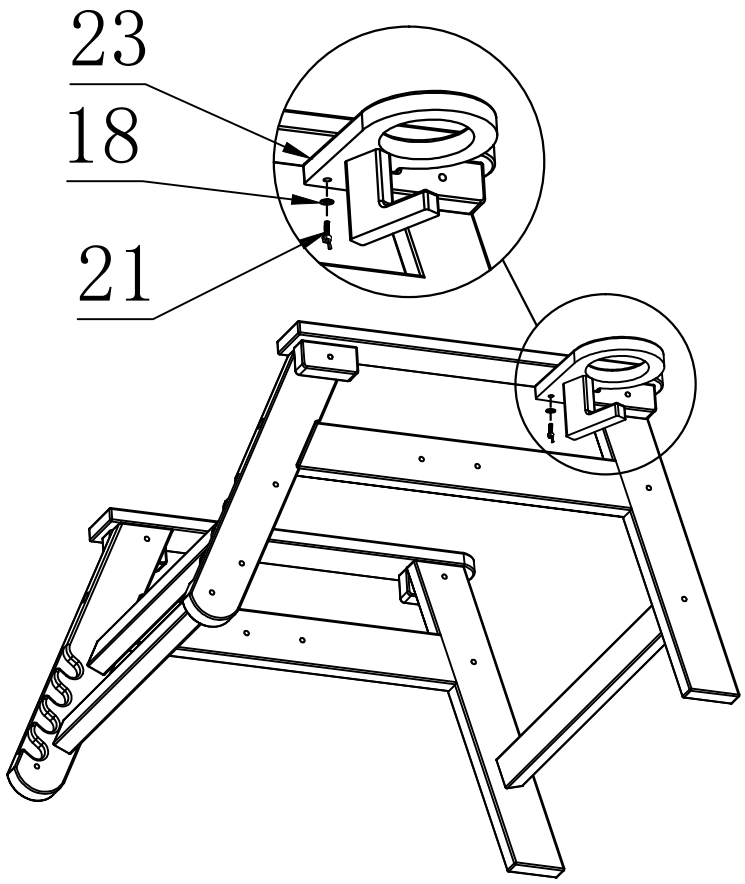

Align the holes of Cup holder㉓ with the right arm ③
Place one Washer ⑱ onto Bolt㉑, Hold Bolt㉑steady with hand then tighten it.

Assemble the Cup holder ㉓

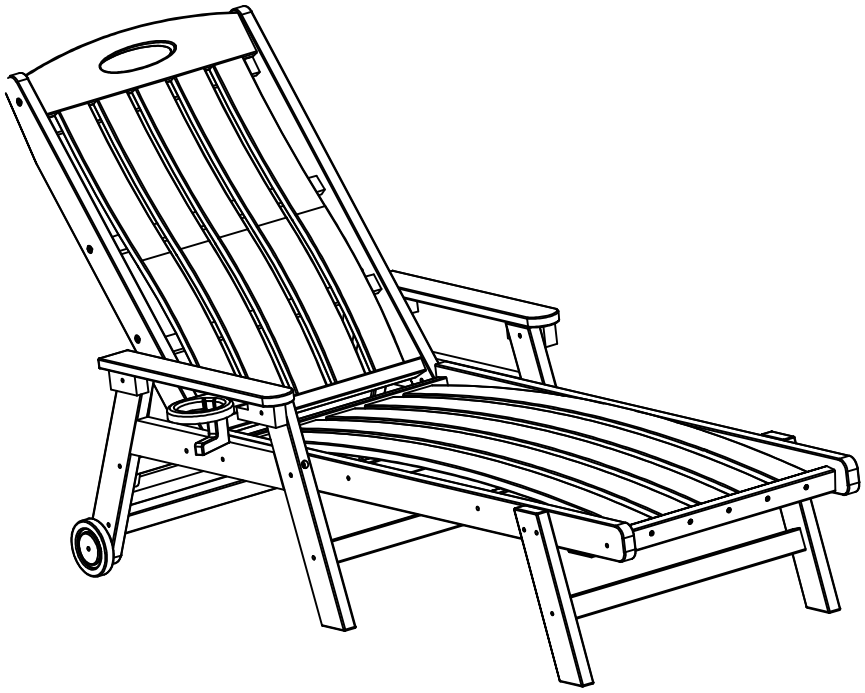

Thanks for your purchase.

At outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.