

Installation & Assembly


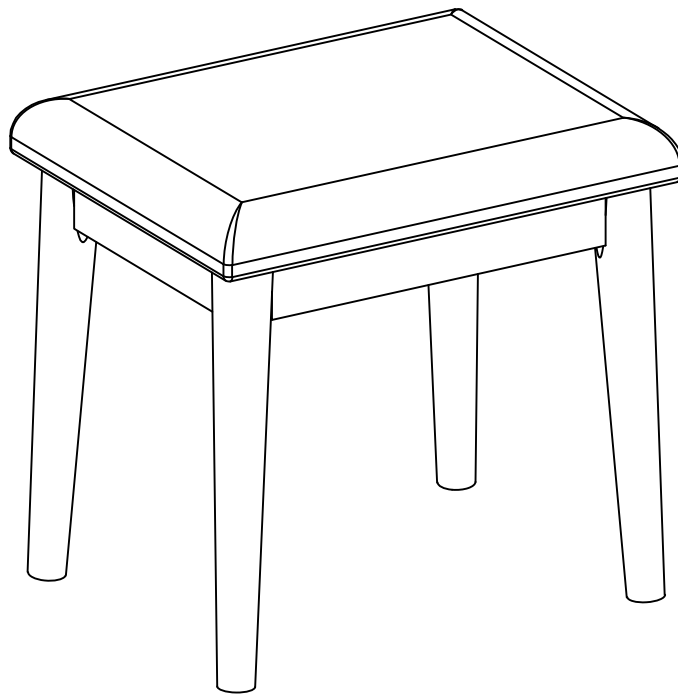


Illustration of Installation


Name : Model Vanity Stool 015

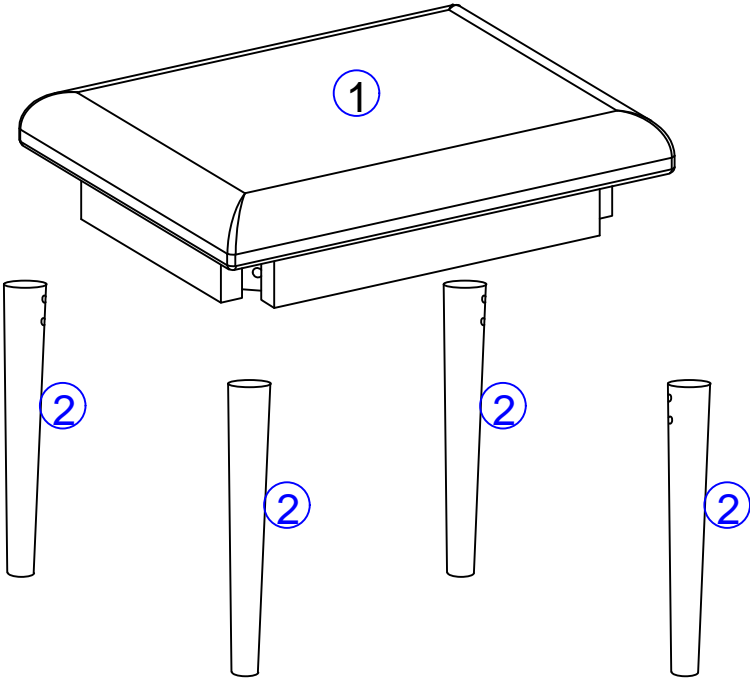

Name : Model Vanity Stool 015


List of Parts

① Seat cushion

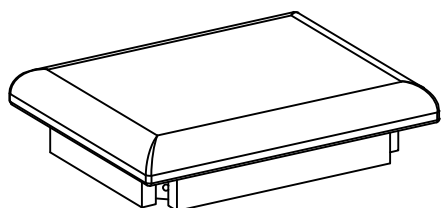

1PC


② Foot post



4PCS

List of Hardware

A Hexagon socket head screw



M6*50MM

8+1PCS

B Flat shims



M6* 15MM

8+1PCS


C Spring-loaded shims



M6* 11MM

8+1PCS

D Hexagon wrench (With a cross on one end)

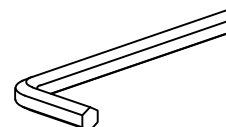

∅ M4*40*80MM

1 PC

E Nonwoven fabric pad




20*3MM

4PCS


Caution: After unpacking, check the correct number of accessories against the instructions.

Attention


Using the right screws can prevent damage to these components.

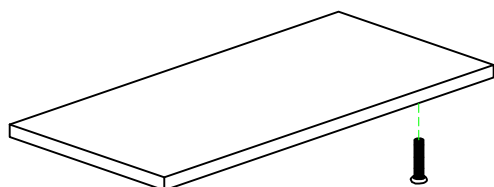

Example

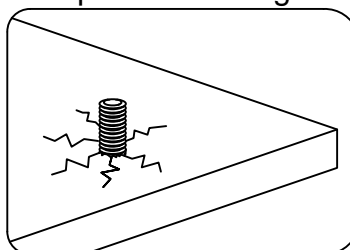



Mistake: screws can cause boards to split

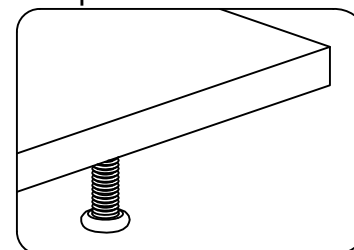





Correct: screws are the correct size

Name : Model Vanity Stool 015

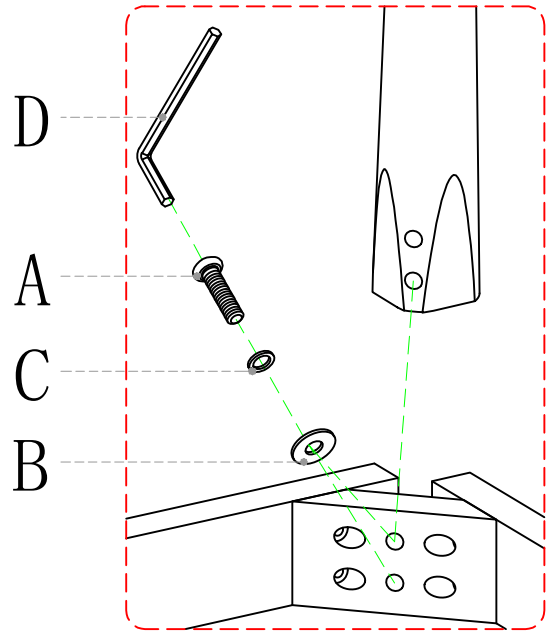
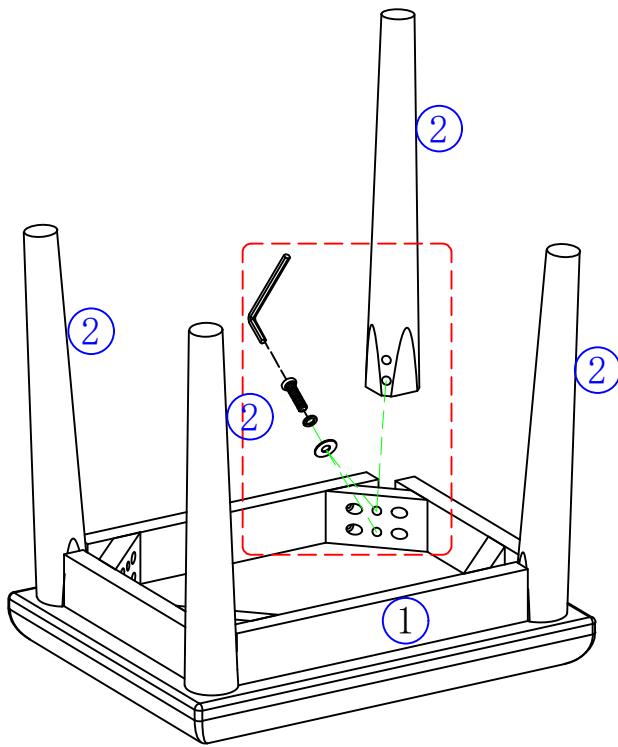
Step 1



A	 M6*50MM	8PCS
B	 M6* 15MM	8PCS
C	 M6* 11MM	8PCS
D	 ∅M4*40*80MM	1PC

Assemble parts 1 and parts 2 with hardware D/A/C/B.

Step 2

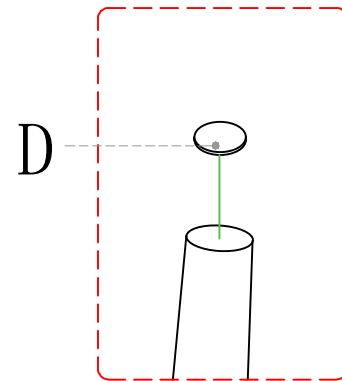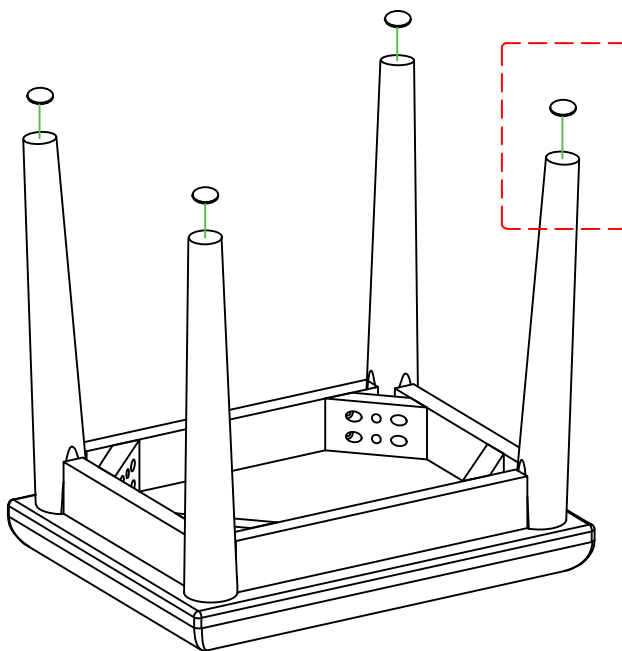

Attach hardware E to the bottom of each leg.
Assembly complete.

E	 20*3MM	4PCS
----------	---	------