


Coffee Table

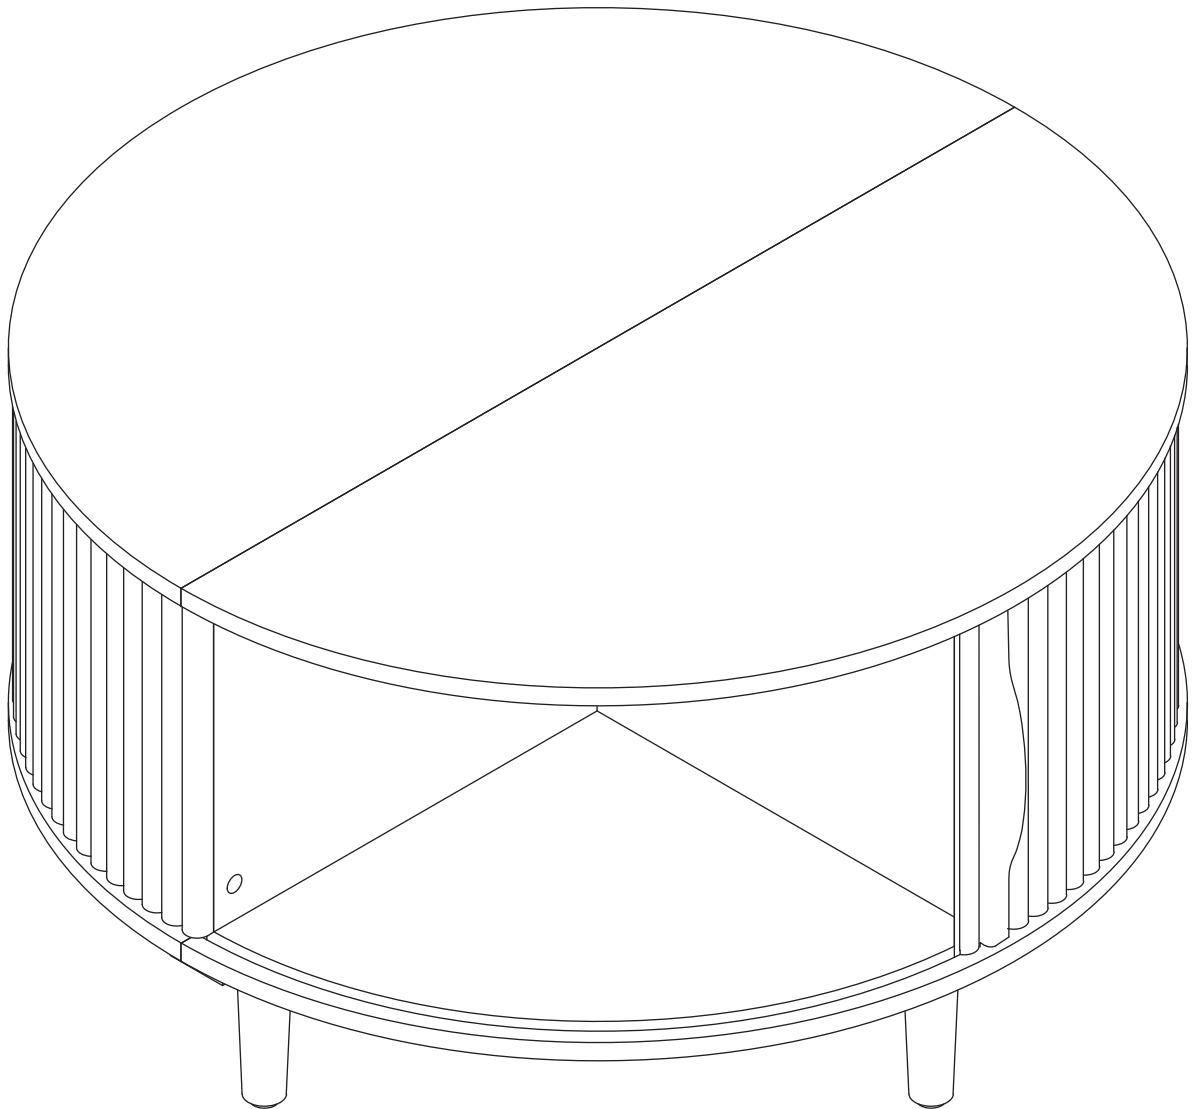

Please make sure to read the instruction manual carefully before installing the product.

Do Not Return This Product!

Contact our customer service team
for help first.



WARNING

- Unit can tip over causing severe injury or death.
- Anchor unit to stud in wall (if instructed to)
- Do Not allow children to climb on unit.
- put heavy items on lower shelves or drawers.

**PEOPLE NEEDED
FOR ASSEMBLY:2**

CONTACT US!

Do NOT return this product!

Contact our friendly customer service team first for help.


- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push,pull,or drag your furniture.













BEFORE YOU START

- ☒ Read through each step carefully and follow the proper order
- ☒ Separate and count all your parts and hardware
- ☒ Give yourself enough room for the assembly process
- ☒ Have the following tools:Flat Head Screwdriver,#2 Phillips Head Screwdriver and Hammer
- ☒ Caution: IF using a power drill or power screwdriver for screwing,please be aware to slow down and stop when screw is tight.Failure to do so may result in stripping the screw.






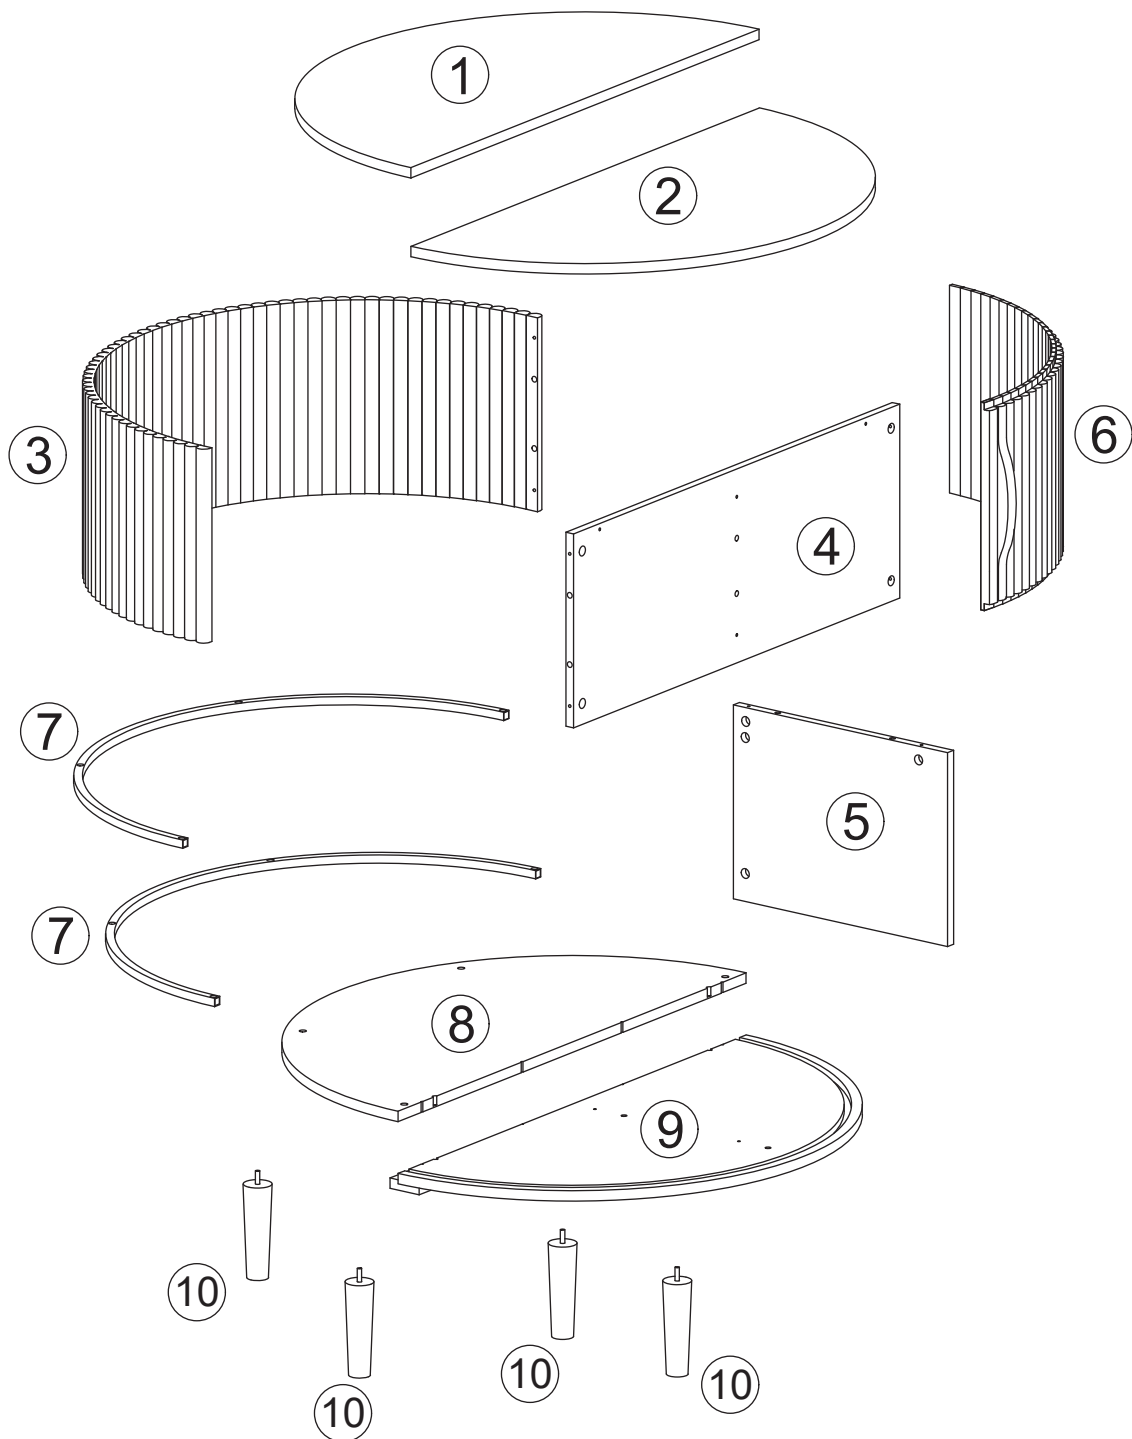


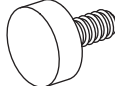

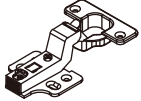


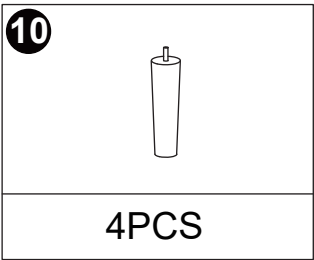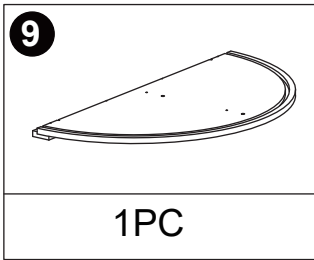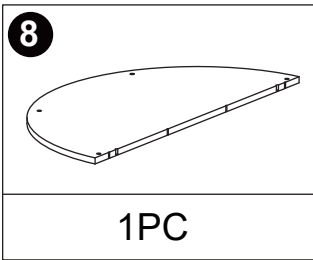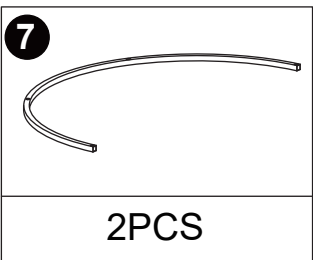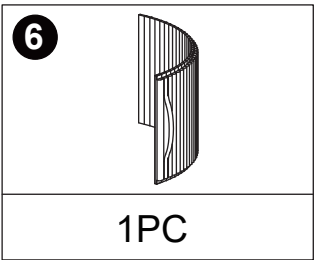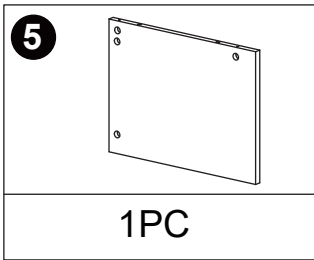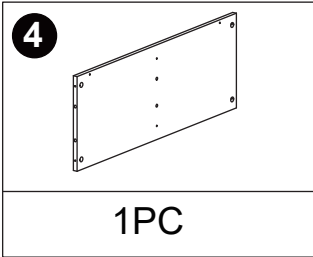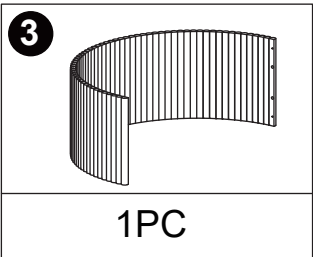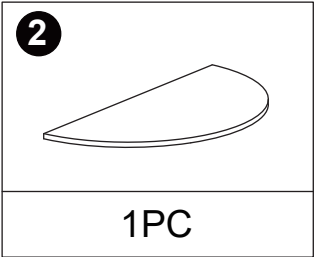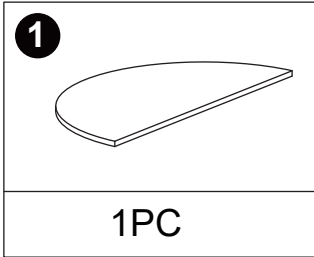

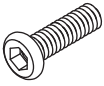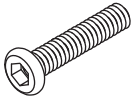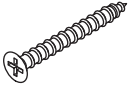


BOARD IDENTIFICATION




BOARD IDENTIFICATION



THE HARDWARE

A x4  Bolt Ø6x25mm	B x2  Bolt Ø6x45mm	C x6  Screw Ø4x40mm	D x8  Screw Ø4x22mm	E x12  Wood Dowel Ø6x30mm
F x8  Cam Bolt Ø6x25mm	G x8  Cam Lock Ø15x10mm	H x16  Screw Ø4x12mm	I x4  Furniture Glide 6x23mm	J x1  Hex Key 4mm
K x2  Hinge 35mm	L x4  Iron Holder 248x13x13mm	M x4  Silicone pad Ø10x3mm	N x2  Bolt Ø6x60mm	O x8  Cam Cover Ø20mm
P x2  Bracket 23x23mm	Q x1  Spring Support Accessories	R x4  Screw Ø4x14mm		

IMPORTANT :




Phillips Screwdriver Power Tool NOT Recommended

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product. Do not use power tools.


CAM LOCK FASTENING SYSTEM

This Cam Lock Fastening System will be used throughout the assembly process.

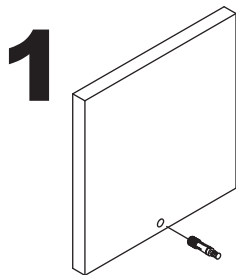


Press CAM BOLT into hole.

2

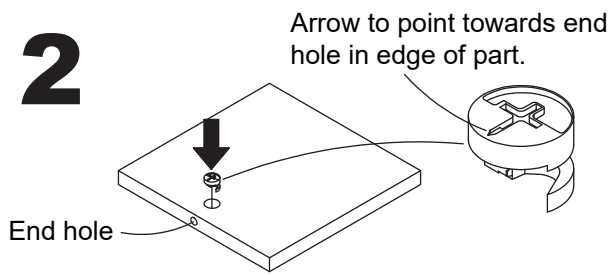


Press CAM LOCK into hole.

3

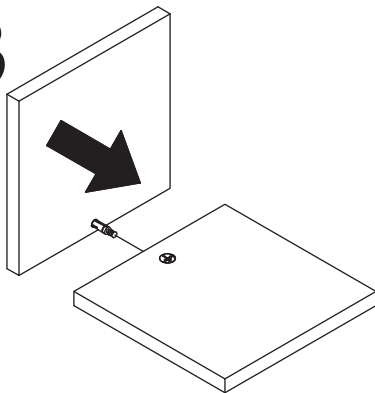


Press parts together so CAM BOLT inserts into edge hole.






4

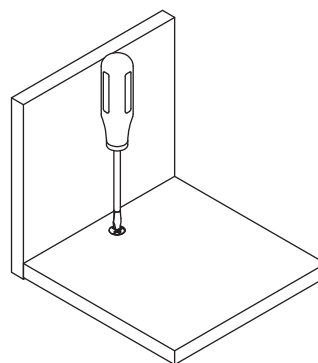


Using a screwdriver, turn the CAM LOCK clockwise to lock the CAM LOCK and CAM BOLT into their holes and fastening parts together.

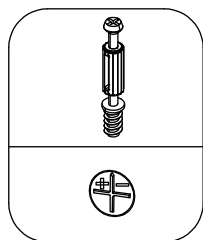


Notice: Proper orientation of CAM LOCK

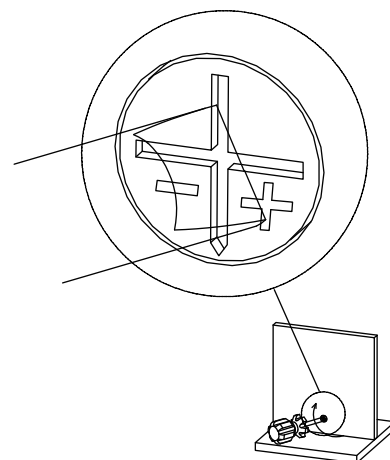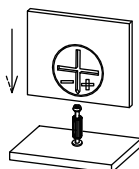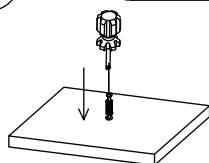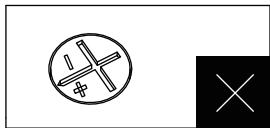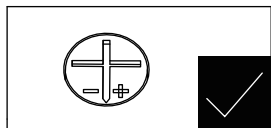


It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

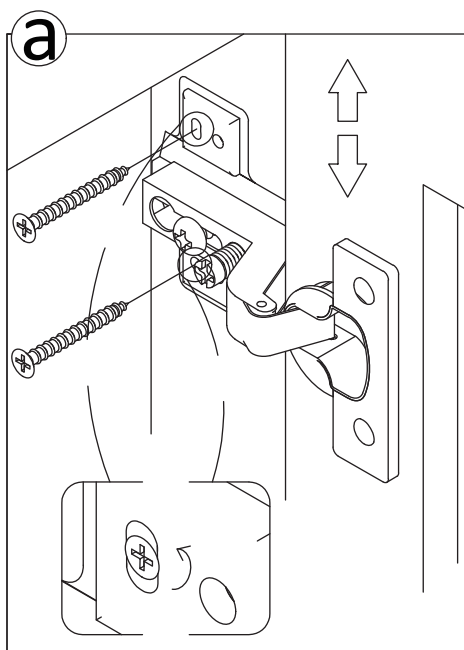


To adjust the door vertically loosen the screw as shown and move up and down as needed.

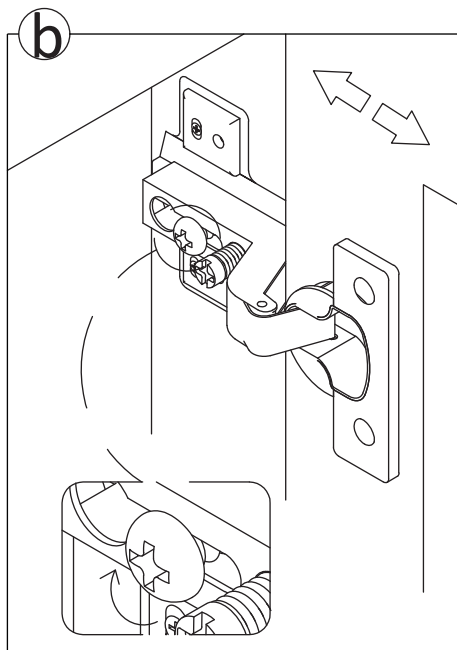

To adjust the gap from the door to the main frame turn the screw clockwise or anticlockwise as needed.

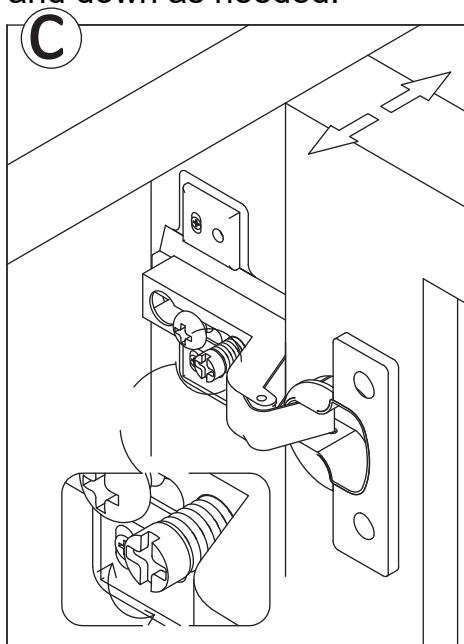

To adjust the door laterally (such as changing the gap between the two doors), please adjust the screw as shown by turning clockwise or anticlockwise.





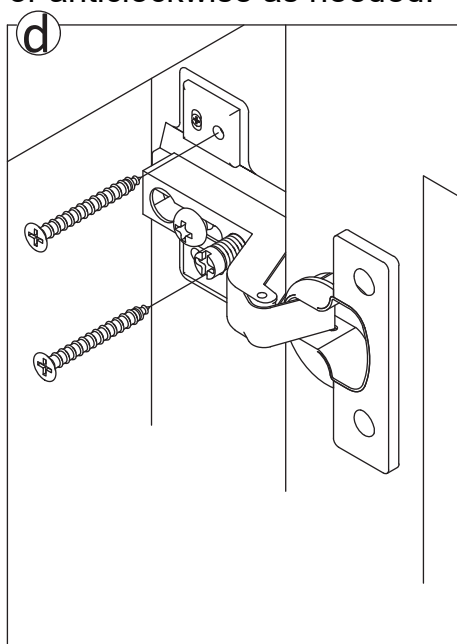


Please fix other screws.

INSTALLATION STEPS







STEP 1

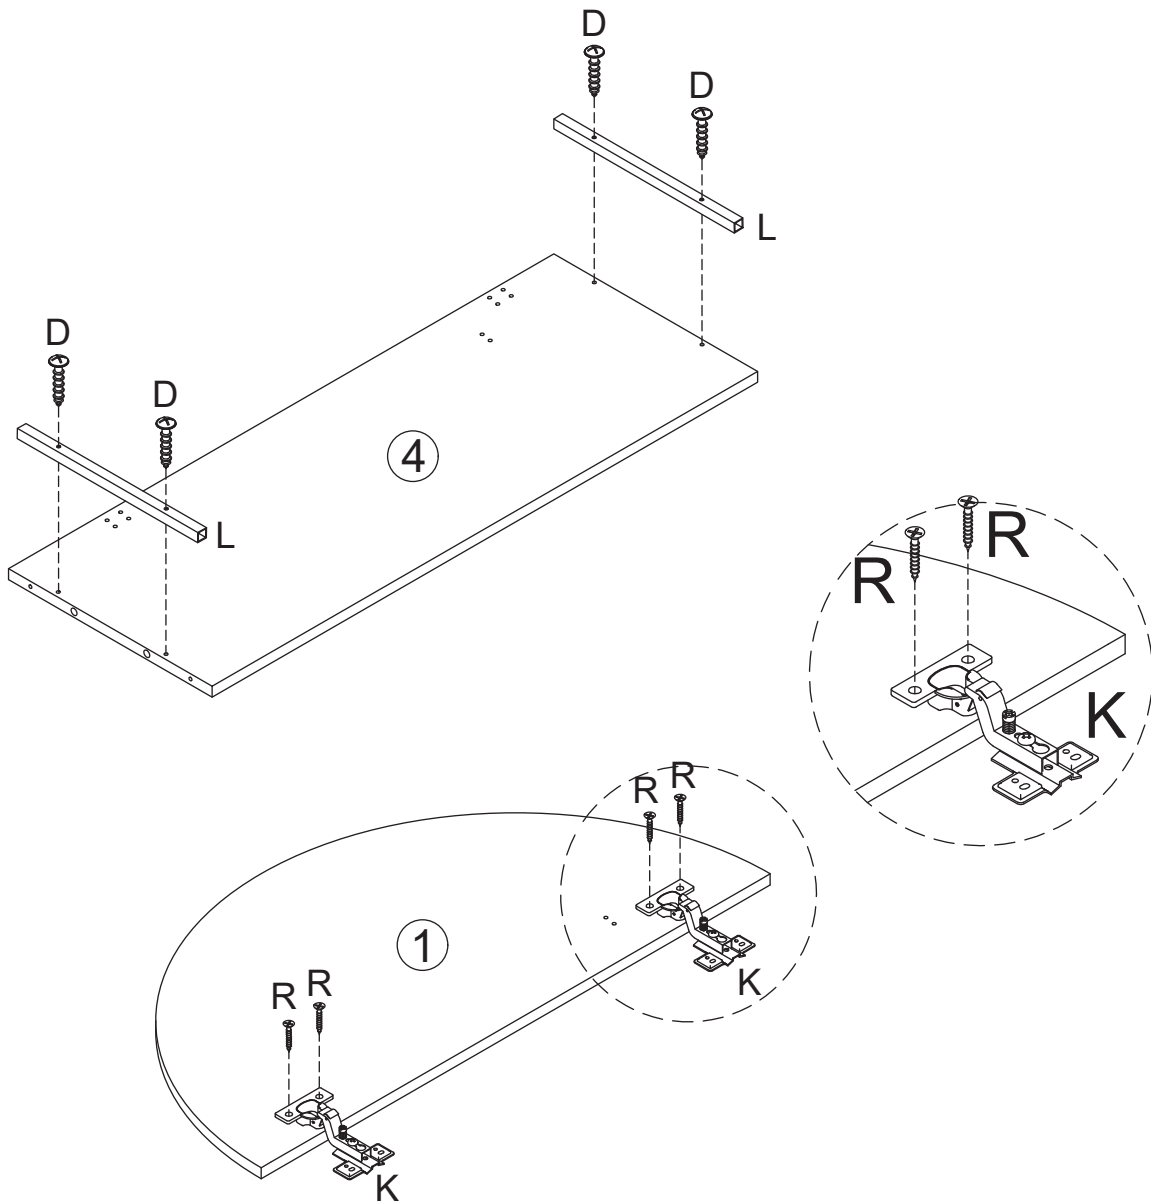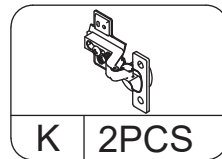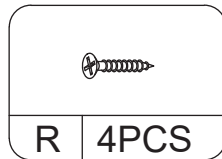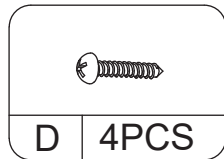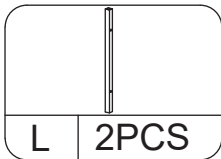

INSTALLATION STEPS






STEP 2

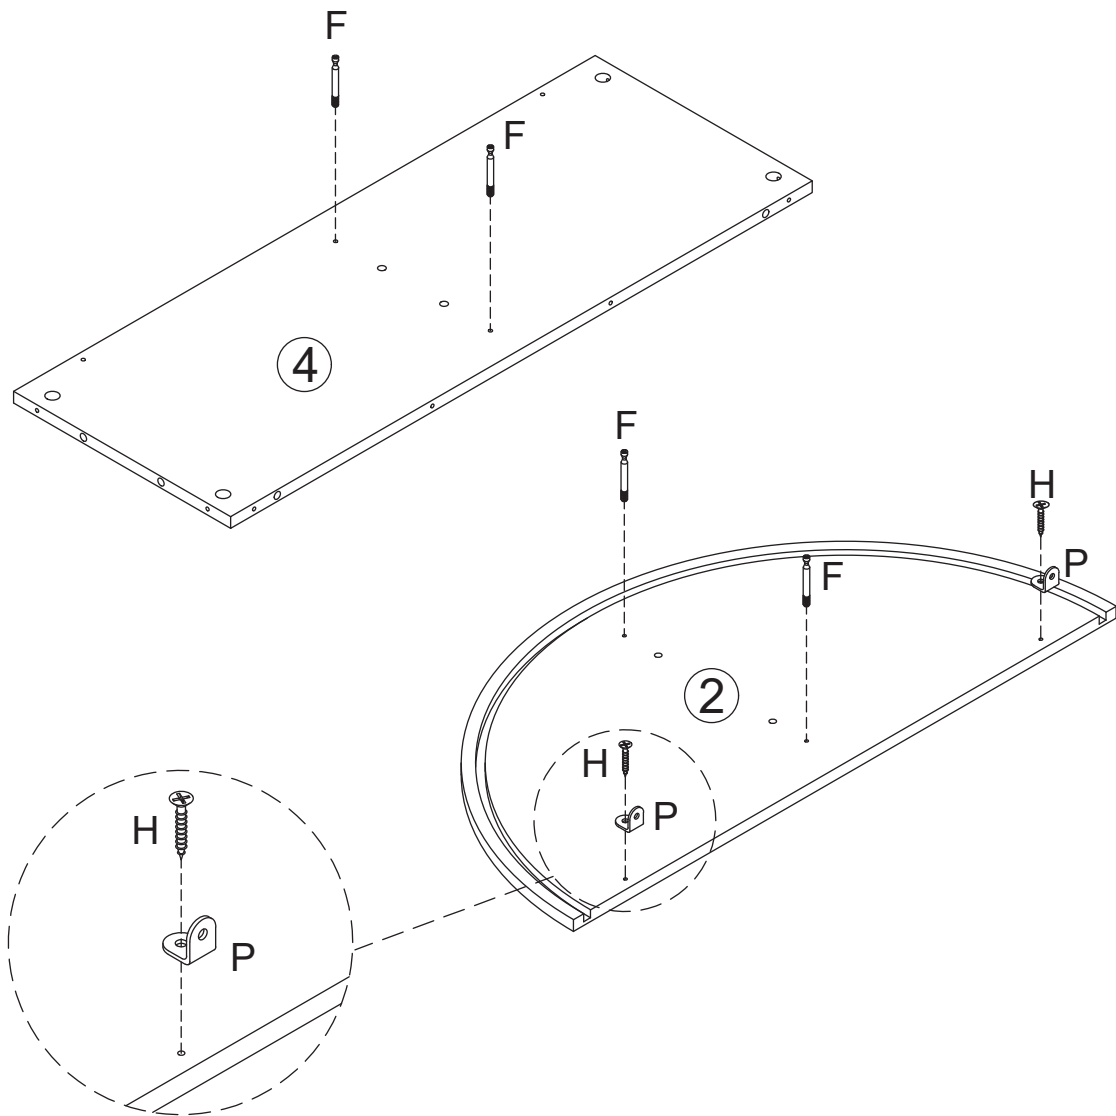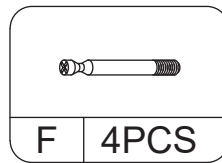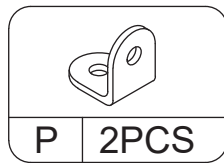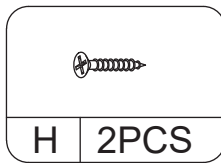

INSTALLATION STEPS


STEP 3

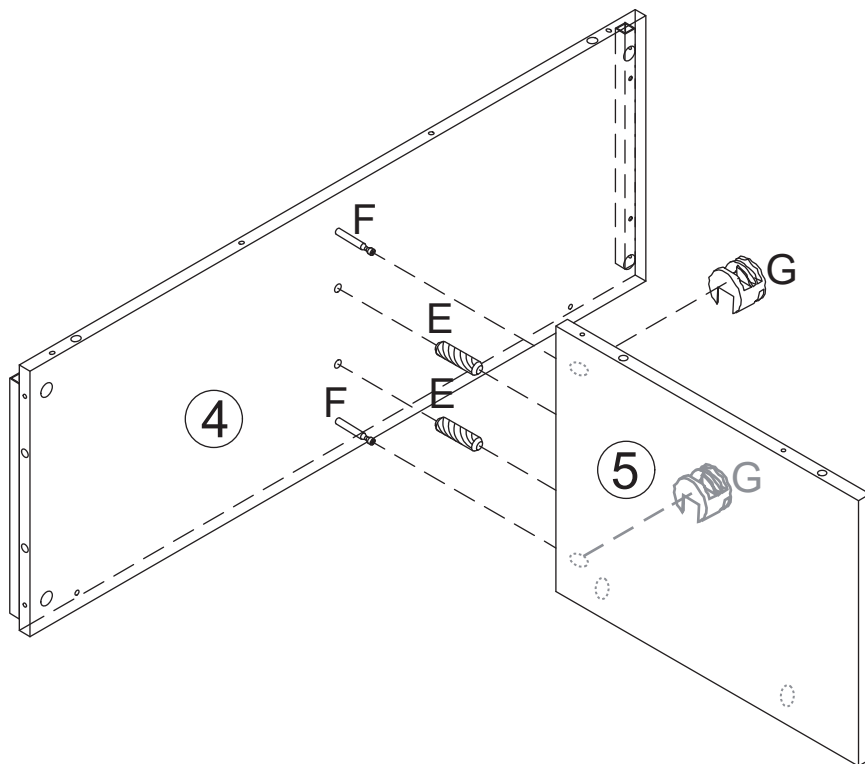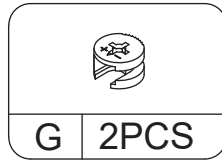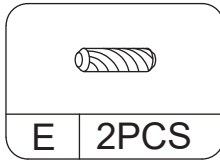


INSTALLATION STEPS




STEP 4

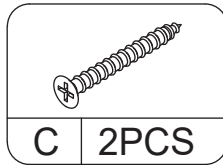

C 2PCS

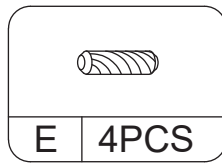






E 4PCS

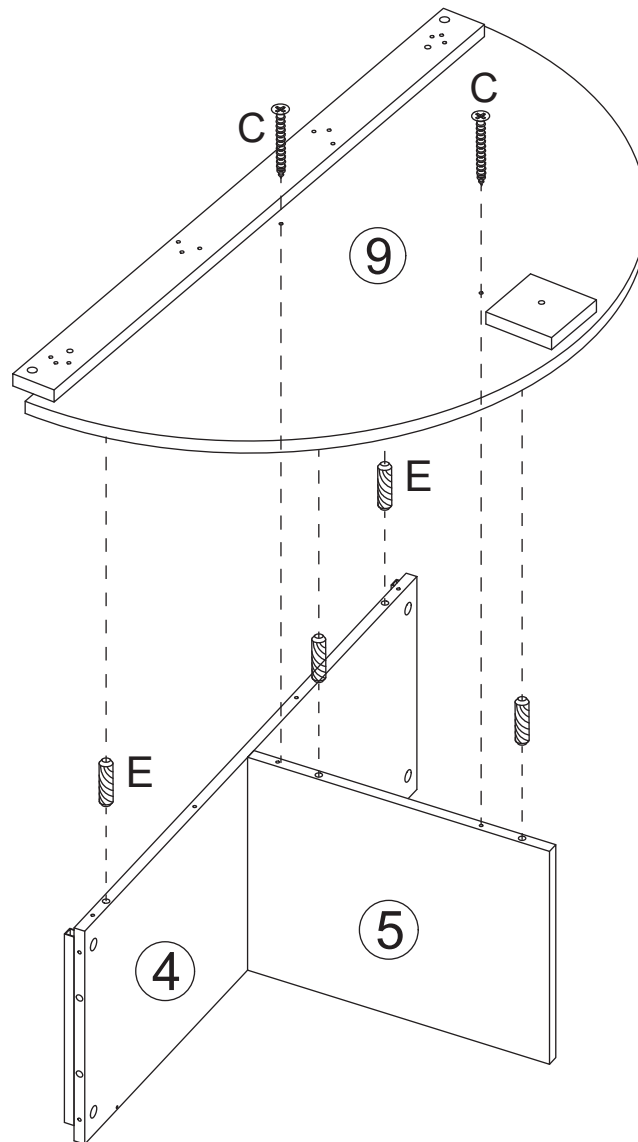

INSTALLATION STEPS





STEP 5

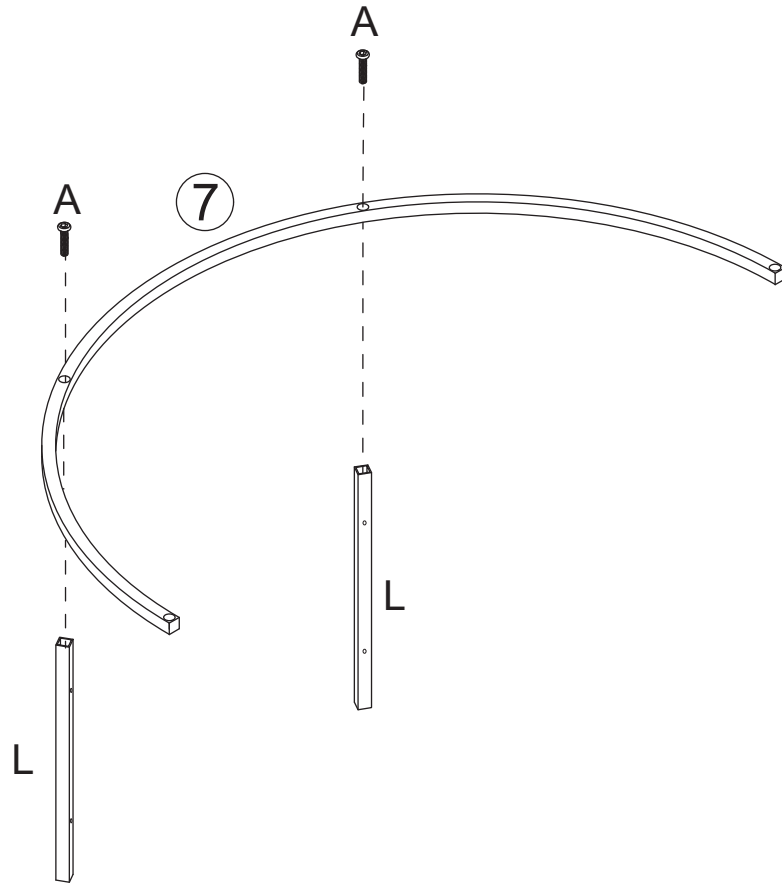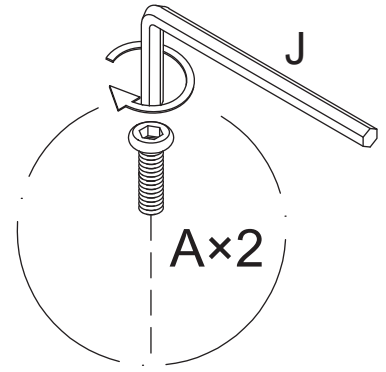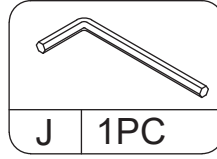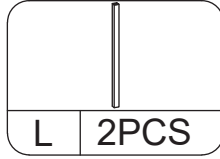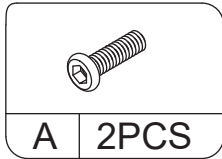

INSTALLATION STEPS






STEP 6

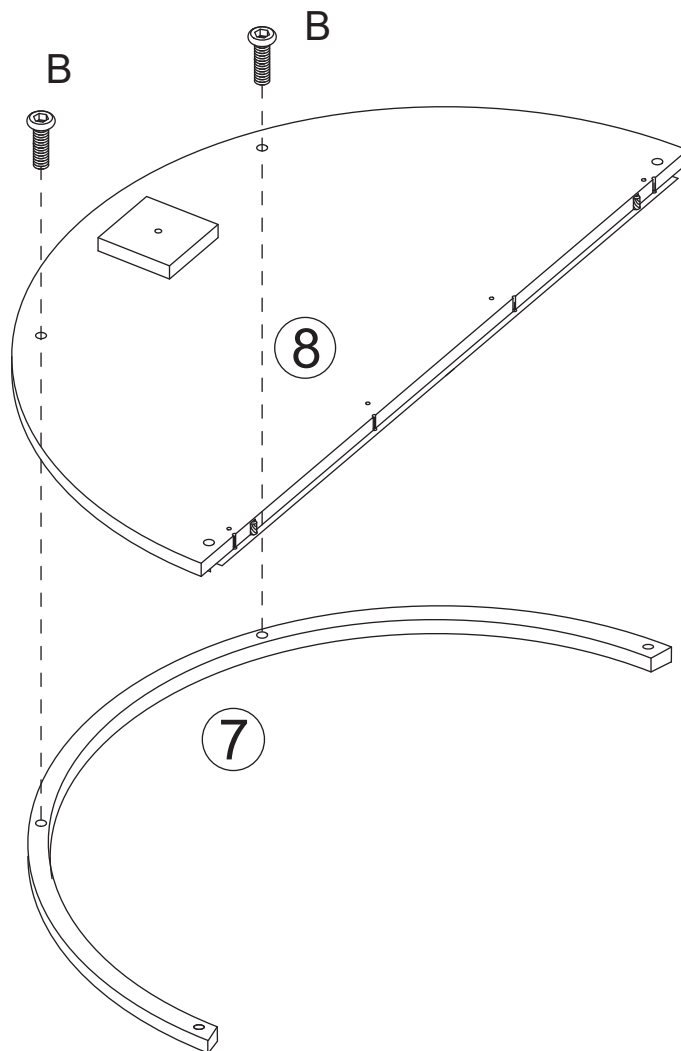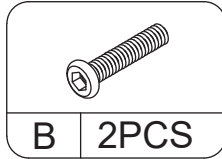

INSTALLATION STEPS





STEP 7

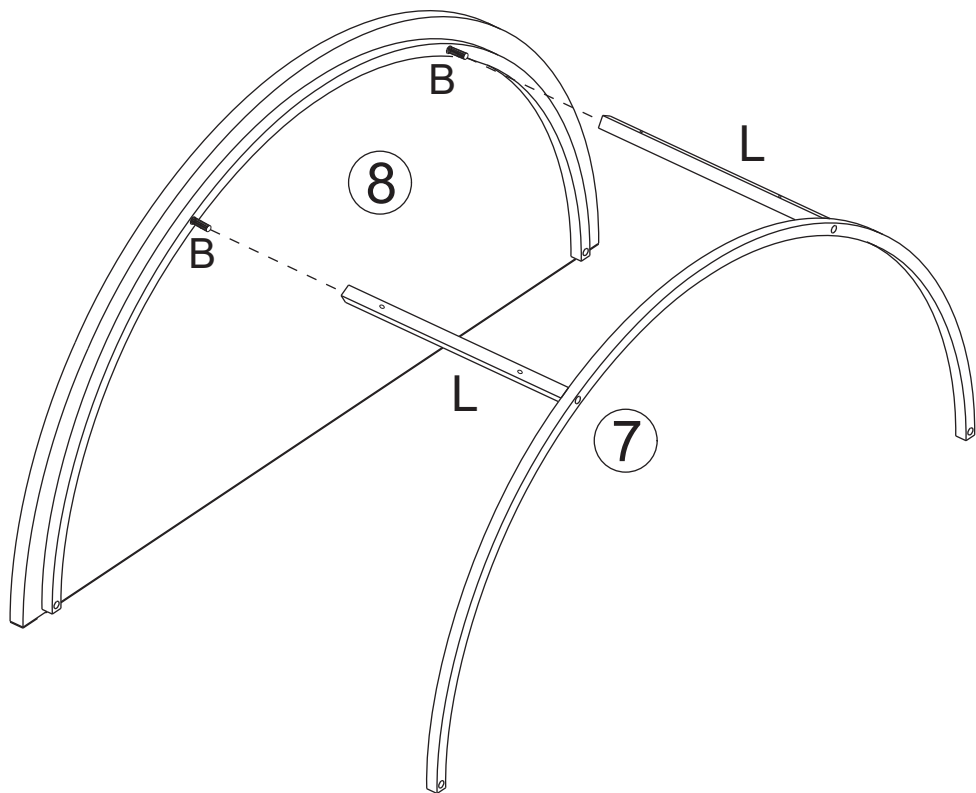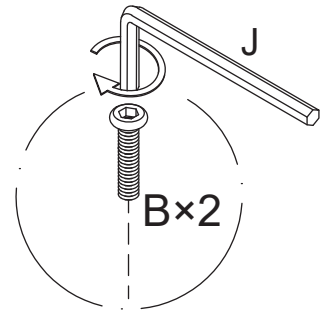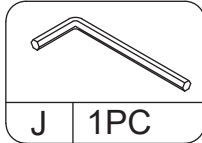






INSTALLATION STEPS

STEP 8

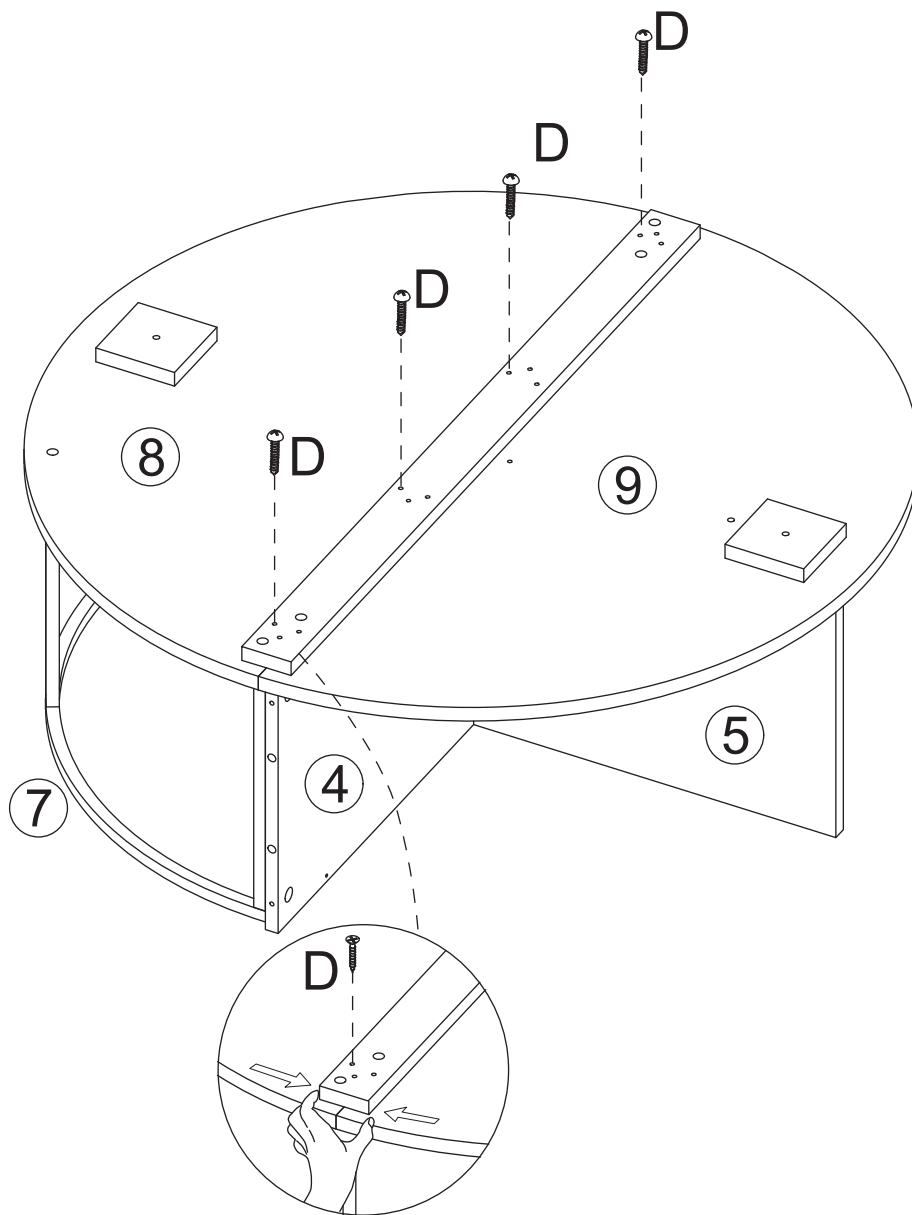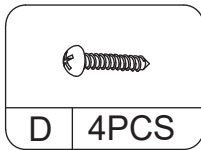



INSTALLATION STEPS

STEP 9

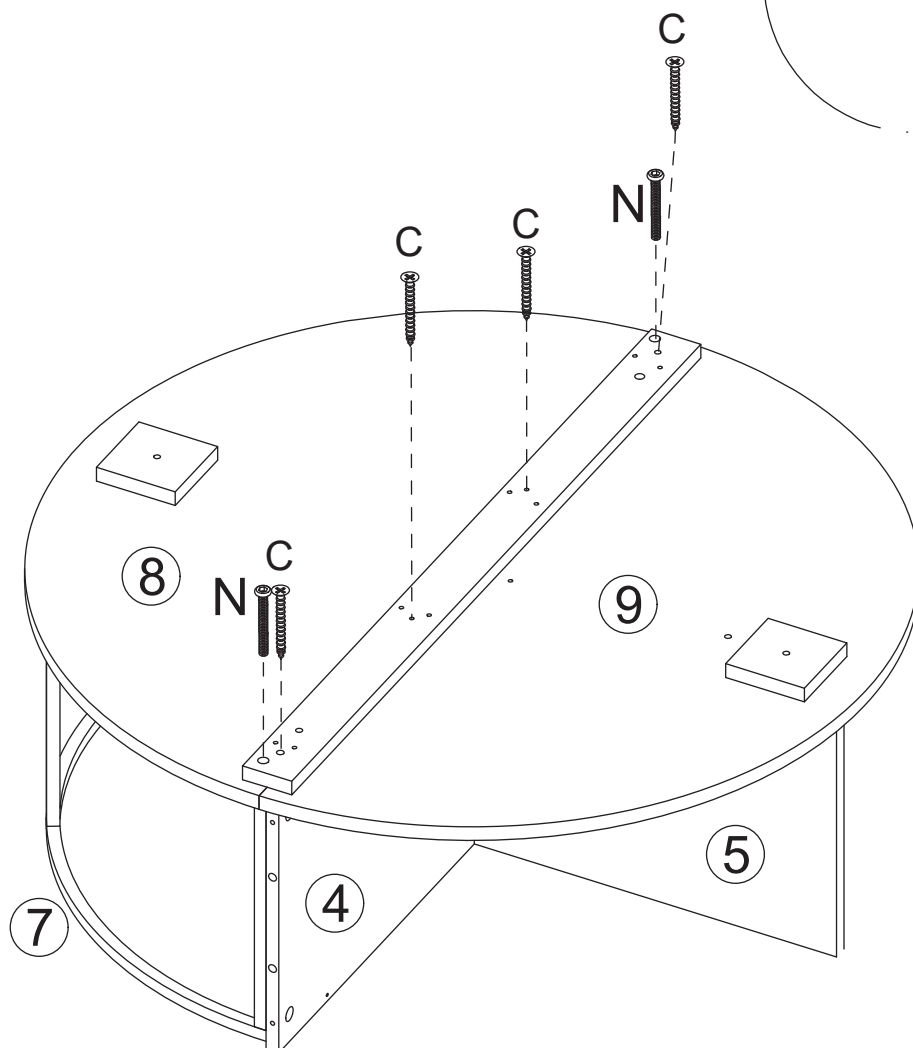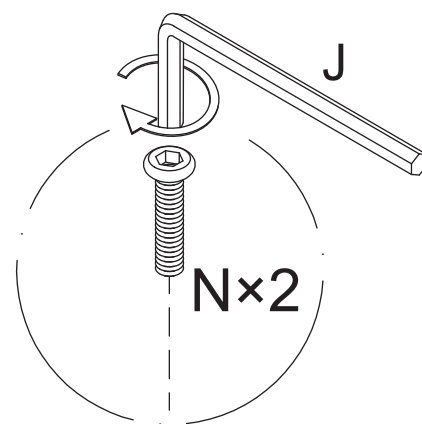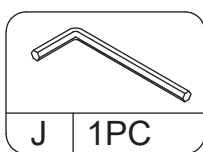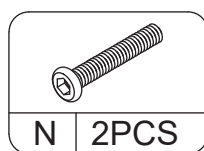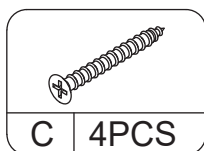





INSTALLATION STEPS

STEP 10

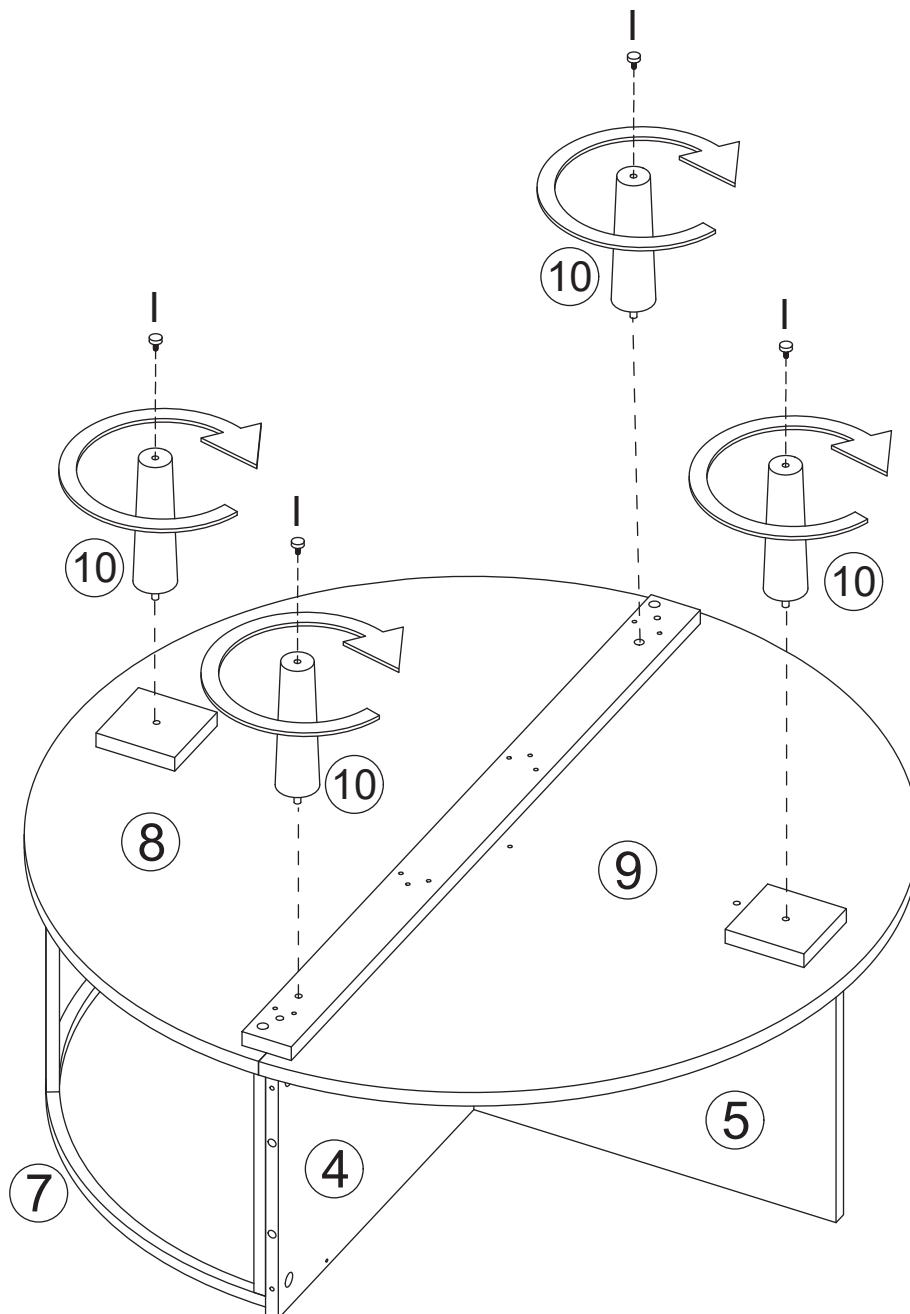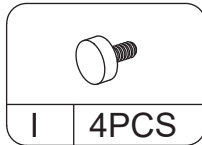



INSTALLATION STEPS

STEP 11

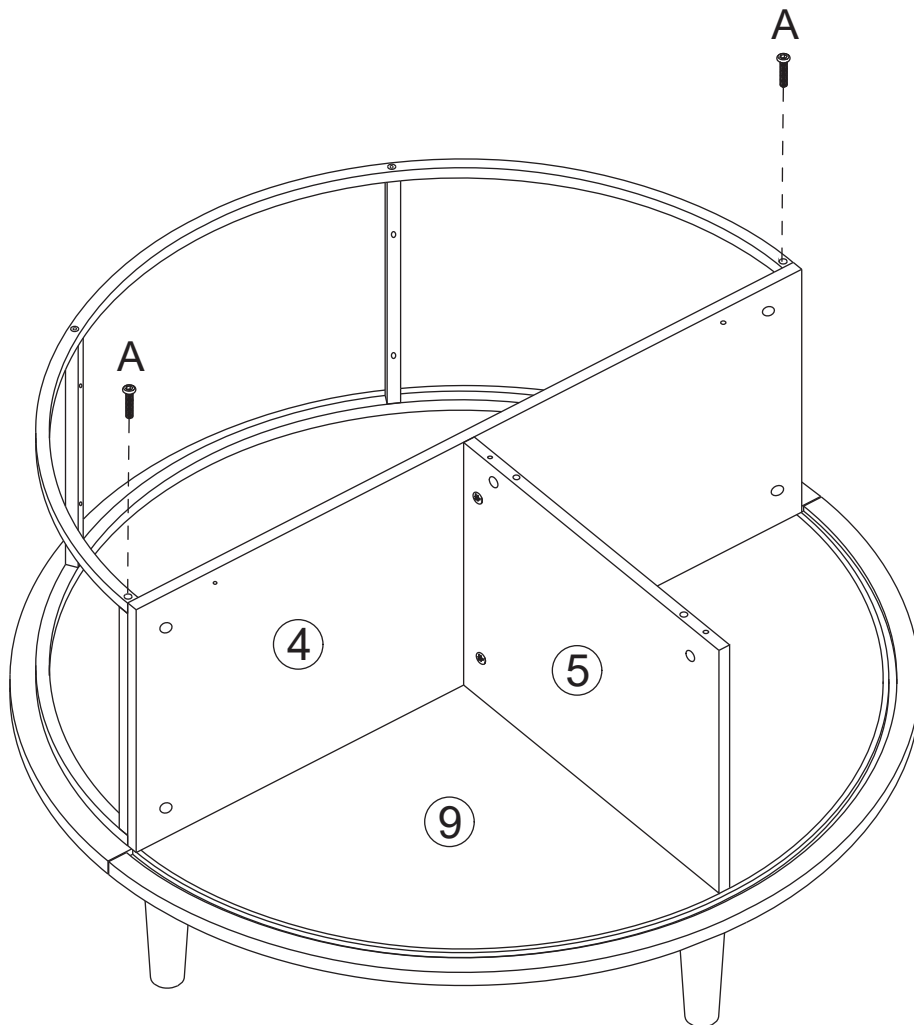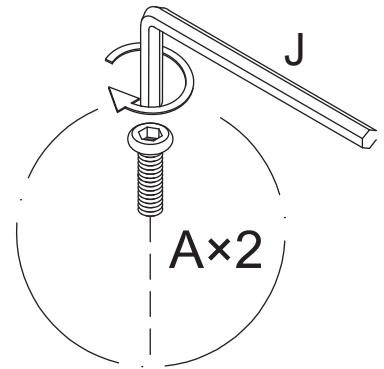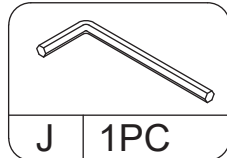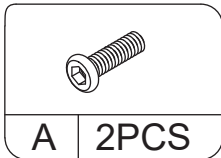




INSTALLATION STEPS

STEP 12

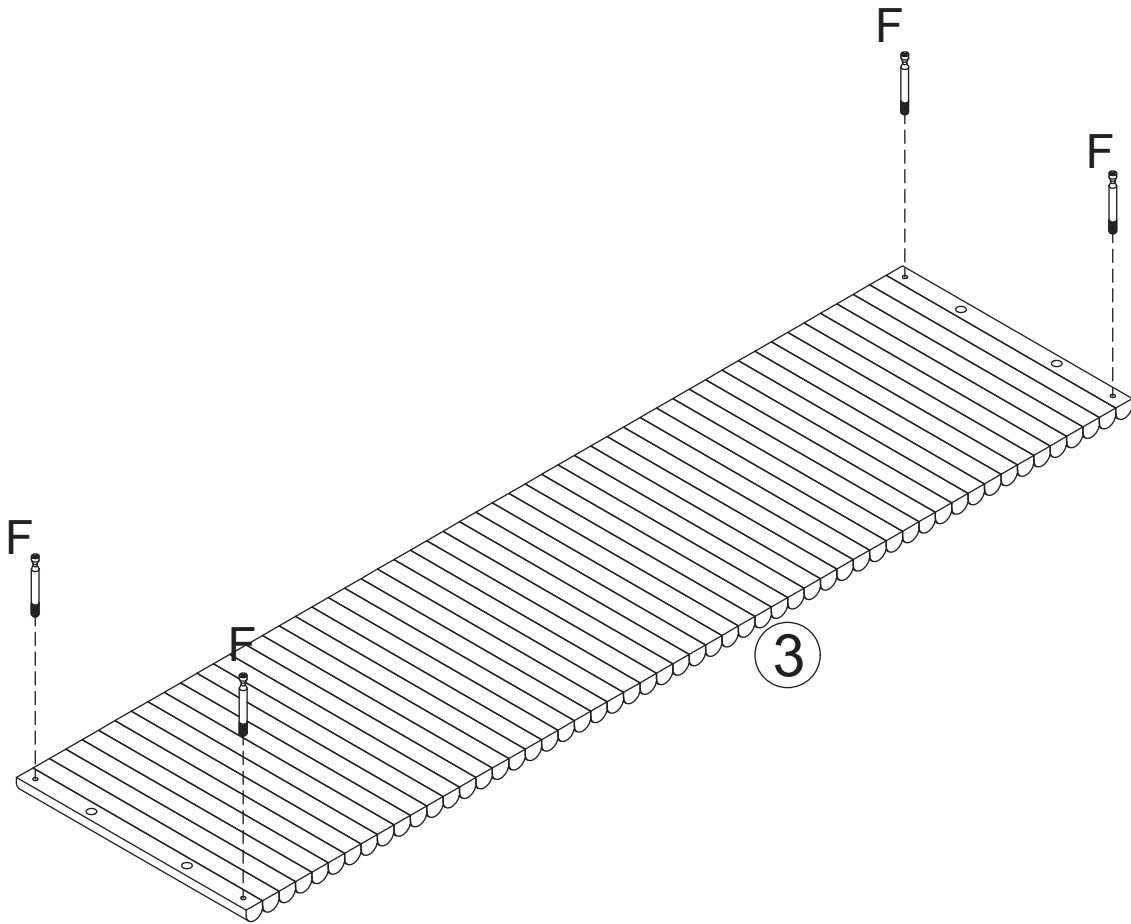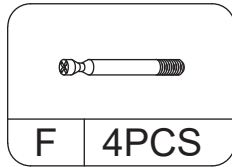

INSTALLATION STEPS


STEP 13

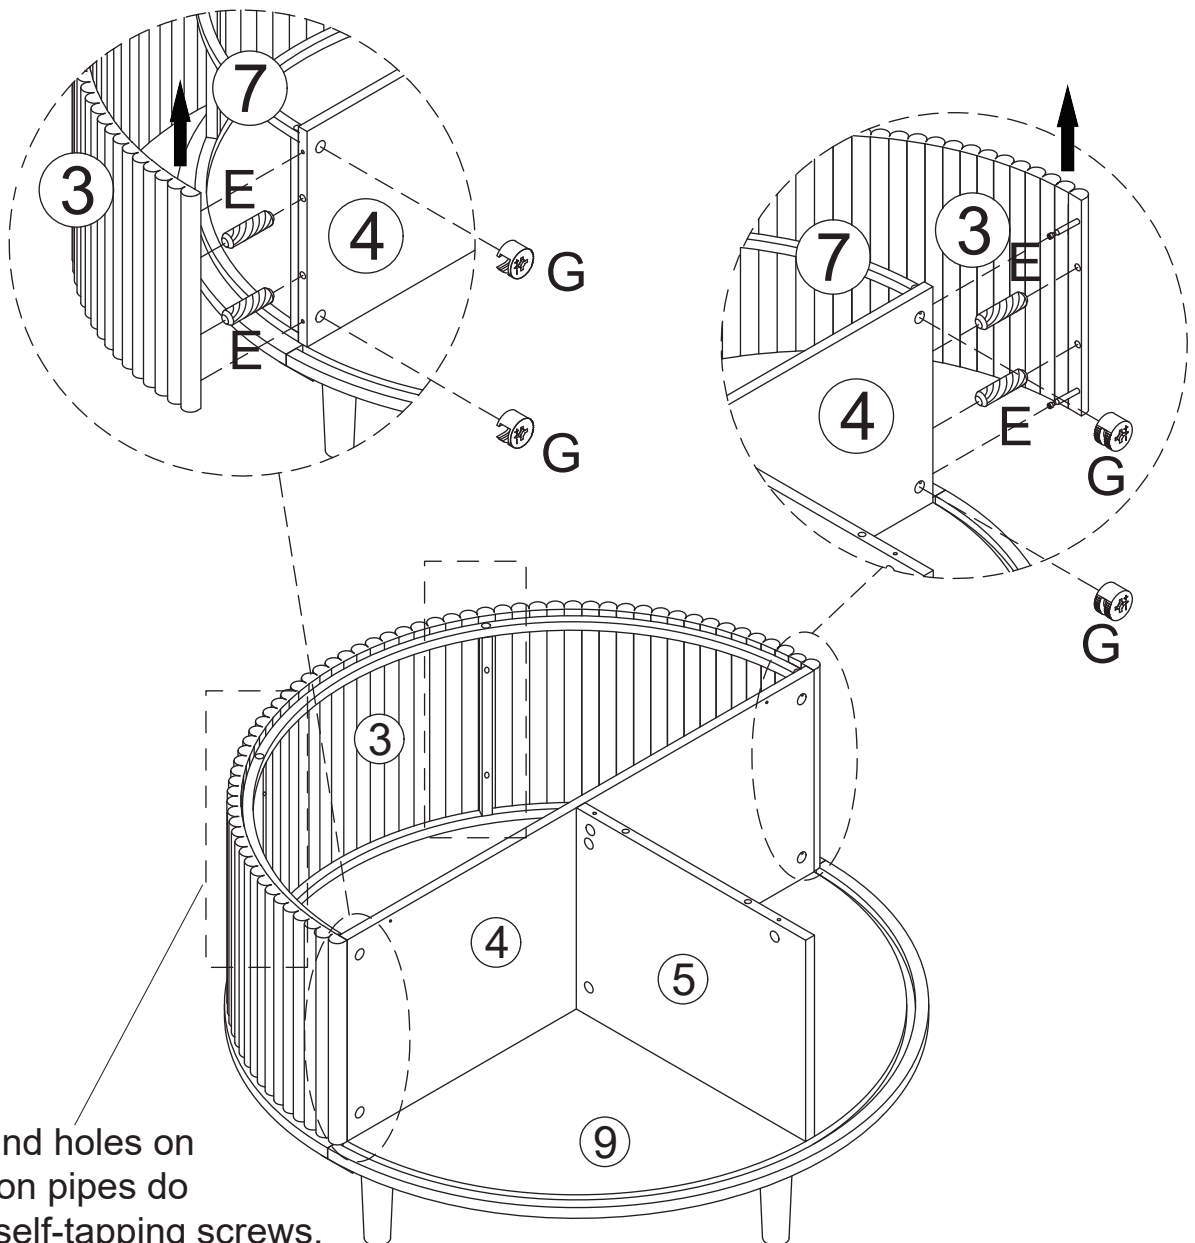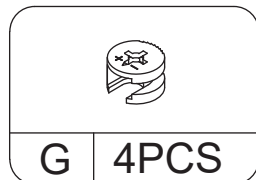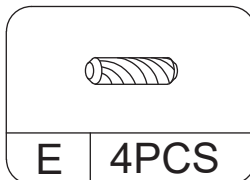

The two round holes on these two iron pipes do not require self-tapping screws.




INSTALLATION STEPS

STEP 14

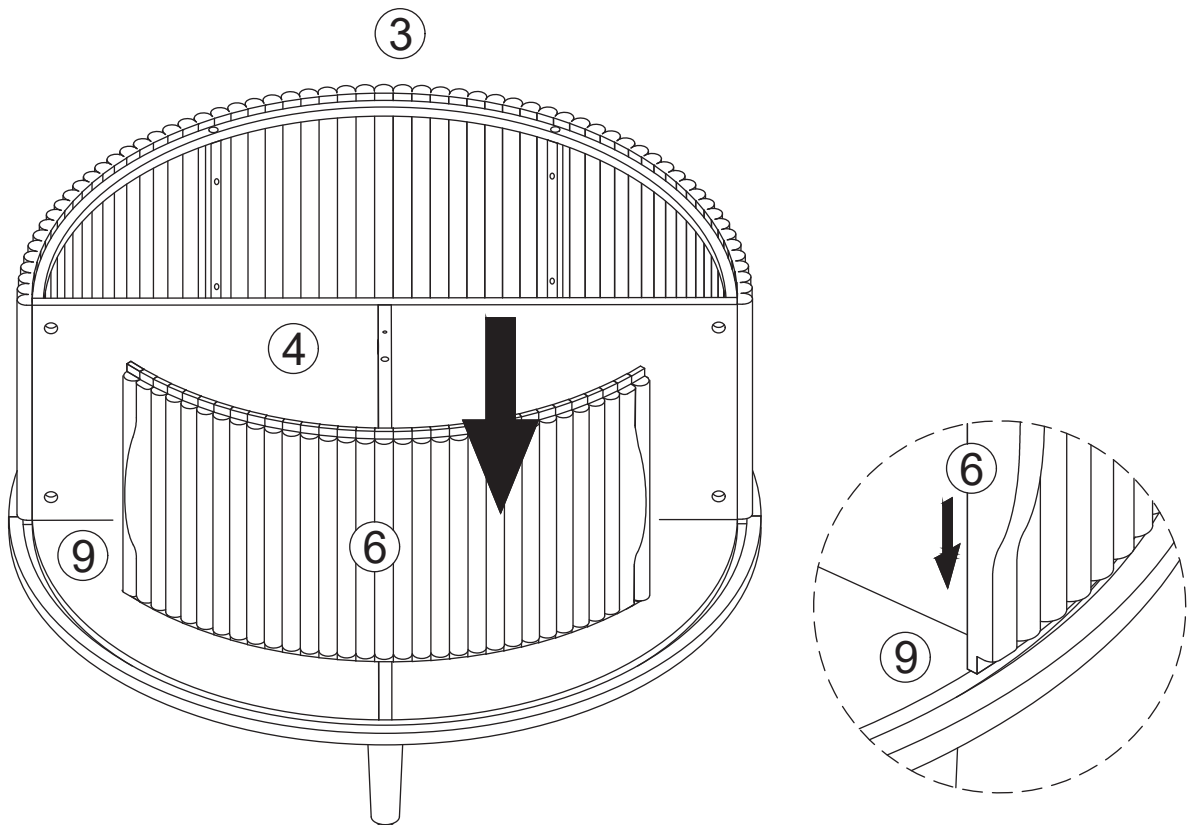

INSTALLATION STEPS


STEP 15

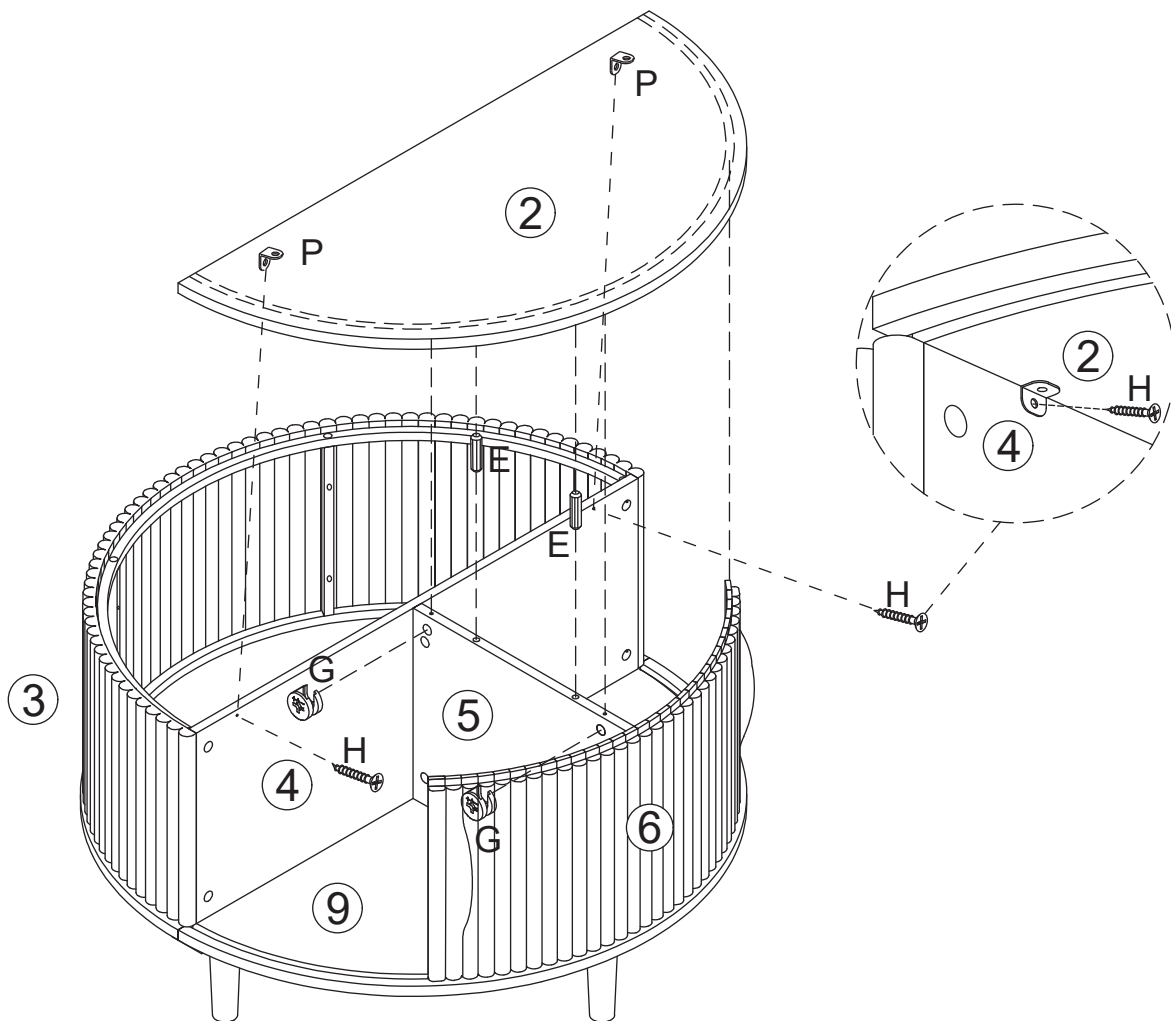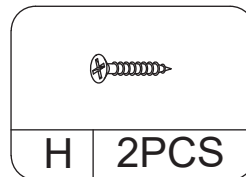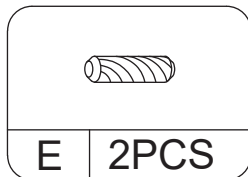


INSTALLATION STEPS



STEP 16




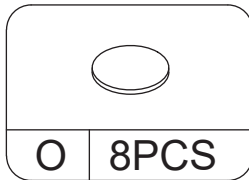


After installation, you can affix Cam Cover
to cover the screw holes on panels④ and ⑤.

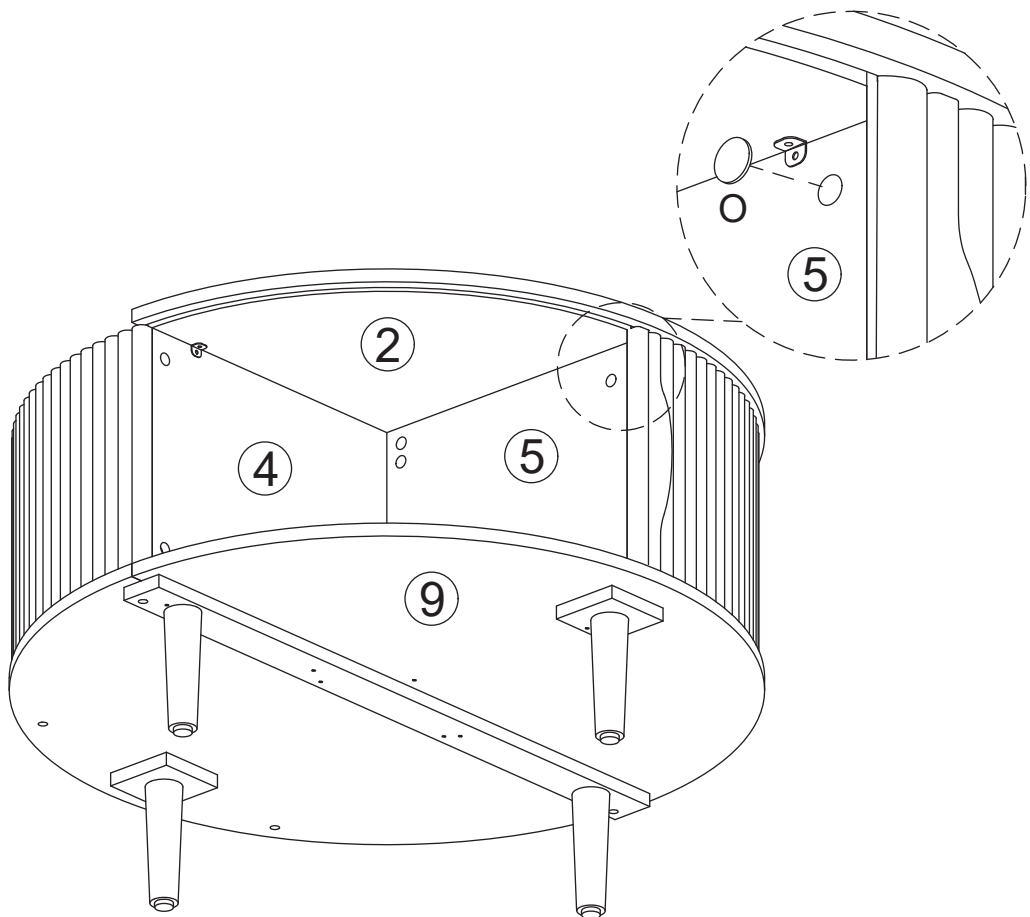


INSTALLATION STEPS

STEP 17

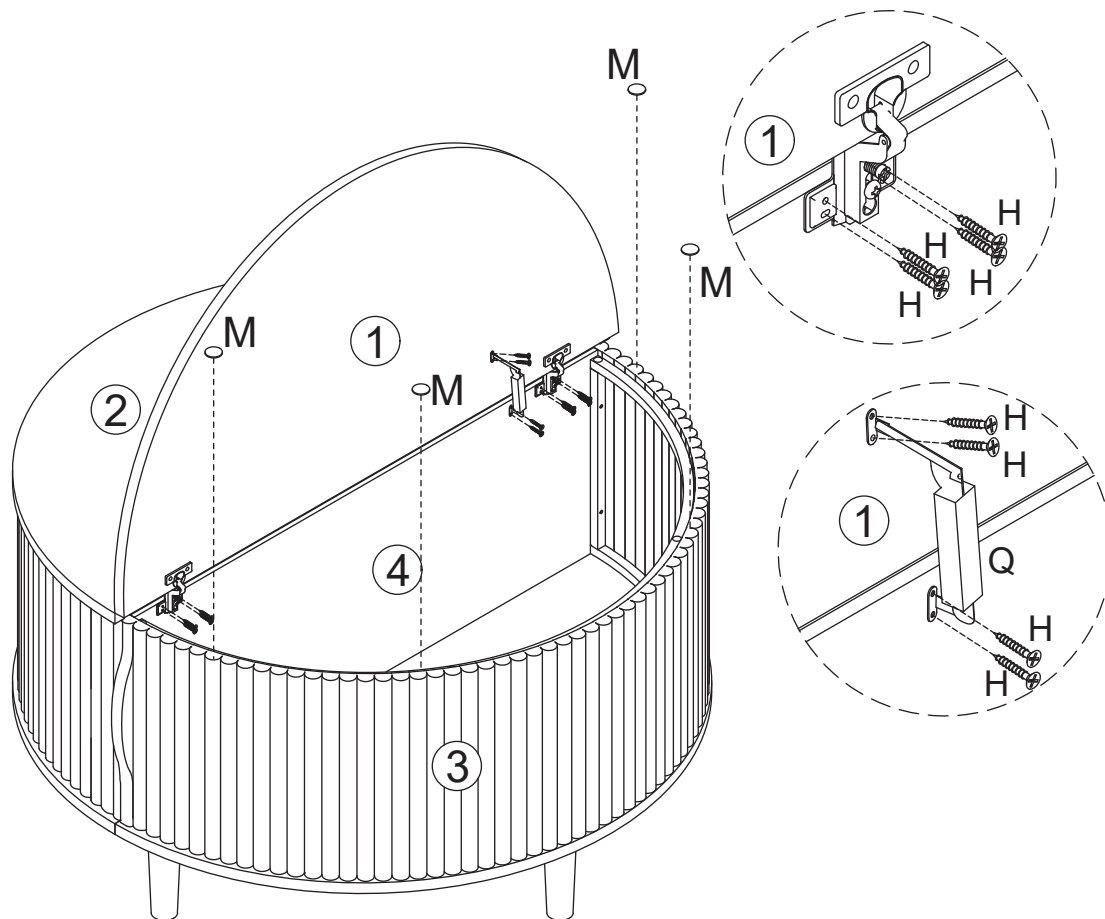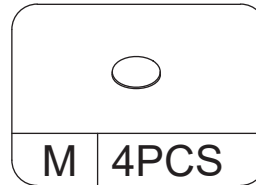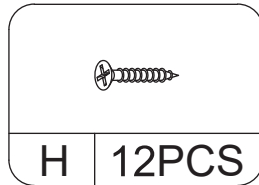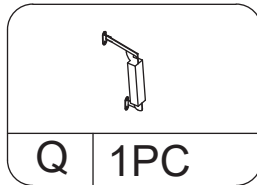


STEP 1

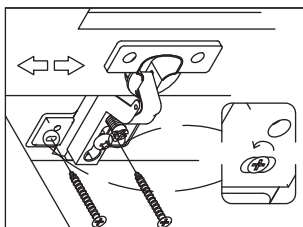


To adjust the door vertically loosen the screw as shown and move up and down as needed.

STEP 2

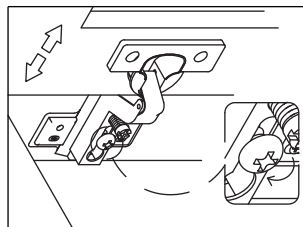


To adjust the gap from the door to the main frame turn the screw clockwise

STEP 3

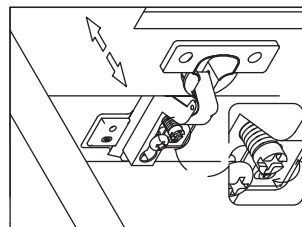

To adjust the door laterally (such as changing the gap between the two

STEP 4

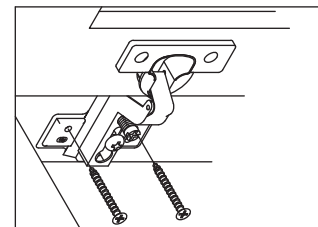

Please fix other screws.