




**IMPORTANT - READ CAREFULLY
RETAIN FOR FUTURE REFERENCE**

3'0

Assembly Instructions

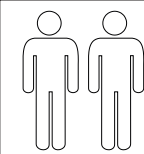



0:50min

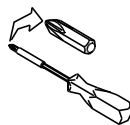

Do Not Use Power Tools







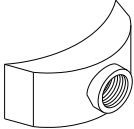

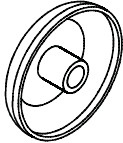



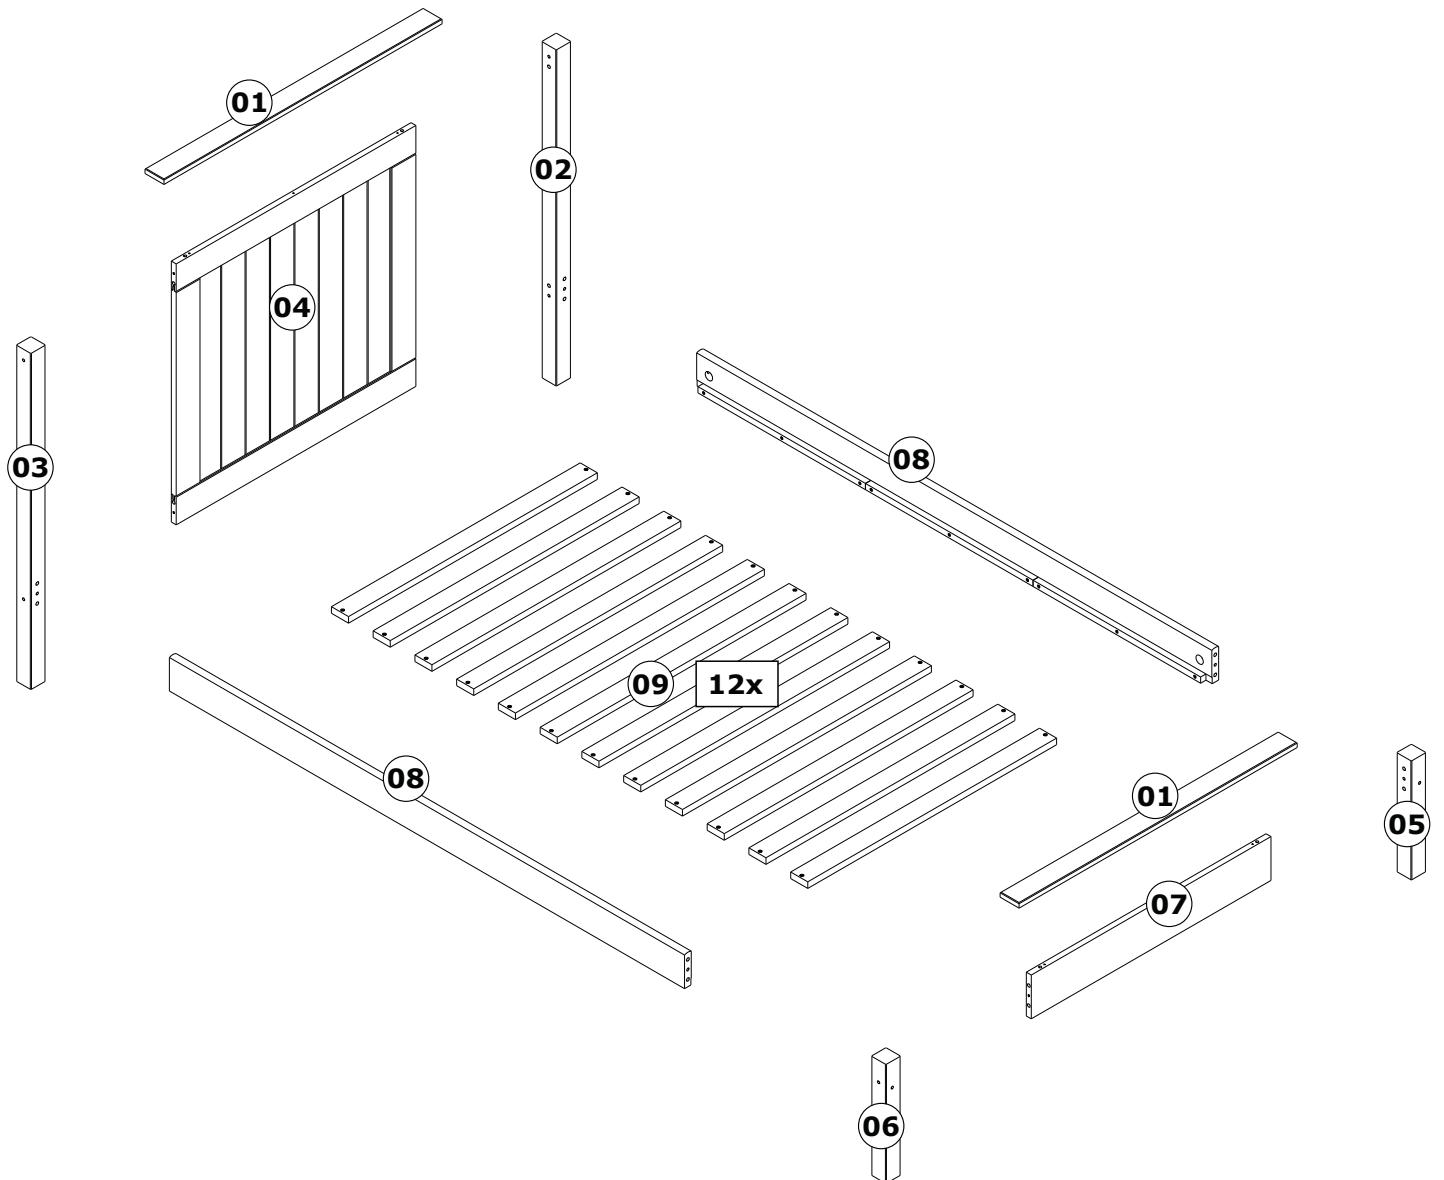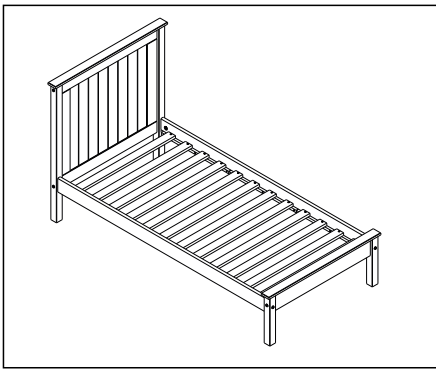PARTS.:



3'0

HARDWARE

A	 Ø8x30mm	04
B	 Ø10x40mm	16
C	 Ø1/4"x100mm - Cab. Ø17mm	04
D	 Ø7x90mm - Cab. Ø17mm	06
E	 Ø3,5x30mm	06
F	 Ø4,0x30mm	24
G	 Ø1/4"x25mm	04
H	 4mm	01
I		10
X	 SPACER	02

BEDS WITH CENTRE LEGS

PLEASE NOTE THE RECOMMENDED PROCESS FOR ADJUSTING CENTRE LEGS WHEN ASSEMBLING YOUR BED.

BEFORE PLACING THE MATTRESS ON THE BASE, PLEASE ENSURE THAT THE SUPPORT LEGS ARE NOT QUITE TOUCHING THE FLOOR. WHEN THE BED IS THEN IN USE THE SUPPORT LEGS WILL SIT FIRMLY ON THE SOLID SURFACE.

PLEASE ENSURE THAT THE LEGS ARE VERTICAL

DUE TO THE NATURE OF LAMINATE FLOORING WE RECOMMEND THAT YOU PLACE A SMALL PIECE OF NON SLIP MATERIAL UNDER THE LEGS WHICH WILL GIVE YOU THE FLEXIBILITY THAT THE ADJUSTERS NEED.

WHEN MOVING THE BED IT IS ESSENTIAL THAT IT IS LIFTED INTO THE NEW POSITION. **NEVER DRAG** THE BED AS THIS WILL MOVE THE LEGS FROM THE VERTICAL POSITION THUS WEAKENING THE SUPPORT OF THE CENTRE RAIL.

ADHERING TO THE RECOMMENDED PROCESS SHOULD ENSURE THAT YOUR BED GIVES YOU YEARS OF TROUBLEFREE SERVICE.


THANK YOU

CARING FOR YOUR NEW PRODUCT

PLEASE NOTE : GOODS THAT NEED TO BE RETURNED



- ✎ SHOULD BE SENT BACK IN ITS ORIGINAL PACKAGING.
- ✎ When assembling your bed, please ensure that you have checked the contents for all relevant parts.
- ✎ When tightening bolts, do make sure that they are fully tightened but not forced.
- ✎ When moving your fully assembled bed, you must first remove the mattress and lift the frame into position; taking care when lifting and always have two people handling the bed. PLEASE DO NOT DRAG THE BED as this will cause damage to the central support legs and rail. Central legs MUST be in a vertical position at all times.
- ✎ Due to the nature of laminate flooring, we recommend that you place non-slip material under the central support legs. This will stop the legs from sliding on laminate/wooden floors and will prevent the bed from collapsing.
- ✎ It is advisable to use approved cleaning products when cleaning the furniture and bed frame as certain chemical -based cleaners could have an adverse effect on the bed's finish.
- ✎ All Limelight beds are produced to the highest standards and are packed to avoid damage in transit. Should you find that your new bed does not meet your satisfaction

01

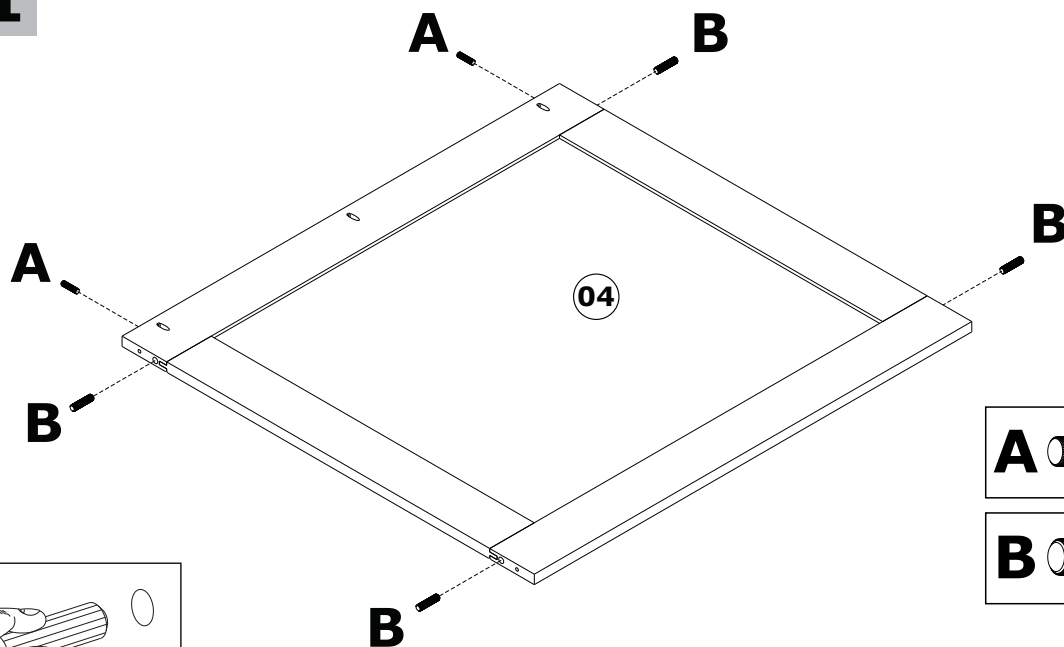

A  **04x**
Ø8,0x30mm

B  **16x**
Ø10x40mm

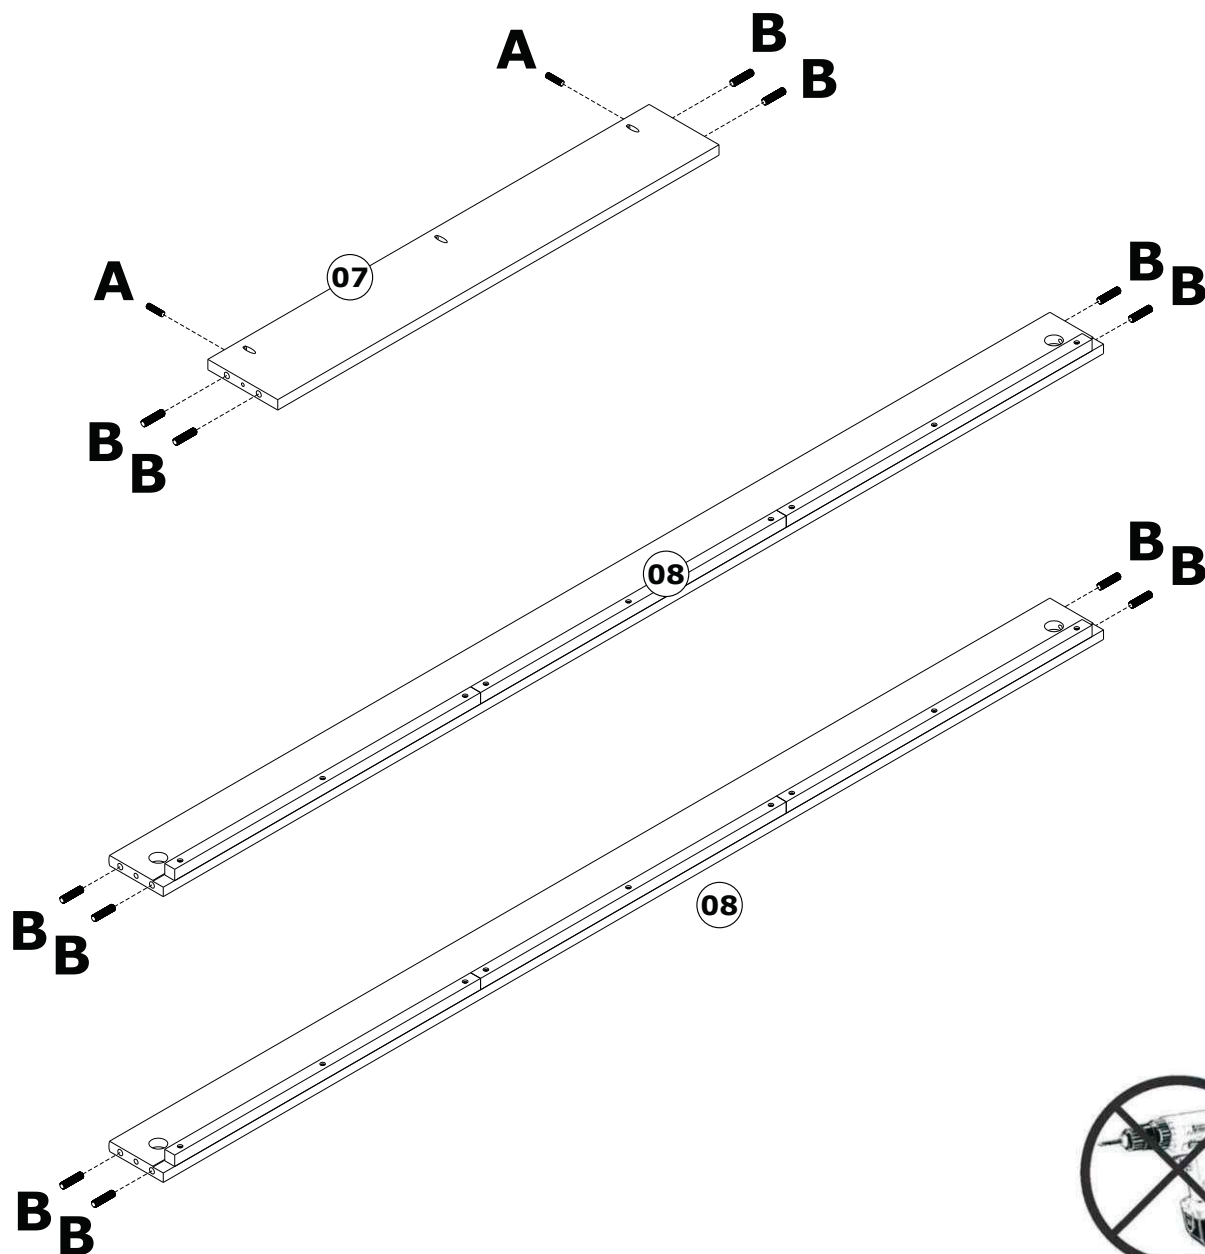
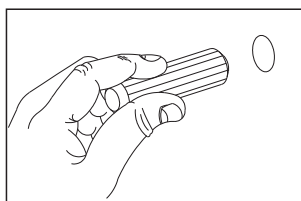



Do Not Use Power Tools

02



Do Not Use Power Tools

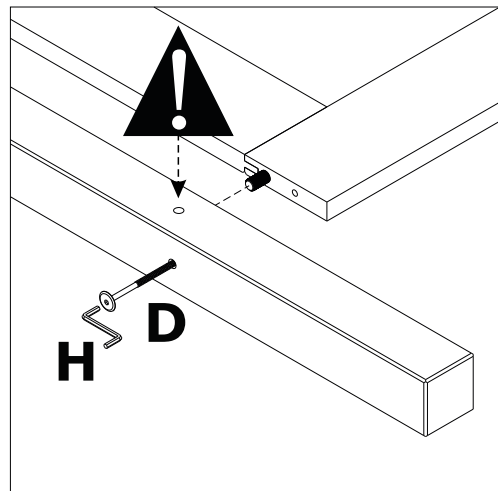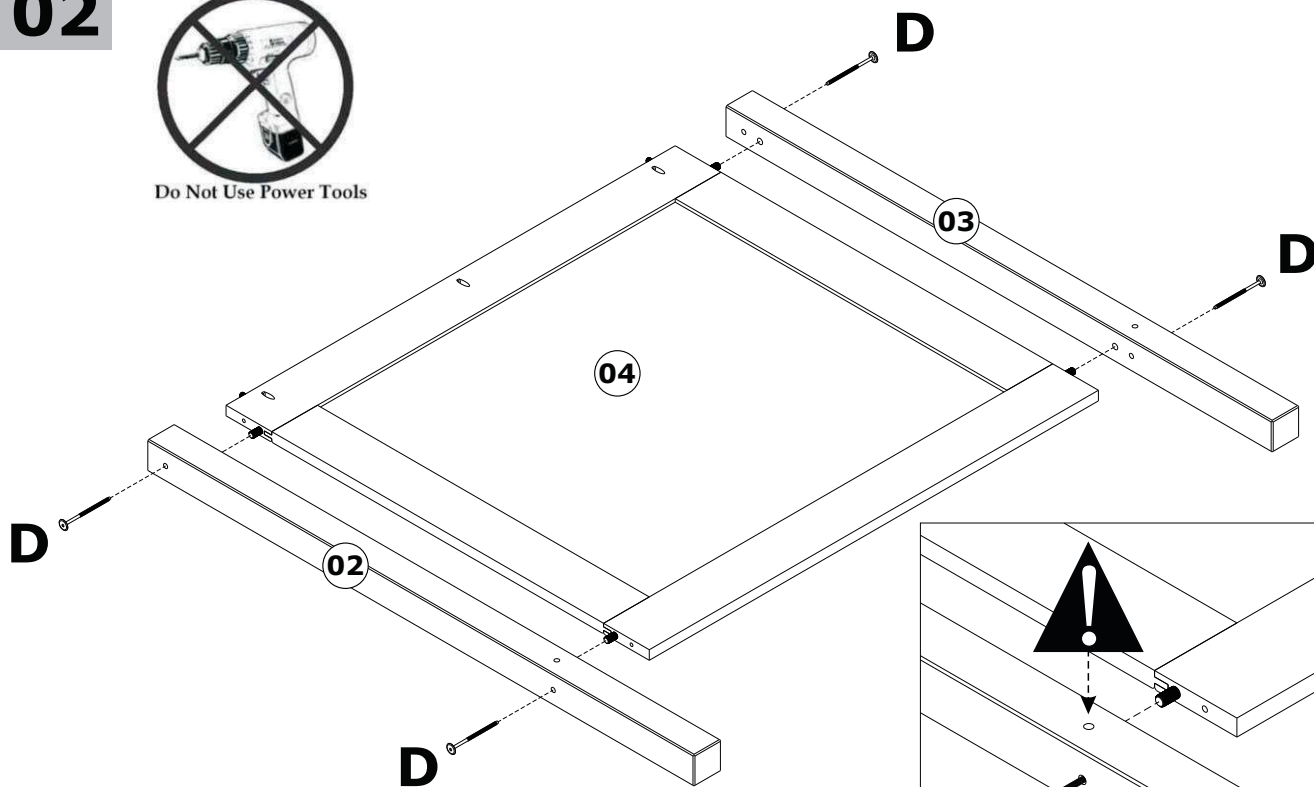



D  **04x**
Ø7x90mm - Cab. Ø17mm


H  **01x**
4mm

03



Do Not Use Power Tools

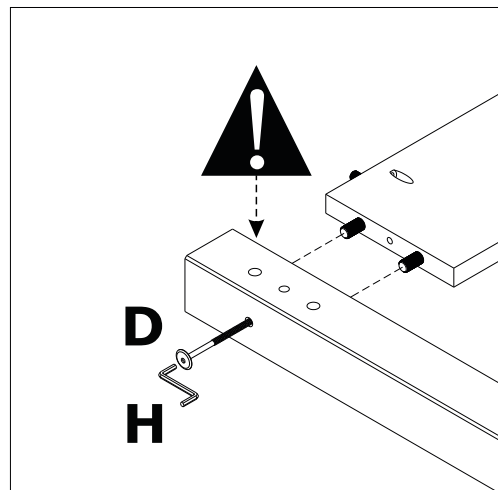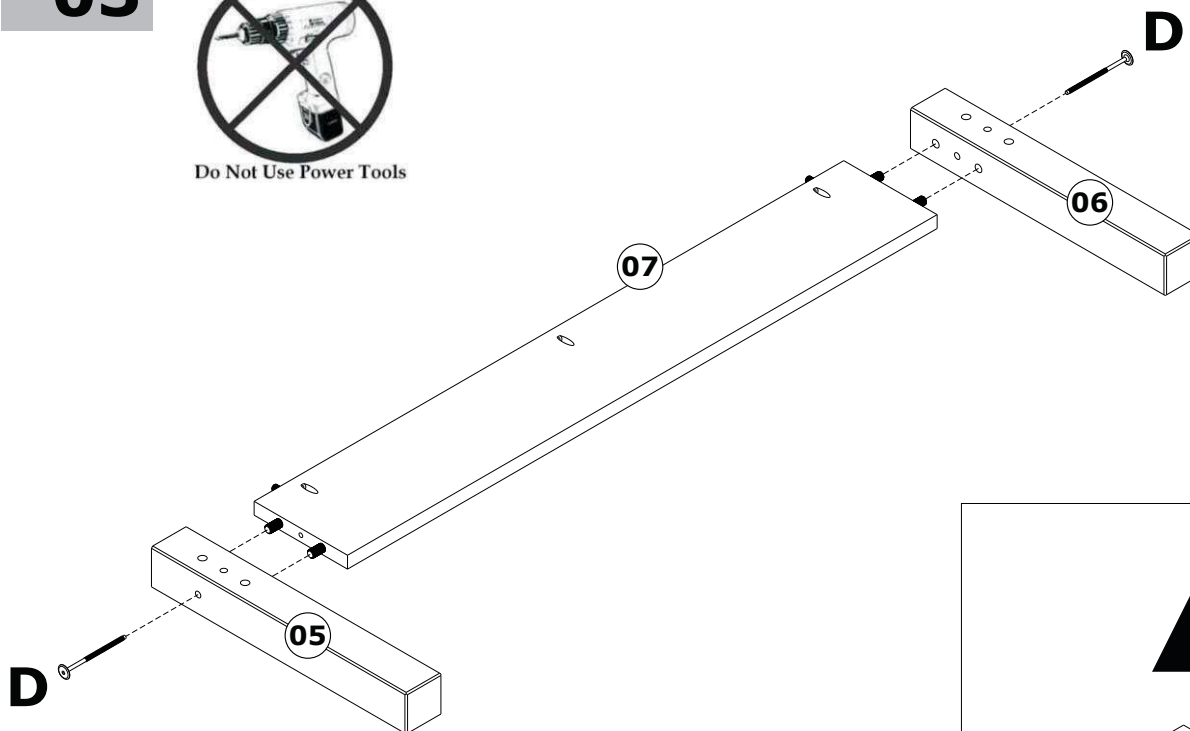


D  **02x**
Ø7x90mm - Cab. Ø17mm


H  **01x**
4mm

04




Do Not Use Power Tools

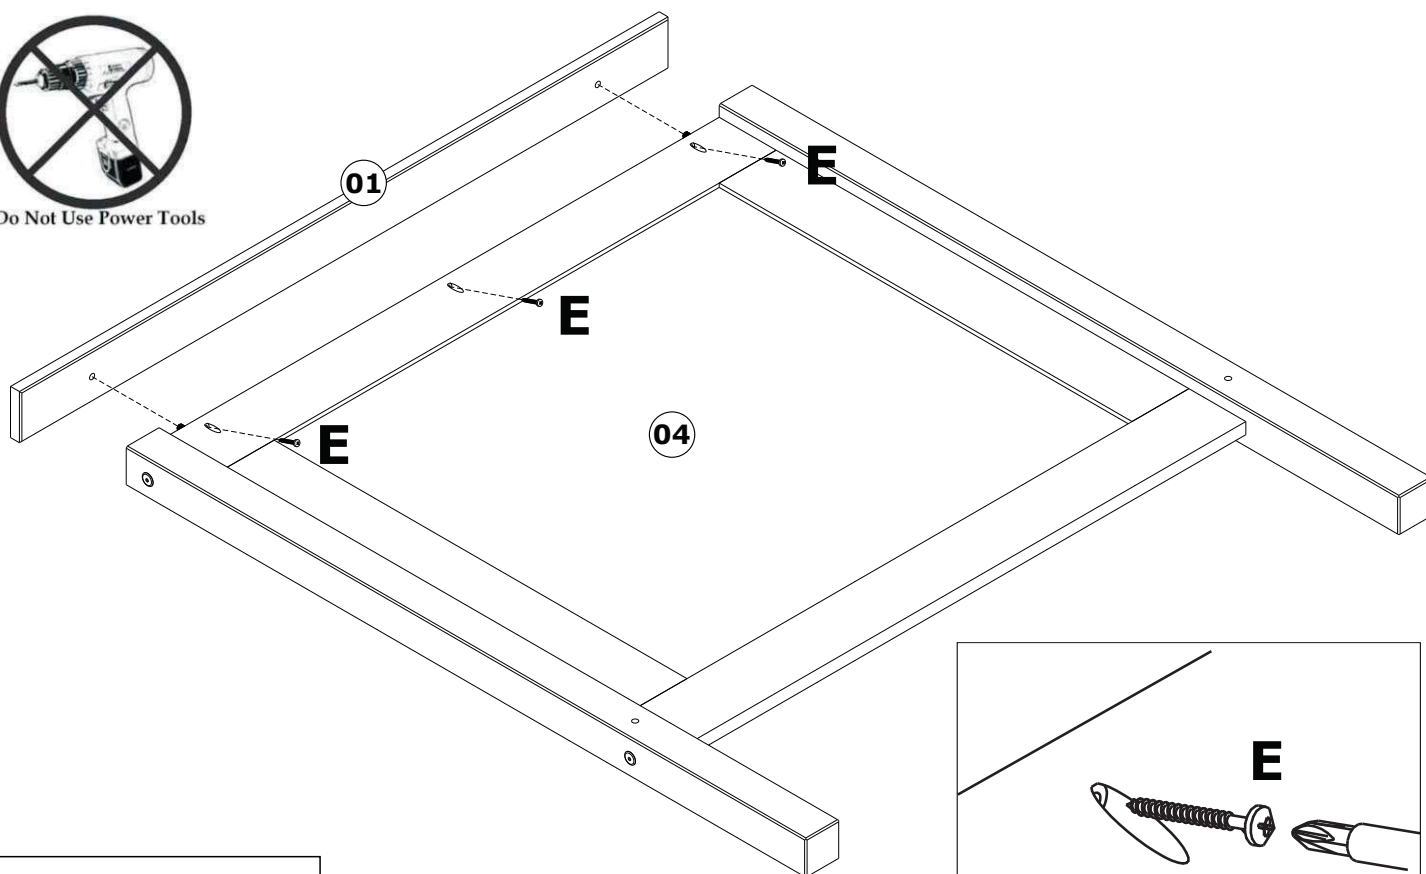

E 


03x
Ø3,5x30mm

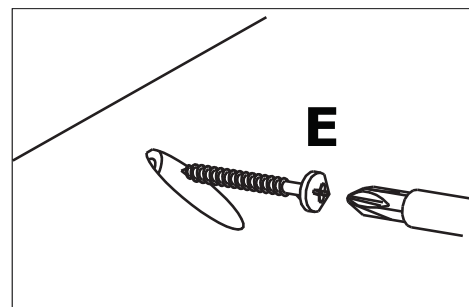


05




Do Not Use Power Tools

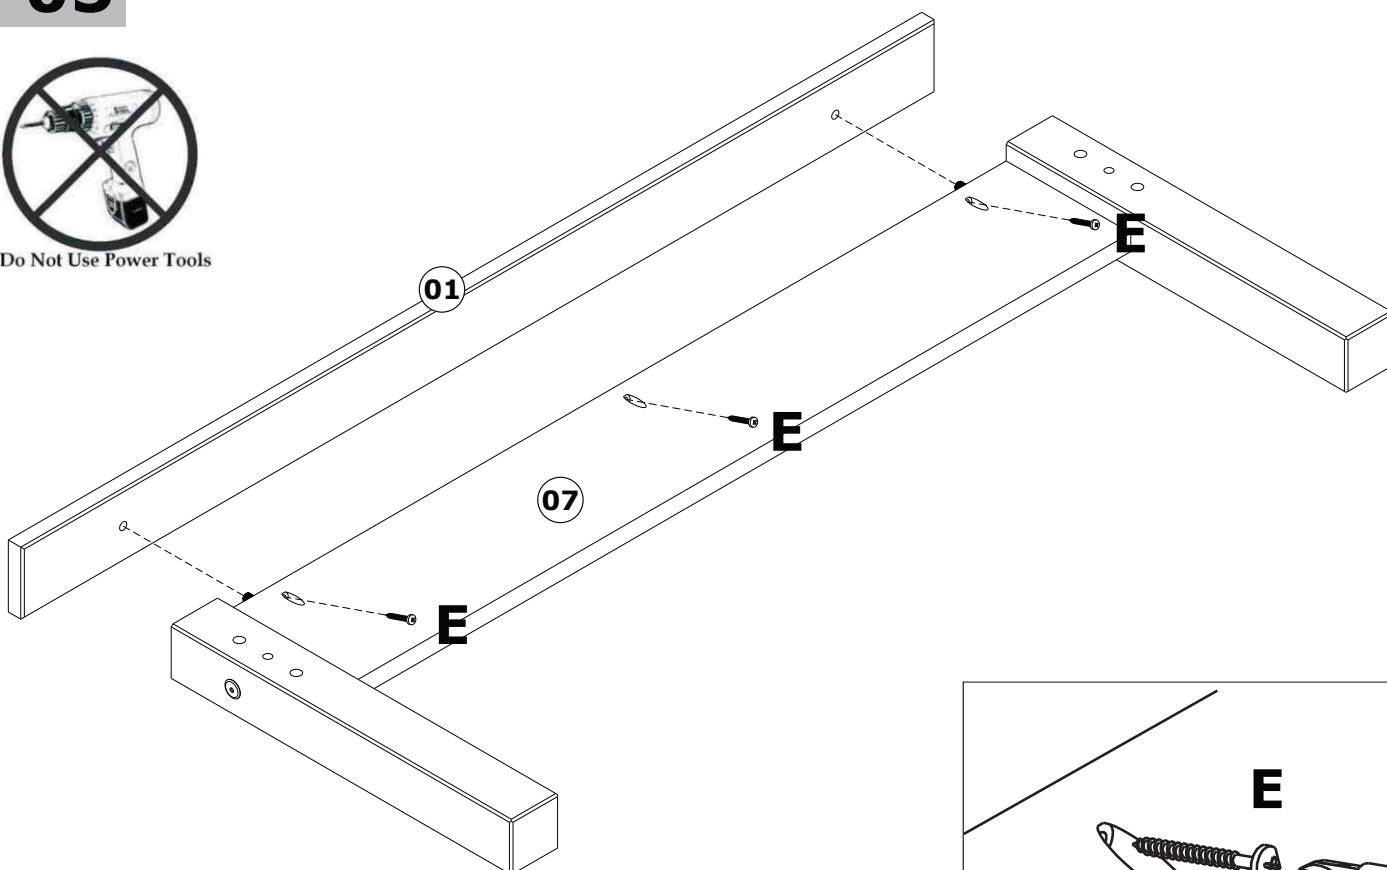


E 


03x
Ø3,5x30mm

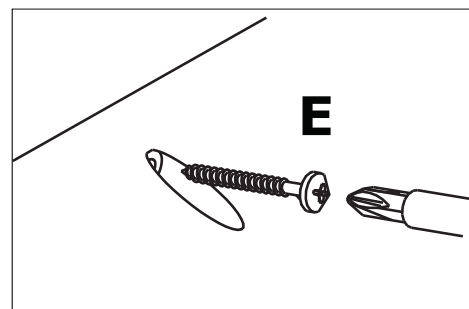



06

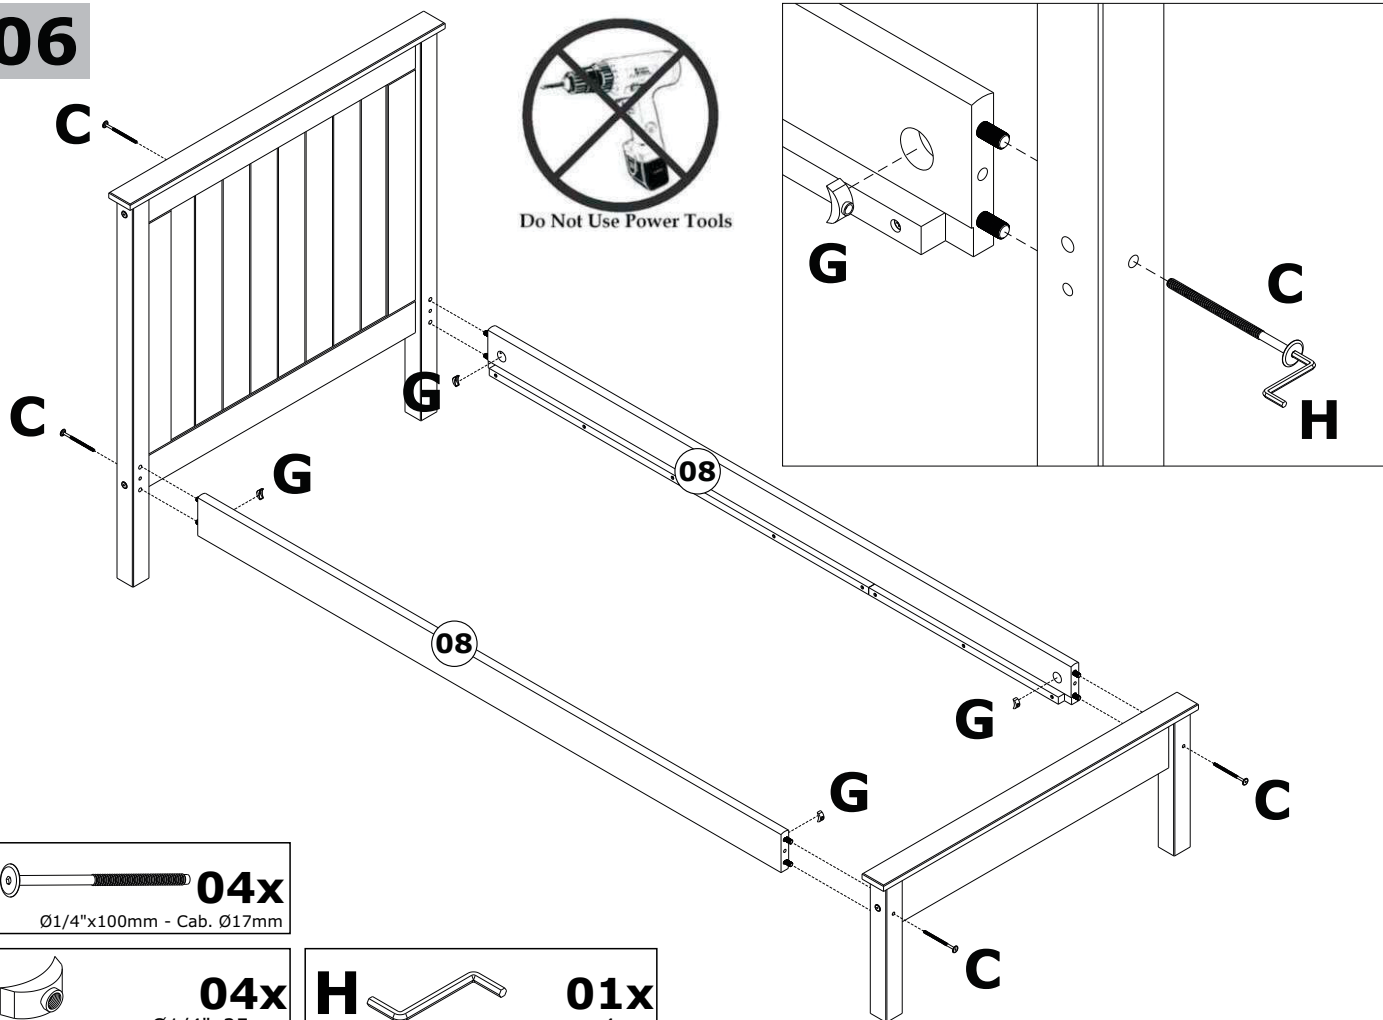

07

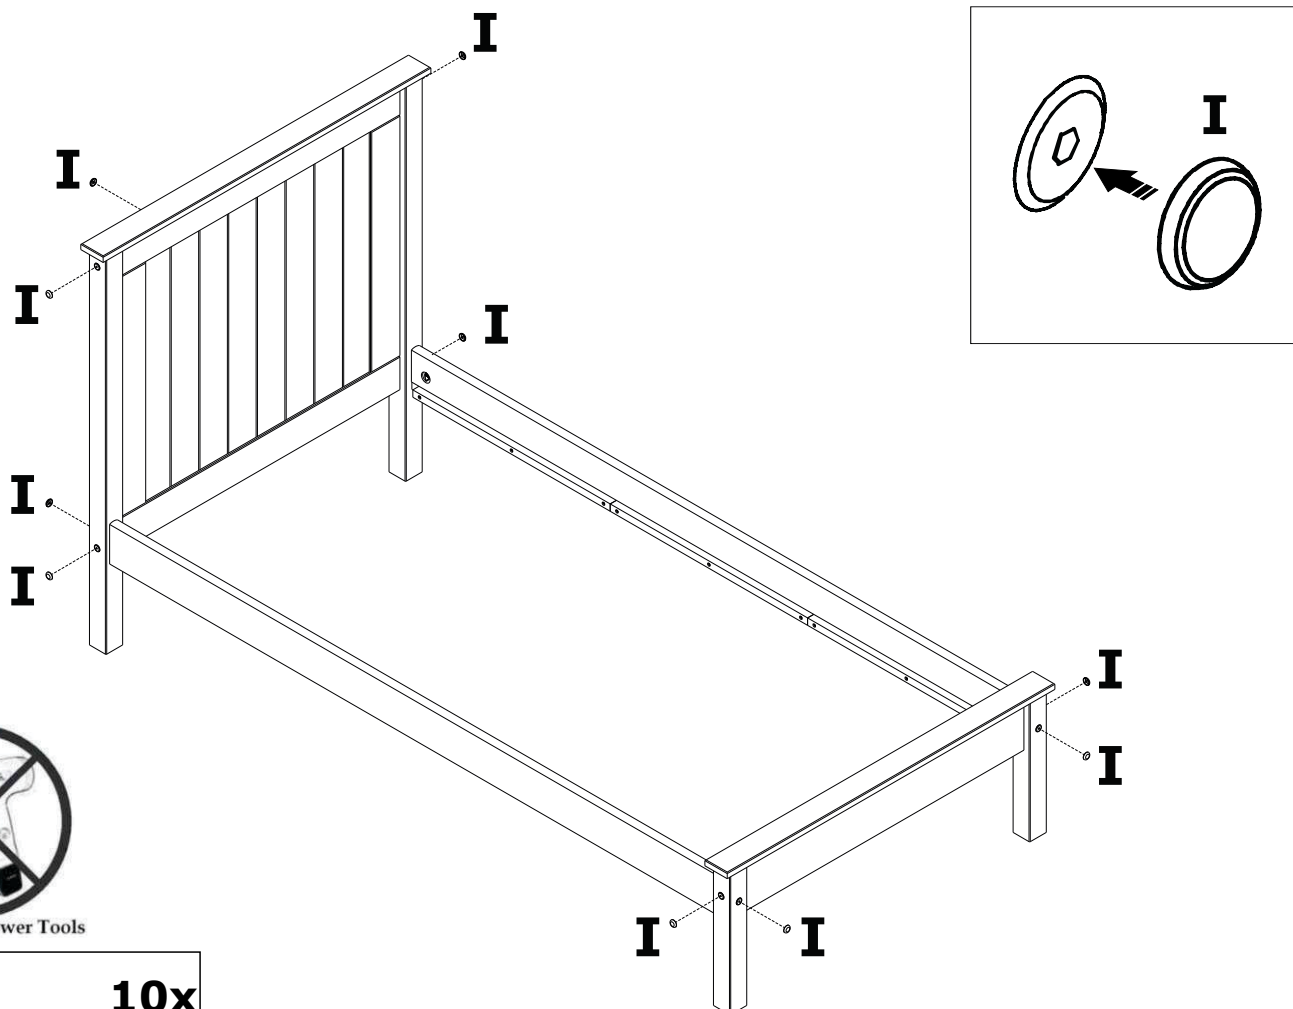

08

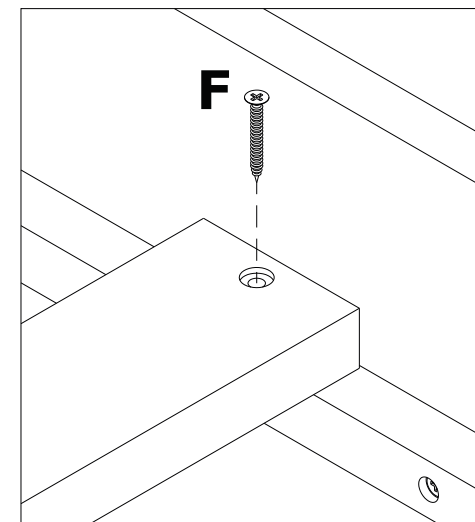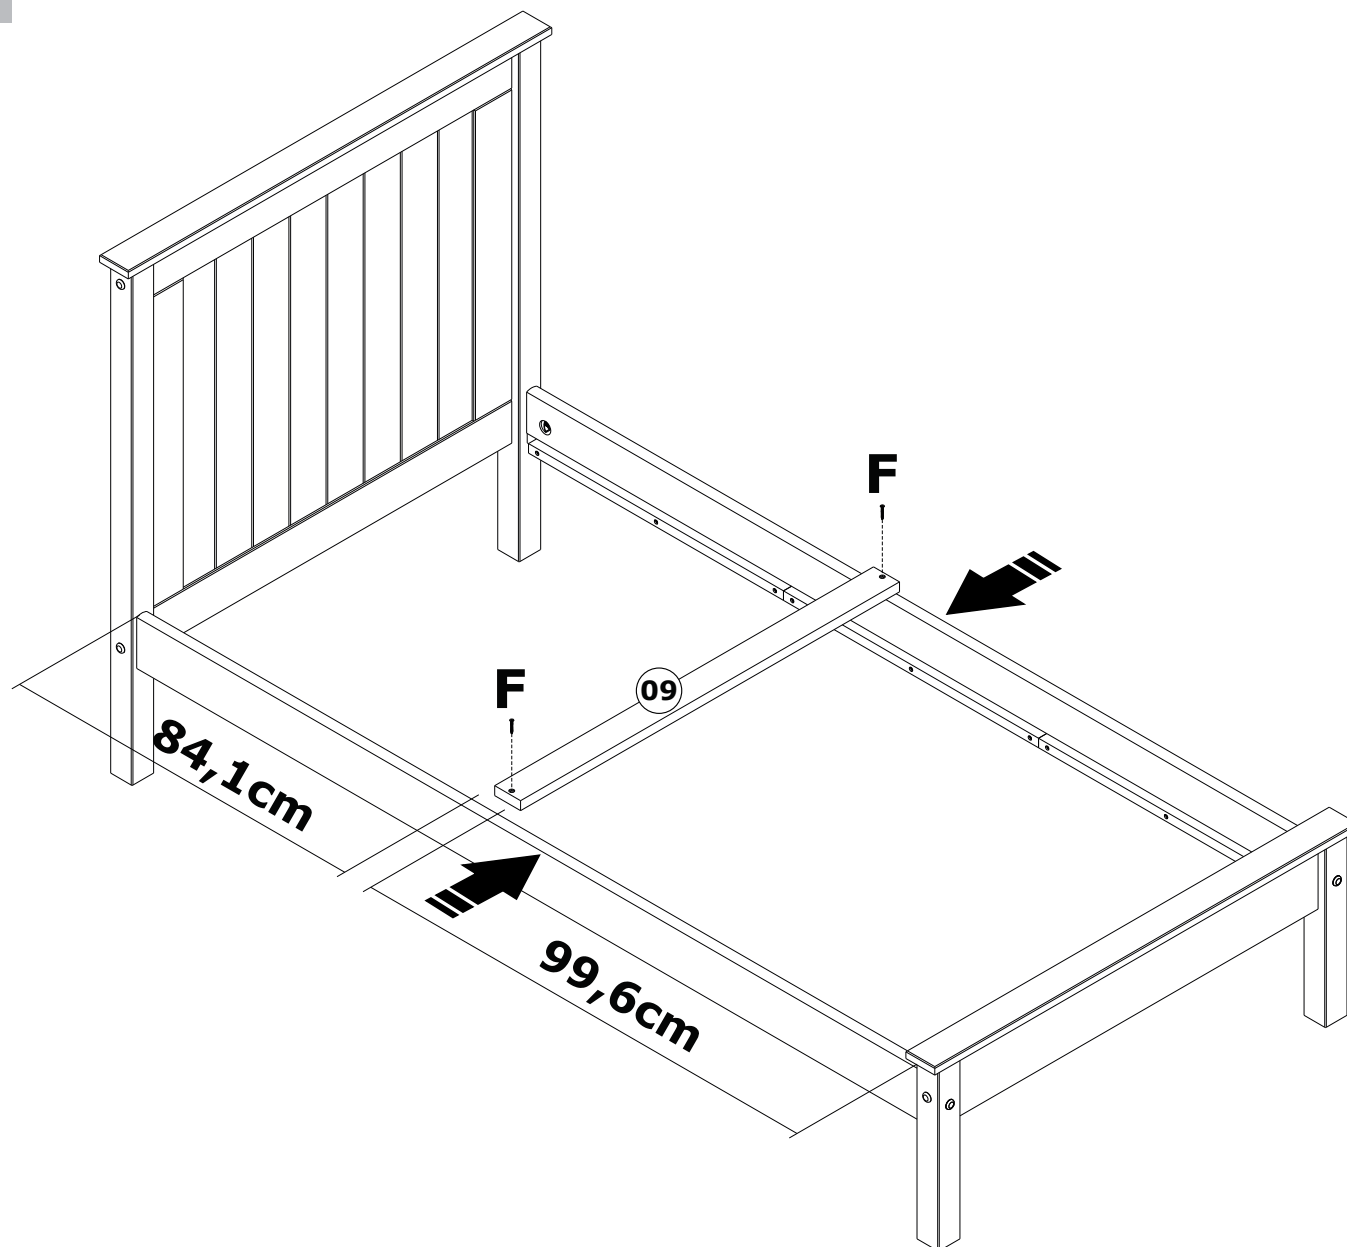

Do Not Use Power Tools


F  **02x**
Ø4,0x30mm

09





22x
Ø4,0x30mm

X



02x

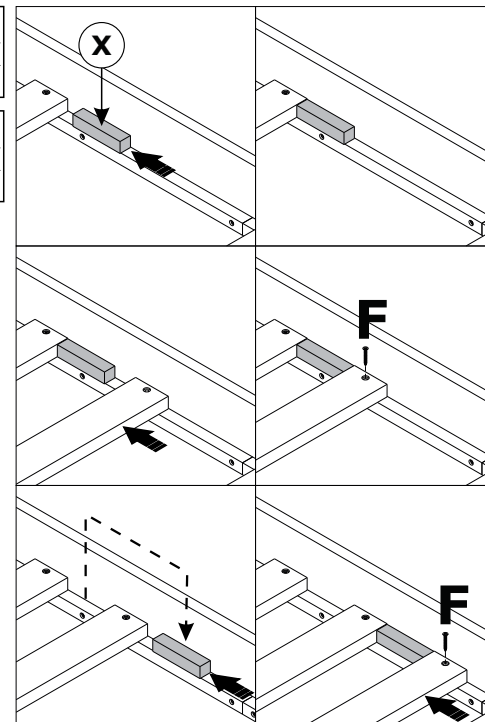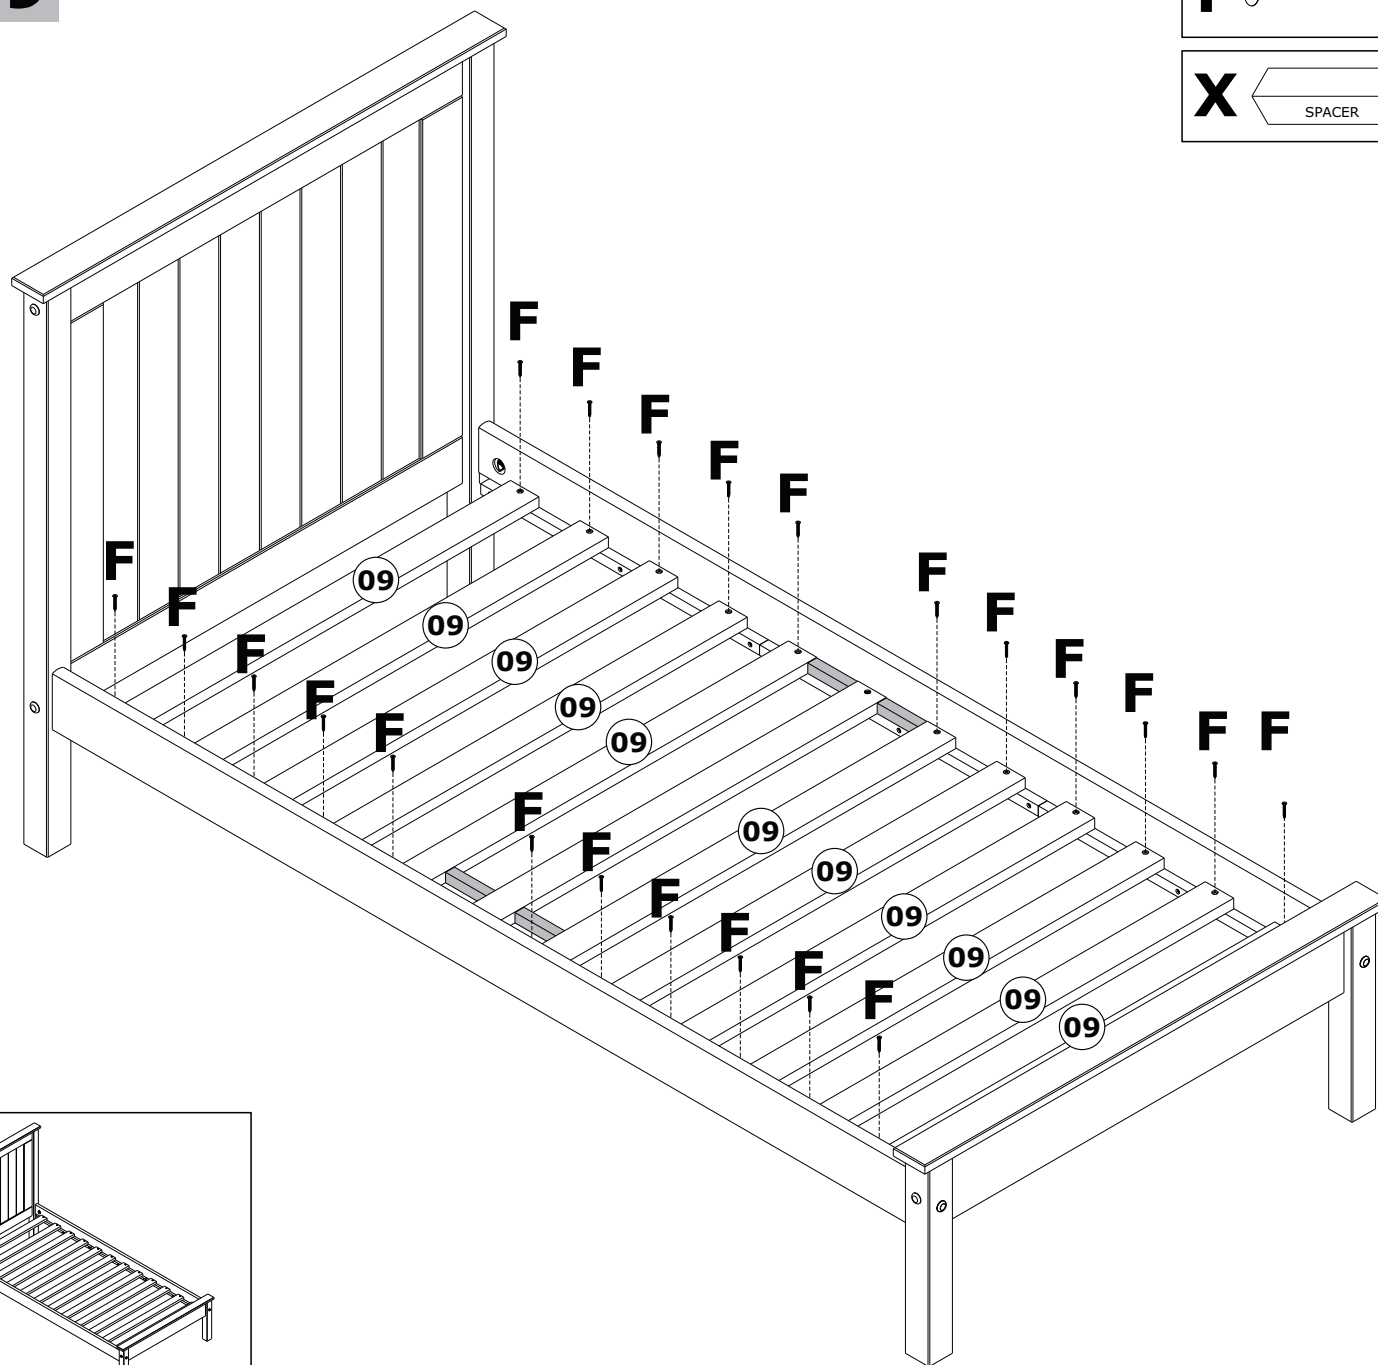

Do Not Use Power Tools

