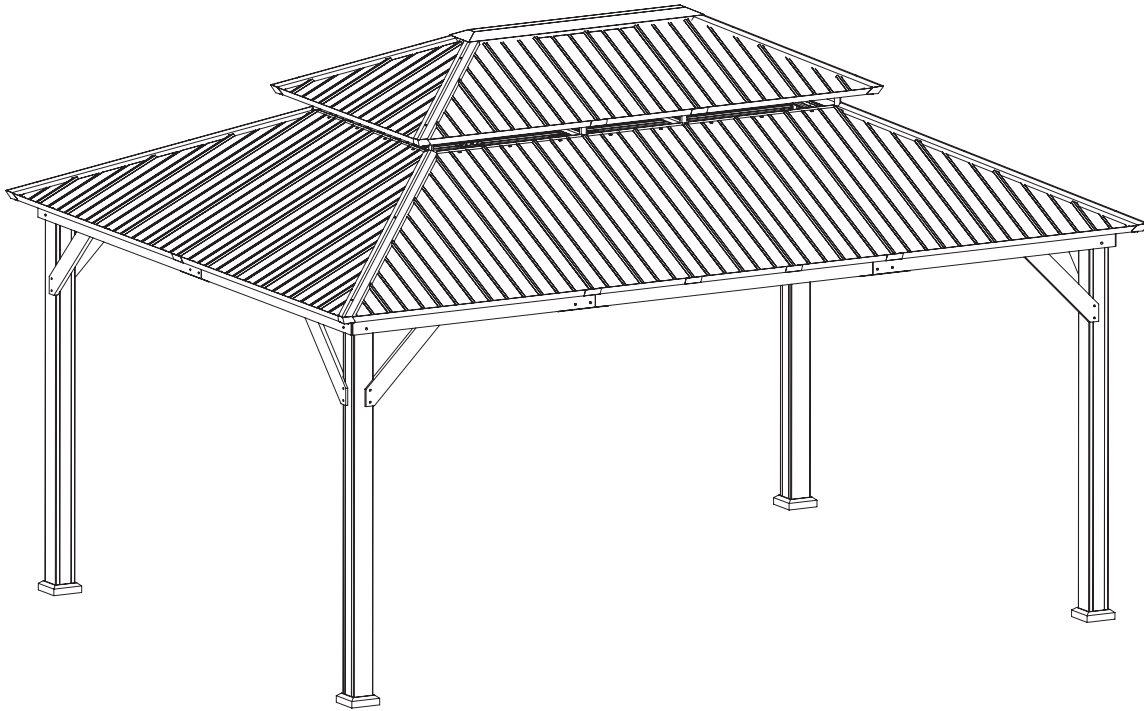


MODEL:IG10600013-1216



OWNER'S MANUAL

Rosewood 12' x 16' Cedar Framed Hard Top Gazebo

TABLE OF CONTENTS

ASSEMBLY GUIDE.....	02
USING YOUR PRODUCT.....	05

November 26, 2024

QUESTIONS?



E-mail: support@modernshade.org



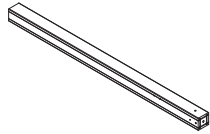


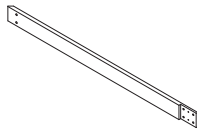
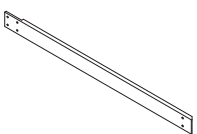
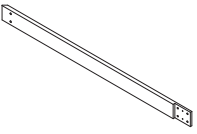
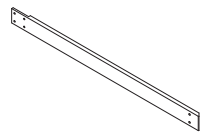





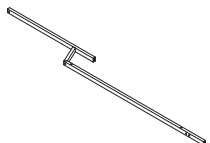
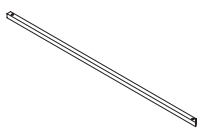










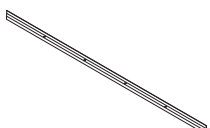










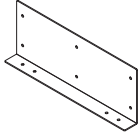
Toll Free: 1-888-666-3070



Mon-Fri: 9:00 ---17:00 PST.

ASSEMBLY GUIDE

PARTS LIST

A1 Post 1 (4pieces) 	B Foot Base (4pieces) 	C Foot Cover (4pieces) 	D7 Cross Beam 7 (2pieces) 	D8 Cross Beam 8 (2pieces) 	D11 Cross Beam 11 (4pieces) 
P0010000701	P0030000301	P0020000301	P0040002101	P0040002201	P0040002701
D12 Cross Beam 12 (2pieces) 	E1 Support Bracket 1 (4pieces) 	E2 Support Bracket 2 (4pieces) 	F1 Roof Rib 1 (4pieces) 	F3 Roof Rib 3 (4pieces) 	G1 Middle Cross Beam 1 (6pieces) 
P0040002801	P0050000501	P0050000601	P0070000202	P0070000302	P0080000102
G2 Middle Cross Beam 2 (4pieces) 	H1 Roof Support 1 (4pieces) 	H2 Roof Support 2 (4pieces) 	H6 Roof Support 6 (8pieces) 	H8 Roof Support 8 (4pieces) 	H9 Roof Support 9 (2pieces) 
P0080000302	P0090000102	P0090000202	P0090000302	P0090000402	P0090000502
J1 Roof Upper Border 1 (2pieces) 	J2 Roof Upper Border 2 (2pieces) 	J3 Roof Upper Border 3 (2pieces) 	J4 Roof Upper Border 4 (2pieces) 	K1 Connector 1 (2pieces) 	K2 Connector 2 (2pieces) 
P0090000602	P0090000702	P0090000802	P0090001002	P0090001102	P0090001202
K3 Connector 3 (2pieces) 	L1 Roof Lower Border 1 (2pieces) 	L2 Roof Lower Border 2 (2pieces) 	L3 Roof Lower Border 3 (2pieces) 	L4 Roof Lower Border 4 (2pieces) 	L9 Roof Lower Border 9 (8 pieces) 
P0090001402	P0090001502	P0090001602	P0090001702	P0090001802	P0090001902
M1 Connector 1 (6pieces) 	M2 Connector 2 (4pieces) 	M3 Connector 3 (4pieces) 	M4 Connector 4 (28pieces) 	M5 Connector 5 (16pieces) 	M6 Connector 6 (6pieces) 
P0060001401	P0060001501	P0060001701	P0060000501	P0060000602	P0110000701

ASSEMBLY INSTRUCTIONS

- Please carefully unpack each of the components and hardware. check the components against the parts list and make sure there are no missing parts. lay pieces on cardboard or a soft mat to help protect the pieces from scratches.

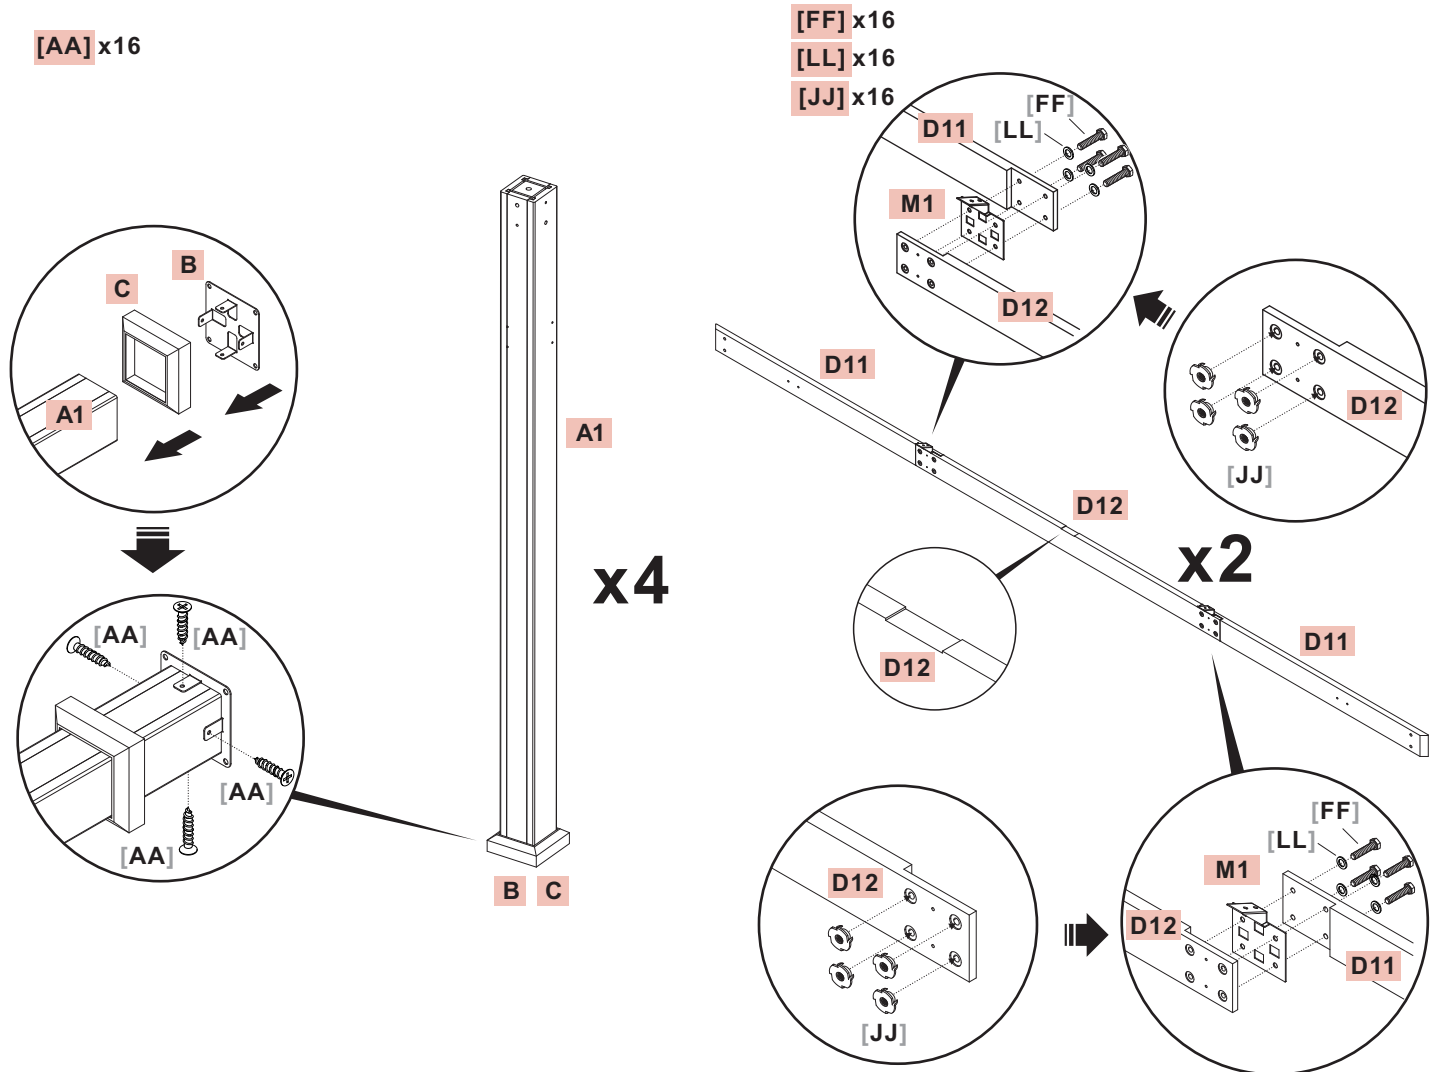
⚠ CAUTION

Watch for sharp edges when handling the pieces, wear gloves to avoid injury.

STEP 01# Slide foot base **B** and foot cover **C** onto post **A1**. Use four (4) **[AA]** bolts to attach foot base **B** to post **A1**. Repeat with the other three (3) posts **A1**.


- For ease of assembly, it is recommended to have 3 or more people and allow enough time to completely finish the assembly. assembly can take 6-8 hours. a step-ladder is required for assembly (not included).
- Follow step by step instructions, and follow all safety warnings provided with your tools.
- DO NOT tighten screws until all the screws and washers are properly installed. tighten screws securely, do not over tighten.
- Gazebo should not be used in inclement weather and high winds.

STEP 02# Attach one (1) **M1** connector and one (1) **D11** cross beam to each end of a **D12** cross beam using four (4) four-claw screws **[JJ]**, **M8** flat washers **[LL]**, and bolts **[FF]** each. Repeat to make a second assembly.




STEP 03#

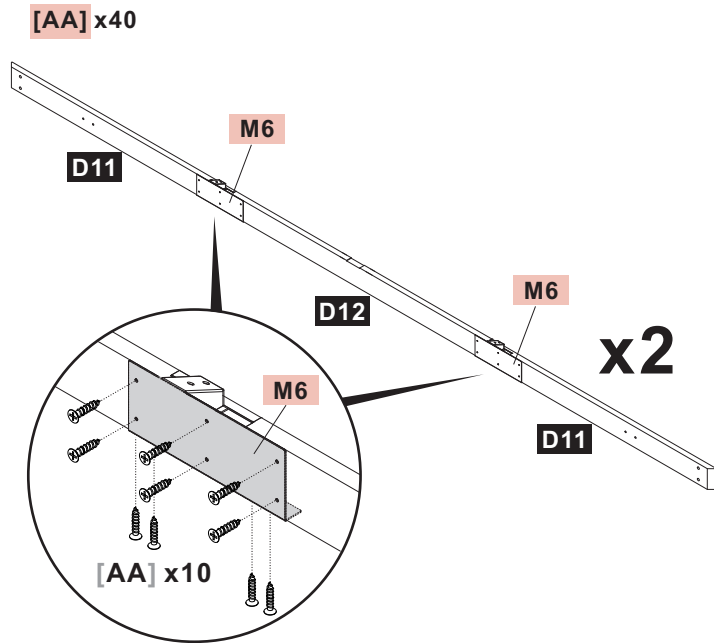Cover the connections between the cross beams with **M6** connectors and secure with (10) **[AA]** bolts each. Repeat to make a second assembly.




STEP 04#

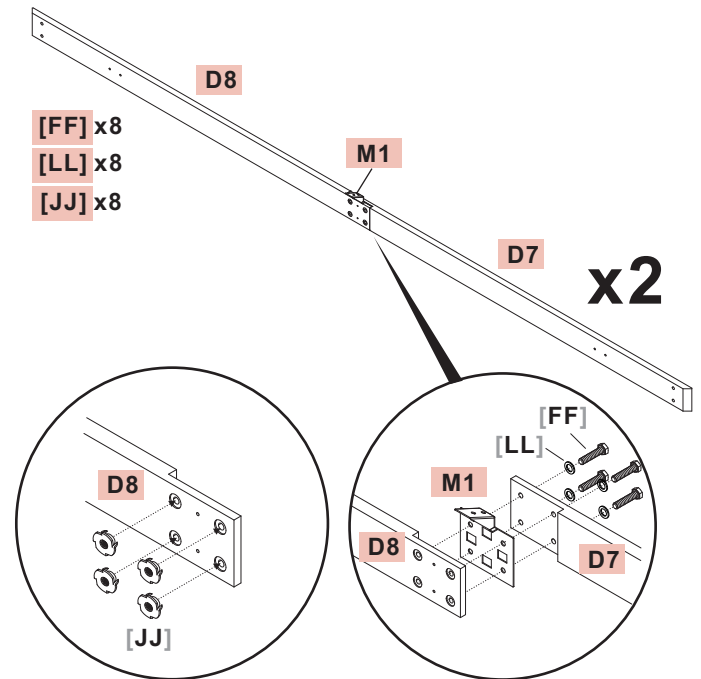Attach four (4) **[JJ]** screw nuts to cross beam **D8**. Use four (4) **[FF]** bolts and four (4) **[LL]** flat washers to attach cross beam **D7** to connector **M1** and cross beam **D8**. Repeat with the other assembly.



STEP 05#

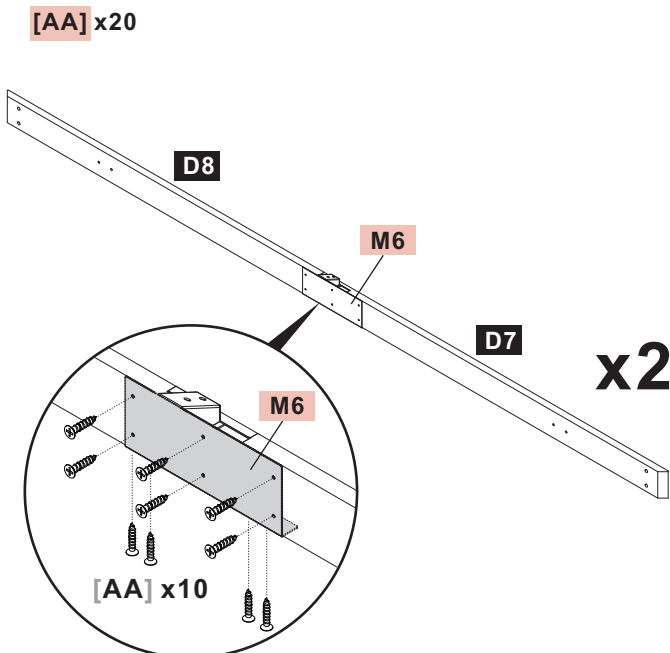Use ten (10) **[AA]** bolts to attach one (1) connector **M6** to cross beam assembly **D7 D8**.



STEP 06#

Attach the cross beam assembly **D11 D12** to left **A1** post using one (1) **[CC]** bolt and **[MM]** washer in the top hole, and one (1) **[GG]** bolt, two (2) **[MM]** washers, and one (1) **[HH]** nut in the bottom hole. Attach the cross beam assembly to right A1 post using one (1) **[GG]** bolt, two (2) **[MM]** washers, and one (1) **[HH]** nut in the top hole, and one (1) **[CC]** bolt and **[MM]** washer in the bottom hole. Repeat to make a second assembly.

