
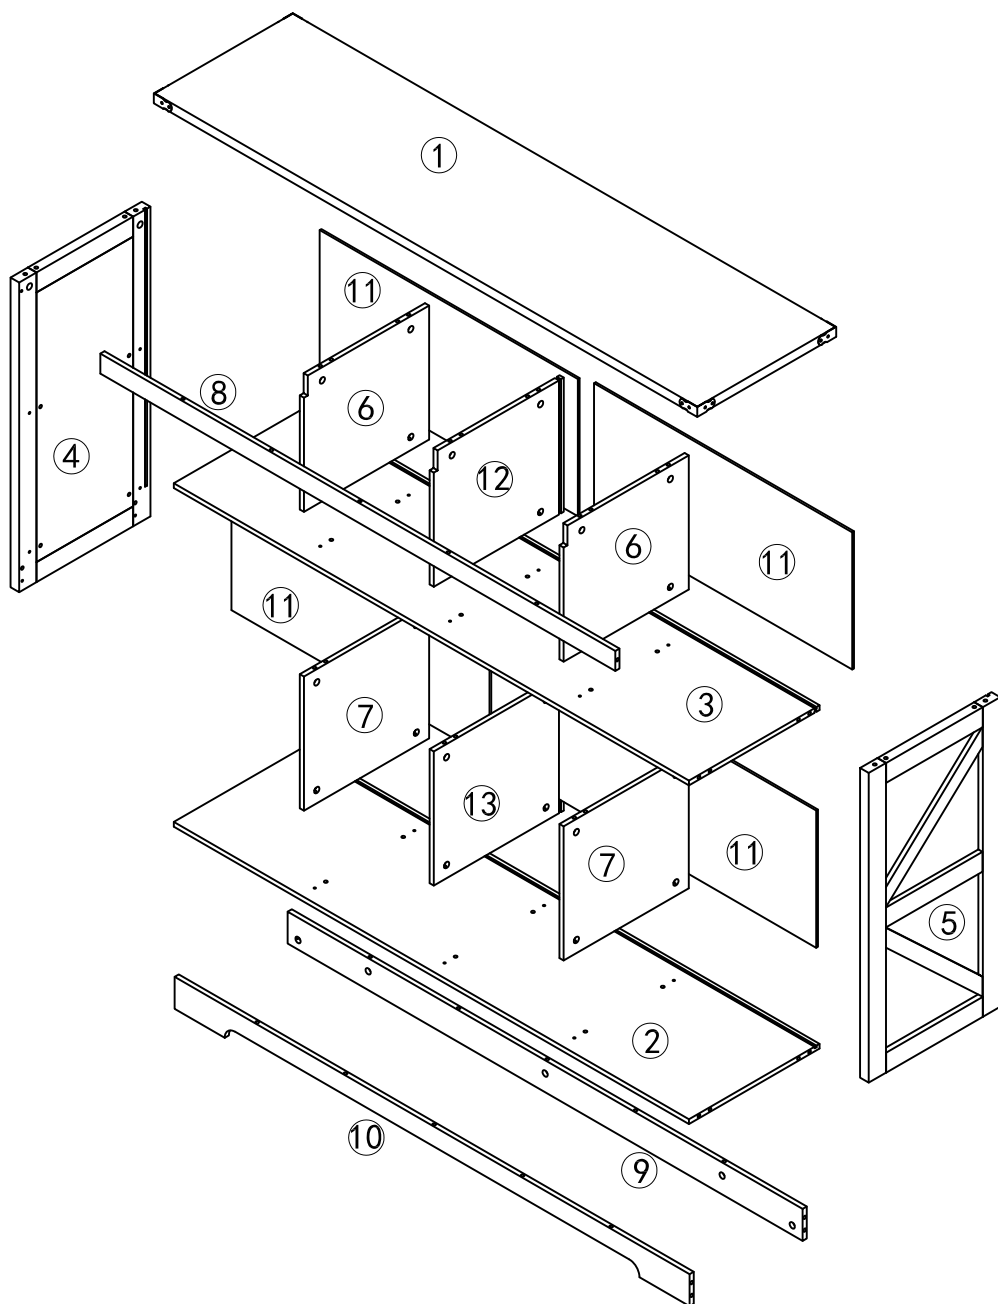
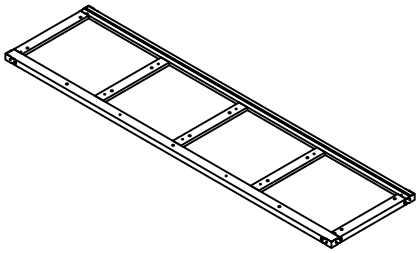
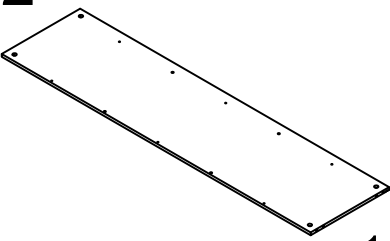
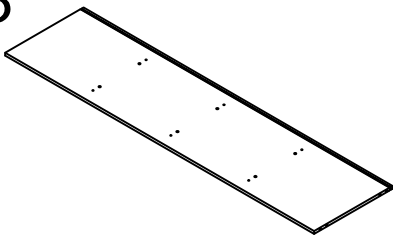
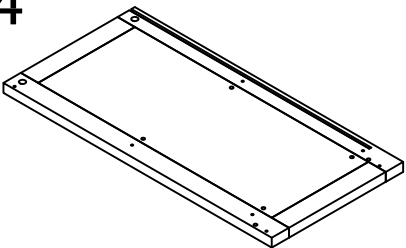
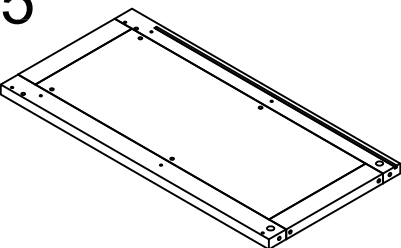
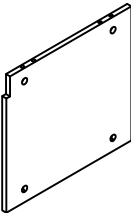
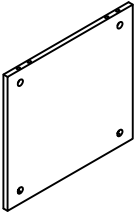
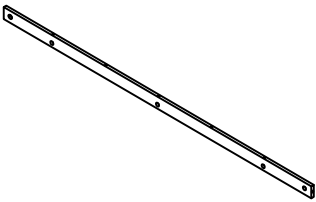
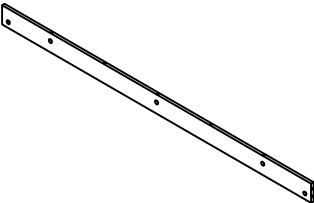
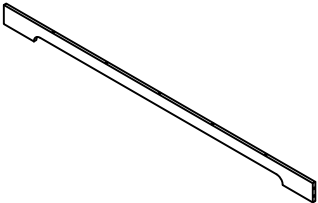
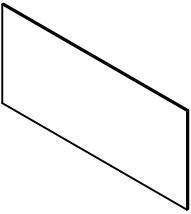
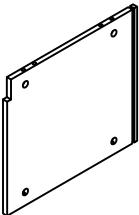






# Parts List

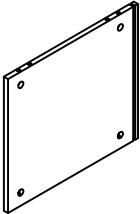

# Hardware List

<div>1</div> <div></div> <div>1 PC</div>	<div>2</div> <div></div> <div>1 PC</div>	<div>3</div> <div></div> <div>1 PC</div>
<div>4</div> <div></div> <div>1 PC</div>	<div>5</div> <div></div> <div>1 PC</div>	<div>6</div> <div></div> <div>2 PC</div>
<div>7</div> <div></div> <div>2 PC</div>	<div>8</div> <div></div> <div>1 PC</div>	<div>9</div> <div></div> <div>1 PC</div>
<div>10</div> <div></div> <div>1PC</div>	<div>11</div> <div></div> <div>4PC</div>	<div>12</div> <div></div> <div>1PC</div>
<div>13</div> <div></div> <div>1PC</div>		

# Hardware List

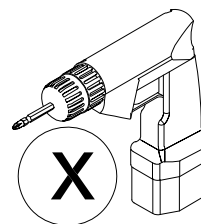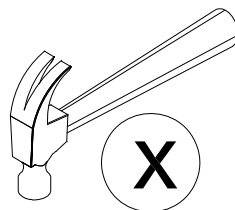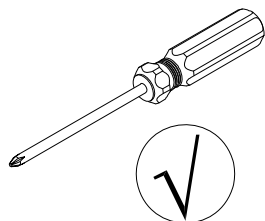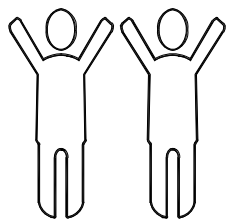








This product does not come with installation tools, customers can configure it themselves

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY


## Notice:

1. Please unbox the item from the side with an open label and put a carpet on the floor to avoid scratching it.
2. Follow the installation instructions carefully, Before installation, please ensure that all accessories are present, For large items, we advise you to install them with 2 or more people for faster and safer installation.
3. Do not fully tighten the screws during initial assembly. Fully tighten the screws only once all pieces are correctly assembled. Do not use power tools.
4. Do not stand, climb, or swing on the product.
5. If you encounter any problems during installation, please contact our customer service.


<b>A</b>  <b>Ø6*35MM</b> <b>50PCS</b>	<b>B</b>  <b>Ø15*9.5MM</b> <b>50PCS</b>	<b>C</b>  <b>24PCS</b>
<b>D</b>  <b>6PCS</b>	<b>E</b>  <b>Ø8*30MM</b> <b>47PCS</b>	<b>F</b>  <b>Ø3*12MM</b> <b>24PCS</b>
<b>G</b>  <b>32PCS</b>		

# Assembly Steps

CAM BOLT INSTALLATION AS BELOW:


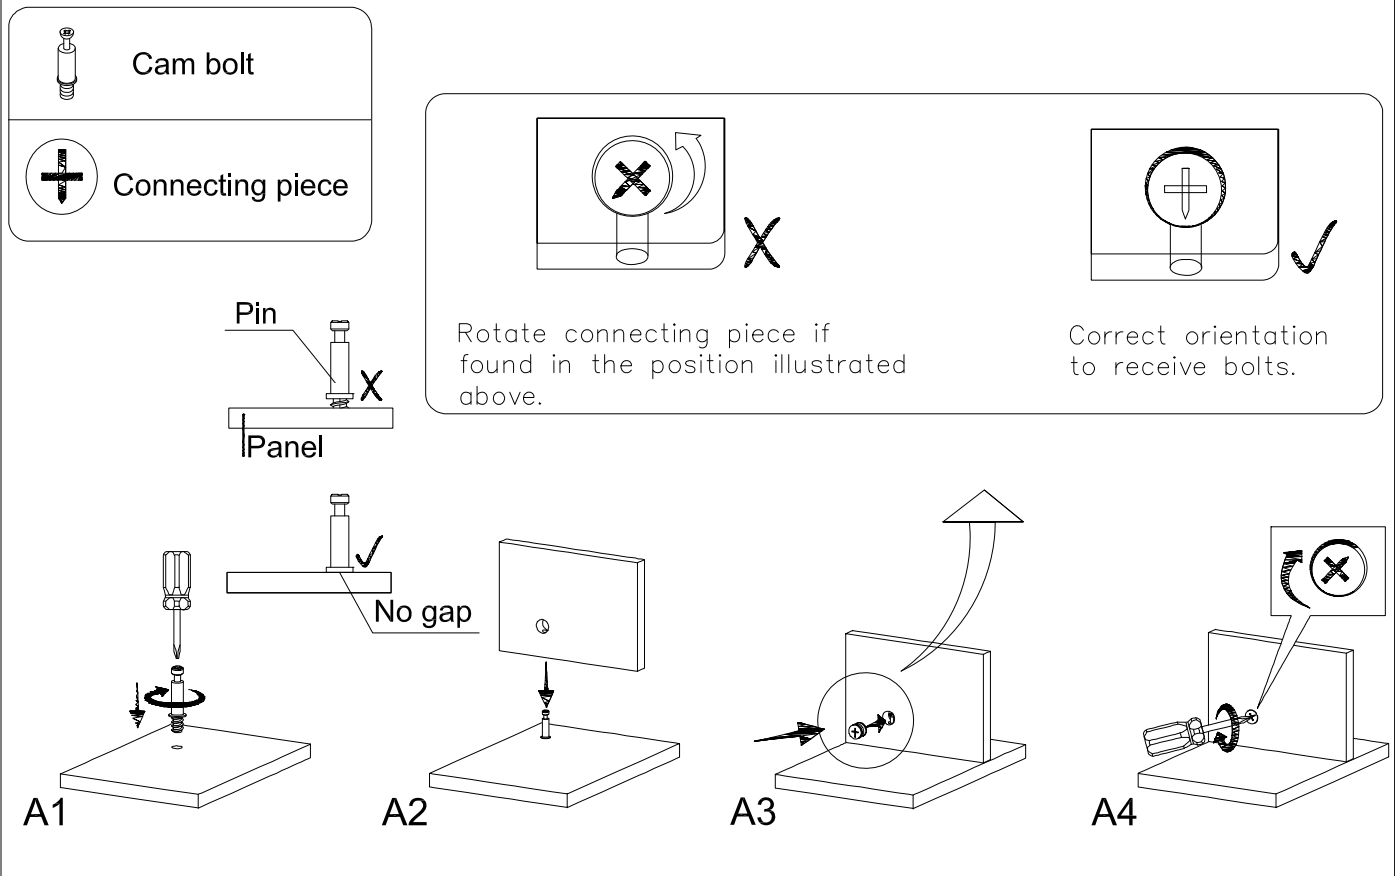


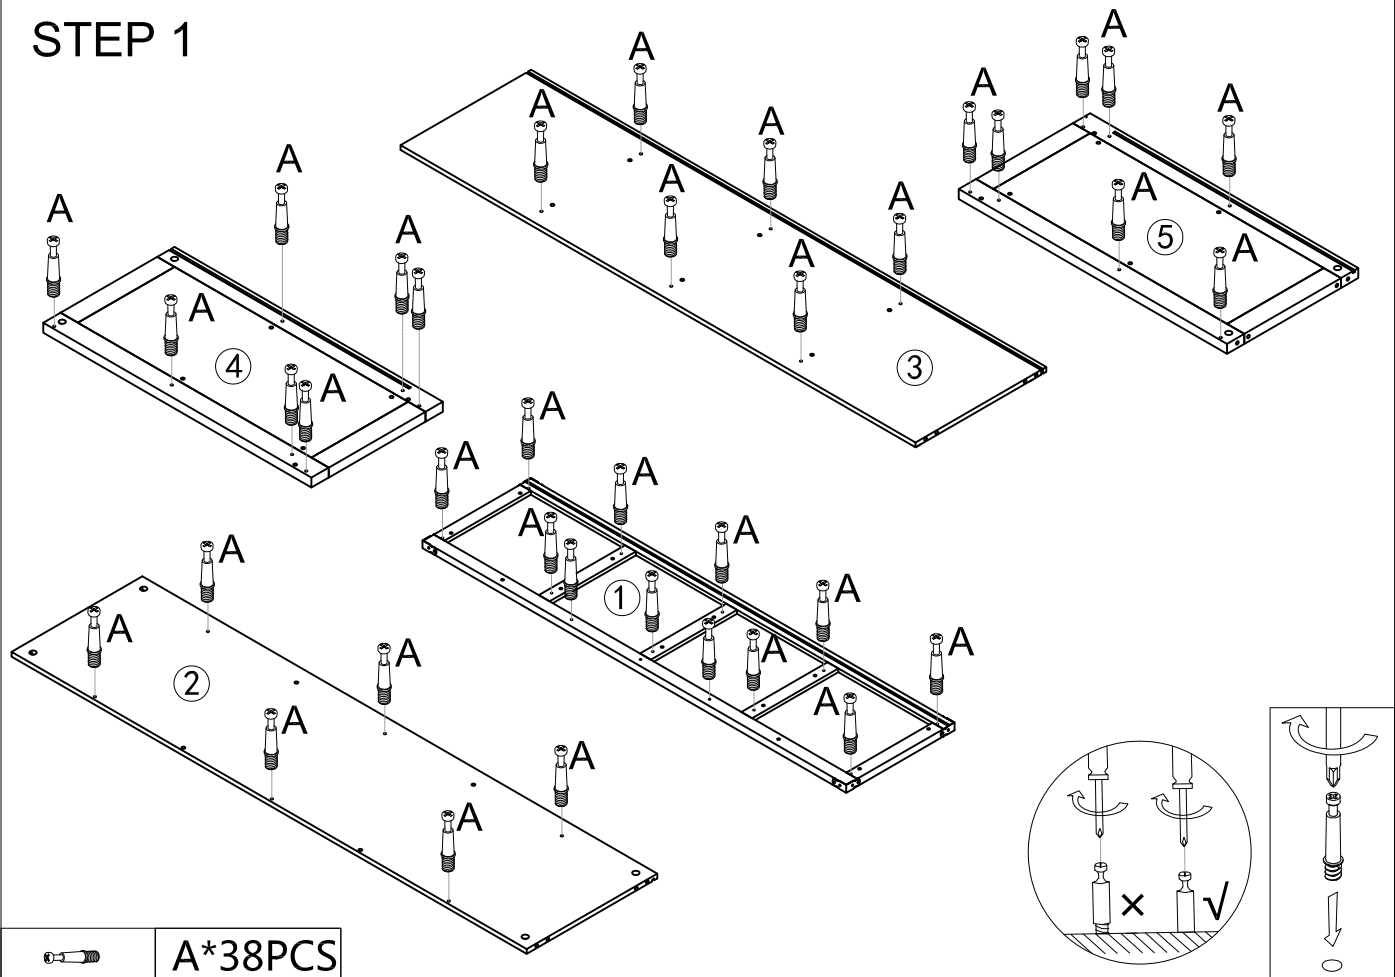

## STEP 1






# Assembly Steps

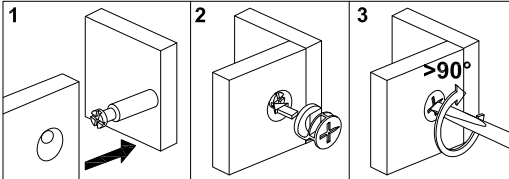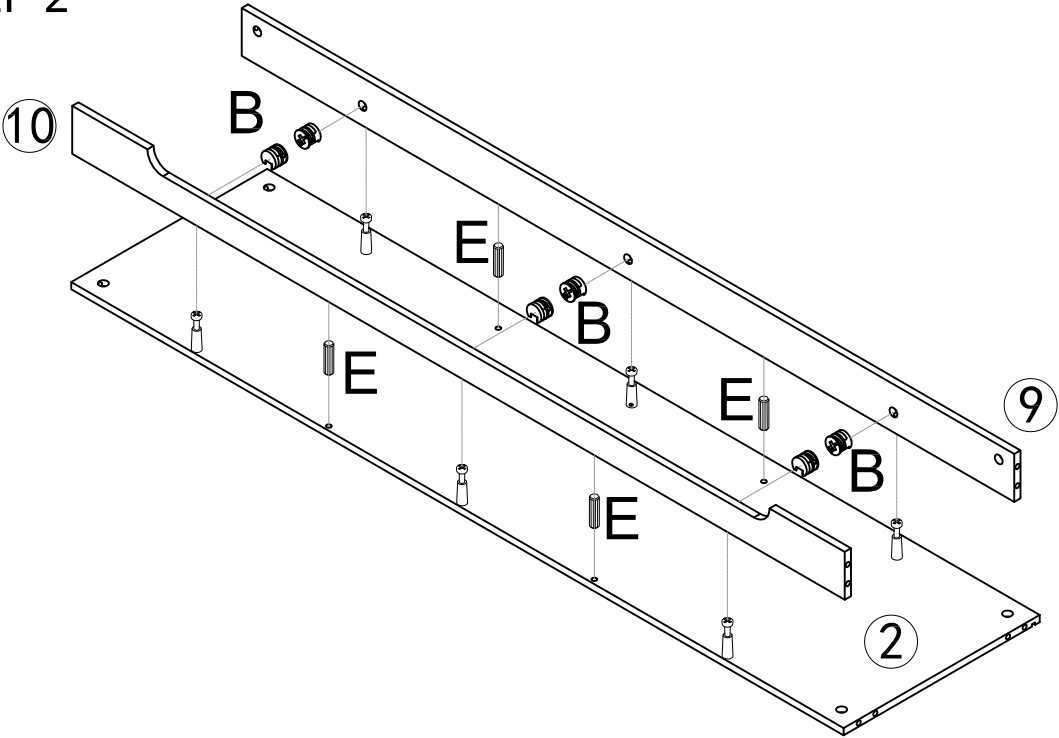
## STEP 2



	E*4PCS
	B*6PCS



## STEP 3

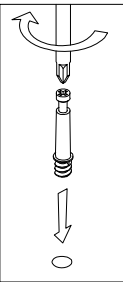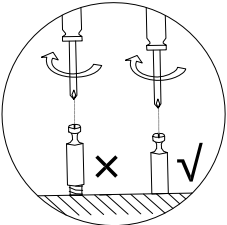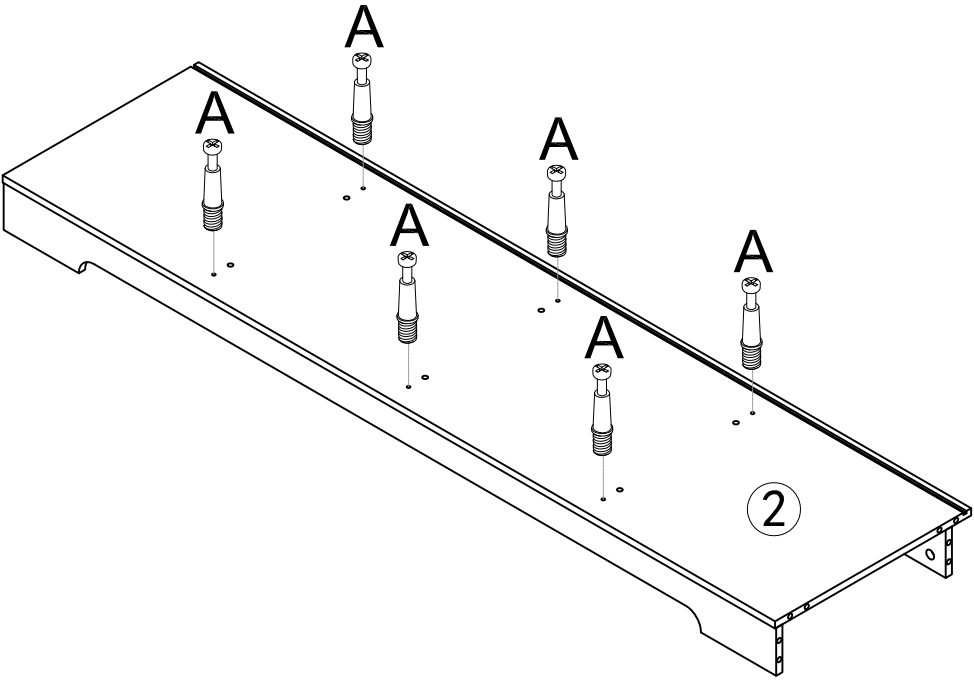

	A*6PCS
---	--------



# Assembly Steps

## STEP 4

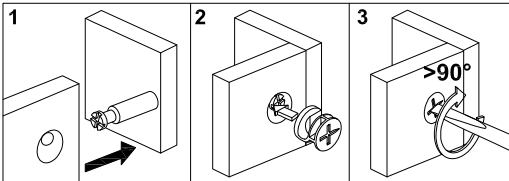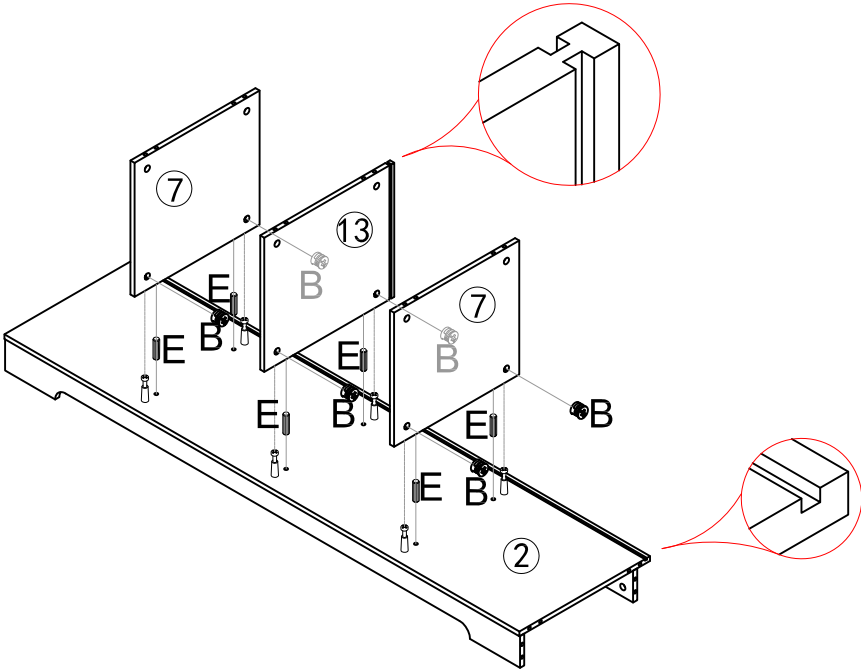

	E*6PCS
	B*6PCS



## STEP 5

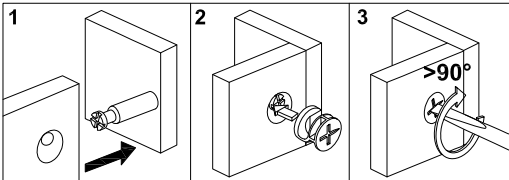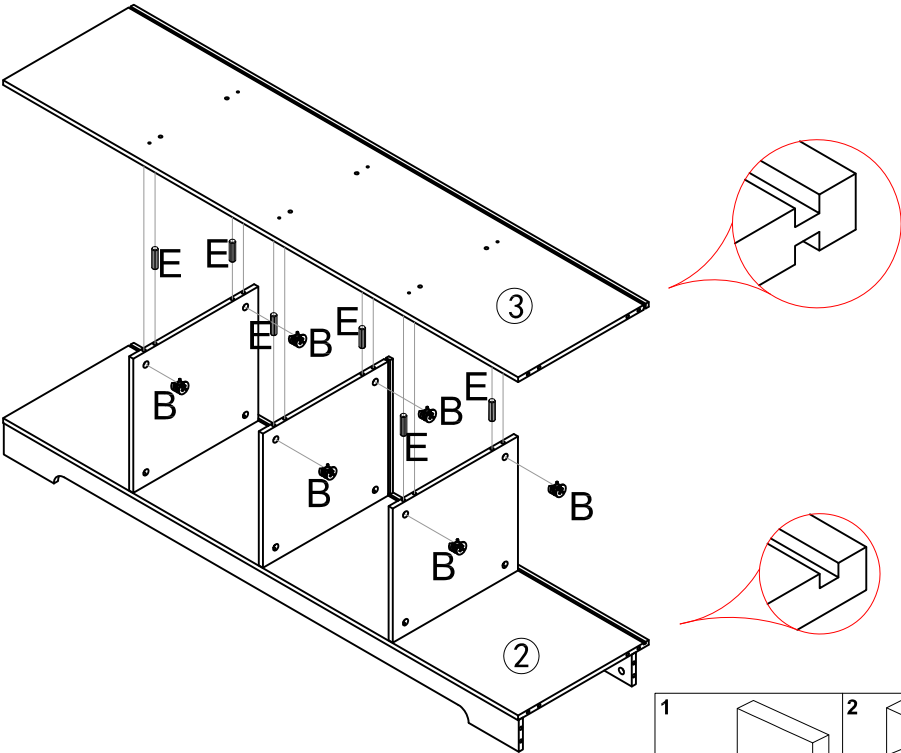

	E*6PCS
	B*6PCS



# Assembly Steps

## STEP 6

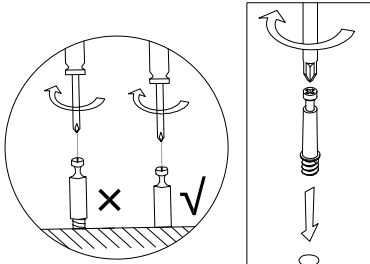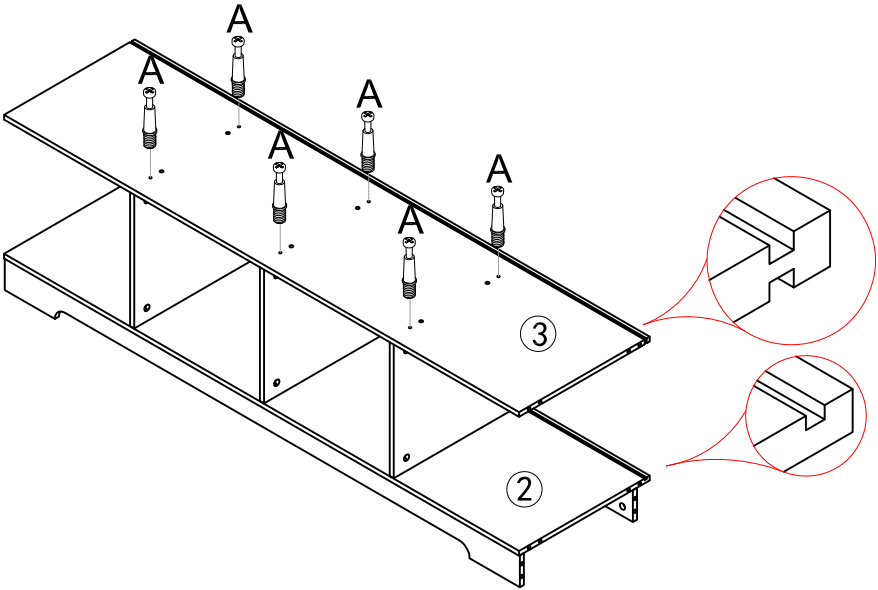

A\*6PCS

## STEP 7

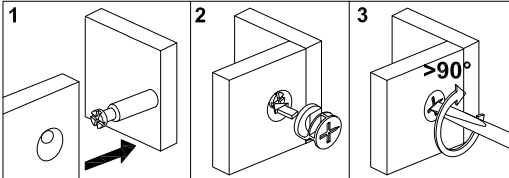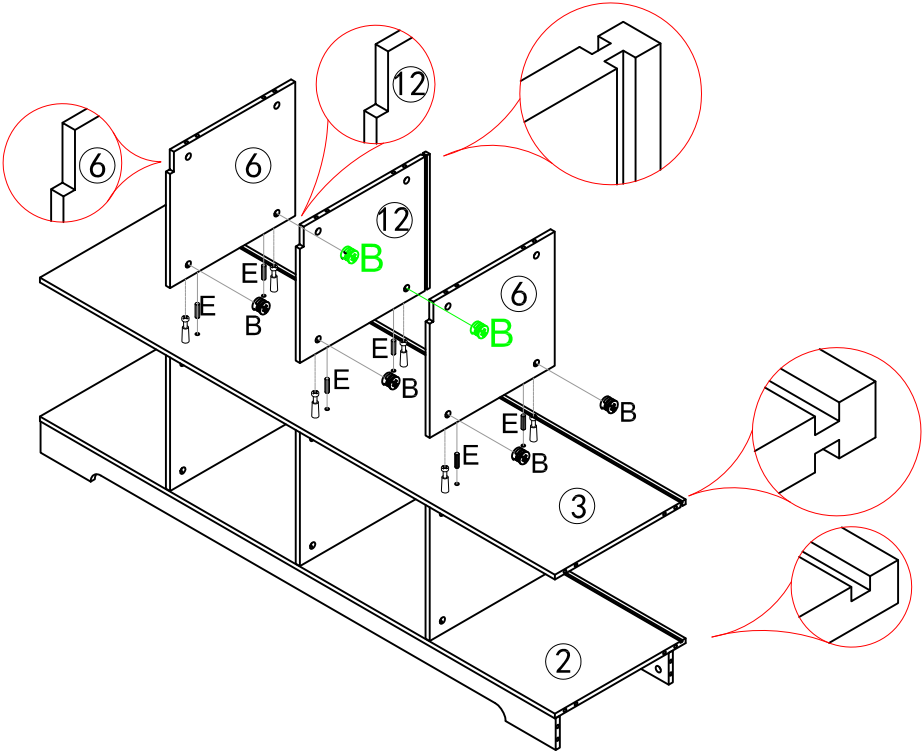

E\*6PCS




B\*6PCS







# Assembly Steps
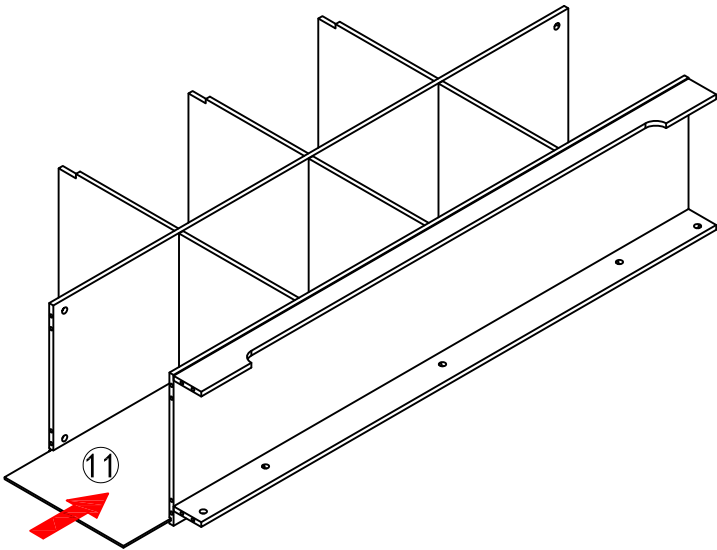
## STEP 8

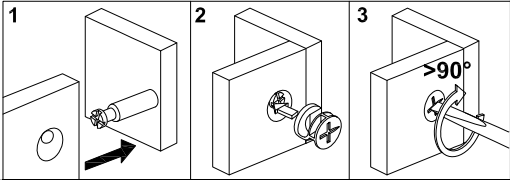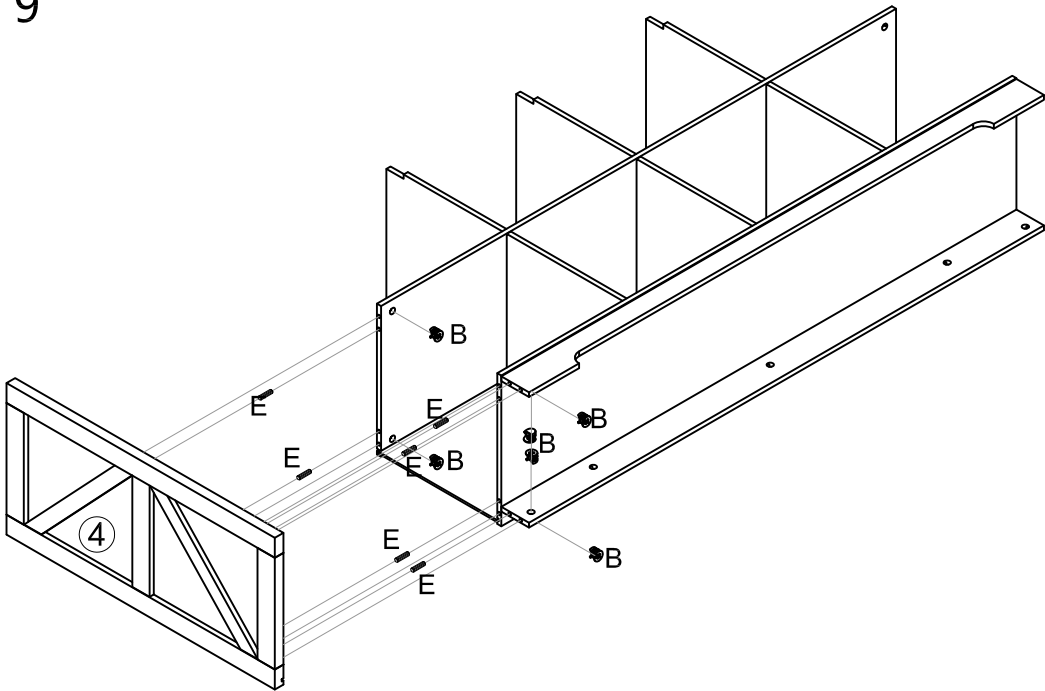



## STEP 9




	E*6PCS
	B*6PCS



# Assembly Steps

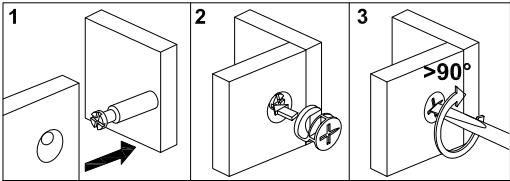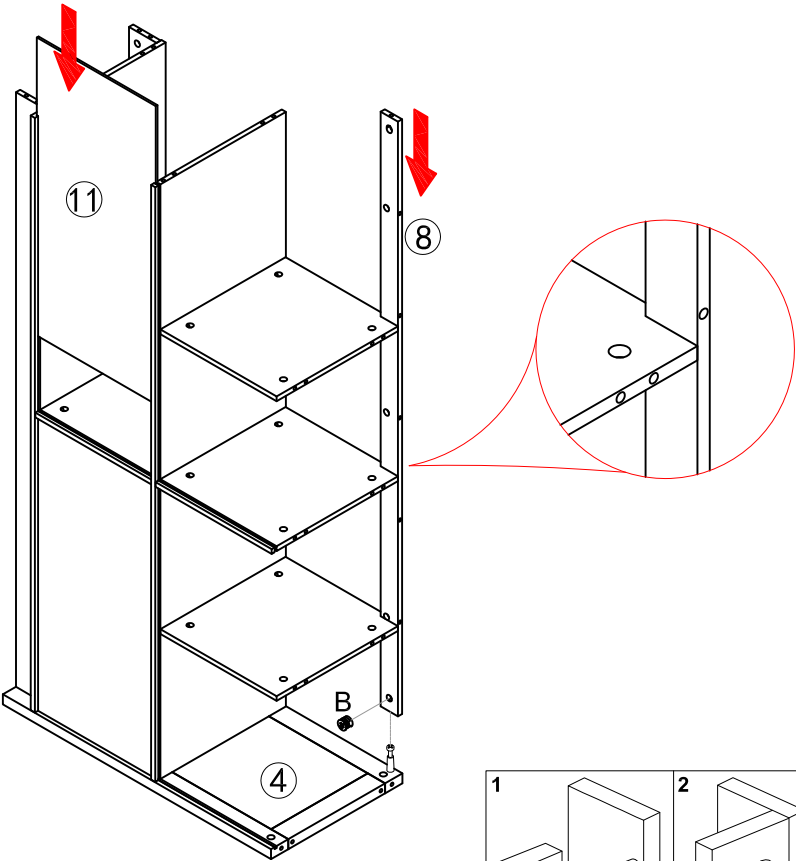

## STEP 10



	B*1PCS
---	--------

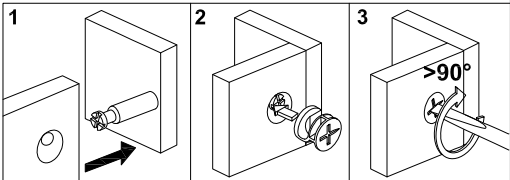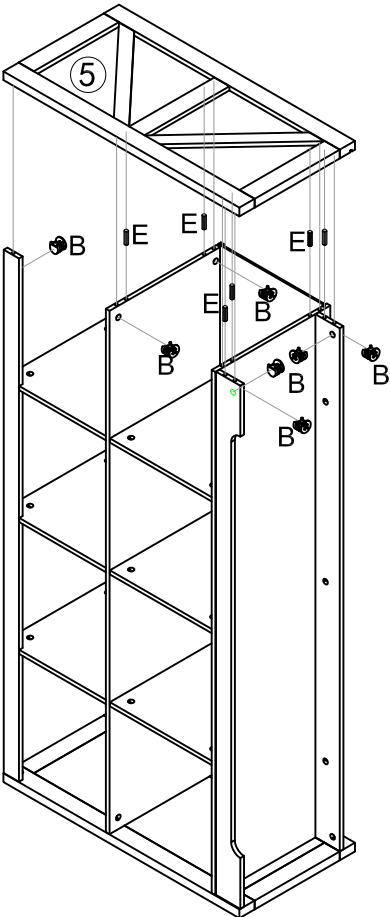
## STEP 11



	E*6PCS
	B*7PCS


## Assembly Steps

### STEP 12

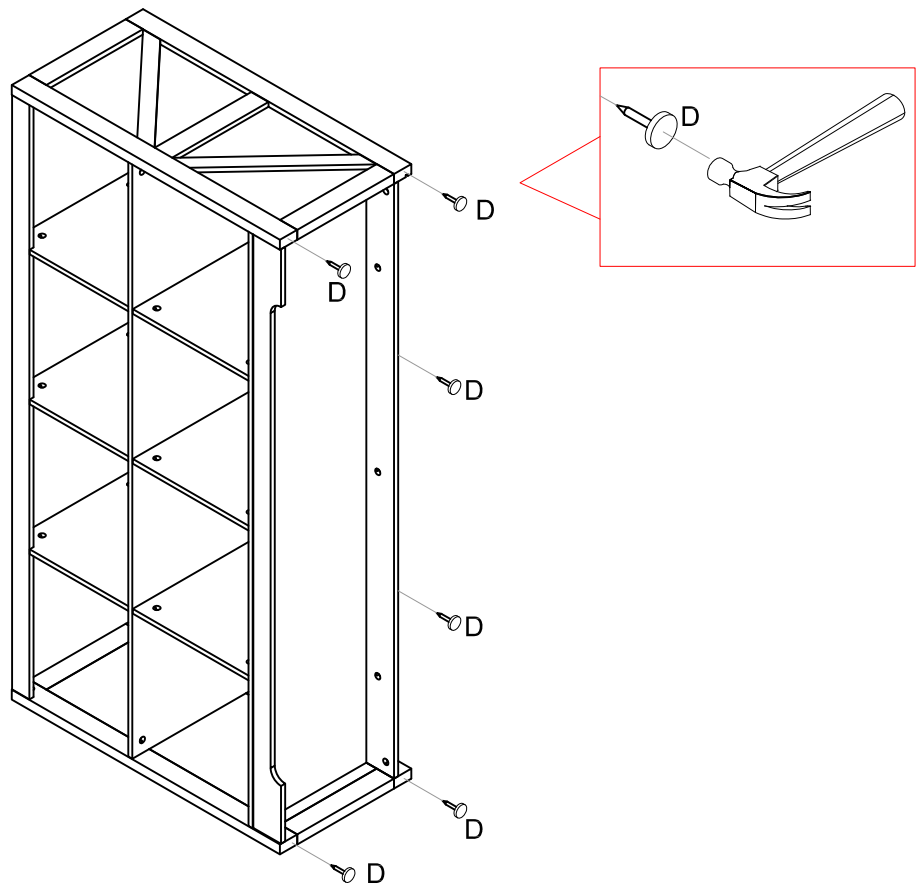



D\*6PCS

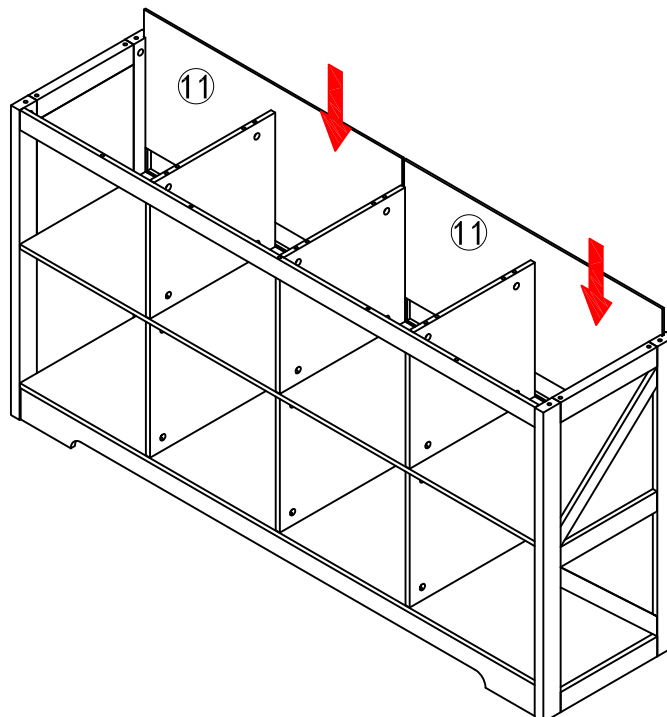

### STEP 13




## Assembly Steps
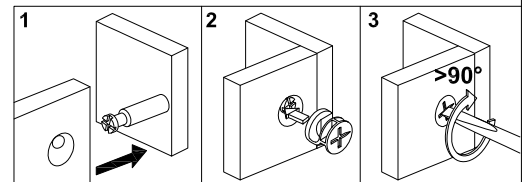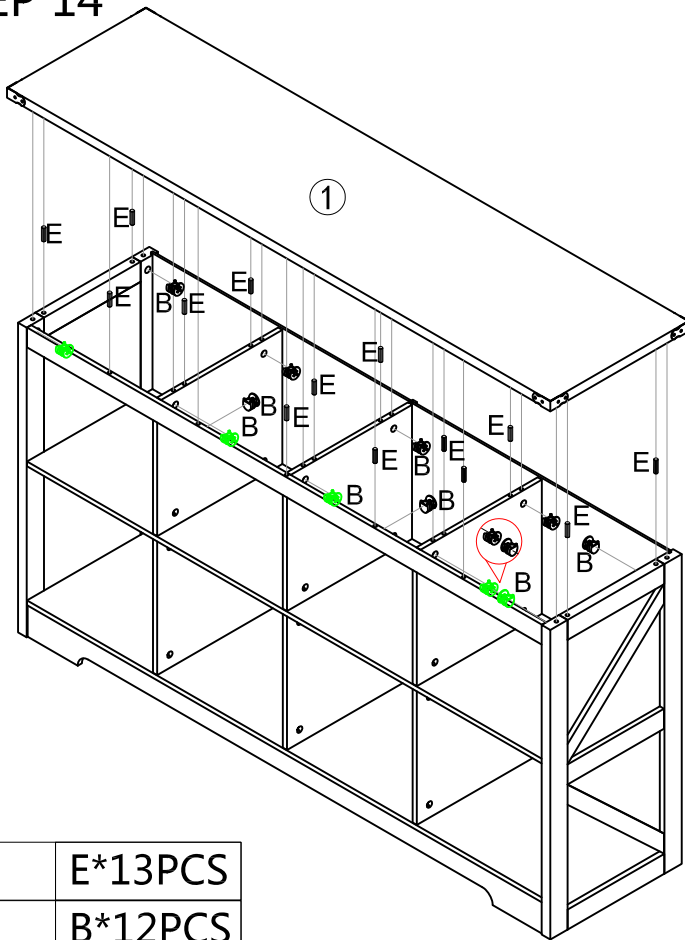
### STEP 14




	E*13PCS
	B*12PCS

### STEP 15

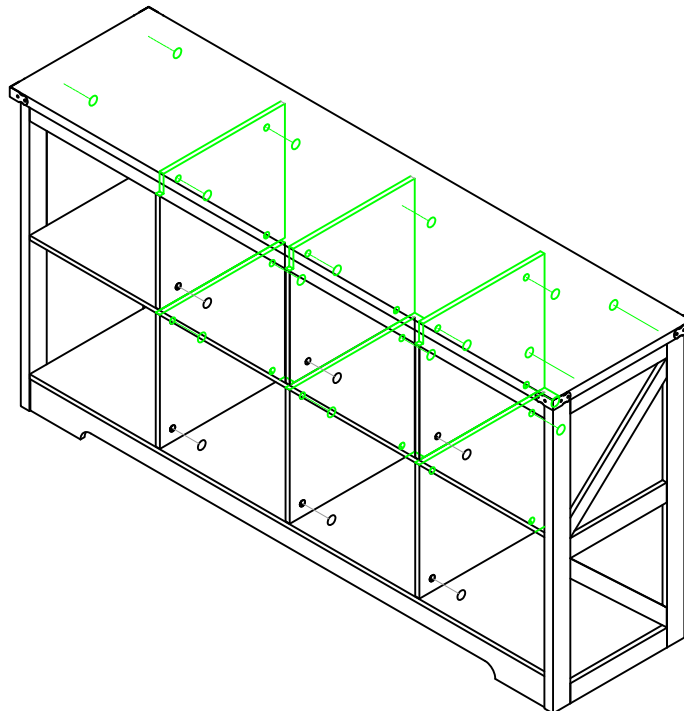




"O" Follow the color and pattern circular sticker, stick it on the screw hole position

	G*28PCS
---	---------

# Assembly Steps
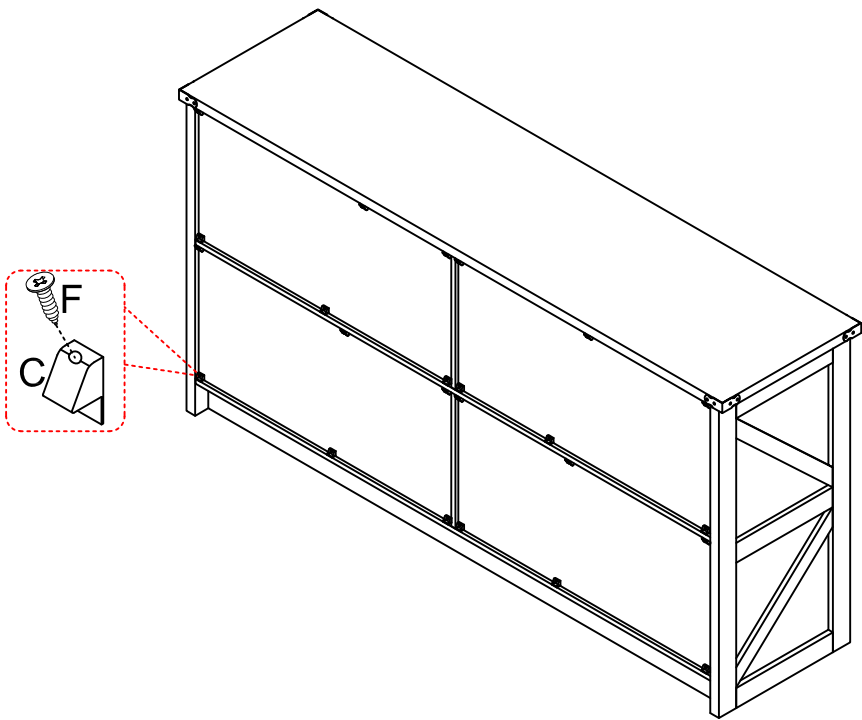
## STEP 16



	F*12PCS
	C*12PCS

## STEP 17

