

ASSEMBLY INSTRUCTIONS
24INCH BATH VANITY

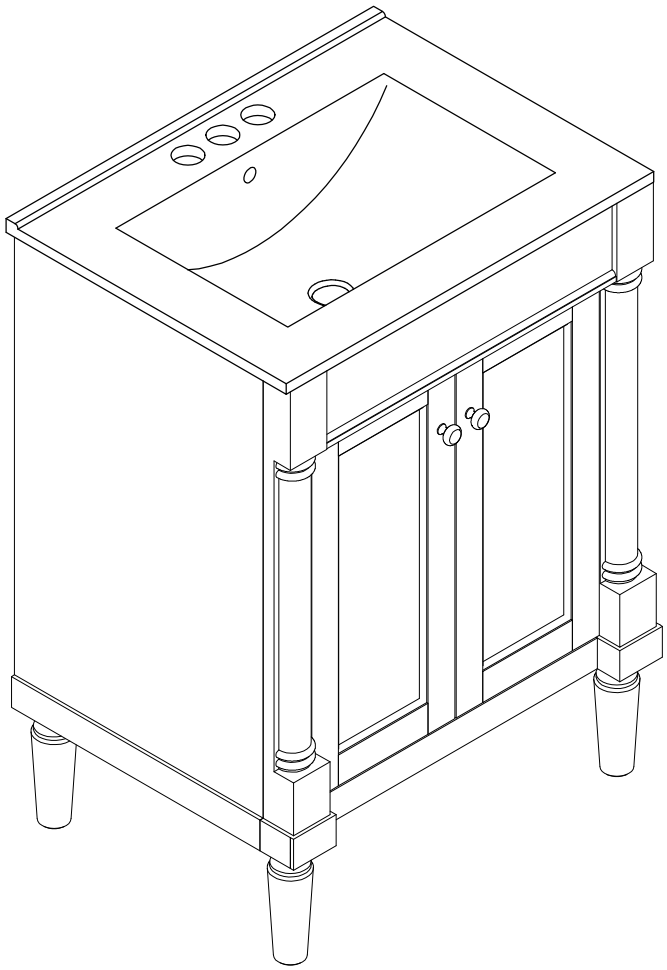

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

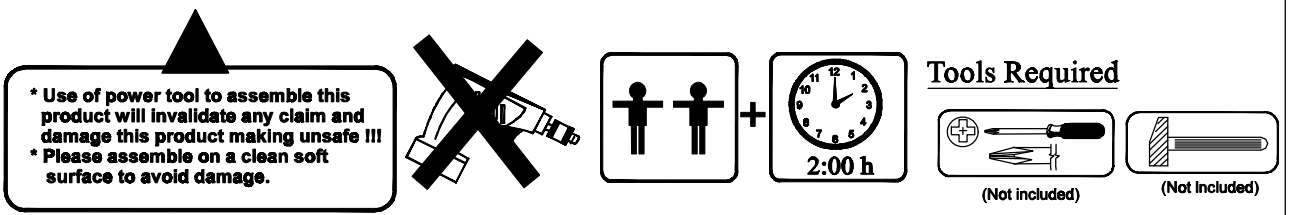

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!
We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.


Cam Lock Assembly Instructions



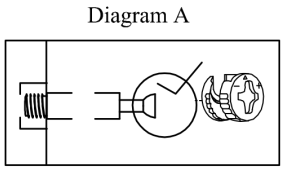



Insert Cam Bolt into hole as shown in diagram A.



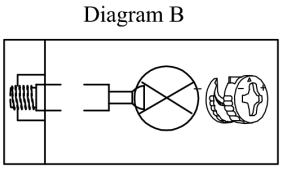


Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.




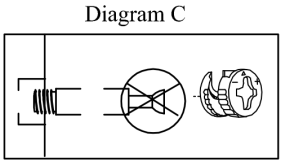


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.

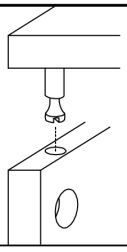

Connect the panels together.

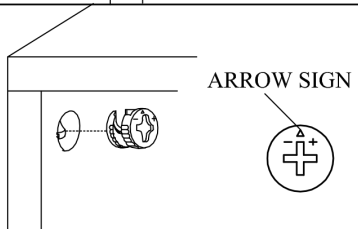


Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

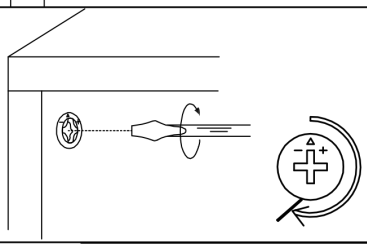












To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

Detail View




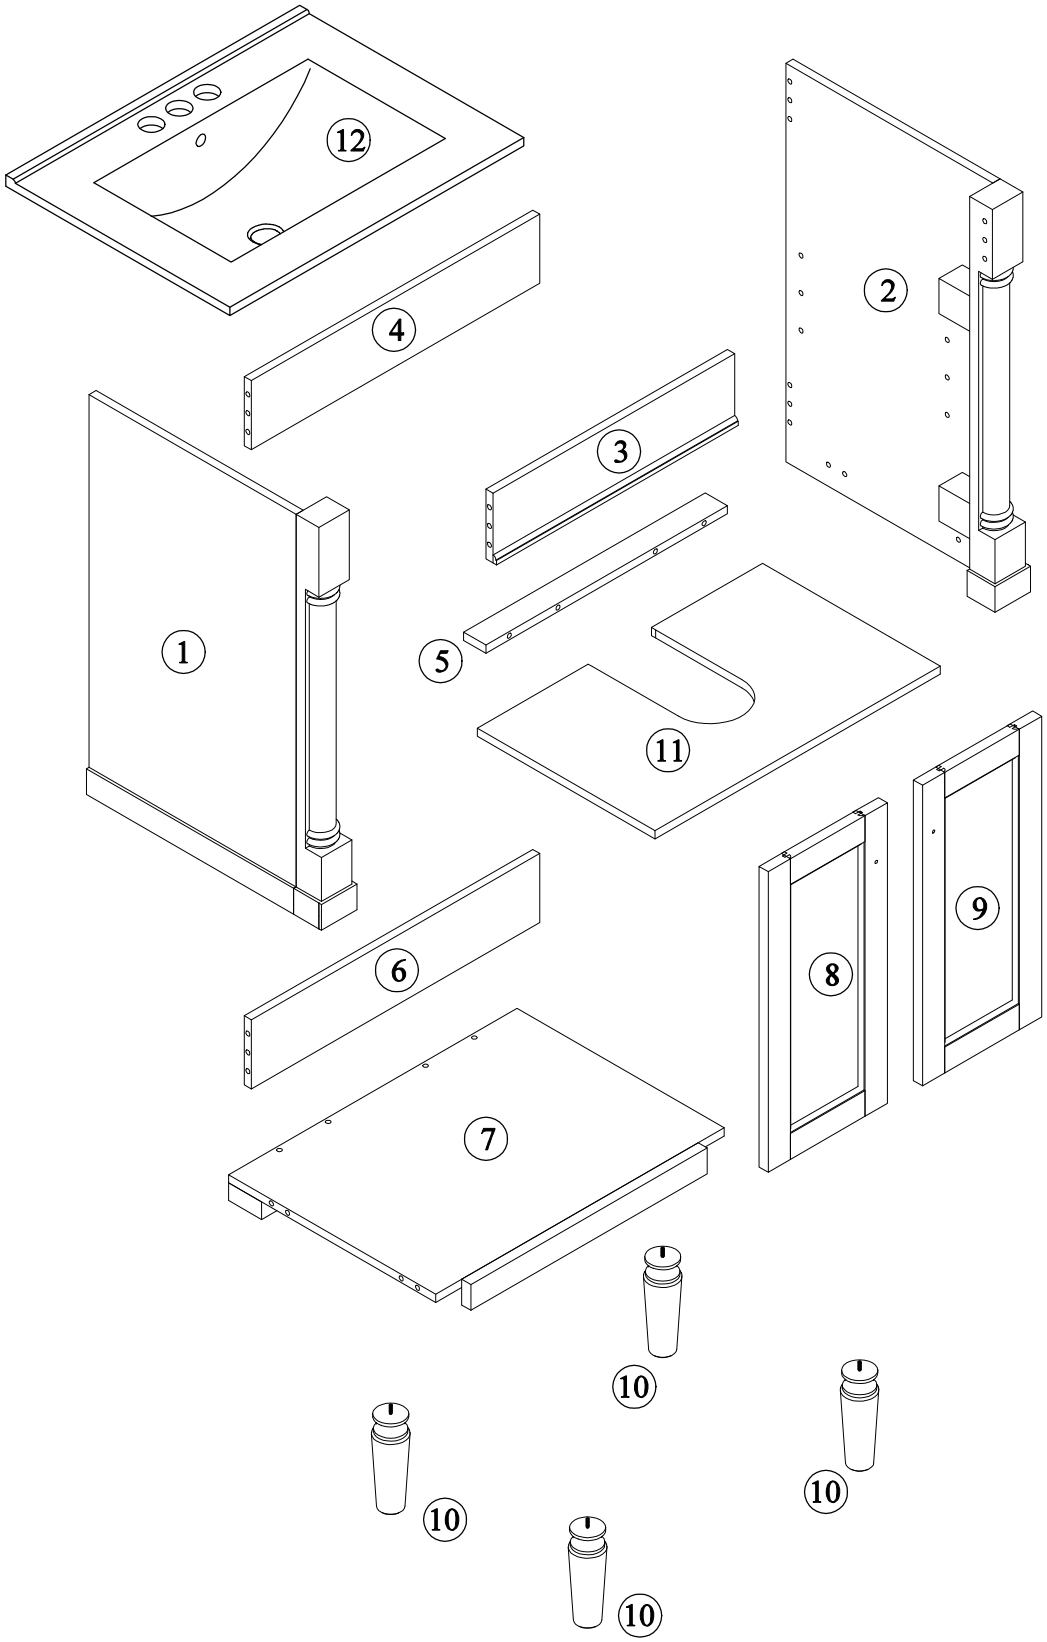


Identifying the Hardware-Identify the hardware using the illustrations below.


Part List

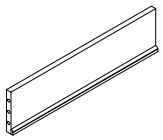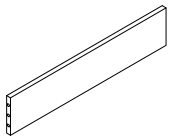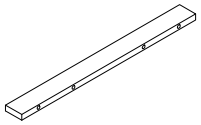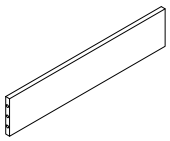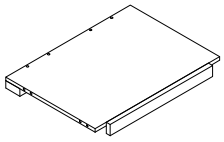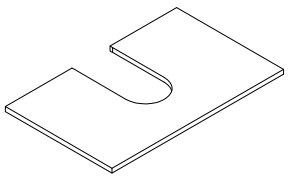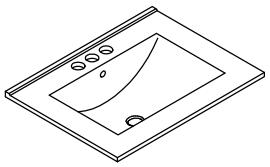1  Side Panel (L) - 1pc	2  Side Panel (R) - 1pc
3  Front Panel Top - 1pc	4  Top Panel Rear - 1pc
5  Crossbar - 1pc	6  Bottom Panel Rear - 1pc
7  Bottom Panel - 1pc	8  Left Door - 1pc
9  Right Door - 1pc	10  Foot - 4pcs
11  Adjustable Shelf - 1pc	12  Sink - 1pc


Hardware List

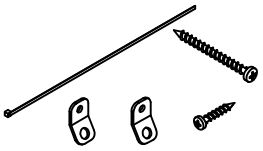A  ø6x35mm	B  ø14.5x12mm	C 
Three in one bolts(20pcs)	Three in one lock(20pcs)	Handle(2pcs)
D  ø5/32"x20mm	E 	F  ø7xø3.5x15mm
Handle screw(2pcs)	Damping hinge (4pcs)	Flat head screw(24pcs)
G 	H  ø8x30mm	I 
Laminate pad(4pcs)	Wood dowel(14pcs)	Anti fall hardware(1set)

STEP: 1

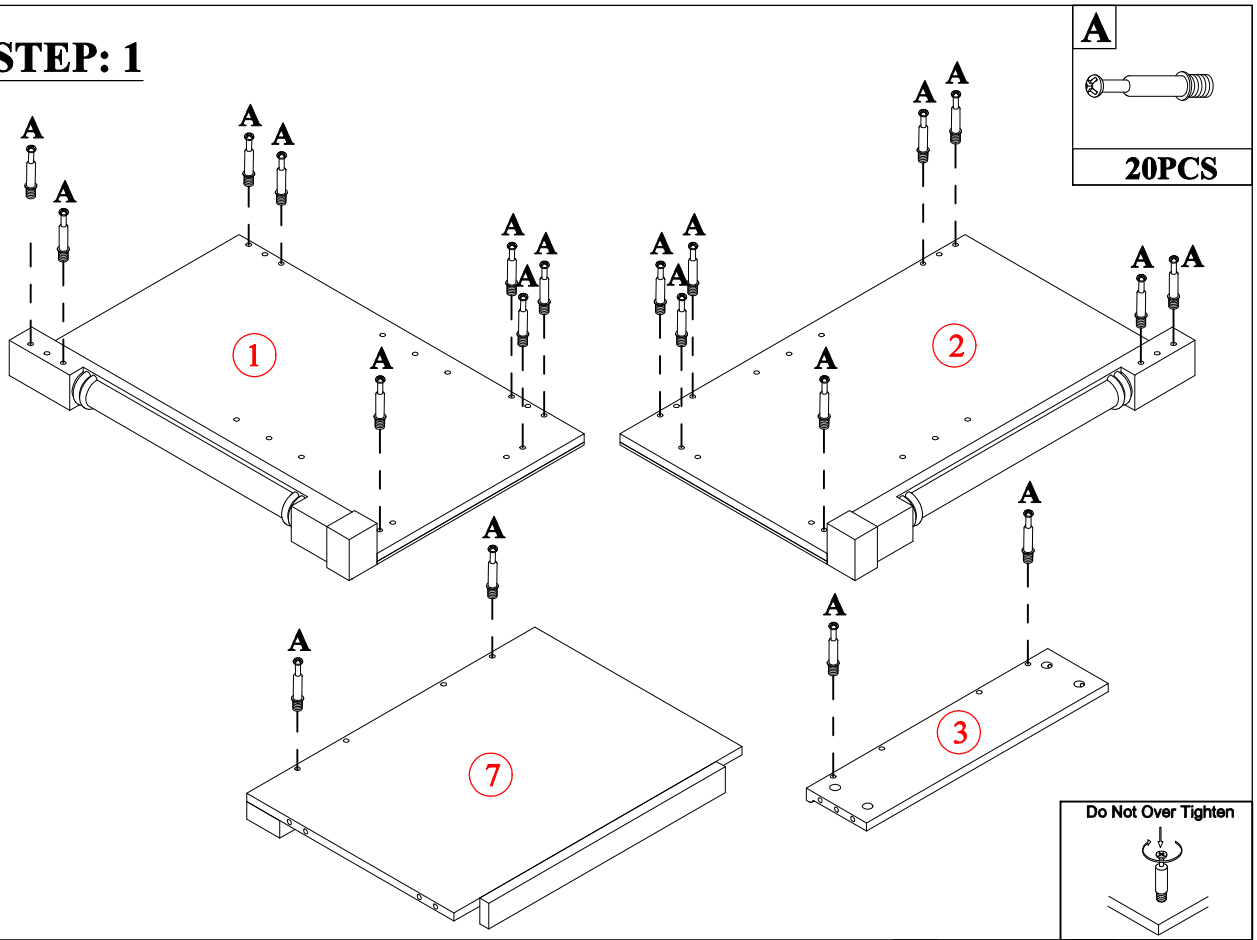

A
20PCS
A
1
2
7
3
Do Not Over Tighten

STEP: 2

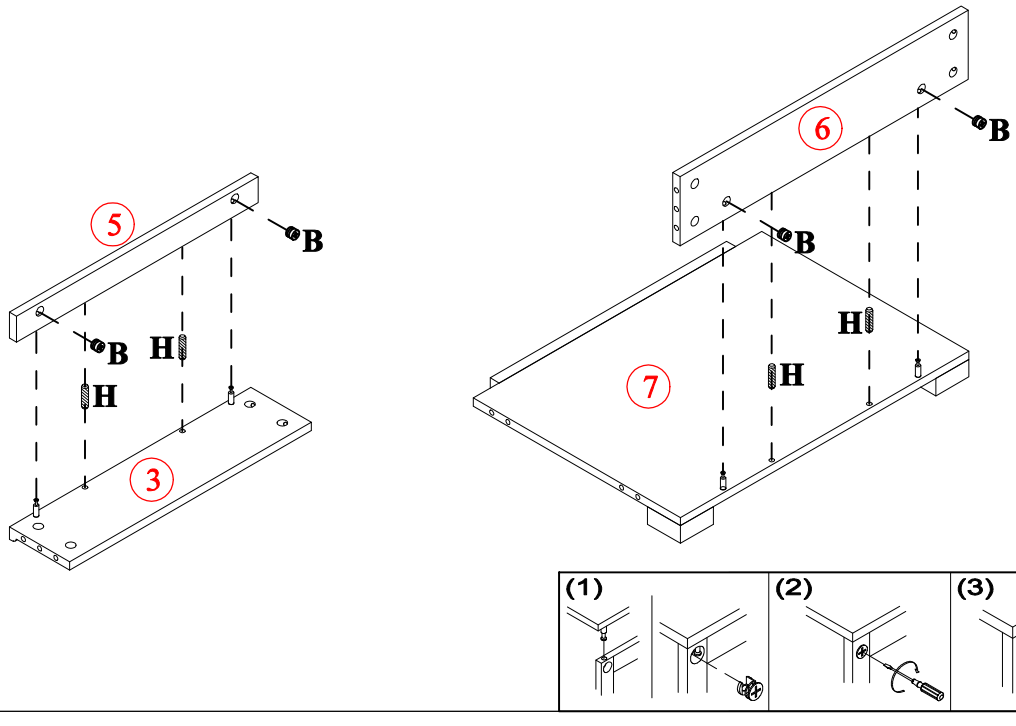

B
4PCS
H
4PCS
5
B
H
H
3
6
B
B
H
H
7
(1)
(2)
(3)

STEP: 3

B	H
16PCS	10PCS

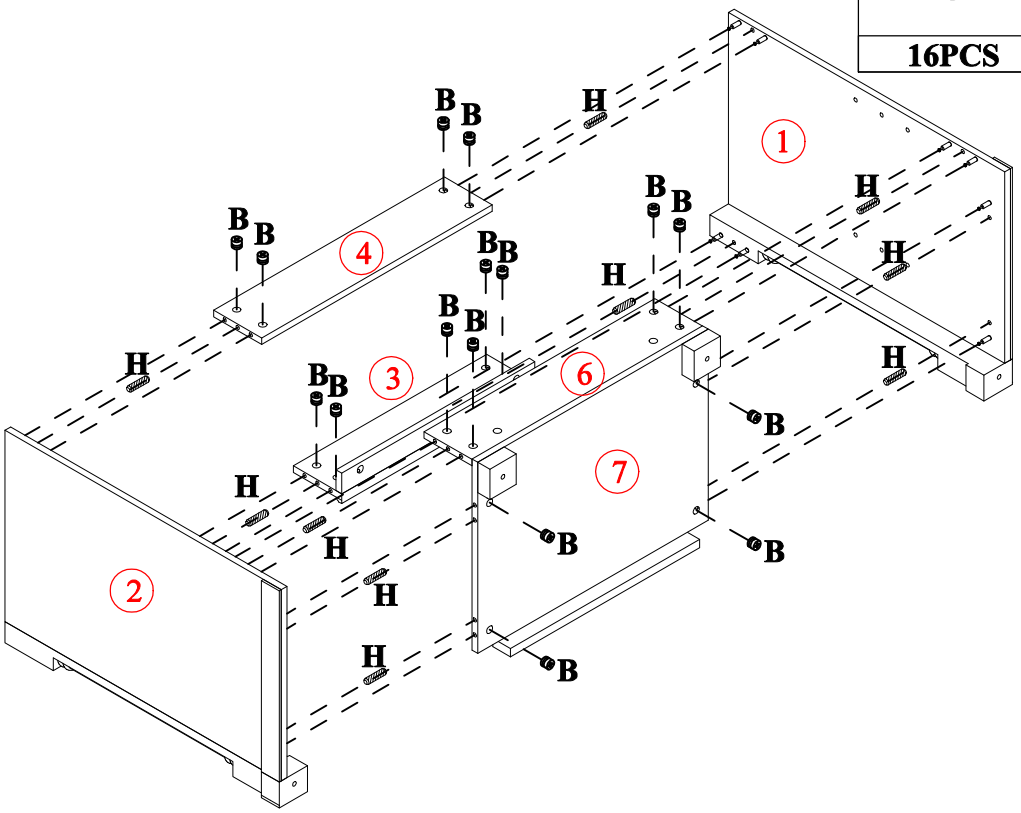


STEP: 4

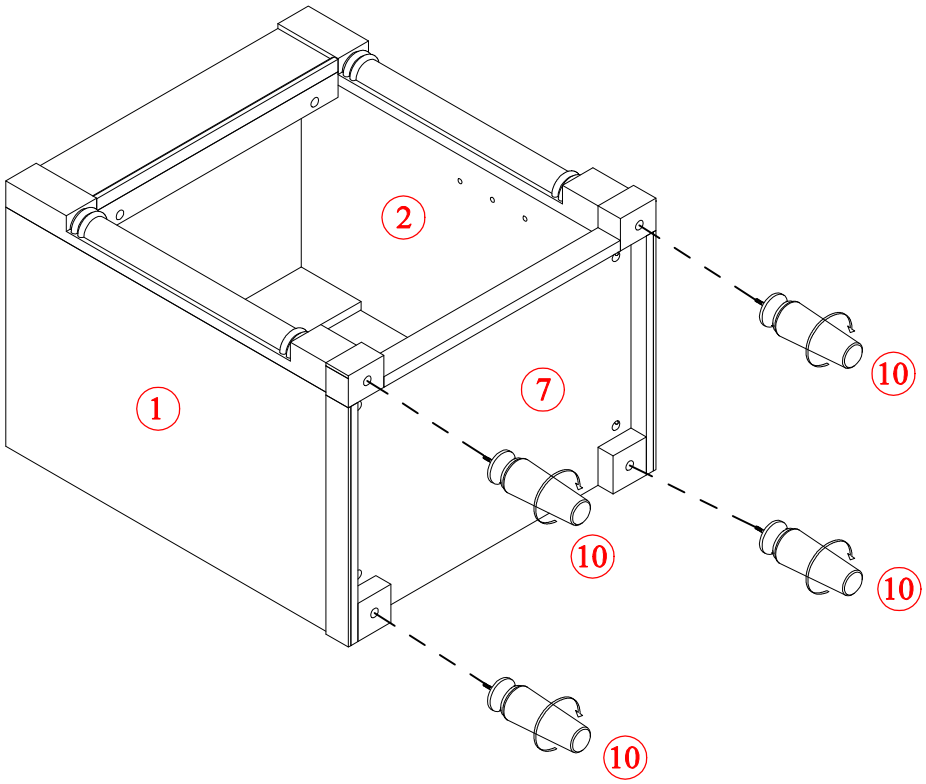


STEP: 5


E	F
4PCS	8PCS

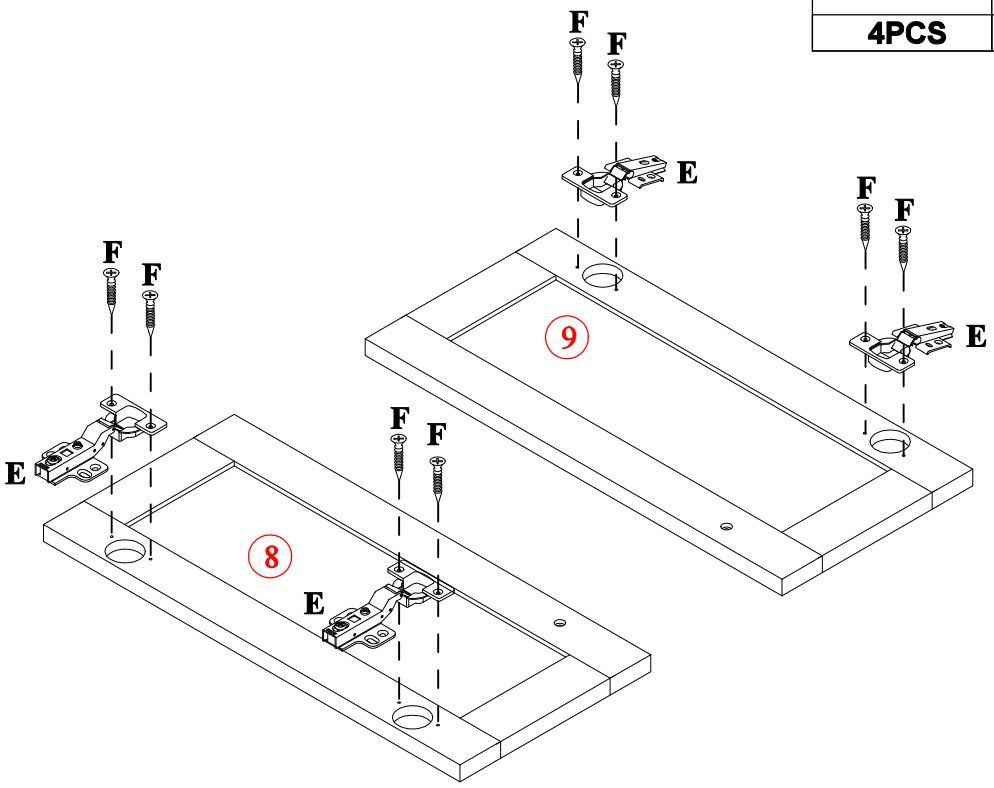

STEP: 6


C	D	F
2PCS	2PCS	16PCS

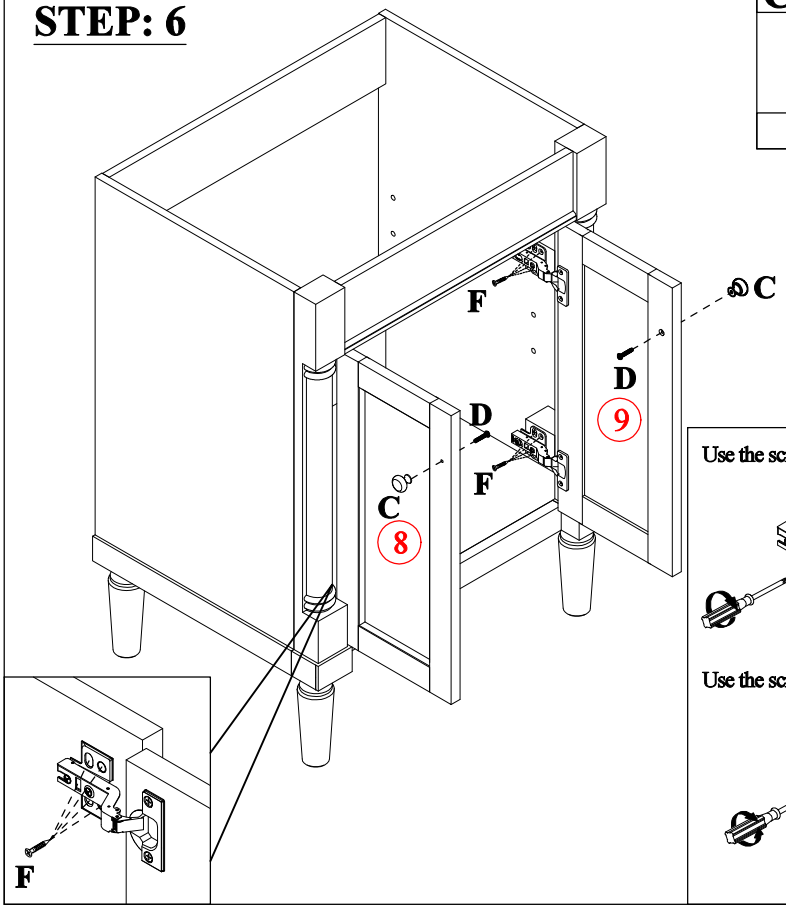

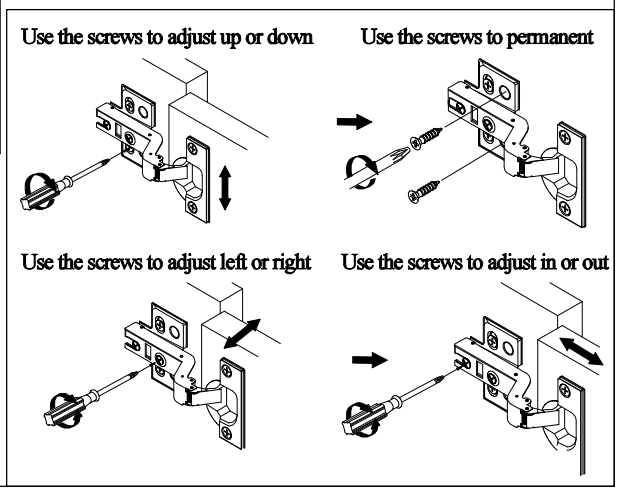


STEP: 7

G




4PCS

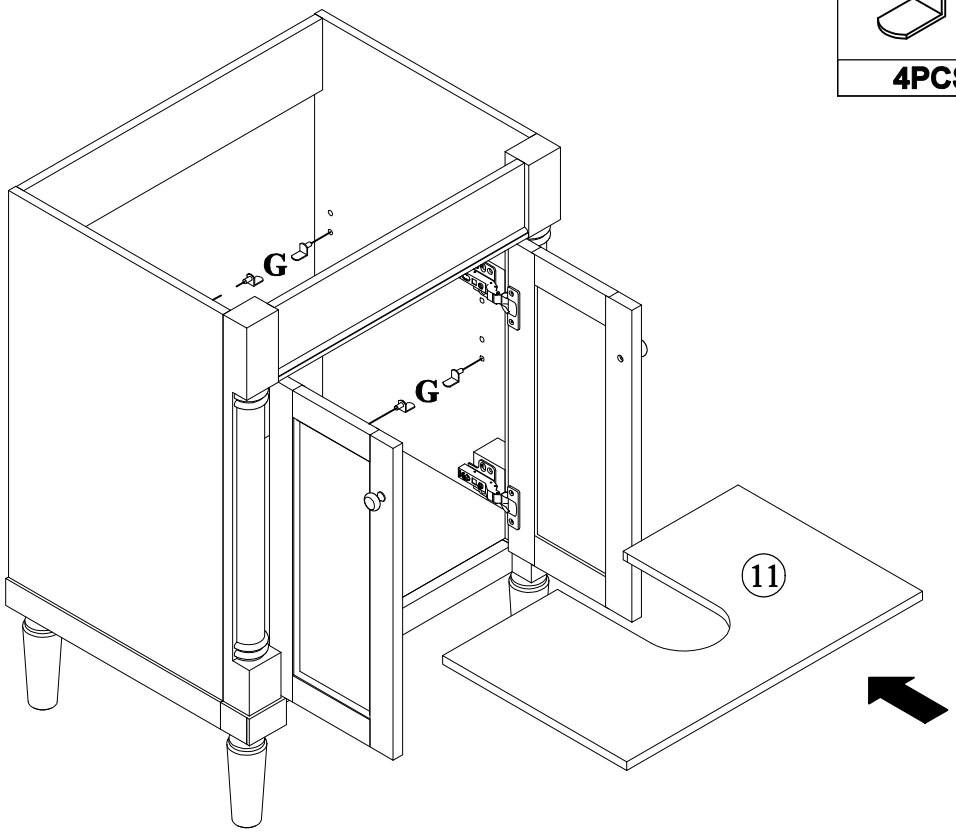


STEP: 8

I

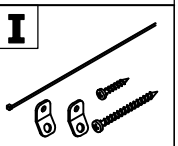


1SET

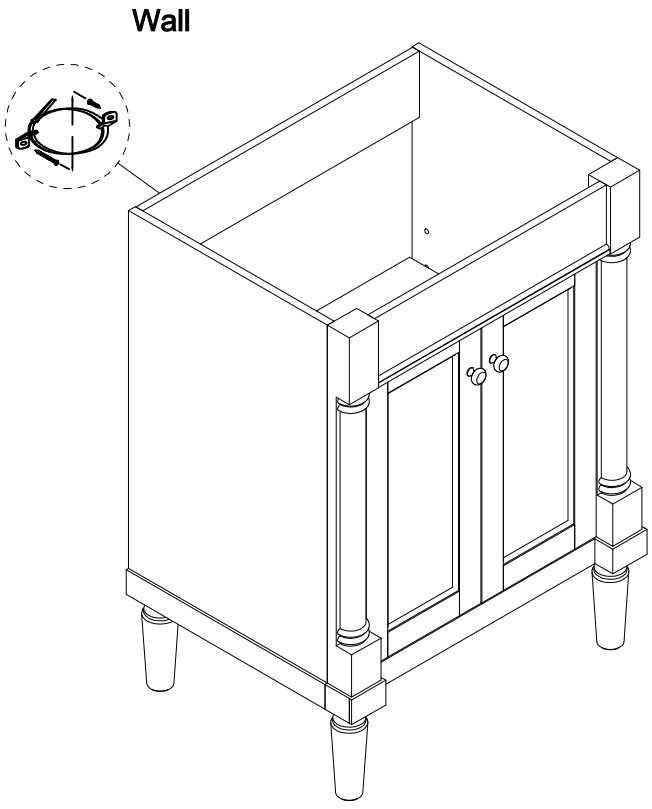


STEP: 9

Install the sink on the cabinet with glue.
Let stand for 24 hours

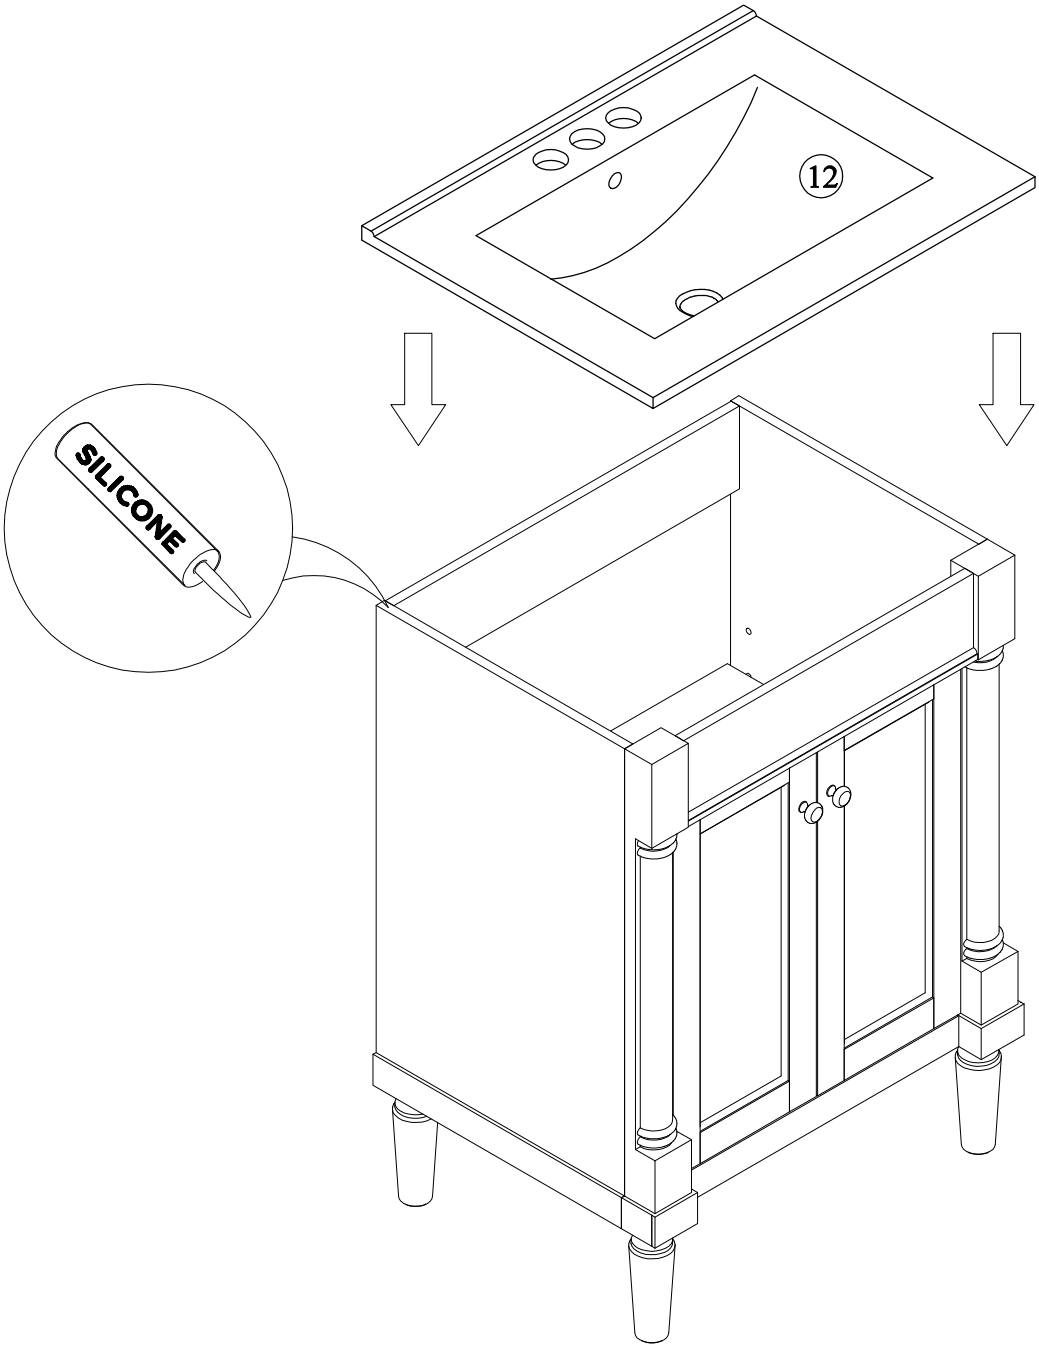


STEP: 10

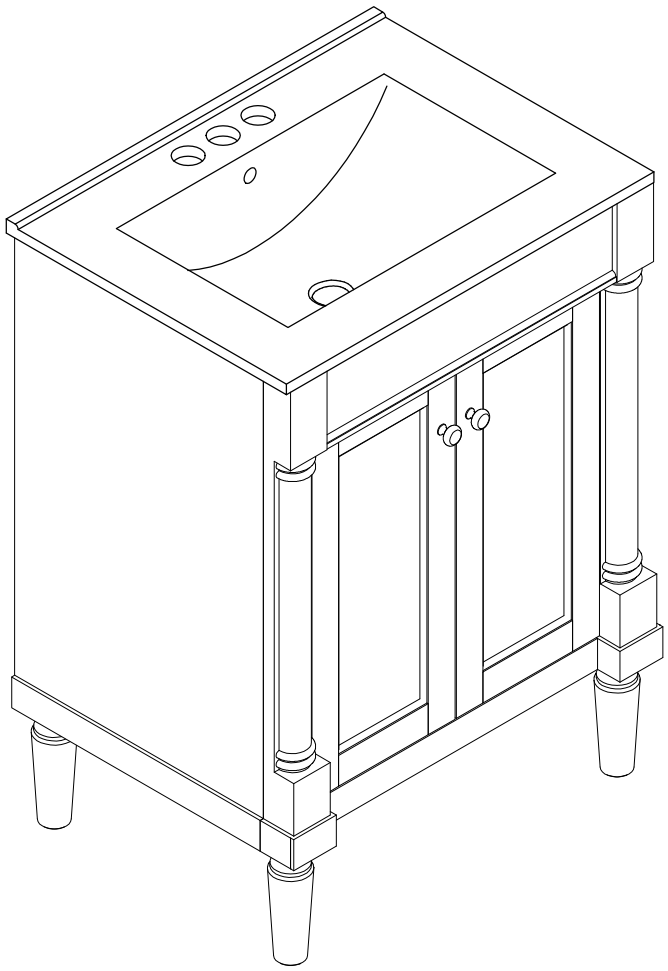




HINGE ADJUSTMENTS

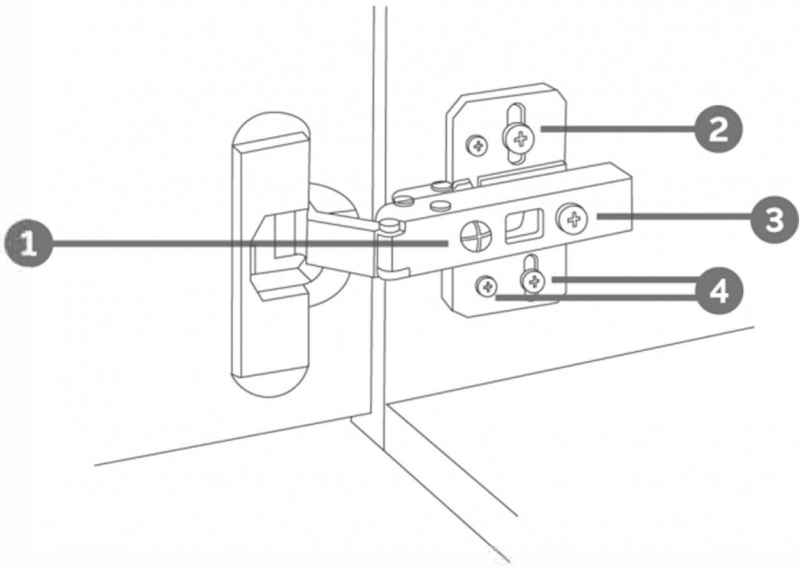


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

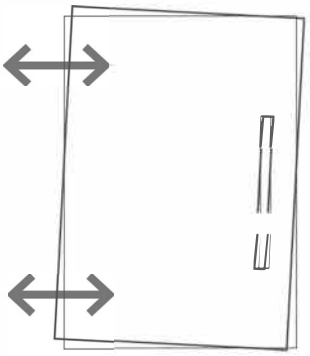

2 4 Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

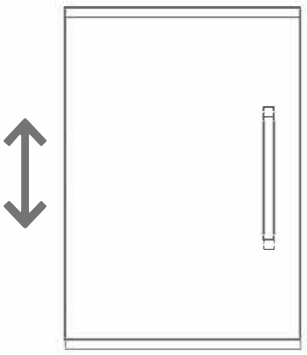

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

