

INSTALLATION GUIDE

Tools Required



Measuring tape



Pencil



Ruler




Hammer



Spirit level



Screwdriver

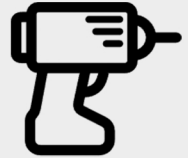


Electric drill


Hardware and Drill Bit Selection

Drywall		5/16 inch (approx. 8 mm)
Concrete Wall		3/16 inch (approx. 5 mm)
Wood Wall		1/16 inch (approx. 2 mm)

Installation Procedure

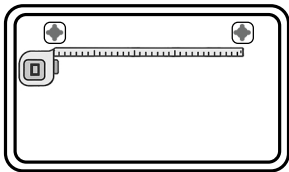

1. Check the distance between the mirror's hanging brackets.

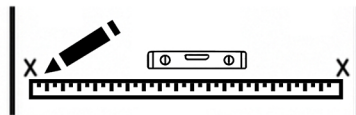


2. Use a level to mark your drill spots on the wall.




3. Drill holes with the correct bit for your wall type.



4. Tap in anchors for drywall or concrete (skip for wood).

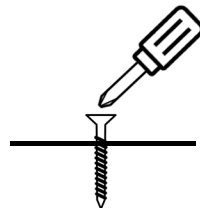

5. Drive screws in, leaving heads 1/4" out, and tug to test.

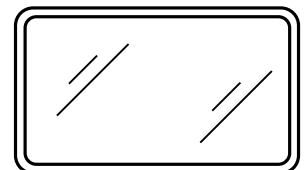

6. Hook the mirror onto the screws and level.



WARNING

Do NOT use wire, rope, or chain to hang this mirror. Incorrect installation may cause the mirror to fall, resulting in property damage, serious injury, or even death.